


Location of components

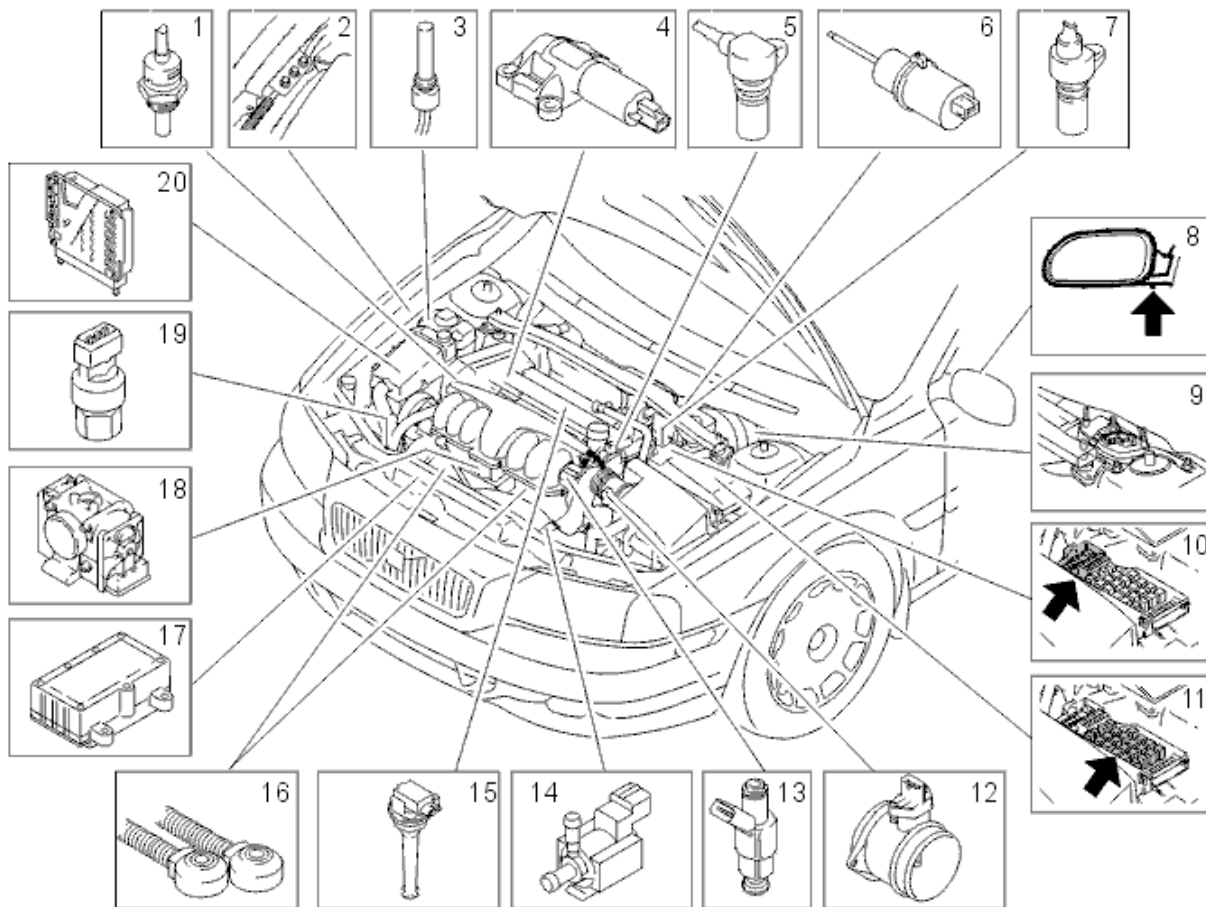

1. Engine coolant temperature (ECT) sensor
2. Ground terminal
3. Coolant level sensor
4. Camshaft reset valve
5. Camshaft position sensor (CMP)
6. Brake pedal sensor
7. Engine speed (RPM) sensor
8. Outer temperature sensor
9. Power supply terminal
10. Fusebox
11. Relay box
12. Mass air flow (MAF) sensor
13. Injector
14. Canister purge (CP) valve
15. Ignition coil
16. Knock sensor (KS)
17. Engine cooling fan (FC) control module
18. Throttle unit
19. A/C pressure sensor
20. Engine control module (ECM).