


Seat belt front, replacing

As the illustrations in this service information are used for different model years and / or models, some variation may occur. However, the essential information in the illustrations is always correct.

Warning! Under no circumstances use an ohmmeter or other live measuring instrument to take readings on a disconnected non-deployed seat belt tensioner. There is a risk that the seat belt tensioner could deploy.

Warning! The seat belt tensioner must never be taken apart, repaired or moved to another vehicle.

Preparations

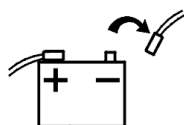

Move the front seat as far forward as possible. Fold the backrest forward.


Disconnect the battery lead. See [Note when disconnecting/connecting the battery lead](#).

For information about handling seat belt tensioners, see [Handling non-deployed SRS-components](#).

Removing front seat belts

Remove:

- the end mounting. See [End mounting, replacing](#)
- the B-post panel. See [Panel B-post, replacing](#)
- the connector
- the three screws
- the clip for the mounting for the SRS ignition cable in the bracket
- the bracket for the seat belt and seat belt (inertia) reel.

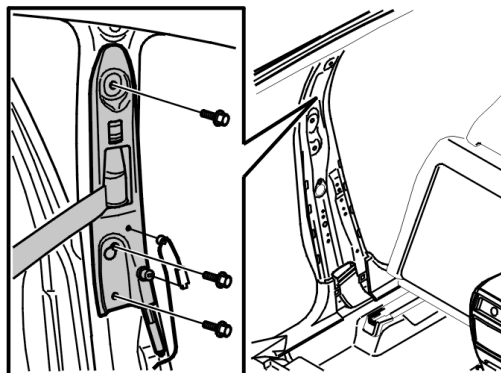

Installing front seat belts

Install:

- the bracket for the seat belt
- the 3 screws. Tighten. See [Tightening torque](#)
- the connector
- the B-post panel. See [Panel B-post, replacing](#)
- the end mounting. See [End mounting, replacing](#)

Check the function of the seat belt. See [Seat belt function, check](#).

Carry out a final inspection. See [Supplementary restraint system \(SRS\), inspection](#).