


Sill trim panel, replacing

As the illustrations in this service information are used for different model years and / or models, some variation may occur. However, the essential information in the illustrations is always correct.

Sill trim panel front side door

Removing the sill trim panel from the front side door

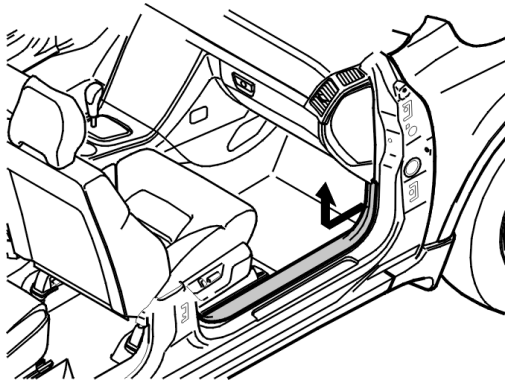


Pull the sill trim panel straight up.
Pull out the sill trim panel at the front and rear edges.

Installing the sill trim panel for the front side door

Insert the sill trim panel at the rear edge.
Press the sill trim panel into place at the front edge.
Press the sill trim panel straight down.

Sill trim panel rear side door

Removing the sill trim panel from the rear side door

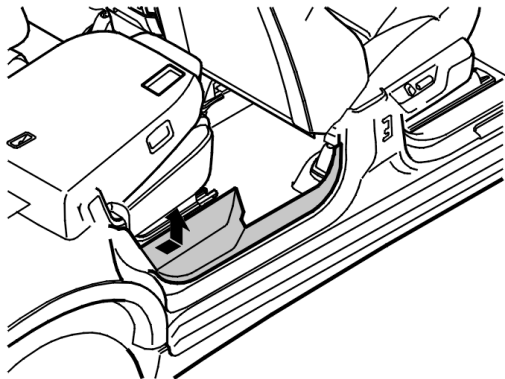

Remove the end mounting. See [End mounting, replacing](#) .
Pull up the sill trim panel at the rear edge.
Angle the sill trim panel out from the B post panel.

Installing the sill trim panel for the rear side door

Insert the front edge of the sill trim panel into the B post panel.


Press the sill trim panel into place.
Install the end mounting. See [End mounting, replacing](#) .

Cover

Removing the cover from the lower edge of the B post

Remove:

- the front sill trim panel. See [Removing the sill trim panel from the front side door](#)
- the rear sill trim panel. See [Removing the sill trim panel from the rear side door](#)
- the cover.

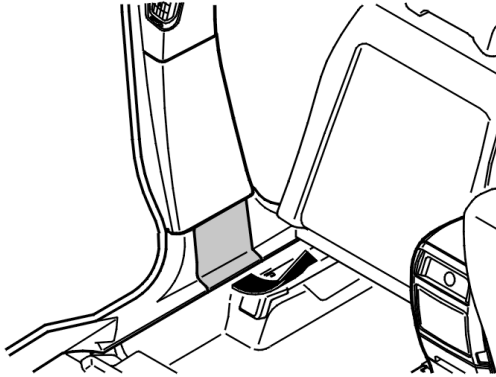

Installing the cover at the lower edge of the B post

Install:

- the cover at the bottom edge of the B post
- the front sill trim panel. See [Installing the sill trim panel for the front side door](#)
- the rear sill trim panel. See [Installing the sill trim panel for the rear side door](#) .

