


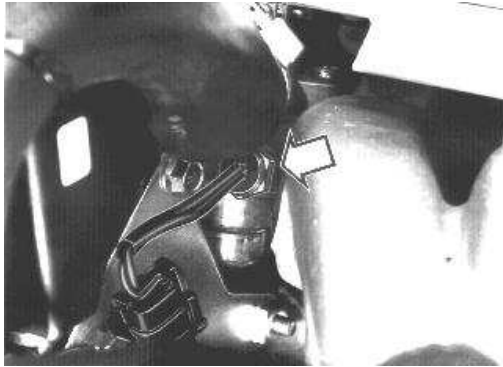

### **Coolant-temperature sensor location**

The sensor is located in the thermostat housing. The sensor gives a signal to both the engine management system and to the temperature gauge in the combined instrument panel.