

Panel front side door, replacing

Note! The illustrations in this service information are used for different model years and/or models. Some variation may occur. However, the essential information in the illustrations is always correct.

Preparatory work



Ignition off

Ignition off.
Remove the key.


Removal

Removing front door panels


Using a weatherstrip tool, remove the cover from the inside of the door handle.

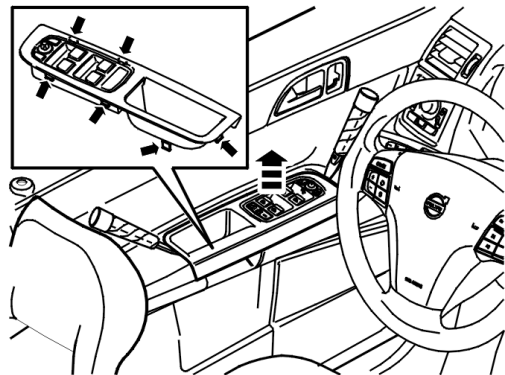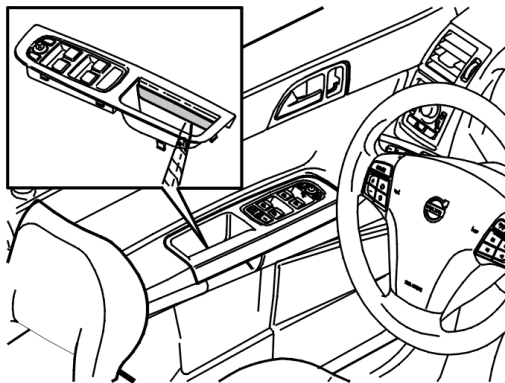

Using a weatherstrip tool, lift the frame of the inner door handle together with the keypad straight up.
Disconnect the keypad connector.

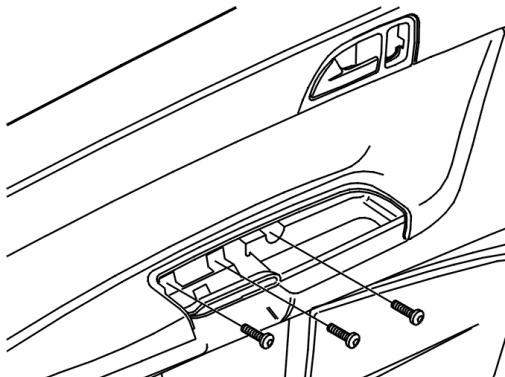

Remove the 3 screws.

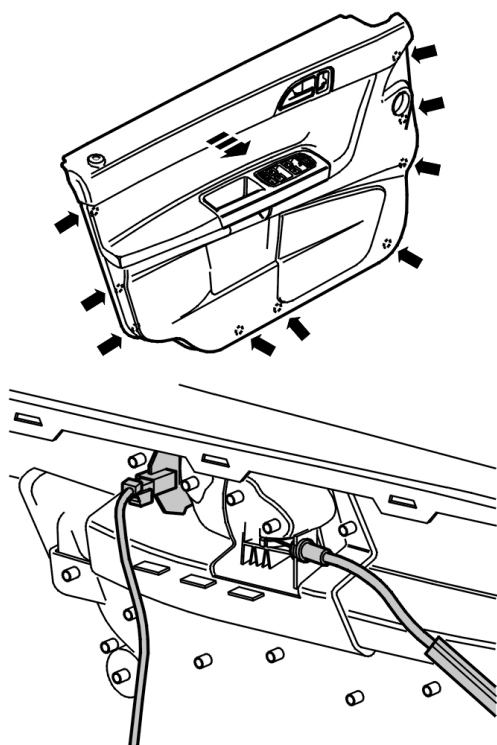

Pull the door panel straight out. It is secured with 9 clips.

Disconnect the mechanical cable for the inner opening handle.

Remove:

- the connector at the inner opening handle
- the connector for the treble loudspeaker, if applicable.

Replace the door panel.

Transferring components

Transferring components to the replacement part panel

When replacing with a replacement part panel, transfer:

- the cover at the base of the door mirror
- the inner door handle together with the keypad.

Installation

Note! For tightening torques, see: [Tightening torque](#).

Installing the front door panel

Install:

- the connector for the treble loudspeaker, if applicable
- the connector at the inner opening handle
- the mechanical cable for the inner opening handle.

Note! Thread the connector for the keypad through the door panel.

Press the door panel into place.

Caution! Ensure that the clips at the seal molding

on the window grip the door panel.

Install:

- the 3 M5 screws. Tighten
- the keypad connector.

Press the inner door handle together with the keypad into place in the door panel.

Install the cover for the door handle.