

Replacing front brake discs

Removal

Remove the securing spring and locating pins

See [Brake pads, front, replacing](#) .



Remove the brake calliper and brake pads

See [Brake pads, front, replacing](#) .

Remove the calliper holder and the brake disc

Remove:

- both the mounting screws (4) for the calliper holder. Remove the holder
- the locating pin (5) and the brake disc.

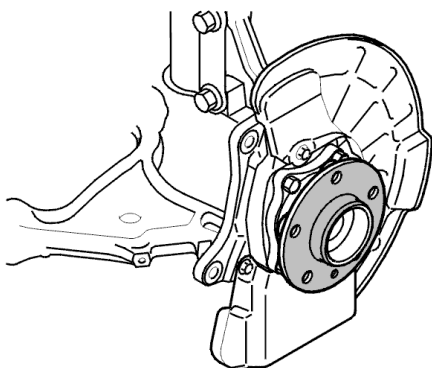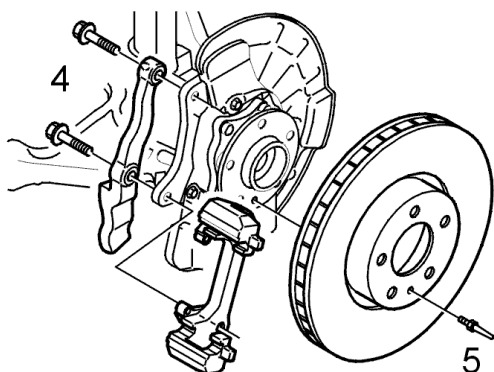

Cleaning and inspection

Note! Cleaning is important to prevent lateral runout at the brake disc.

Clean the hub flange before installing the new brake disc.

Check the hub. If it is damaged, measure the lateral runout. See [Front wheel hub, measuring lateral run out](#) .


Installation

Install the brake disc

Note! Be careful when handling the new brake disc. Careless handling can cause damage to the brake disc (out-of-true).

Install:

- the new brake disc. Tighten the locating pin (5). Tighten to **8 Nm**
- the calliper holder. Use new mounting screws (4). Tighten to **100 Nm**.

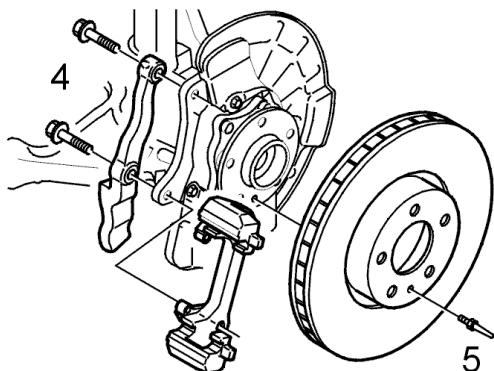

Install the brake pads and brake calliper

See [Brake pads, front, replacing](#) .

[Install the locating pins in the brake calliper](#)

See [Brake pads, front, replacing](#) .

[Install the wheel](#)

[Installing wheels](#)