


Engine compartment

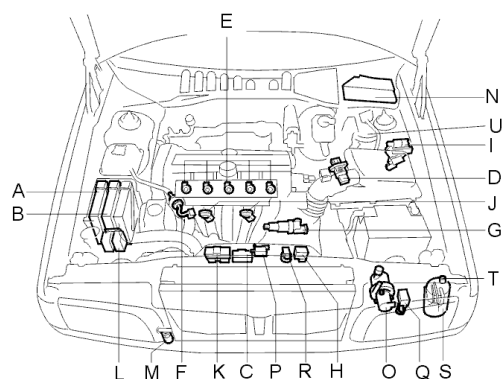

- **A** Control module AW 50-42
- **B** Signal description Fenix 5.2
- **C** Pressure sensor
- **D** Intake air temperature (IAT) sensor
- **E** Injectors
- **F** Engine coolant temperature (ECT) sensor
- **G** Idle air control (IAC) valve
- **H** Main relay
- **I** Ignition coil Ignition discharge module (IDM)
- **J** Knock sensor (KS)
- **K** Relay, engine cooling fan (FC)
- **L** Data Link Connector (DLC)
- **M** High-Pressure Switch
- **N** Central electrical unit
- **S** Pulsed secondary air injection system (PAIR) pump
- **P** Pulsed secondary air injection system (PAIR) pump valve
- **Q** Pulsed secondary air injection system (PAIR) pump relay
- **R** EGR controller
- **S** EVAP canister
- **T** Canister purge (CP) valve