

Tailgate wiper arm / blade, replacing


Removal

Rear windscreen wiper blade

- Fold up the wiper arm
- Turn the blade 90° towards the arm and pull off the blade.

Rear windscreen wiper arm and blade


- Fold up the cover
- Remove the nut
- Detach the arm and blade.

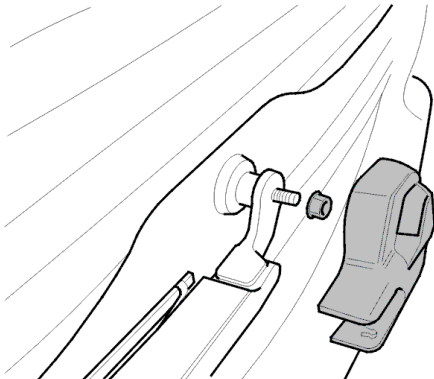

Installation

Rear windscreen wiper arm and blade

- Reset the motor
- Position the arm with the nut. Adjust the arm so that the blade is in the middle of the black area on the windscreen. Tighten the nut
- Test run the wiper with the washer. Reset the wiper. The blade must come to rest in the middle of the black area on the windscreen. Alternatively, if the windscreen is dry, approximately 10 mm below the top of the black area.

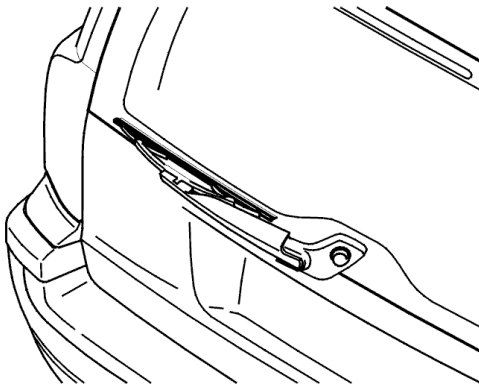

Rear windscreen wiper blade

- In reverse order. Tighten to **14 Nm**.