

OVERDRIVE UNIT - LAYCOCK TYPES "J" & "P"

1983 Volvo 240DL/GL

Check that oil level is up to plug opening. Low oil level can cause both lubrication problems and/or hydraulic pressure problems. Check if solenoid is being energized. Working solenoid will make clicking noise when engaging. Always apply power and ground connections directly to solenoid before replacing solenoid.

If overdrive does not engage and indicator light does not work, check fuses and wiring for power supply. Check 4th gear switch operation. If solenoid does not engage but indicator light is on, check 4th gear switch, solenoid ground circuit and solenoid.