

XC90, 2008, B6324S, TF-80SC, L.H.D

9/7/2012



PRINT



Interior lighting, replacing

Removal

Preparatory work

Note! As the illustrations in this service information are used for different model years and / or models, some variation may occur. However, the essential information in the illustrations is always correct.



Remove the lens from the interior lighting. See Bulb interior lighting, replacing .

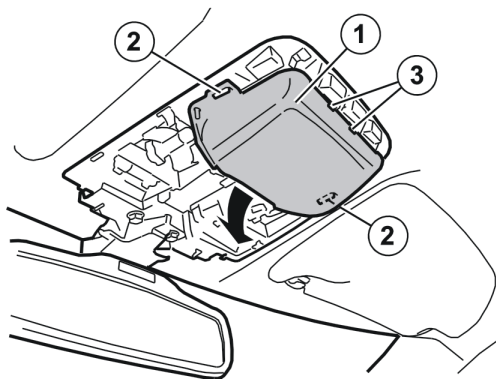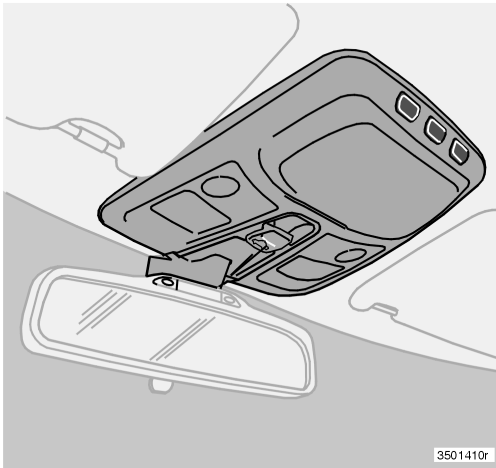

Open the clips (2, 3) and remove the cover (1).

Removing the interior lighting

- Remove the screws from the front edge
- Press in the catches on one side and detach the interior lighting from the headlining
- Disconnect the connector
- Disconnect the ground lead.

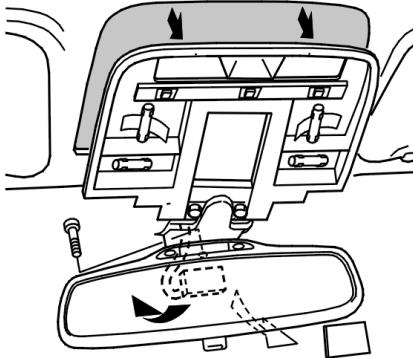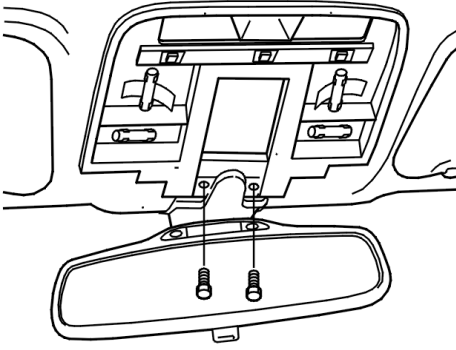

Remove the screw from the rear view mirror.
Remove the interior lighting.

Installation

Note! For tightening torques, see Tightening torque .

Installing the interior lighting

Install:

- the screw for the rear view mirror. Tighten
- **Caution! Check that the microphone cable is not trapped (if applicable).**

the ground lead. Connect the connector. Align the interior lighting on the gear selector module (GSM) aerial locating pins (1) and press into place

- the screws. Tighten.

Finishing work

Install the cover.
Install the lens for the interior lighting. See Bulb interior lighting, replacing .
Test the function.

