

Window lift mechanism front side door, replacing

Window lift mechanism front side door, replacing

Window in half open position.

Remove the side window. See [Window front side door, replace](#).


Remove the four mounting elements.

(Screws or blind rivets)

Lift out the lift mechanism.

Disconnect the connector.

Note! When drilling out blind rivets: [Removing rivets](#).

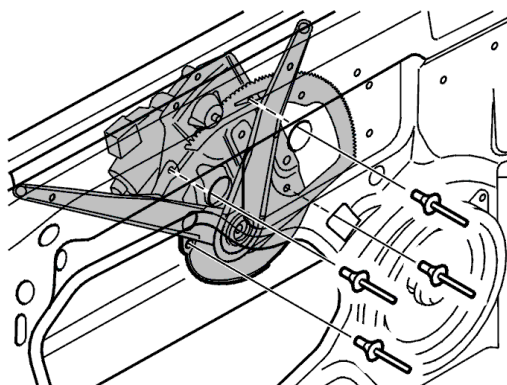

Installation

Install:

In reverse order.

Note! Install new rivets in the numerical order illustrated.

Initializing the window position

The window position must be initialised after installation.

Ignition on.

Initialise. See [Checking the power window mechanism](#).

