

Component list

1/1	Battery	3/97	Power window switch driver's door
2/1	Main lighting relay with bulb failure warning sensor	3/99	Front fog lamps switch
2/2	Fog lamp relay	3/100	Lock unit driver's door
2/4	Windshield wiper intermittent relay	3/109	Switch trunk lid / fuel tank filler cover
2/5	Relay seat belt reminder / ignition warning	3/110	Lock unit passenger door
2/6	Overload relay 15I-supply	3/120	Soft-top switch
2/11	Engine cooling fan relay	3/144	Lock unit trunk
2/14	Glow plug relay	3/146	Rear bass speakers switch
2/16	Tailgate wiper intermittent relay	3/157	Airbag disconnection contact breaker passenger side
2/22	Relay A/C	3/160	Interior lighting switch
2/23	Fuel pump relay	3/161	Vanity mirror lighting switch left-hand side
2/30	Overload relay X-supply	3/162	Vanity mirror lighting switch right-hand side
2/32	Main relay fuel system	3/171	Retractable power door mirrors switch
2/33	Main relay compressed natural gas (CNG) powered	3/184	Switch compressed natural gas (CNG) / gasoline powered
2/35	Starter motor relay		
2/43	Heated rear seat relay	4/3	Control module cruise control
2/44	Heated rear window / door mirrors relay	4/4	Rheostat
2/54	Relay 30-supply cargo compartment	4/9	SRS control module
2/67	Trunk lid opening relay	4/16	ABS control module
2/74	Relay heating plugs coolant	4/19	Remote-controlled central locking / anti-theft alarm
2/76	Control module central locking / anti-theft alarm	4/22	Immobilizer
2/77	Relay alarm horn	4/28	Transmission control module (TCM)
2/99	Relay left-hand side window lift mechanism	4/29	Seat control module
2/100	Relay right-hand side window lift mechanism	4/30	Control module ECC
2/129	Relay fuel shut-off system	4/31	Blower fan control module
2/130	Relay start inhibitor	4/33	Control module power sunroof
3/1	Ignition switch	4/44	Ignition Discharge Module (power stage) and ignition coil
3/2	Light switch	4/46	Engine control module (ECM)
3/3	Turn indicator / high-low beam switch	4/50	Electronic throttle module (ETM)
3/4	Electrical switch module cruise control	4/59	Soft-top control module
3/6	Hazard warning signal flasher switch	4/60	Power windows control module
3/8	Heated rear window / door mirrors switch	4/61	Control module roll-over bar
3/9	Stop (brake) lamp switch	4/74	Ignition control module (ICM) compressed natural gas (CNG) powered
3/10	Back-up (reversing) lamps switch	4/75	Electronic module
3/13	Tailgate wiper and washer switch	4/76	Remote control module garage door opener
3/20	Power window switch front passenger door	5/1	Combined instrument panel (CDM)
3/25	Power sun roof switch	6/4	Left headlamp washer motor
3/38	Brake pedal switch	6/13	Power door mirror driver side
3/39	Clutch pedal switch	6/14	Power door mirror passenger side
3/41	Power door mirrors switch	6/15	Power sunroof motor
3/44	Seat belt lock switch driver's seat	6/25	Starter motor
3/45	Seat belt lock switch passenger seat	6/26	Generator
3/47	Parking brake switch	6/28	Blower fan
3/57	Climate control	6/29	Engine cooling fan (FC)
3/58	Fog tail lamps switch	6/30	Tailgate washer motor
3/59	Beam height control	6/31	Fuel injection pump / fuel pump
3/61	Controls trip computer	6/32	Tailgate wiper motor
3/62	Alarm switch hood	6/33	Fuel level sensor
3/63	Mode selector AW 50-42	6/33L	Left fuel level sensor
3/65	Electrically heated rear seat switch	6/33R	Right fuel level sensor
3/71	Gear-shift position sensor	6/34	Power antenna
3/72	Kickdown switch throttle control	6/37	Central locking motor fuel tank filler cover
3/76	Lock unit left rear door	6/38	Left actuator motor headlamp range adjustment
3/77	Lock unit right rear door	6/39	Right actuator motor headlamp range adjustment
3/78	Lock unit trunk	6/48	Servo motor recirculation shutter
3/84	Cargo compartment fans switch		
3/85	Power window switch left rear door		
3/86	Power window switch right rear door		
3/91	Heated seat left switch		
3/92	Heated seat right switch		
3/95	Switch TC/STC		