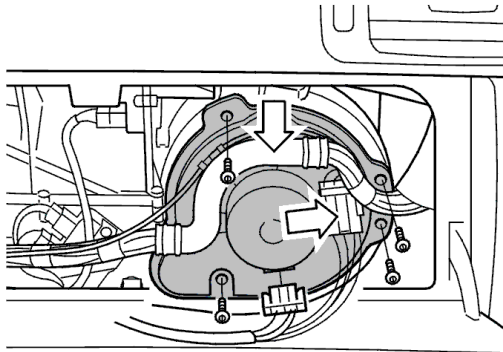


87: Removing, replacing and installing ECC/MCC, B5244T2**V70 (-00), 2000, B5244T2, AW50/51****AWD, L.H.D, YV1LV60D2Y2651774, 651774****20/3/2013****PRINT****87: Removing, replacing and installing ECC/MCC, B5244T2****Replacing blower fan motor****Replacing blower fan motor****Removing blower fan motor**

- Ignition off.
- Remove glove compartment according to Interior, exterior Panel and SRS passenger airbag module:Disassembly .
- Remove soundproofing panel according to Interior, exterior Dashboard .
- Remove knee bolster/member.
- Disconnect the blower fan motor connector.
- Expose blower fan motor (remove cable duct and disconnect heater aggregate connector from blower fan motor).
- Remove blower fan motor.

Installing blower fan motor

In reverse order.

Finishing:

- Check that the blower fan is working.
- Check that no diagnostic trouble codes (DTCs) have been stored while the repair was carried out.

PRINT**20/3/2013**