

Previous Step

Fuel tank and components

Next Step

Index

Search

Print Topic



Print Screen

Help

Suspend

Main Menu

Cancel

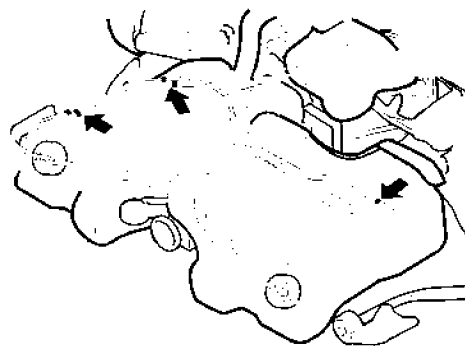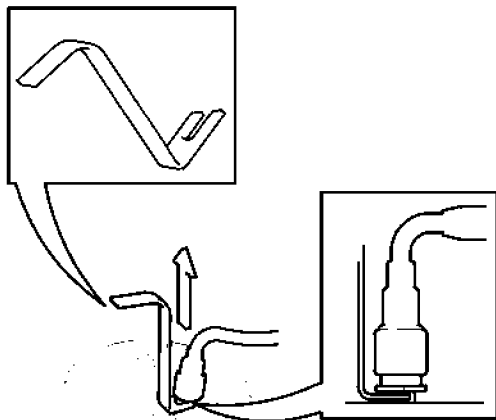

Remove:

- fuel lines from the fuel pump and ejector pump, use special tool **999 5666**
- fuel line attachments between the fuel pump and fuel filter.

Note! Do not remove the fuel line between the fuel pump and the ejector pump.

Removing the fuel lines from the clips

Remove the return line from the ejector pump (left-hand side).

Remove the pump units