


Electrical distribution

Fuses in cargo area/compartment

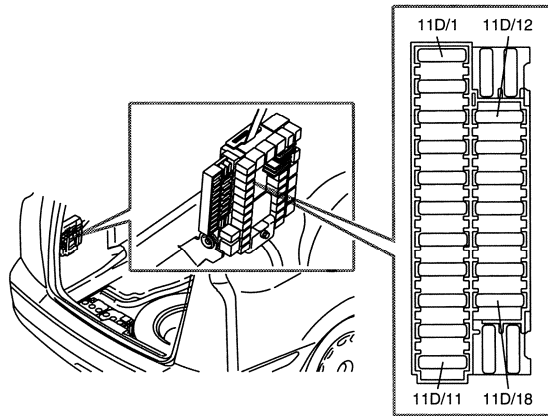

11D Fuses in cargo area/compartment

No.	Fuse function	A
1	Rear Electronic Module (REM) 4/58	10
2	Rear Electronic Module (REM) 4/58	10
3	Brake light relay 2/79	15
4	Reversing light relay 2/80	10
5	Relay, heated rear window 2/82 Relay, 15 feed, rear accessories 2/52	5
6	Trunk lid opening relay 2/67 S80 Tailgate locking relay 2/86 V70 Tailgate unlocking relay 2/87 V70	10
7	Relay, adjustable head restraint, rear 2/75 S80 Shunt 12V outlet cargo area 20/39 V70	10 15
8	Lock unit LH/RH rear door 3/76-77 Locking/unlocking relay, fuel filler flap 2/58-59	15
9	Towbar wiring	15
10	CD changer 16/15 S80 CD-ROM player RTI 16/48 RTI control module 16/45 Pager alarm 4/79	10
11	Control module, battery disconnect AEM 4/78	15
12	Rear window wiper motor 6/32	15
13	Sub-woofer 16/79	15
14	-	-
15	15 feed towbar wiring	20
16-17	-	-
18	Fuel preheater relay 2/142	10