


Electrical distribution

Fuses in cargo area/compartment

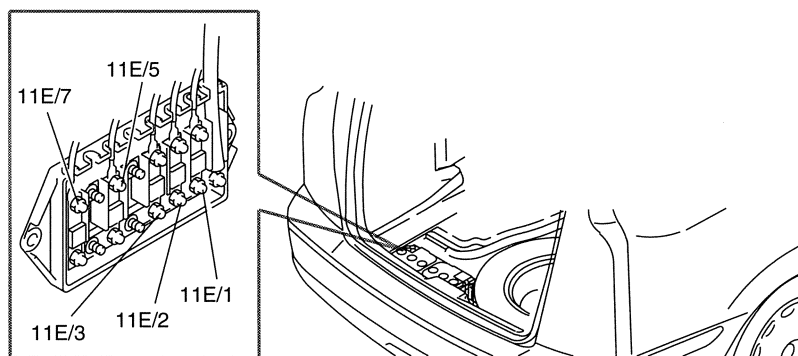

11E Fuses by battery

No.	Fuse function	A
1	Relay, 15 feed, rear accessories 2/52	40
2	Fuses for 11D/12-14	40
3	Relay, heated rear window 2/82	40
4	-	-
5	Fuses for 11D/6-11	40
6	-	-
7	Fuse protection for 11D/1-5	40