

Replacing the steering wheel lock


Preparations

Battery

- Make a note of the radio code if an anti-theft radio is installed
- Switch off the ignition
- Disconnect the battery negative lead.

The steering column


- Fold down the steering wheel adjustment lever
- Raise the steering wheel to the uppermost position.

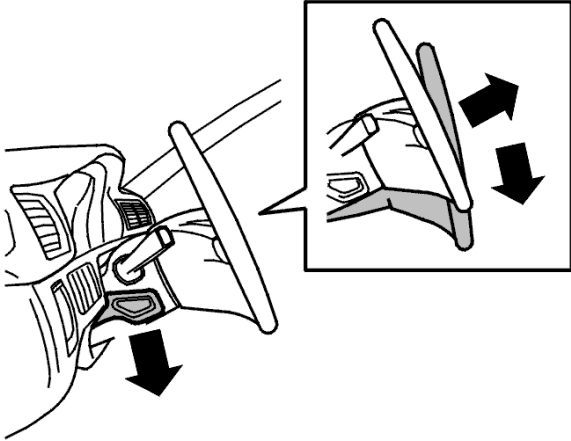

Removal

Remove:

- the steering wheel. See [Replacing the steering column / steering shaft / seal / bearing / lower steering shaft joint](#)
- the upper cover for the steering column. Use long Torx TX 15 tool
- the lower cover for the steering column. Use a Torx TX 25 tool.

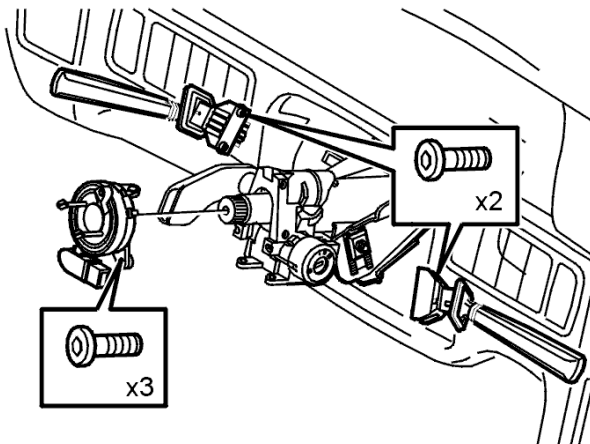


- **Caution!** Be careful not to damage the contact reel and cable harness during work.

Remove:

- the lever for the indicator lamps.
Allow the lever to hang from the cable harness
- the lever for the windscreen wipers.
Disconnect one of the connectors. Leave the lever hanging from the other connector
- the slip ring
- the holder for the steering lock lighting.

Removing the lock

- **Warning!** Use protective goggles.
- Pre-drill the screw heads (1) for the mounting. Use a 3 mm drill bit (A)

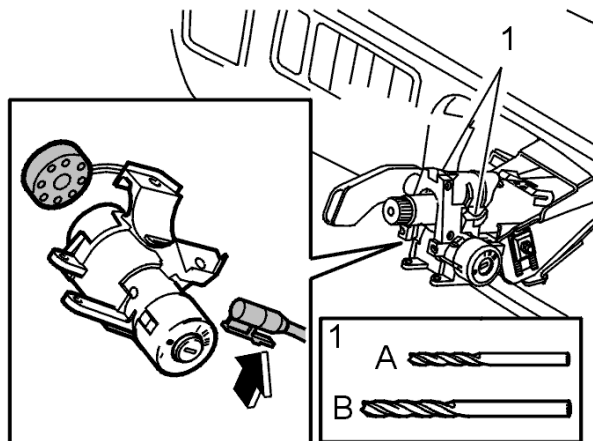


- Drill out the screw heads (1). Use a **8 mm** drill bit (B)
- Remove the lock.

Installation

Installing a new steering wheel lock

- Position the new steering wheel lock
- Install new security screws (1).

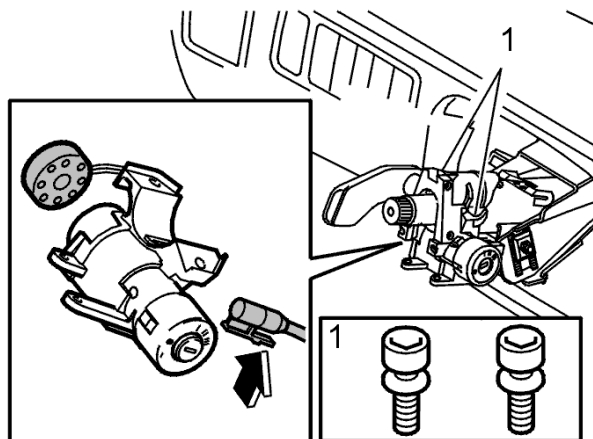

Install:

- **Note!** Do not forget to connect the disassembled connector.
- **Caution!** Ensure that the boot for the windscreen wiper lever is in place
- **Caution!** Ensure that no wiring is trapped when the steering column covers are installed.
- the holder for the steering lock lighting. Use a new bulb
- the slip ring
- the lever for the windscreen wipers
- the lever for the indicator lamps
- the lower cover for the steering column. Use a Torx TX 25 tool
- the upper cover for the steering column. Use long Torx TX 15 tool
- the steering wheel. See [Replacing the steering column / steering shaft / seal / bearing / lower steering shaft joint](#) .

Final adjustments

- Adjust the steering wheel setting
- Fold up the adjustment lever
- Connect the battery negative lead
- Program the radio if applicable.