

Air cleaner passenger compartment, replacing

Note! The illustrations in this service information are used for different model years and/or models. Some variation may occur. However, the essential information in the illustrations is always correct.

Preparatory work

Important information

Note! This method only applies to left-hand drive vehicles (LHD).

Removing the accelerator pedal (AP)

Remove the accelerator pedal (AP). See: [Accelerator pedal \(AP\), replacing](#).


Removal

Removing the passenger compartment air cleaner (ACL)


Fold the floor carpet out of the way.

Remove:

- the 3 screws and fold up the cover. See the illustrations.

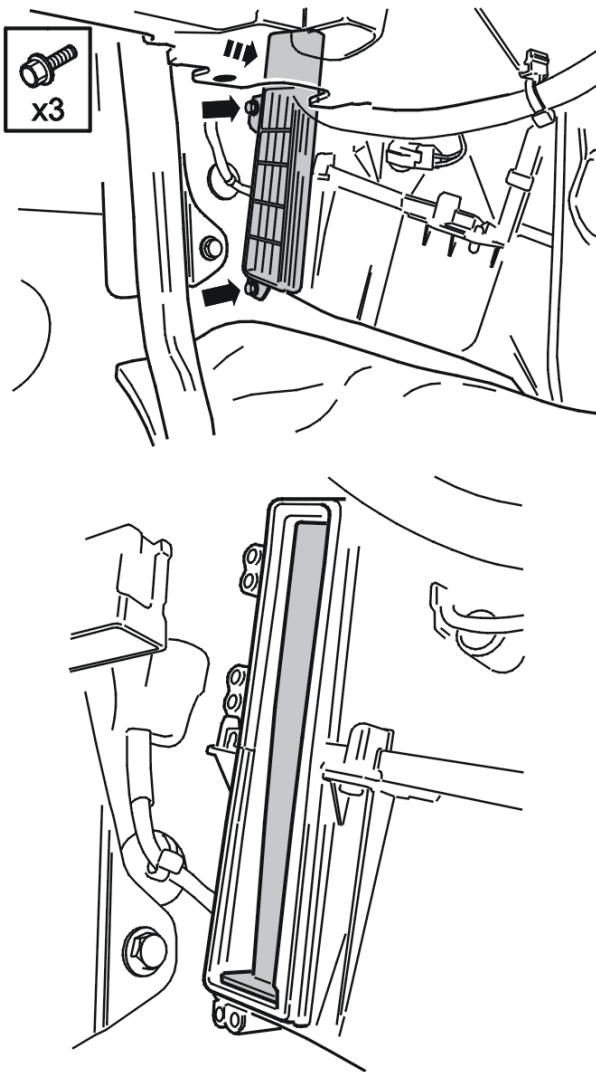

- the filter by pulling it out behind the brake pedal.

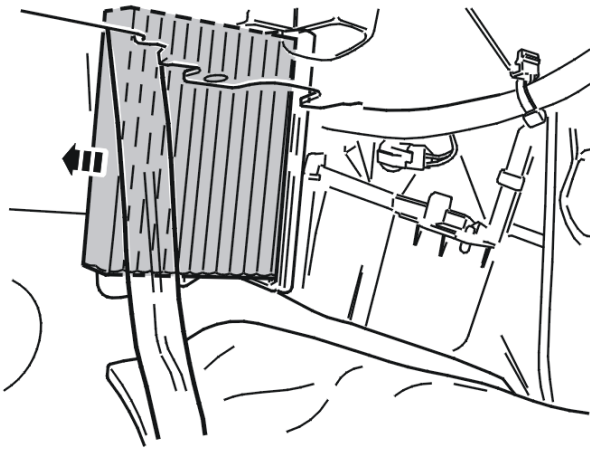

Installation

Installing the passenger compartment air cleaner (ACL)


Note! The direction of the air flow is indicated on the top of the filter. Ensure that the filter is installed with the text side facing up and so that the arrows on the filter point straight back into the vehicle.

Install the air filter by compressing it slightly and inserting it behind the brake pedal.

Clamp the cover in place at the rear edge. Screw the cover into place at the front edge using the 3 screws.

Fold back the carpet.

Install the accelerator pedal (AP). See: [Accelerator pedal \(AP\), replacing](#).

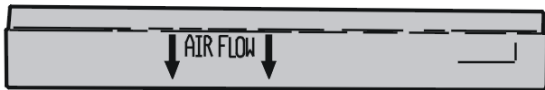

Accelerator pedal (AP), replacing


Note! The illustrations in this service information are used for different model years and/or models. Some variation may occur. However, the essential information in the illustrations is always correct.

Removal

Removing the accelerator pedal (AP)

Remove:

- the soundproofing panel. See: [Soundproofing panel driver's side, replacing](#)
- 3 M6 nuts
- the connector (1)
- the accelerator pedal (AP).

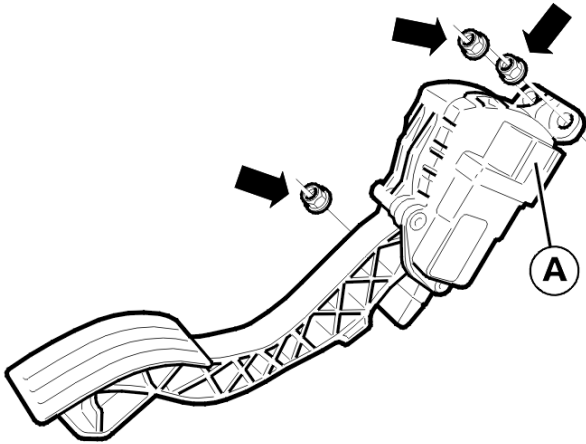


Installation

Note! For tightening torques, see [Tightening torque](#).

Installing the accelerator pedal (AP)

Install:

- the connector (1)
- the accelerator pedal (AP)
- 3 M6 nuts
- the soundproofing panel. See [Soundproofing panel driver's side, replacing](#).

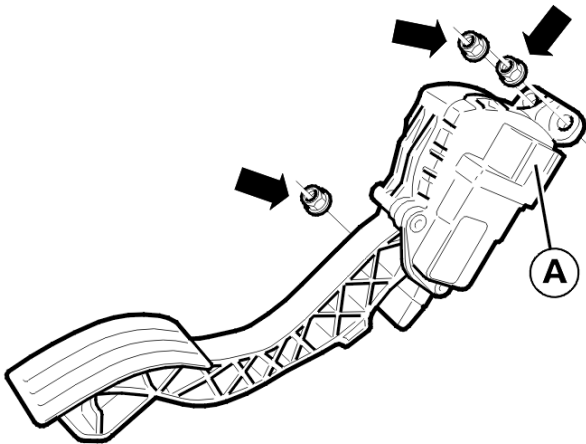

Soundproofing panel driver's side, replacing



Note! The illustrations in this service information are used for different model years and/or models. Some variation may occur. However, the essential information in the illustrations is always correct.

Removal


Removing soundproofing panels

Remove:

- the panel inside the center console. It is secured with 4 hidden clips.

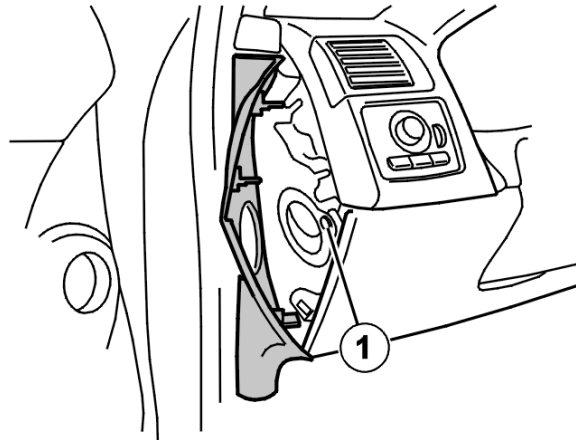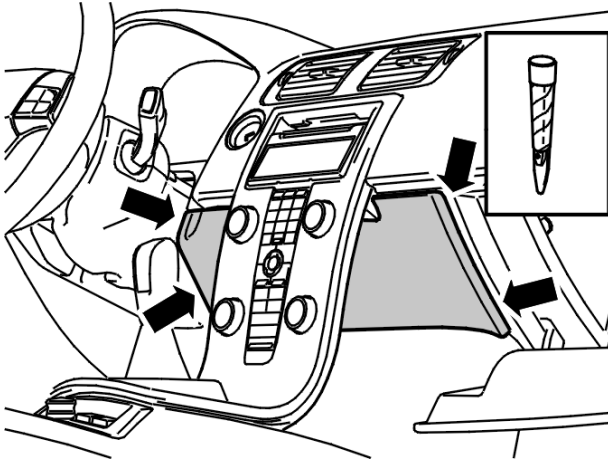


- the end cover. Use a weatherstrip tool
- the 1 clip (1).

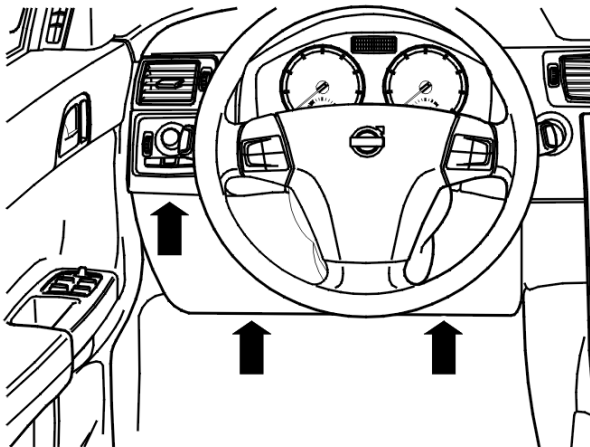

- the 3 screws.

- the passenger compartment temperature sensor.

Press the sensor forward in the vehicle to release it.

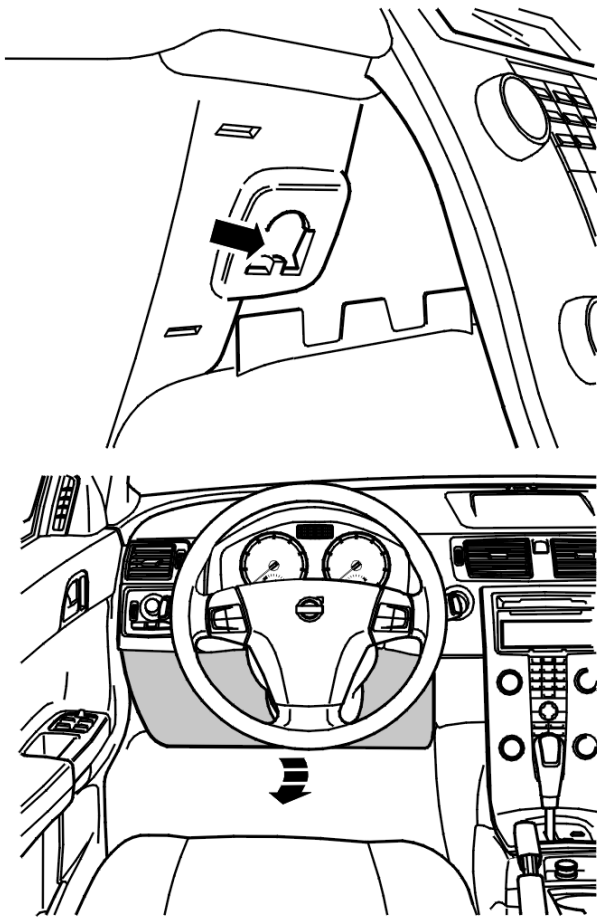

Pull the panel down and out.

Note! There are 2 hidden clips at the top edge of the soundproofing panel.

Disconnect the 1 connector for the courtesy lighting.

Installation

Installing the soundproofing panel

Connect the connector for the courtesy lighting.

Guide the panel into place. Secure the passenger compartment temperature sensor.

Note! There are 2 hidden clips at the top edge of the soundproofing panel.

Install:

- the 3 screws. Tighten
- the 1 clip
- the end cover
- the panel inside the center console. It is secured with 4 hidden clips.