

Side cushion


Replacing the side cushion

Remove the cushion according to [Cushion](#) .

Unthread the belt from the belt guide.

Insert a hand down the side of the lower section of the side cushion.

Release the catches while lifting the side cushion.

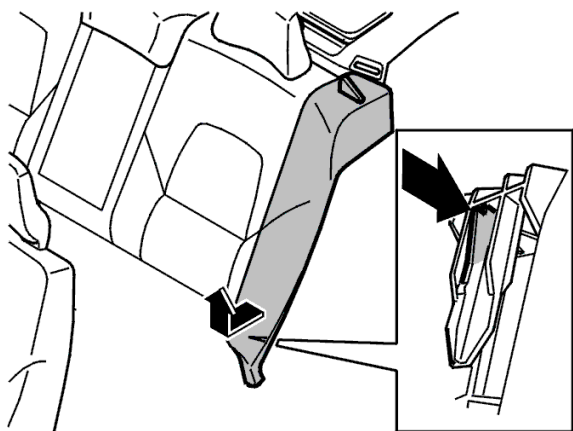

Installation

Install in reverse order.