


Fan resistor (MCC)/Recirculation damper motor, replacement

Preparations


- Remove glove compartment (4 screws).
- Remove glove compartment panel (4 screws).

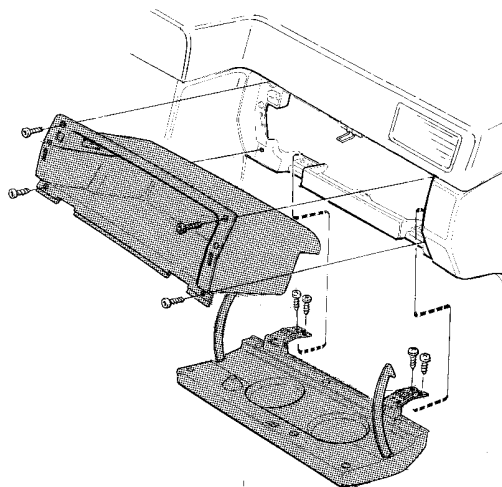

Removal

When replacing fan resistor MCC (H2):

- Disconnect fan resistor connector.
- Remove fan resistor (1 screw).

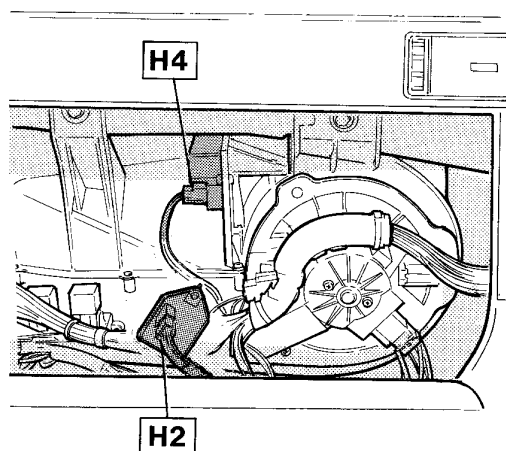

- Install fan resistor and connector.

When replacing recirculation damper motor (H4):

- Disconnect damper motor connector.
- Remove damper motor (2 screws).
- Install damper motor and connector
- Carry out self-adjustment of damper motor limit positions.

Installation

Install:

- Glove compartment panel.
- Glove compartment.