


F6-F8. Rear bumper

Remove the rear bumper

Remove:

- wheel arch liners;
- retaining nut at left and right (under the car);
- rear wall trim panel;
- retaining nut at left and right (in the boot)

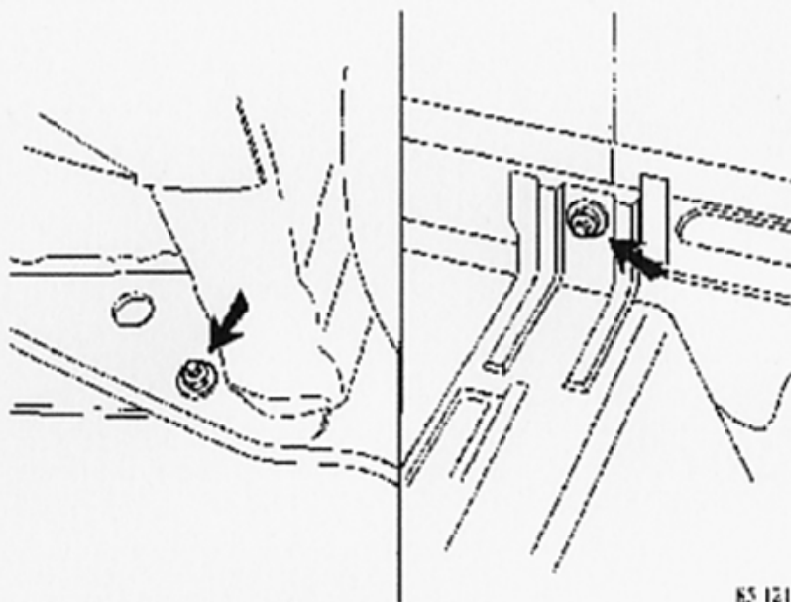

85 121

Disassemble the rear bumper

Press in and release the eight bumper skin attachment clips (1).
For this purpose, use a self-made auxiliary tool; see Operation F5.

Remove the bumper skin from the bumper beam

Remove the bumper skin.

Fitting


Note the position of the bumper skin on the bumper beam.

Remove the rubber protection moulding from the bumper skin

Remove the screws (2) from the rubber protection moulding (3)
(six at the left and six at the right).

Press in all the locking tabs (4) of the rubber protection moulding
at top and bottom and take the moulding off the bumper skin (5).



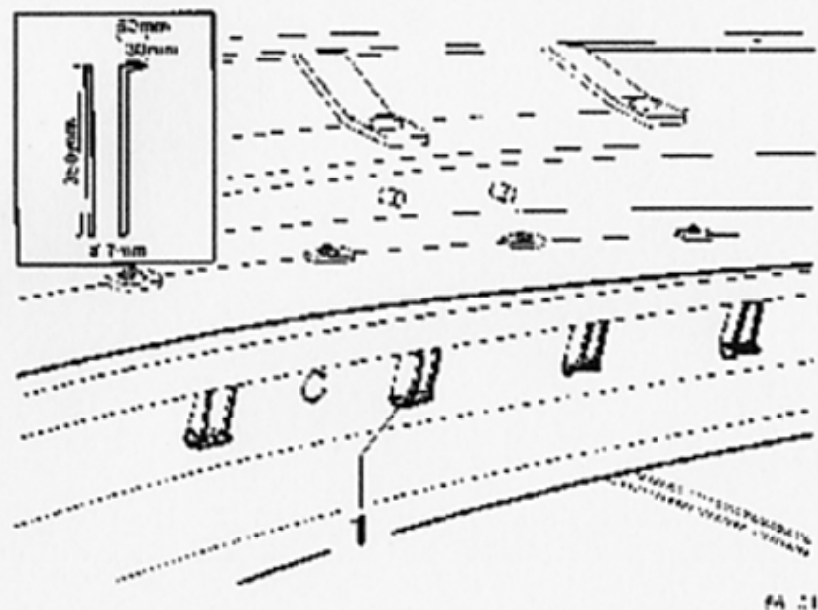

FA 212

Remove the bumper skin from the bumper beam

Press in and release the eight bumper skin attachment clips (1).
For this purpose, use a self-made auxiliary tool (see illustration).
Remove the bumper skin.

Fitting

Note the position of the bumper skin on the bumper beam.

Rear bumper