


Engine coolant temperature (ECT) sensor

Component disconnected

Terminals	Condition	Typical value	Note
1 & 2	0°C	5800 Ω	
1 & 2	20°C	2500 Ω	
1 & 2	80°C	330 Ω	

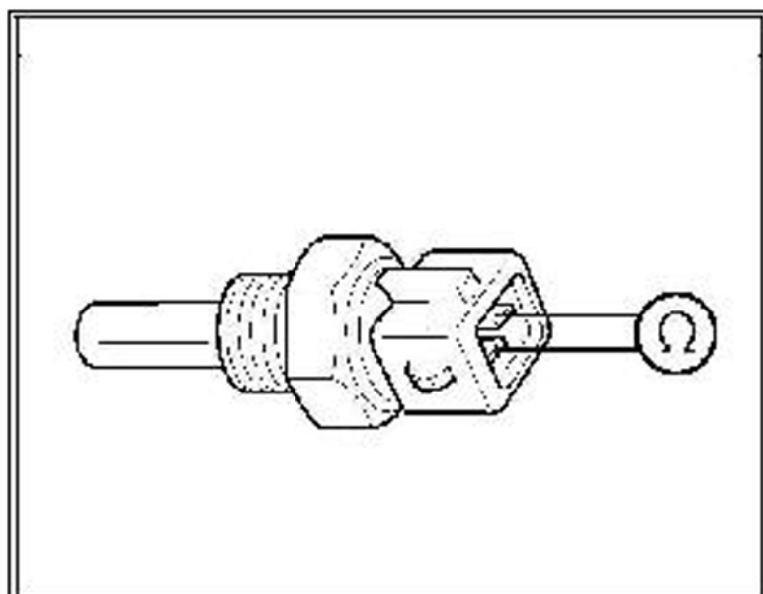


Intake air temperature (IAT) sensor

Component disconnected

Terminals	Condition	Typical value	Note
1 & 4	0°C	5800 Ω	7
1 & 4	20°C	2500 Ω	
1 & 4	80°C	330 Ω	

Notes

7. Incorporated in injector assembly.

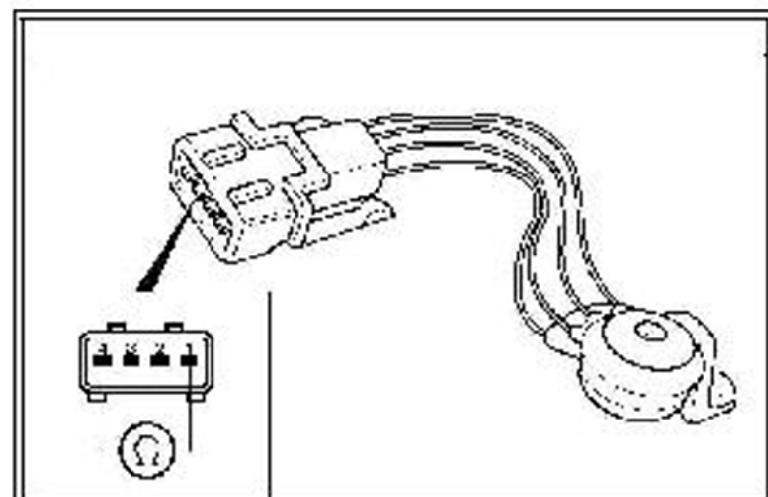


Throttle position (TP) sensor

Component connected

Terminals	Condition	Typical value	Note
1 & 2	Ignition ON	5 V	1
1 & 4	Ignition ON - throttle closed	0,8 V	2
1 & 4	Ignition ON - throttle fully open	4,5 V	2, 3

Notes

1. Checking supply voltage.
2. Checking signal.
3. Voltage change should be smooth.

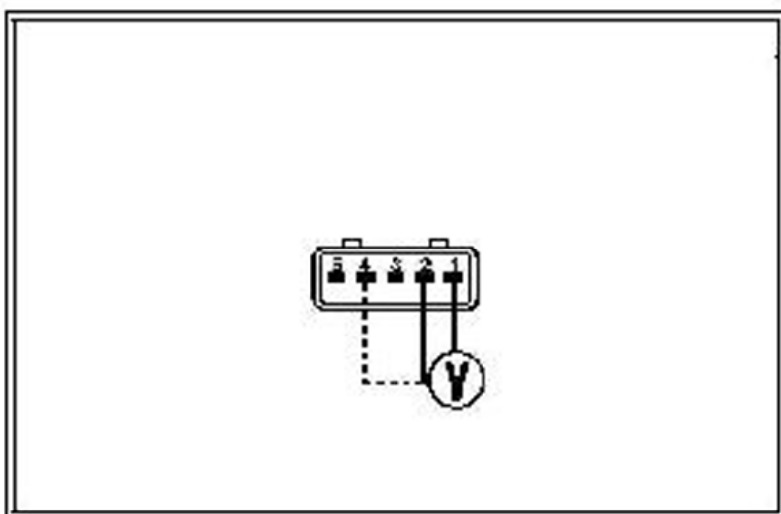

Evaporative emission (EVAP) canister purge valve

Component disconnected

Terminals	Condition	Typical value	Note
1 & 2		40 Ω	

