

Headlamp/bulb, replacing


Note! The illustrations in this service information are used for different model years and/or models. Some variation may occur. However, the essential information in the illustrations is always correct.

Preparatory work

Ignition off

Ignition off.

Switch off the lighting switch.

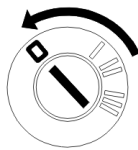

Replacing components

Caution! The plastic lens on the headlamp scratches easily. Do not place the headlamp on a hard surface with the lens downwards.

Caution! Do not damage the paintwork on the bumper when removing/installing the headlamp.


Removing headlamp

Note! For vehicles with Bi-Xenon lamps, see:

[Bulb Bi-Xenon, replacing](#)

Remove:

- the locking plate
- the headlamp.

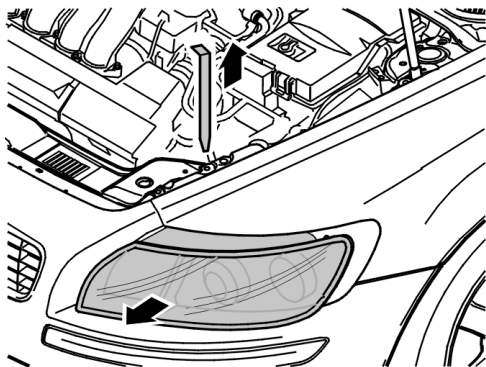



Installing the headlamp

Hint: Press the lamp straight back. Align the guides in position.

Install:


- the connector
- the headlamp
- the locking plate.

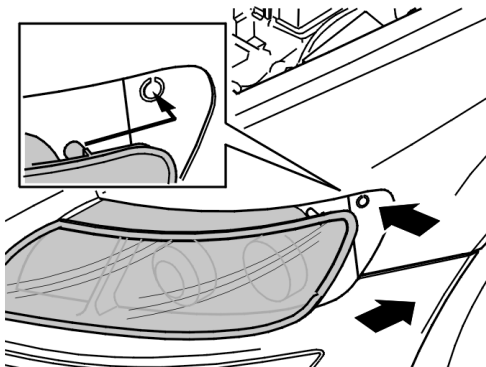

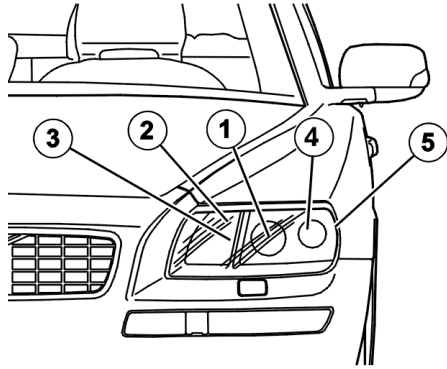

Location of the bulbs

1. Dipped beam
2. Main beam
3. Parking lamps
4. Turn signal lamps
5. Side marker lamps.

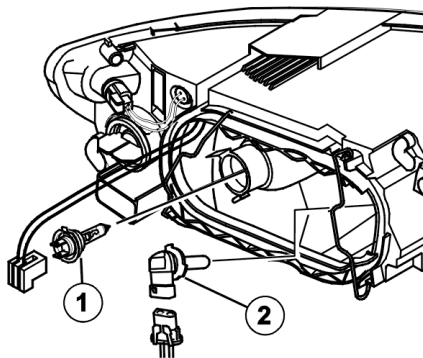

Removing bulbs high/low beam

1. Dipped beam
2. High beam.

Remove:

- the cover
- the connector
- the spring catch (press and turn)
- the bulb.

Installing bulbs high/low beam

Align the stop lamp.


Install:


- the spring
- the connector
- the cover.

Removing the bulb for side marker lamps/turn signal lamps

Remove:

- the bulb holder (press and turn)
- the bulb.

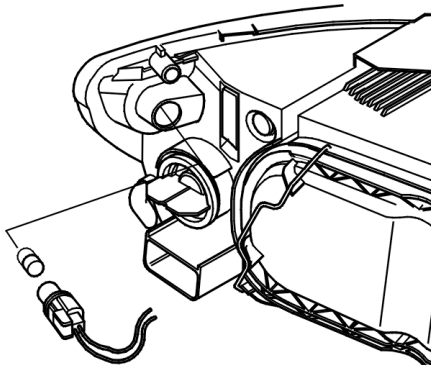

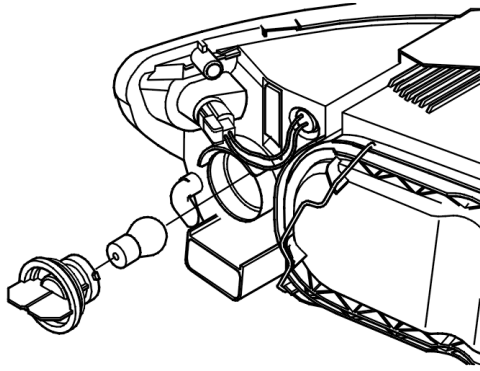

Installing the bulb for side marker lamps/turn signal lamps


Install:

- the bulb
- the bulb holder.

Removing the parking lamp bulb

Pull the bulb holder straight out.

Remove the bulb.

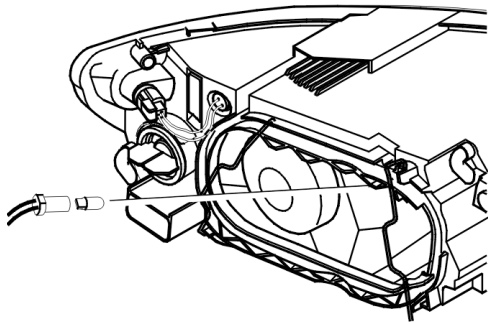

Installing the parking lamp bulb

Install:

- the bulb
- the bulb holder.

Finishing

Function test

Test the function.

When replacing headlamps or carrying out work which may have affected the headlamp alignment, check and align the beam. See:

[Headlamps, aligning](#) .