


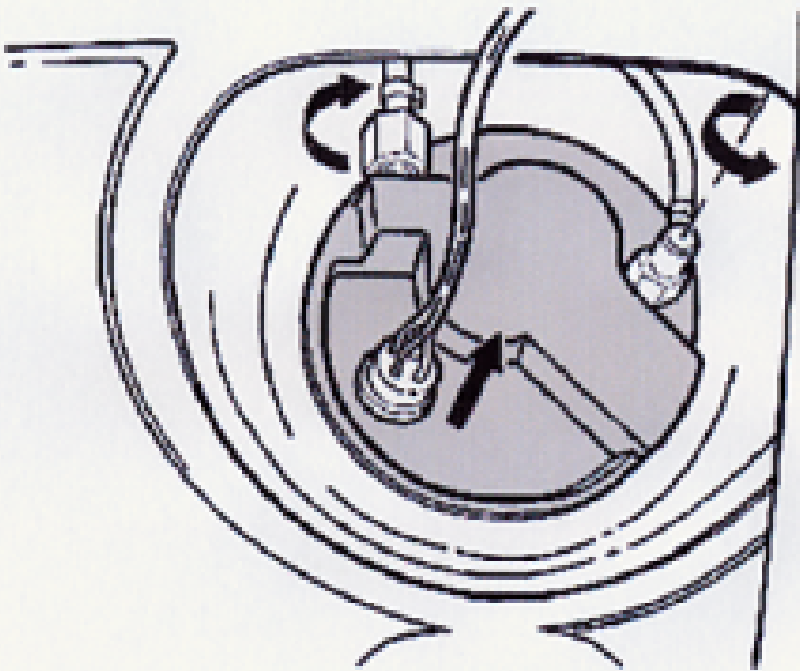

Release the tank transmitter unit wiring and connections

Disconnect the battery negative cable.

Remove the rear seat cushion.

Remove the cover plate.

Disconnect the transmitter unit wiring at the connector. Release the hose unions.