


645: Servo equipment, B6324S






XC90, 2008, B6324S, TF-80SC AWD, YV4CZ982081451588, 451588


14/8/2017

**PRINT****645: Servo equipment, B6324S****Operation number:**
64518-2**Power steering
pump****Note! Some variation
in the illustrations
may occur, but the
essential information
is always correct.**


Special tools	
	T9997077 JIMMY BAR Tool number: T9997077 Tool description: JIMMY BAR Tool boards:

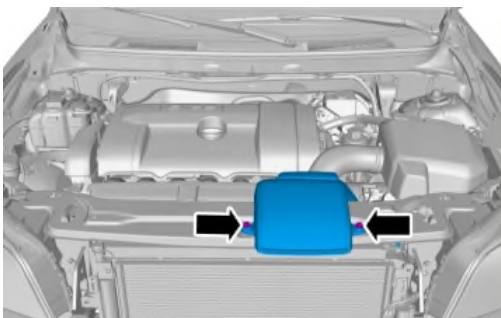Removal**Note! Removal steps
in this procedure may
contain installation
details.**Remove relay and fuse
box engine
compartment.Refer to: Integrated
relay / fusebox in
engine compartment

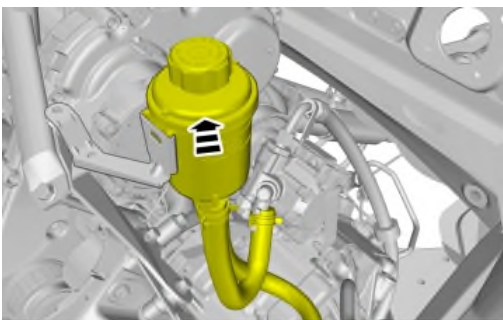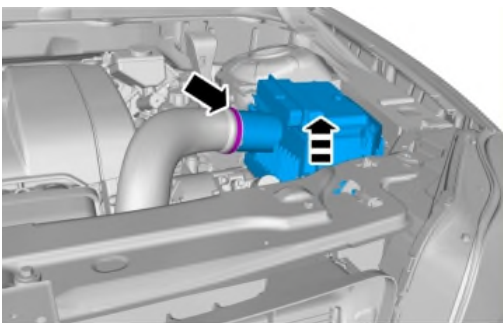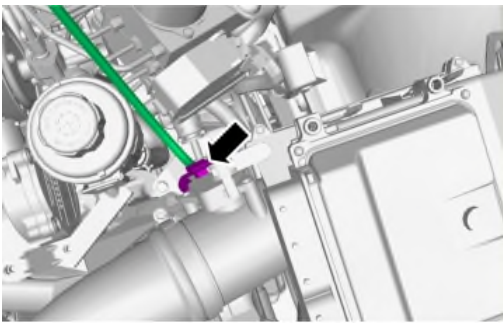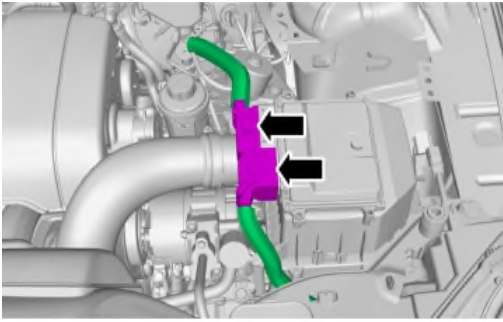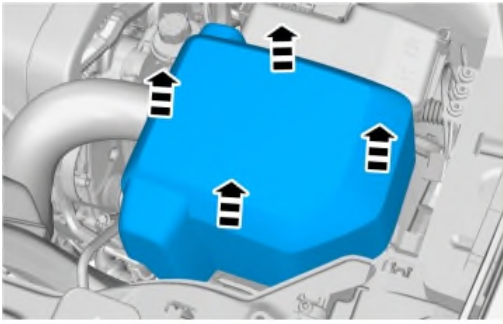


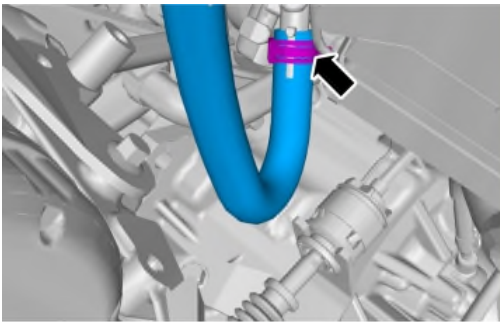

Warning! Be prepared to collect escaping fluid.

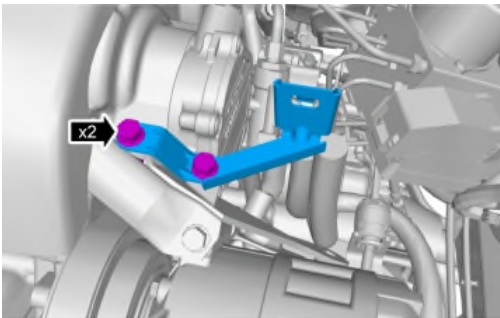


Torque: M8, 24 Nm

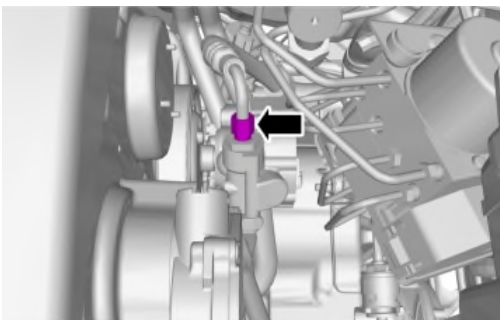


Warning! Be prepared to collect escaping fluid.


Pressure hose in pump (M16)

Refer to: Tightening torque: Summary of tightening torques for specific components

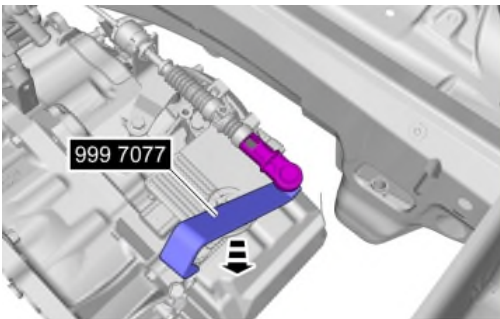


999 7077

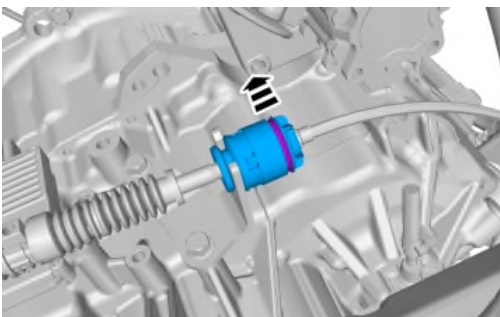


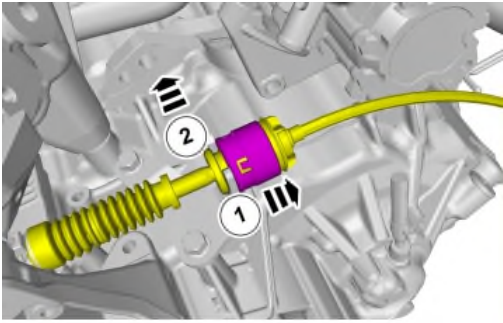

Torque: M8, 24 Nm

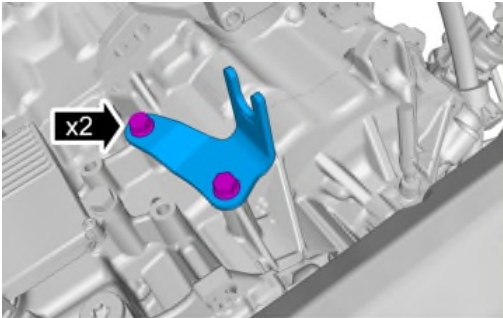



Torque: M6, 10 Nm

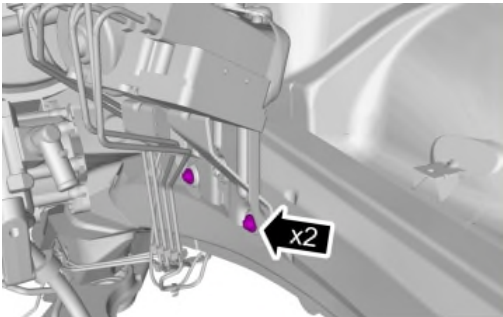


Note! Do not loosen the bolt more than 4 turns.

Torque: M6, 10 Nm


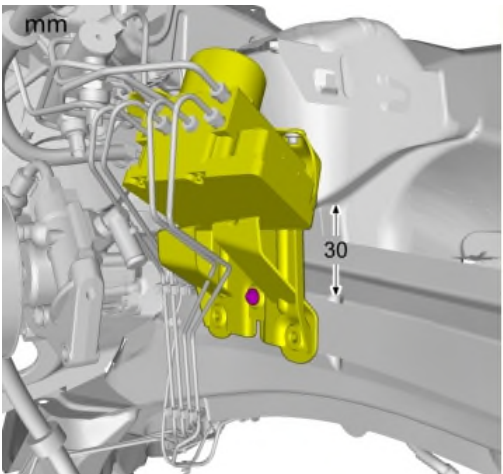



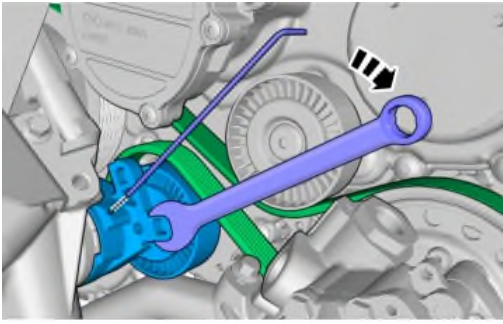


Torque: M8, 24 Nm

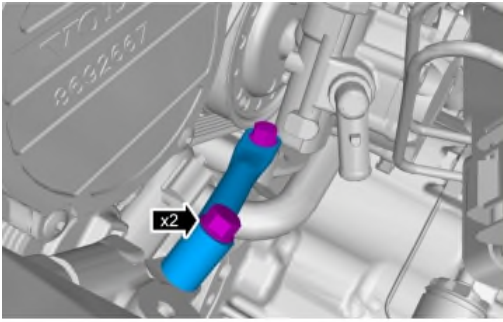

Torque: M8, 24 Nm

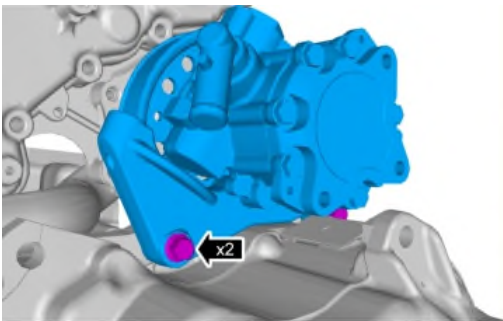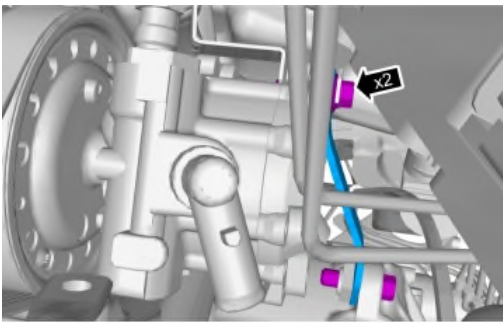

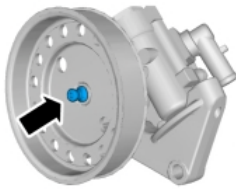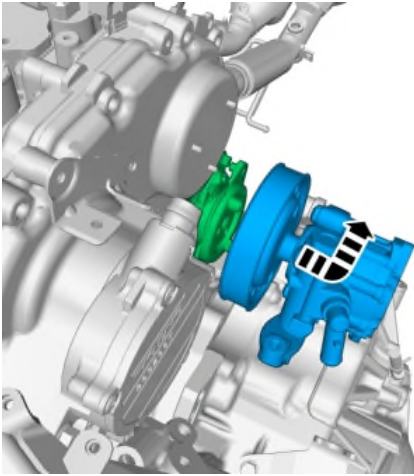

Note! Make sure that a new component is installed.

Installation

To install, reverse the removal procedure.

Perform power steering system bleeding air.

Refer to: Power steering system, bleeding

PRINT

14/8/2017