

Engine Misfire

- * Check fuel injectors.
- * Check ignition and sensor wires for proper connection.
- * Check ignition and coil circuit.
- * Check for gasoline in oil.
- * Check intake and exhaust system.
- * Check throttle switch and connector.
- * Check for vacuum leaks.

Difficult To Start When Hot

- * Ensure fuel pressure is correct.
- * Ensure fuel injectors are not leaking.
- * Check ignition and sensor wires for proper connection.
- * Ensure spark plugs are not fouled.
- * Check ignition and coil circuit.
- * Check throttle switch and connector.
- * Check idle valve. Ensure airflow arrow points in correct direction.