

1	Closed throttle position (CTP) switch
2	Crankshaft position (CKP) sensor
3	Data link connector (DLC)
4	Engine control module (ECM) - under RH fascia
5	Engine control (EC) relay - under LH fascia
6	Engine coolant temperature (ECT) sensor
7	Evaporative emission (EVAP) canister purge valve - under LH front wing
8	Fuel filter - near tank
9	Fuel pressure regulator
10	Fuel pump (FP) - in tank
11	Fuel pump (FP) relay - under LH fascia
12	Heated oxygen sensor (HO2S) - before cat
13	Idle speed control (ISC) actuator
14	Ignition amplifier
15	Ignition coil
16	Injector
17	Intake air temperature (IAT) sensor
18	Knock sensor (KS)
19	Manifold absolute pressure (MAP) sensor
20	Throttle position (TP) sensor
21	Vehicle speed sensor (VSS) - in speedometer

