


## Replacing the fuel filter

### Removal


#### Draining the fuel system

- Empty the fuel injection system according to [Draining the fuel system](#) .

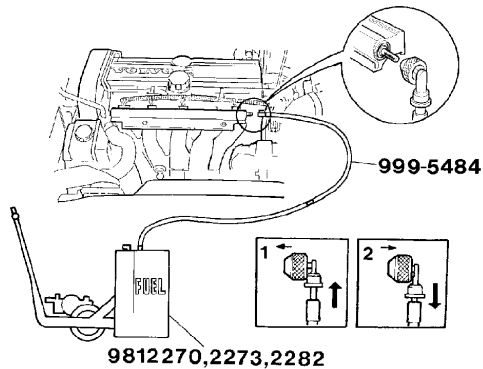

#### Removing the fuel filter

- Remove the screw securing the clamp around the filter
- Disconnect the quick-release connectors from the fuel filter
- Replace the filter.

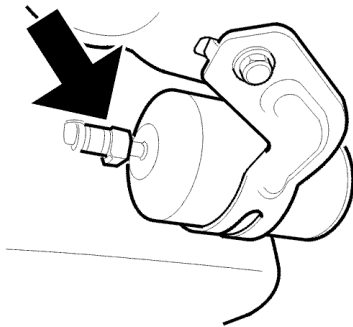

### Installation

#### Installing the fuel filter

In reverse order.

Tighten the screw. Tighten to **25 Nm**.