

Brake disc front, replacing

Removal



Preparation

Remove the brake pads. See [Brake pads front, replacing](#) .

Removing the brake calliper holders and brake disc

Remove:

- * both the mounting screws (1)
- * the calliper holder
- * the screw (2) and the brake disc.

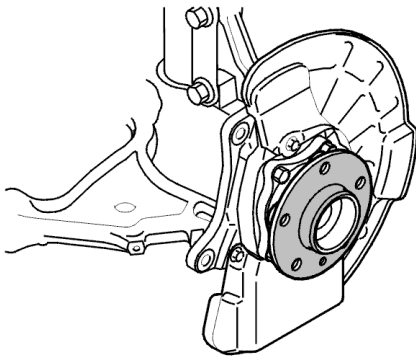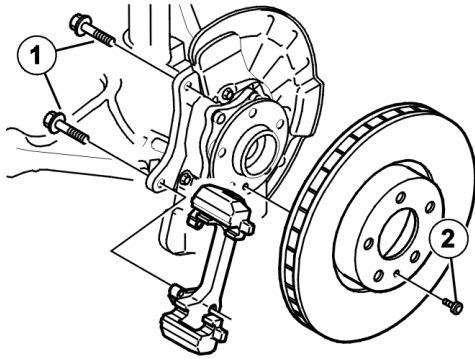

Cleaning and checking

Note! Cleaning is important to prevent lateral run out at the brake disc.

Clean the hub flange before installing the new brake disc.

Check the hub. If it is damaged, measure the lateral run out. See [Front wheel hub, measuring lateral runout](#) .

Installation


Note! For tightening torques, see [Tightening torque](#) .

Installing the brake disc

Note! Be careful when handling the new brake disc. Careless handling can cause damage to the brake disc (out-of-true).

Install:

- the brake disc. Tighten the screw (2), M6
- the calliper holder. Tighten the two screws (1). See [Tightening torque](#) .

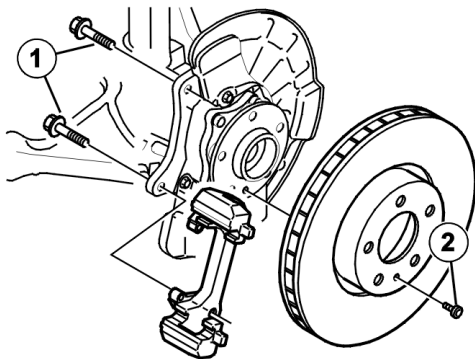

Finishing

Install the brake pads. See [Brake pads front, replacing](#) .

Install the wheel. See [Installing wheels](#) .