

43: Gear selector assembly, gear selector, B8444S, TF-80SC AWD

XC90, 2008, B8444S, TF-80SC AWD, L.H.D

30/8/2018

**PRINT****43: Gear selector assembly, gear selector, B8444S, TF-80SC AWD****Gear selector cables, adjusting**

Note! As the illustrations in this service information are used for different model years and / or models, some variation may occur. However, the essential information is always correct.

Preparatory work

Ensure that the car is on a level surface. The parking brake must not be applied.


Move the gear selector to position P.


Ignition off.

Exposing the adjuster for the cable

Remove:

- the fresh air intake from the air cleaner (ACL) housing
- the fresh air intake and the air cleaner (ACL) housing (Applies to cars with B5254T4 engines).

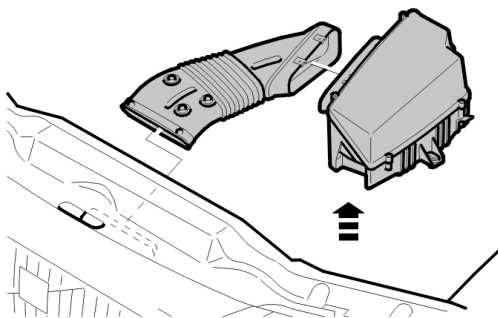
**Adjusting the gear selector cable**

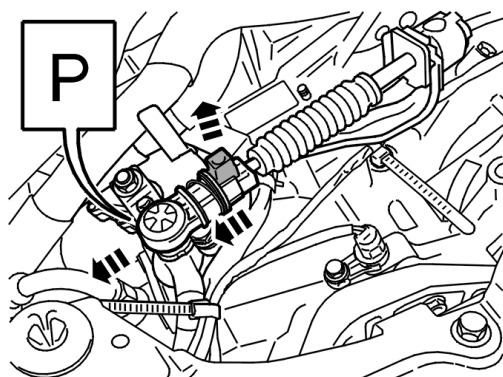

Release the adjuster on the gear selector cable by sliding the spring-loaded sleeve forwards and pulling the lug up to the release position. Press the lever forwards to the P position on the transmission (the foremost position of the lever). Move the gear shift lever to position P.

Note! Check that P position is engaged: Try to roll the car.

Adjusting the gear selector cable

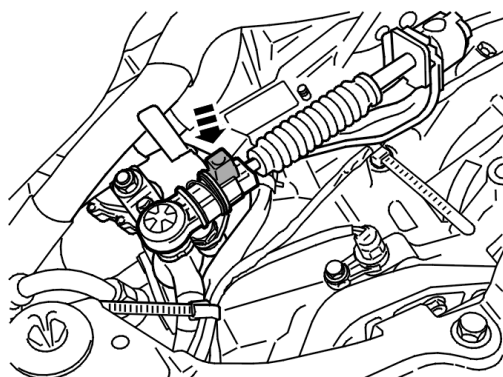


Check that the gear selector is in position P.
Press the lug on the cable down.

Installing components

Install:

- the fresh air intake for the air cleaner (ACL) housing
- the fresh air intake and the air cleaner (ACL) housing and all connections (Applies to cars with B5254T4 engines).

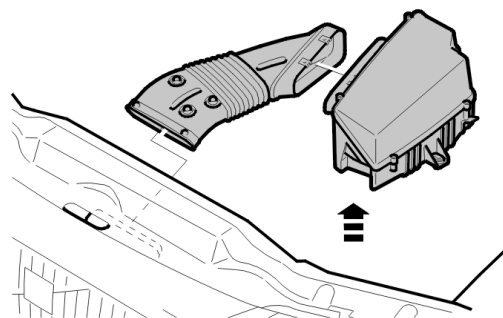

30/8/2018

PRINT