


## Fuel pressure regulator, replacement


### Fuel pressure regulator, replacement

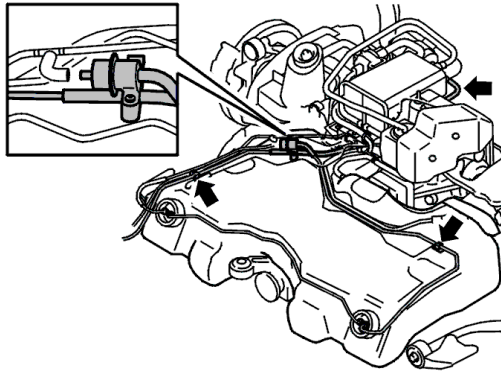

#### Removing the fuel pressure regulator

- Remove the 3 rubber mats covering the fuel lines on the fuel tank.
- Disconnect the reference air hose of the fuel pressure regulator.
- Disconnect the reference air hose from the mountings on the fuel tank and fuel pressure regulator.
- Disconnect the fuel line from the left-hand side of the fuel filter.
- Disconnect the fuel line from the fuel pump (on left-hand side of fuel tank). Use special tool [999 5666](#).
- Disconnect the fuel line from the subframe. Use special tool [999 5666](#).
- Disconnect the fuel line from the mounting on the fuel tank.
- Remove the fuel pressure regulator and fuel lines.

#### Fitting the fuel pressure regulator

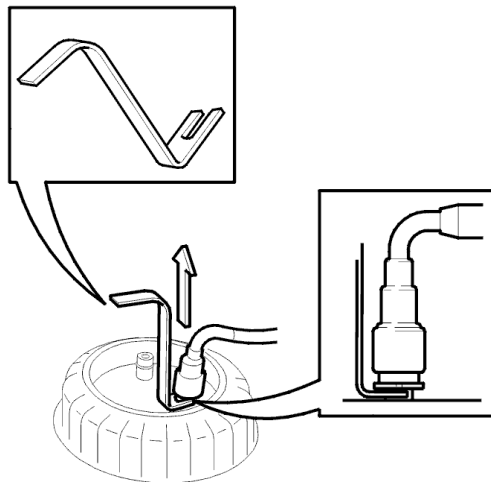

- Fit the fuel pressure regulator and fuel lines.
- Attach the fuel line to the left-hand side of the fuel filter.
- Attach the fuel line to the fuel pump (on left-hand side of fuel tank)
- Attach the fuel line to the subframe.
- Attach the fuel line to the mountings on the fuel tank.
- Secure the fuel pressure regulator with the bolts.
- Attach the reference air hose of the fuel pressure regulator.
- Attach the reference air hose to the mountings on the fuel tank and fuel pressure regulator.
- Fit the 3 rubber mats covering the fuel lines on the fuel tank.