


Replacing the engine speed (RPM) sensor

Removing the engine speed (RPM) sensor

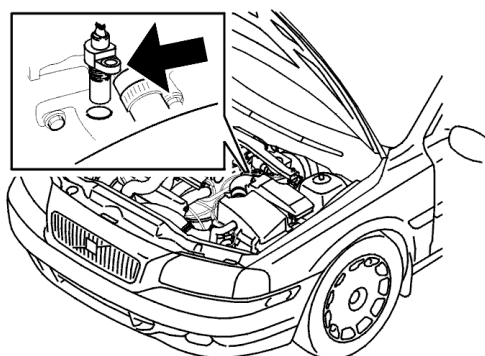


Remove the tie strap from the torque rod.
Open the hose clamp.

Remove:

- the hoses
- the connector from the sensor
- the nut for the sensor
- the sensor.

Installing the engine speed (RPM) sensor

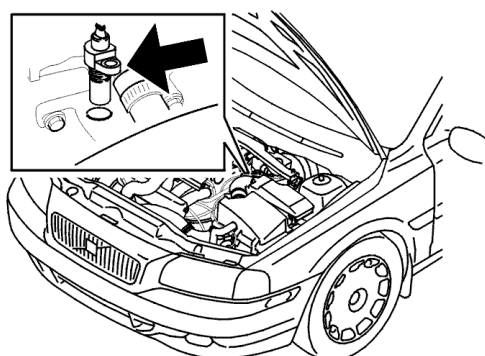

Install

- the sensor. Use a **new** nut. Tighten to **10 Nm**
- the connector
- the hoses and close the clamp
- the tie strap on the torque rod.