



Operation number: 87331-3



Operation number: 87346-2

Resistor - blower motor

Removal

Remove accelerator pedal Refer to: [Accelerator pedal](#).

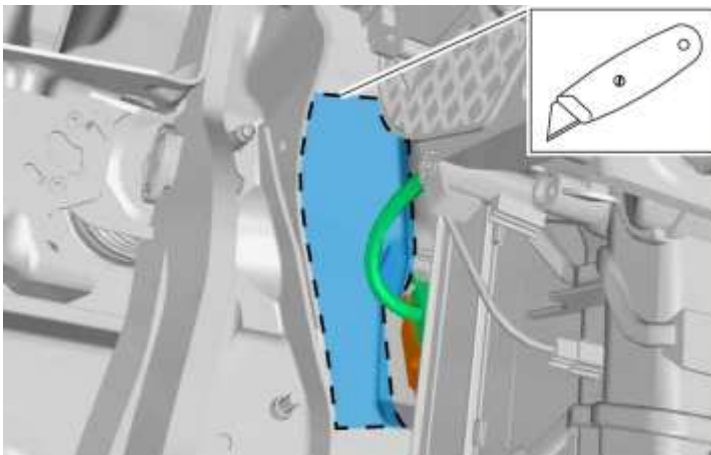
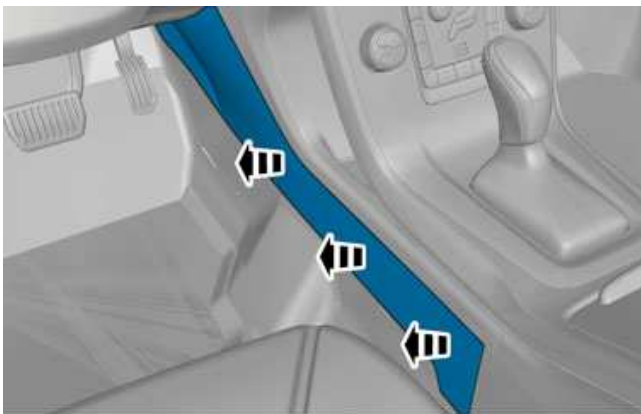


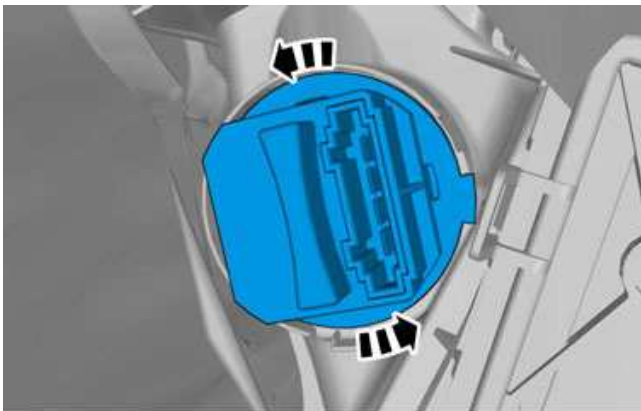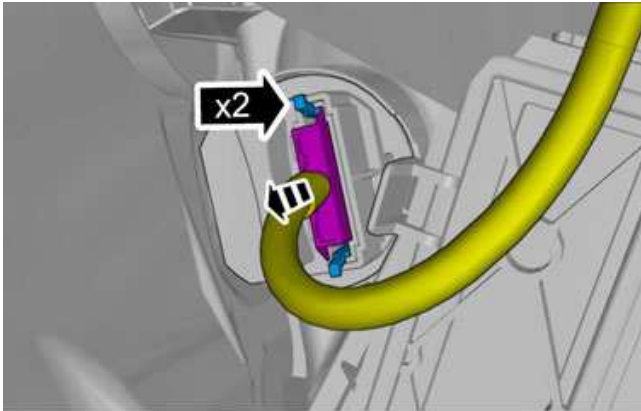

Note!

Note the position of the component before removal.

Installation

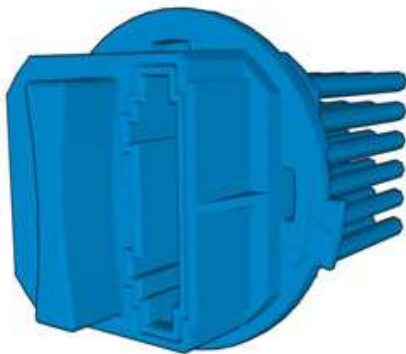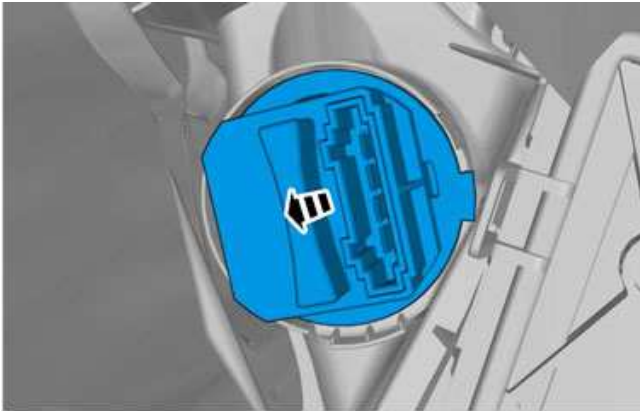

To install, reverse the removal procedure.