
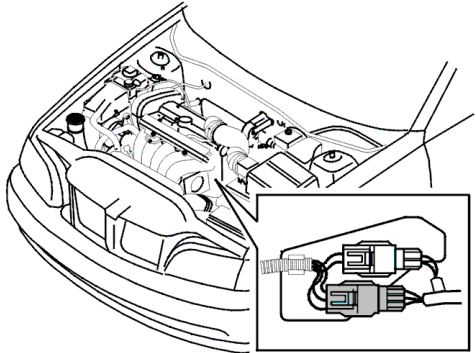


Replacing camshaft position sensor (CMP)

Removing position sensor

Remove

- the pipe between the air cleaner (ACL) and the throttle body (TB) put to one side
- the throttle body (TB), to one side

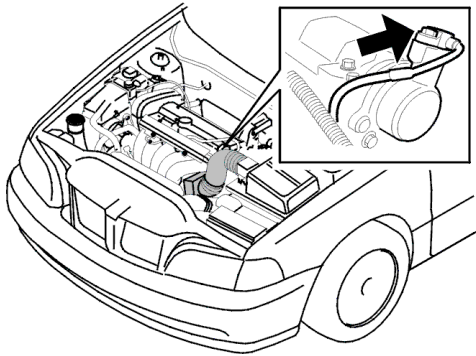

- the sensor.



Expose the wiring and disconnect the connector.

Installing position sensor

Connect the connector.

Install

- the sensor. Secure the wiring

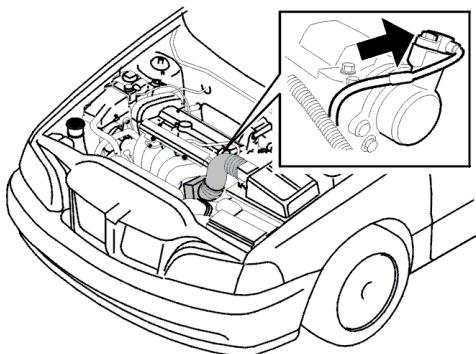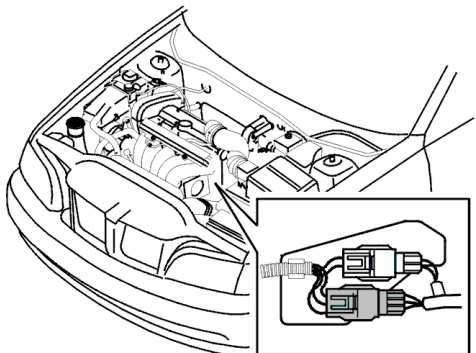

- the throttle body (TB) with **new gasket**.
Tighten to **17 Nm**
- the pipe between air cleaner (ACL) and throttle body.