

Connector sealed, repair


Special tools: [951 2632](#) , [951 2639](#) , [951 2852](#) , [951 2853](#) .

Note! As the illustrations in this service information are used for different model years and / or models, some variation may occur. However, the essential information in the illustrations is always correct.

Connector, dismantling

Secondary lock


Open the catches and pull out the secondary lock, use tool [951 2853](#) or an electrician's screwdriver, as illustrated.

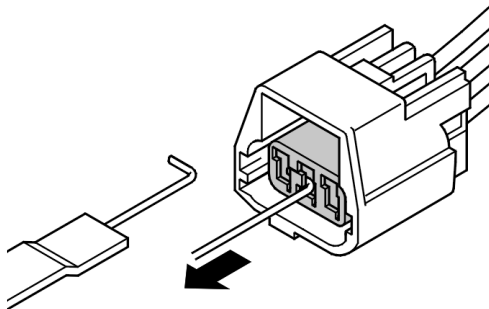

Primary lock

Use tools [951 2632](#) , [951 2639](#) to remove the primary lock, as illustrated.

At the same time pull the cable carefully backwards.

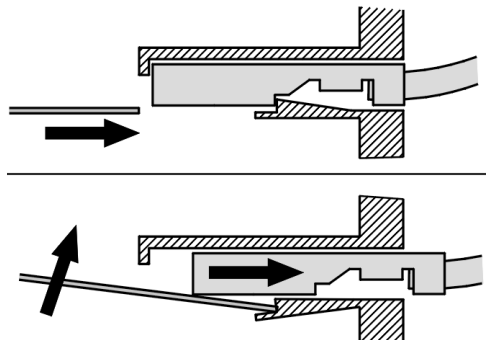

Alternatively use tool [951 2852](#) as illustrated.

Note! Tool [951 2852](#) can only be used for socket housings.

Connector, assembling

Primary locking

Check that the cable terminal is undamaged. Press the cable terminal into the housing. Check that the seal is correctly positioned and that the cable terminal is properly locked by pulling carefully on the cable.

