

[Previous Step](#)


Replacing components. Cruise control

[Next Step](#)[Index](#)[Search](#)[Print Topic](#)[Print Screen](#)[Help](#)[Suspend](#)[Main Menu](#)[Cancel](#)

Replacing selector switch

Removing

- Ignition off.
- Remove upper and lower steering column cover.
- Disconnect selector switch connector.
- Remove the two screws holding the selector switch.

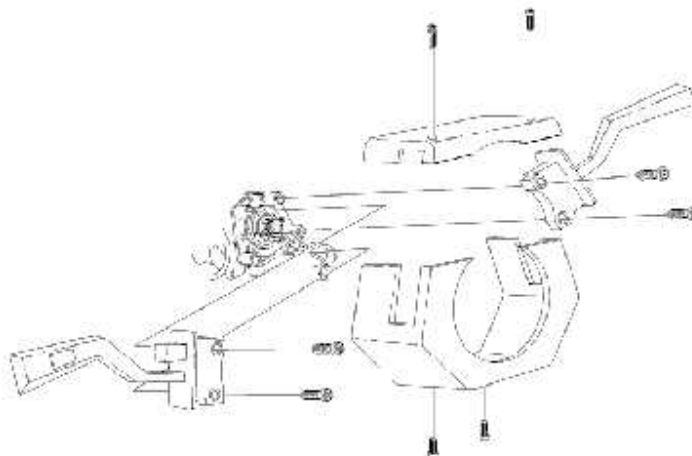

Installing

- Install new selector switch.
- Install in reverse order.
- Check function.

