

Crankcase ventilation

Check flame trap

Remove flame trap


Twist the flame trap casing approximately 15 mm to the left (bayonet connector).

Withdraw flame trap.

Remove oil filler cap.

Use an airline to blow through hoses down to crankcase ventilation.

Replace engine oil, capacity **5,25** liters

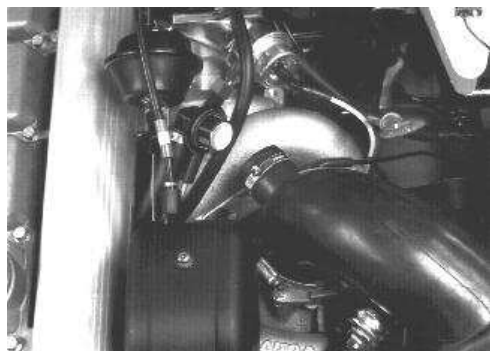

Install flame trap

Reinstall flame trap in intake pipe and twist flame trap casing back.

