


Bulb tail lamp/brake lamp/reverse lamp/fog lamp, replacing

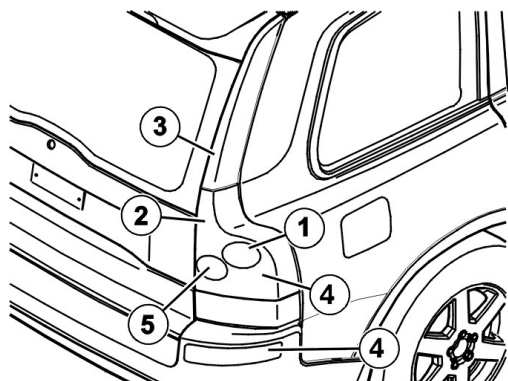

Location



1. Indicator lamps
2. Stop (brake) lamps
3. The upper tail lamp
4. Tail lamps
5. Reverse (reversing) lamps.

Note! There is only a fog tail lamp bulb (5/21W) in one of the tail lamps. In the left tail lamp on left-hand drive cars and in the right on right-hand drive cars.

Removal

Preparations

- Ignition off
- Fold up the floor hatch in the cargo compartment
- Unhook the floor cargo strap
- Push the floor storage compartment and hatch to one side
- Remove the corner section of the floor.

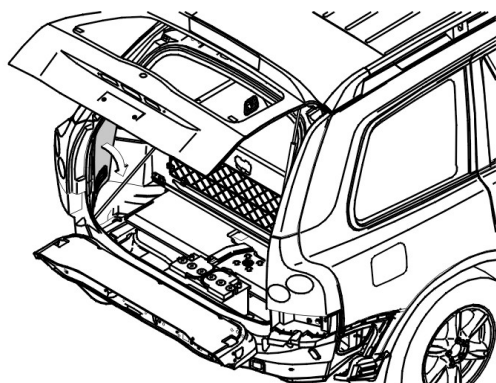
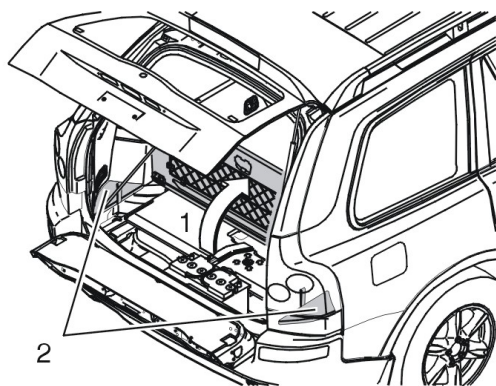


Remove the hatch on the rear side panel.

Removing the lower tail lamp


Remove:

- 2 nuts.

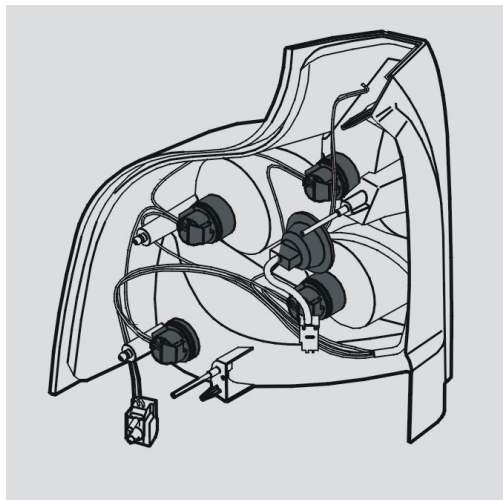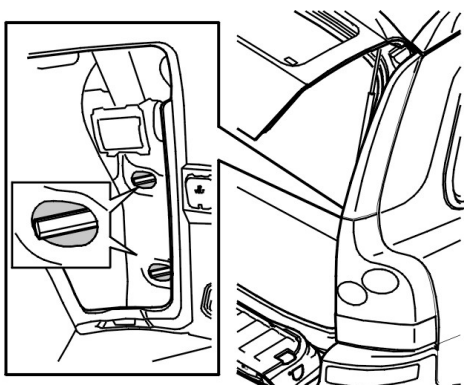

Remove:

- the tail lamp by pulling it straight back
- the bulb holder by twisting it and pulling it outwards
- the bulb.

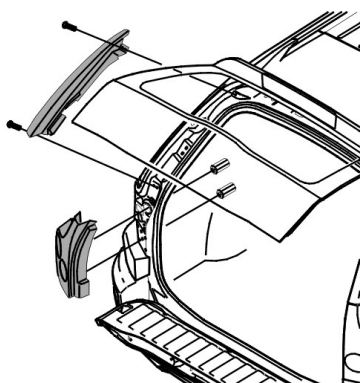

Removing the upper tail lamp

Remove the lower tail lamp. See [Removing the lower tail lamp](#) .

- Slacken off the 2 screws
- Remove the tail lamp.

Installation

Installing the upper tail lamp

Align the tail lamp.
Install the 2 screws.

Note! For tightening torques, see [Tightening torque](#) .

Installing the lower tail lamp

Install:

- the bulb

- the bulb holder. Press the tail lamp into place
- the 2 nuts. Tighten.

Finishing work

Test the function.

Install:

- the hatch in the rear side panel
- the corner section in the floor
- the floor hatch in the cargo compartment.

High level brake lamp, replacing

Removal and Installation


Removing the brake lamp

Note! As the illustrations in this service information are used for different model years and / or models, some variation may occur. However, the essential information in the illustrations is always correct.

Note! The brake lamp can only be replaced as a complete unit.

Remove:

- the blind cover plugs using a small screwdriver
- the screws. Disconnect the connector
- the washer hose
- the brake lamp
- the washer nozzle.

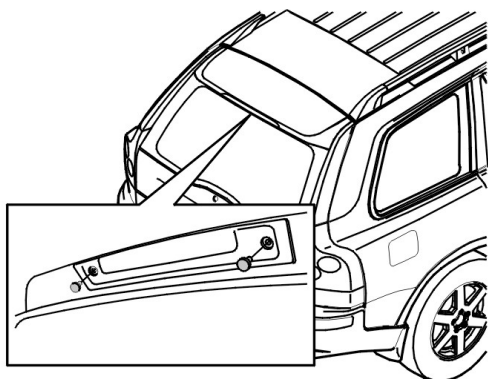

Installing the brake lamp

Install:

- the washer nozzle
- the washer hose.

Connect the connector.

Align the brake lamp.

Install:

- 2 screws
- blind cover plugs.

Test the function.

Tail lamp bumper, replacing



Removal and Installation

Preparatory work

Note! As the illustrations in this service information are used for different model years and / or models, some variation may occur. However, the essential information in the illustrations is always correct.

Ignition off.

Switch off the lighting switch.

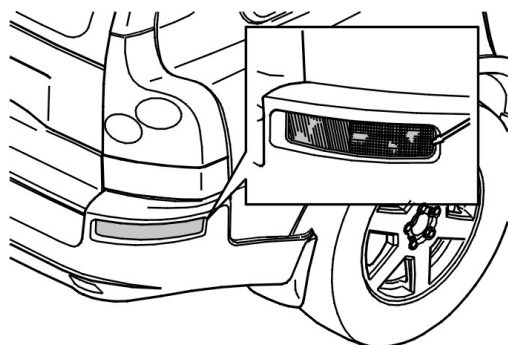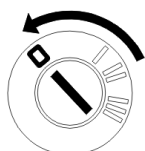

Removing the tail lamp

Detach the tail lamp at the front edge. Use a weatherstrip tool.

Remove:

- the bulb holder by pressing and twisting it
- the bulb.

Installing the tail lamp

Install:

- the bulb
- the bulb holder. Press the tail lamp into place.

Finishing work

Reset the lighting switch.

Test the function.