


Cargo compartment lighting replacement

Removing

Disconnect the battery lead according to [Note when disconnecting and connecting the battery lead](#) .

Remove:

- the lens by inserting a weatherstrip tool at the edge and twisting
- the bulb.

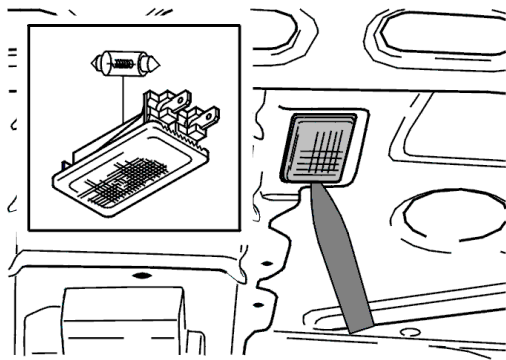

Installation

Reinstall:

- the lens and bulb in reverse order
- the battery lead according to [Note when disconnecting and connecting the battery lead](#) .

Caution! Always connect the battery lead according to [Note when disconnecting and connecting the battery lead](#) .

Replacing interior lighting

Specification

For the type of bulb, see [Bulbs](#) .

Glove compartment


Removing

Remove:


- the lens by inserting a weatherstrip tool or similar under the edge and twisting
- the bulb.

Installation

Reinstall in reverse order.

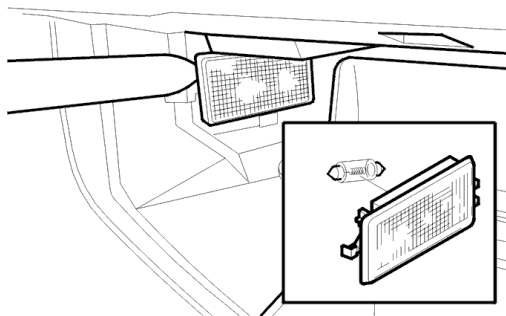

Driver's side courtesy lighting

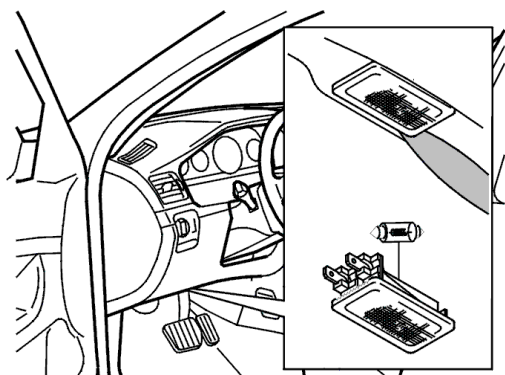


Removing

Remove:

- the lens by inserting a weatherstrip tool or similar under the edge and twisting
- the bulb.

Installation

Reinstall in reverse order.

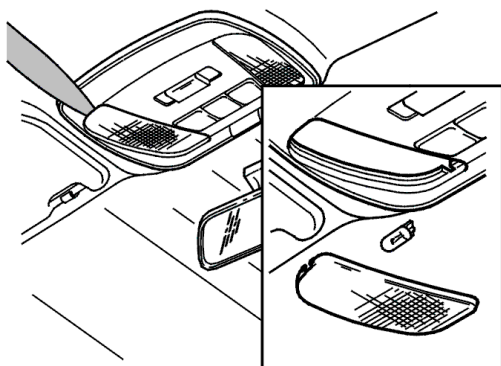

Front interior lighting


Removing

Remove:

- the lens by inserting a weatherstrip tool or similar under the edge and twisting
- the bulb.

Installation

Reinstall in reverse order.

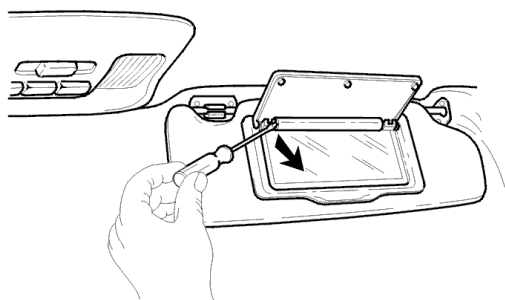

Vanity mirror

Removing

Remove:

- the lens carefully. Use a small screwdriver
- the bulb.

Replacing bulb holders

The complete sun visor must be replaced when replacing the bulb holder for the vanity mirror. Follow the instructions for replacing sun visors. See [Sun visor](#) .

Installation


Reinstall in reverse order.

Reading lamp

Removing


Remove:

- the lens by inserting a weatherstrip tool or similar under the edge and twisting
- the lens reflector by carefully inserting a weatherstrip tool at the catches and pulling off the reflector
- the bulb.

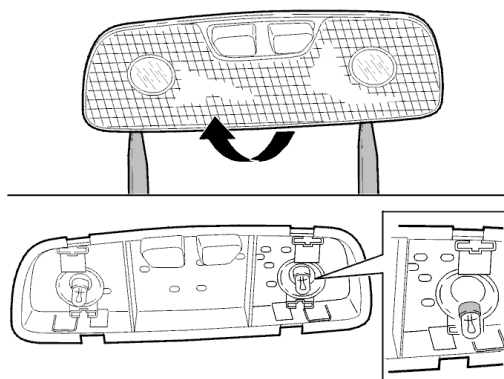

Installation

Reinstall in reverse order.

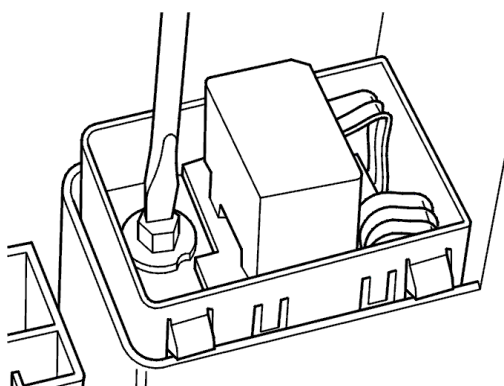

Trip computer switch


Removing

Remove the panel according to [Replacing switches](#)

Remove the bulb holder beside the connector by turning it half a turn using a screwdriver. Remove the bulb holder and the bulb.

Reinstall:

- the bulb and bulb holder
- the panel according to [Replacing switches](#) .

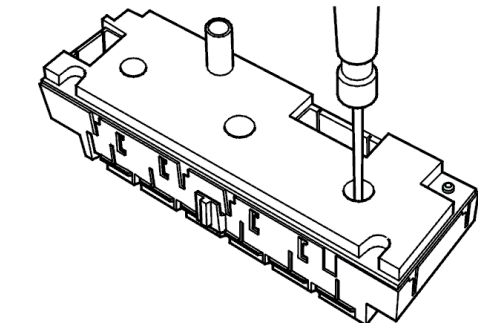

Comfort module


Removing

Remove the dashboard environment module according to [Comfort module](#) .

Remove the three bulb holders on the reverse by the connector by turning the holders a quarter of a turn using a screwdriver. Press out the bulb holder and the bulb.

Installation

Reinstall in reverse order.

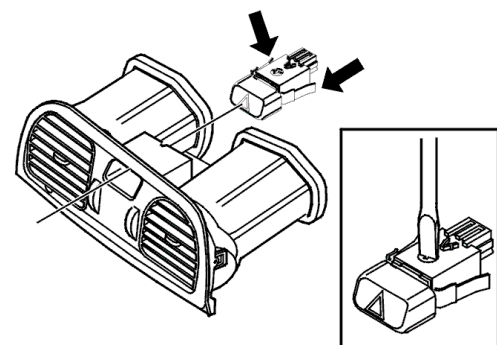

Hazard warning signal flasher

Removing

Remove:


- the central ventilation vents according to [The centre ventilation vents in the dashboard](#)
- the switch for the lamp by holding in the catches and pulling the switch backwards
- the bulb holder by turning it a quarter turn using a screwdriver
- the bulb.

Reinstall:

the bulb and bulb holder

- the bulb and bulb holder
- the central ventilation vents according to [The centre ventilation vents in the dashboard](#) .

The electrical socket - cigarette lighter assembly in the rear centre console

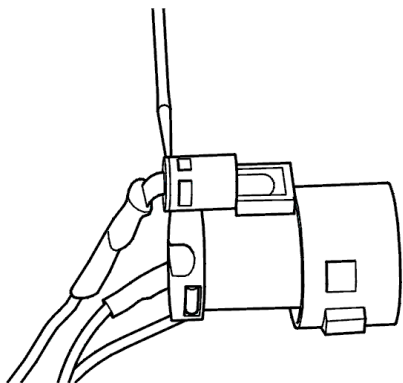

Removing

Remove the electrical socket - cigarette lighter assembly according to [Replacing the cigarette lighter - electrical socket](#)

Disconnect the cable terminal from the pin.
Remove the bulb holder by inserting a small screwdriver in the gap and carefully turning while pressing.
Remove the bulb.

Reinstall:

- the bulb and bulb holder
- the electrical socket - cigarette lighter assembly according to [Replacing the cigarette lighter - electrical socket](#) .

Light switch

Removing


Remove the light switch (two screws).

Hint: Pull forward lightly.
Pull down and forwards again.

Remove the bulb holder backwards using narrow round-nosed pliers.

Installation

Reinstall in reverse order.

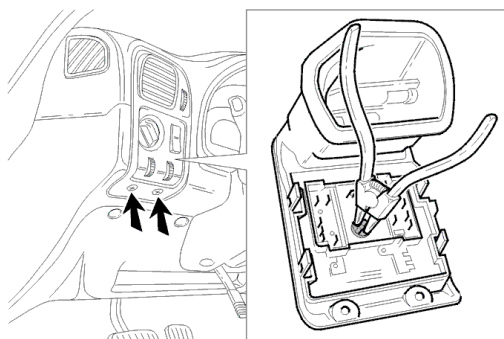


Gear shift selector, automatic gearboxes

Removing

Remove the panel on the centre console on the driver's side. See [Centre console panels](#)
Remove the bulb holder and remove the bulb.


Reinstall:

- the bulb and bulb holder
- the panel on the centre console on the relevant side. See [Centre console panels](#) .

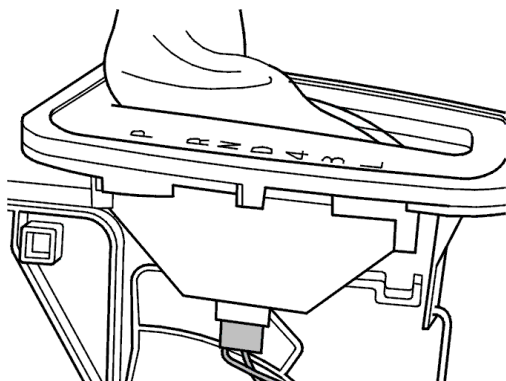

Mode selector switch for automatic gearboxes

Removing

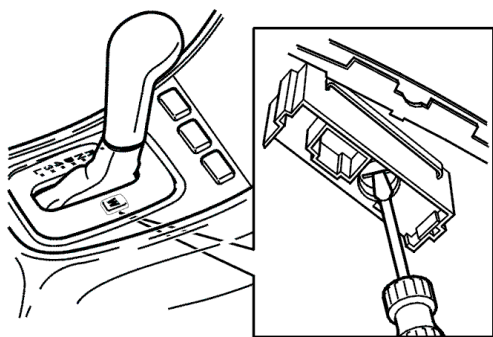

Remove:

- the centre console according to [Front centre console](#)
- the bulb holder by turning it a quarter turn using a screwdriver
- the bulb.

Reinstall:

- the bulb and bulb holder
- the centre console according to [Front centre console](#) .