


Removal

Switch off ignition. Disconnect the battery negative lead

Removing covers and panels

Grasp both the boot and the panel. Pull it straight out to the left so that the catches release.


Remove the cover in the center console locker.

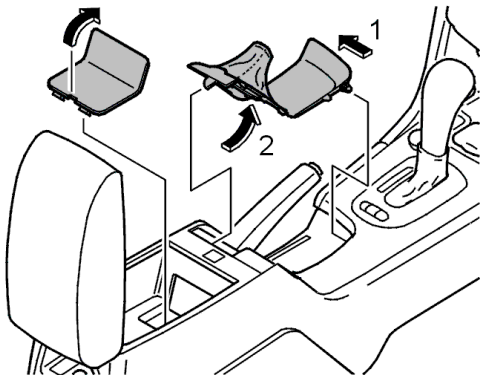

Removing screws and switches

Remove the screws.

Separate the two connectors on the bracket.

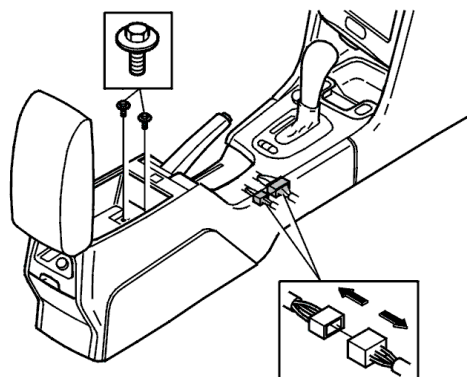

Removing the center console

Shift the gear selector to position D.

Apply the parking brake.

Pull up the rear edge of the center console. Pull it backward out of the dashboard.

Lift out the center console.

