


Fuses

Engine compartment 11A/1-7

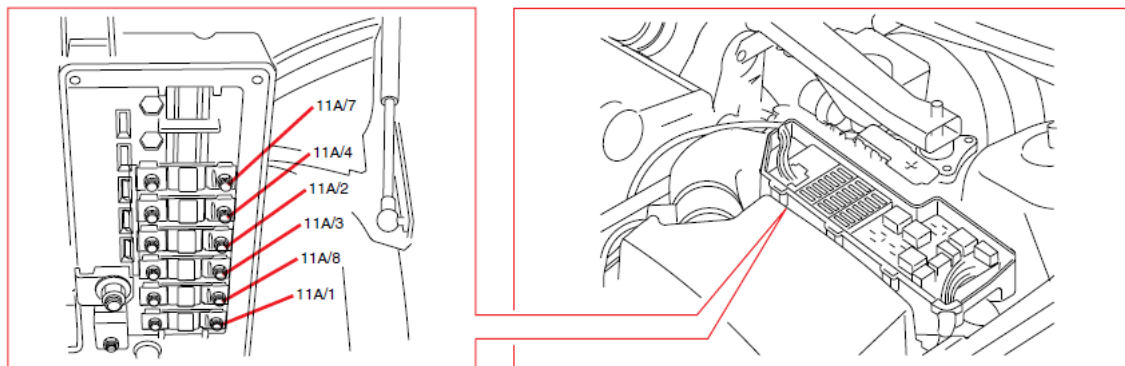

11A Fuses in the engine compartment

No.	Fuse function	A
1	Glow plug 20/22-26 via 2/14	60
2	Fuse protection for 11C/30-31 via 2/61 Fuse protection for 11C/32-33 Fuse protection for 11C/34-37	60
3	Fuse protection for 11C/3-6 Fuse protection for 11C/16-19 Fuse protection for 11C/7-9 via 2/31 Fuse protection for 11C/12-15 via 2/30	60
4	Fuse protection for 11C/21-24 Fuse protection for 11C/25-29	60
7	Cooling fan control module 4/71	60