


Temperature

Temperature damper motor

Adjustment

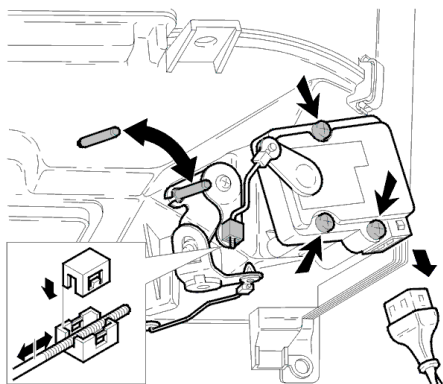

- Connect + 12V and ground to terminals 2 and 6. Let the motor turn so that the lever comes out of the motor.
- Transfer the control arm to the motor damper mechanism.
- Install the motor.
- Move the heater control to position 0.
- Position the control rod and lock it.

Hint: When it is replaced the control motor must first be put in the correct position.