


Temperature damper motor

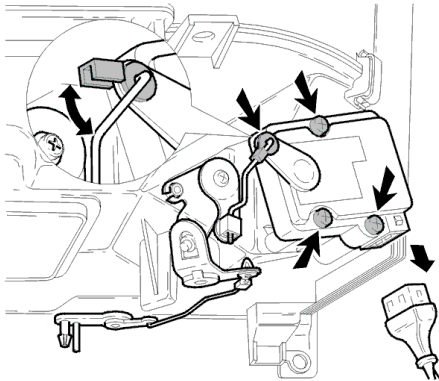

Removing the temperature damper motor

- Make a note of the anti-theft radio code
- Switch off the ignition
- Remove the soundproofing panel according to [Passenger side soundproofing](#)
- Remove the radio panel according to [The radio panel](#)
- Turn the retaining clip. Pull the rod out from the lever
- Remove the connector. Remove the three screws
- Remove the motor.

Installing the temperature damper motor

Note! The temperature damper motor must be adjusted after replacement. See [Temperature](#) .

Install:

- the motor
- the connector and the three screws
- the rod for the lever.

Adjust the rod on the damper motor if necessary,

Adjust the position of the temperature damper motor according to [Self-adjustment of damper motor end positions](#) .

Install

- the radio panel according to [The radio panel](#)
- the soundproofing panel according to [Passenger side soundproofing](#) .

Check the function.