


Replacing the front door side window

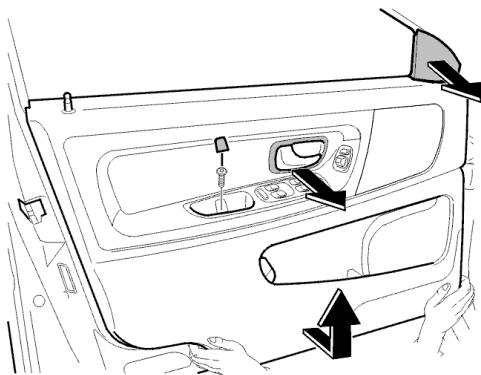

Removing the front door side window

Lower the window a quarter of the way (approximately 80 mm).

Remove:

- the panel for the door mirror
- the surround for the inner door opener
- the cover for the inner door opener
- the screw for the inner door opener.



Carefully loosen the seven clips in the bottom edge of the panel. Slide the door panel upwards.

Disconnect the five connectors.

Remove the inner door opener (1).

Remove:

- the sound proofing behind the inner door opener (2)
- the cover (3)
- the spring clip for the ball joint of the window mounting(1). Insert a screwdriver. Pry until the ball joints snap free.

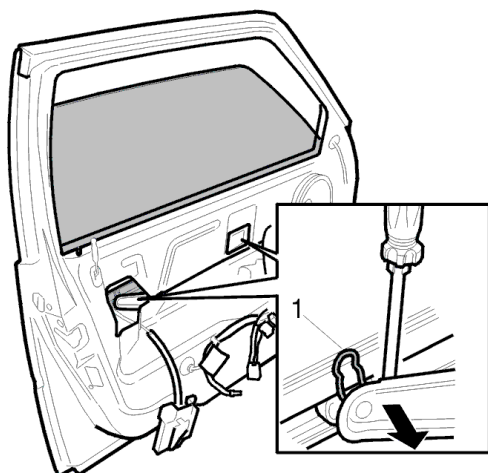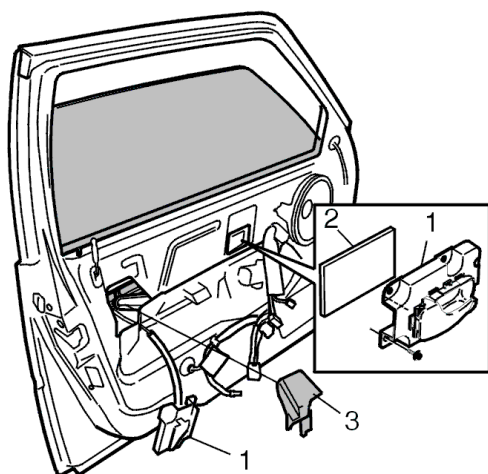

Angle the window down at the front edge. Carefully lift out the window.

Note! Apply masking tape to the door arch and window opening before removing the window.

Installing the front door side windows

Install:

- the window
- the spring clip for the ball joint of the window

- the spring clip for the ball joint of the window mounting (1)
- the cover
- the soundproofing
- the inner door opener
- the five connectors
- the 7 clips on the bottom edge of the panel
- the screw for the inner door opener
- the cover for the inner door opener
- the surround for the inner door opener
- the panel for the door mirror.

Replacing the rear door side window

Removing the rear door side window


Lower the window a quarter of the way (approximately 100 mm).

Remove:


- the surround for the inner door opener
- the cover for the inner door handle
- the screw for the inner door handle.

Disconnect the seven clips on the door panel. Slide the door panel carefully upwards. Disconnect the two connectors. Remove the door panel.



Remove the inner door opener (1). Remove the sound proofing behind the inner door opener (2).

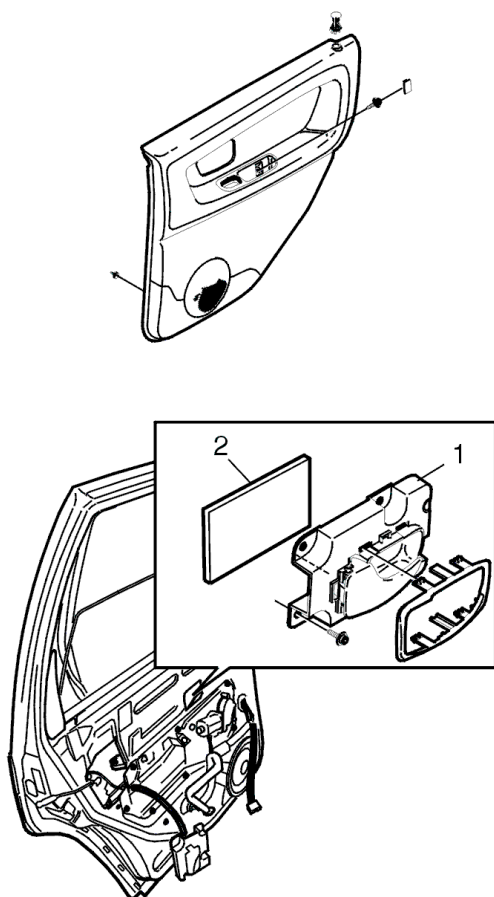

Remove the cover seal (1).

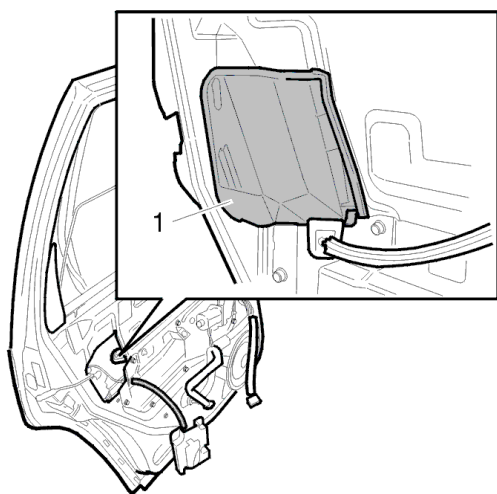

Remove the locking spring (1) on the ball joint for the window mounting. Insert a screwdriver. Pry until the ball joints snap free.

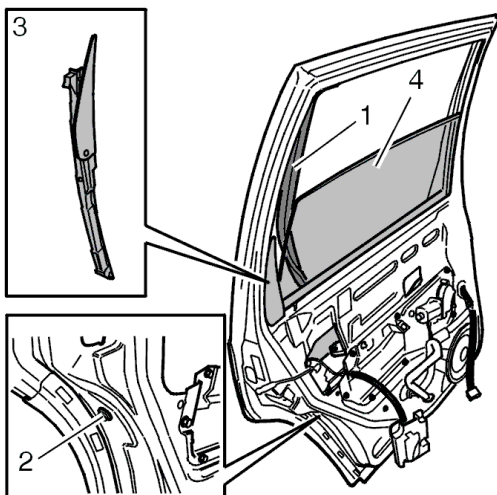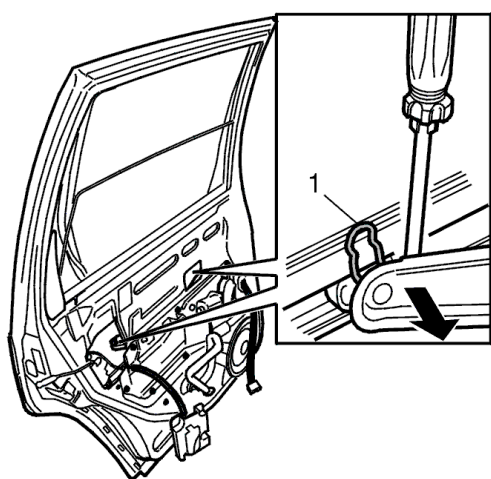

Lower the window (4) to the bottom. Slacken off the guide moulding (1) at the rear edge of the guide rail.

Remove:

- the clips on the guide rail (3)
- a screw on the guide rail (2).

Lift the window a little, angle the guide rail and remove it.

Carefully lift the window out through the opening.

Note! Apply masking tape to the door arch and window opening before removing the window.

Installing the rear side door window

Install:

- the window

Hint: Reinstall the window. Slide the window down fully. Then install the guide rail. Lift the

window and adjust so that the window is at the end position on the guide rail.

- a screw on the guide rail
- the clips on the guide rail
- the guide moulding at the rear edge of the guide rail
- the spring clip on the mounting ball joint
- the seal cover
- the soundproofing
- the inner door opener
- the door panel
- the two connectors
- the 7 clips on the door panel
- the screw for the inner door handle
- the cover for the inner door handle
- the surround for the inner door opener.