



Connector in engine compartment at left suspension tower

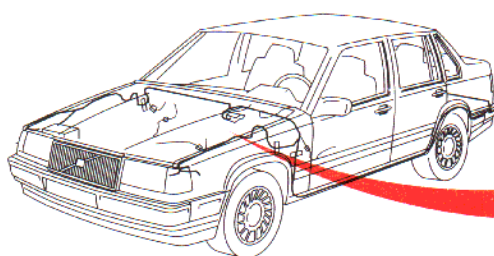

C131

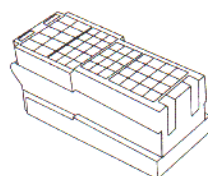

1	2	3	4	5
6	7	8	9	10
11	12	13	14	15
16	17	18	19	20
21	22	23	24	25
26	27	28	29	
30	31	32	33	
34	35	36	37	
38	39	40	41	
42	43	44	45	
46	47	48	49	
50	51	52	53	

B6304F

1	Heated oxygen sensor (HO2S) pos. 1	(P)
2	Engine coolant temperature (ECT) sensor, pos. 1	(Y-W)
3	Engine coolant temperature (ECT) sensor, pos. 2	(BN-GR)
4	Oil pressure sensor	(SB)
5	Generator D+	(R)
6		
7		
8	Engine coolant temperature (ECT) sensor pos. 2	(GR-W)
9	Engine coolant temperature (ECT) sensor pos. 1	(GN-GR)
10	Idle air control (IAC) valve pos. 1	(GR-R)
11	Start inhibitor switch AW30-40/43, pos. 3	(P)
12	Idle air control (IAC) valve pos. 3	(OR-SB)
13	Solenoid A/C compressor	(GN-Y) (GN)
14	Ground connector (signal ground)	(BN)
15	Mass air flow (MAF) sensor pos. 1 (ground connector)	(BN)
16	Throttle position (TP) sensor pos. 1	(GN-GR)
17	Throttle position (TP) sensor pos. 3	(VO)
18	Power stage Motronic (MFI) pos. 5	(BL-W)
19	Power stage I Motronic (MFI) pos. 7	(R-W)
20	Power stage II Motronic (MFI) pos. 2	(BL)
21	Power stage II Motronic (MFI) pos. 5	(R)
22	Power stage II Motronic (MFI) pos. 7	(SB)
23	Throttle position (TP) sensor pos. 2	(P-SB)
24	Injectors	(P-W)
25	Ground connector	(SB)
26	Relay ignition coil pos. 1	(BL)
27	Knock sensor (KS) 1 pos. 1	(GR)
28	Knock sensor (KS) 1 pos. 2	(GN-GR)
29	Knock sensor (KS) 2 pos. 1	(BN-OR)
30	Backup (reversing) light switch AW30-40/43	(GR-SB)
31	Relay injectors pos. 4	(GN-R)
32	EGR-temp. sensor pos. 2 (Only California)	(Y-SB)
33	Knock sensor (KS) 2 pos. 2	(GN-GR)
34	Injectors	(BN-GR)
35	Backup (reversing) light switch AW30-40/43	(BL-SB)
36	EGR-temp. sensor pos. 1 (Only California)	(GN-GR)
37	Power stage I Motronic (MFI) pos. 2	(W-SB)
38	Heated oxygen sensor (HO2S)	(GN)
39	Relay injectors pos. 1	(SB)
40	Engine speed (RPM) sensor AW30-40/43 pos. 2	(GN-SB)
41	Engine speed (RPM) sensor AW30-40/43 pos. 1	(W-SB)
42	Heated oxygen sensor (HO2S) (shield)	(SB)
43	Lock-up solenoid AW30-40/43	(Y)
44	Oil temp. sensor AW30-40/43	(R-W)
45	Oil temp. sensor AW30-40/43	(VO-W)
46	System pressure solenoid AW30-40/43	(P)
47	System pressure solenoid AW30-40/43	(BN-SB)
48	Gearchange solenoid 1 AW30-40/43	(GN)
49	Gearchange solenoid 2 AW30-40/43	(BL-P)
50	El. contr. gear selector AW30-40/43 pos. A	(BL-GR)
51	El. contr. gear selector AW30-40/43 pos. B	(BN-W)
52	El. contr. gear selector AW30-40/43 pos. C	(GN-BN)
53	El. contr. gear selector AW30-40/43 pos. PA	(GN-W)