


Replacing the steering column covers

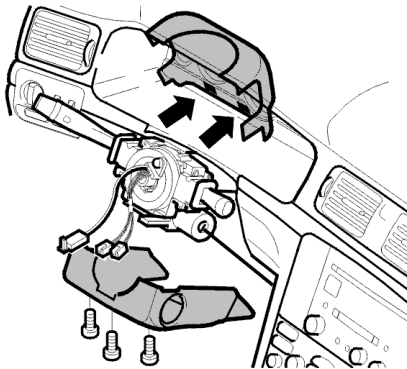

Removing steering column covers

Remove three screws.

Pull the steering wheel as far out as possible.

Remove the clip mounting between the covers.

Remove the lower steering column cover.

Remove the seal for the clip mounting at the dashboard.

Remove the upper steering column cover.

Installing steering column covers

Install:

- the lower cover for the steering column.
Secure the seals for the switches
- the three screws.

Press the seal in towards the dashboard in the upper steering column cover.

Press the upper cover into place in the upper cover.

Note! Check that the seals for the switches are positioned correctly throughout the operation.