

System operation

- If vehicle unlocked and doors or boot/tailgate not opened within 2 minutes, system is reactivated.

Programming

When

- If buttons operated repeatedly while vehicle out of range and system becomes inoperative.
- Remote control added or replaced.
- System malfunction.

How

- Obtain all remote controls.
- Access the underbonnet diagnostic unit.
- Insert selector cable into socket 1 **Fig. 1**.
- Lock and unlock vehicle using remote control.

NOTE: If none of the remote controls operate, diagnostic equipment will have to be used for programming.

- Switch ignition ON.
- Press test button 4 times **Fig. 1** [1].
- Check that LED illuminates.
- Program first remote control as follows:
- Press test button 3 times.
- Check that LED illuminates.
- Press test button 4 times.
- Check that LED illuminates.
- Press test button 4 times.
- Check that LED illuminates.
- Press unlock button on first remote control.
- Repeat programming procedure for remaining remote controls, increasing the final sequence of test button pressing by 1 for each remote control.
- A maximum of 4 remote controls can be programmed.

Fig. 1

