

Throttle position (TP) sensor - LH 3.1

Checking - [Fig. 6](#)

Technical Data		
Terminals	Condition	Voltage
1 & 3	Throttle closed	0,5 V
1 & 3	Throttle fully open	4,5 V max.

- Ensure ignition switched OFF.
- Do not disconnect multi-plug. Access TP sensor multi-plug terminals.
- Switch ignition ON.
- Check voltage between multi-plug terminals.
- Operate throttle valve while checking voltage between terminals 1 and 3.

Checking supply voltage - [Fig. 6](#)

Technical Data		
Terminals	Condition	Voltage
1 & 2	Ignition ON	5,0 V

- Ensure ignition switched OFF.
- Disconnect TP sensor multi-plug.
- Switch ignition ON.
- Check voltage between harness multi-plug terminals.

