

Motor tailgate wiper, replacing

Note! As the illustrations in this service information are used for different model years and / or models, some variation may occur. However, the essential information in the illustrations is always correct.

Preparatory work

Remove:

- tailgate wiper arm, see [Tailgate wiper arm / blade, replacing](#)
- tailgate panel, see [Panel, tailgate, replacing](#) .

Removal

Disconnect the connector

Remove:

- the screws
- the mechanism and motor.

Installation

Install:

- the mechanism and motor
- the screws.

Connect the connector.

Finishing work

Install:

- the tailgate panel according to [Panel, tailgate, replacing](#)
- tailgate wiper arm, see [Tailgate wiper arm / blade, replacing](#) .

Test the function.

Tailgate wiper arm / blade, replacing

Special tools: [998 7693](#)

Removal


Note! As the illustrations in this service information are used for different model years and / or models, some variation may occur. However, the essential information in the illustrations is always correct.

Removing tailgate wiper

- Fold up the wiper arm
- Turn the blade 90° towards the arm and pull off the blade.

Removing tailgate wiper arm and blade

- Remove the cover
- Slacken off the nut a few turns. Use puller [998 7693](#) to remove the wiper arm
- Remove the nut
- Remove the wiper arm.

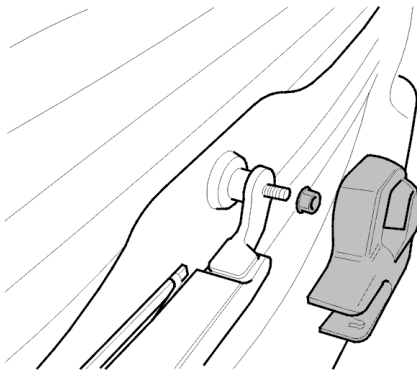

Installation

Note! For tightening torques, see [Tightening torque](#) .

Installing tailgate wiper arm and blade

- Reset the motor
- Position the arm with the nut. Adjust the arm so that the blade is in the middle of the black area on the windscreen. Tighten the nut
- Test operate and reset the wiper. The blade must come to rest in the middle of the black area on the windscreen. Alternatively, if the windscreen is dry, approximately 10 mm below the upper edge of the field
- Install the cover.


Panel tailgate upper, replacing

Removing the upper tailgate panel

Remove:

- the frame around the opening handle
- the lamp
- the 2 screws.

Pull off the panel.

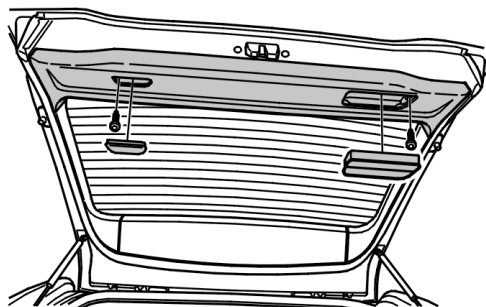

Installing the upper tailgate panel

Note! For tightening torques, see [Tightening torque](#).

Pull the cable harness through the panel.
Align and press the panel into place.


Install:

- the 2 M5 screws. Tighten
- the lamp
- the frame around the opening handle.

Removing the window frame panel from the upper tailgate

Remove:

- the centre panel
- the 2 side panels.

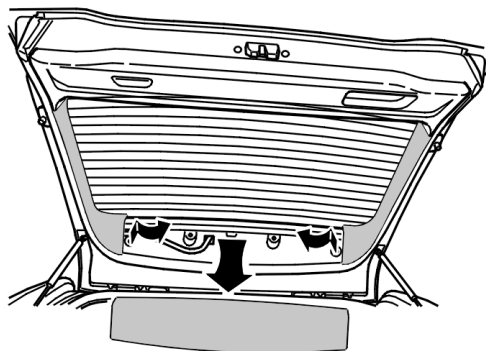

Installing the window frame panel in the upper tailgate

Install:

- the 2 side panels
- the centre panel.

