



VOLVO, XC70 (08-) & S80 (07-)

WIRING DIAGRAM 2013



TP 39256202 Structure week 12w20

Vehicles with SRS (Airbag)/SIPS bag/IC (Inflatable curtain)

Warning!

Extra caution must be exercised when working on vehicles equipped with SRS/SIPS bag/IC in order to avoid:

1. Personal injuries when performing repair work.
2. Damage or malfunction of the SRS/SIPS bag/IC system.

Work involving the SRS/SIPS bag/IC systems or other components in the vehicle that may affect the SRS/SIPS bag/IC systems must always be performed by an authorized Volvo workshop.

In case of doubt, consult the SRS and SIPS bag/IC service manual.

Is the vehicle equipped with SRS/SIPS bag/IC?

Vehicles with SRS are most easily recognized by the letters SRS in the center of the steering wheel. If the vehicle also has a passenger side airbag, the letters SRS are stamped on the dashboard above the glove compartment. SRS vehicles from 1993 and onward also have explosive seat belt tensioners. SIPS bags are only installed on SRS vehicles from 1995 and onward. SIPS bag decals are located on the windshield and seat compartment. Vehicles with IC can be recognized by the letters IC on the C/D panel (4 door) or the B panel (5 door).

General recommendations

- Be especially careful when working on or around SRS, SIPS, and IC components.
- Make sure that no wires are pinched, frayed, or pierced.
- Never fit accessories by the sensors.
- Where applicable, work on the steering wheel, steering shaft, or steering gear must be done in accordance with the methods in the SRS section of VIDA.
- Certain components of the aforementioned systems must be grounded while working. Read the appropriate sections in VIDA.
- Install no accessories in the areas between the A and B-posts, the B and C-posts, and the C and D-posts.

Test terminal

Fuse in cargo compartment auxiliary fuse box.

Changes introduced up to and including structure week 12w20

Any changes made to the vehicle after this date are not included in the manual. If necessary, refer to service bulletins.

Volvo models are sold in versions adapted for different markets. These adaptations depend on factors such as legal requirements, taxation, and market demands.

This manual may therefore include illustrations and text that do not apply to the vehicles in your country.

Ordering:

Electronic Wiring Diagrams (EWD) can be ordered from the Technical Information Shop (TIS) at www.volvocarstechinfo.ford.com

We retain the right to make modifications

Table of Contents 1:3

Vehicles with SRS (Airbag)/SIPS bag/IC (Inflatable curtain)	2
Explanations	6
How to use the wiring diagrams 1:2.....	7

Electrical distribution

Overview without Start/stop function	9
Overview with Start/stop function	10
Overview, Distribution box in engine compartment	11
Overview, Distribution box in passenger compartment	12
Overview, Distribution box in cargo compartment	13

Fuses

Distribution box in engine compartment F1-F7	14
Distribution box in engine compartment F8-F21	15
Distribution box in engine compartment F22-F31	16
Distribution box in engine compartment F32-F37	17
Distribution box in engine compartment F38	18
Distribution box in engine compartment F38-F39	19
Distribution box in engine compartment F39-F44	20
Central electronic module (CEM) F1-F3	21
Central electronic module (CEM) F4-F14	22
Central electronic module (CEM) F15-F24	23
Passenger compartment.....	24
Distribution box in passenger compartment F1-F17	25
Distribution box in passenger compartment F18-F24	26
Distribution box in passenger compartment F25-F30	27
Distribution box in cargo compartment FA1-FA11	28
Distribution box in engine compartment, cold zone F1-MF2 29	
Battery PF1-PF2	30

Relays

Relays in the engine compartment	31
Relays in passenger compartment	32
Relays in cargo compartment	33
Central Electronic Module (CEM)	34

Ground connections

Overview	35
31/1 - 31/6	36
31/7 - 31/10	37
31/15 - 31/47	38
31/48 - 31/68	39
31/83 - 31/88	40
31/89 - 31/107	41
31/131 - 31/TRM	42
31/INFOT - 31/AL	43

Control modules

Overview locations	44
Overview designations	45
Central Electronic Module (CEM) 1:3	46
Data communication high speed CAN	49
Data communication high speed CAN, 4-Cyl.	50
Data communication intermediate speed CAN, LHD ..	51
Data communication intermediate speed CAN, RHD ..	52
Data communication MOST	53
Data communication, LIN 1:2	54
Steering Wheel Module (SWM)	56

Group 26 Cooling system

Cooling fan 4-Cyl. Turbo	57
Cooling fan, 5-Cyl. Turbo & 6-Cyl.	58
Cooling fan, 4-Cyl. Diesel	59
Cooling fan, 5-Cyl. Diesel	60

Group 27 Engine controls

Cruise control 4-Cyl. Turbo	61
Cruise control 4-Cyl. Diesel	62
Cruise control 5-Cyl. & 6-Cyl.	63
Cruise control 5-Cyl. Diesel	64
Start-/Stop function 4-Cyl. 1.6l Turbo	65
Start-/Stop function 4-Cyl. 1.6l Diesel DV6C	66
Start-/Stop function 5-Cyl. Diesel VED5	67

Group 28 Ignition and control system

Engine management system, 4-Cyl. Turbo 1.6l 1:2	68
Engine management system, 4-Cyl. Turbo 2.0l 1:2	70
Engine management system, 5-Cyl. Turbo 1:2	72
Engine management system, 4-Cyl. Diesel DV6C 1:3 ..	74
Engine management system, 5-Cyl. Diesel 1:3	77
Engine management system 6-Cyl. PZEV 1:2	80
Engine management system, 6-Cyl. 1:2	82
Engine management system, 6-Cyl. Turbo 1:2	84
Emission control 4-Cyl. 1.6l Turbo	86
Emission control 4-Cyl. 2.0l Turbo	87
Emission control 5-Cyl. Turbo	88
Emission control 6-Cyl.	89

Group 32 Alternator and voltage regulator

Power supply 4-Cyl. Turbo	90
Power supply 4-Cyl. & 5-Cyl. with start/stop	91
Power supply 5-Cyl. & 6-Cyl.	92

Table of Contents 2:3

Group 33 Starting system

Starting system 4-Cyl. Turbo	93
Starting system 5- & 6-Cyl.	94
Starting system 4-Cyl. Diesel.....	95
Starting system 5-Cyl. Diesel.....	96

Group 35 Lighting

High and low beam	97
High and low beam (Dual Xenon).....	98
Beam length adjustment, manual	99
Running/Parking light, Tail lights V70	100
Running/Parking light, Tail lights S80	101
Fog/Daytime running lights V70.....	102
Fog/Daytime running lights S80.....	103
Brake lights V70.....	104
Brake lights S80.....	105
Reversing lights V70.....	106
Reversing lights S80.....	107
Follow-me-home lighting LHD	108
Follow-me-home lighting RHD	109
Interior lighting, LHD 1:2	110
Interior lighting, RHD 1:2	112
Active headlight	114
Lighting in door sill trims	115
Auxiliary lights.....	116
Lighting mug holder and floor	117

Group 36 Additional electrical equipment

Rain sensor.....	118
Direction indicator and hazard warning flashers LHD V70	119
Direction indicator and hazard warning flashers LHD S80	120
Direction indicator and hazard warning flashers RHD V70	121
Direction indicator and hazard warning flashers RHD S80	122
Wiper/washer windshield	123
High pressure headlight washer	124
Wiper/Washer rear window.....	125
Keyless vehicle 1:2	126
Horn	128
Anti-theft alarm	129
Parking assistance.....	130
Collision warning with power brake booster	131
Tire pressure monitoring system (TPMS).....	132
Alcohol lock.....	133

Group 37 Wiring and fuses

Diagnostics system.....	134
Outlet 12 V.....	135
Outlet 12 V, S80	136
Cable harness towbar/tow hitch 4-pin V70	137
Cable harness towbar/tow hitch 4-pin S80	138
Cable harness towbar/tow hitch 7-pin V70	139
Cable harness towbar/tow hitch 7-pin S80	140
Cable harness towbar/tow hitch 13-pin V70	141
Cable harness towbar/tow hitch 13-pin S80	142
Accessory USB unit (AUU).....	143

Group 38 Instruments

Seat belt reminder	144
Driver information module.....	145
Analog clock	146

Group 39 Other, Accessories

TV	147
Cellular phone 1:2.....	148
Audio 1:2.....	150
Audio Premium 1:3	152
DAB Radio	155
Bluetooth Handsfree	156
Rear seat entertainment	157
Satellite radio	158
Parking camera.....	159
Parking camera wide-angle, front	160
Navigation system, portable.....	161

Group 43 Transmission

Transmission M66.....	162
Automatic transmission MPS6.....	163
Automatic transmission AWF21	164
Differential Electronic Module (DEM).....	165

Group 55 Parking brake

Electric parking brake	166
------------------------------	-----

Group 59 Brake system

Brake control system & DSTC	167
-----------------------------------	-----

Group 64 Steering

Speed dependent power steering	168
--------------------------------------	-----

Table of Contents 3:3

Group 76 Shock absorbers

Four-C	169
--------------	-----

Group 83 Doors and openings

Central locking front doors LHD	170
Central locking front doors RHD	171
Central locking rear doors	172
Central locking trunk lid/tailgate V70	173
Central locking trunk lid/tailgate S80	174
Central locking fuel filler flap	175
Signal receiver central locking	176
Power windows front doors LHD	177
Power windows front doors RHD	178
Power windows rear doors	179
Power sunroof	180

Group 84 Exterior decorative elements, etc.

Power door mirrors LHD	181
Power door mirrors RHD	182
Heated door mirrors LHD	183
Heated door mirrors RHD	184
Blind spot information system LHD	185
Blind spot information system RHD	186
Heated rear window	187

Group 85 Interior equipment

Power driver's seat with memory function, LHD	188
Power driver's seat with memory function, RHD	189
Power passenger seat, LHD	190
Power passenger seat, RHD	191
Heated front seats with fans	192
Heated front seats without fans	193
Heated rear seat	194
Massage seats	195

Group 87 Climate control system

Climate control system, 4-Cyl. Turbo 1:2	196
Climate control system 4-Cyl. Diesel 1:2	198
Climate control system 5- & 6-Cyl. 1:2	200
Climate control system PTC-elements	202
Parking heater, auxiliary heater	203
Parking heater, remote start	204
Refrigeration box rear seat	205

Group 88 Internal equipment

Supplemental restraint system 1:2	206
Power folding headrest	208
Remote control garage opening	209
Rear-view mirror with automatic dimming	210

Connectors 211

Branching points 252

Cable harness routing in vehicle

Harness engine 4-Cyl. Turbo	272
Engine harness, 5-Cyl. Turbo	272
Engine harness, 6-Cyl.	273
Harness engine, 6-Cyl. Turbo	273
Harness engine, 2.0l Diesel	274
Harness engine, 2.4l Diesel	274
Engine compartment harness LHD	275
Engine compartment harness RHD	276
Harness dashboard, LHD	277
Harness Dashboard, RHD	278

Harness Floor, LHD S80	279
Harness Floor, RHD S80	280
Harness Floor, LHD V70	281
Harness Floor, RHD V70	282
Harness infotainment, LHD S80	283
Harness infotainment, RHD S80	284
Harness infotainment, LHD V70	285
Harness infotainment, RHD V70	286
Roof harness, S80	287
Roof harness, V70	287
Center console harness	288
Tunnel harness	288
Harness front door, left	289
Harness front door, right	289
Harness rear door, left	290
Harness rear door, right	290
Trunk lid/tailgate harness, S80	291
Trunk lid/tailgate harness, V70	291
Harnesses rear axle	292
Executive harnesses	293

Component illustrations 294

Index 1:2 356

List of components 1:7 358

Explanations Abbreviations

Groups

Group 26	= Cooling system
Group 27	= Engine controls
Group 28	= Ignition and control system
Group 32	= Alternator and voltage regulator
Group 33	= Starting system
Group 35	= Lighting
Group 36	= Additional electrical equipment
Group 37	= Wiring and fuses
Group 38	= Instruments
Group 39	= Other
Group 43	= Transmission
Group 55	= Parking brake
Group 59	= Brake system
Group 64	= Steering
Group 76	= Shock absorbers
Group 83	= Doors and openings
Group 84	= Exterior decorative elements, etc.
Group 85	= Interior equipment
Group 87	= Climate control system
Group 88	= Internal equipment
Group 89	= Body other

Ignition switch symbols

X	= Accessories (audio position)
S	= Powered upon insertion of key
15	= Contact remains connected during start
15I	= Contact is broken while starting
30	= Constant power from the battery
50	= Start

Countries/Markets

A	= Austria
AUS	= Australia
B	= Belgium
CDN	= Canada
CH	= Switzerland
D	= Germany
DK	= Denmark
E	= Spain
EU/OS	= Markets outside USA and Canada
FIN	= Finland
GB	= Great Britain
ISR	= Israel
J	= Japan
KOR	= Korea
N	= Norway
NL	= Netherlands
S	= Sweden
USA	= United States of America
WEU	= Western Europe

Other

ACC	= Adaptive Cruise Control
Ag	= Silver plated
Au	= Gold plated
AUTO	= Automatic transmission
BLIS	= Blind spot information system
CAN	= CAN communication
DPY	= Display
Du-X	= Dual Xenon
ECC	= Electronic climate control system
ETA	= Throttle unit
EXC	= Exclusive
GDL	= Gas discharge lamp
HISPEED	= High speed data bus
HS	= High speed data bus
IR	= Infrared sensor
KEYLESS	= Keyless vehicle
LIN	= LIN communication
LH	= Left-hand side
LHD	= Left-hand drive
MAN	= Manual transmission
MEMORY	= Memory driver's seat
MIDSPEED	= Midspeed data bus
MIRCAM	= Parking camera in rear-view mirror
MMS	= Mass Movement Sensor
MS	= Midspeed data bus
PANROOF	= Panoramic roof
PETROL	= Gasoline
RH	= Right-hand side
RHD	= Right-hand drive
RTI	= Road Traffic Information
SCR	= Screened
SRS	= Airbag
T	= Turbocharged engine
W/O	= Without
2WD	= Two-wheel drive
4CYL, I4	= 4-cylinder engine
5CYL, I5	= 5-cylinder engine
6CYL, I6	= 6-cylinder engine

Colors

BK, SB	= Black
BN	= Brown
BU, BL	= Blue
GN	= Green
GY, GR	= Gray
LGN	= Light Green
NL	= Natural
OG, OR	= Orange
PK, P	= Pink
RD, R	= Red
VT, VO	= Violet
WH, W	= White
YE, Y	= Yellow

How to use the wiring diagrams 1:2

The descriptions below apply in general to all wiring diagram manuals, although not all sections are necessarily contained in this manual.

A. Component designation

Every component has a component designation that consists of two parts.

The first part is a type number that describes the type of component in question, for example 3/xx.

The second part of the designation is a serial number, e.g. x/2.

Together, this constitutes a component designation, e.g. 3/2.

At the end of the manual is a list of components, where, with the help of the component designation, you can read off the name of the component, for example, 3/2 = light switch.

List of type numbers

The list shows which type of component that respective type numbers refer to, for example, 3/x = switch, 6/x = electric motor, etc.

1	Battery
2	Relay
3	Switch
4	Control module
5	Driver information module
6	Electric motor
7	Sensor
8	Actuator
9	Heating element
10	Light
11	Fuse
15	Electrical distribution rail/box
16	Audio
17	Service/diagnostics
18	Contact reel
19	Meter
20	Ignition component/shunt
27	Optics
31	Ground connection
73	Branching point
74	Connector

The systems are shown in non active status, i.e. with "key removed" and when doors, hatches and hood are closed.

B. Branching points

The wiring diagrams contain numbered branching points, for example 73/5035.

This manual contains a section with a list of branching points. This list shows all the components that are connected to each branching point.

The location of the branching points is shown in the "Cable harness routing in vehicle" section.

C. Connectors

Connectors provide a bridge between two cable harnesses and are described in the "Connectors" section.

D. Electrical distribution

Operation of the fuses and relays is shown in the "Electrical distribution" section.

E. Data communication

Today's cars contain CAN, LIN and MOST networks that transfer information. Connections to these networks are not shown in their entirety in the respective wiring diagram. Complete information on CAN, LIN and MOST communication is found in the section "Control modules".



F. Abbreviations

A number of different abbreviations are used in the manual. These are explained in the section "Abbreviations".

G. Component location

There is a section at the end of the manual in which the appearance and location of components is described in numerical order.


How to use the wiring diagrams 2:2

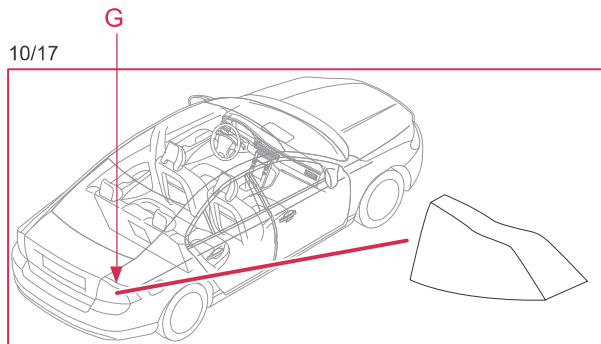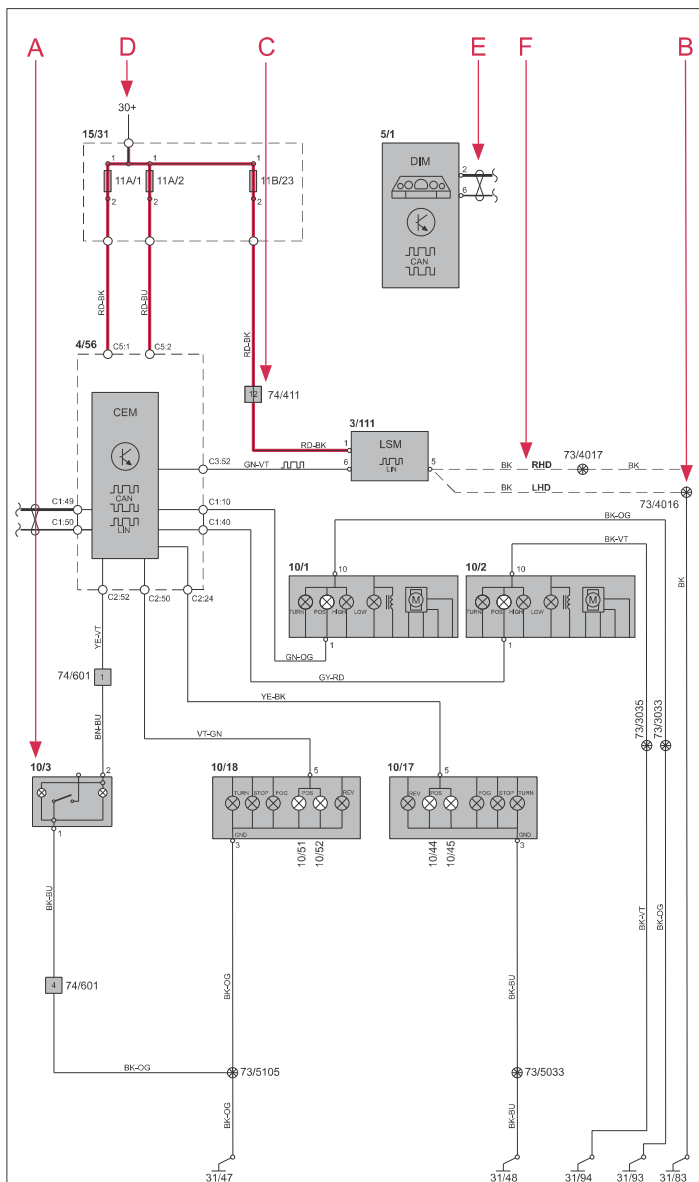


List of symbols

- = System voltage
- = Ground connection via wiring
- = Ground connection in component/chassis
- = Screened wire
- = Junction point
- = Twisted cable
- = Electrical connection
- = Variant
- = CAN communication
- = CAN high data signal (CAN H)
- = CAN low data signal (CAN L)
- = LIN communication
- = LIN communication
- = DIN cable, coaxial cable, etc.
- = Data communication
- = CAN communication
- = MOST communication
- = MOST communication
- = Connection with distribution box
- = Further connection to...
- = Connector between cable harnesses
- = Connector connected in component

Electrical distribution Overview without Start/stop function

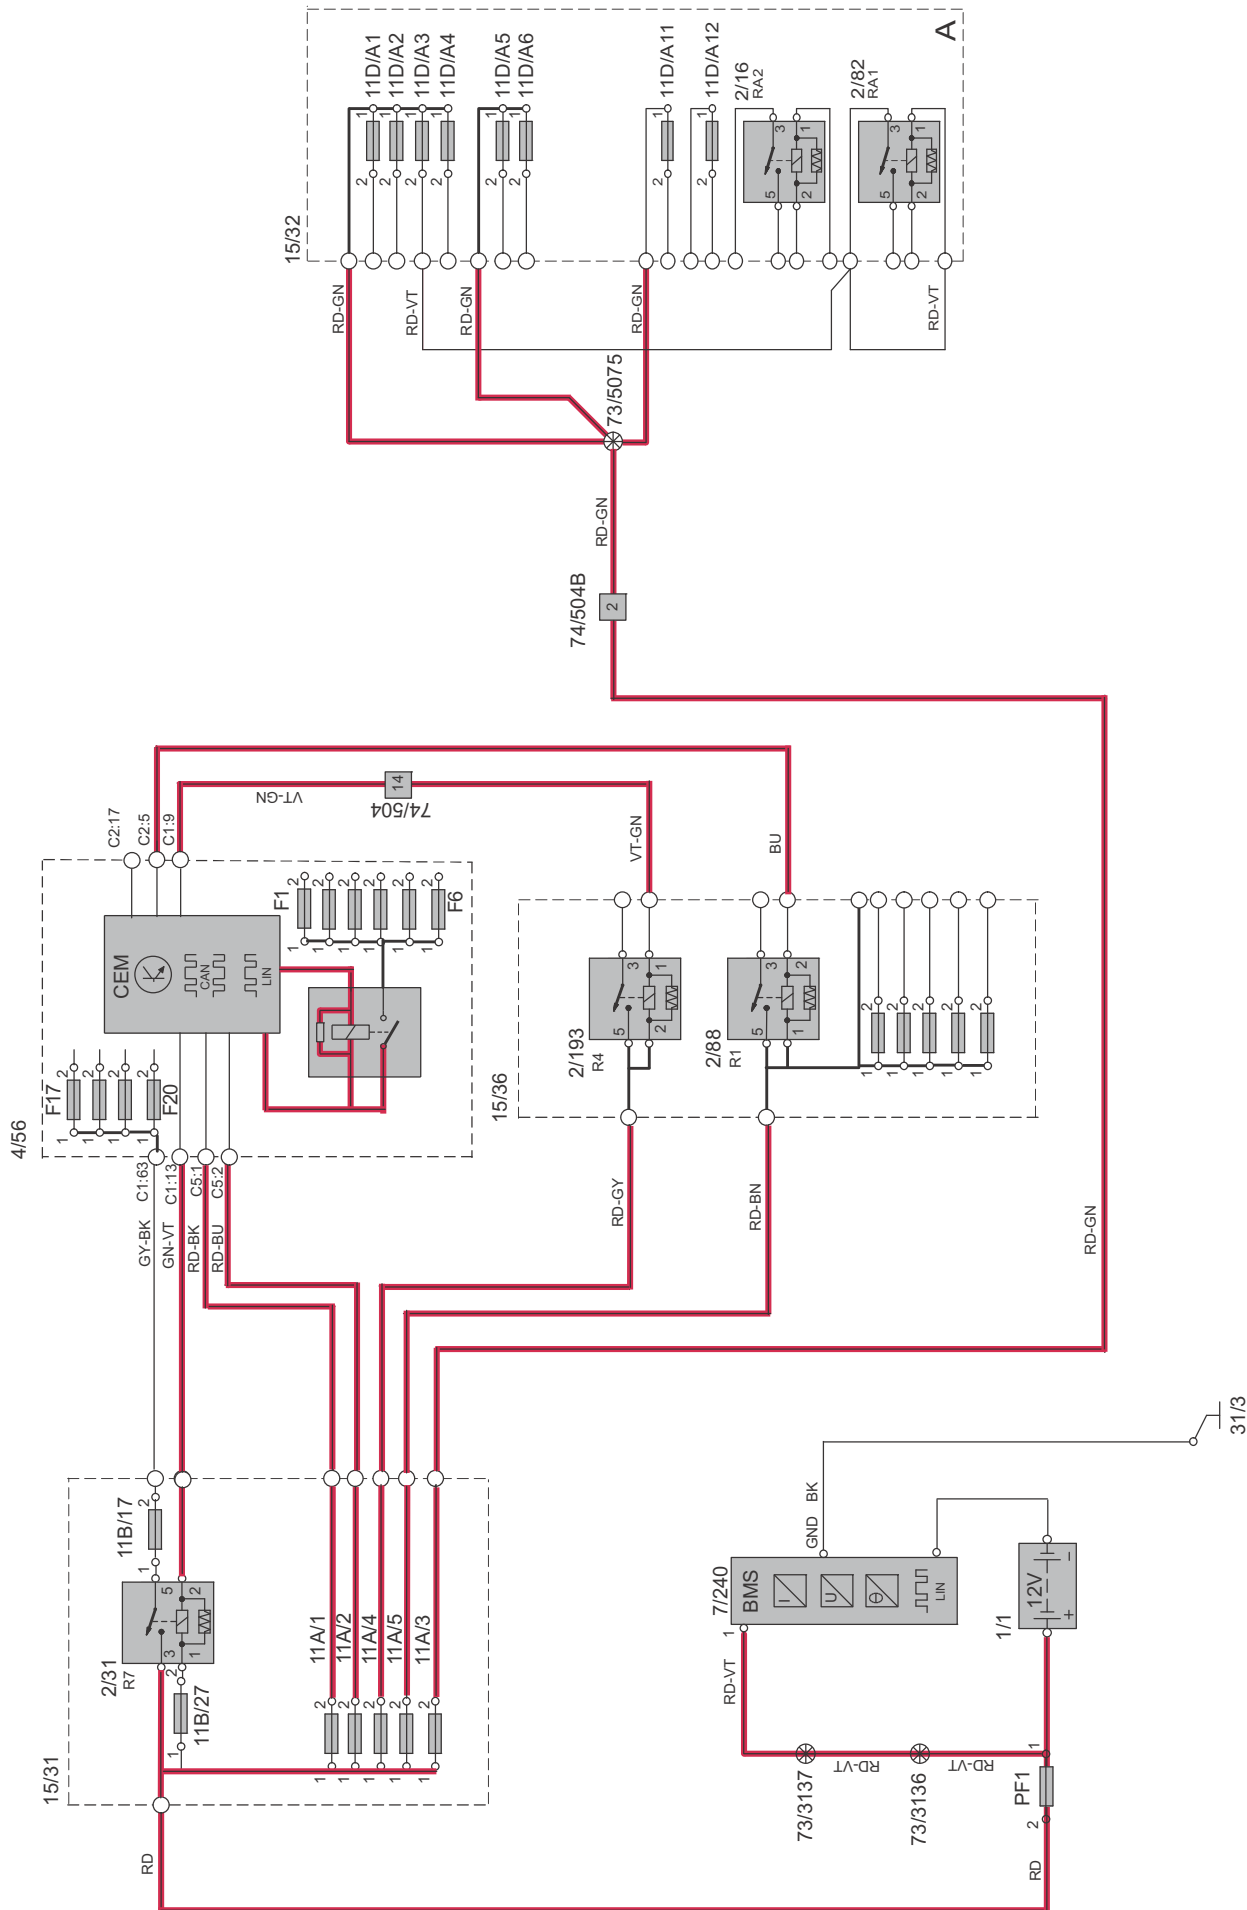


Electrical distribution Overview with Start/stop function

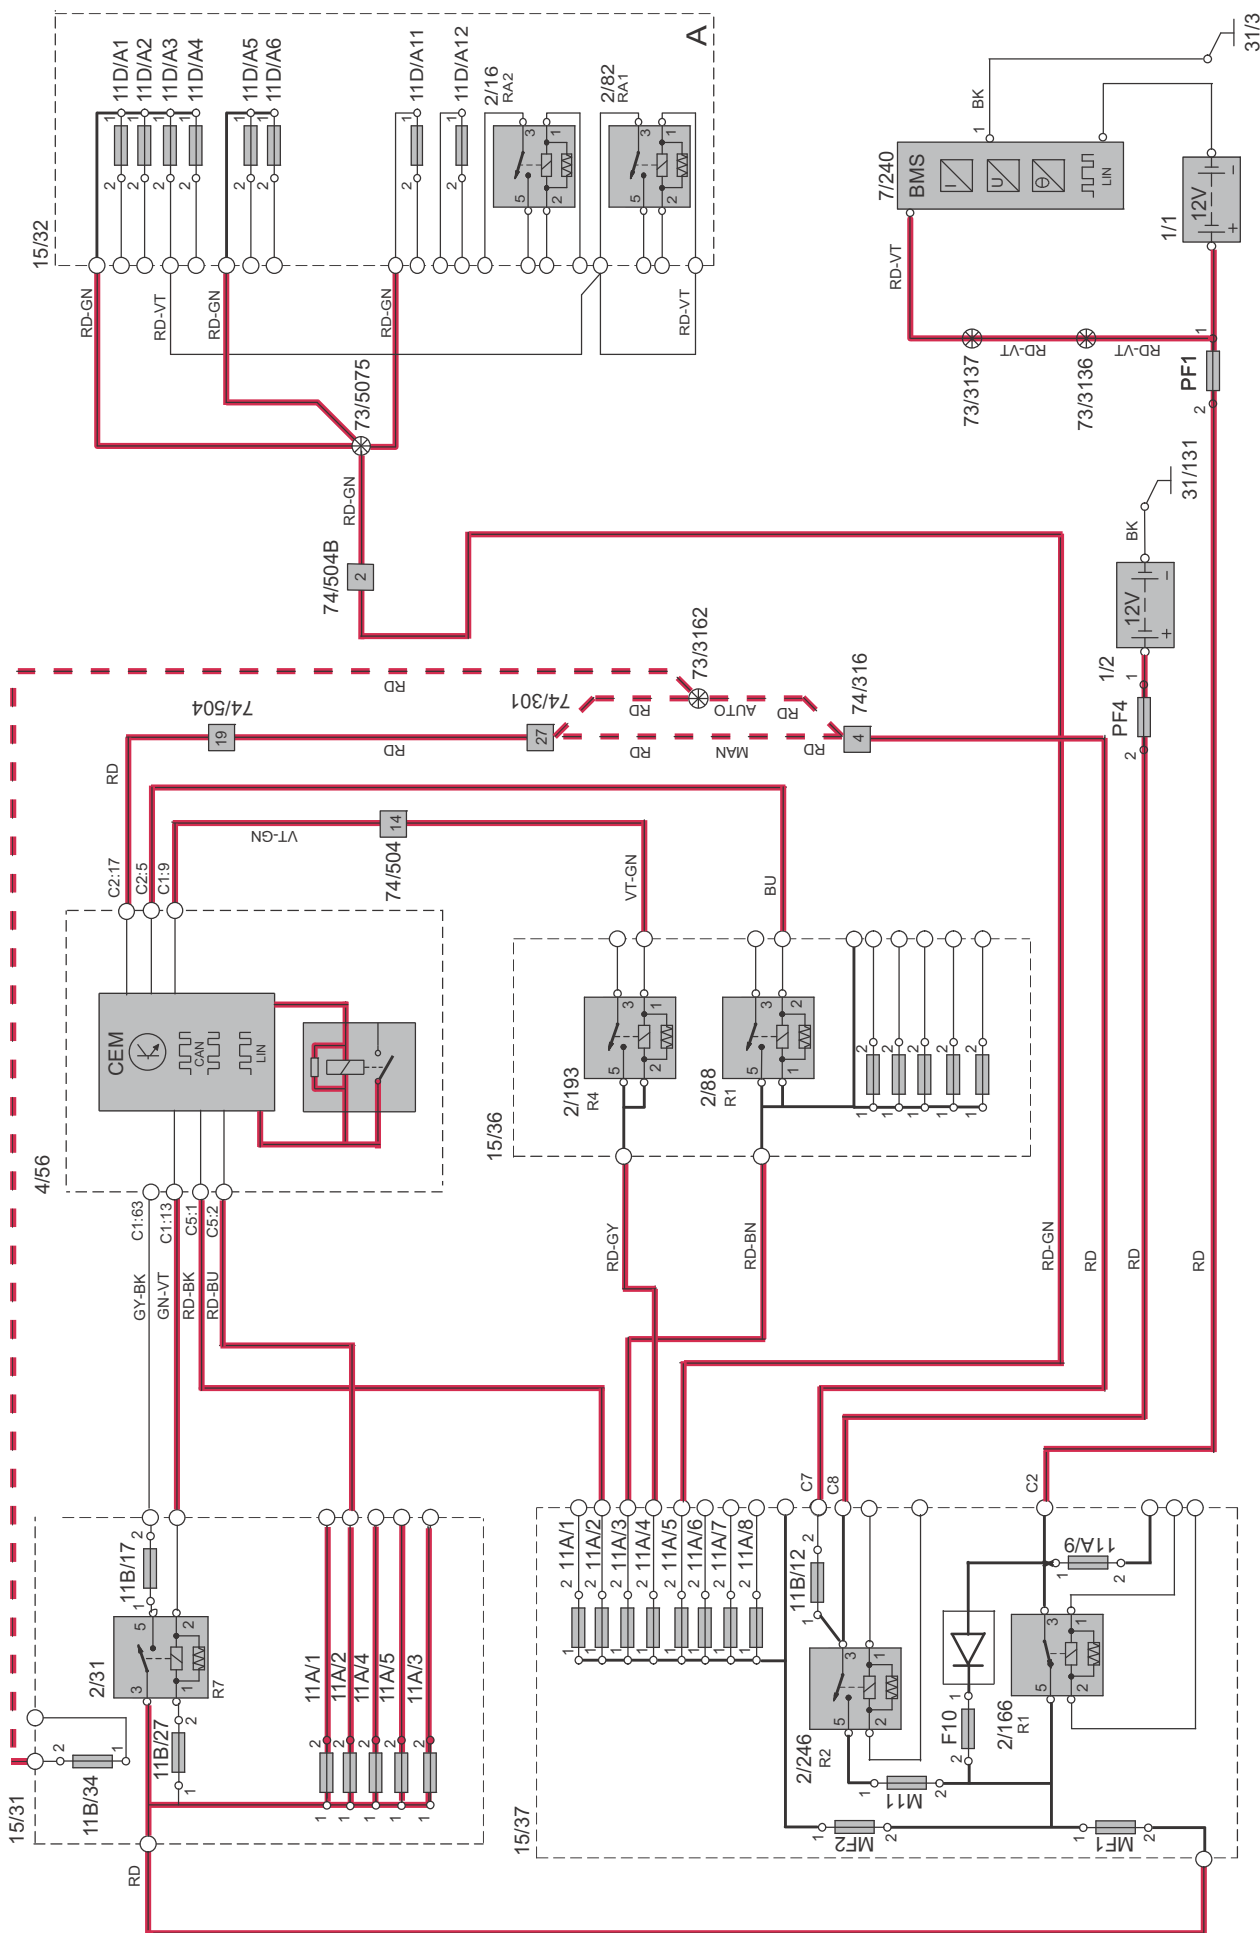


N00009

Overview, Distribution box in engine compartment

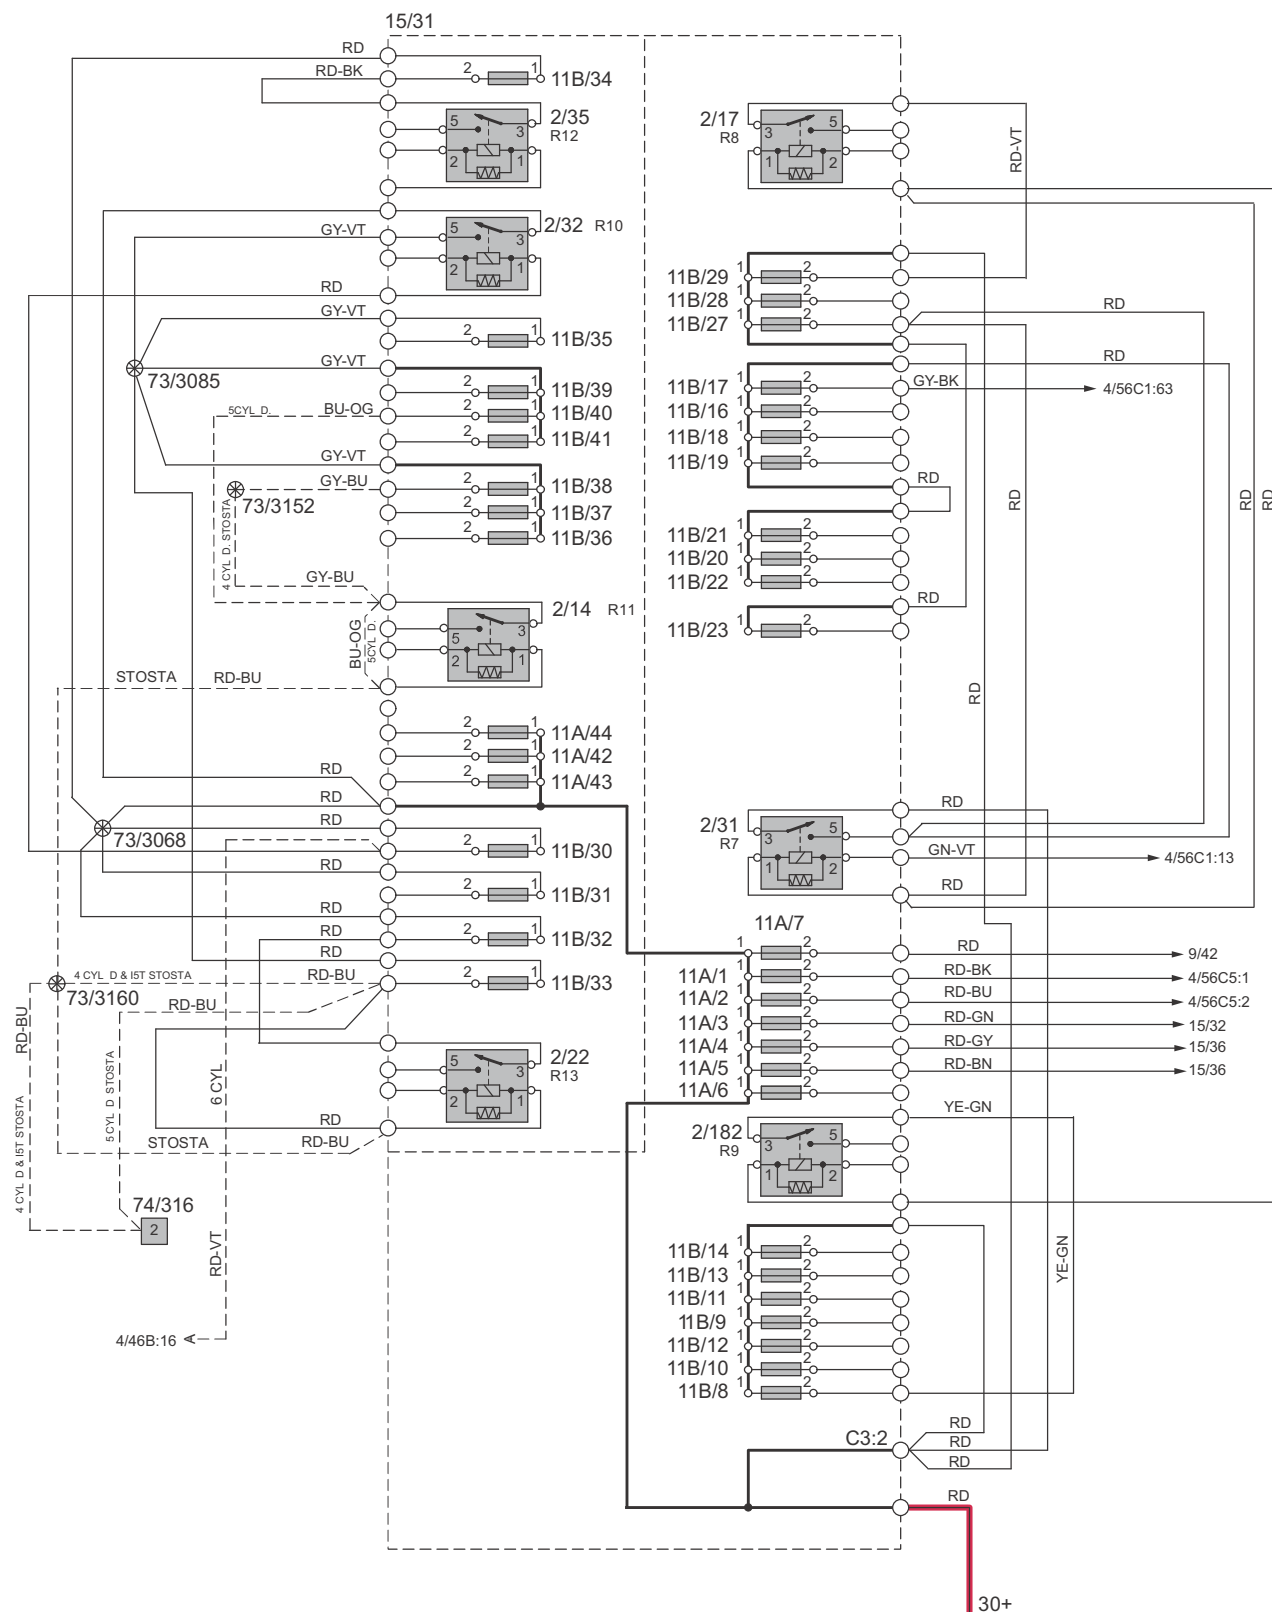

Electrical distribution


Overview, Distribution box in passenger compartment

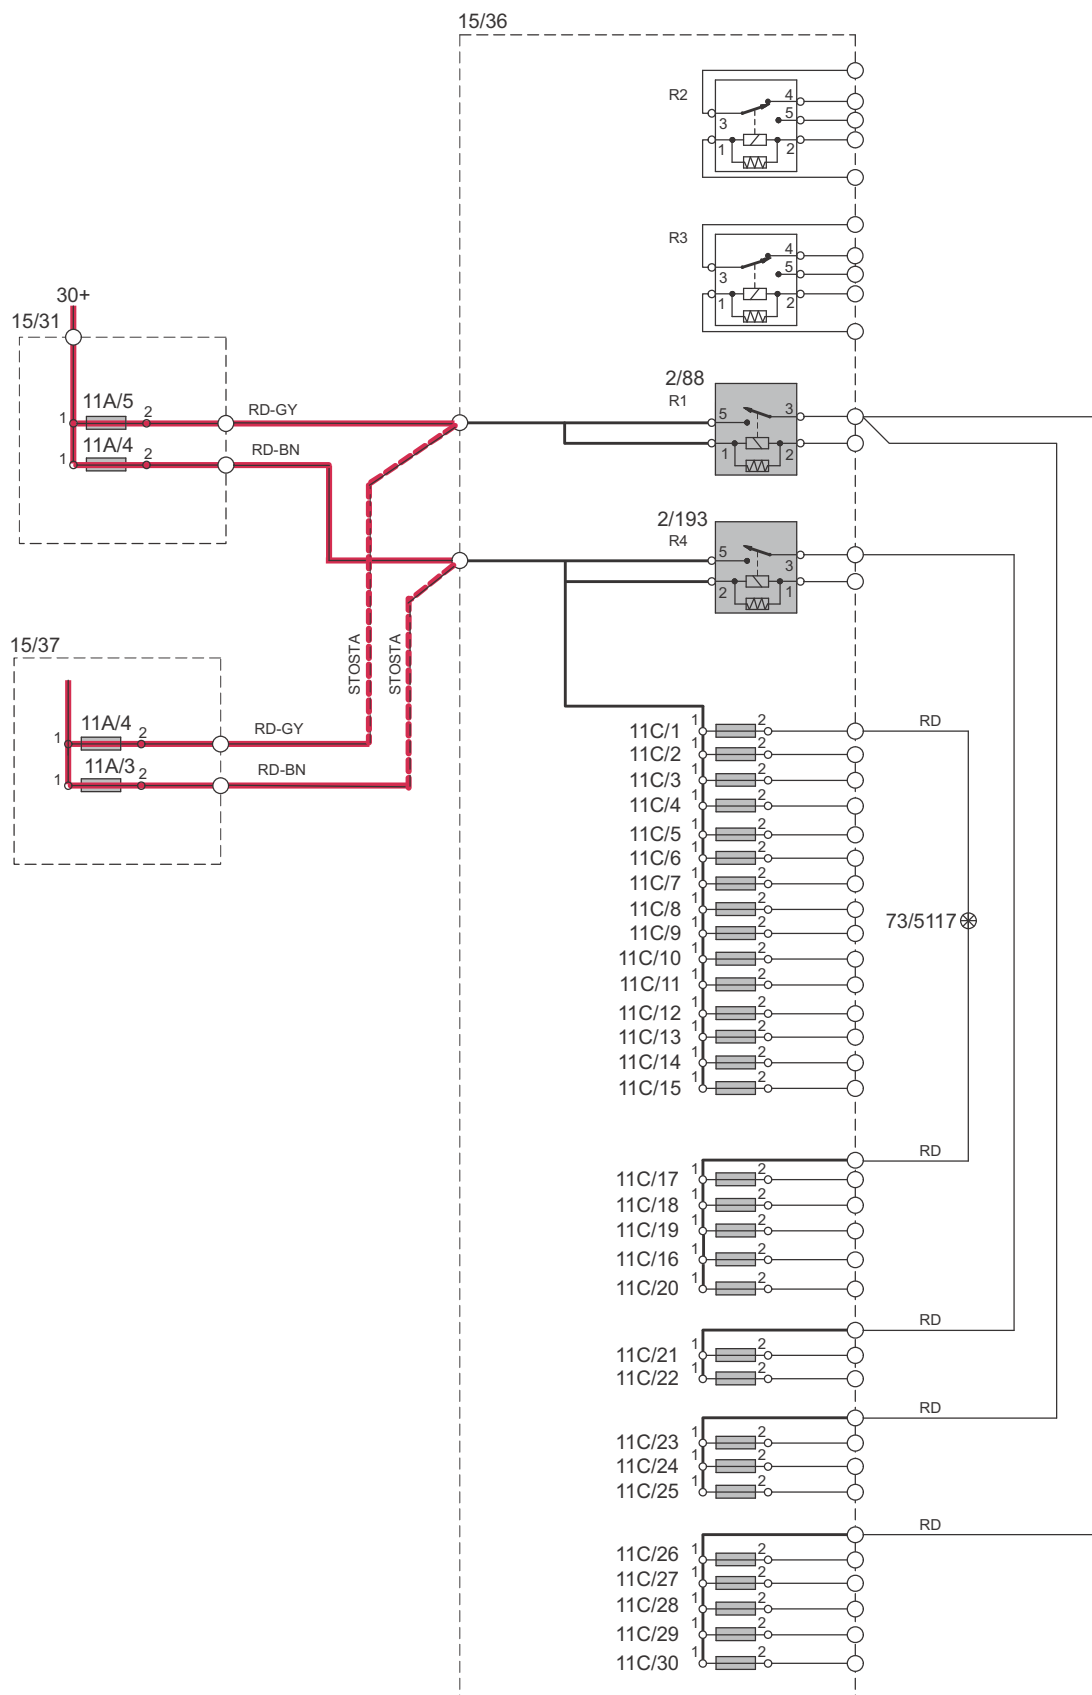

1012227

Electrical distribution


Overview, Distribution box in cargo compartment

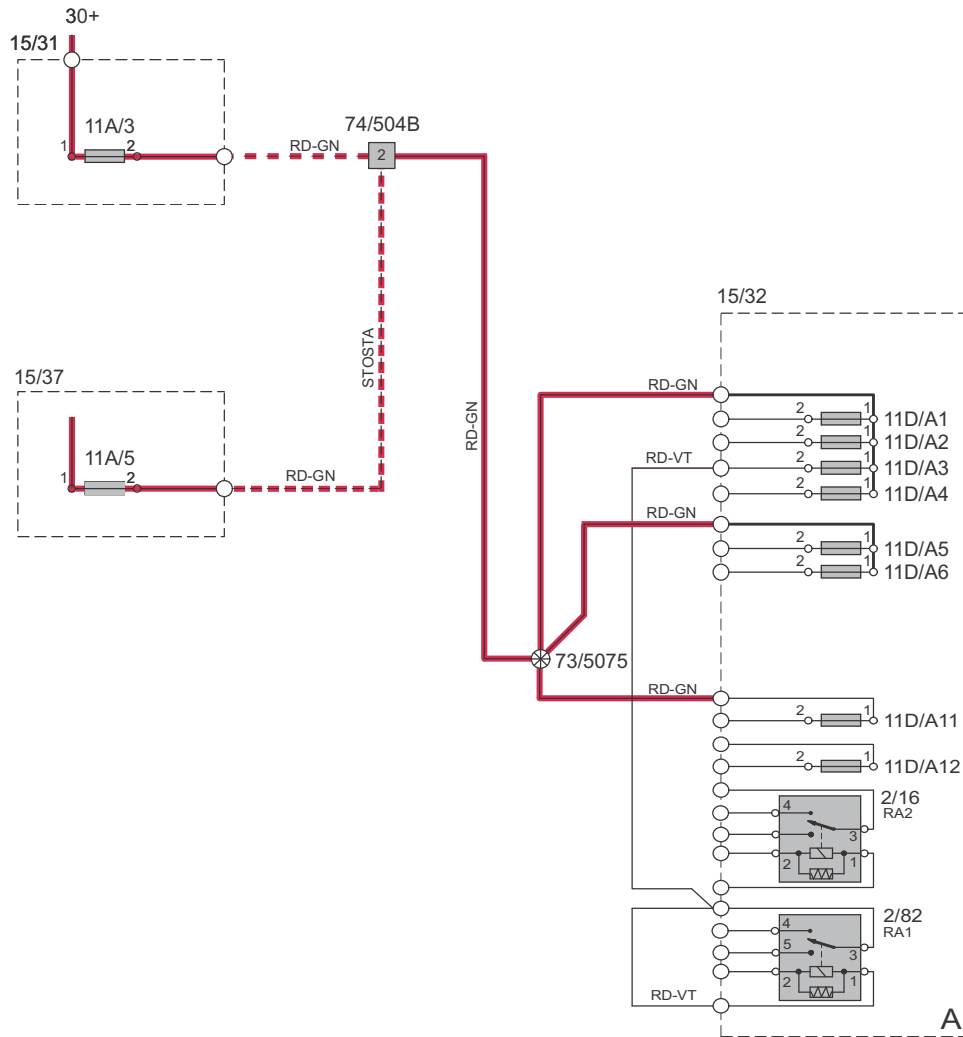

NO00006

Fuses

Distribution box in engine compartment F1-F7

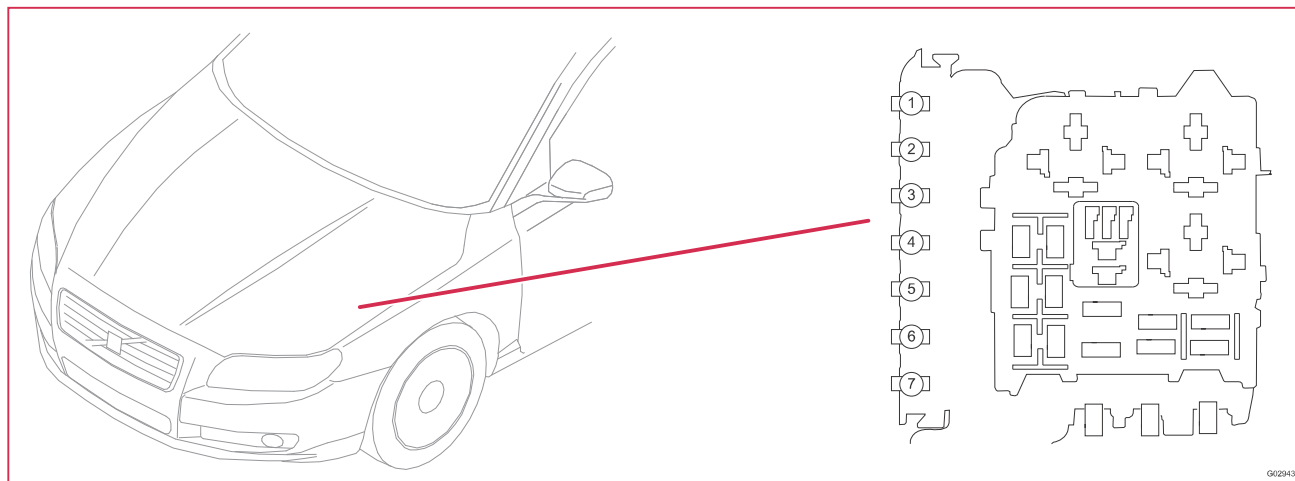


15/31 Distribution box in engine compartment

No.	No.	Fuse function	via	A
F1	11A/1	4/56 Central Electronic Module (CEM) F7 Fuse in the Central Electronic Module (CEM) F9-F11 Fuses in the Central Electronic Module (CEM) F21 Fuse in the Central Electronic Module (CEM) F23 Fuse in the Central Electronic Module (CEM)	- - relay in CEM - -	50
F2	11A/2	4/56 Central Electronic Module (CEM) F3-F6 Fuses in the Central Electronic Module (CEM) F8 Fuse in the Central Electronic Module (CEM) F12-F16 Fuses in the Central Electronic Module (CEM) F22 Fuse in the Central Electronic Module (CEM) F24 Fuse in the Central Electronic Module (CEM)	- relay in CEM relay in CEM - - -	50
F3	11A/3	11D/A1-11D/A11 Fuses in distribution box cargo compartment	-	60
F4	11A/4	2/193 Relay, comfort functions 4/56 Central Electronic Module (CEM) 11C/1-11C/15 Fuses in distribution box passenger compartment 11C/21-11C/22 Fuses in distribution box passenger compartment	- 2/193 - 2/193	60
F5	11A/5	2/88 Relay, 15-feed 4/56 Central Electronic Module (CEM) 11C/23-11C/25 Fuses in distribution box passenger compartment 11C/26-11C/30 Fuses in distribution box passenger compartment	- 2/88 2/88 2/88	60
F7	11A/7	9/42 PTC-element	-	100
continues				

Fuses

Distribution box in engine compartment F8-F21

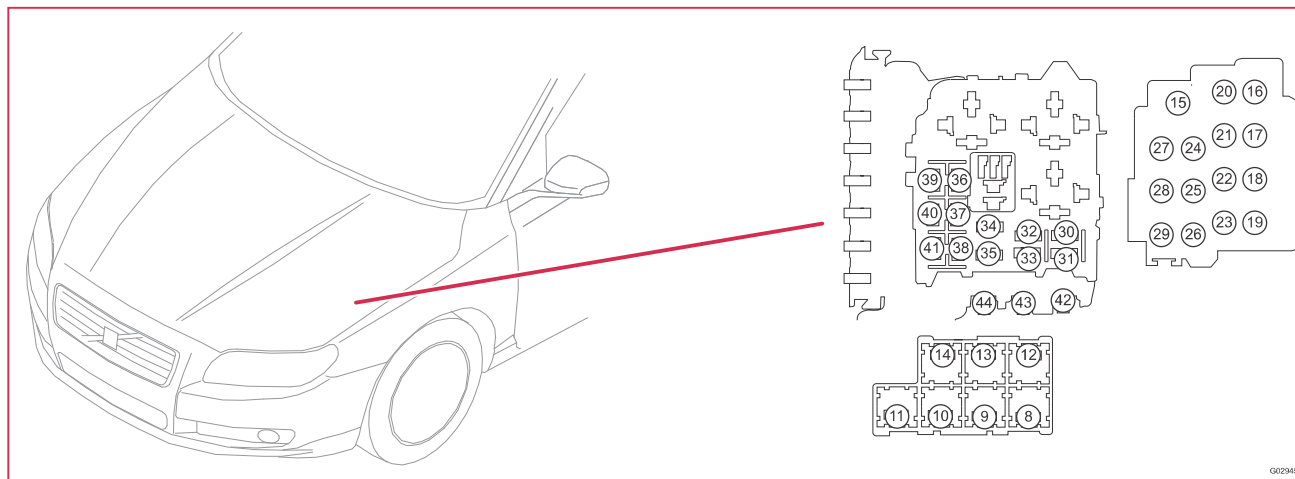


15/31 Distribution box in engine compartment

No.	No.	Fuse function	via	A
F8	11B/8	2/182 6/104 Relay, headlight washer motor Washer motor headlights	- 2/182	20
F9	11B/9	6/1 Wiper Motor Module (WMM)	-	30
F10	11B/10	4/7 4/106 Combustion Preheater Module (CPM) Control module, remote parking heater start	- -	25
F11	11B/11	4/31 6/28 Passenger compartment fan control module Motor, passenger compartment fan	- -	40
F13	11B/13	4/16 Brake Control Module (BCM), pump	-	40
F14	11B/14	4/16 Brake Control Module (BCM), valves	-	20
F16	11B/16	10/1 10/2 Lamp housing, front left Lamp housing, front right	- -	10
F17	11B/17	4/56 F17-F20 Central Electronic Module (CEM) Fuses in the Central Electronic Module (CEM)	- -	20
F18	11B/18	4/16 Brake Control Module (BCM)	-	5
F19	11B/19	4/99 6/164 Speed dependent power steering control module Electrical power steering module (EHPS)	- -	5
F20	11B/20	4/28 4/28B 4/46 4/9 Transmission Control Module (TCM) Transmission Control Module (TCM) MPS6 Engine Control Module (ECM) Supplemental restraint system module (SRS)	- - - -	10
F21	11B/21	9/43 9/44 Heated windshield washer nozzle, left Heated windshield washer nozzle, right	- -	10
continues				

Fuses

Distribution box in engine compartment F22-F31

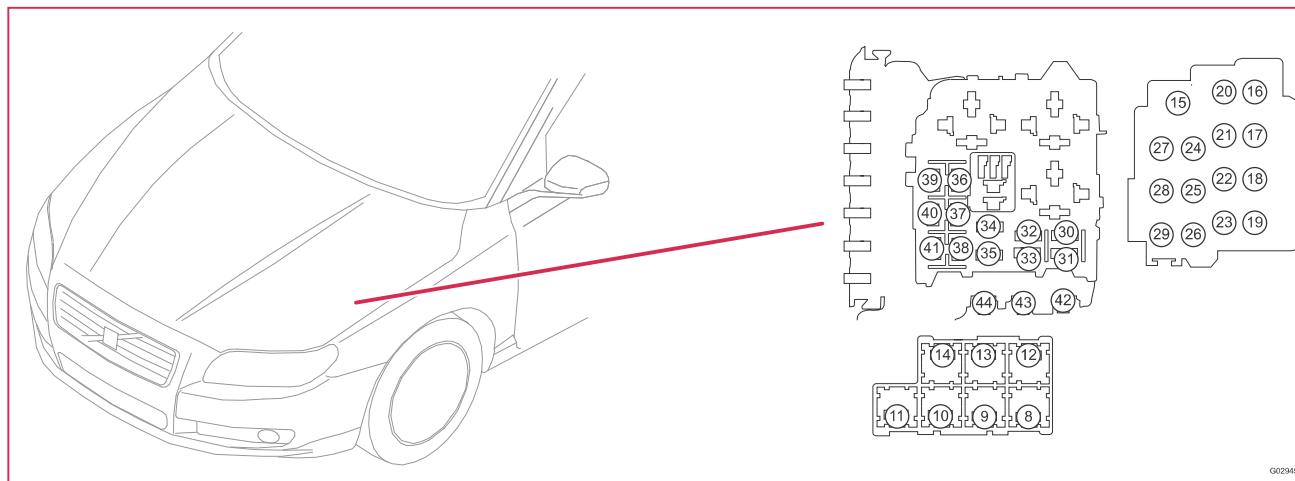


15/31 Distribution box in engine compartment

No.	No.	Fuse function	via	A
F22	11B/22	-	-	-
F23	11B/23	3/111 Light Switch Module (LSM)	-	5
F27	11B/27	2/17 Relay, horn	-	5
		2/31 Relay, 15-feed	-	
		2/182 Relay, headlight washer motor	-	
		4/56 Central Electronic Module (CEM)	2/17, 2/31, 2/182	
F28	11B/28	2/64 Relay, auxiliary lights	-	20
		10/65 Auxiliary light, front right	2/64	
		10/69 Auxiliary light, front left	2/64	
F29	11B/29	2/17 Relay, horn	-	15
		16/10 Horn 1	2/17	
		16/11 Horn 2	2/17	
F30	11B/30	2/32 Main relay, engine management system	-	10
		4/46 Engine Control Module (ECM)	-	
		4/56 Central Electronic Module (CEM)	2/32	
F31	11B/31	4/28 Transmission Control Module (TCM)	-	15
continues				

Fuses

Distribution box in engine compartment F32-F37

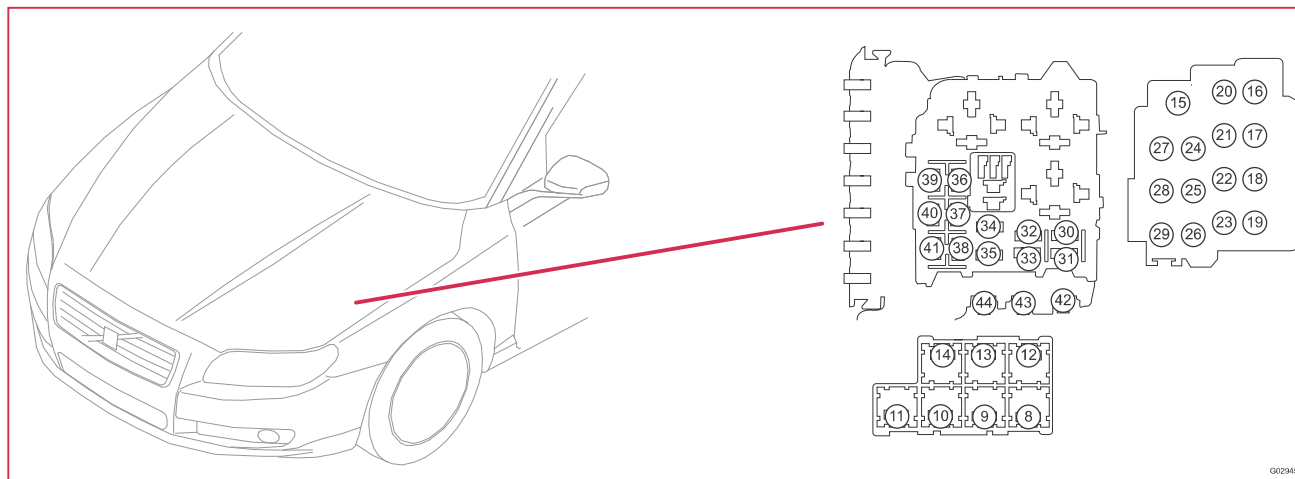


15/31 Distribution box in engine compartment

No.	No.	Fuse function	via	A
F32	11B/32	2/22 Relay, climate control system 8/3 Electromagnetic clutch, climate control system 6/73 Coolant pump, Start/Stop, 5-Cyl. Diesel	- 2/22 2/22	15
F33	11B/33	2/14 Relay, glow plug system 2/22 Relay, climate control system 4/46 Engine Control Module (ECM)	- - -	5
F34	11B/34	2/35 Relay, starter motor 6/25 Starter motor	- 2/35	30
F35	11B/35	4/109 Control module glow plug, 5-Cyl. Diesel 20/3-6 Spark plug with ignition coil, 4-Cyl. 8/111 Control valve fuel flow 20/3-8 Spark plug with ignition coil, 5- & 6-Cyl. 20/16 Capacitor 6-Cyl.	- - - - -	10 20
F36	11B/36	4/46 Engine Control Module (ECM), 4-, 5-, 6-Cyl. 4/46 Engine Control Module (ECM), 5-Cyl. Diesel	- -	10 15
F37	11B/37	7/17 Mass airflow sensor (MAF), 4-Cyl. 8/111 Control valve fuel flow, 4-Cyl. Diesel 8/121 Radiator valve 8/167 Bypass solenoid 4/46 Engine Control Module (ECM), 6-Cyl. 8/6-11 Injection valves 8/98 Control valve fuel pressure, Diesel 8/111 Control valve fuel flow, 5-Cyl. Diesel 7/17 Mass airflow sensor (MAF), 5-, 6-Cyl.	- - - - - - - - -	10 15
continues				

Fuses

Distribution box in engine compartment F38

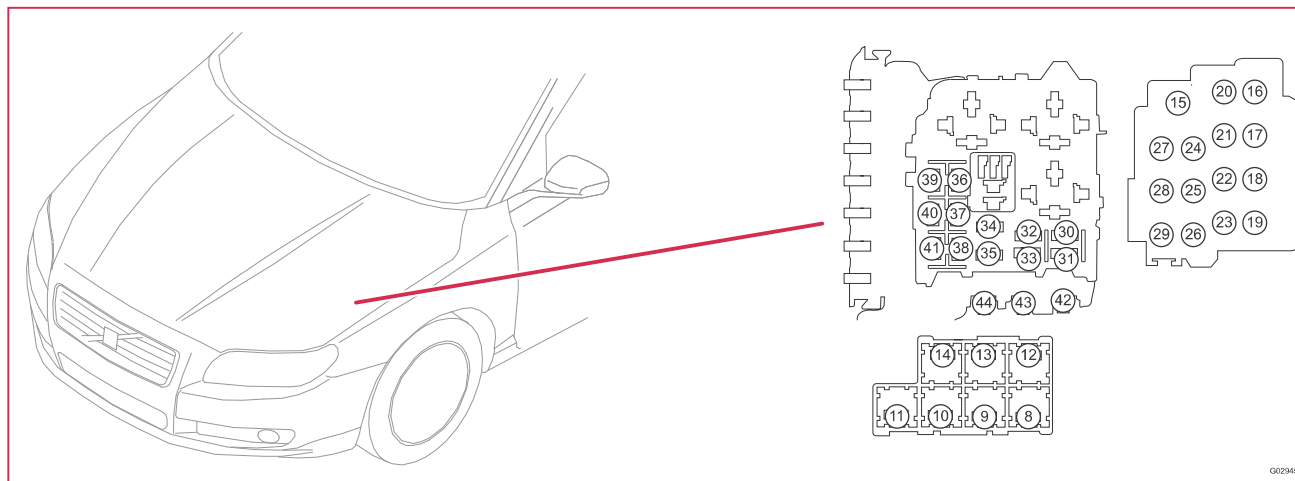


15/31 Distribution box in engine compartment

No.	No.	Fuse function		via	A
F38	11B/38	8/18	EVAP valve, 4-Cyl.	-	10
		8/28	Turbocharger control valve, 4-Cyl.	-	
		7/17	Mass air flow sensor MAF, 4-Cyl. Turbo	-	
		8/19	Solenoid, variable valve timing, intake, 4-Cyl. Turbo	-	
		8/81	Solenoid, variable valve timing, exhaust, 4-Cyl. Turbo	-	
		8/159	Bypass valve	-	
		2/14	Relay, glow plug system	-	
		6/73	Coolant pump, Start/Stop, 4-Cyl. Diesel	2/14	
		7/17	Mass air flow sensor MAF, 5-Cyl. Turbo	-	
		7/35	Oil level sensor, 5-Cyl. Turbo	-	
		8/3	Electromagnetic clutch climate control system, 5-Cyl. Turbo	-	
		8/18	EVAP valve, 5-Cyl. Turbo	-	
		8/28	Turbocharger control valve, 5-Cyl. Turbo	-	
		8/81	Solenoid, variable valve timing, exhaust, 5-Cyl. Turbo	-	
		8/117	Solenoid, variable valve timing, intake, 5-Cyl. Turbo	-	
		7/35	Oil level sensor, 5-Cyl. Diesel	-	
		8/3	Electromagnetic clutch, climate control system, 5-Cyl. Diesel	-	
		8/113	Bypass valve, EGR cooling, 5-Cyl. Diesel	-	
		8/164	Electric piston cooling valve	-	
continues					

Fuses

Distribution box in engine compartment F38-F39

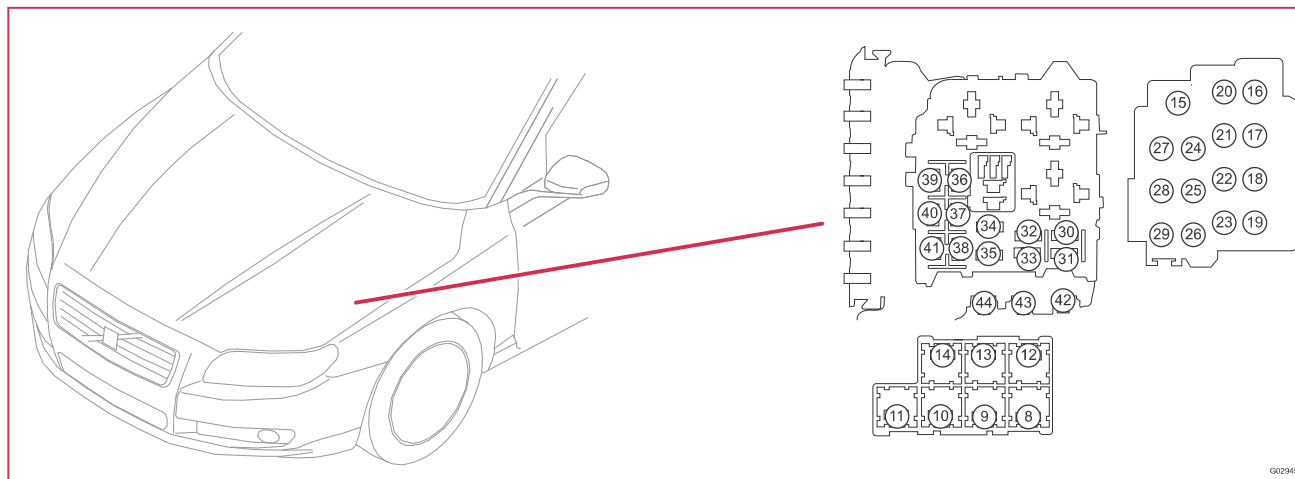


15/31 Distribution box in engine compartment

No.	No.	Fuse function	via	A
F38	11B/38	4/46 Engine Control Module (ECM)	-	10
		6/139 Upper actuator motor, intake manifold, 6-Cyl. W/O T	-	
		6/140 Lower actuator motor, intake manifold, 6-Cyl. W/O T	-	
		7/35 Oil level sensor, 6-Cyl.	-	
		8/3 Electromagnetic clutch, climate control system	-	
		8/28 Turbo control valve	-	
		8/77 Control valve, fuel volume	-	
		8/117 Solenoid, variable valve timing, intake, 6-Cyl.	-	
		8/125 Solenoid cam profile front, 6-Cyl. W/O T	-	
		8/126 Solenoid cam profile rear, 6-Cyl. W/O T	-	
F39	11B/39	7/15 Front heated oxygen sensor, 4-Cyl.	-	10
		7/82 Rear heated oxygen sensor, 4-Cyl. Turbo	-	
		7/15 Front heated oxygen sensor, 5-Cyl. Diesel	-	15
		7/215 Rear heated oxygen sensor, 5-Cyl. Diesel	-	
		7/15 Front heated oxygen sensor, 5-Cyl. Turbo.	-	
		8/18 EVAP valve, 5-Cyl. Turbo.	-	
continues				

Fuses

Distribution box in engine compartment F39-F44

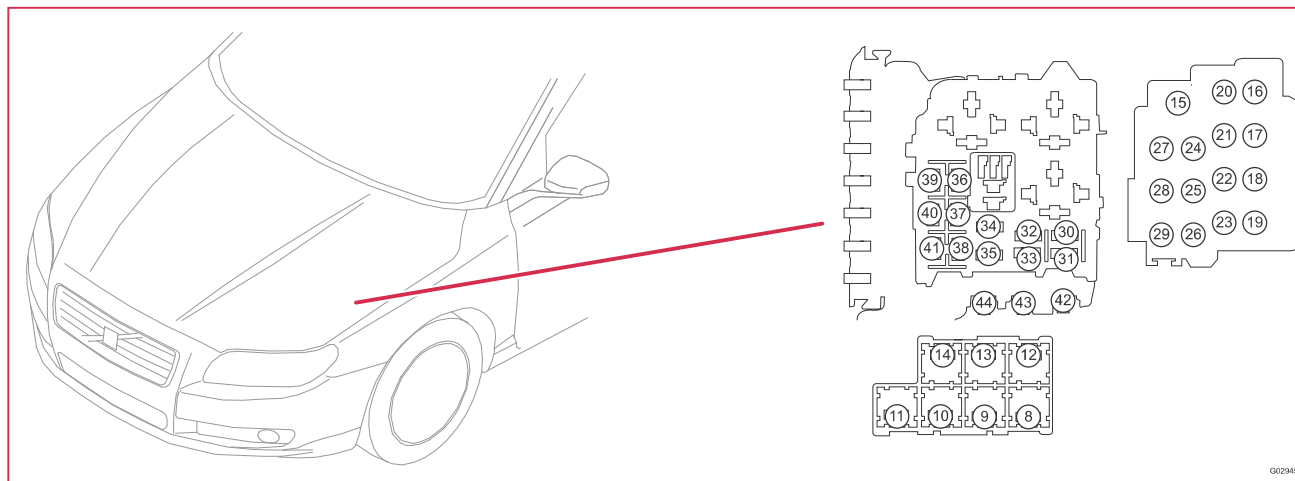


15/31 Distribution box in engine compartment

No.	No.	Fuse function	via	A
F39	11B/39	7/15 Front oxygen sensor, bank 1, 6-Cyl.	-	15
		7/82 Rear oxygen sensor, bank 1, 6-Cyl.	-	
		7/103 Front heated oxygen sensor bank 2, 6-Cyl. W/O T	-	
		7/104 Rear heated oxygen sensor bank 2, 6-Cyl. W/O T	-	
		8/18 EVAP valve, 6-Cyl.	-	
F40	11B/40	2/14 Relay, glow plug system	-	20
		6/73 Coolant pump, Start/Stop, 5-Cyl. Turbo	2/14	
		6/179 Electric oil pump	-	
		9/32 PTC resistor crankcase ventilation, 5-Cyl. Turbo	-	
		9/38 Heated fuel filter, Diesel	-	
	2/14 6/73	Relay, glow plug system Coolant pump, Start/Stop, 4-Cyl. Turbo	- 2/14	10
F41	11B/41	6/67 Pump fuel leakage control 6-Cyl.	-	5
		6/179 Electric oil pump	-	
		7/200 Sensor, coolant temperature	-	
		9/32 PTC-resistor, crankcase ventilation 5 Cyl. Diesel	-	
F42	11A/42	4/109 Glow plug control module	-	70
		20/22-26 Glow plug, 5-Cyl. Diesel	4/109	
F43	11A/43	4/71 Control module cooling fan 4-Cyl. Turbo	-	60
		4/71 Cooling fan control module, 5-Cyl. Diesel & 6-Cyl.	-	80
F44	11A/44	6/164 Electrical power steering module (EPS)	-	100

Fuses

Central electronic module (CEM) F1-F3

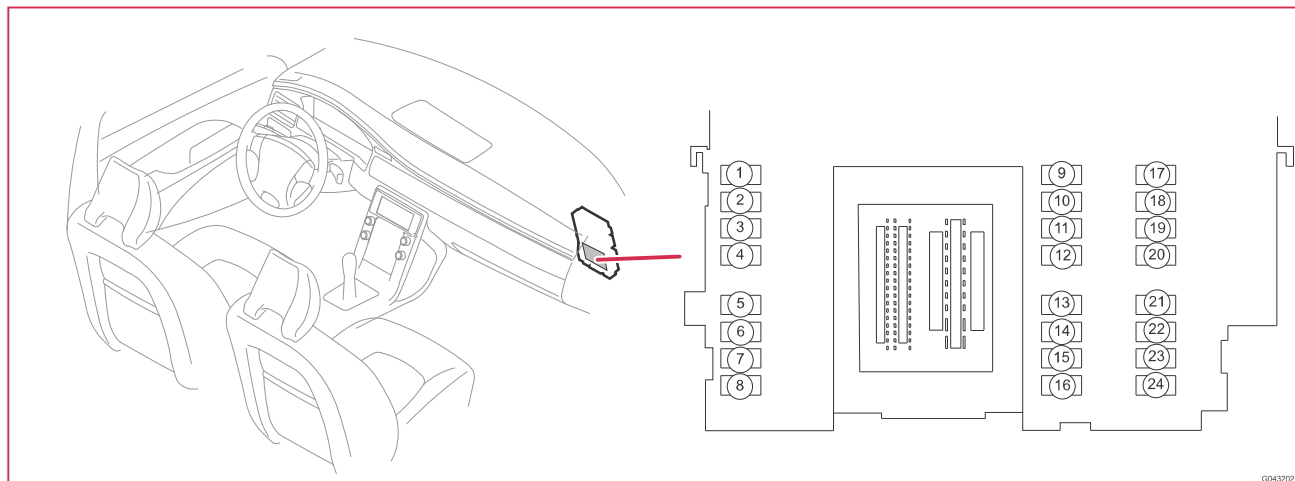


4/56 Central Electronic Module (CEM)

No.	Fuse function		via	A
F1	2/16	Relay, rear window wiper	-	15
	6/32	Rear window wiper motor	2/16	
F3	3/26	Switch unit, power driver's seat	-	7.5
	3/27	Switch unit, power passenger seat	-	
	3/176	Power window switches, driver's door	-	
	3/291	Tailgate closing switch, V70	-	
	4/52	Power Seat Module (PSM)	-	
	4/76	Remote control unit for garage door opener	-	
	6/8	Lock motor central locking, trunk lid/tailgate, V70	-	
	10/25	Ceiling light, cargo compartment, V70	-	
	10/29	Glove compartment lighting	-	
	10/97	Left-hand front courtesy lighting	-	
	10/102	Right-hand front courtesy lighting	-	
	10/114	Left-hand vanity mirror lighting	-	
	10/115	Right-hand vanity mirror lighting	-	
	10/125	Left-hand front courtesy lighting	-	
	10/126	Right-hand front courtesy lighting	-	
	10/127	Lighting, cargo compartment, left-hand side, S80	-	
	10/128	Lighting, cargo compartment, right-hand side, S80	-	
	10/150	Rear reading light	-	
	10/249	Sill lighting, front driver's side, S80	-	
	10/250	Sill lighting, front passenger side, S80	-	
	10/251	Sill lighting, rear driver's side, S80	-	
	10/252	Sill lighting, rear passenger side, S80	-	
	17/45	Alcolock outlet	-	
	26/6	Converter/control module, sill moldings, driver's side	-	
	26/7	Converter/control module, sill moldings, passenger side	-	
	26/8	Alcolock charging cradle	-	
continues				

Fuses

Central electronic module (CEM) F4-F14

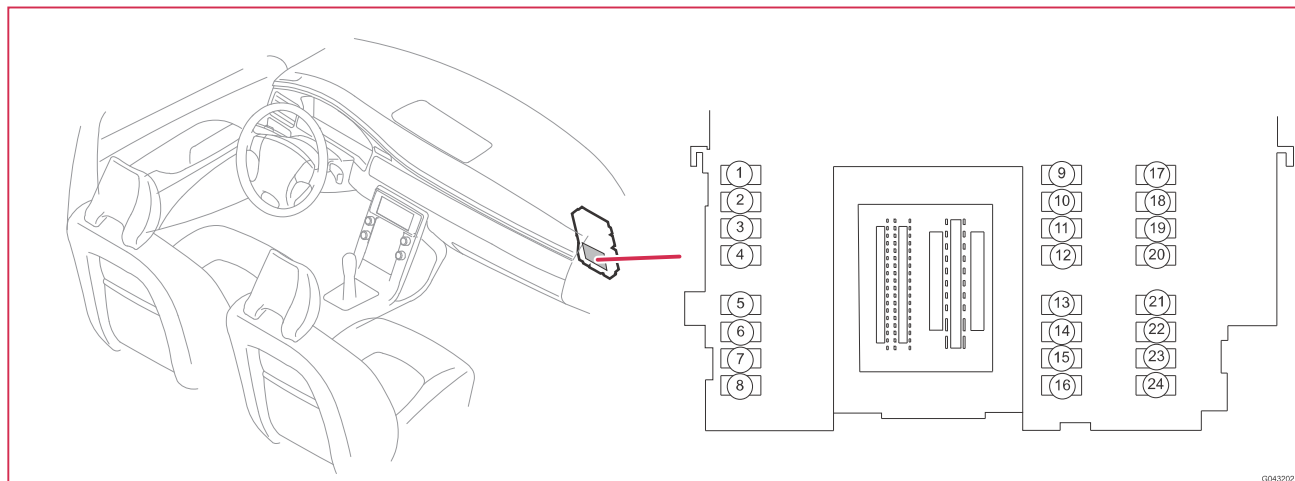


4/56 Central Electronic Module (CEM)

No.	Fuse function		via	A
F4	5/1	Driver Information Module (DIM)	-	5
F5	4/80	Forward Sensing Module (FSM)	-	10
	7/203	Forward-aimed radar (FLR)	-	
	19/4	Analog clock	-	
F6	4/76	Remote control unit for garage door opener	-	7.5
	7/149	Rain Sensor Module (RSM)	-	
	10/22	Ceiling light	-	
	10/114	Left-hand vanity mirror lighting	-	
	10/115	Right-hand vanity mirror lighting	-	
	10/150	Rear reading light	-	
F7	3/4	Steering wheel switch left (SWSL)	3/130	7.5
	3/131	Steering wheel switch right (SWSR)	3/130	
	3/130	Steering Wheel Module (SWM)	-	
F8	6/37	Lock motor, fuel filler cover	-	10
F9	6/127	Washer motor	-	15
F10	6/127	Washer motor	-	15
F11	6/8	Central locking motor, trunk lid	-	10
F12	6/141	Motor folding head restraint left	-	10
	6/142	Motor folding head restraint right	-	
	8/59	Rear left head restraint solenoid	-	
	8/60	Rear right head restraint solenoid	-	
F13	4/83	Fuel pump control module	relay in CEM	20
	6/33	Fuel pump	relay in CEM	
F14	4/6	Climate Control Module (CCM)	-	5
	7/199	Ultrasonic sensor (IMS)	-	
continues				

Fuses

Central electronic module (CEM) F15-F24

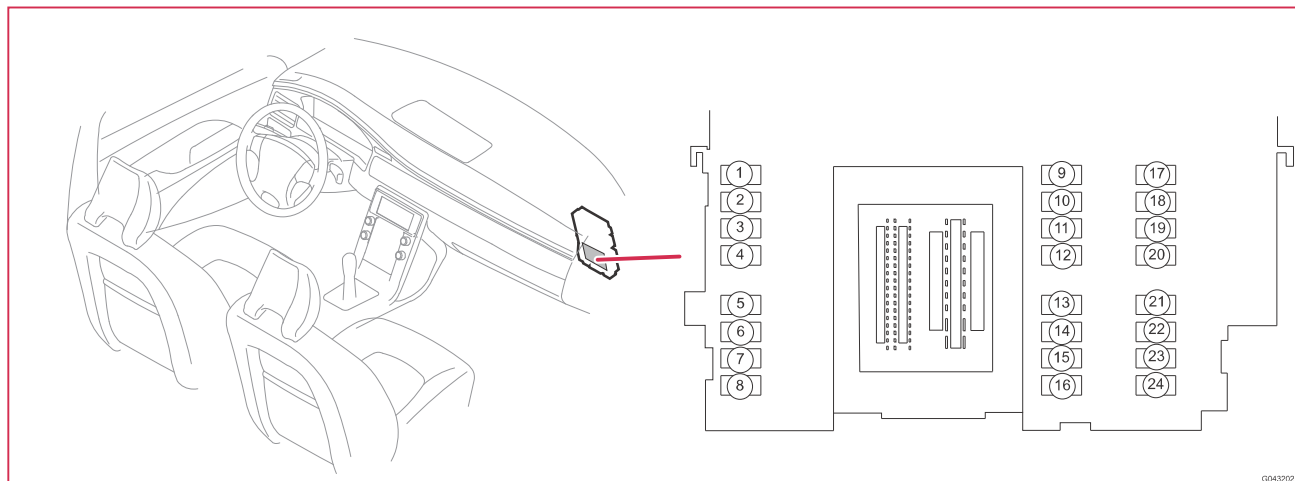


4/56 Central Electronic Module (CEM)

No.	Fuse function	via	A
F15	4/102 Steering Column Lock Module (SCL)	relay in CEM	15
F16	16/35 Siren Control Module (SCM) 17/13 Data link connector	- -	5
F18	4/9 Supplemental restraint system module (SRS) 7/93 Occupant Weight Sensor (OWS)	- -	10
F19	4/80 Forward Sensing Module (FSM) 7/203 Forward-aimed radar (FLR) 4/125 Closing velocity module (CVM)	- - -	5
F20	3/65 Switch, heated rear seat 7/51 Accelerator pedal sensor 8/48 Auto-dimming rearview mirror 9/42 PTC-element	- - - -	7.5
F21	3/281 Infotainment Control Module (ICM) 4/124 Accessory USB unit (AUU) 16/1 Integrated Audio Module (IAM)	- - -	15
F22	3/9 Contact brake light	-	5
F23	4/33 Sunroof Module (SRM)	-	20
F24	3/1 Ignition switch 3/132 Start Control Module (SCU) 16/65 Immobilizer antenna unit (IAU)	- - -	5

Fuses

Passenger compartment

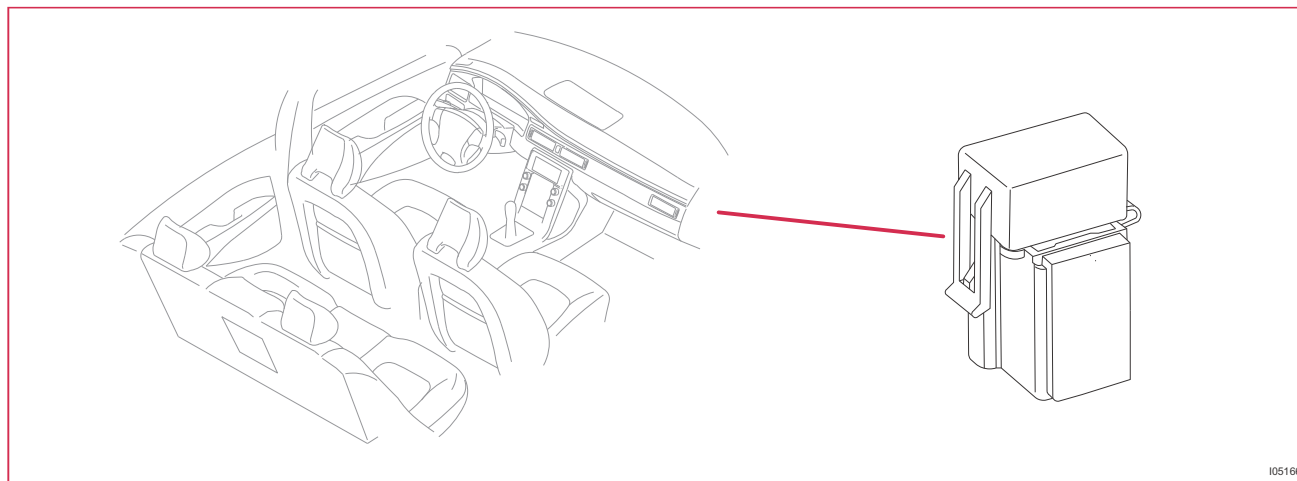


11 Fuse in extra fuse holder, passenger compartment

No.	Fuse function	via	A
1	19/4 Analog clock	-	5

Fuses

Distribution box in passenger compartment F1-F17

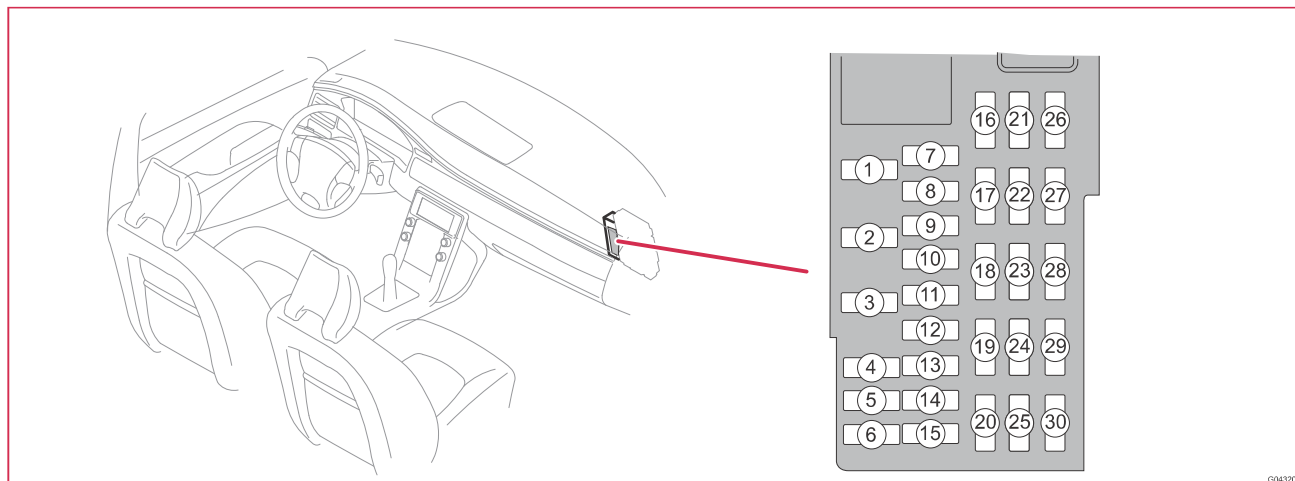


15/36 Distribution box in passenger compartment

No.	No.	Fuse function	via	A
F1	11C/1	11C/16-20 16/105 Fuses in distribution box passenger compartment Audio module (AUD)	- -	40
F7	11C/7	17/19 9/24 12 V outlet, cargo compartment Refrigeration box	- 2/141	15
F8	11C/8	3/126 Driver Door Module (DDM)	-	20
F9	11C/9	3/127 Passenger Door Module (PDM)	-	20
F10	11C/10	3/129 Right rear door module (RDM)	-	20
F11	11C/11	3/128 Left rear door module (LDM)	-	20
F12	11C/12	4/93 Keyless Vehicle Module (KVM)	-	20
F13	11C/13	3/26 4/52 Switch unit, power driver's seat Power Seat Module (PSM)	- -	20
F14	11C/14	3/27 Switch unit, power passenger seat	-	20
F15	11C/15	Spare	-	-
F16	11C/16	3/281 Infotainment Control Module (ICM)	-	5
F17	11C/17	16/145 16/162 16/105 16/36 Remote Digital Audio Receiver (RDAR) Digital Audio Broadcast Module (DABM) Audio module (AUD) TV receiver	- - - -	10
continues				

Fuses

Distribution box in passenger compartment F18-F24

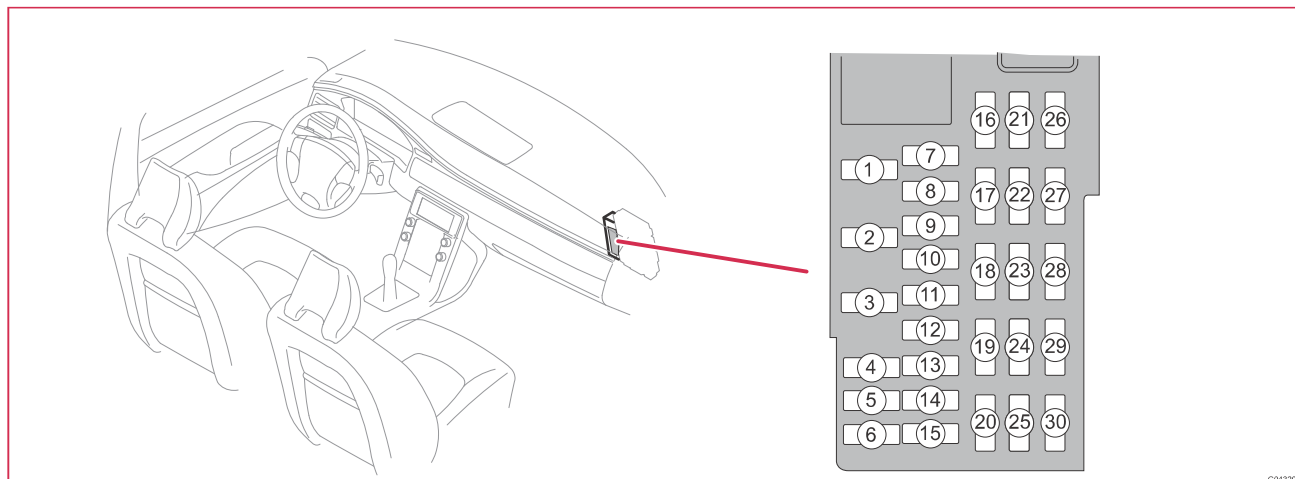


15/36 Distribution box in passenger compartment

No.	No.	Fuse function	via	A
F18	11C/18	3/281 Infotainment Control Module (ICM) 4/124 Accessory USB unit (AUU) 16/1 Integrated Audio Module (IAM) 16/159 Control module, cellular phone handsfree (accessory)	- - - -	15
F19	11C/19	16/60 Phone Module (PHM)	-	5
F20	11C/20	16/109 DVD Player/control module	-	7,5
F21	11C/21	4/33 Sunroof Module (SRM) 6/48 Damper Motor Module (DMM), recirculation 6/95 Damper Motor Module (DMM), temperature, left side 6/96 Damper Motor Module (DMM), temperature, right side 6/102 Damper Motor Module (DMM), defroster 6/103 Damper Motor Module (DMM), floor/ventilation 7/159 Air Quality Sensor (AQS) 10/22 Ceiling light	- - - - - - - 4/56	5
F22	11C/22	9/1 Outlet 12V front 9/25 Outlet 12V rear 16/45 Portable navigation system	- - -	15
F23	11C/23	9/15 Control module, RH rear seat heater	-	15
F24	11C/24	9/14 Control module, LH rear seat heater	-	15
continues				

Fuses

Distribution box in passenger compartment F25-F30

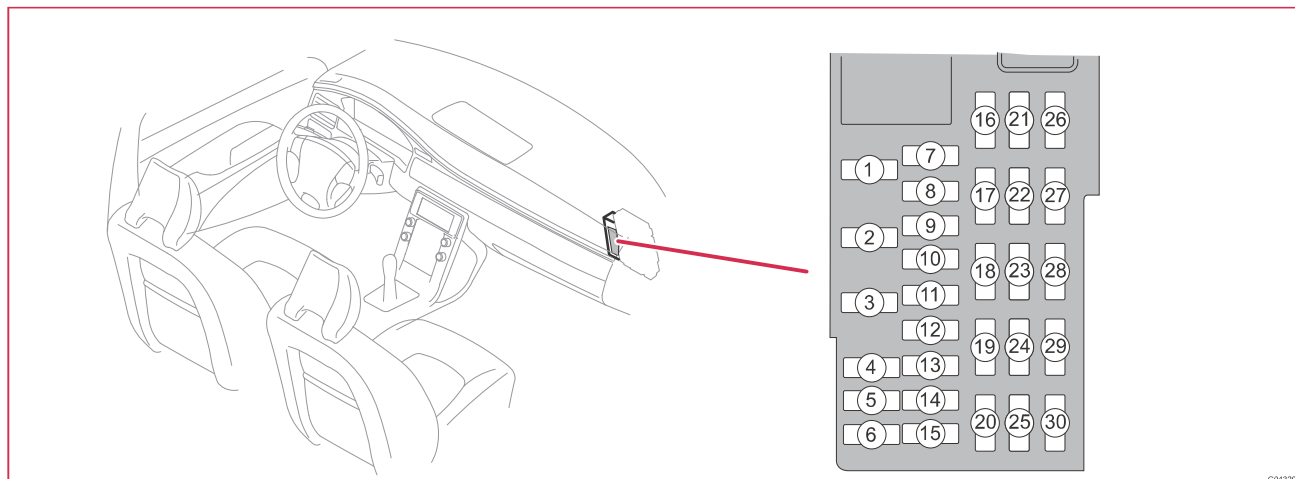


15/36 Distribution box in passenger compartment

No.	No.	Fuse function	via	A
F25	11C/25	2/141 Refrigeration box relay 4/131 Control module back massage left 4/133 Control module back massage right 10/276 Lighting center armrest rear 1 10/277 Lighting center armrest rear 2 10/280 Lighting cooler compartment left 10/281 Lighting cooler compartment right	- - - - - - -	15
F26	11C/26	9/13 Seat Heating Module (SHM), passenger side	-	15
F27	11C/27	9/12 Seat Heating Module (SHM), driver's side	-	15
F28	11C/28	4/86 Parking Assistance Module (PAM) 4/110 Trailer Module (TRM) 4/120 Parking Assistance Camera module (PAC)	- - -	5
F29	11C/29	4/82 Differential Electronic Module (DEM)	-	15
F30	11C/30	4/84 Suspension Module (SUM)	-	10

Fuses

Distribution box in cargo compartment FA1-FA11

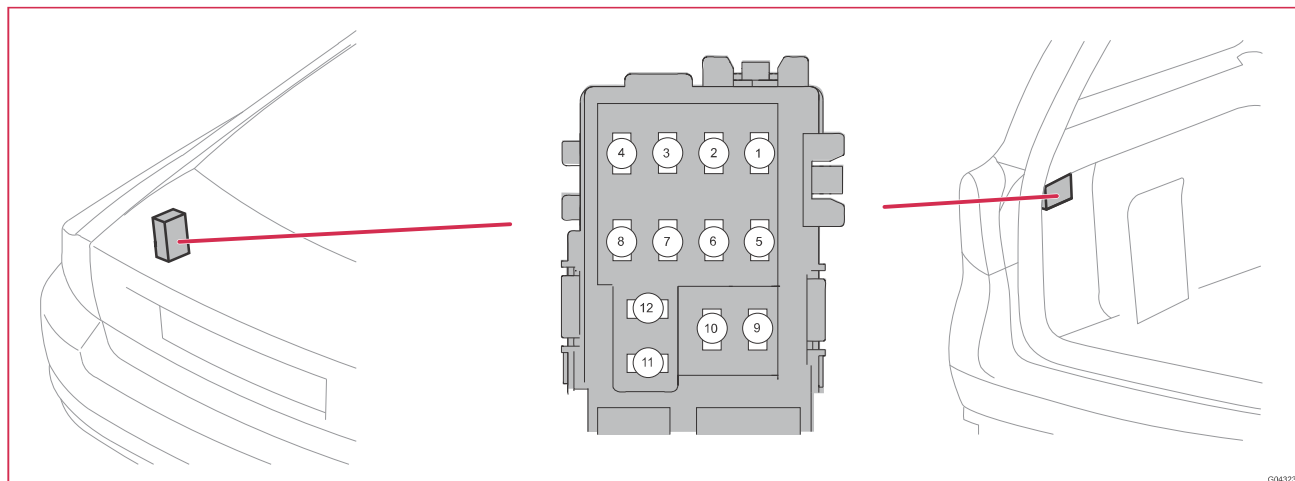


15/32 Distribution box in cargo compartment

No.	No.	Fuse function	via	A
FA1	11D/A1	4/115 Park Brake Module (PBM)	-	30
FA2	11D/A2	4/115 Park Brake Module (PBM)	-	30
FA3	11D/A3	2/82 Relay, heated rear window 9/2 Heated rear window, V70 16/141 Interference filter, rear window, left, S80	- 2/82 2/82	30
FA4	11D/A4	17/39 13-pin outlet, tow hitch cable harness	-	15
FA5	11D/A5	4/116 Power Operated Tailgate Module (POT)	-	30
FA11	11D/A11	4/110 Trailer Module (TRM)	-	40

Fuses

Distribution box in engine compartment, cold zone F1-MF2

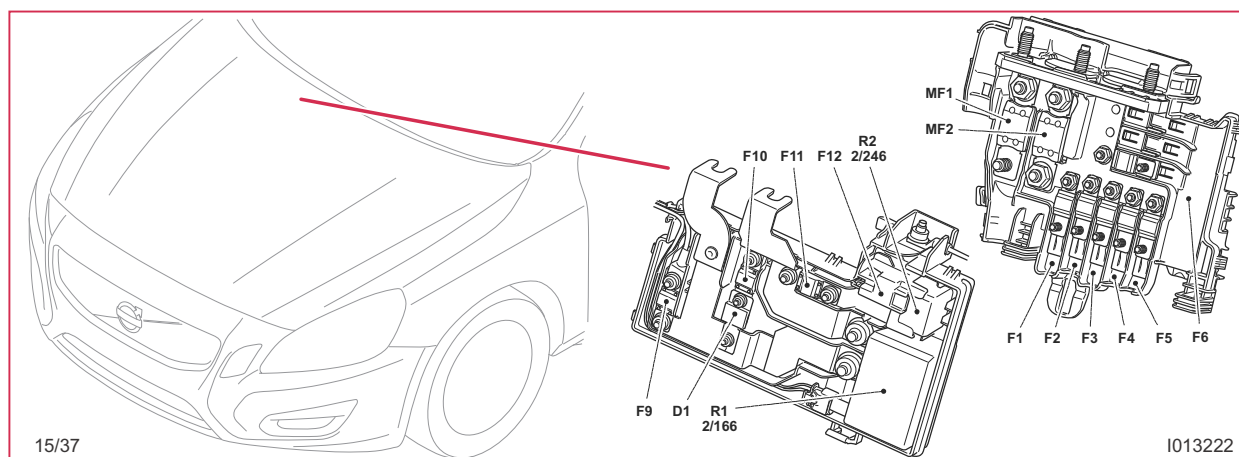


15/37 Distribution box cold zone in engine compartment, Start/Stop function

No.	No.	Fuse function	via	A
F1	11A/1	9/42 PTC-element	-	100
F2	11A/2	4/56C5:1 Central Electronic Module (CEM)	-	50
F3	11A/3	2/88 Relay, 15-feed rear 11C/21-11C/22 Fuses in distribution box passenger compartment	- 2/193	60
F4	11A/4	2/193 Relay, comfort functions 11C/23-11C/30 Fuses in distribution box passenger compartment	- 2/88	60
F5	11A/5	15/32 Distribution box in cargo compartment	-	60
F6	11A/6	4/31 Passenger compartment fan control module 6/28 Motor, passenger compartment fan	- -	40
F7	11A/7	Spare	-	-
F8	11A/8	Spare	-	-
F9	11A/9	6/25 Starter motor	2/35	30
F10	11A/10	Diode D1	-	50
F11	M11	Secondary battery	2/246	70
F12	11B/12	4/56 Central Electronic Module (CEM)	-	5
MF1	MF1	11A/1-11A/8 Main fuses in engine compartment fuse box (15/31)	-	175
MF2	MF2	11A/1-11A/8 Fuses in fuse box cold zone engine compartment (15/37)	-	175

Fuses

Battery PF1-PF2

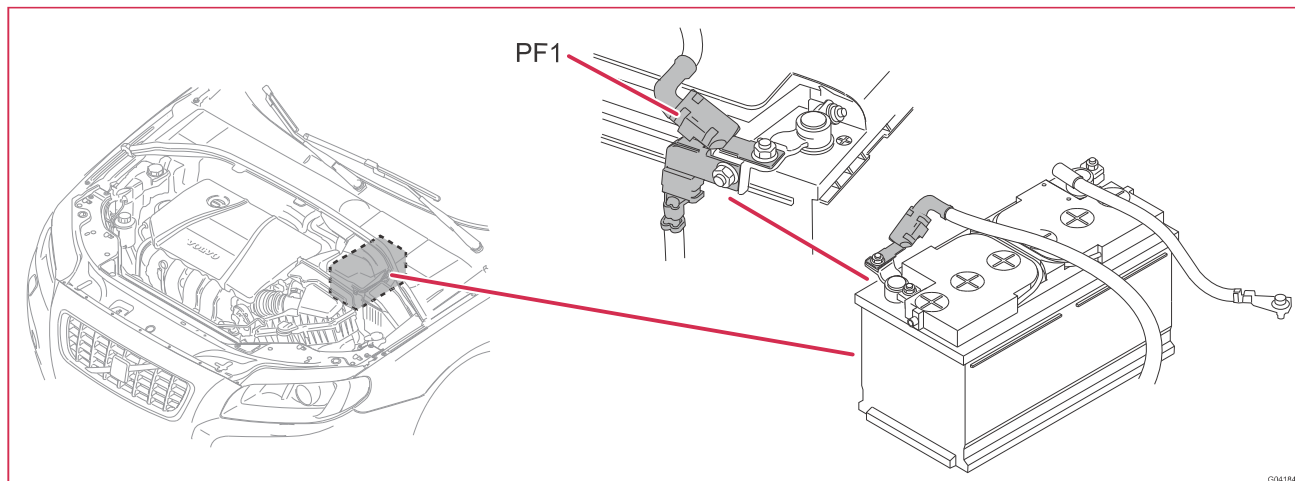


1/1 Battery

No.	Fuse function		via	A
PF1	11A/1-11A/7	Fuses in the engine compartment distribution box	-	150
	11B/8-11B/14	Fuses in the engine compartment distribution box	-	
	11B/16-11B/22	Fuses in the engine compartment distribution box	2/31	
	11B/23	Fuses in the engine compartment distribution box	-	
	11B/27-11B/32	Fuses in the engine compartment distribution box	-	
	11B/33	Fuses in the engine compartment distribution box	2/32	
	11B/34	Fuses in the engine compartment distribution box	-	
	11B/35-11B/41	Fuses in the engine compartment distribution box	2/32	
	11A/42-11A/44	Fuses in the engine compartment distribution box	-	
	15/37	Distribution box cold zone in engine compartment, Start/Stop function	-	
PF2	6/25	Starter motor	-	150
	6/26	Alternator Control Module (ACM)	-	


Relays

Relays in the engine compartment

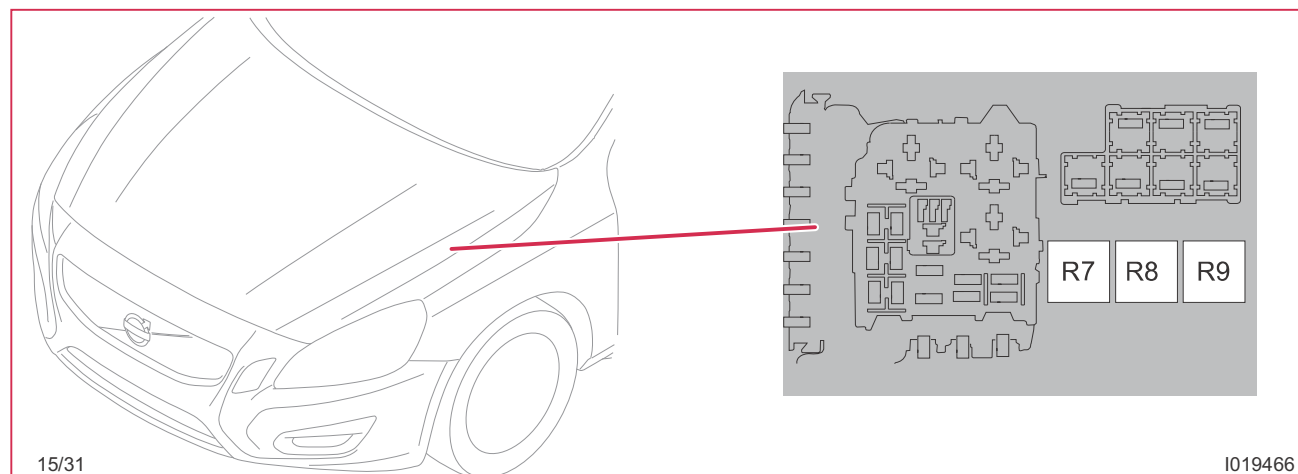

15/31 Distribution box engine compartment

Pos	Relay function	
R7	2/31	Relay, 15-feed
R8	2/17	Relay, horn
R9	2/182	Relay, headlight washer motor

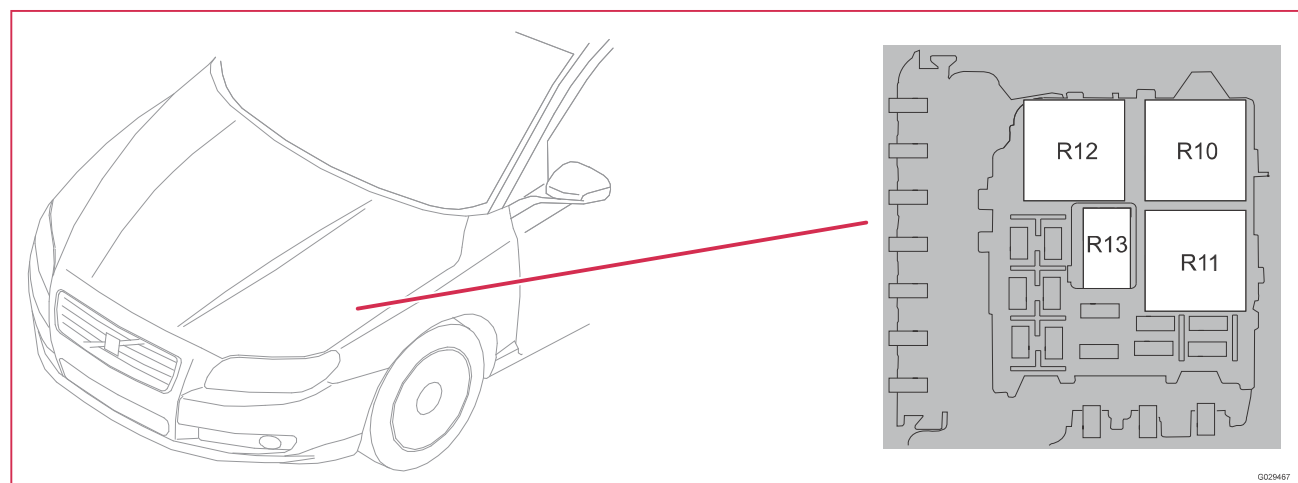


15/31 Distribution box engine compartment

Pos	Relay function	
R10	2/32	Main relay, engine management system
R11	2/14	Relay, glow plug system
R12	2/35	Relay, starter motor
R13	2/22	Relay, climate control system

Relays

Relays in passenger compartment

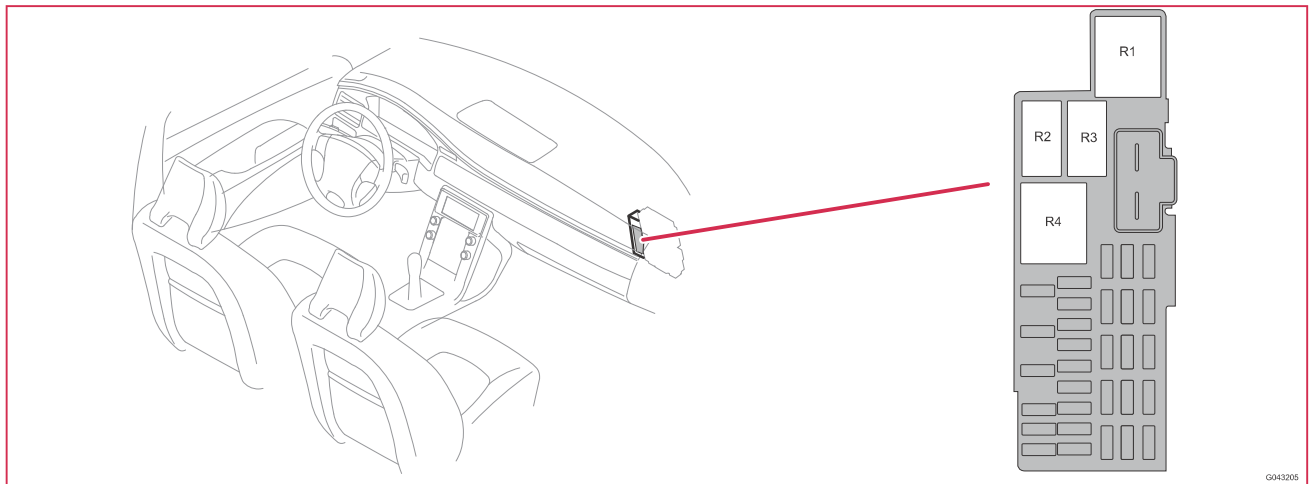


15/36 Distribution box in passenger compartment

Pos	Relay function	
R1	2/88	Relay, 15-feed
R4	2/193	Relay, comfort functions


Relays

Relays in cargo compartment

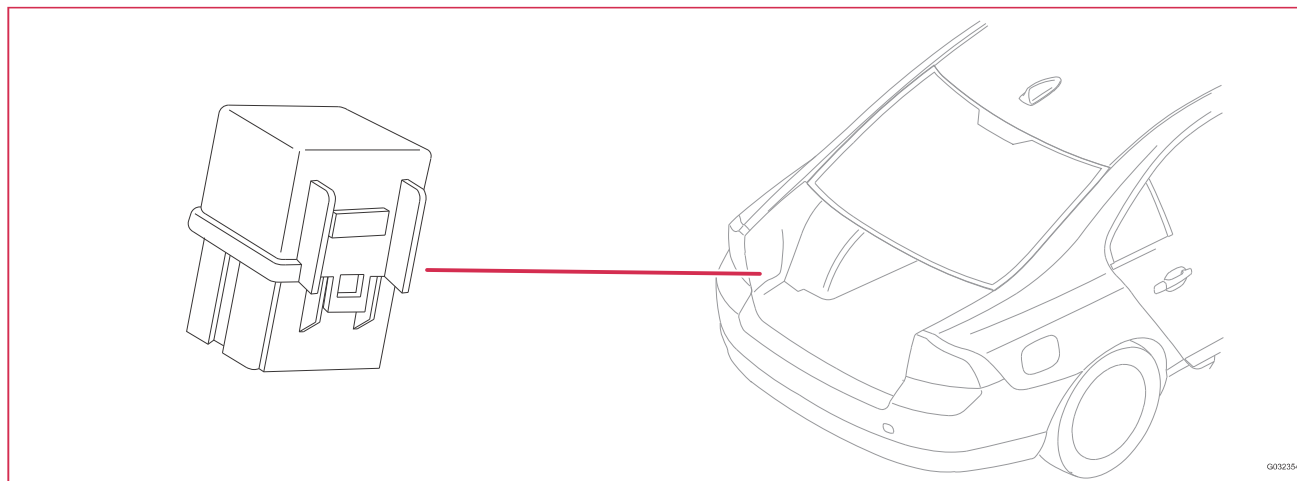

Relay in extra holder cargo compartment

Relay function	
2/141	Refrigeration box relay

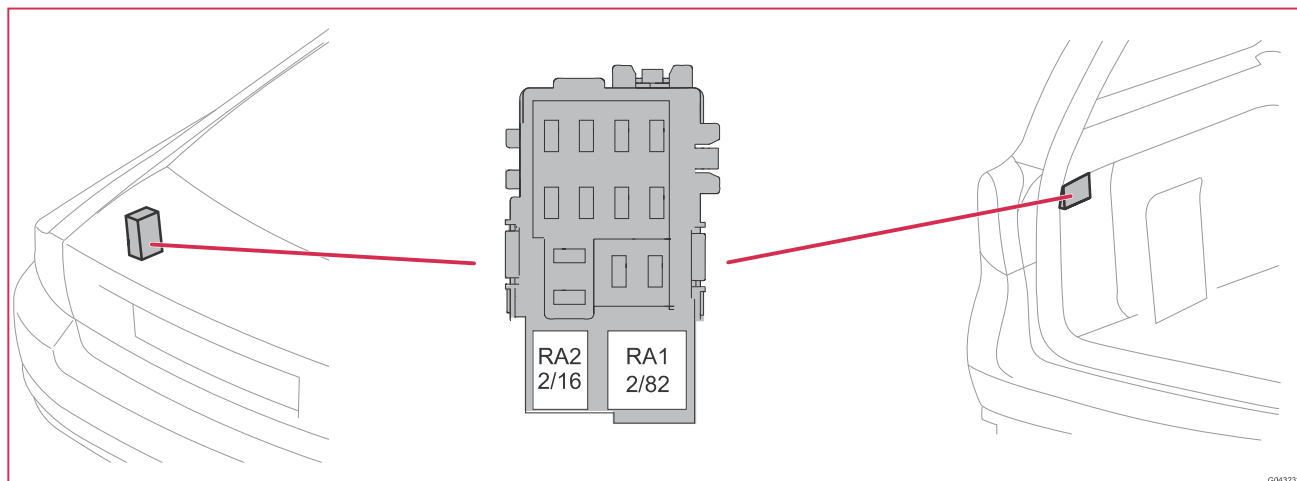

15/32 Distribution box in cargo compartment

Pos	Relay function	
RA1	2/82	Relay, heated rear window
RA2	2/16	Relay, rear window wiper


Relays - soldered

Central Electronic Module (CEM)

4/56 Central Electronic Module (CEM)

Pos	Relay function
K1	Front fog lights
K2	High beam
K3	Reversing lights
K5-A	Washer motor
K5-B	Washer motor
K6-B	Central locking motor, trunk lid
K8	Fuel pump
K9	Steering Column Lock Module (SCL)
K10-A	Seat Heating Module (SHM), interior lighting
K12	Lock motor, fuel filler cover

Ground connections Overview

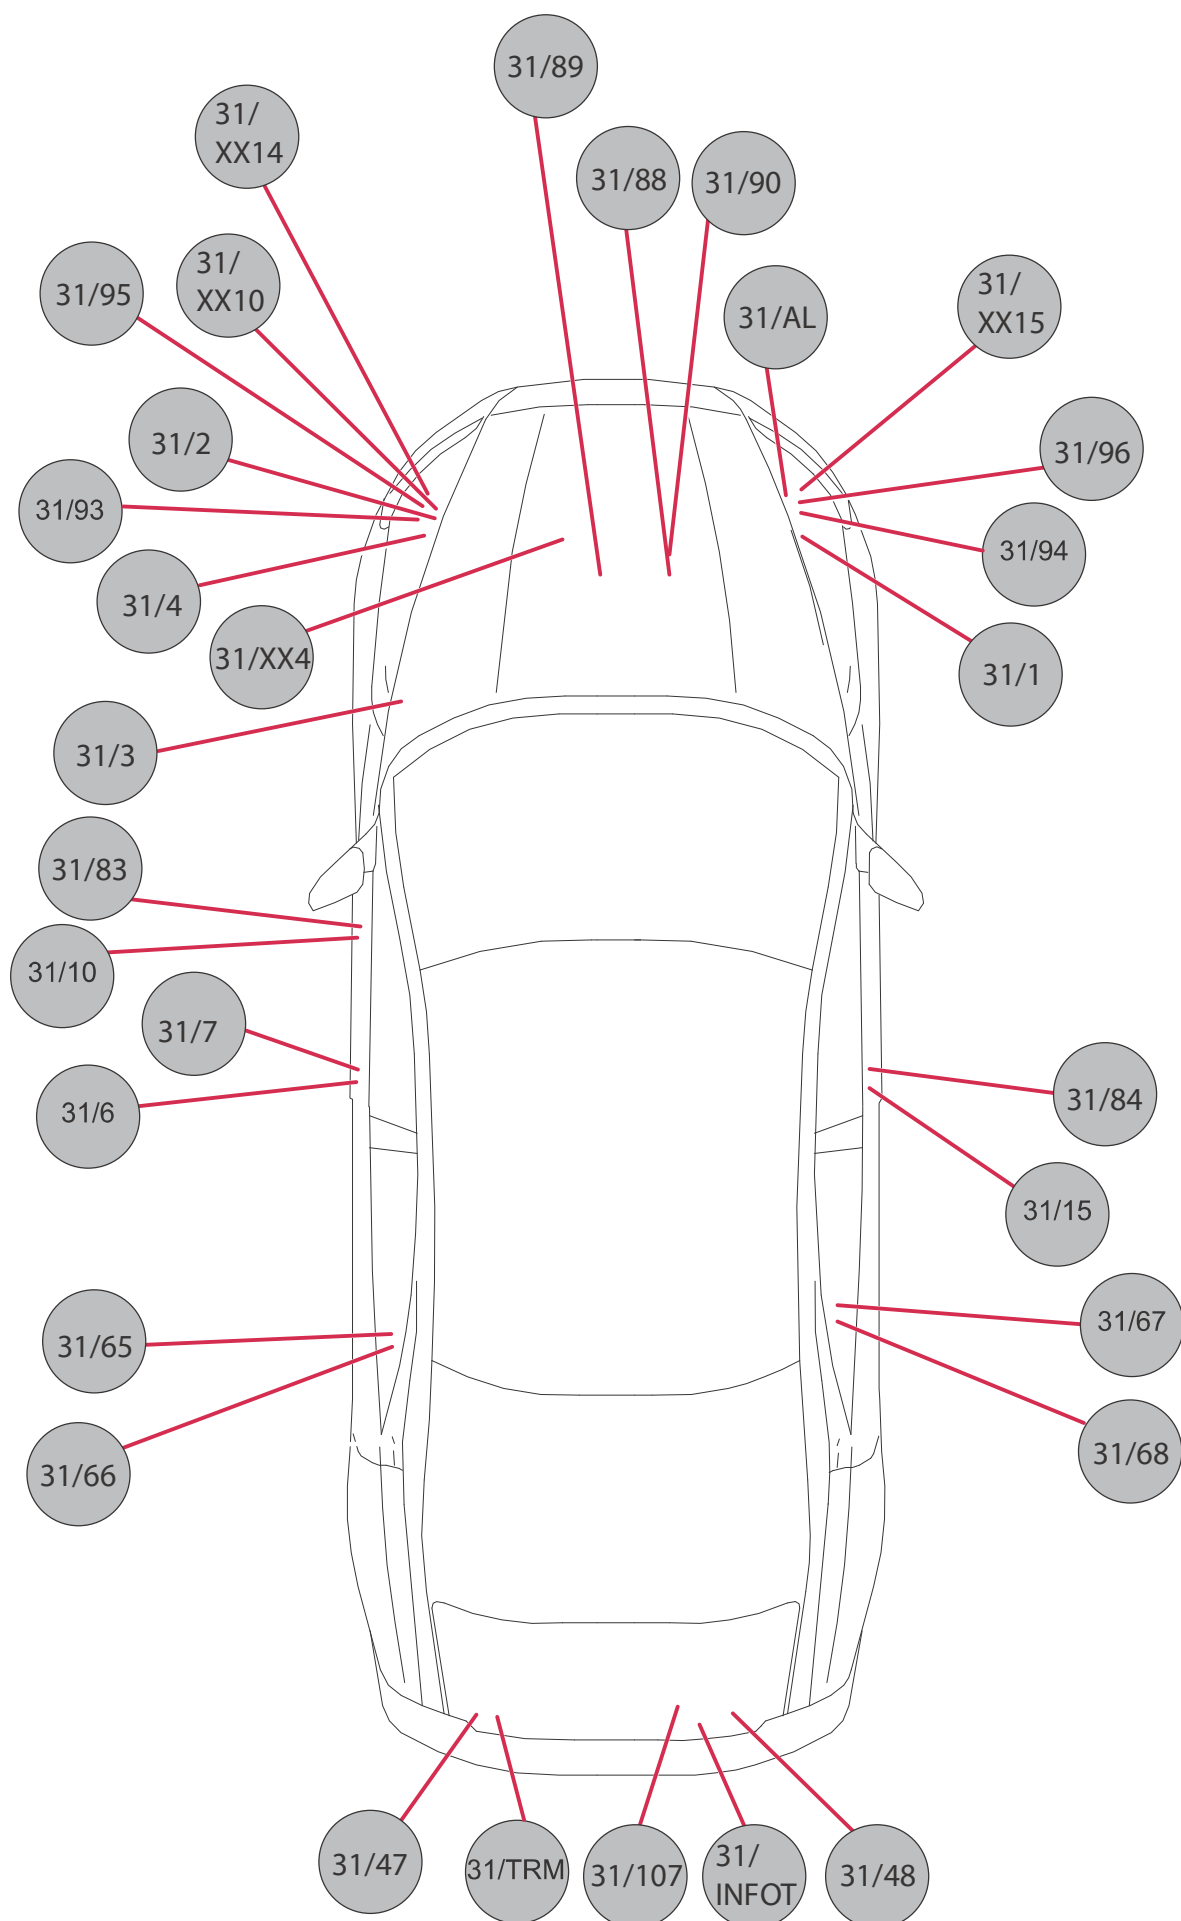

Ground connections

31/1 - 31/6

31/1	Ground connection, PTC
9/42	PTC-element

31/2	LH wheel housing
4/71	Cooling fan control module

31/3	Body, battery
1/1	Battery
7/240	Battery monitoring sensor (BMS)

31/4	Engine
31/XX4	Ground connection

31/6	Bottom rail, left
3/26	Switch unit, power driver's seat, LHD
3/27	Switch unit, power passenger seat, RHD
3/74	Left-hand front door lock unit
3/76	Lock unit, rear left door
3/126	Driver Door Module (DDM), LHD
3/127	Passenger Door Module (PDM), RHD
3/128	Left rear door module (LDM)
3/176	Switch, driver's door power window, LHD
3/273	Lock contact, LH front door
3/275	Lock contact, LH rear door
4/52	Power Seat Module (PSM), LHD
6/36	Lock motor, central locking, LH front door
6/57	Lock motor, central locking, LH rear door
9/1	Front 12V outlet, LHD
9/12	Seat Heating Module (SHM), driver's side, LHD
9/13	Seat Heating Module (SHM), passenger side, RHD
10/72	Front ashtray lighting, LHD
10/161	Lighting mug holder, LHD
10/286	Lighting floor driver's side, LHD
10/287	Lighting floor passenger side, LHD
16/45	Navigation system portable, LHD
16/159	Control module, cellular phone handsfree, RHD
19/4	Analog clock, LHD
27/8	Camera, wide angle front, LHD

Ground connections

31/7 - 31/10

31/7	Bottom rail, left
3/271	Contact, immobilizer, clutch pedal, LHD
3/284	Diagnostic contact, brake light, LHD
3/281	Infotainment Control Module (ICM), RHD
4/56	Central Electronic Module (CEM), RHD
7/51	Accelerator pedal sensor, LHD
7/93	Occupant Weight Sensor (OWS), RHD
7/175	Occupant weight sensor, seat belt reminder
8/51	Igniter side airbag front driver's seat, LHD
8/52	Igniter side airbag front passenger seat, RHD
16/1	Integrated Audio Module (IAM), RHD
16/36	Television module (TVM), RHD
16/109	DVD player/control module. RHD
16/145	Remote Digital Audio Receiver (RDAR), RHD
16/162	Digital Audio Broadcast Module (DABM), RHD

31/10	Bottom rail, left
3/6	Switch, hazard warning flashers
3/117	Switch unit, ceiling light
3/173	Switch, trunk lid/tailgate private lock
4/31	Passenger compartment fan control module
4/33	Sunroof control module
4/76	Remote control unit for garage door opener
4/80	Forward Sensing Module (FSM)
4/102	Steering Column Lock Module (SCL)
4/119	Remote Keyless Entry (RKE)
4/119.2	Remote Receiver Module (RRX)
4/125	Closing velocity module (CVM)
6/48	Damper Motor Module (DMM), recirculation
6/95	Damper Motor Module (DMM), temperature, left side
6/96	Damper Motor Module (DMM), temperature, right side
6/102	Damper Motor Module (DMM), defroster
6/103	Damper Motor Module (DMM), floor/ventilation
7/90	Moisture sensor
7/149	Rain Sensor Module (RSM)
7/159	Air Quality Sensor (AQS)
7/199	Ultrasonic sensor
7/238	Alcolock sensor
8/48	Auto-dimming rearview mirror
10/19	Auxiliary brake light, S80
10/22	Ceiling light
10/29	Glove compartment lighting
10/114	Left-hand vanity mirror lighting
10/115	Right-hand vanity mirror lighting
10/150	Rear reading light
17/13	Data link connector
17/45	Alcolock outlet
26/8	Alcolock charging cradle

Ground connections

31/15 - 31/47

31/15	Bottom rail, right
3/26	Switch unit, power driver's seat, RHD
3/27	Switch unit, power passenger seat, LHD
3/65	Switch, heated rear seat, RHD
3/75	Right-hand front door lock unit
3/77	Lock unit, rear right door
3/126	Driver Door Module (DDM), RHD
3/127	Passenger Door Module (PDM), LHD
3/129	Right rear door module (RDM)
3/156	Gear Selector Module (GSM), RHD
3/176	Switch, driver's door power window, RHD
3/274	Lock contact, RH front door
3/276	Lock contact, RH rear door
4/52	Power Seat Module (PSM), RHD
6/55	Lock motor, central locking, RH front door
6/56	Lock motor, central locking, RH rear door
8/134	Solenoid, reverse interlock, manual
9/1	Front 12 V outlet, RHD
9/12	Seat Heating Module (SHM), driver's side, RHD
9/13	Seat Heating Module (SHM), passenger side, LHD
9/25	Rear 12 V outlet, RHD
10/72	Front ashtray lighting, RHD
10/161	Lighting mug holder, RHD
10/286	Lighting floor driver's side, RHD
10/287	Lighting floor passenger side, RHD
16/45	Navigation system portable, RHD
16/181	Rear headphone sockets, RHD
19/4	Analog clock, RHD
27/8	Camera, wide angle front, RHD

31/47	Rear bumper abutment, left
2/16	Rear window wiper relay, V70
3/35	Switch, handle, trunk lid/tailgate
3/78	Lock unit, tailgate V70
4/110	Trailer Module (TRM), S80
4/115	Park Brake Module (PBM)
4/116	Power Operated Tailgate Module (POT), V70
6/8	Lock unit, trunk lid/tailgate
6/32	Rear window wiper motor, V70
6/149	Tailgate closing motor, V70
9/2	Heated rear window, V70
10/3	License plate lighting
10/17	Lamp housing, rear right V70
10/18	Lamp housing, rear left
10/19	Auxiliary brake light V70
15/32	Distribution box in cargo compartment

Ground connections

31/48 - 31/68

31/48	Rear bumper abutment, right
2/141	Refrigeration box relay
4/93	Keyless Vehicle Module (KVM)
6/37	Lock motor, fuel filler cover
9/24	Refrigeration box
10/17	Lamp housing, rear right
10/276	Lighting center armrest rear 1
10/277	Lighting center armrest rear 2
10/280	Lighting cooler compartment left
10/281	Lighting cooler compartment right
17/19	12V outlet, cargo compartment

31/65	Rear seat riser, left-hand side 1
3/35	Switch, handle, trunk lid/tailgate
4/82	Differential Electronic Module (DEM)
4/110	Trailer Module (TRM), V70
6/8	Lock unit, trunk lid/tailgate
6/141	Motor folding head restraint left
8/59	Rear left head restraint solenoid, S80
9/14	Control module, rear left seat heater
10/3	License plate lighting

31/66	Rear seat riser, left-hand side 2
4/83	Fuel pump control module
6/33	Fuel pump

31/67	Rear seat riser, RH side 1
4/84	Suspension Module (SUM)
4/86	Parking Assistance Module (PAM)
6/142	Motor folding head restraint right
8/60	Rear right head restraint solenoid, S80
9/15	Control module, rear right seat heater

31/68	Rear seat riser, RH side 2
6/35	Fuel pump, auxiliary heater
9/38	Electrically heated fuel filter

Ground connections

31/83 - 31/88

31/83	Bottom rail, left
3/4	Steering wheel switch left (SWSL)
3/37	Contact horn
3/111	Light Switch Module (LSM)
3/130	Steering Wheel Module (SWM)
3/131	Steering wheel switch right (SWSR)
3/132	Start Control Module (SCU)
3/272	Parking brake contact
3/281	Infotainment Control Module (ICM)
4/6	Climate Control Module (CCM)
4/124	Accessory USB unit (AUU)
5/1	Driver Information Module (DIM)
9/42	PTC-element
10/1	Lamp housing, front left
10/2	Lamp housing, front right
16/1	Integrated Audio Module (IAM)
16/60	Phone Module (PHM)
16/65	Immobilizer Antenna Unit (IAU)
17/13	Data link connector

31/84	Bottom rail, right
3/271	Contact, immobilizer, clutch pedal, RHD
3/281	Infotainment control module (ICM), LHD
3/284	Diagnostic contact, brake light, RHD
4/56	Central Electronic Module (CEM), LHD
7/51	Accelerator pedal sensor, RHD
7/93	Occupant Weight Sensor (OWS), LHD
7/175	Weight sensor passenger seat, seat belt reminder, RHD
8/51	Igniter side airbag front driver's seat, RHD
16/1	Integrated Audio Module (IAM)
16/36	Television module (TVM)
16/109	DVD player/control module
16/123	Auxiliary equipment input (AUX)
16/145	Remote Digital Audio Receiver (RDAR)
16/162	Digital Audio Broadcast Module (DABM)

31/88	Engine ignition coils
20/3	Spark plug with ignition coil, 4-Cyl. Turbo Spark plug with ignition coil, 5-Cyl. Turbo Spark plug with ignition coil, 6-Cyl.
20/4	Spark plug with ignition coil, 4-Cyl. Turbo Spark plug with ignition coil, 5-Cyl. Turbo Spark plug with ignition coil, 6-Cyl.
20/5	Spark plug with ignition coil, 4-Cyl. Turbo Spark plug with ignition coil, 6-Cyl. Turbo
20/6	Spark plug with ignition coil, 4-Cyl. Turbo Spark plug with ignition coil, 6-Cyl. Turbo

Ground connections

31/89 - 31/107

31/89	Engine ignition coils
20/5	Spark plug with ignition coil, 5-Cyl. Turbo Spark plug with ignition coil, 6-Cyl.
20/6	Spark plug with ignition coil, 5-Cyl. Turbo Spark plug with ignition coil, 6-Cyl.
20/7	Spark plug with ignition coil, 5-Cyl. Turbo Spark plug with ignition coil, 6-Cyl. Spark plug with ignition coil, 6-Cyl. Turbo
20/8	Spark plug with ignition coil, 6-Cyl. Spark plug with ignition coil, 6-Cyl. Turbo
20/16	Capacitor, 6-Cyl.

31/90	Engine ignition coils
20/3	Spark plug with ignition coil, 6-Cyl. Turbo
20/4	Spark plug with ignition coil, 6-Cyl. Turbo
20/16	Capacitor, 6-Cyl. Turbo

31/93	LH wheel housing 2
4/56	Central Electronic Module (CEM), RHD
4/99	Speed dependent power steering control module
6/38	Left-hand headlight level adjustment motor
6/104	Washer motor headlights
7/4	Brake fluid level sensor
7/5	Washer fluid level sensor
9/43	Heated windshield washer nozzle, left
9/44	Heated windshield washer nozzle, right
10/1	Lamp housing, front left
10/5	Fog light, front left
16/35	Siren Control Module (SCM)

31/94	RH wheel housing 2
10/2	Lamp housing, front right
10/6	Fog light, front right
16/10	Horn 1
16/11	Horn 2

31/95	LH wheel housing 3
4/56	Central Electronic Module (CEM), RHD
6/164	Electrical power steering module (EHPS)

31/96	RH wheel housing 3
3/62	Hood alarm contact
4/56	Central Electronic Module (CEM), LHD
6/39	Right-hand headlight level adjustment motor
7/73	Coolant level sensor
7/203	Forward-aimed radar (FLR)
10/2	Lamp housing, front right

31/107	Roof, rear
4/120	Parking Assistance Camera module (PAC)

Ground connections

31/131 - 31/TRM

31/131 Start/stop function	
1/2	Secondary battery

31/XX4 Engine - Body	
31/4	Ground connection

31/XX10 LH wheel housing 1	
3/10	Reversing light contact
3/282	Switch indicator 1st gear, I5D
4/28	Transmission Control Module (TCM)
4/46	Engine Control Module (ECM)
4/109	Glow plug control module
6/73	Coolant pump
6/139	Upper actuating motor, intake manifold
6/140	Lower actuating motor, intake manifold
6/179	Electric oil pump
7/200	Sensor, coolant temperature
7/243	Gear position sensor neutral position
8/3	Electromagnetic clutch, climate control system, 4-Cyl.
8/78	Pressure monitor power steering, 4-Cyl. Turbo
9/32	PTC resistor, crankcase ventilation
9/38	Electrically heated fuel filter, 4-Cyl. Diesel
20/3-6	Spark plug with ignition coil, 4-Cyl. Turbo

31/XX14 LH wheel housing 3 (ABS)	
4/16	Brake Control Module (BCM)

31/XX15 RH wheel housing	
4/7	Combustion Preheater Module (CPM)
4/106	Control module, remote parking heater start
6/1	Wiper Motor Module (WMM)

31/TRM Accessories	
2/141	Refrigeration box relay
4/131	Control module back massage left
4/133	Control module back massage right
9/24	Refrigeration box
10/276	Lighting center armrest rear 1
10/277	Lighting center armrest rear 2
10/280	Lighting cooler compartment left
10/281	Lighting cooler compartment right
17/19	12 V outlet, cargo compartment
17/37	4-pin outlet, tow hitch cable harness
17/38	7-pin outlet, tow hitch cable harness
17/39	13-pin outlet, tow hitch cable harness


Ground connections

31/INFOT - 31/AL

31/INFOT Infotainment	
16/105	Audio module (AUD)
16/159	Control module, cellular phone handsfree, LHD

31/AL Auxiliary lights	
10/65	Auxiliary light, front right
10/69	Auxiliary light, front left

**Control modules
Overview locations**

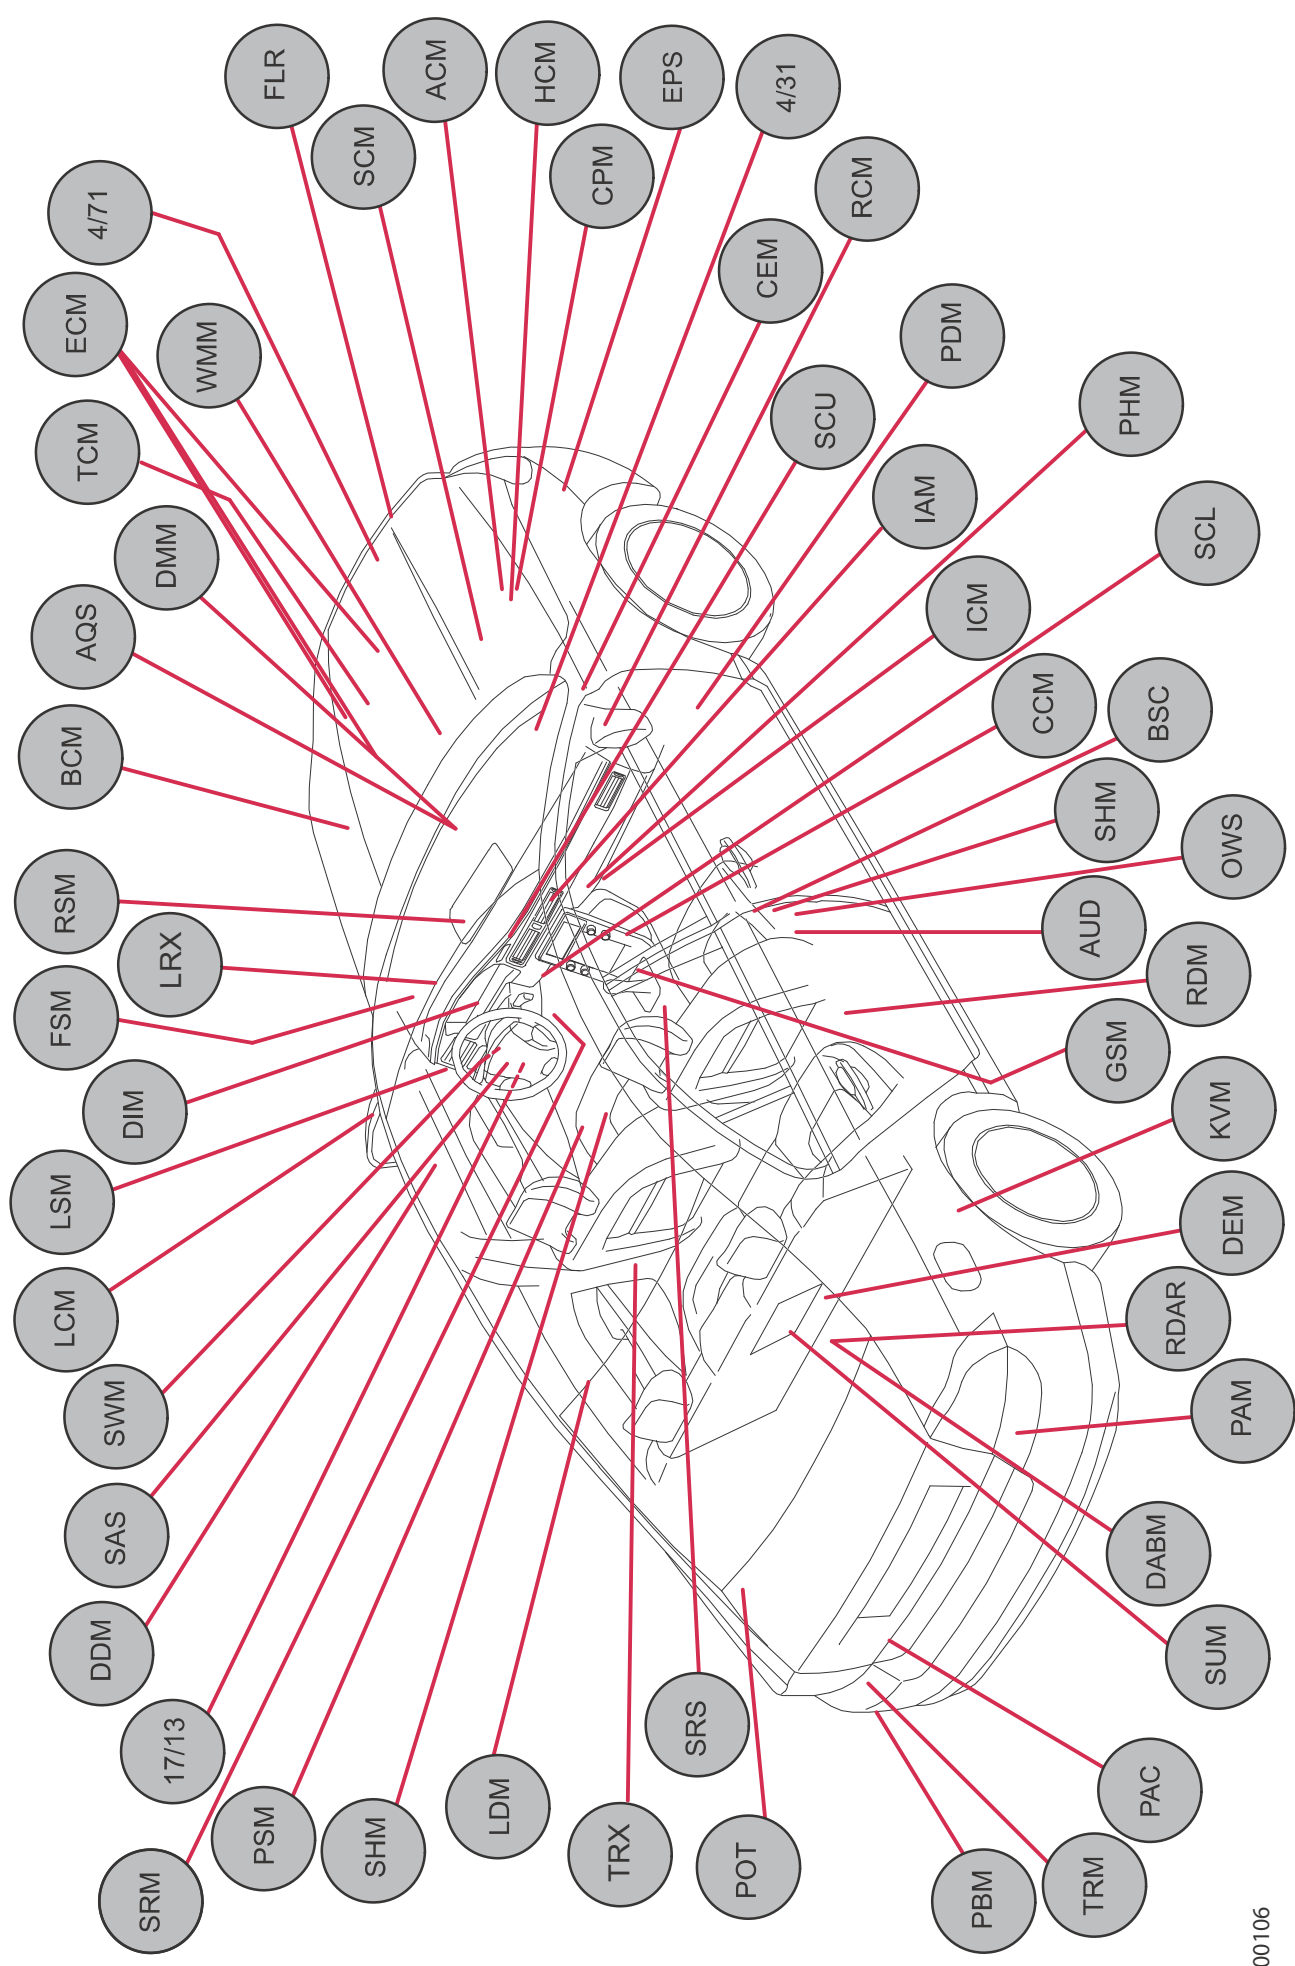

D00106

Control modules

Overview designations


Unit	Designation		Unit	Designation	
ACM	6/26	Alternator Control Module (ACM)	PBM	4/115	Park Brake Module (PBM)
AQS	7/159	Air Quality Sensor (AQS)	PDM	3/127	Passenger Door Module (PDM)
AUD	16/105	Audio module (AUD)	PHM	16/60	Phone Module (PHM)
BCM	4/16	Brake Control Module (BCM)	PSM	4/52	Power Seat Module (PSM)
CCM	4/6	Climate control module (CCM)	RCM	27/4	Right Camera Module (RCM)
CEM	4/56	Central Electronic Module (CEM)	RDAR	16/145	Remote Digital Audio Receiver (RDAR)
CPM	4/7	Combustion Preheater Module (CPM)	RDM	3/129	Right rear door module (RDM)
CVM	4/125	Closing velocity module (CVM)	TRX	4/119	Remote Keyless Entry (TRX)
DABM	16/162	Digital Audio Broadcast Module (DABM)	LRX	4/119.2	Signal receiver (LRX)
DDM	3/126	Driver Door Module (DDM)	RSM	7/149	Rain Sensor Module (RSM)
DEM	4/82	Differential Electronic Module (DEM)	SAS	4/68	Steering Wheel Angle Sensor Module (SAS)
DIM	5/1	Driver Information Module (DIM)	SCL	4/102	Steering Column Lock Module (SCL)
DMM		Damper Motor Module (DMM)	SCM	16/35	Siren Control Module (SCM)
ECM	4/46	Engine Control Module (ECM)	SHM	9/12	Seat Heating Module (SHM) driver's side
FLR	7/203	Forward-aimed radar (FLR)		9/13	Seat Heating Module (SHM) passenger side
FSM	4/80	Forward Sensing Module (FSM)	SRS	4/9	Supplemental restraint system module (SRS)
GSM	3/156	Gear Selector Module (GSM)	SUM	4/84	Suspension Module (SUM)
IAM	16/1	Integrated Audio Module (IAM)	SWM	3/130	Steering Wheel Module (SWM)
ICM	3/281	Infotainment Control Module (ICM)	TCM	4/28	Transmission Control Module (TCM)
KVM	4/93	Keyless Vehicle Module (KVM)	TRM	4/110	Trailer Module (TRM)
LCM	27/3	Left Camera Module (LCM)	WMM	6/1	Wiper Motor Module (WMM)
LDM	3/128	Left rear door module (LDM)	4/31	4/31	Passenger compartment fan control module
LSM	3/111	Light Switch Module (LSM)	4/33	4/33	Sunroof control module
OWS	7/93	Occupant Weight Sensor (OWS)	4/71	4/71	Cooling fan control module
PAC	4/120	Parking Assistance Camera module (PAC)	17/13	17/13	Data link connector
PAM	4/86	Parking Assistance Module (PAM)			

Central Electronic Module (CEM) 1:3



Control modules


Central Electronic Module (CEM) 2:3

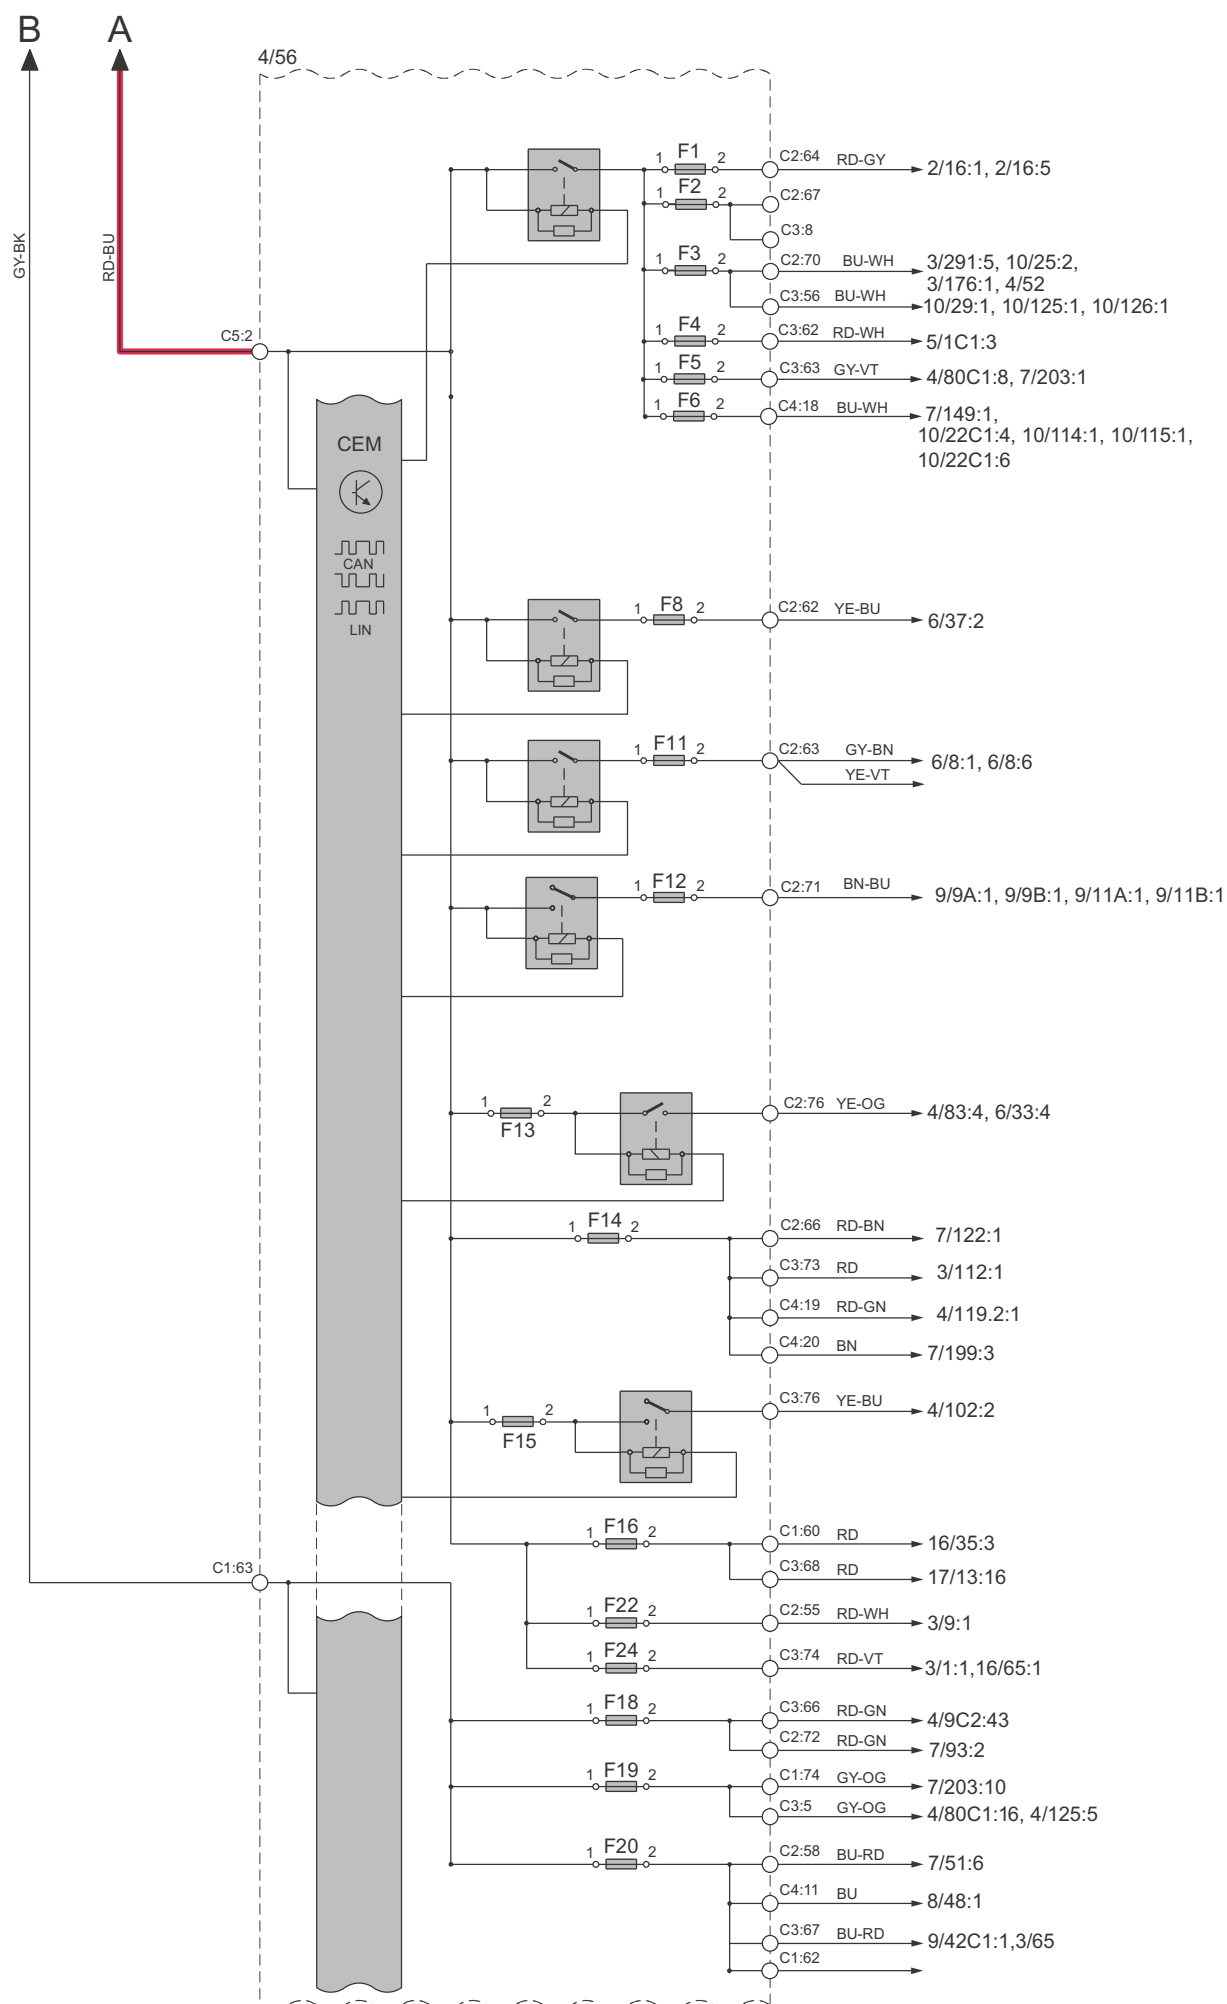

N00008


Control modules

Central Electronic Module (CEM) 3:3

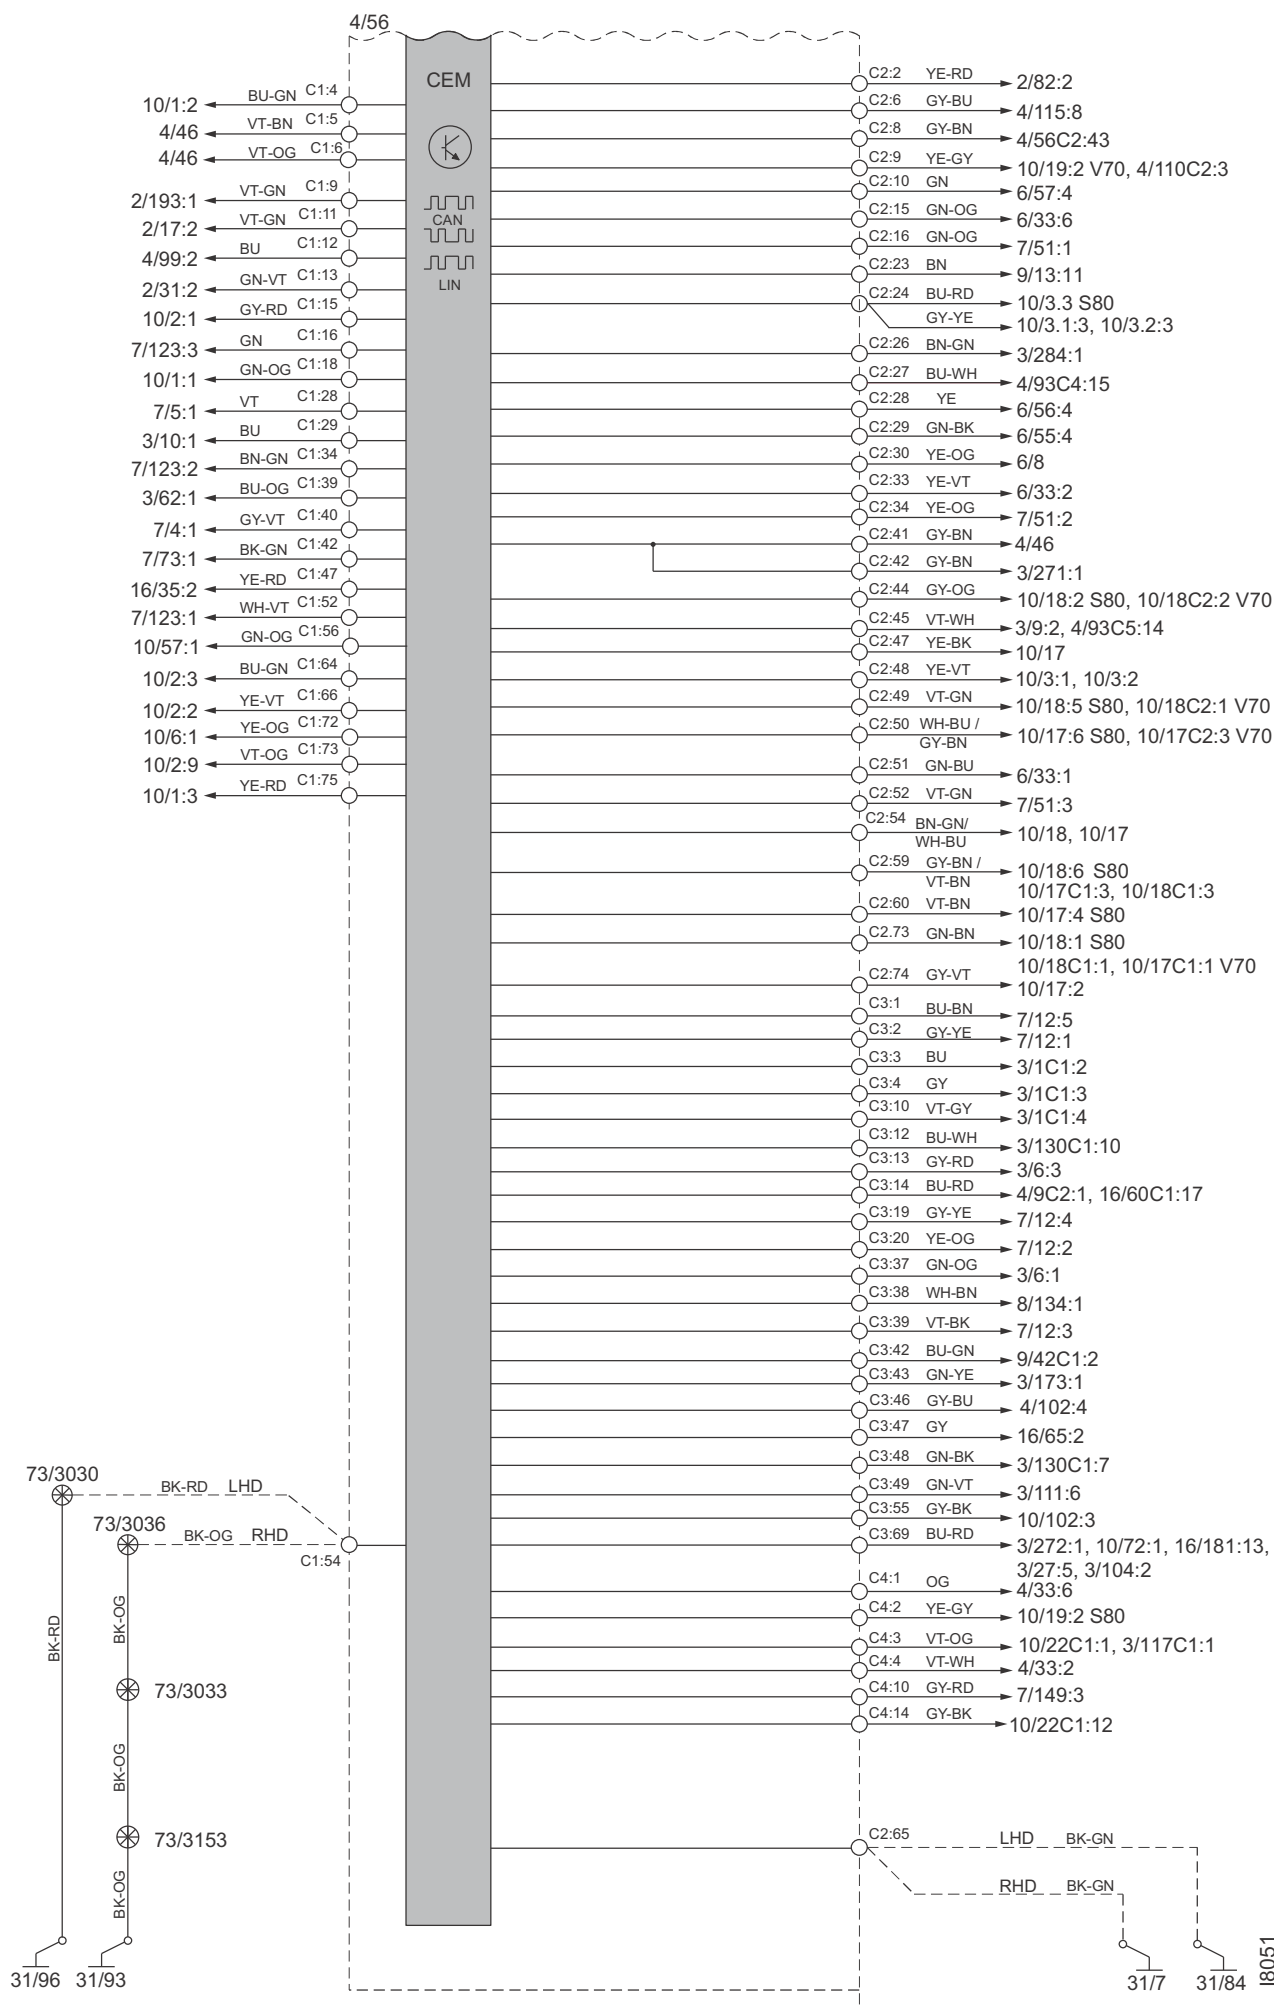


Control modules

Data communication high speed CAN

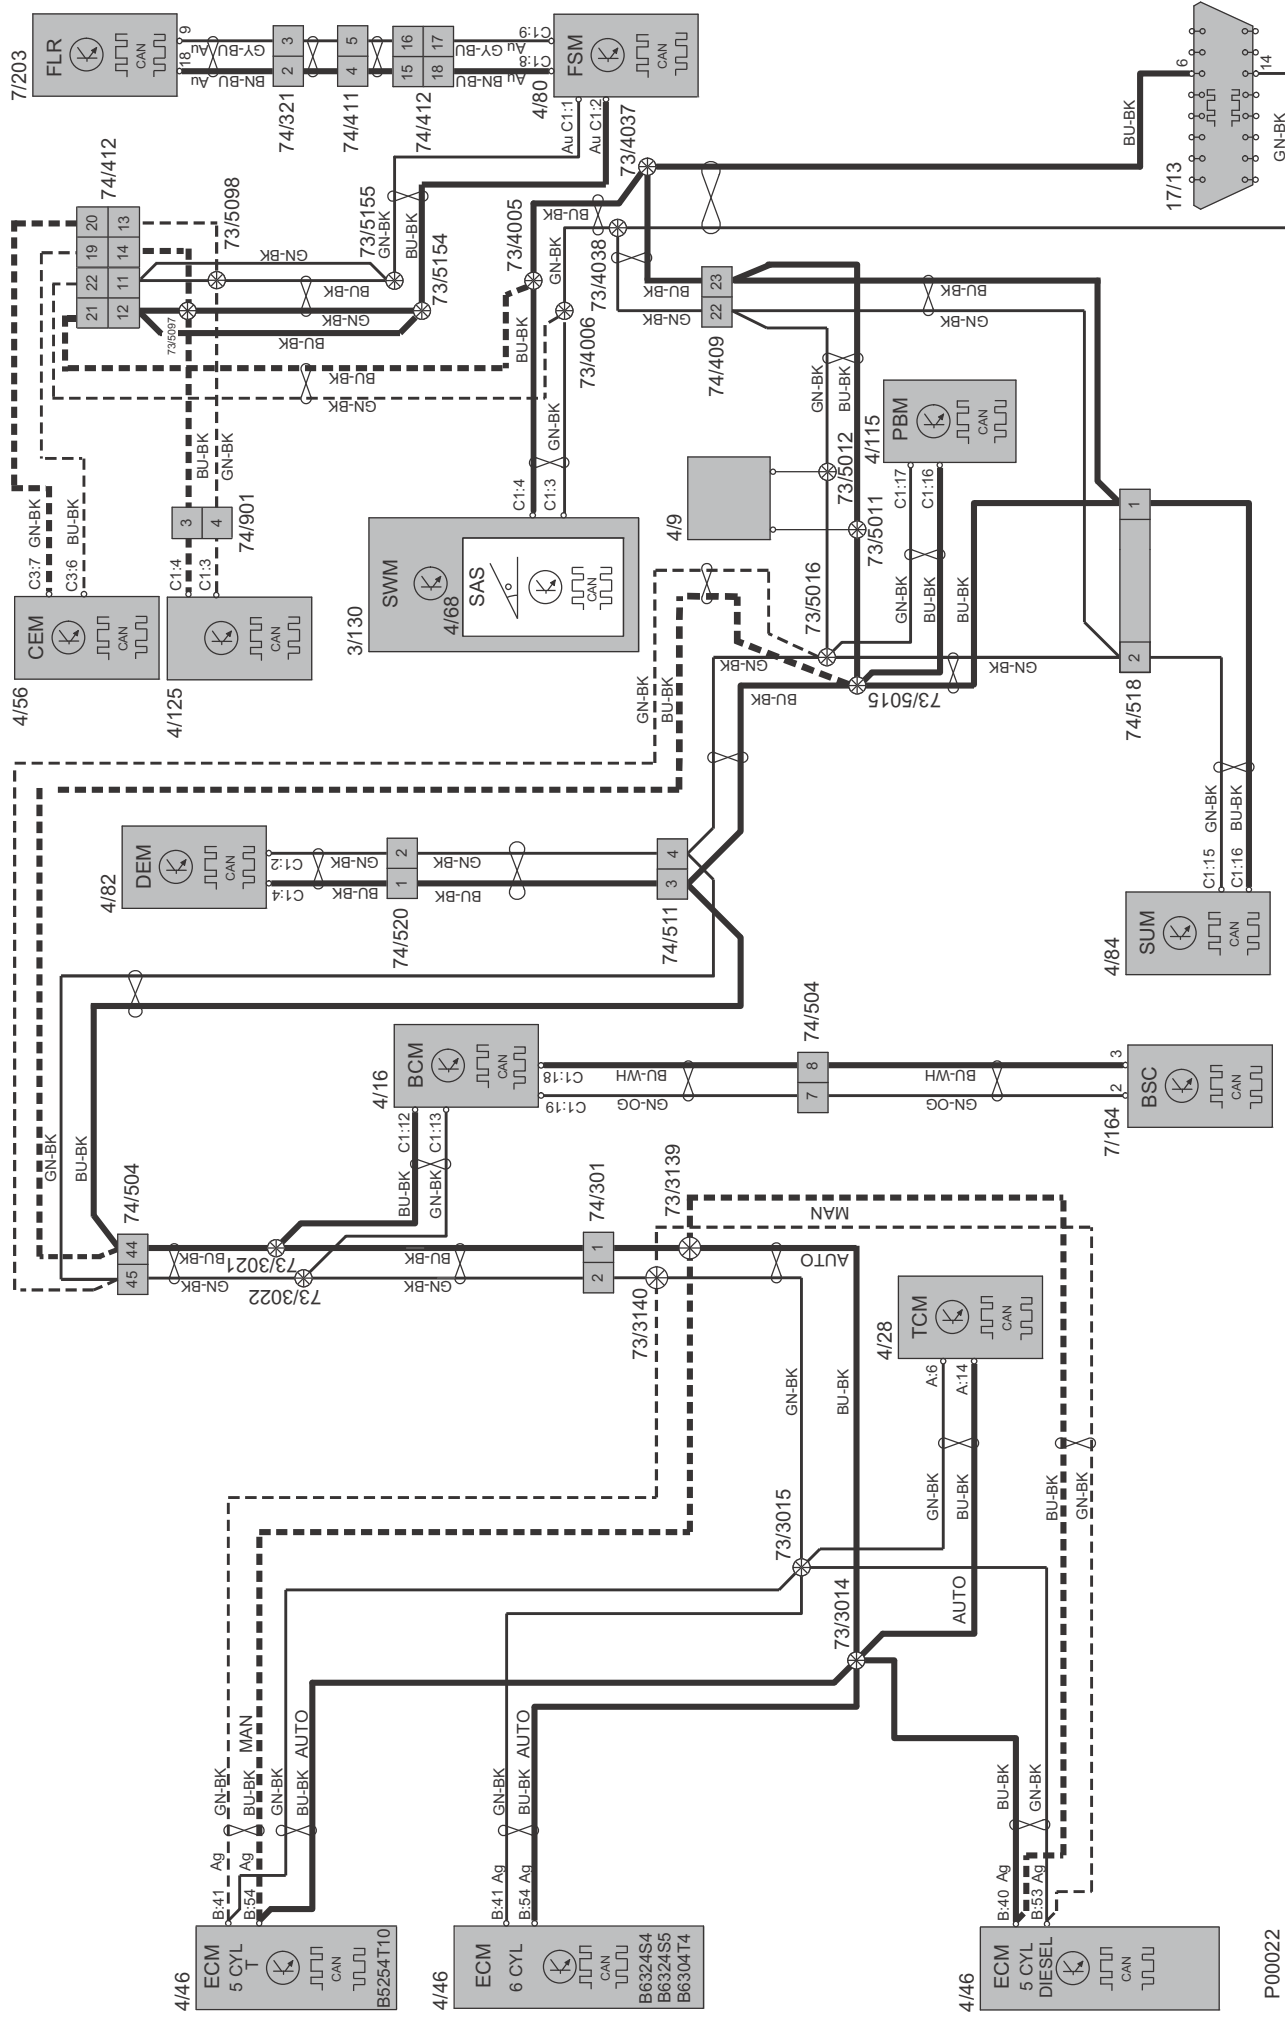


P00022

Control modules
Data communication high speed CAN, 4-Cyl.

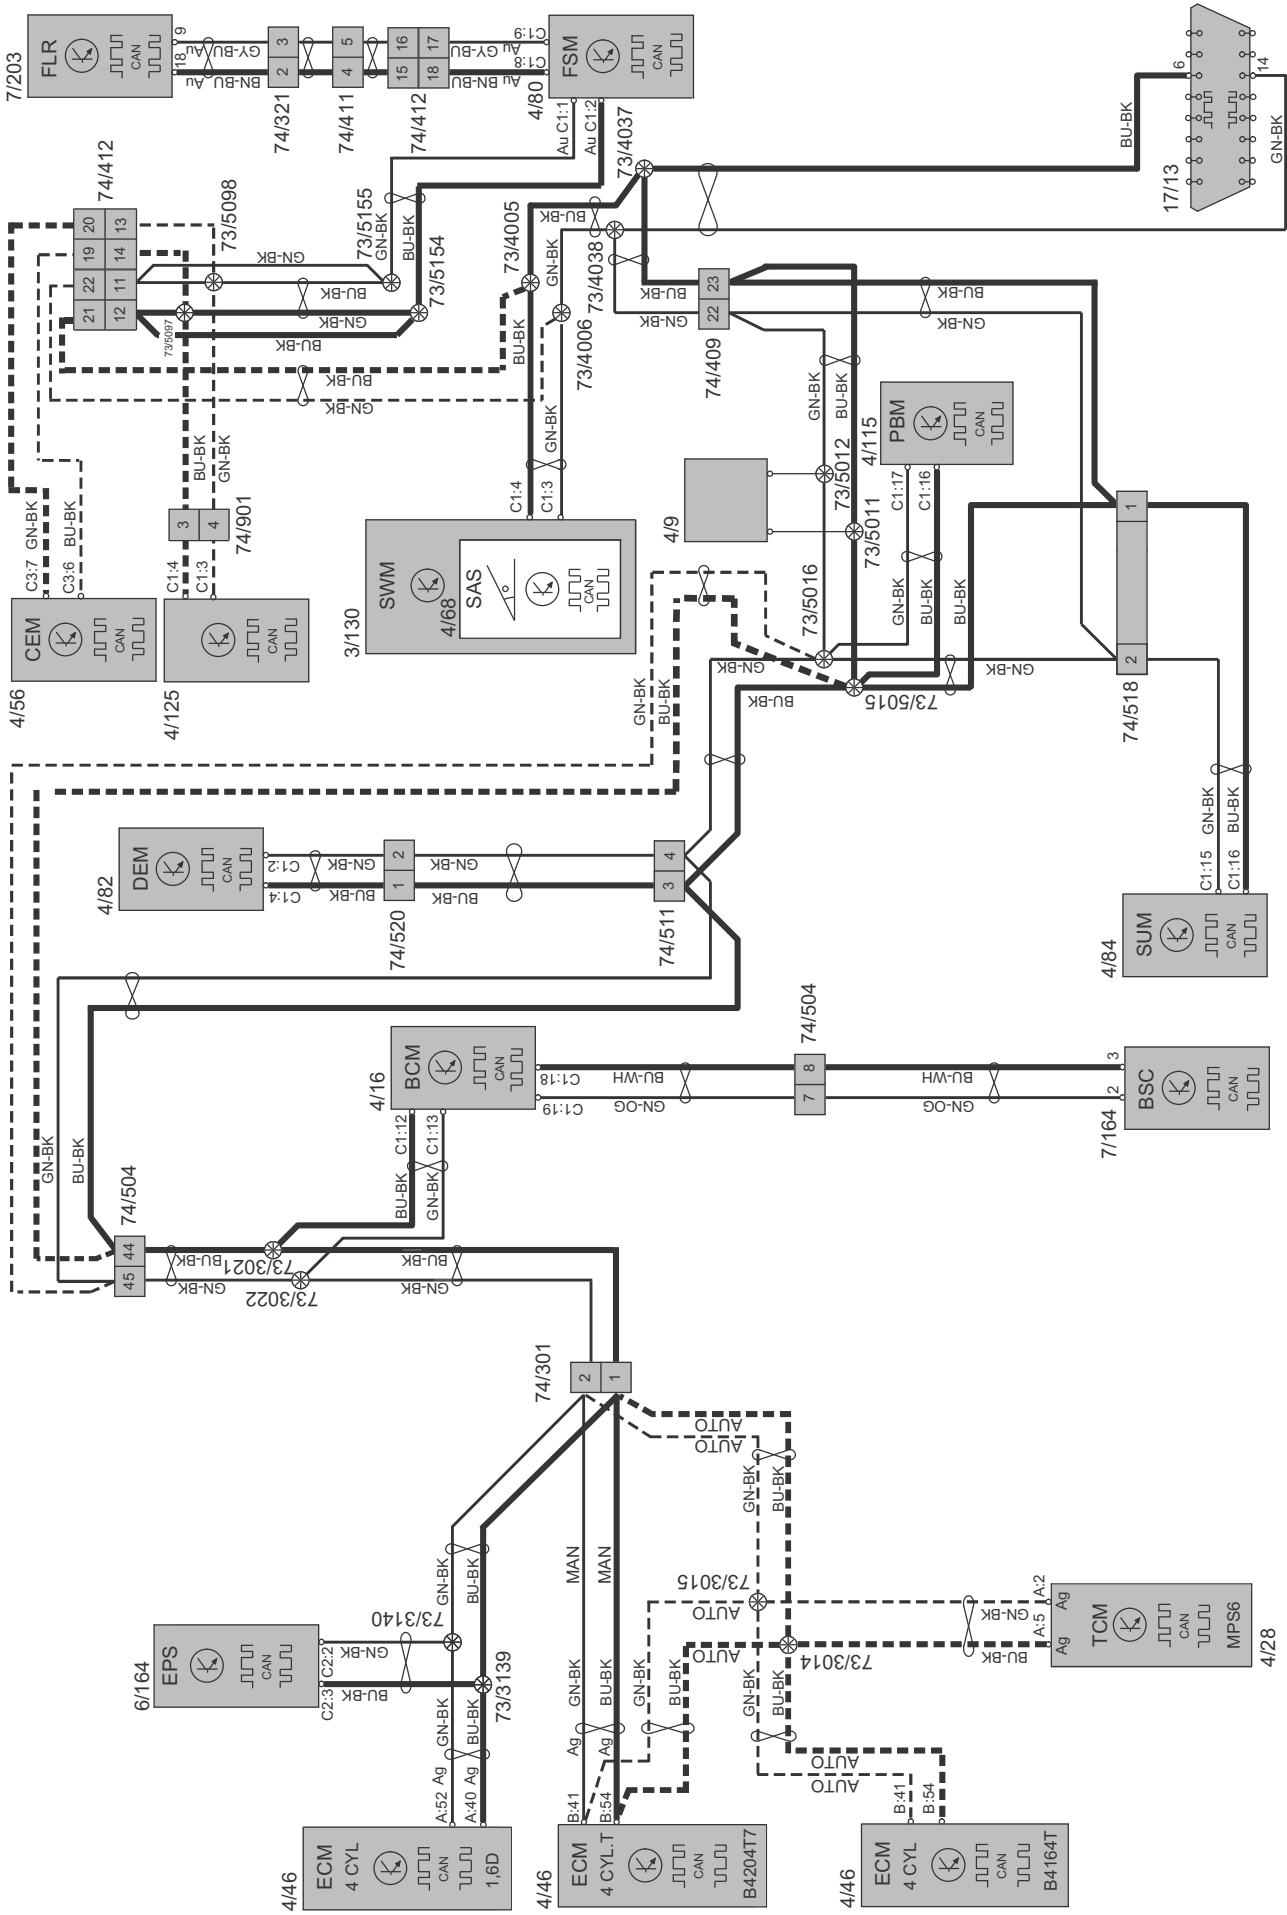

Control modules


Data communication intermediate speed CAN, LHD

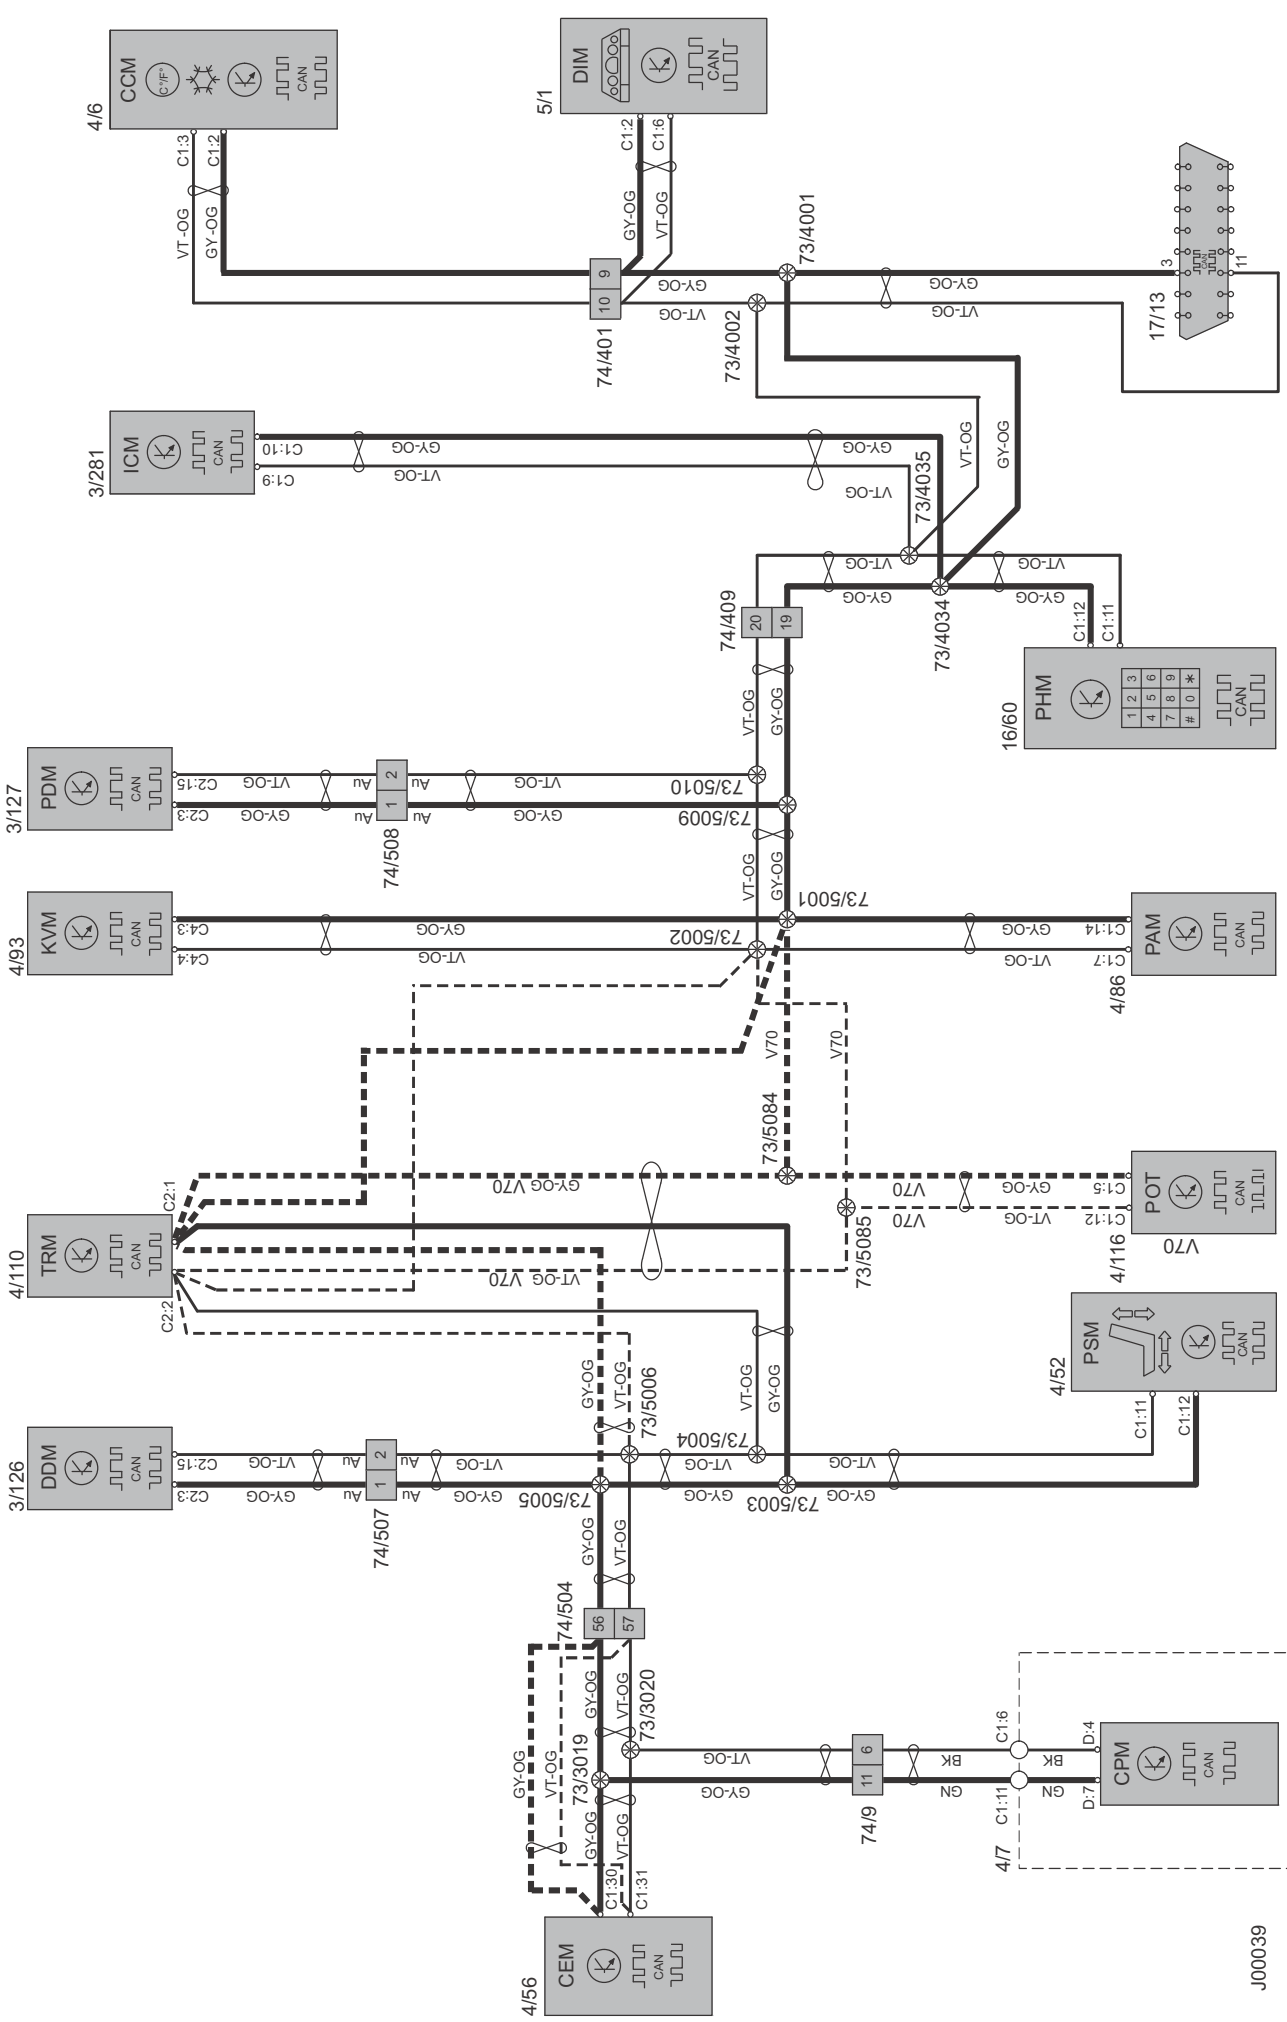

J00039

Control modules


Data communication intermediate speed CAN, RHD

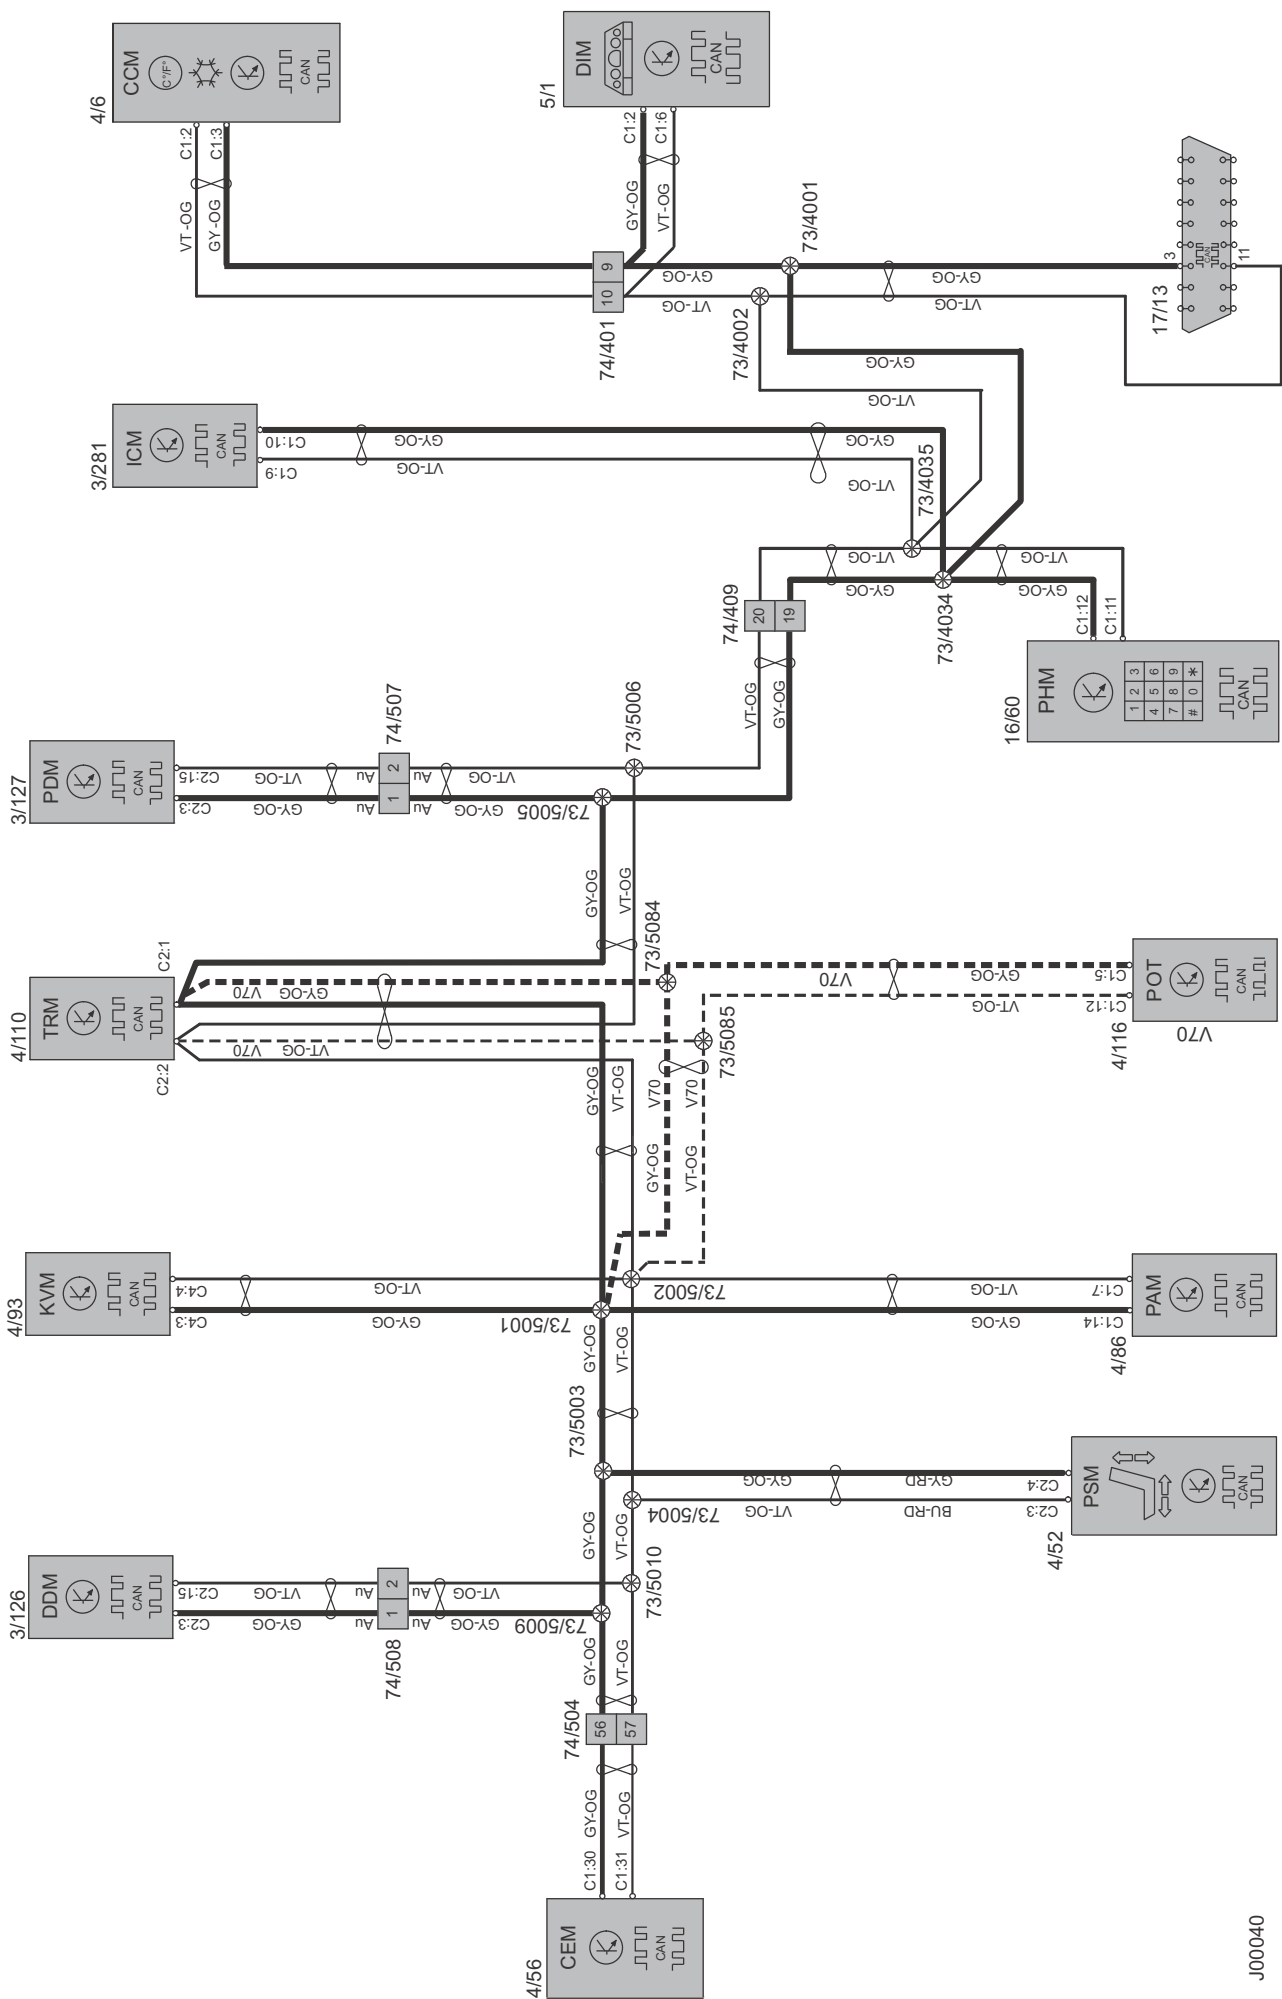

J00040


Control modules

Data communication MOST

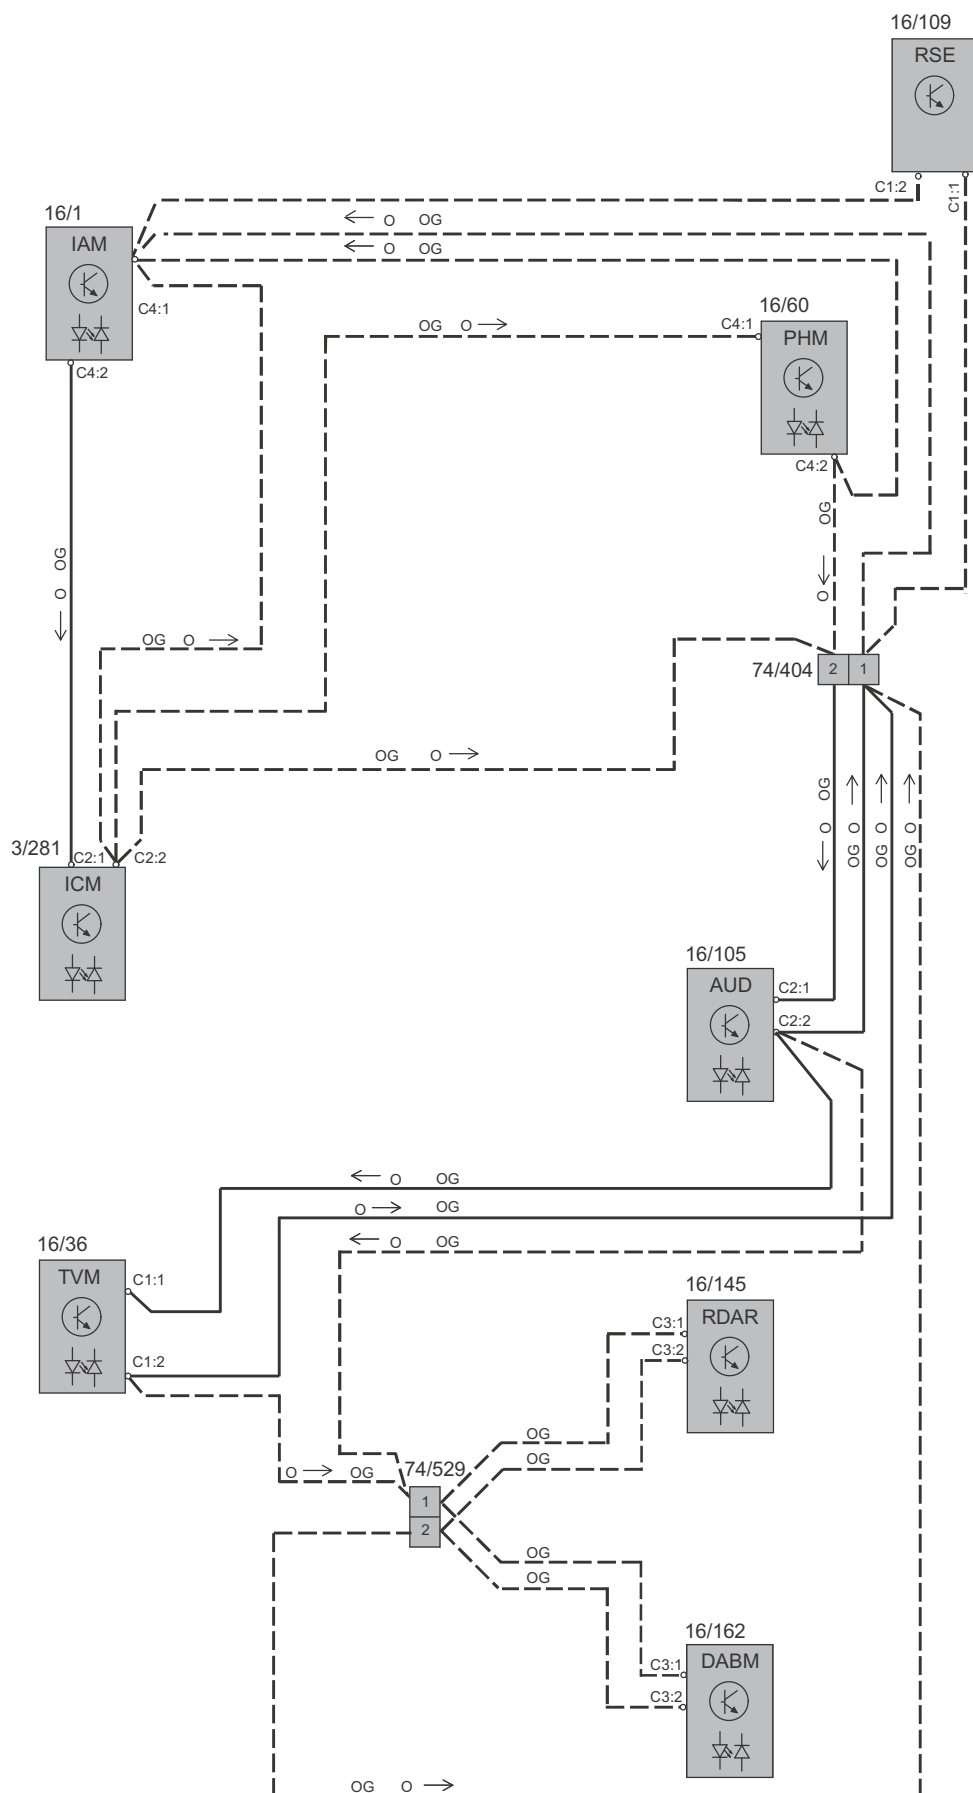

Control modules


Data communication, LIN 1:2

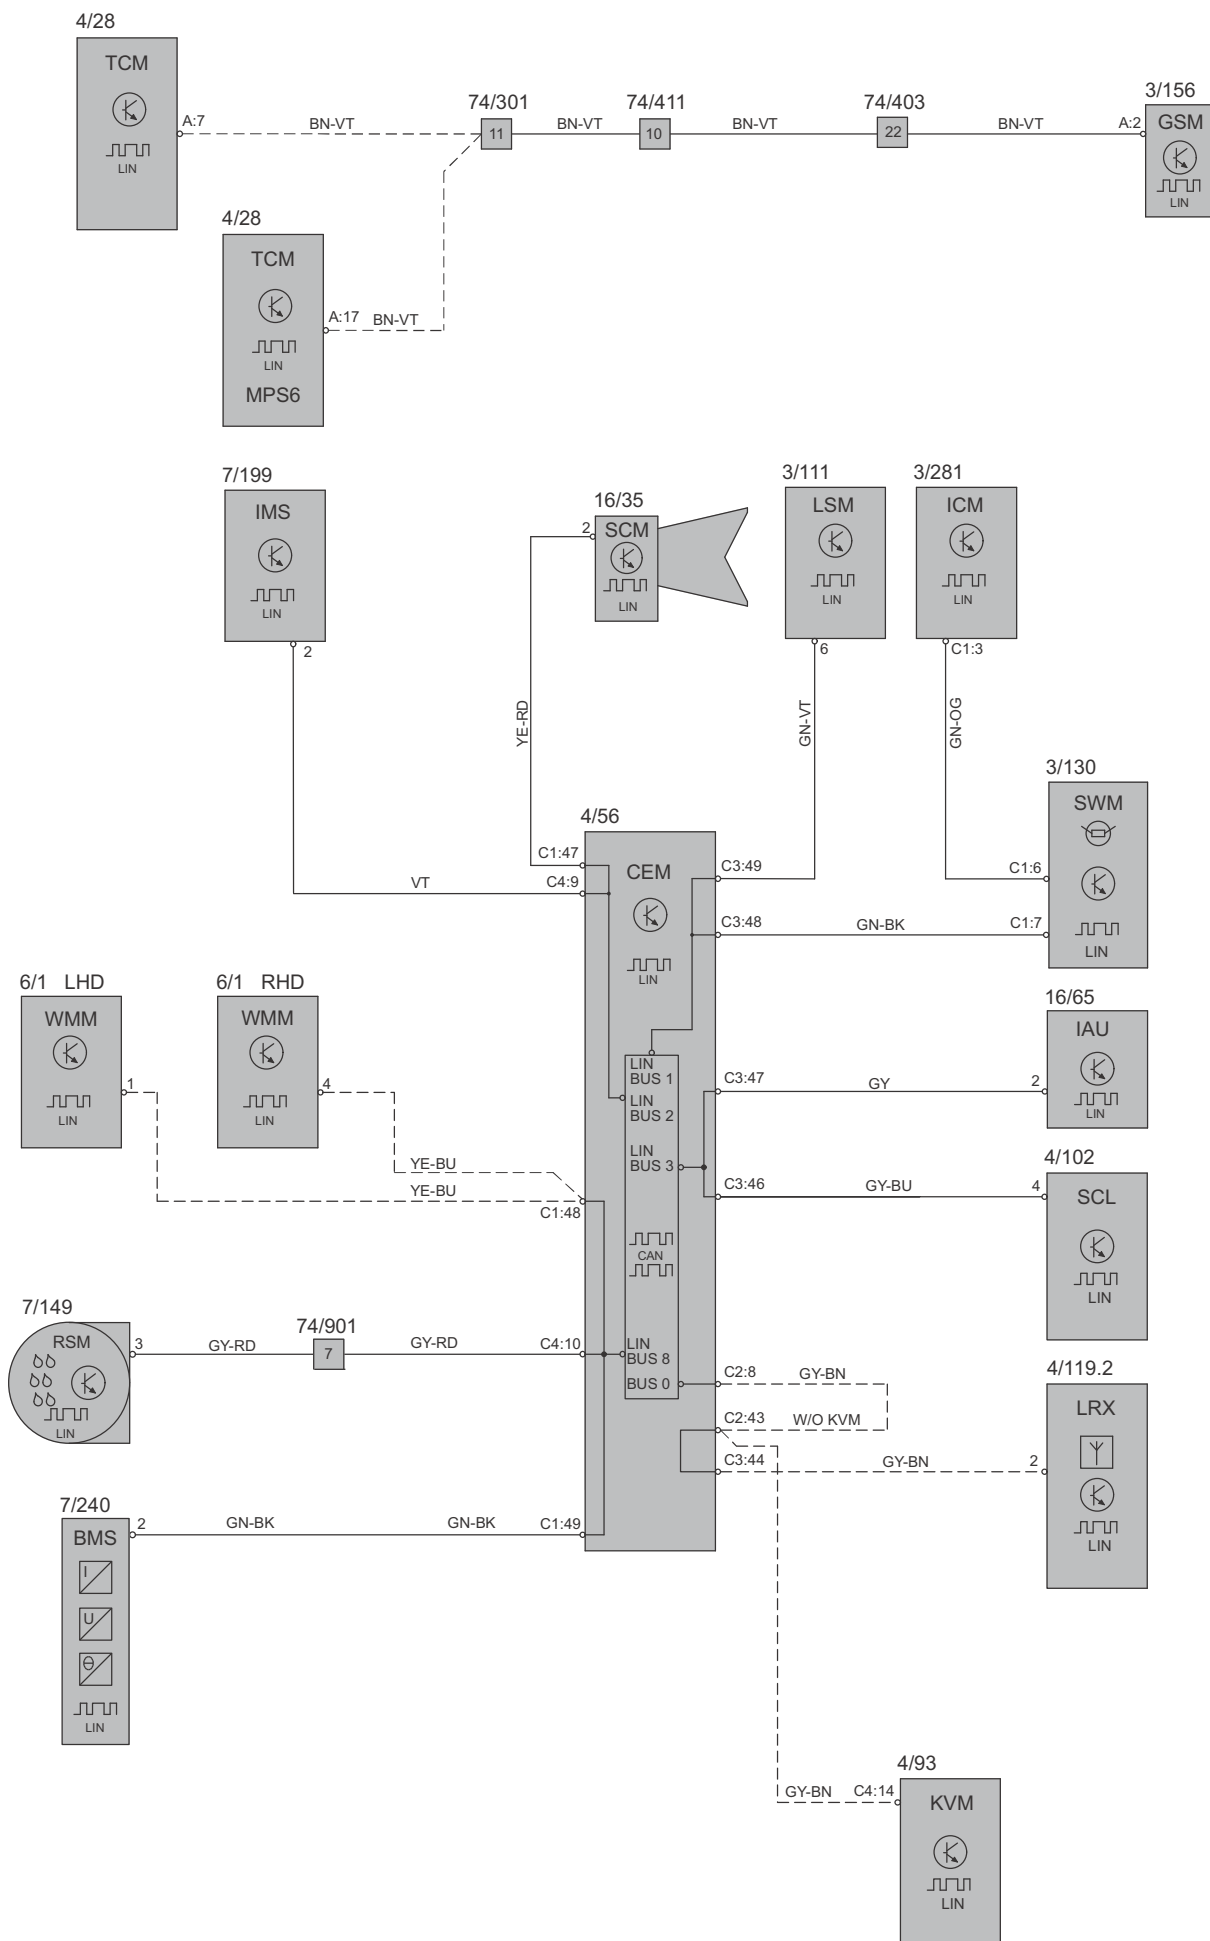

18056

Control modules


Data communication, LIN 2:2

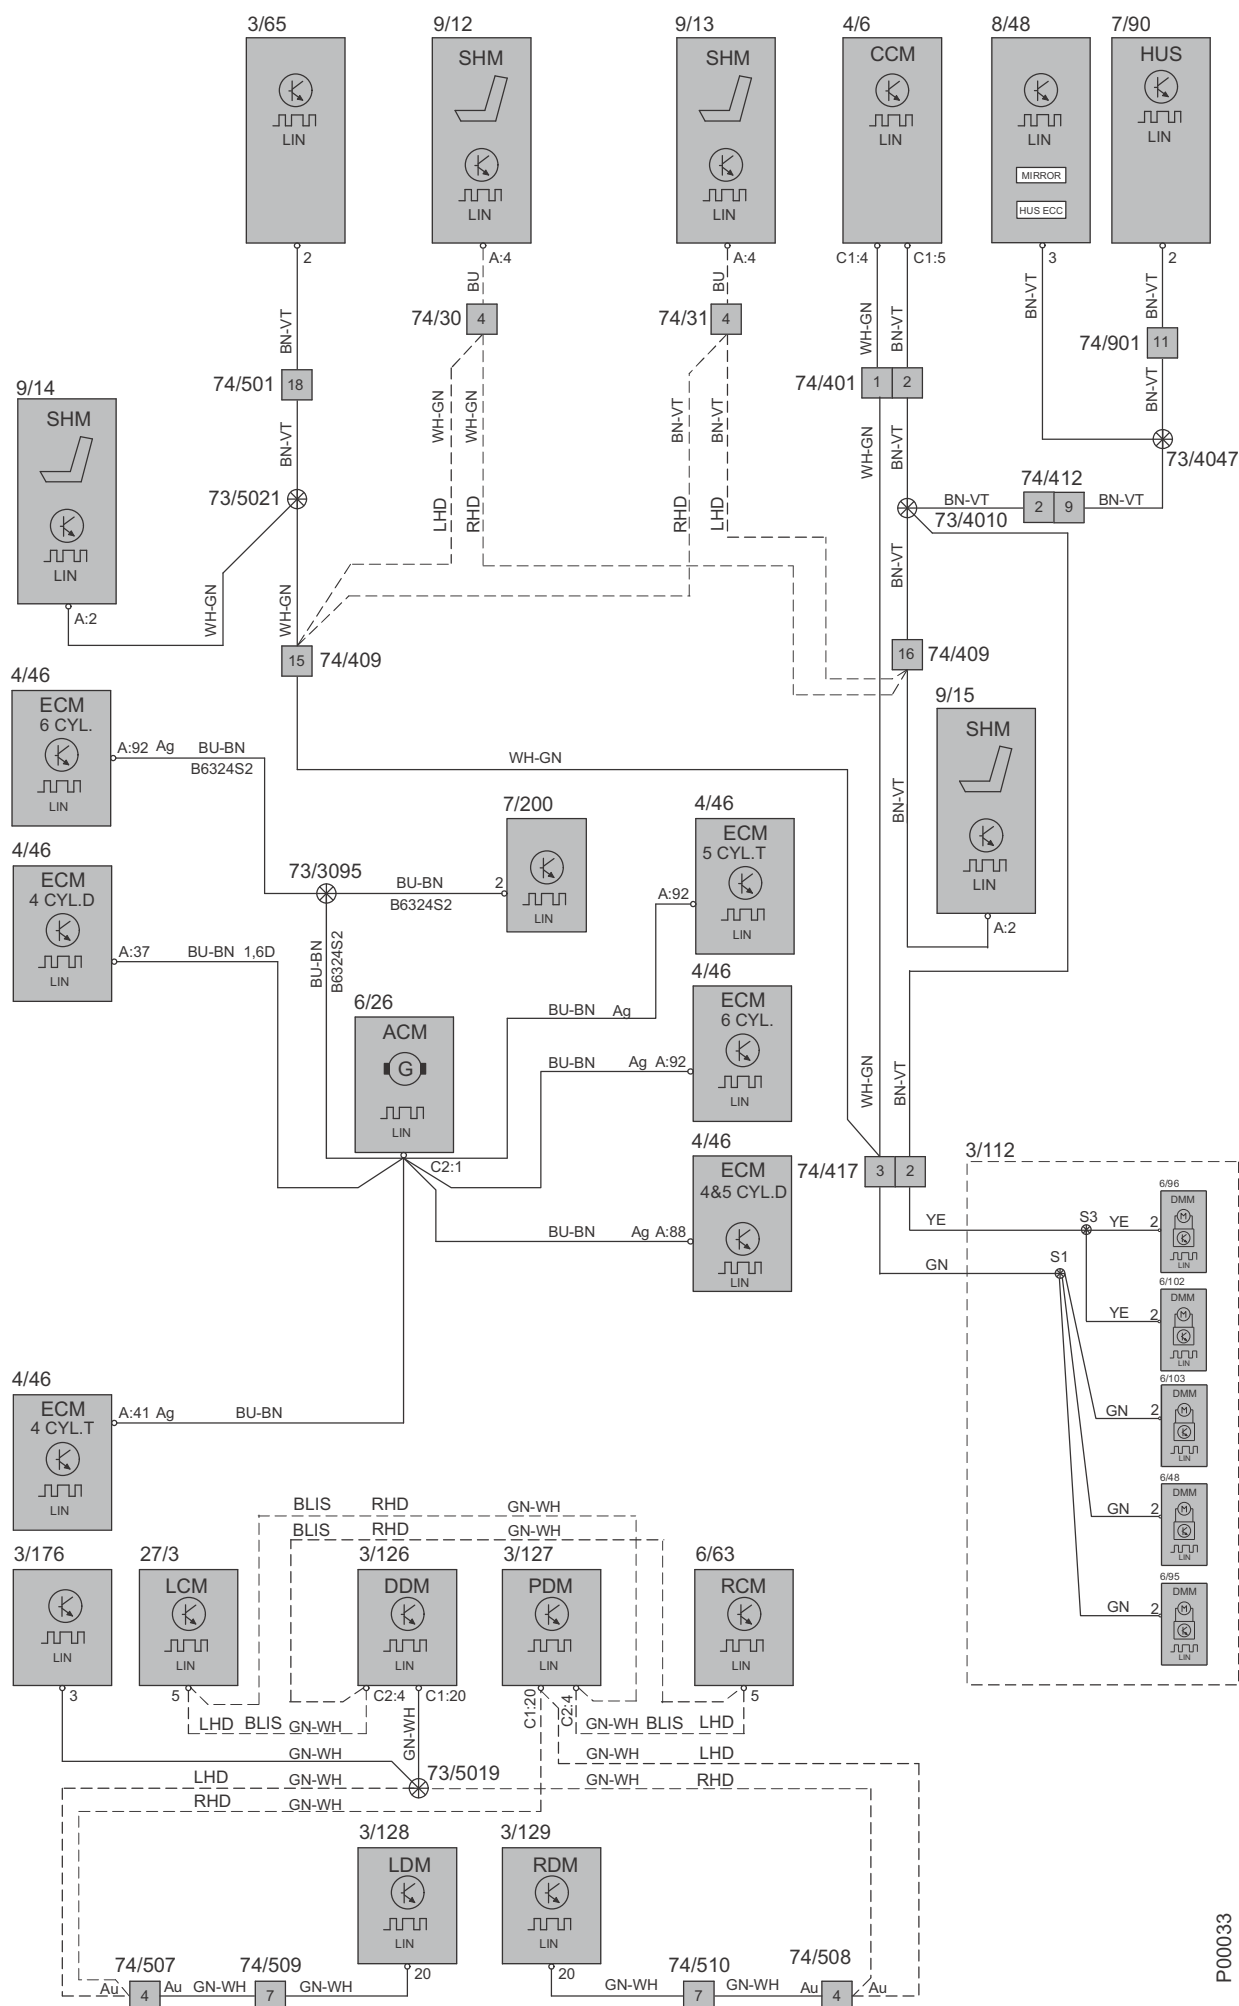

P00033


Control modules

Steering Wheel Module (SWM)

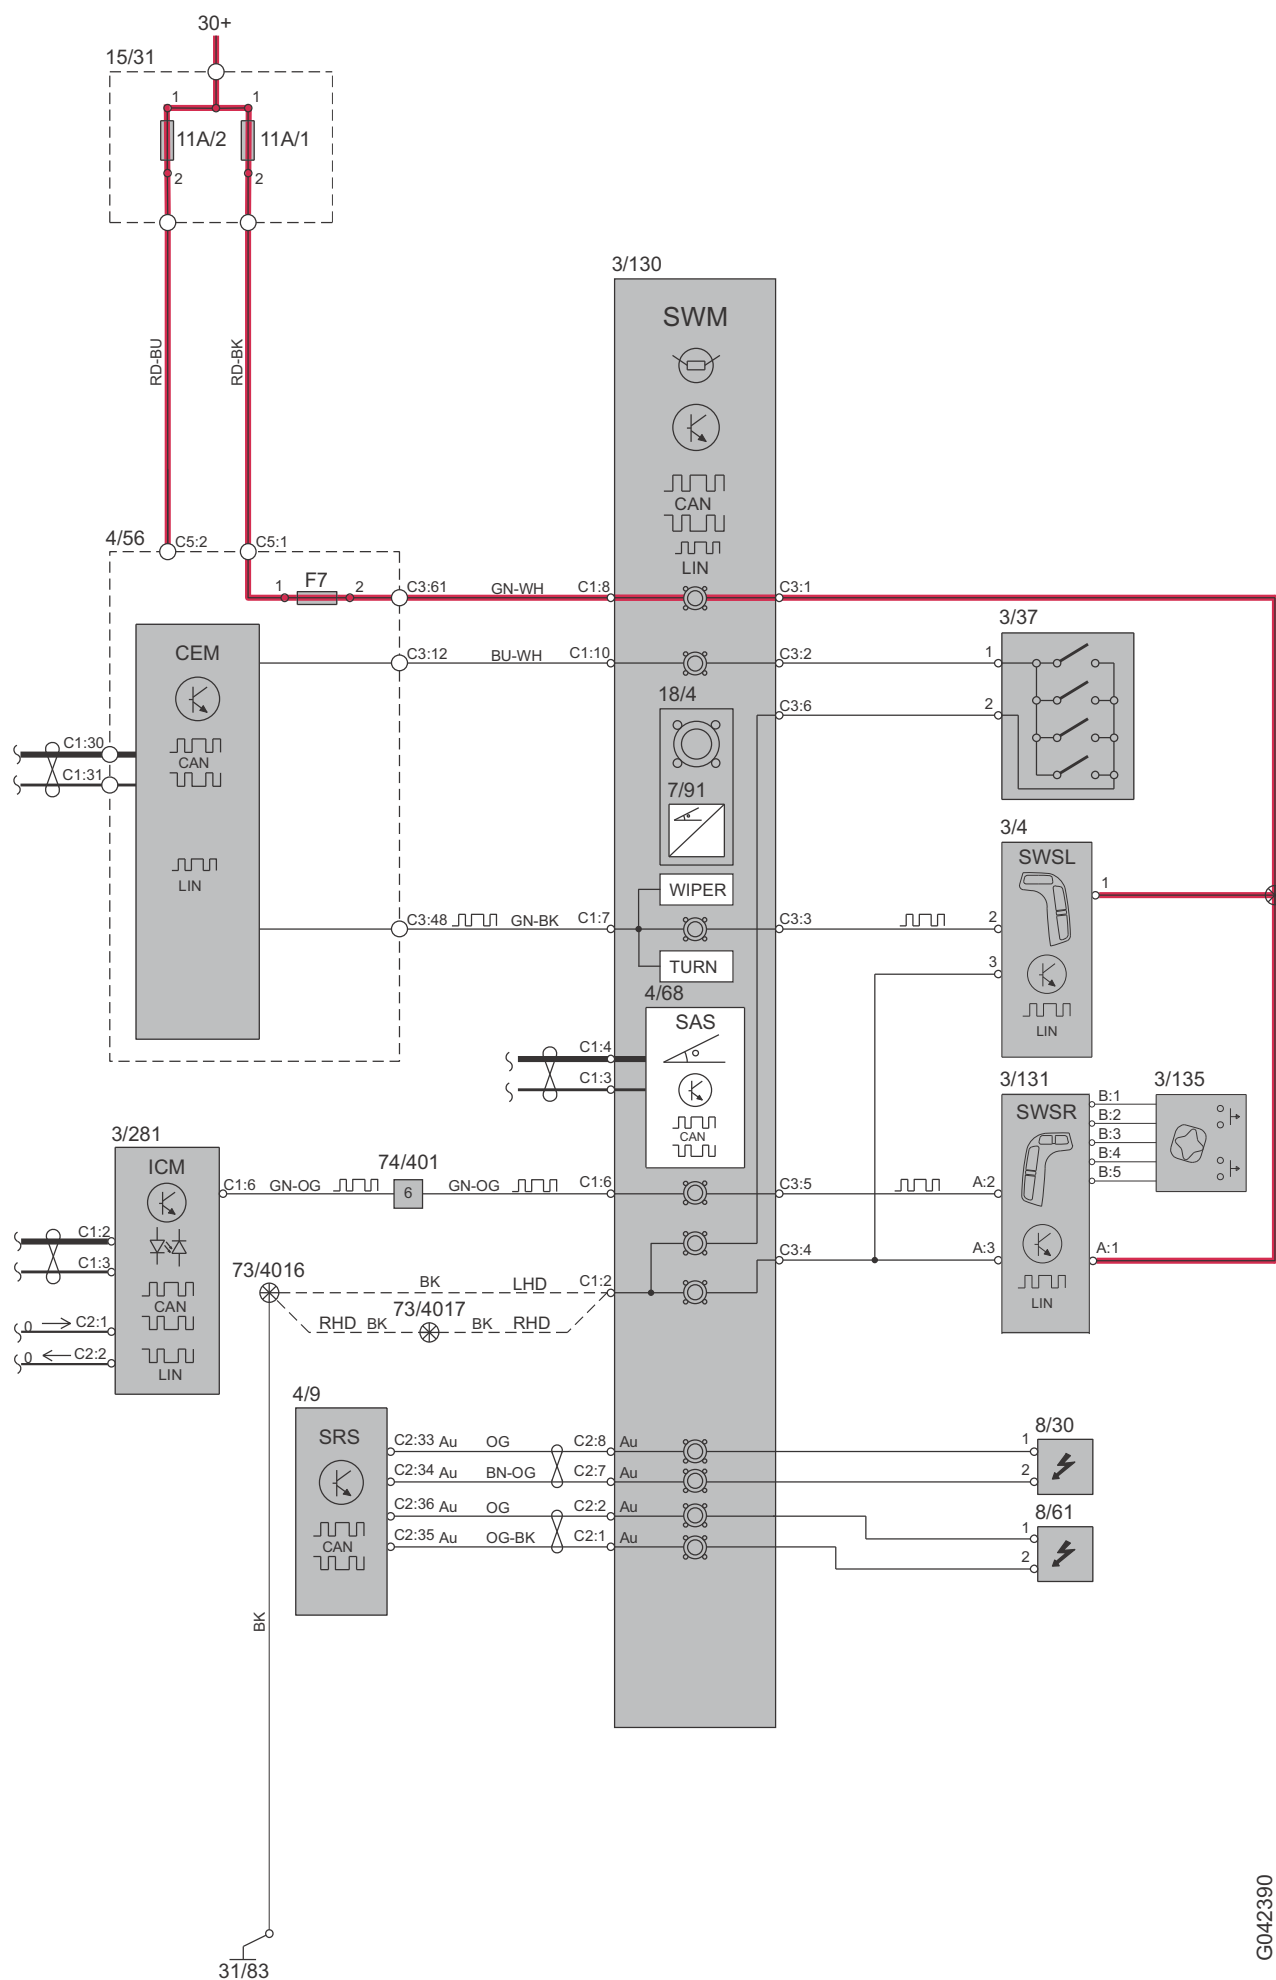


G042390

Group 26 Cooling system
Cooling fan 4-Cyl. Turbo

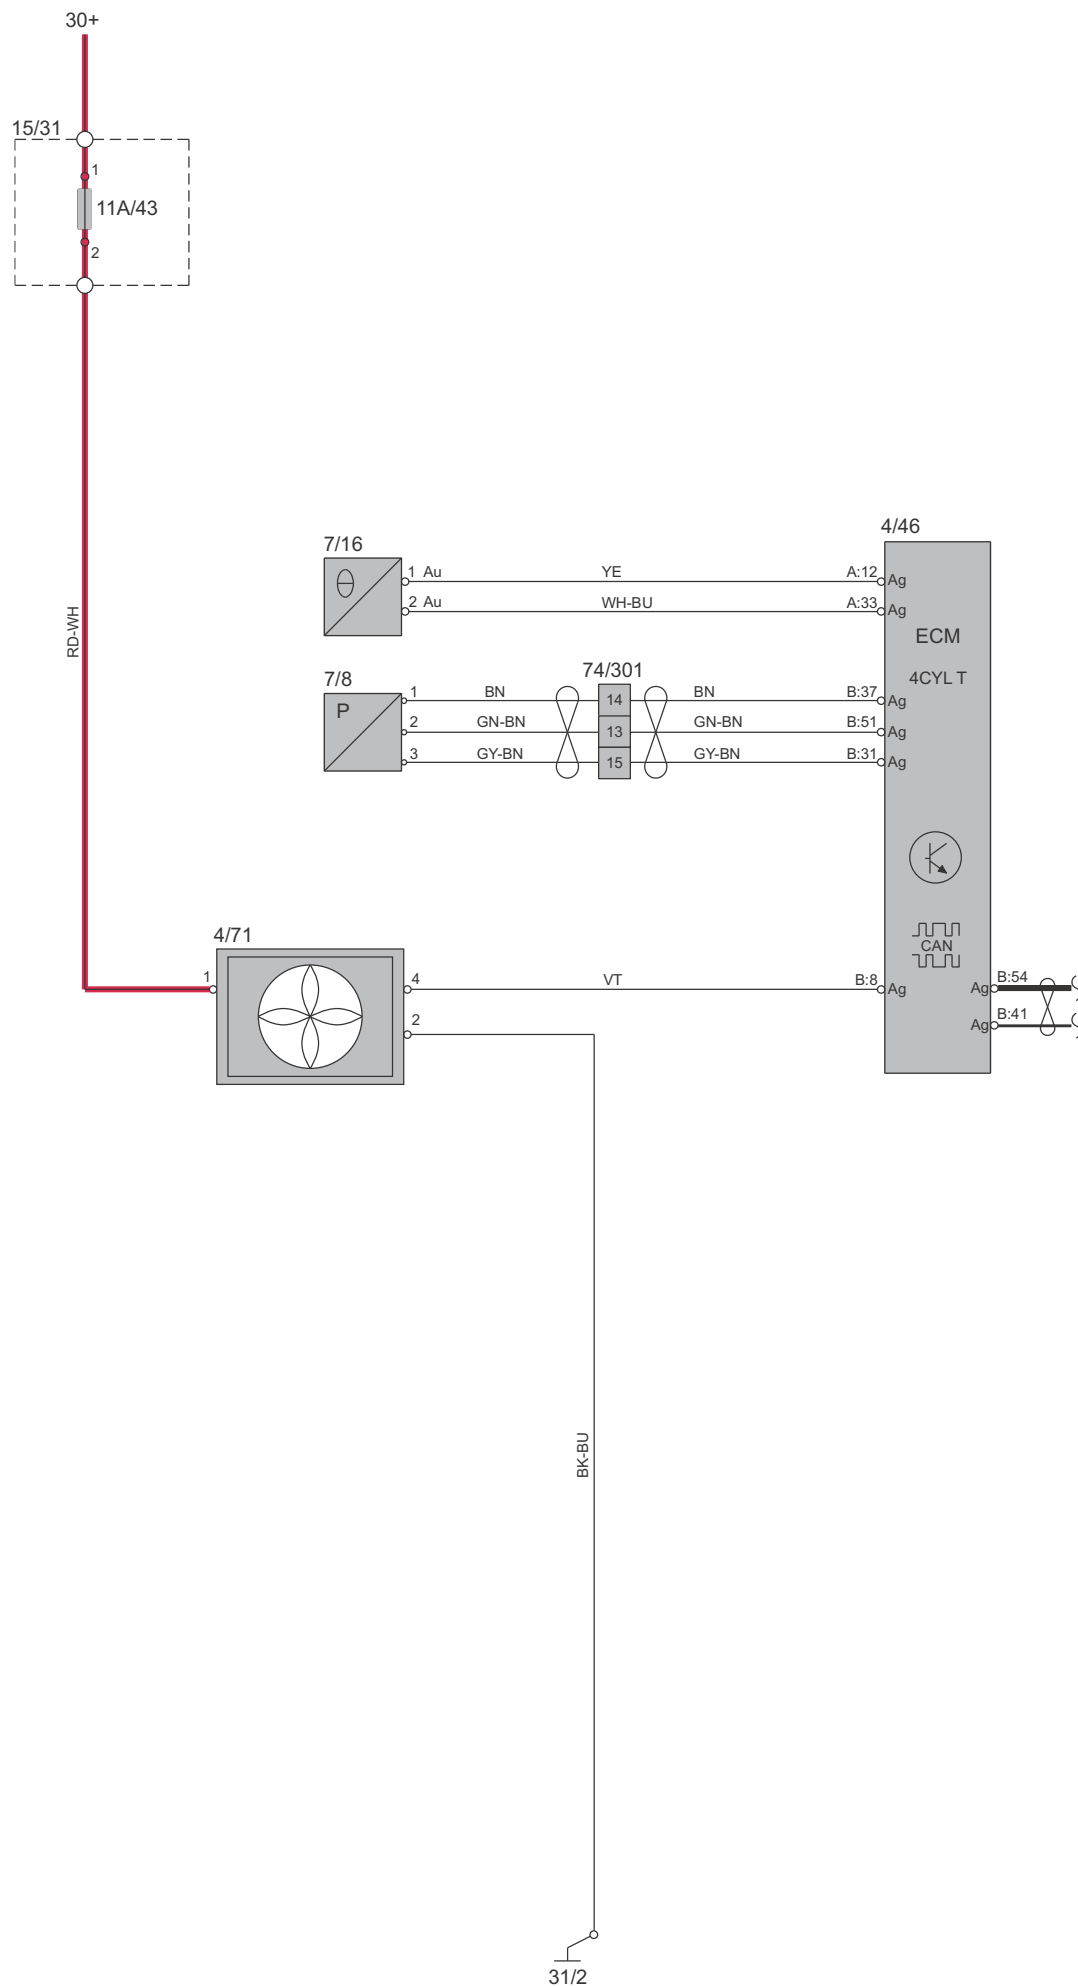


N00011

Group 26 Cooling system Cooling fan, 5-Cyl. Turbo & 6-Cyl.

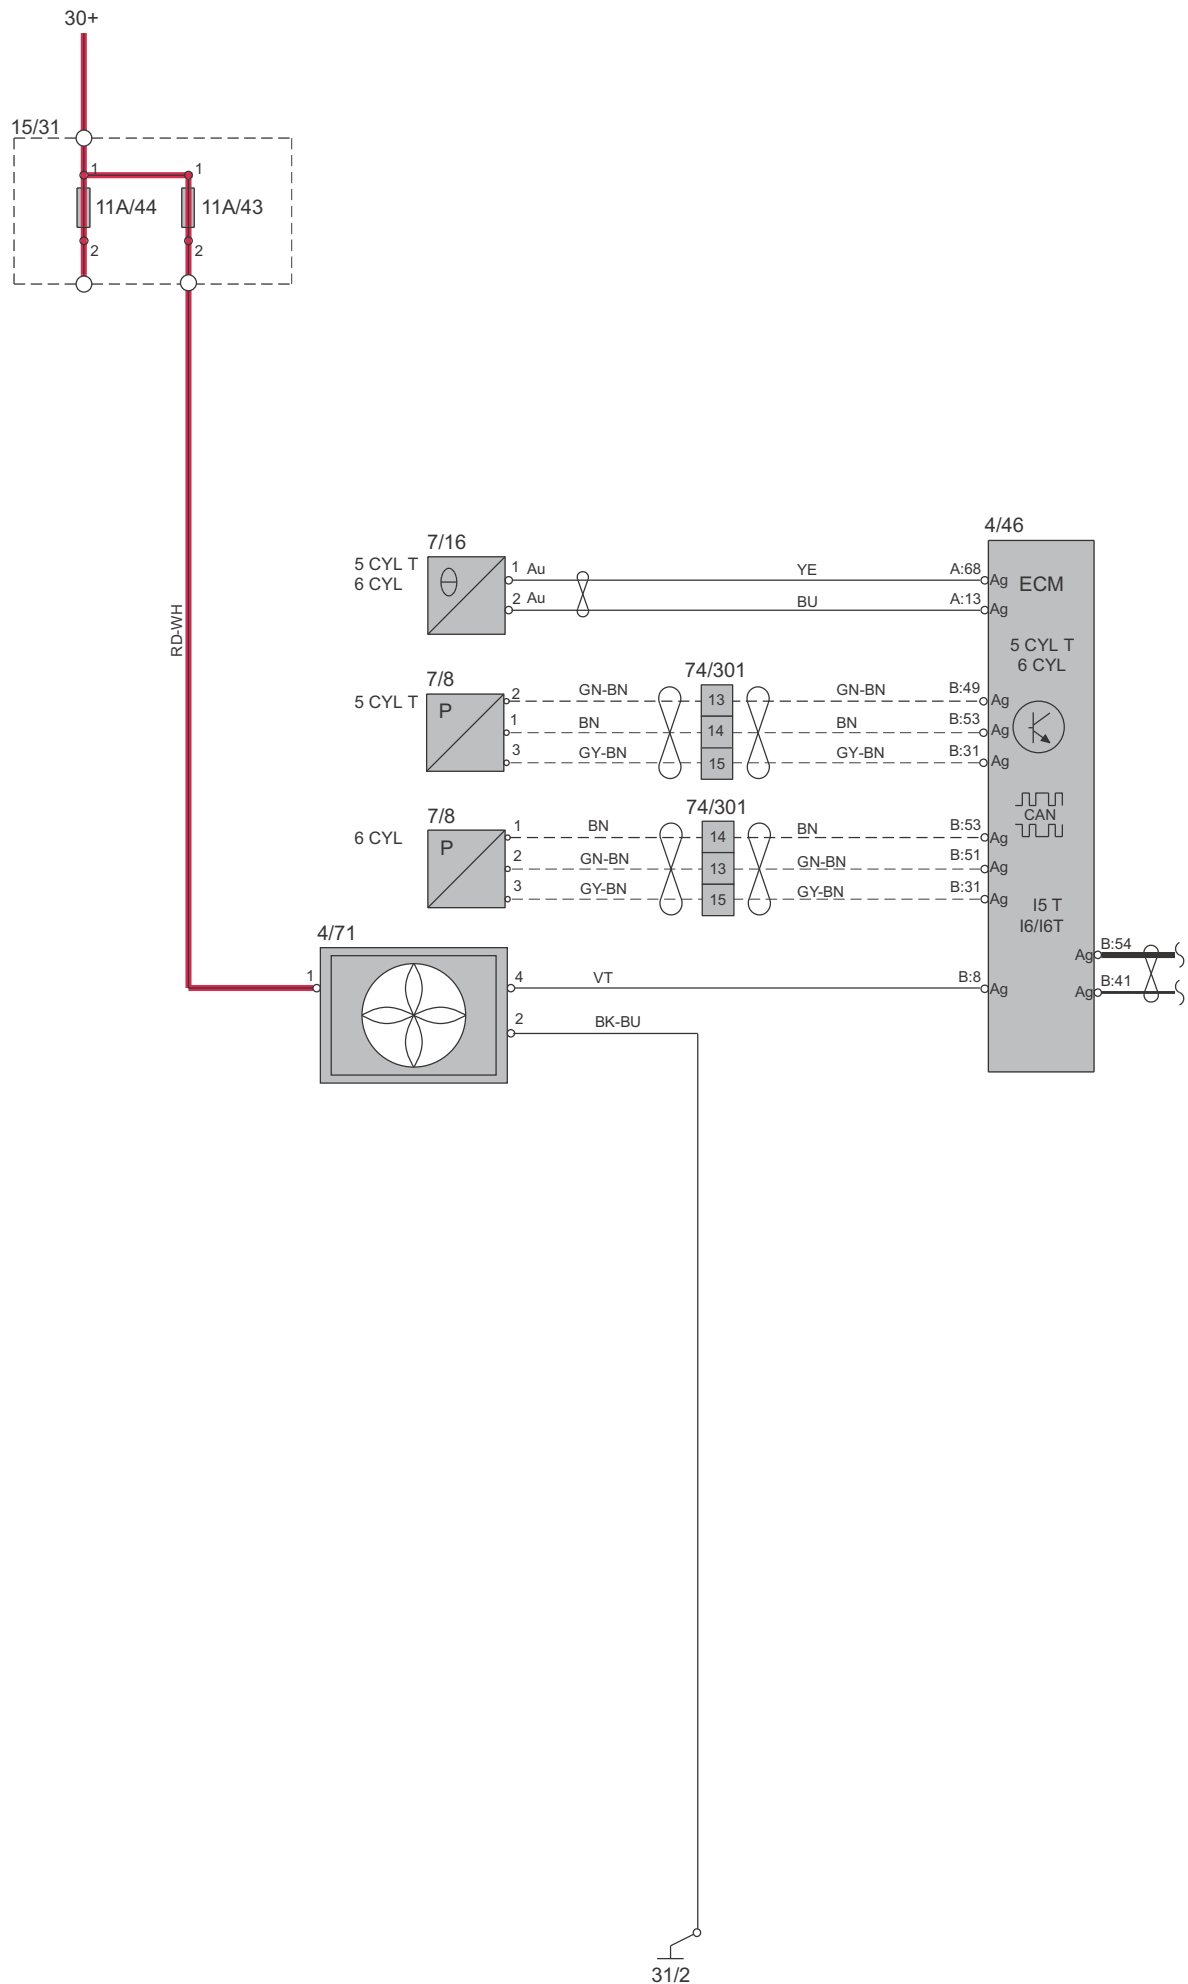


Group 26 Cooling system

Cooling fan, 4-Cyl. Diesel

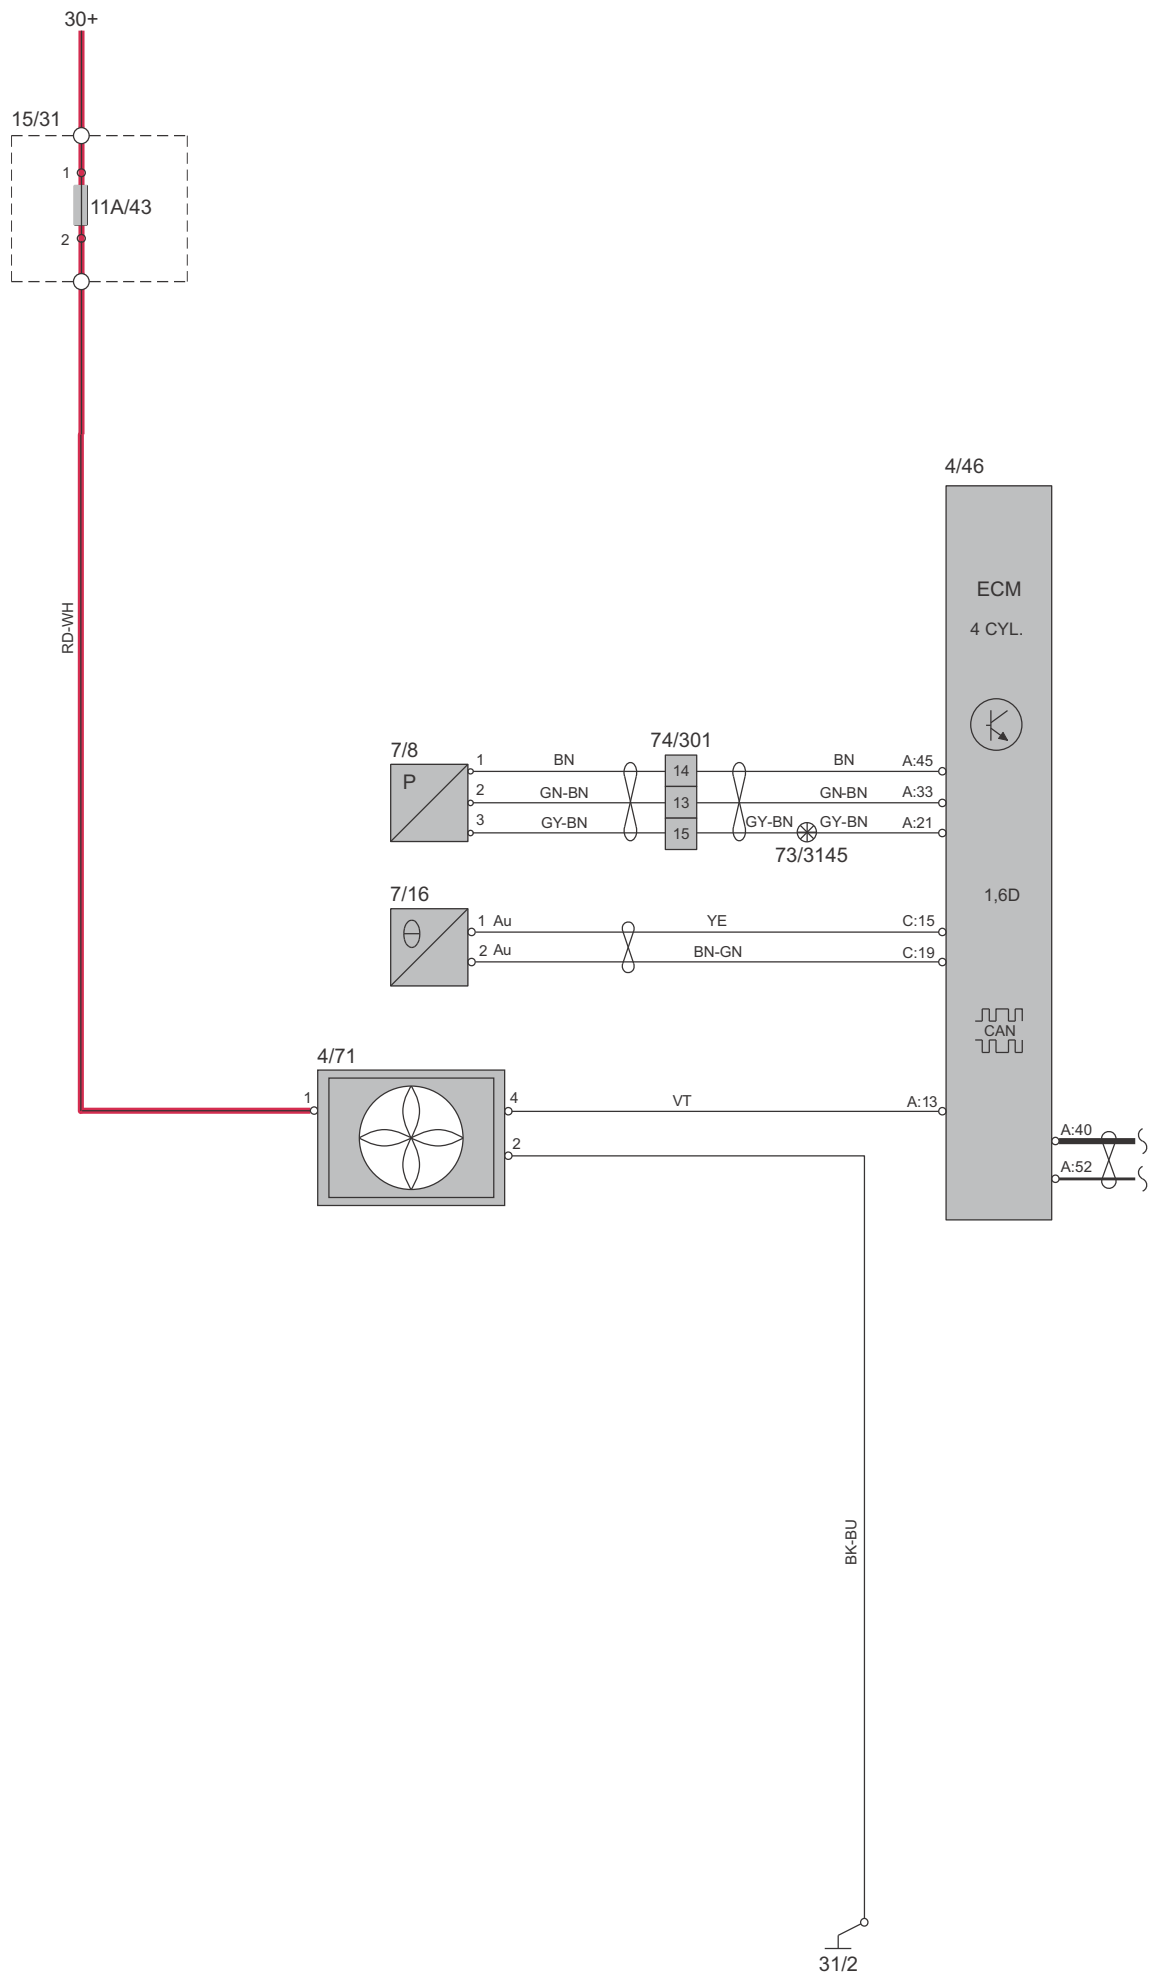


N00014

Group 26 Cooling system
Cooling fan, 5-Cyl. Diesel

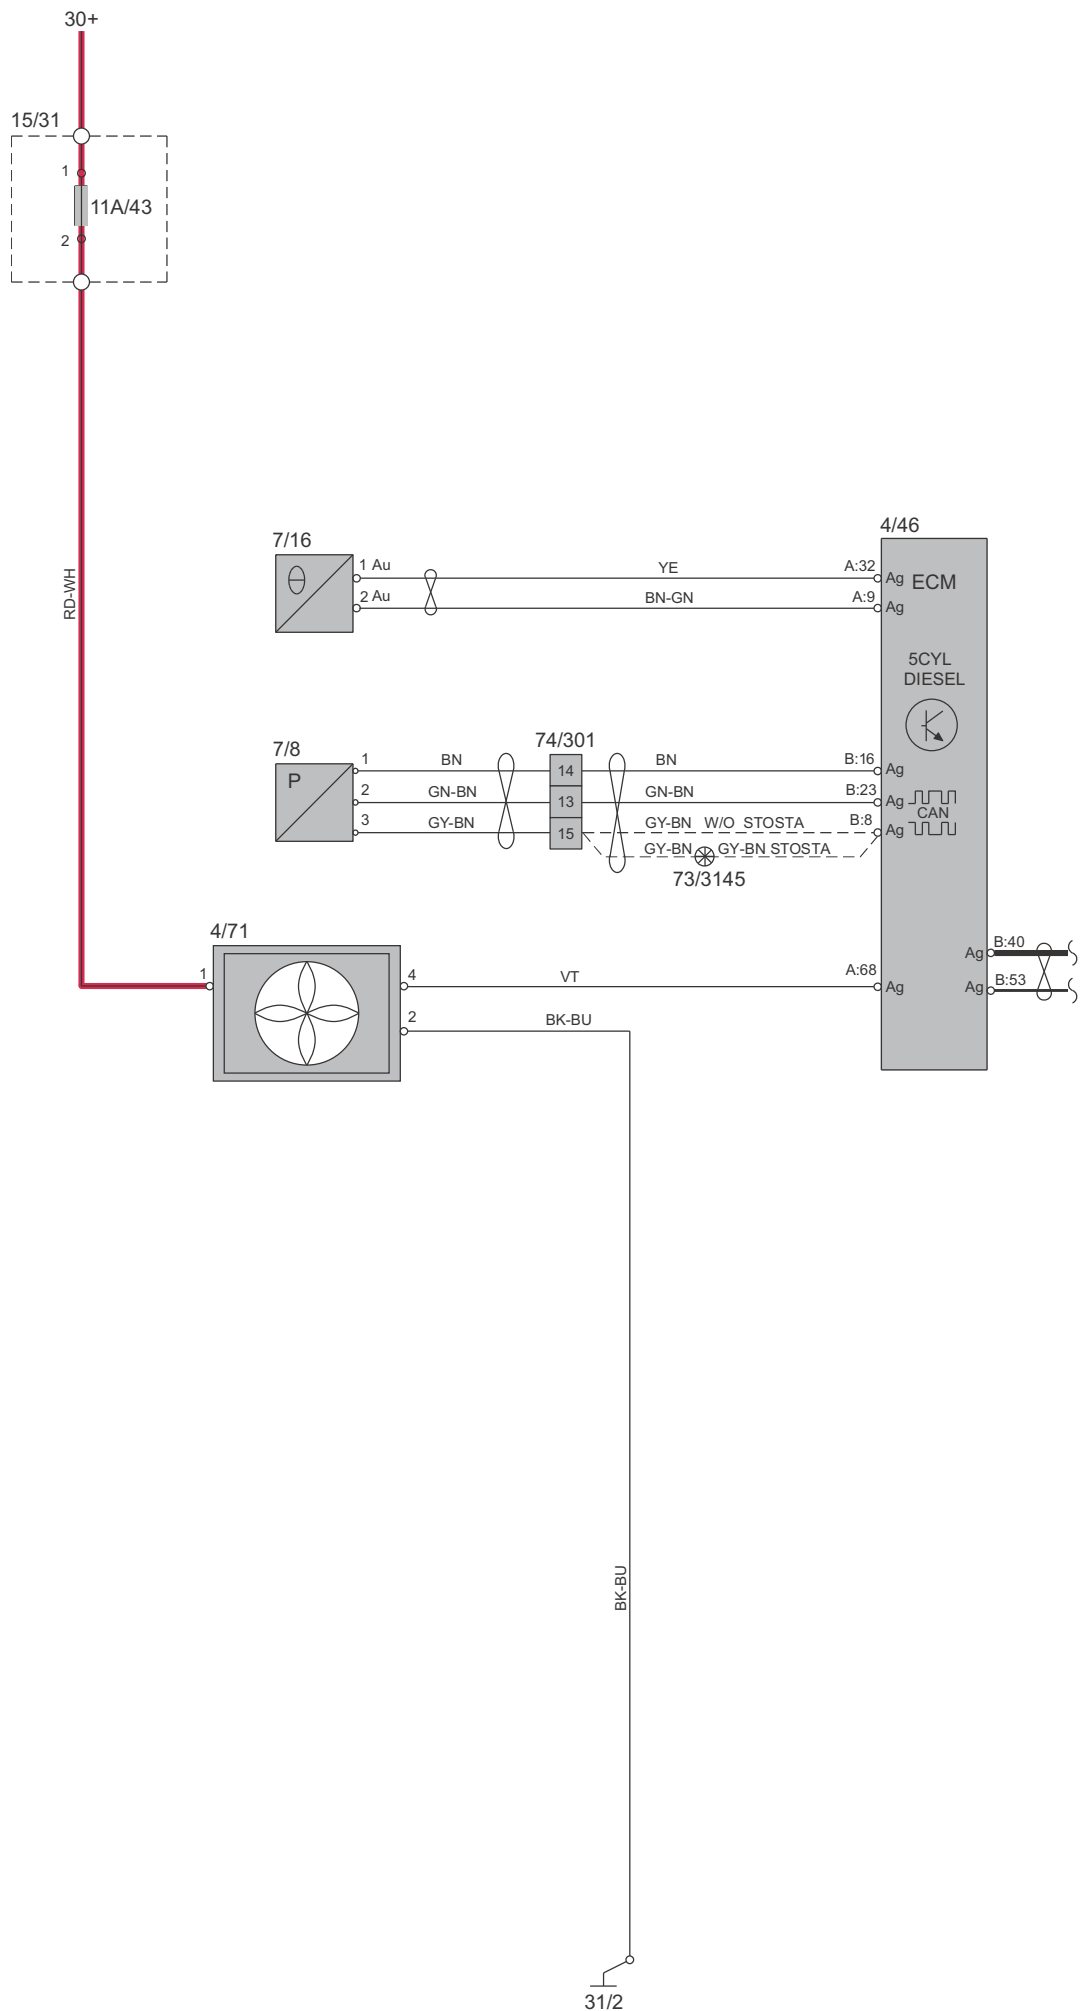


Group 27 Engine controls
Cruise control 4-Cyl. Turbo

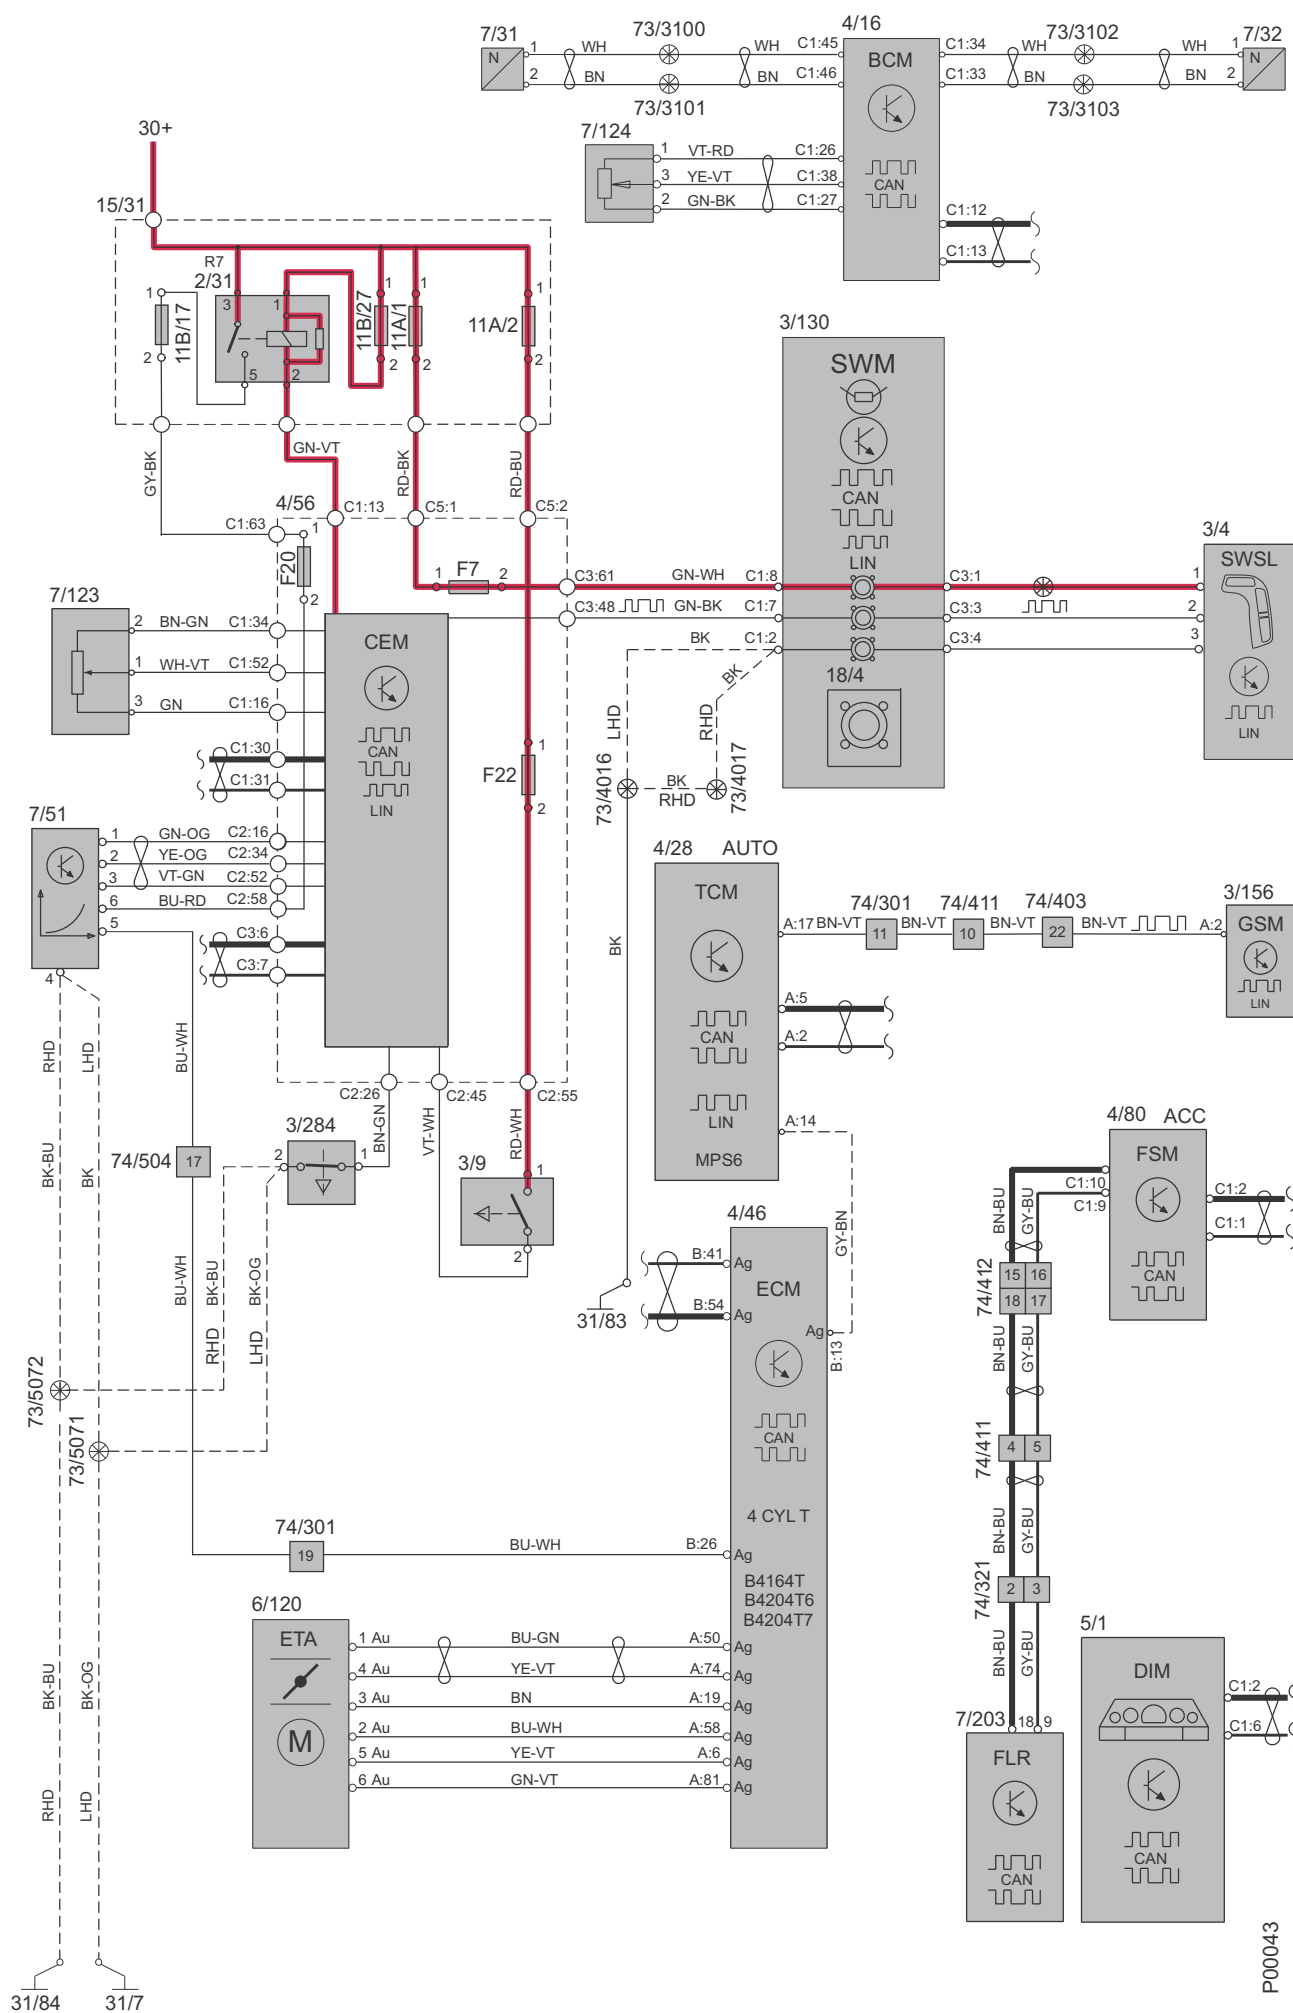

Group 27 Engine controls


Cruise control 4-Cyl. Diesel

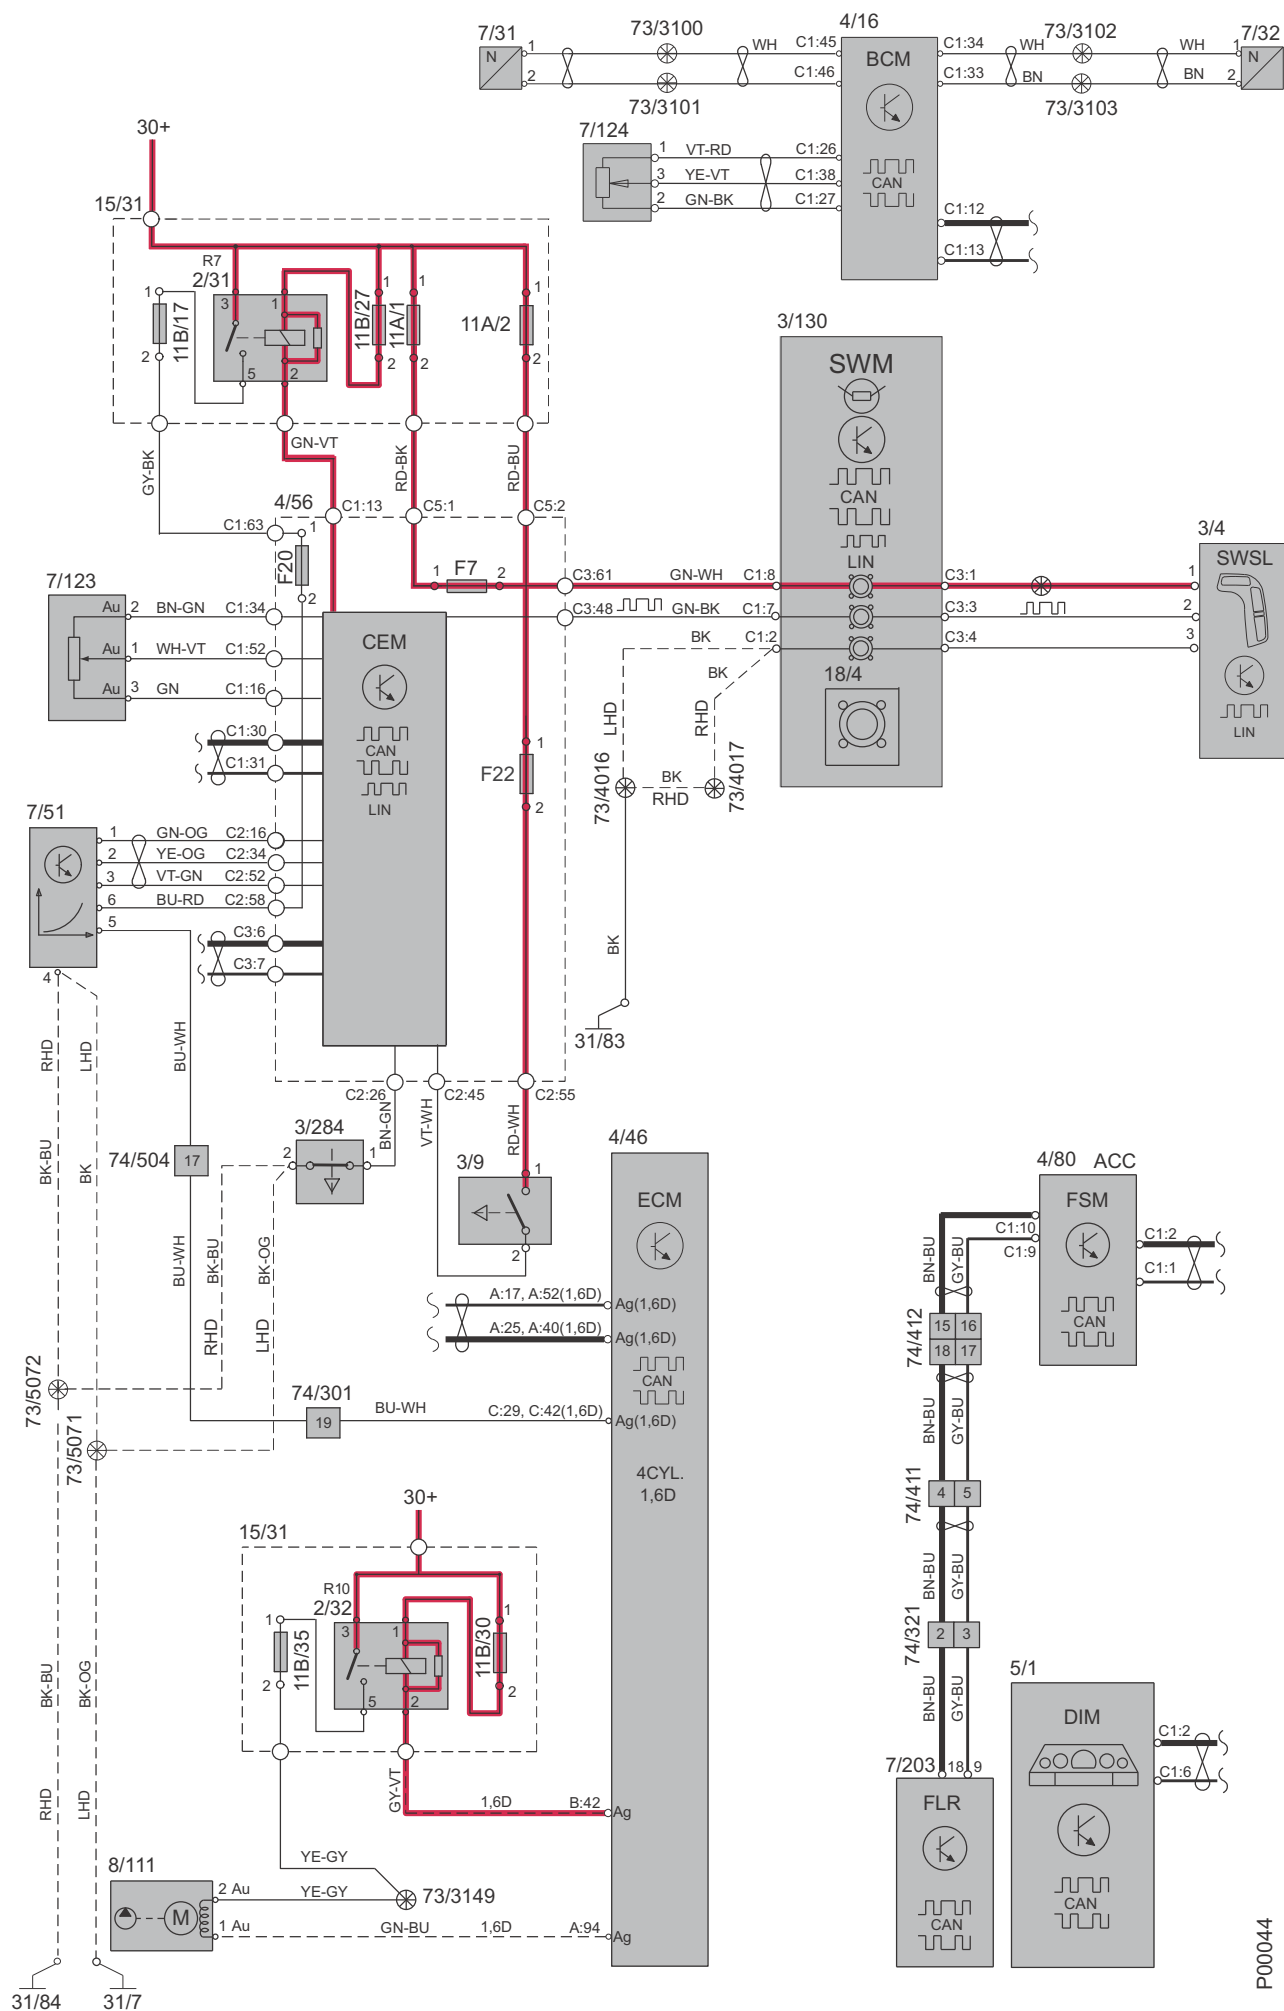

P00044


Group 27 Engine controls

Cruise control 5-Cyl. & 6-Cyl.

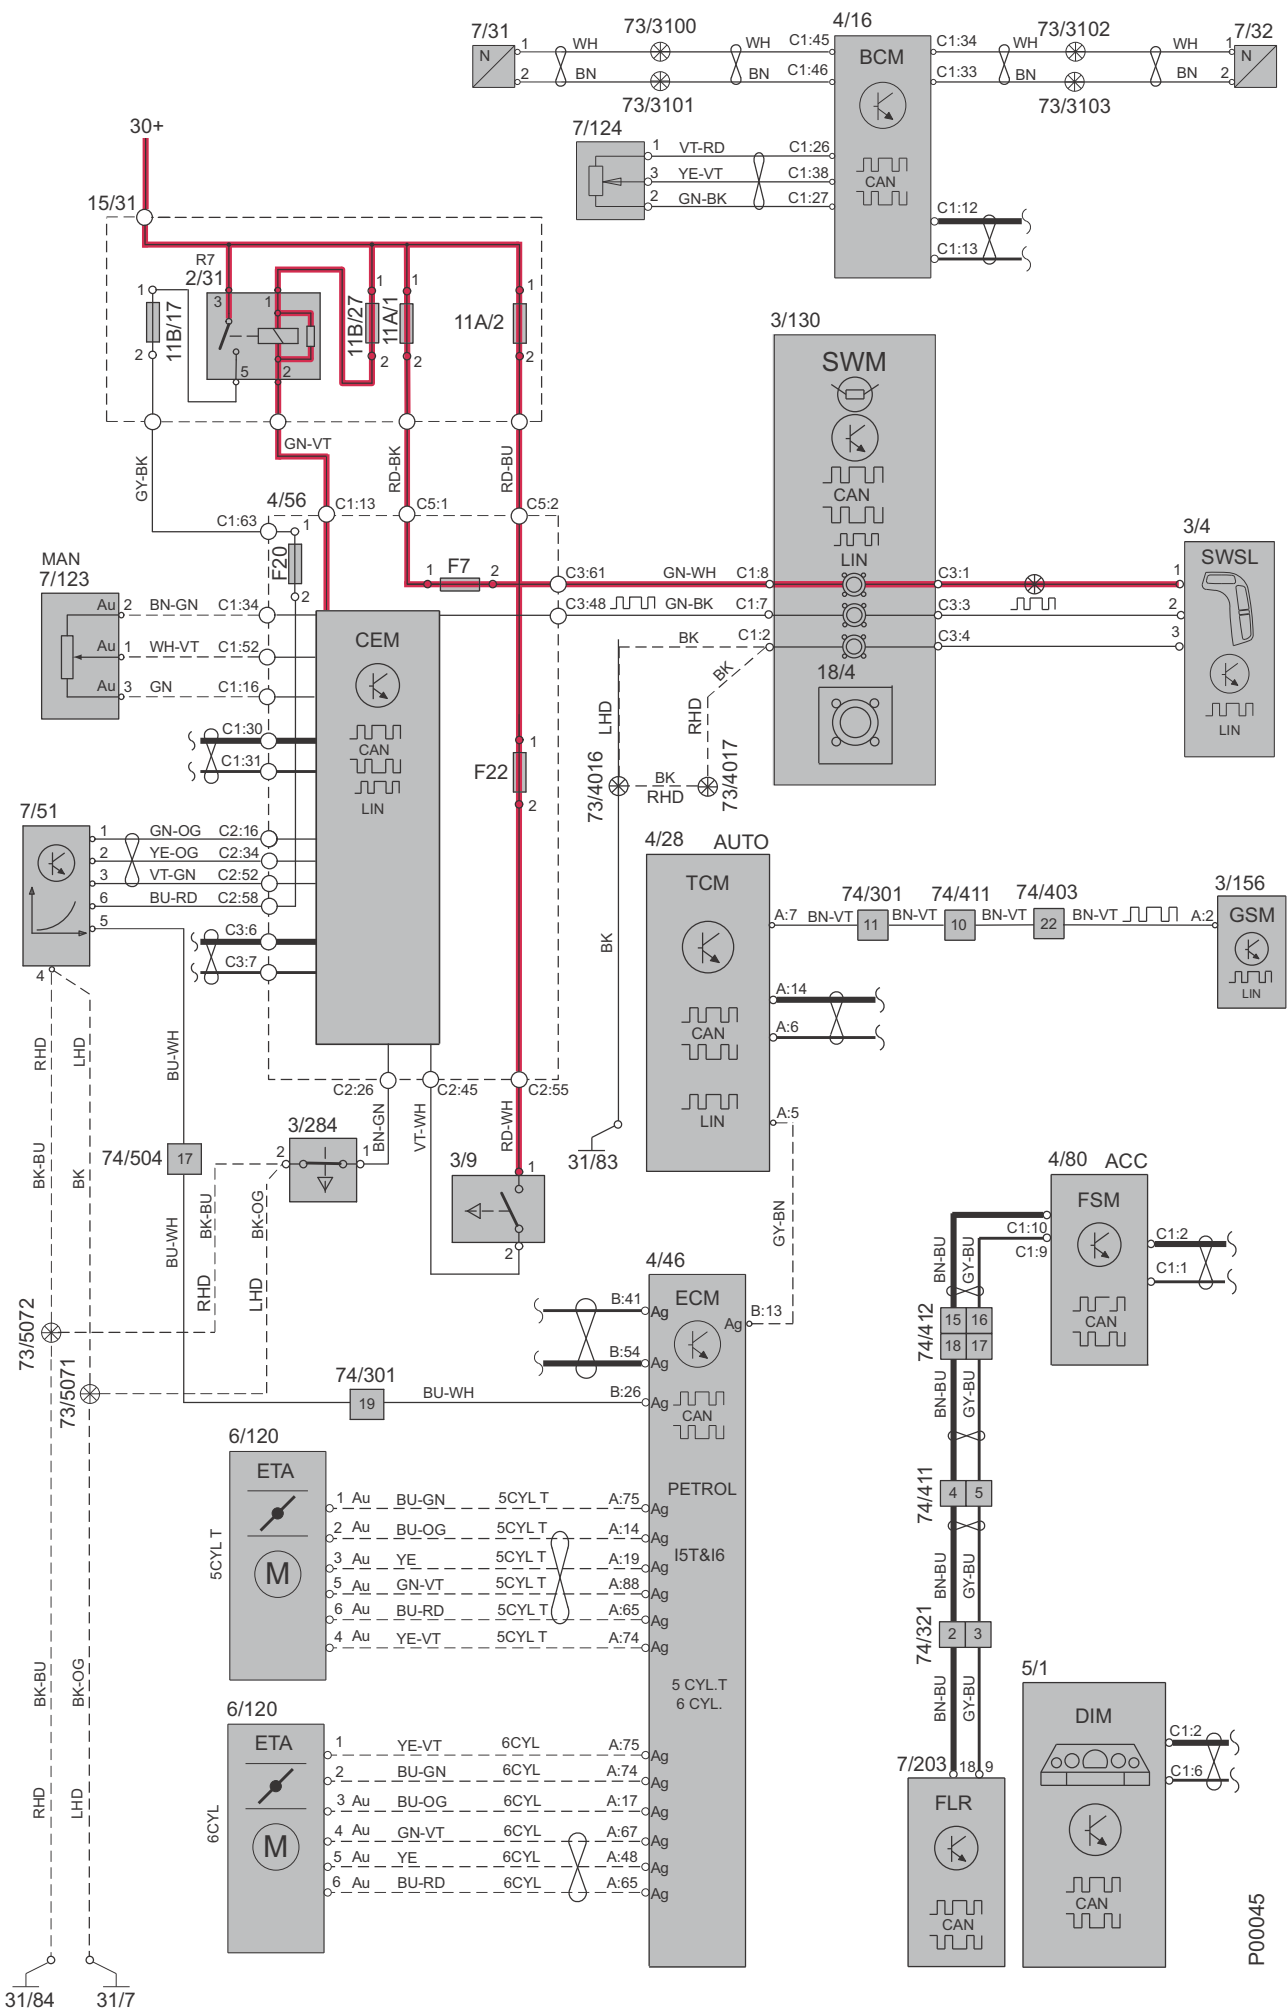


Group 27 Engine controls

Cruise control 5-Cyl. Diesel

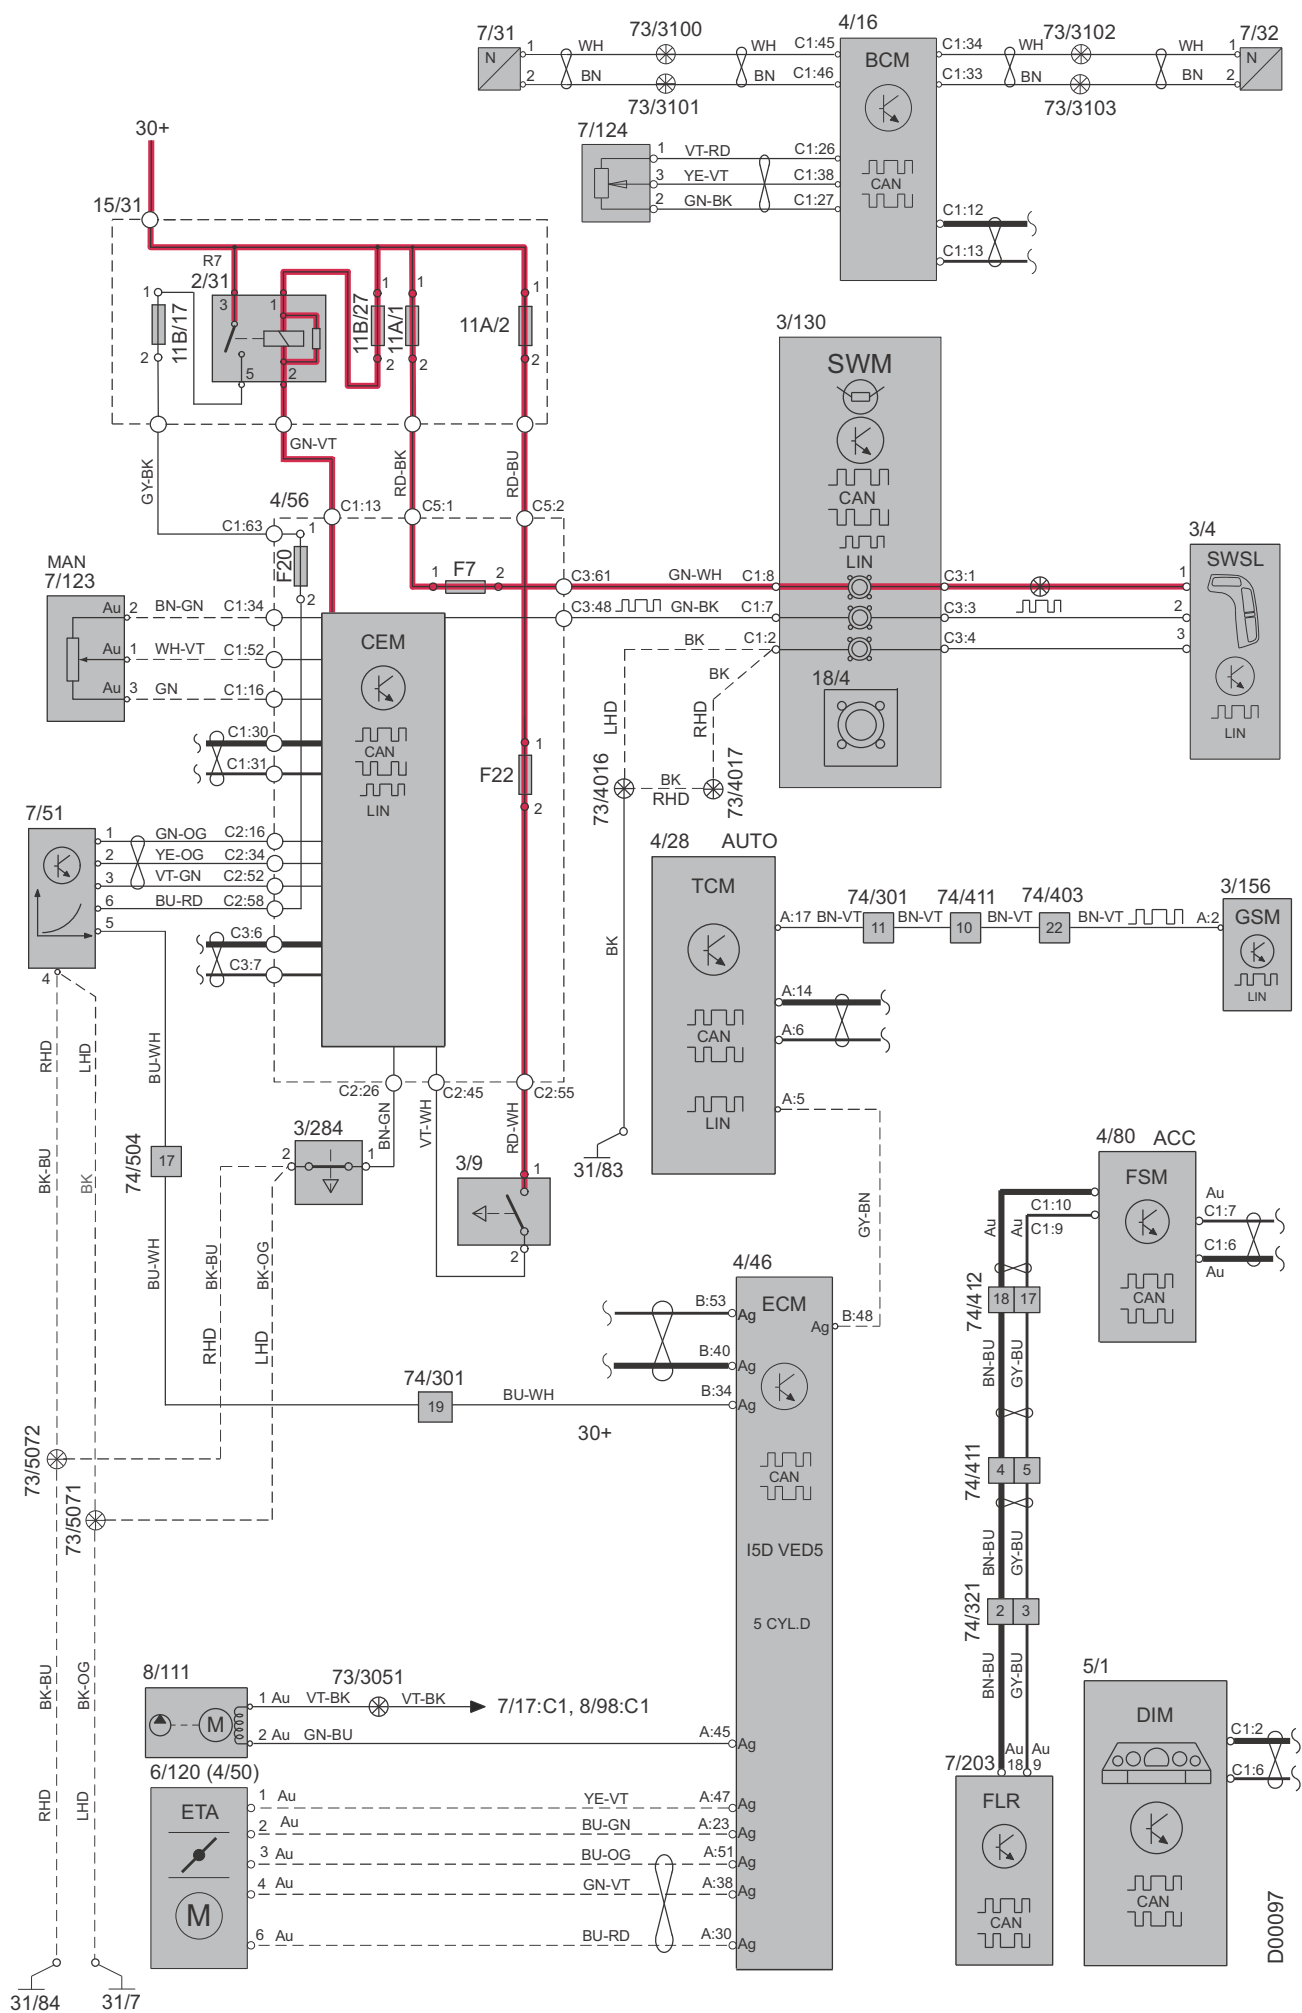


Group 27 Engine controls Start-/Stop function 4-Cyl. 1.6l Turbo

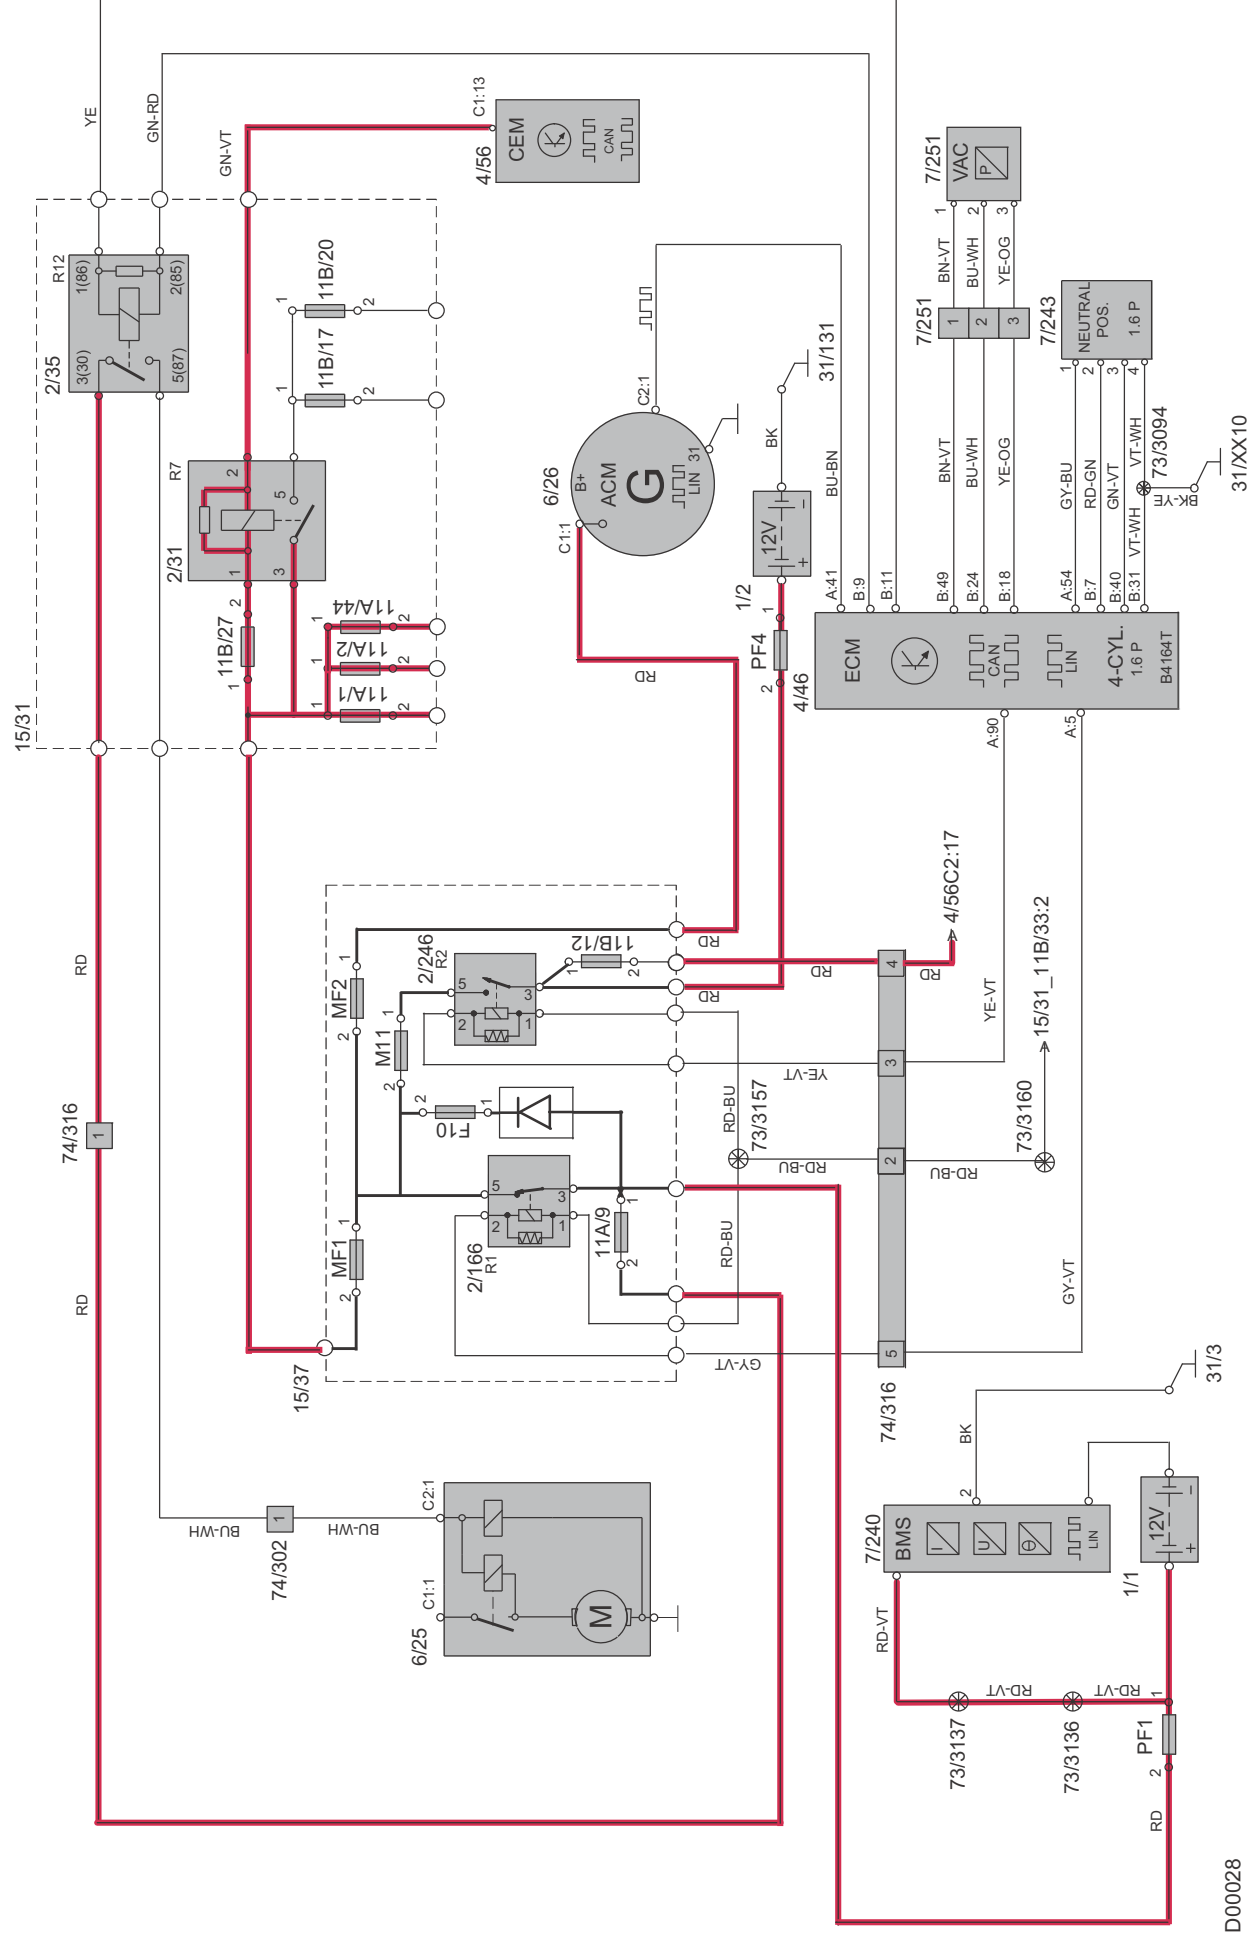


D00028

Group 27 Engine controls Start-/Stop function 4-Cyl. 1.6l Diesel DV6C

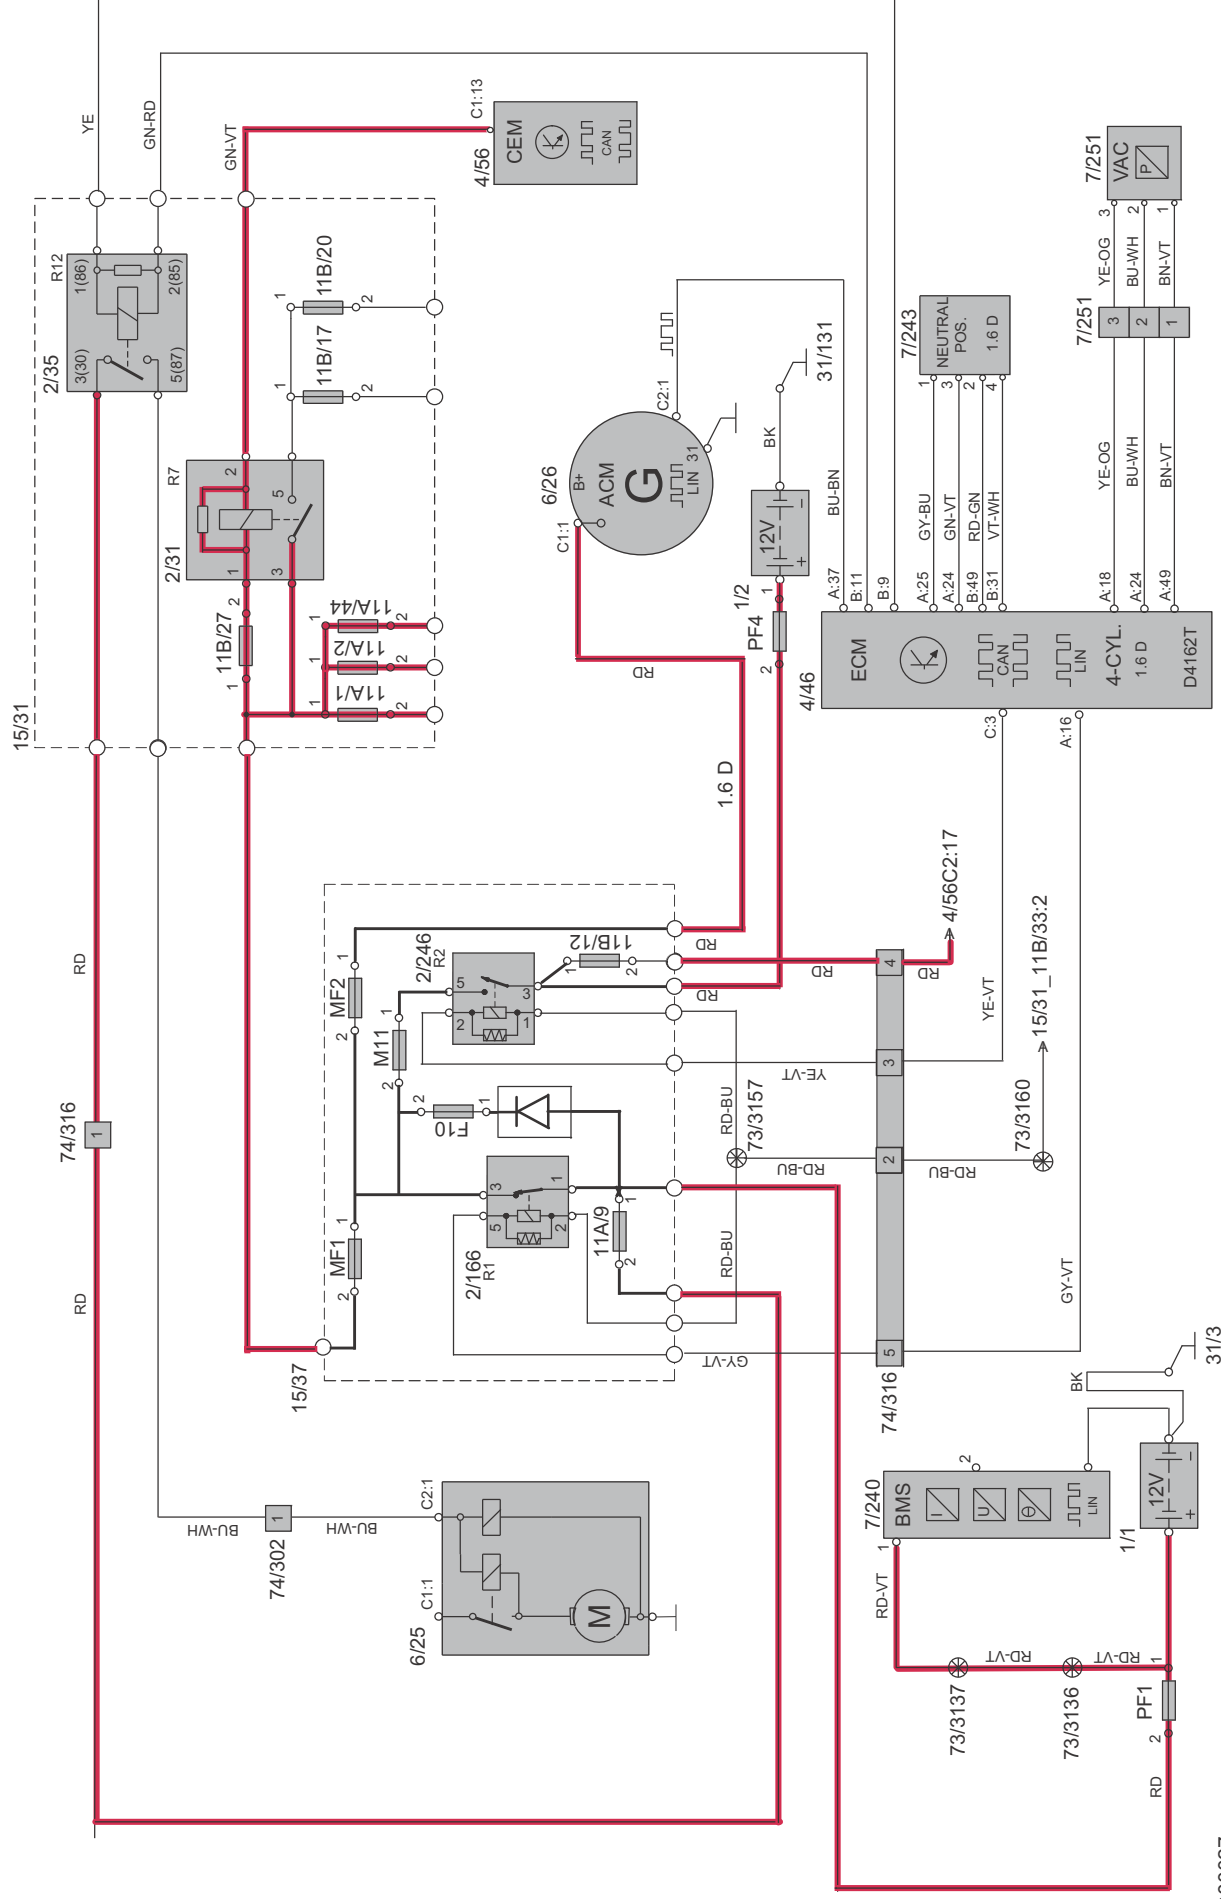


D00027

Group 27 Engine controls Start-/Stop function 5-Cyl. Diesel VED5

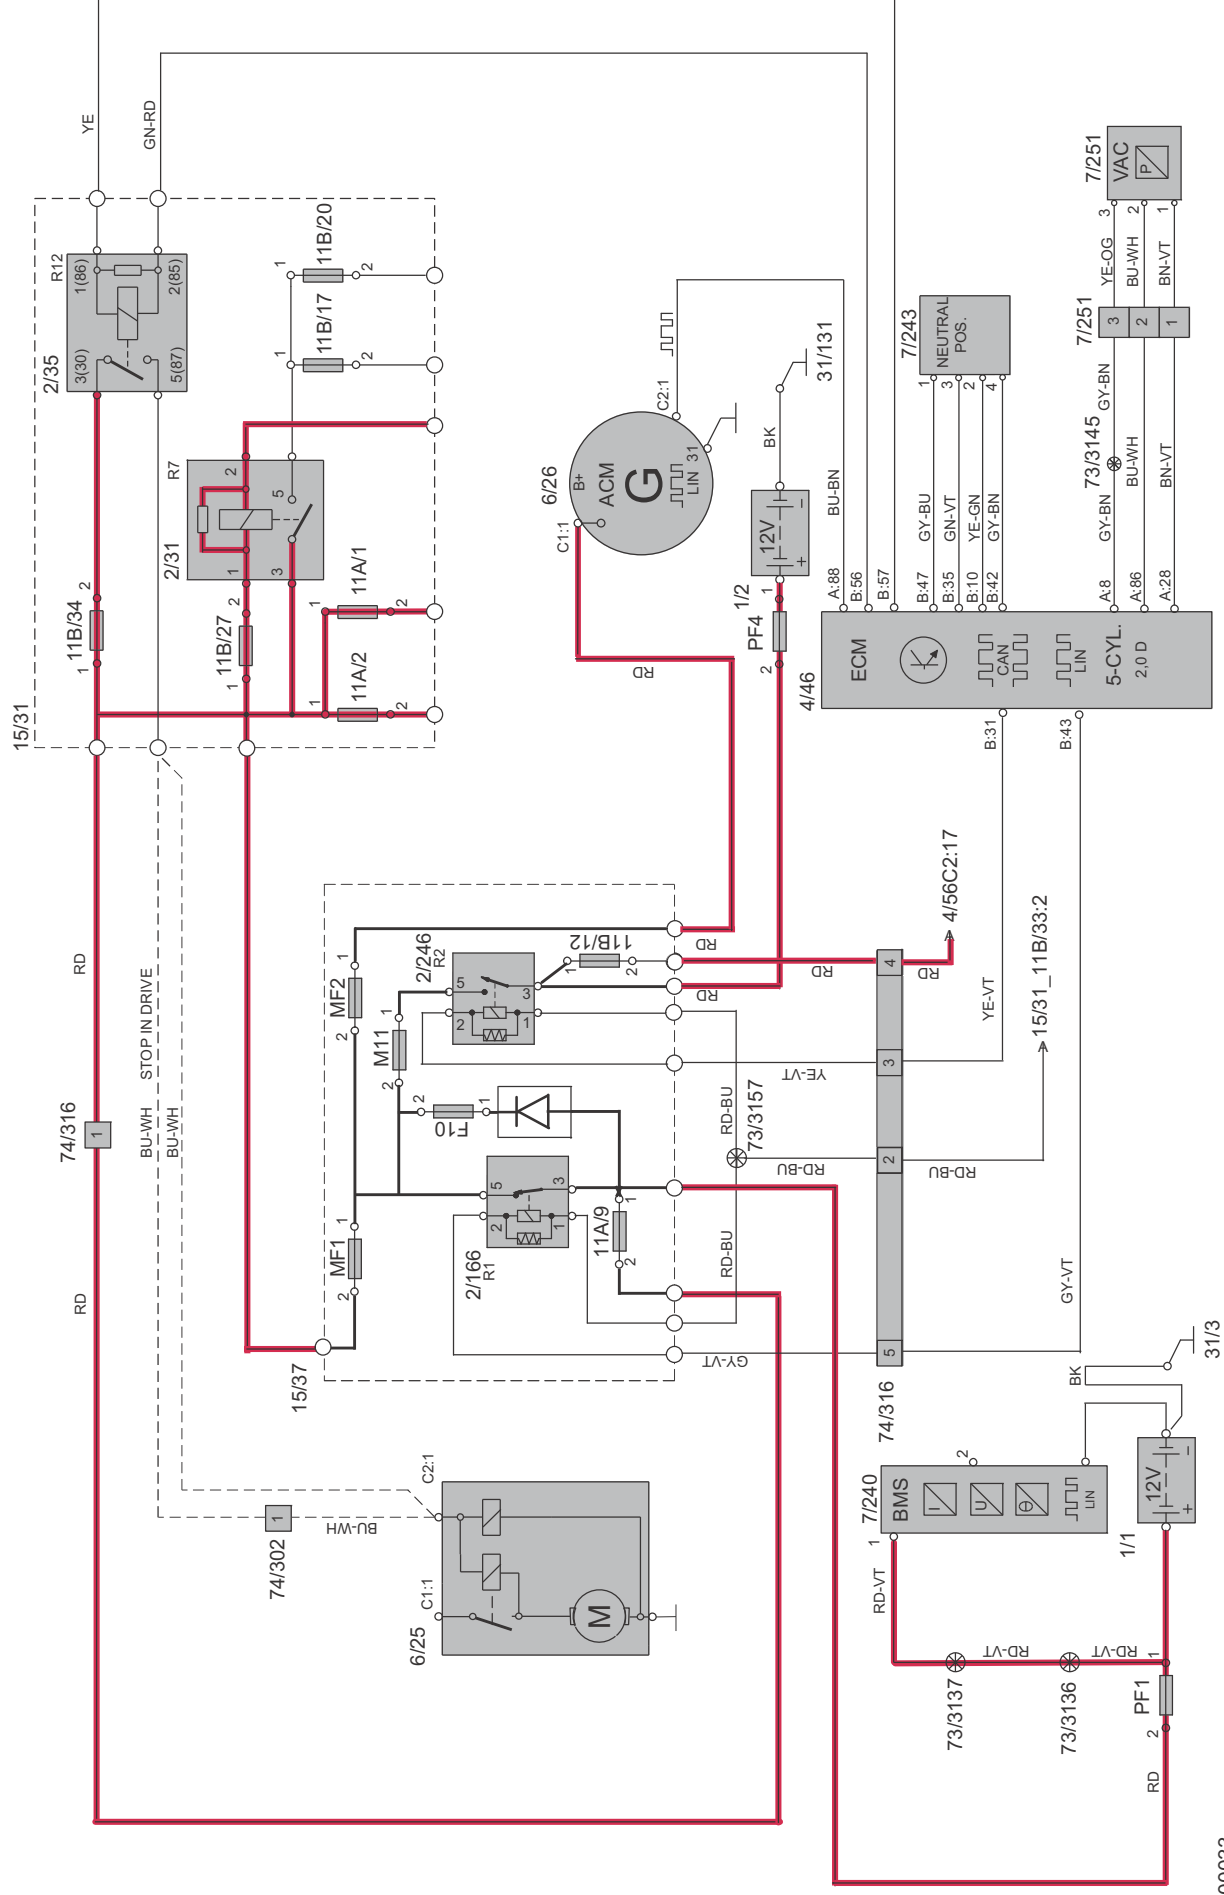


N00033

Engine management system, 4-Cyl. Turbo 1.6l 1:2

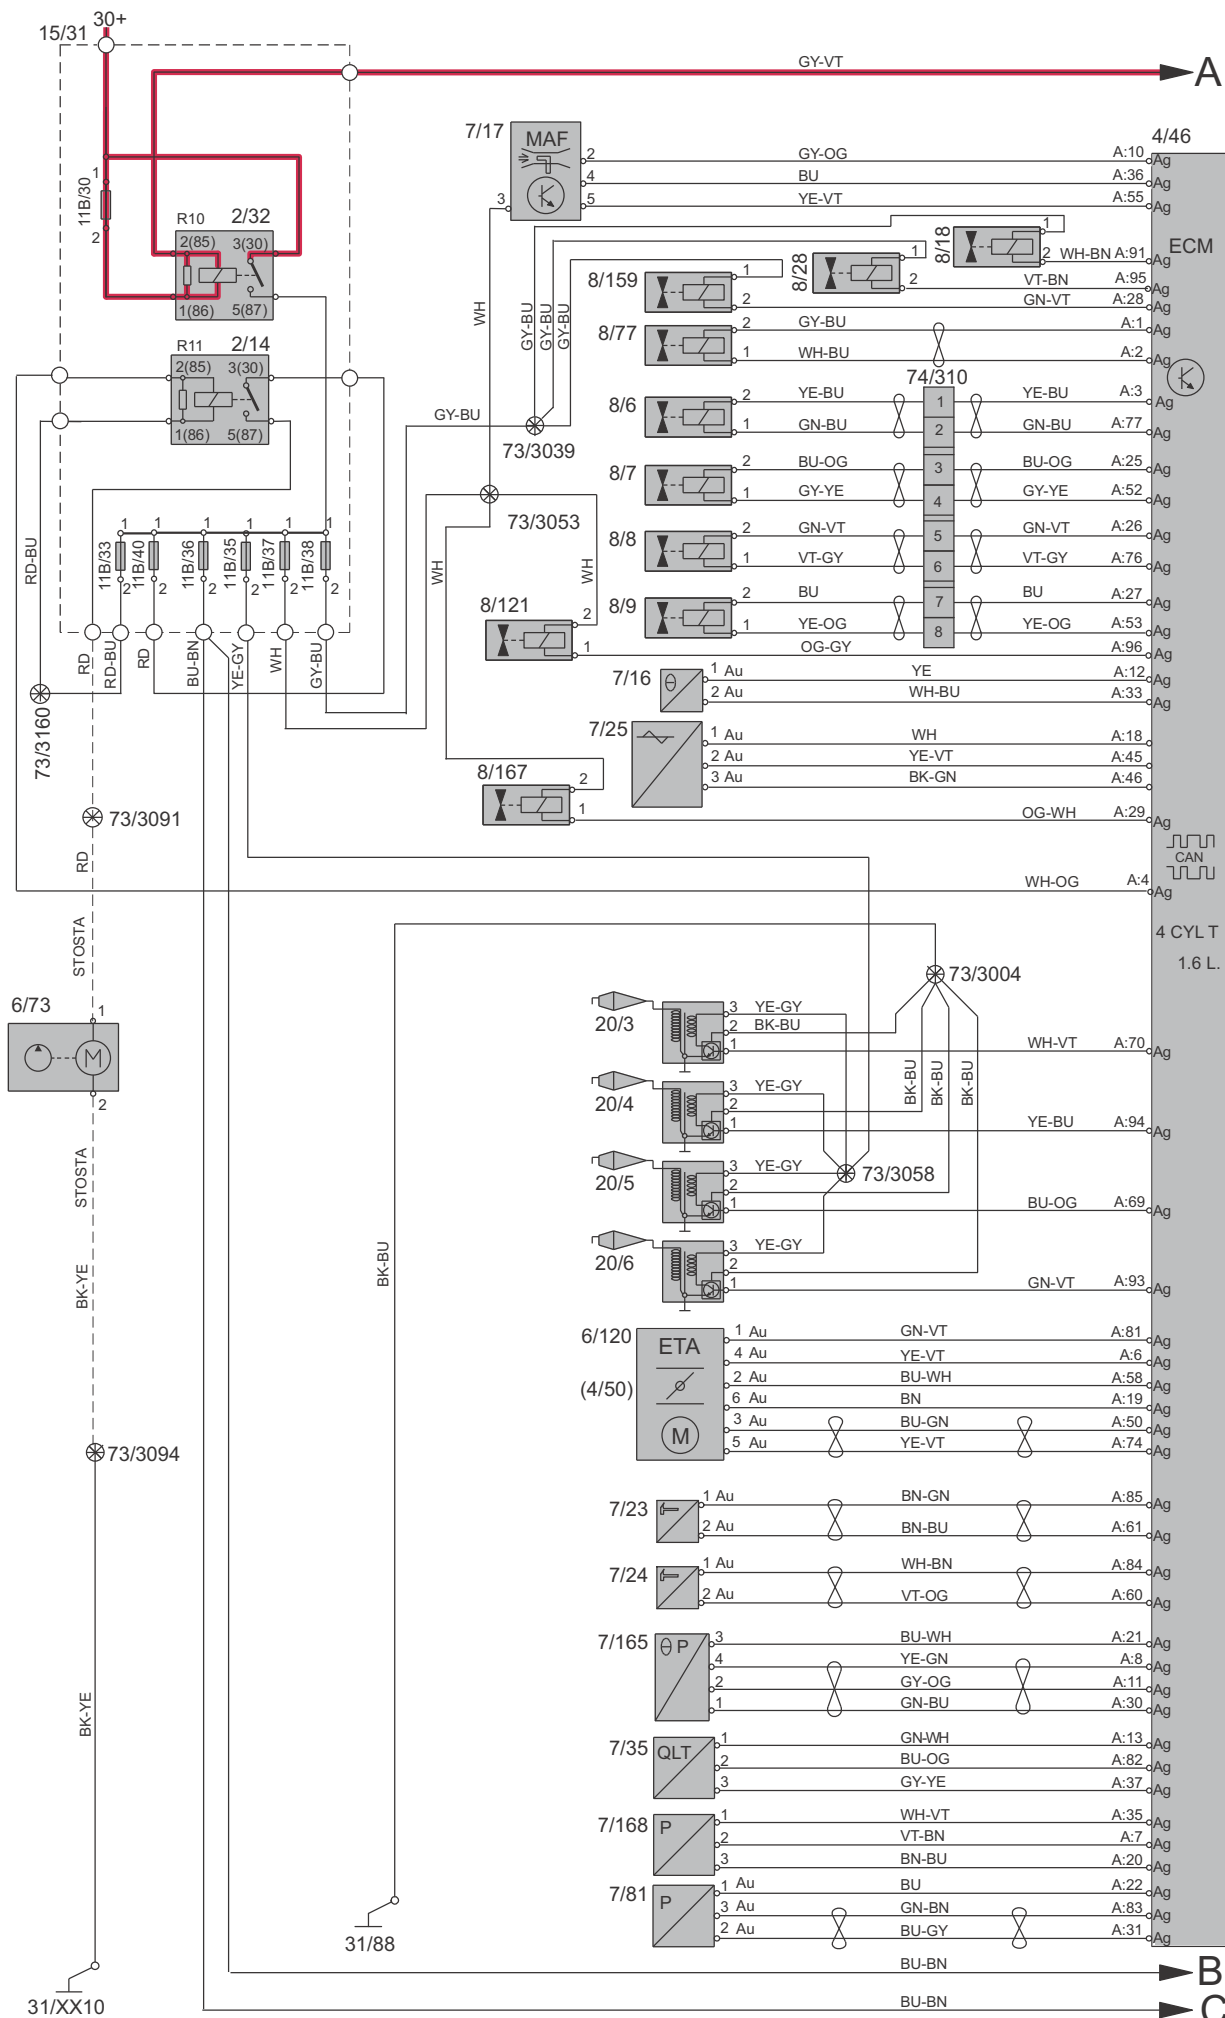


Group 28 Ignition and control system

Engine management system, 4-Cyl. Turbo 1.6l 2:2

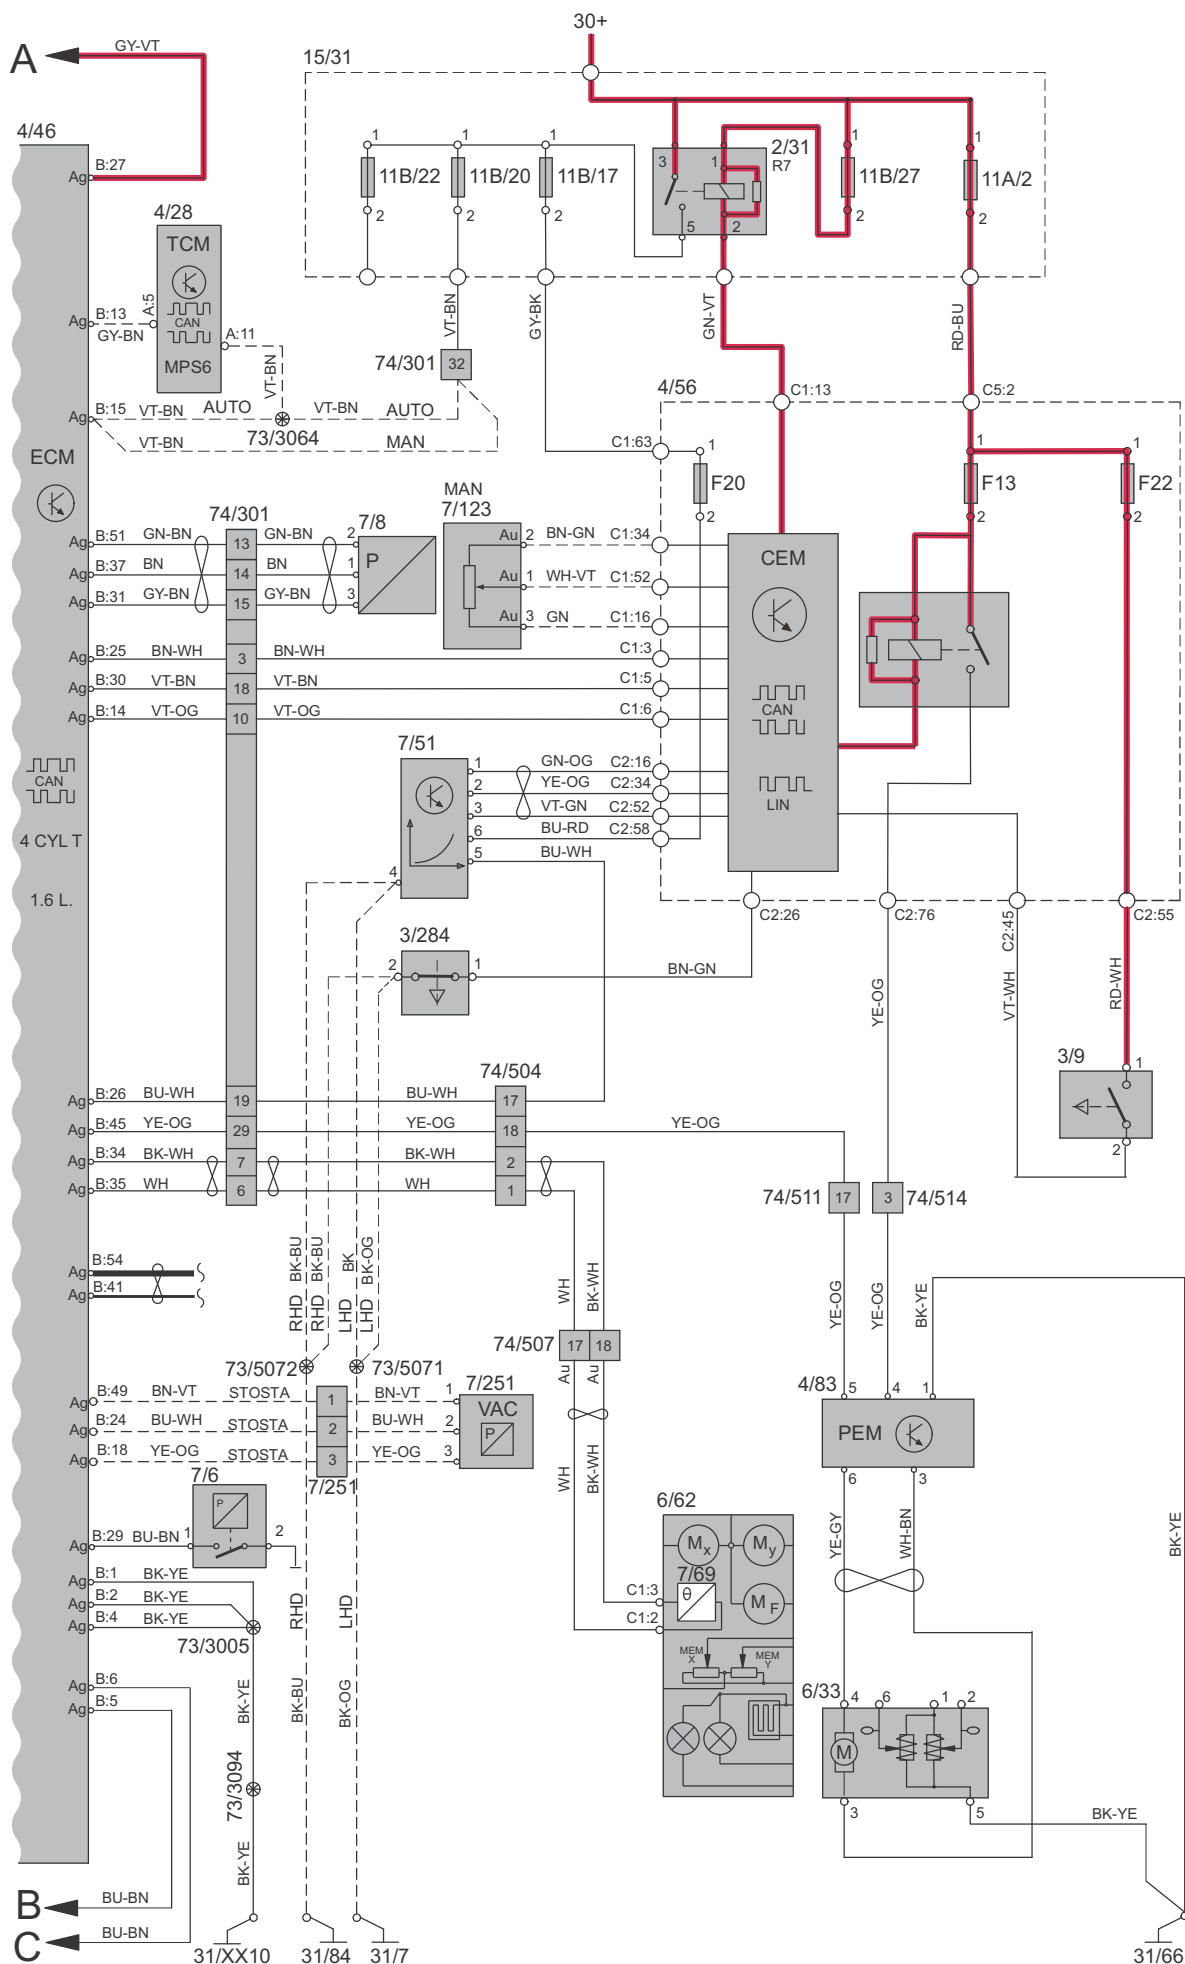


Group 28 Ignition and control system

Engine management system, 4-Cyl. Turbo 2.0l 1:2

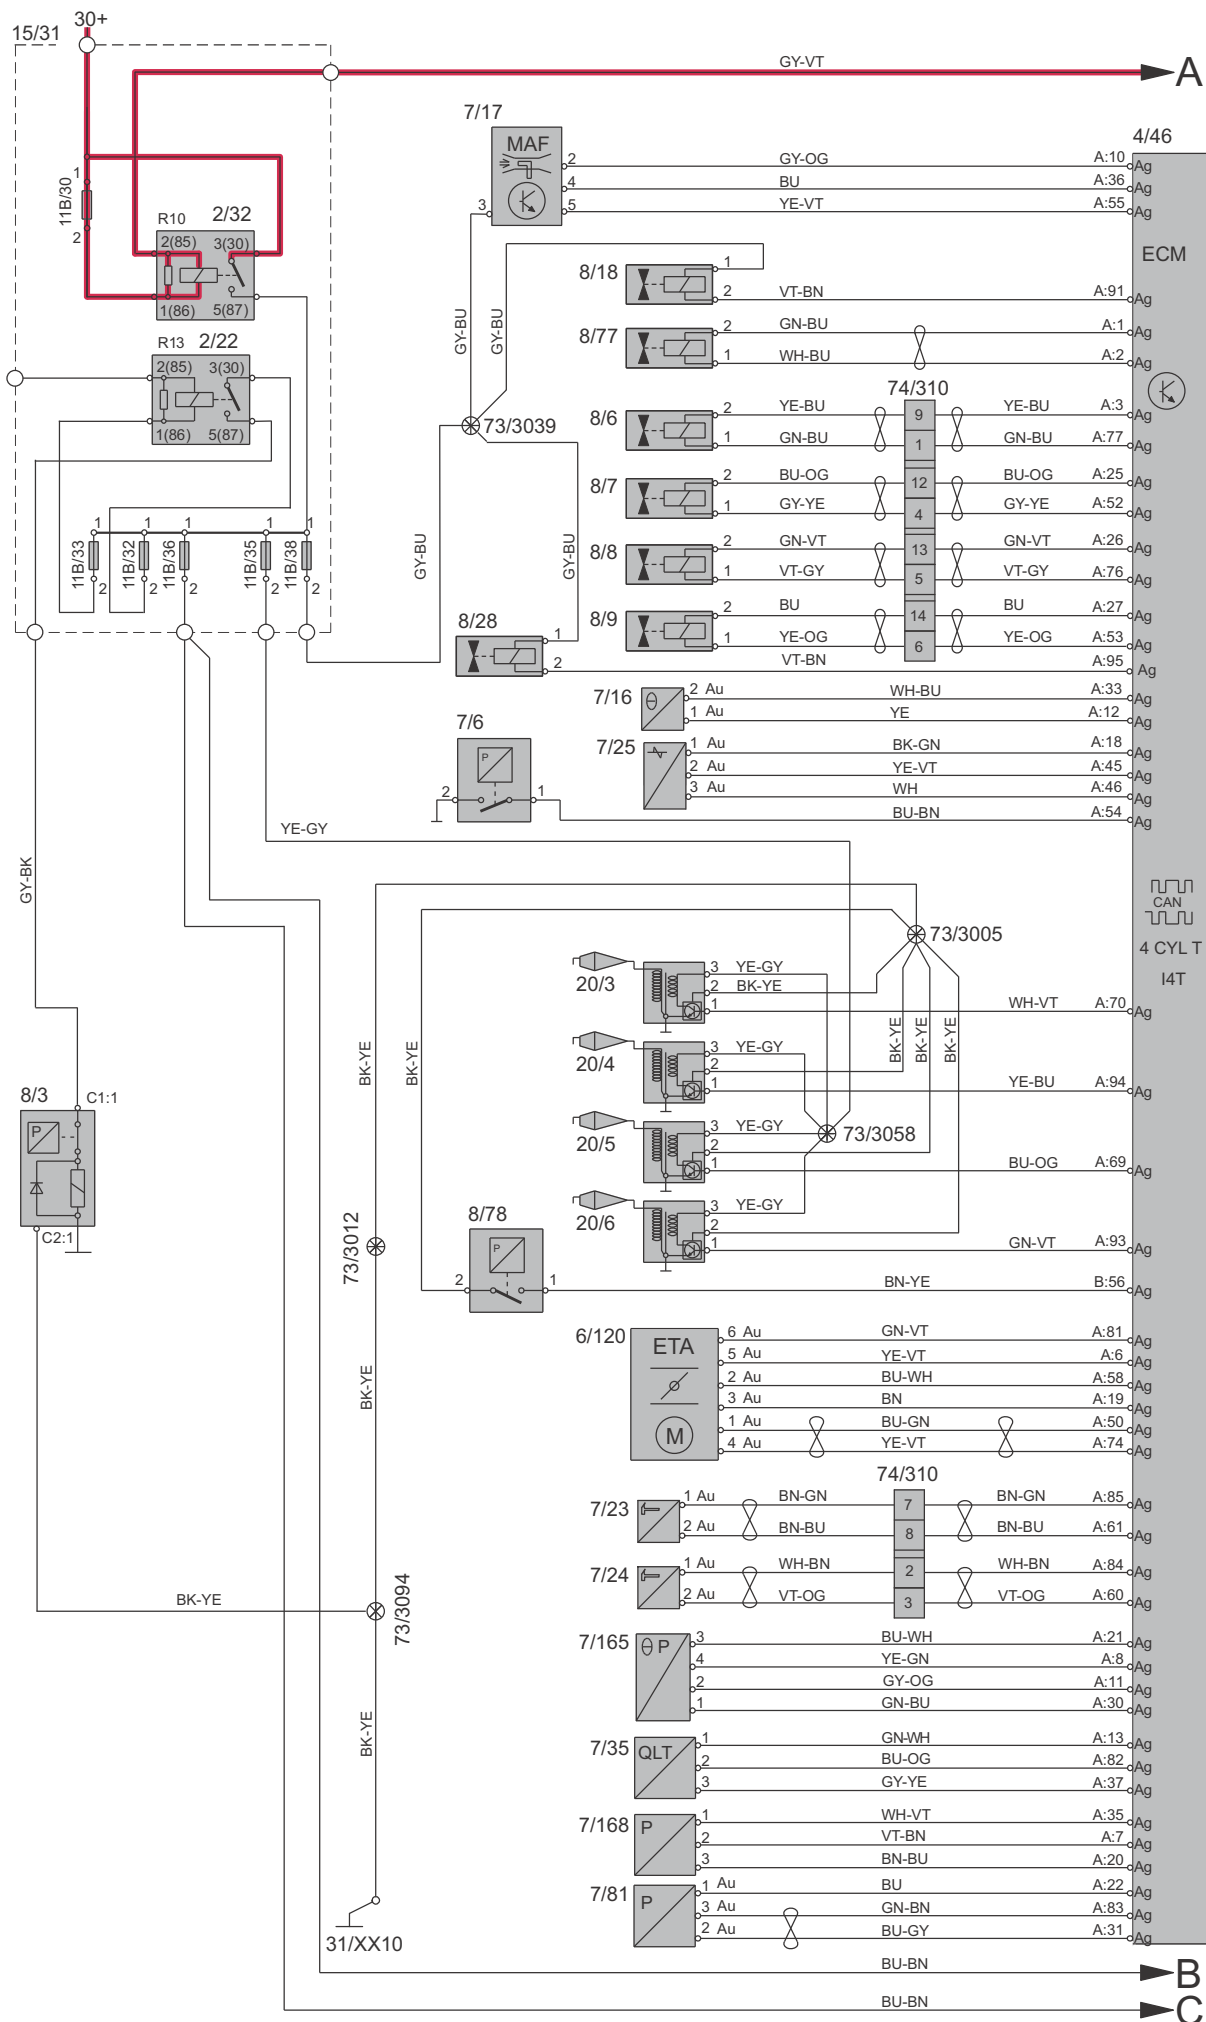


Engine management system, 4-Cyl. Turbo 2.0l 2:2

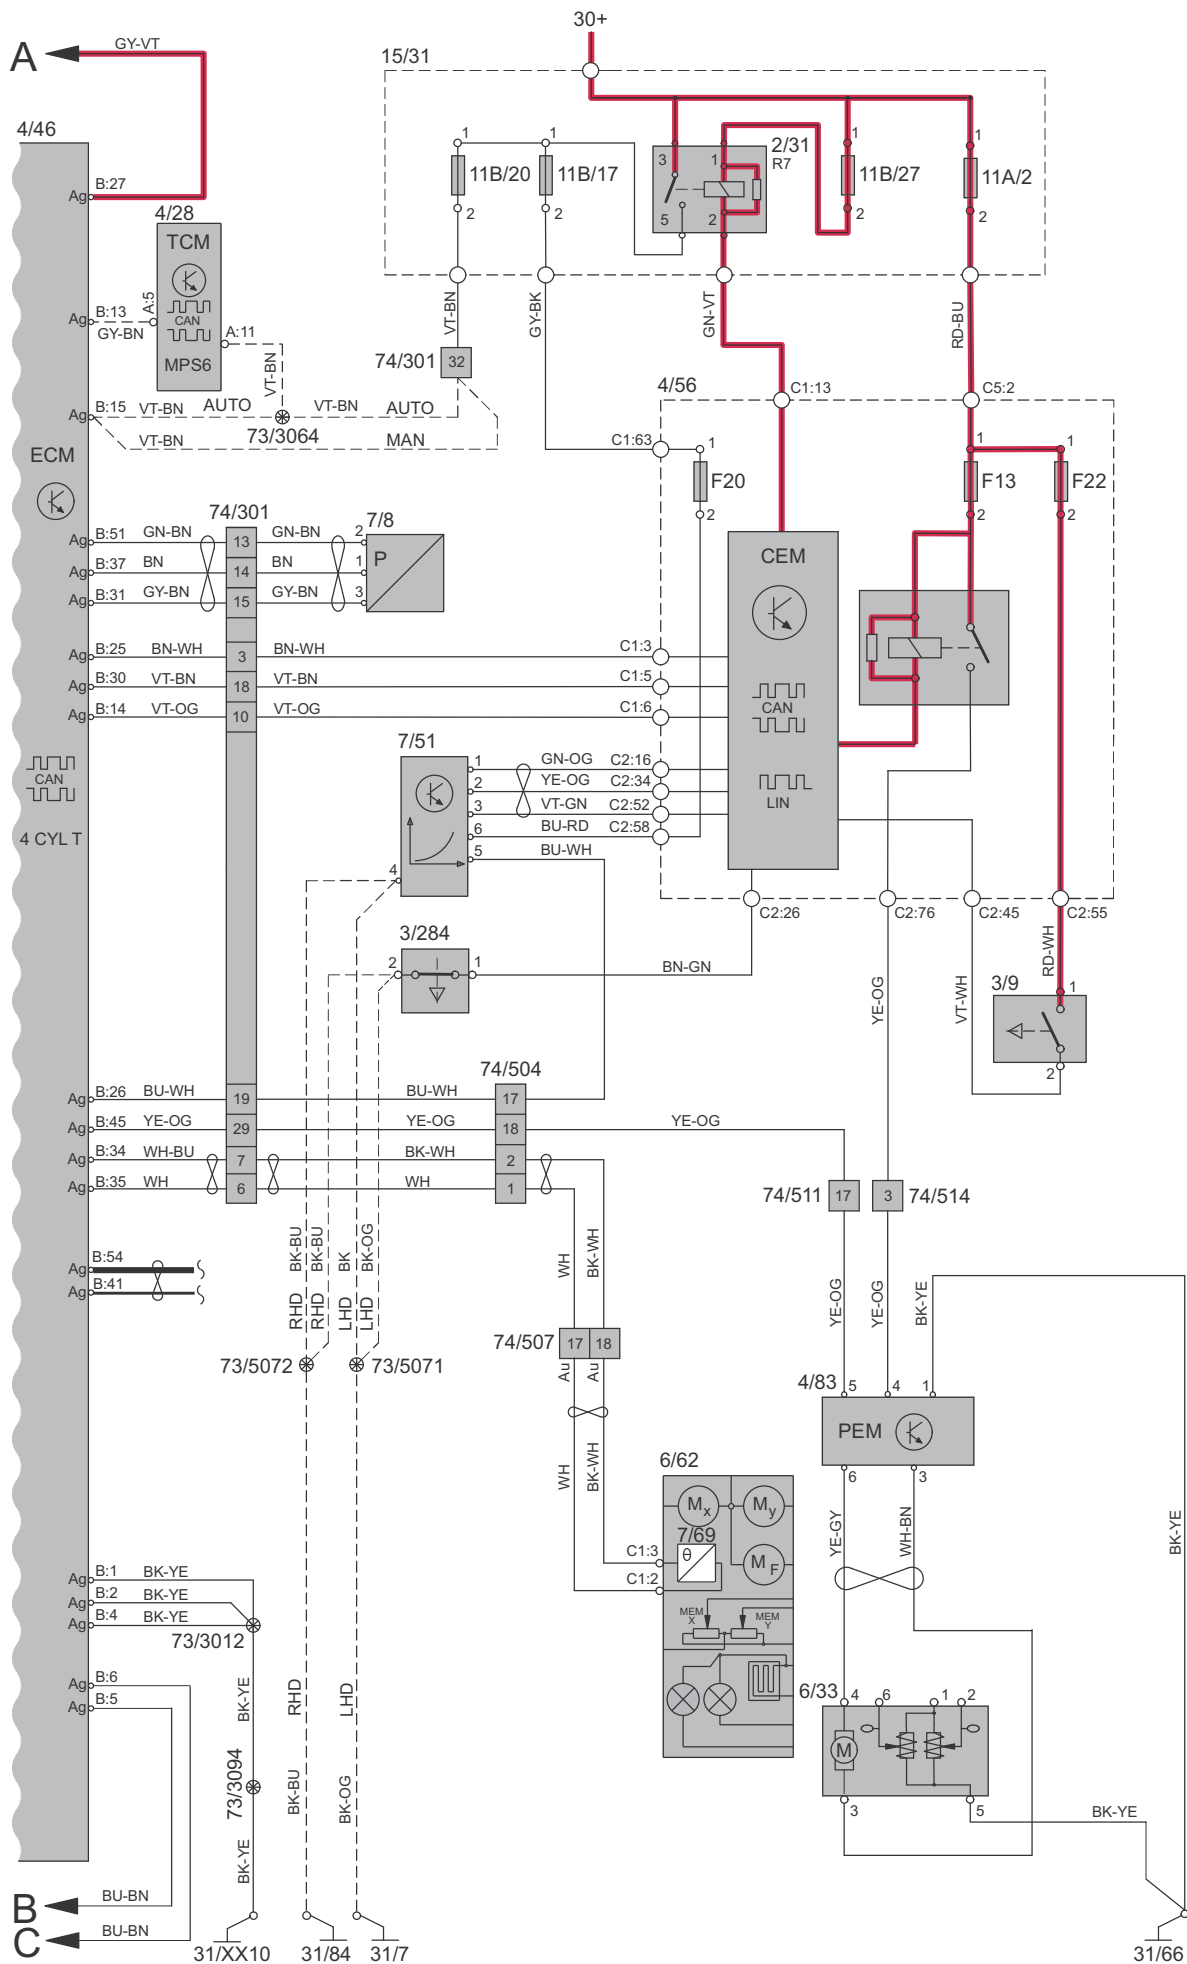


Group 28 Ignition and control system

Engine management system, 5-Cyl. Turbo 1:2

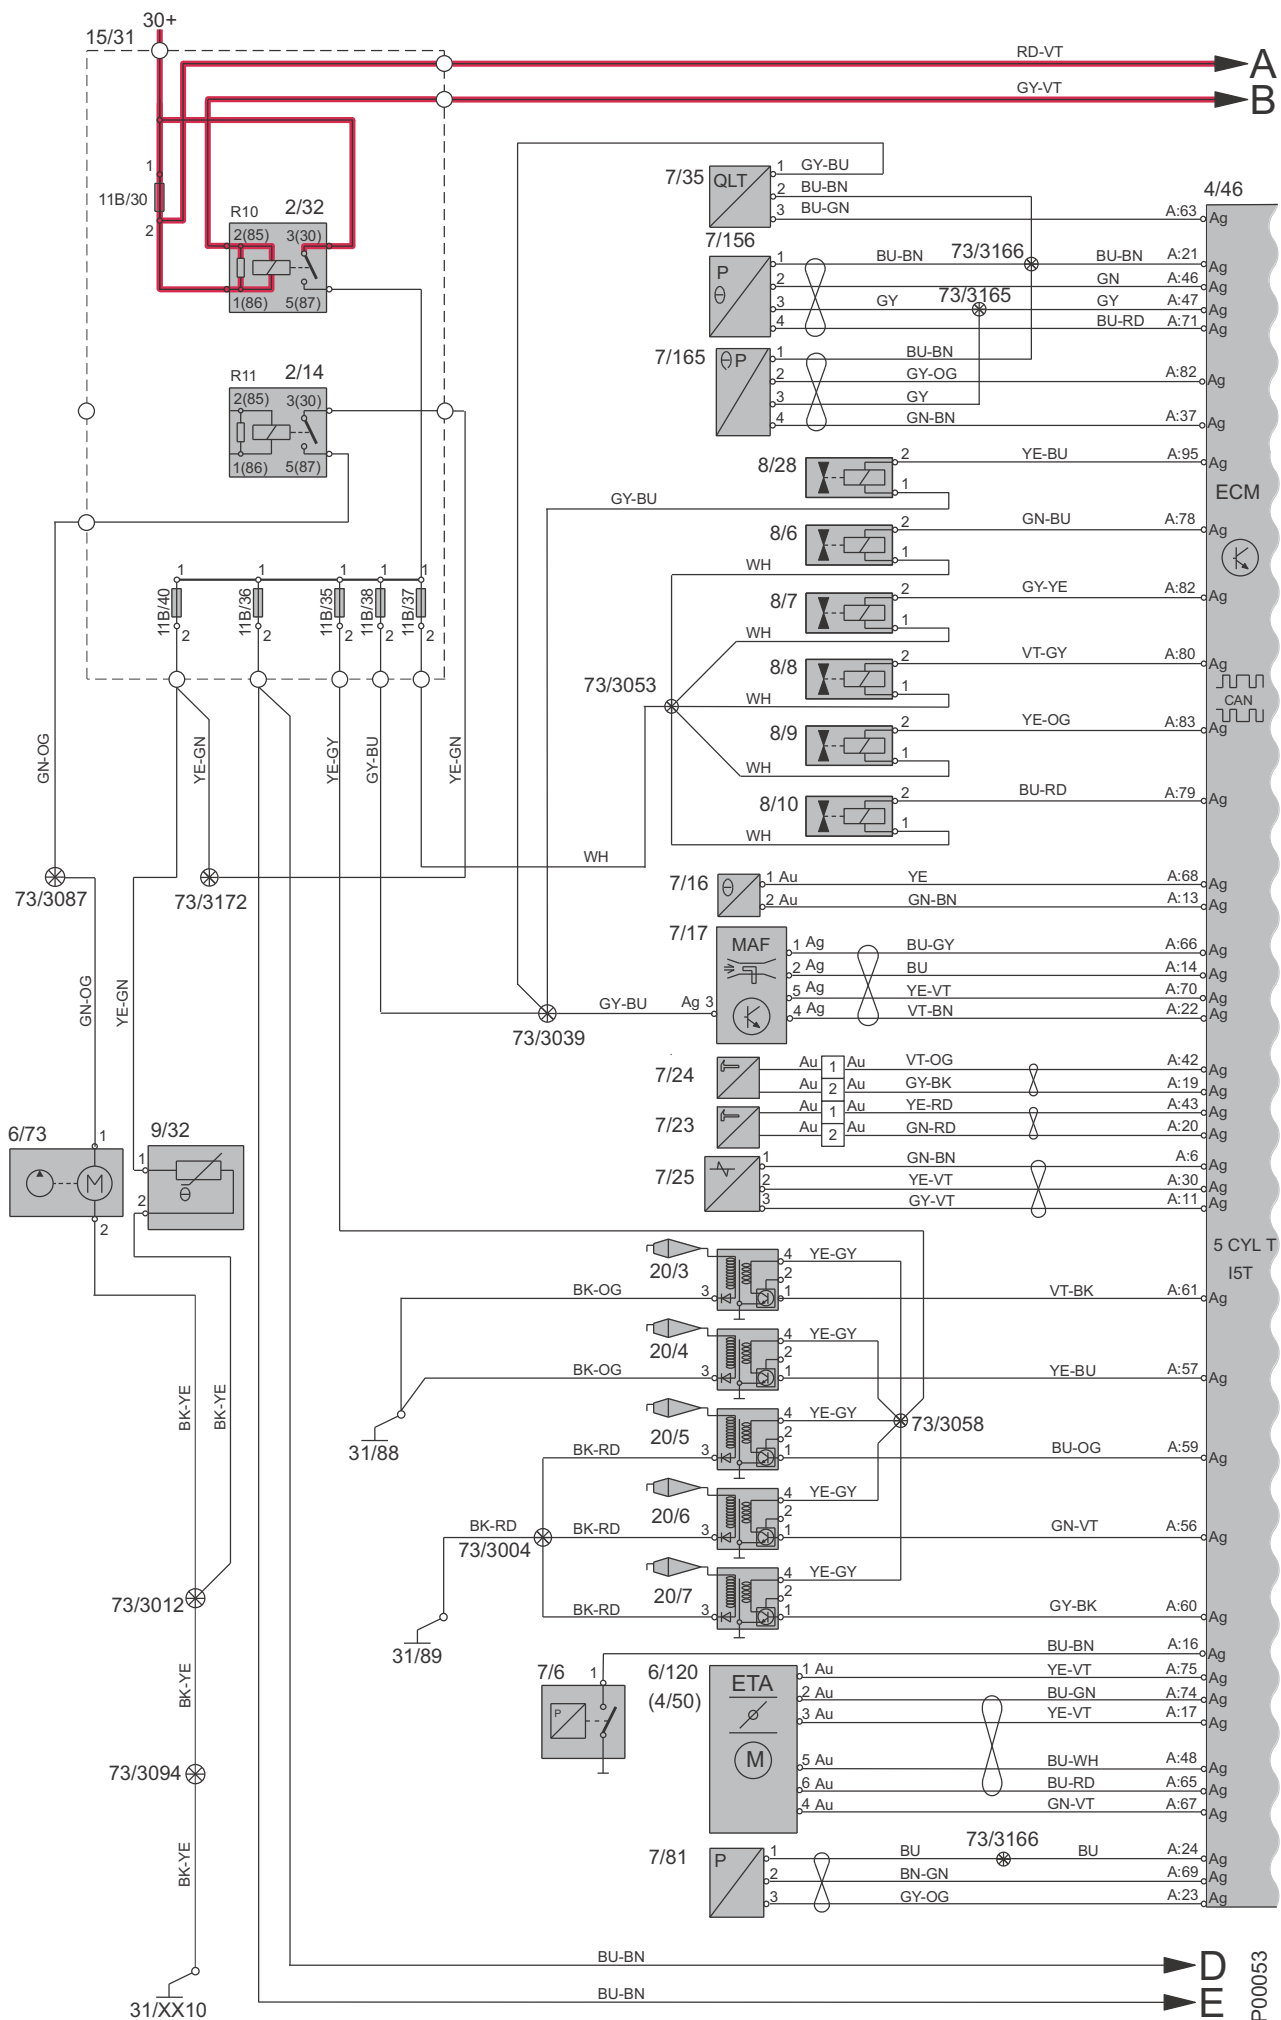


Group 28 Ignition and control system

Engine management system, 5-Cyl. Turbo 2:2

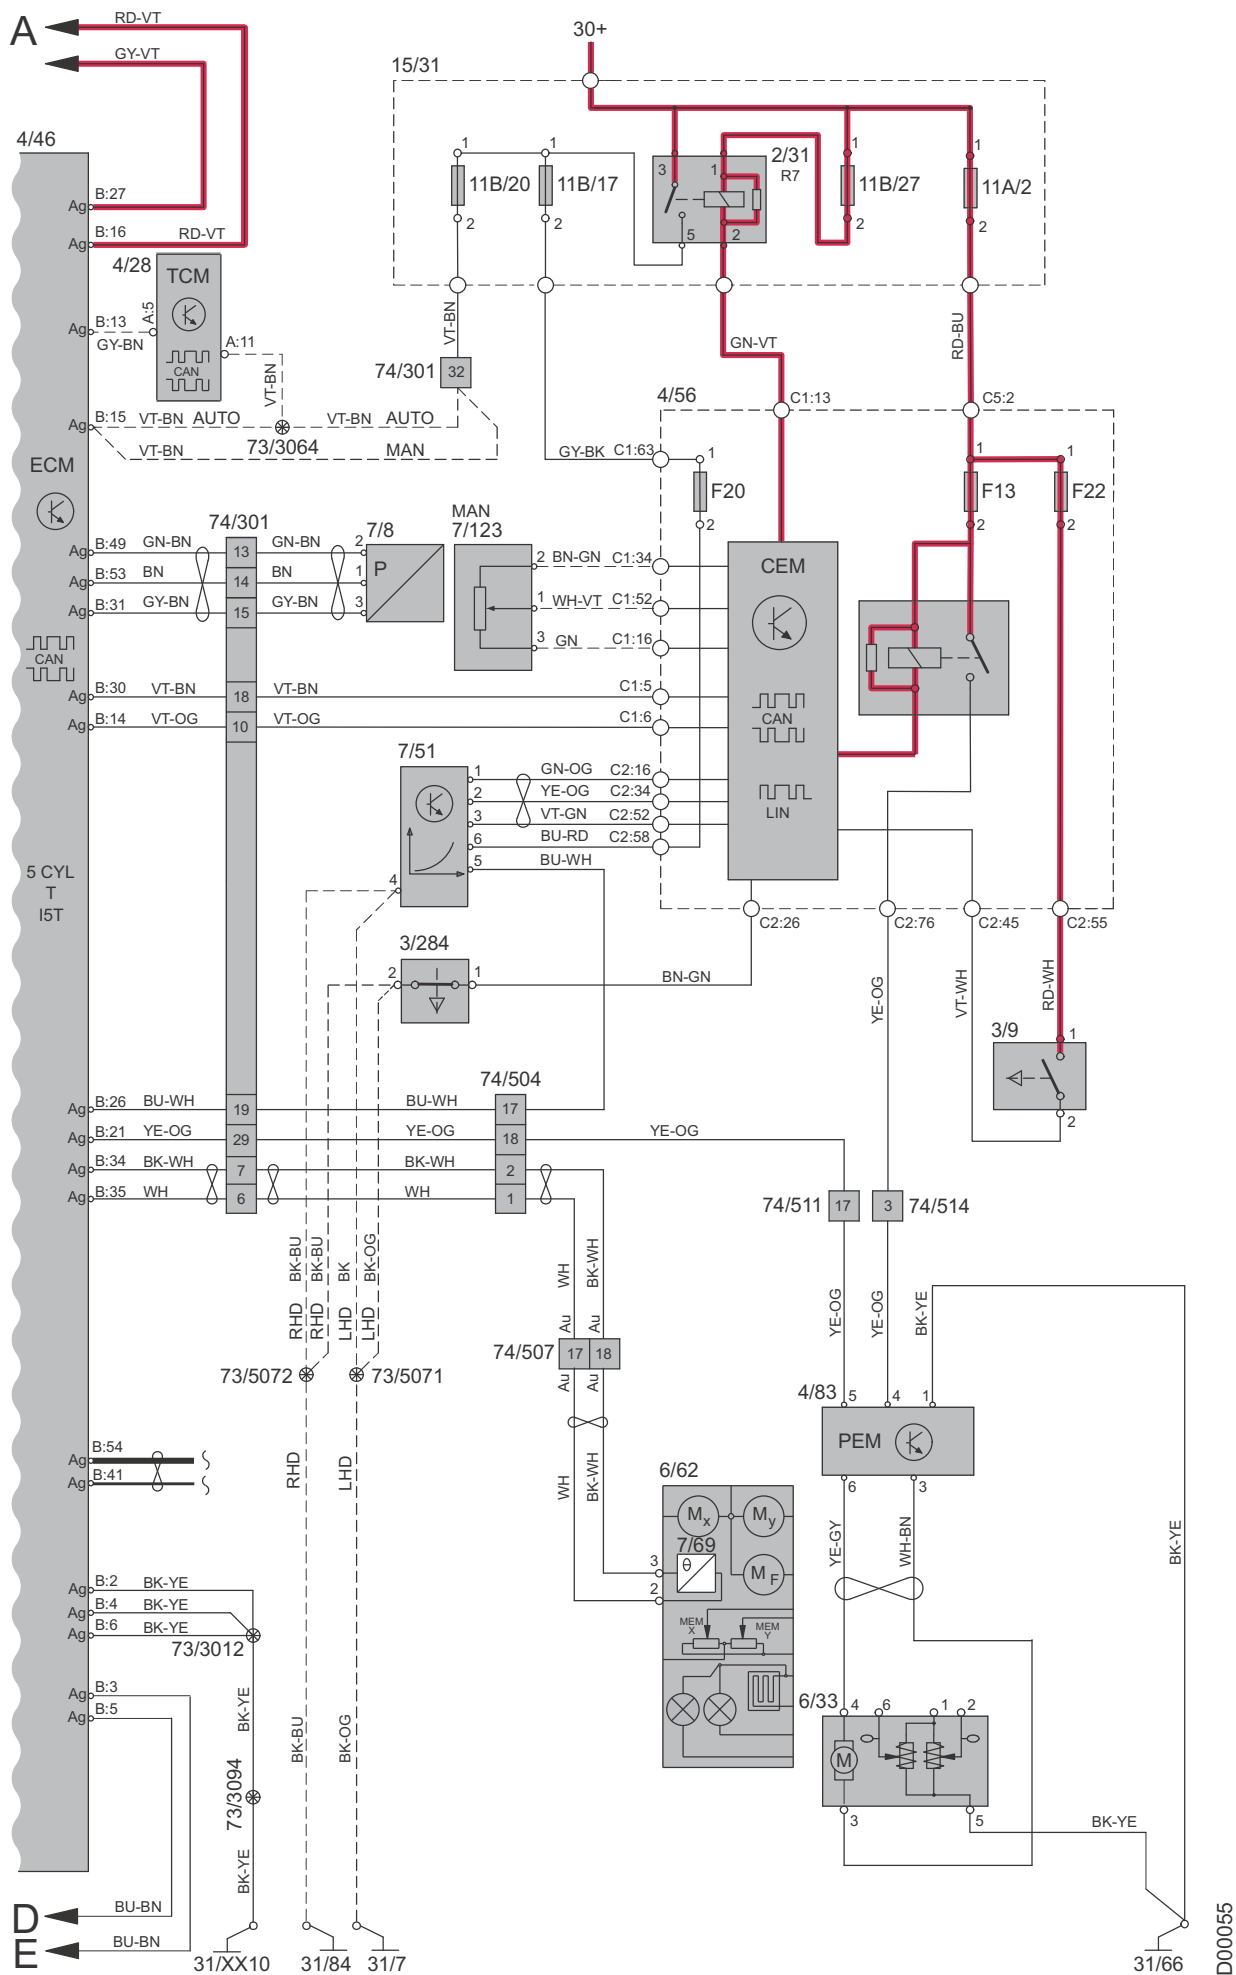


Group 28 Ignition and control system

Engine management system, 4-Cyl. Diesel DV6C 1:3

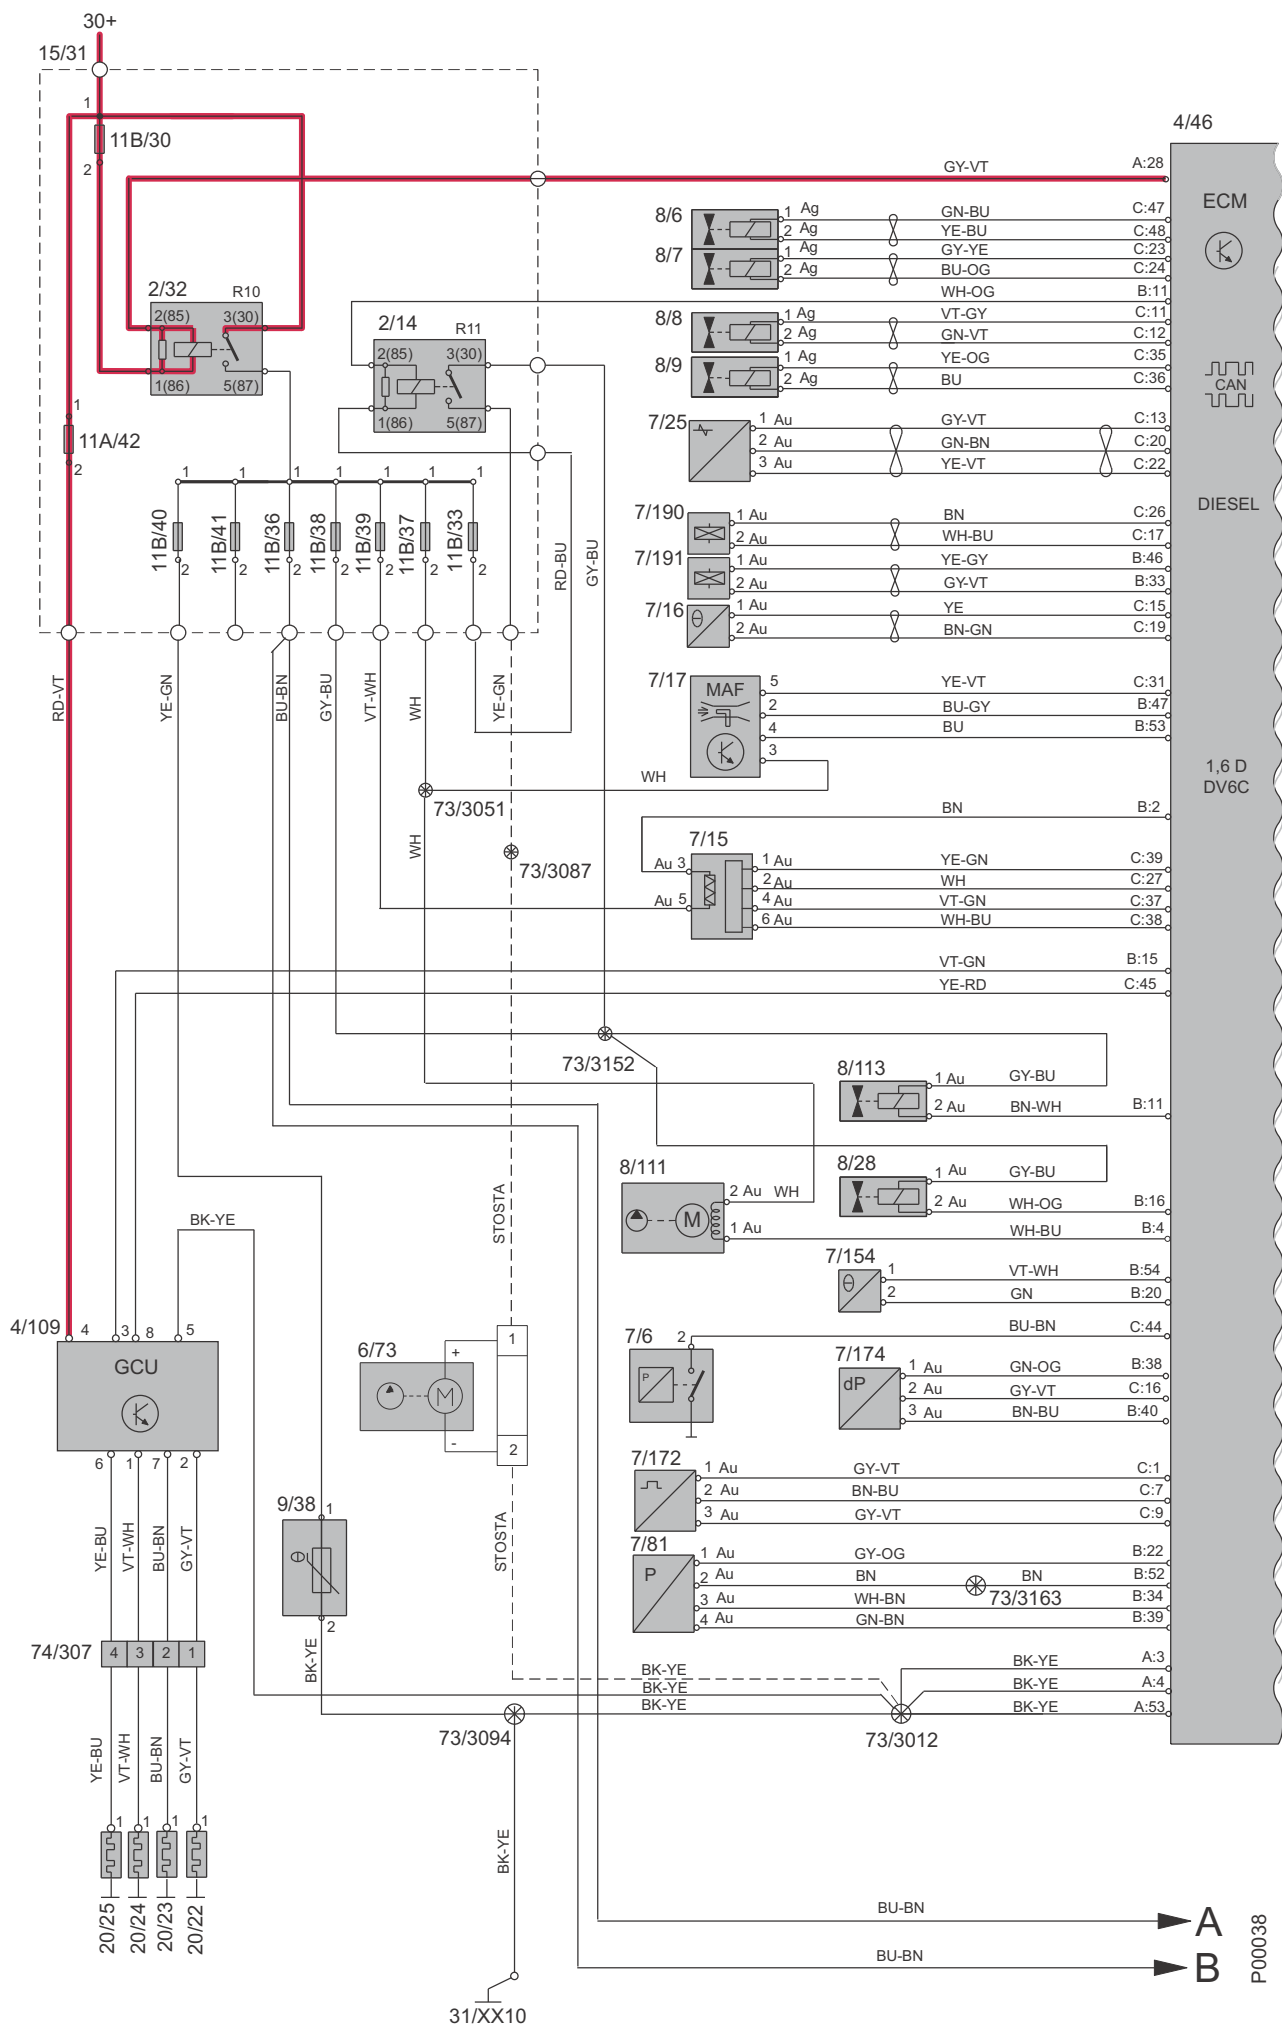


Group 28 Ignition and control system

Engine management system, 4-Cyl. Diesel DV6C 2:3

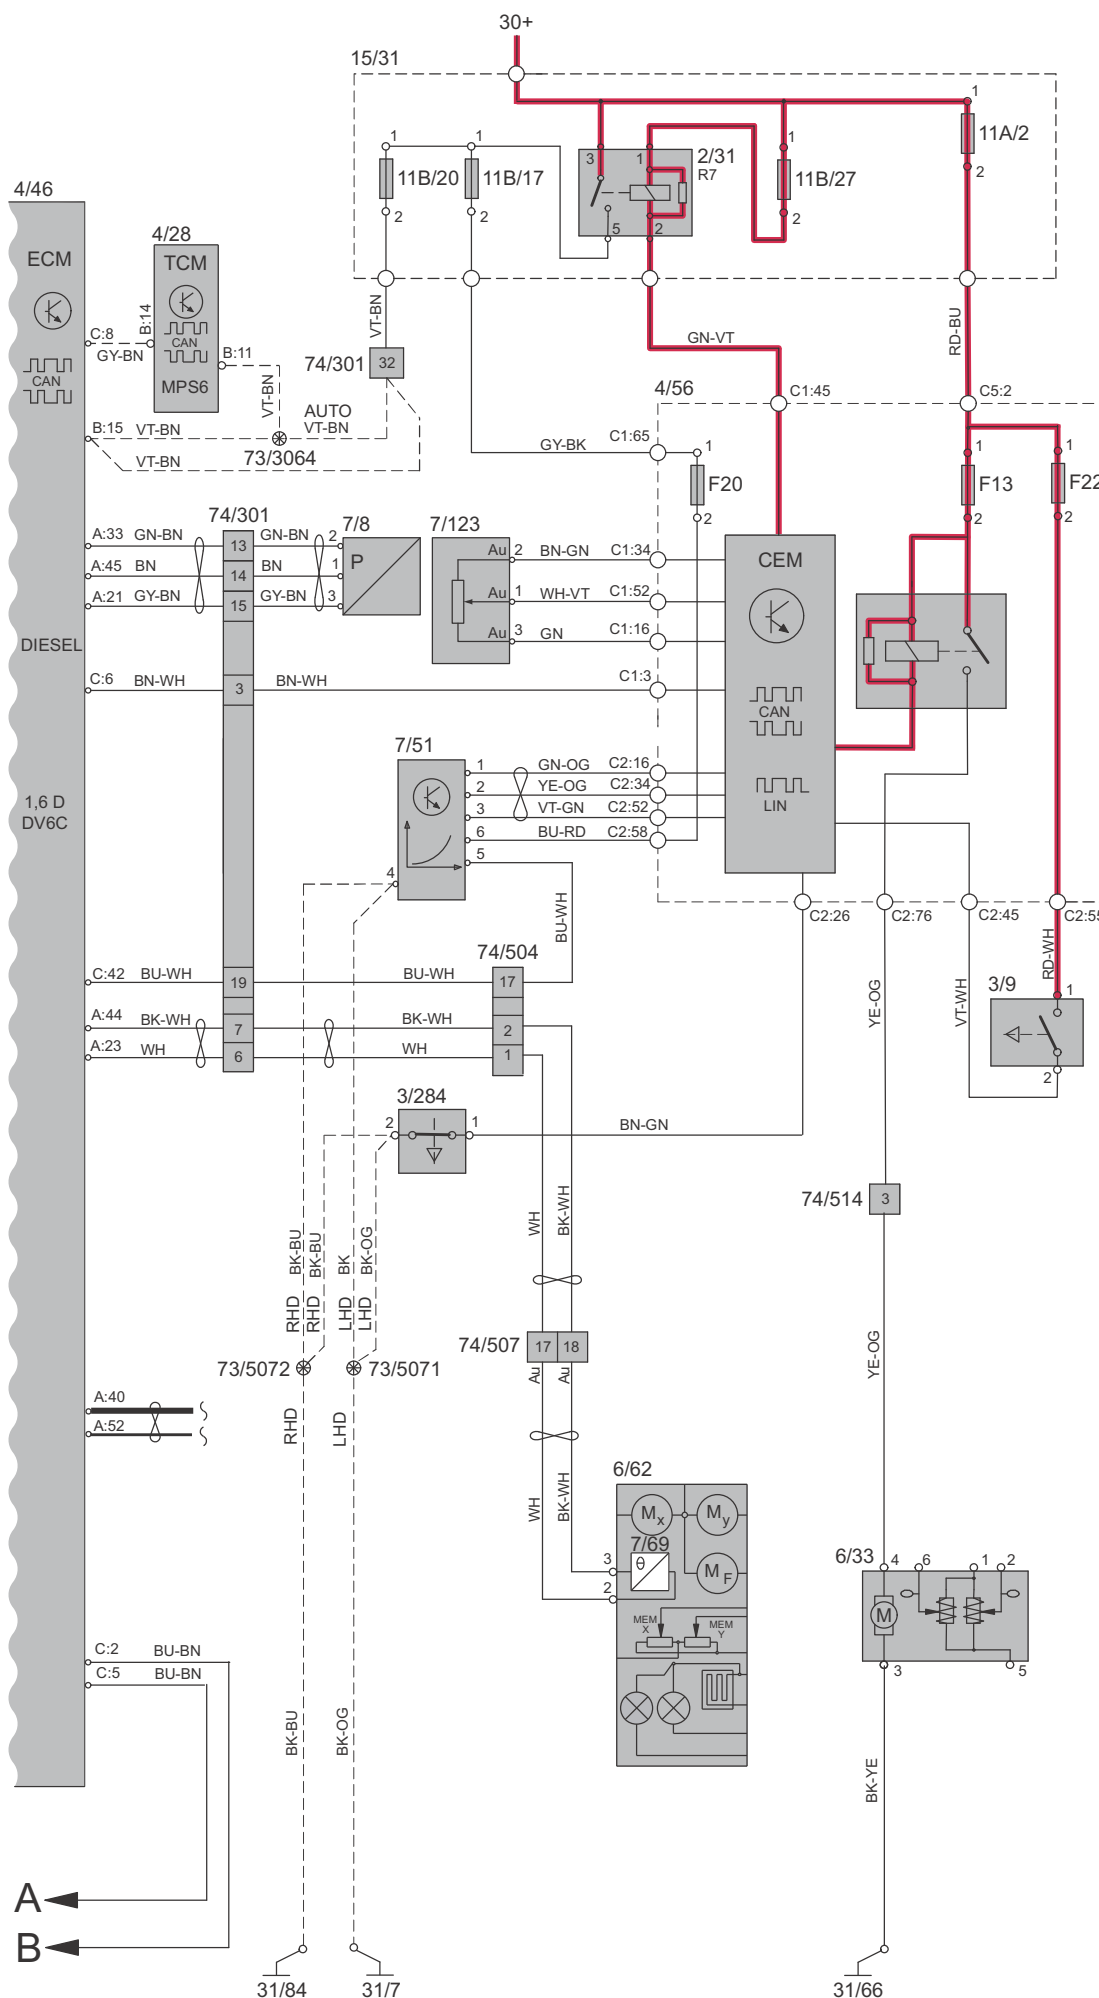


Group 28 Ignition and control system

Engine management system, 4-Cyl. Diesel DV6C 3:3

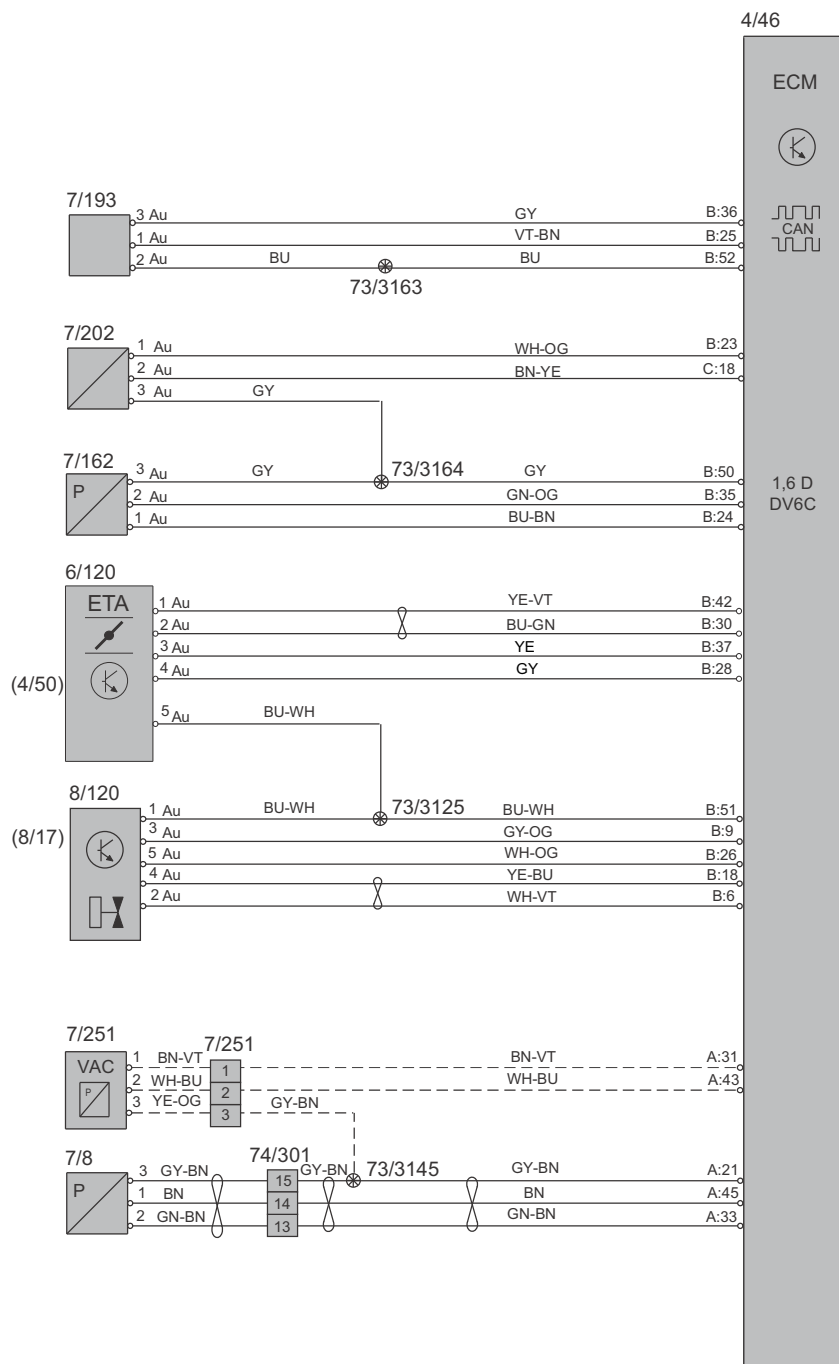

Group 28 Ignition and control system


Engine management system, 5-Cyl. Diesel 1:3

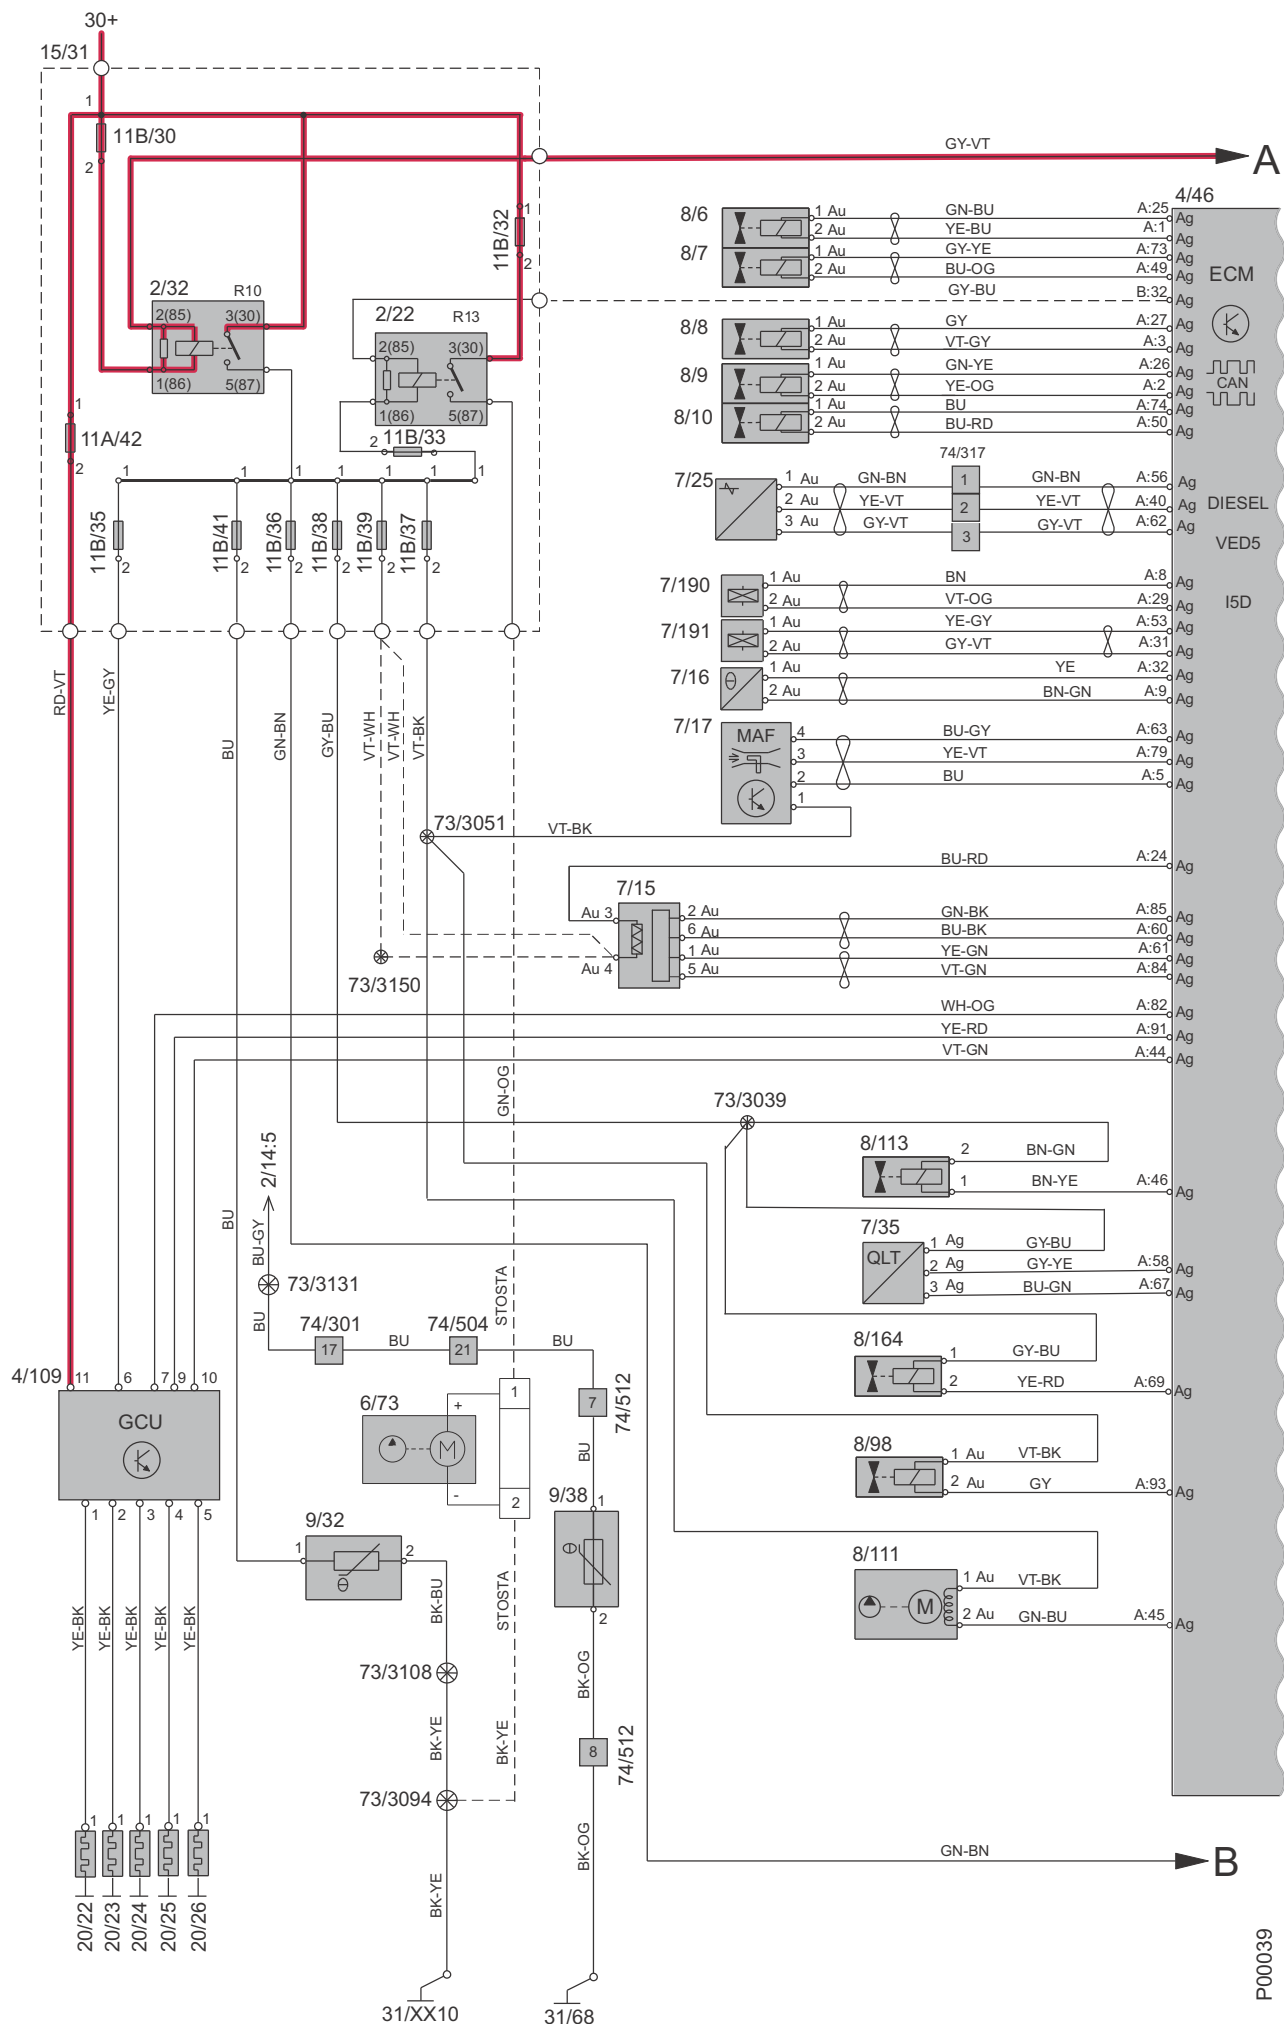

P00039

Group 28 Ignition and control system


Engine management system, 5-Cyl. Diesel 2:3

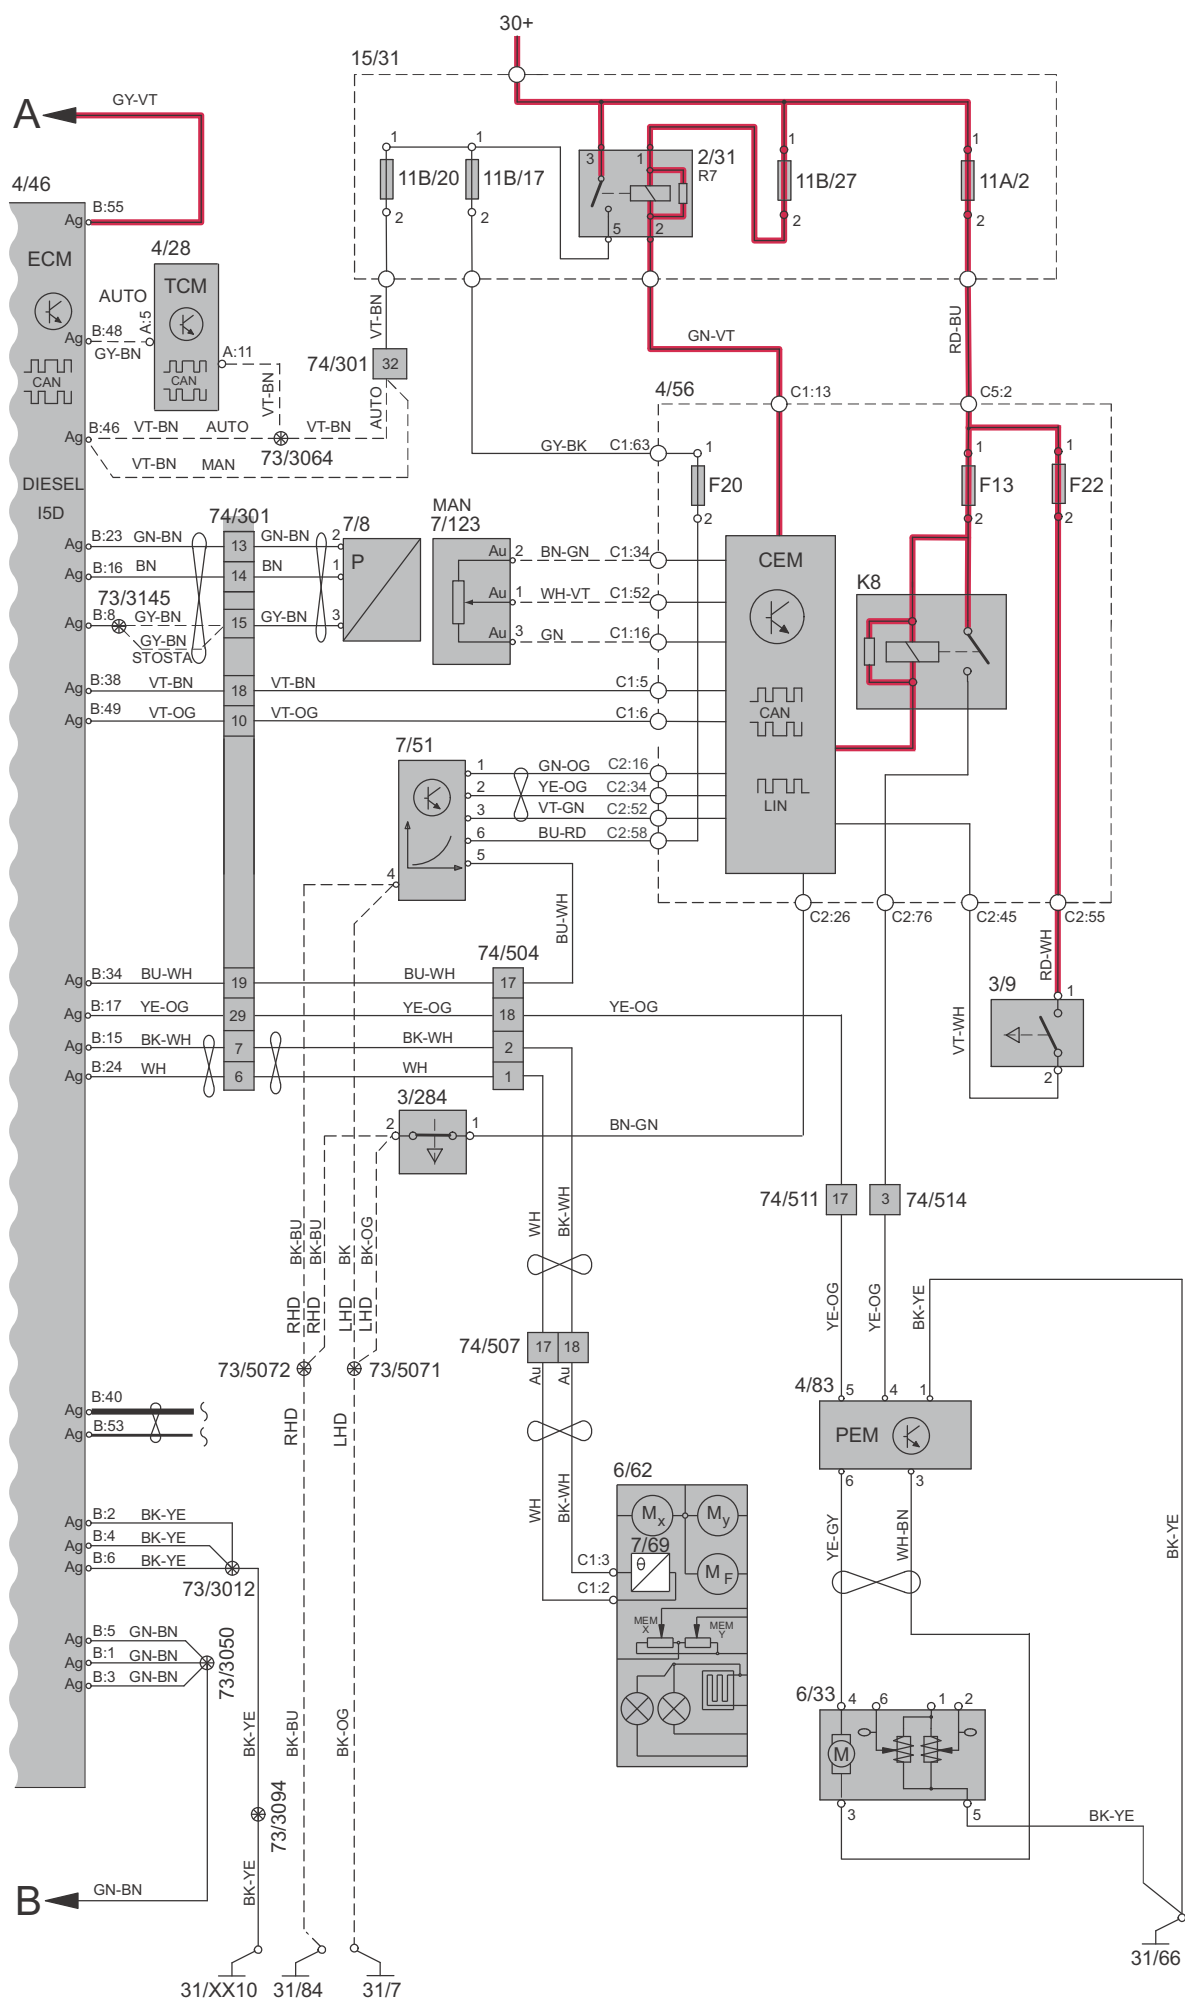

N00032


Group 28 Ignition and control system

Engine management system, 5-Cyl. Diesel 3:3

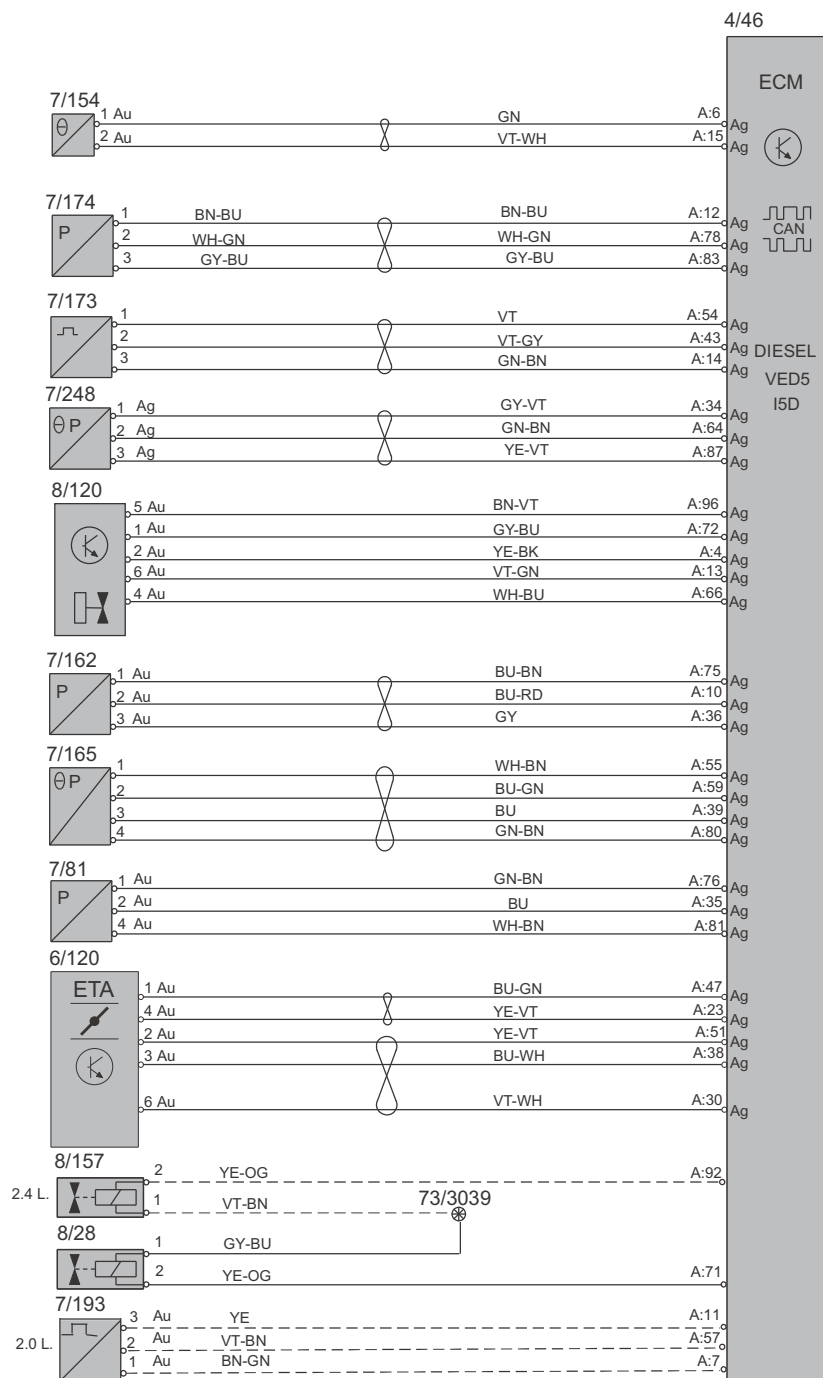


Group 28 Ignition and control system

Engine management system 6-Cyl. PZEV 1:2

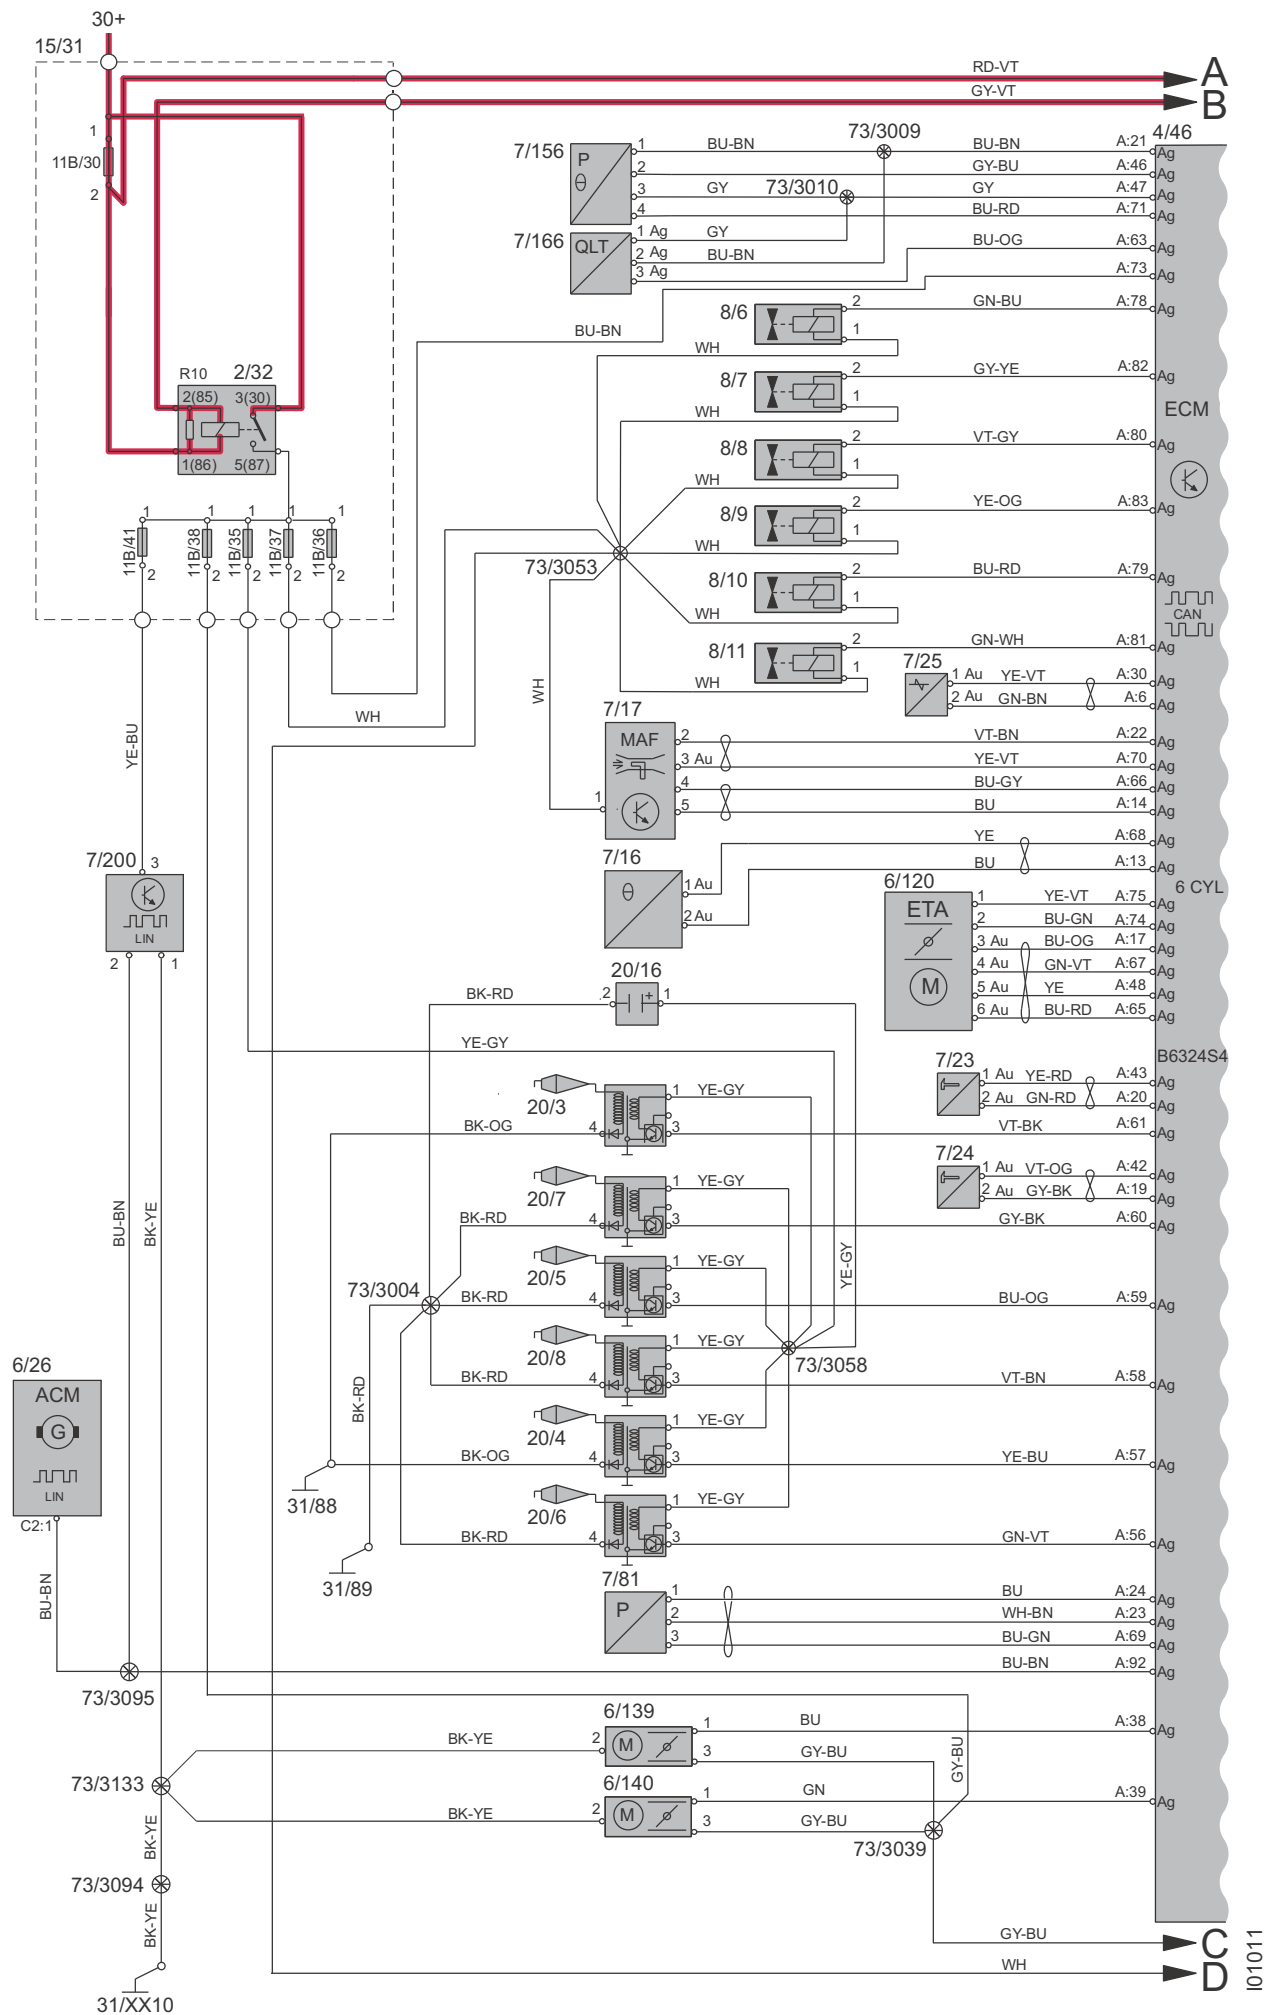


Group 28 Ignition and control system

Engine management system 6-Cyl. PZEV 2:2

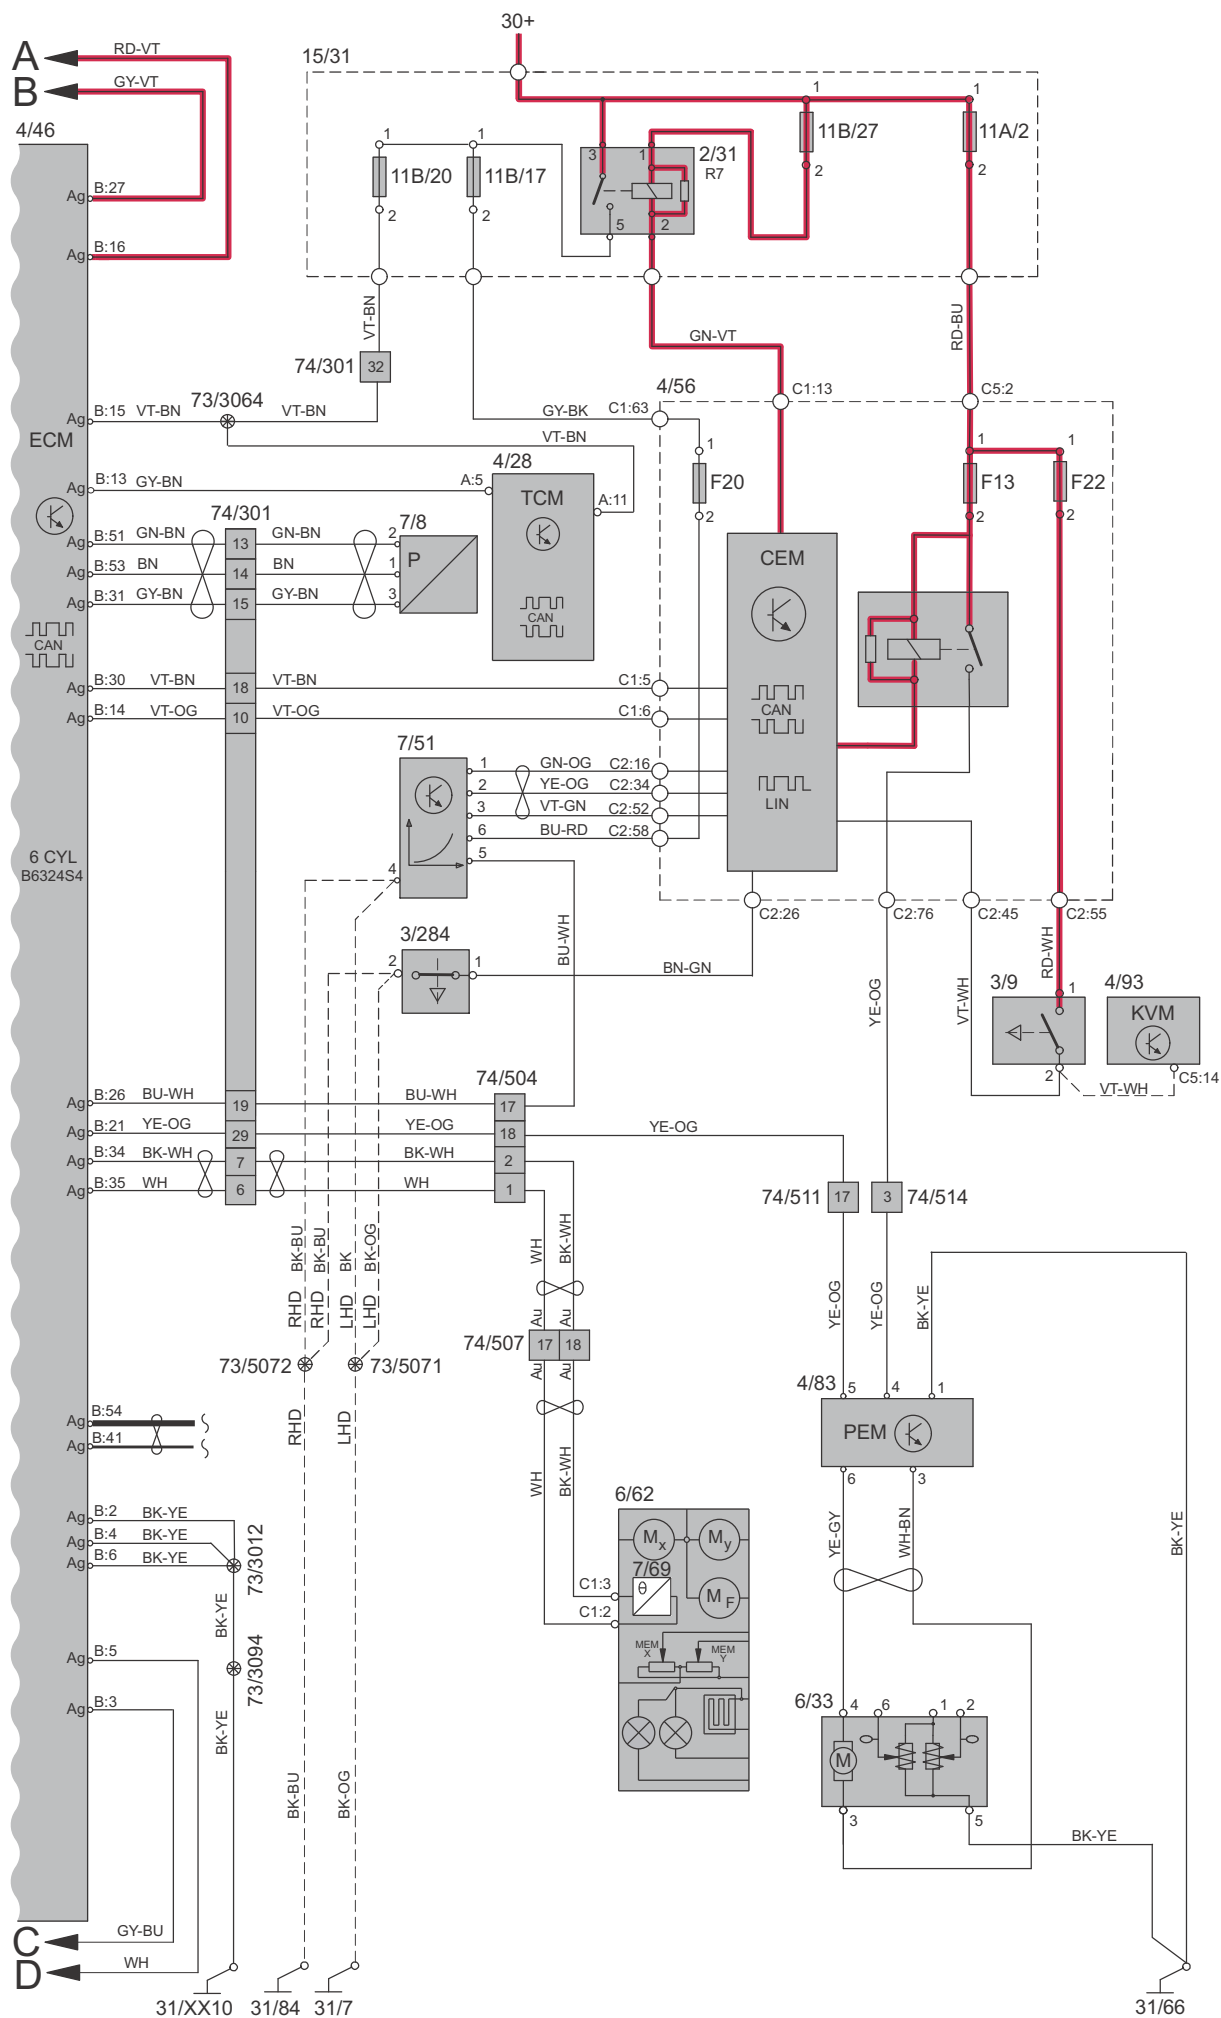


Group 28 Ignition and control system

Engine management system, 6-Cyl. 1:2

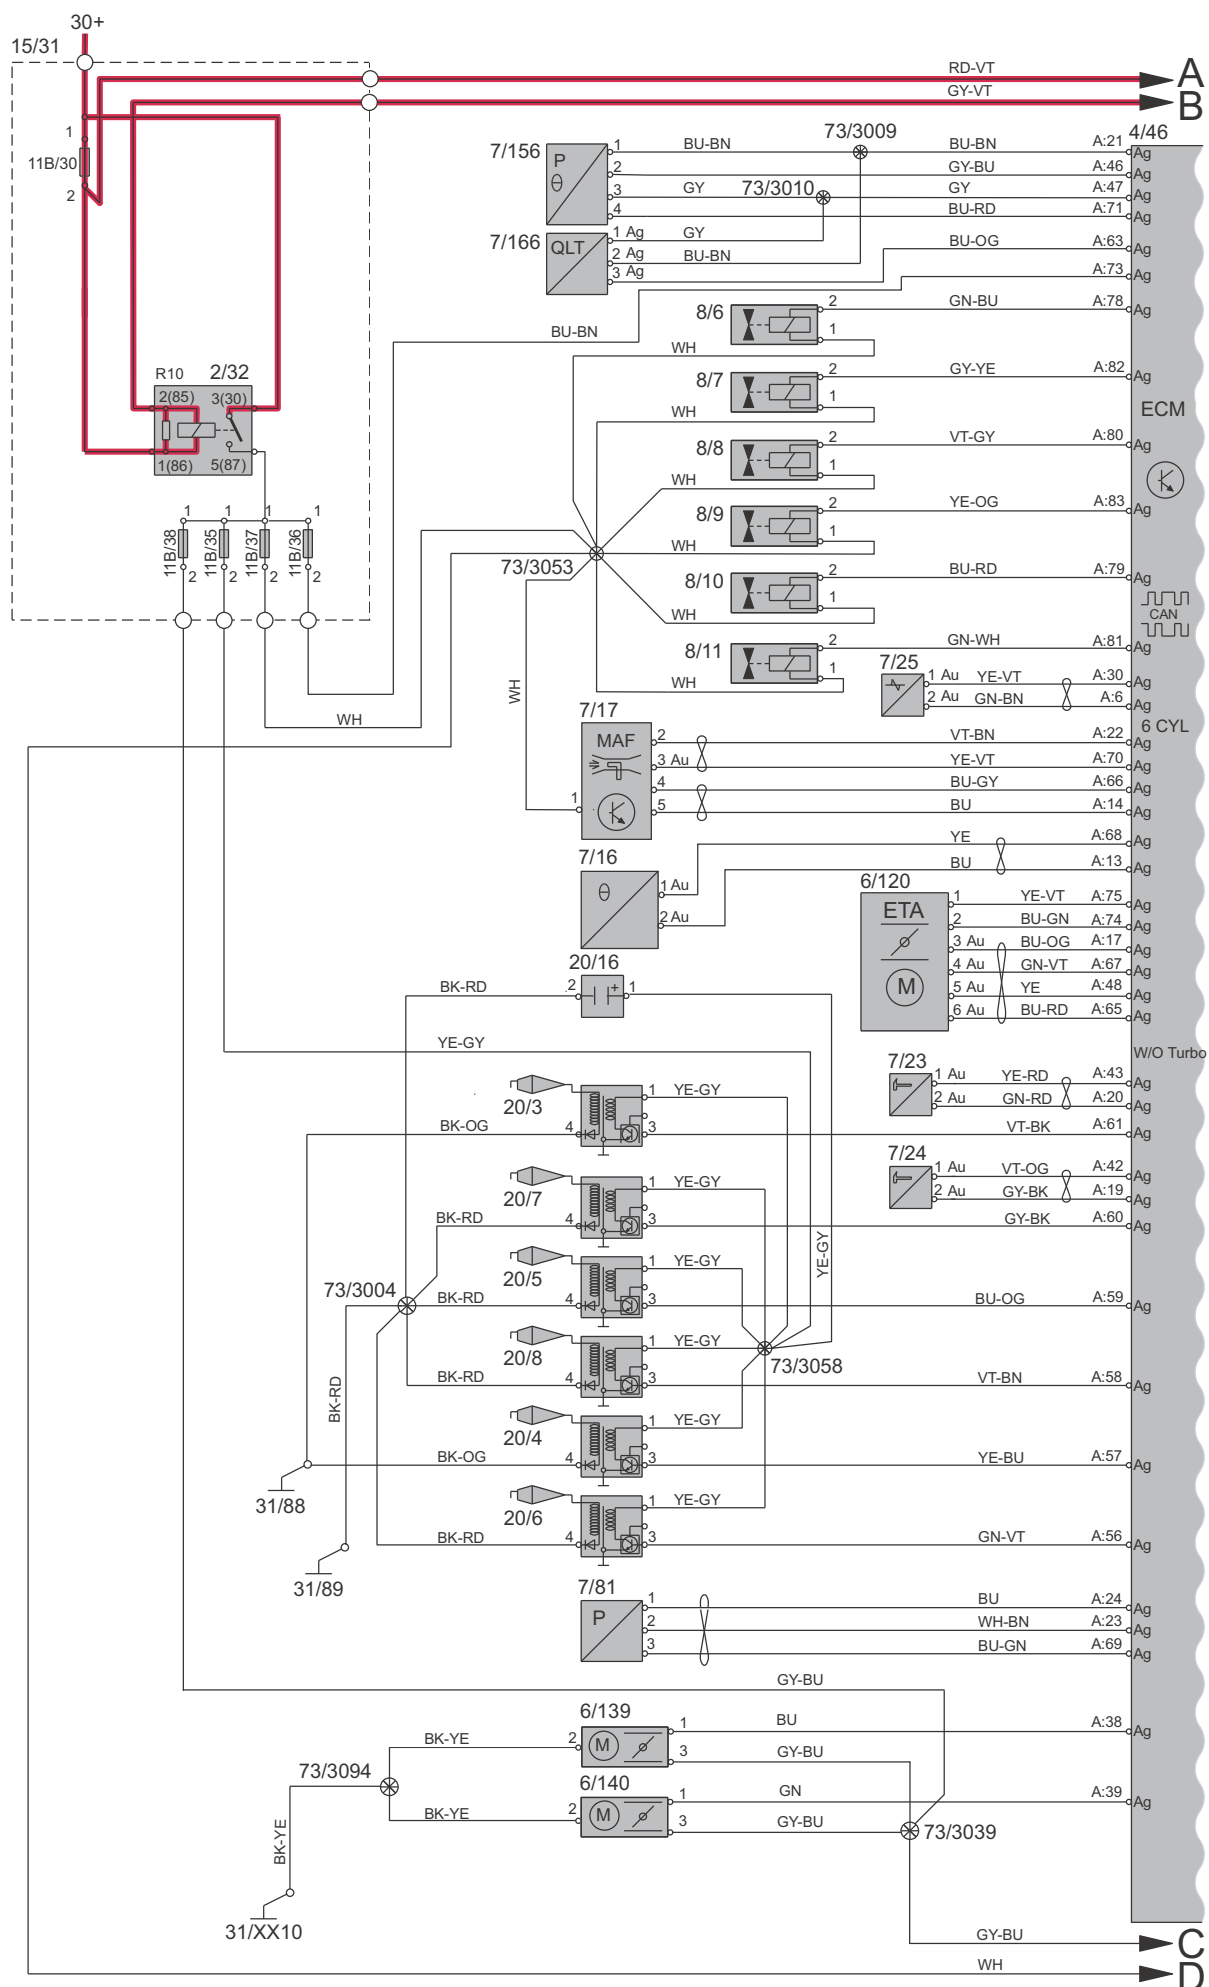


Group 28 Ignition and control system

Engine management system, 6-Cyl. 2:2

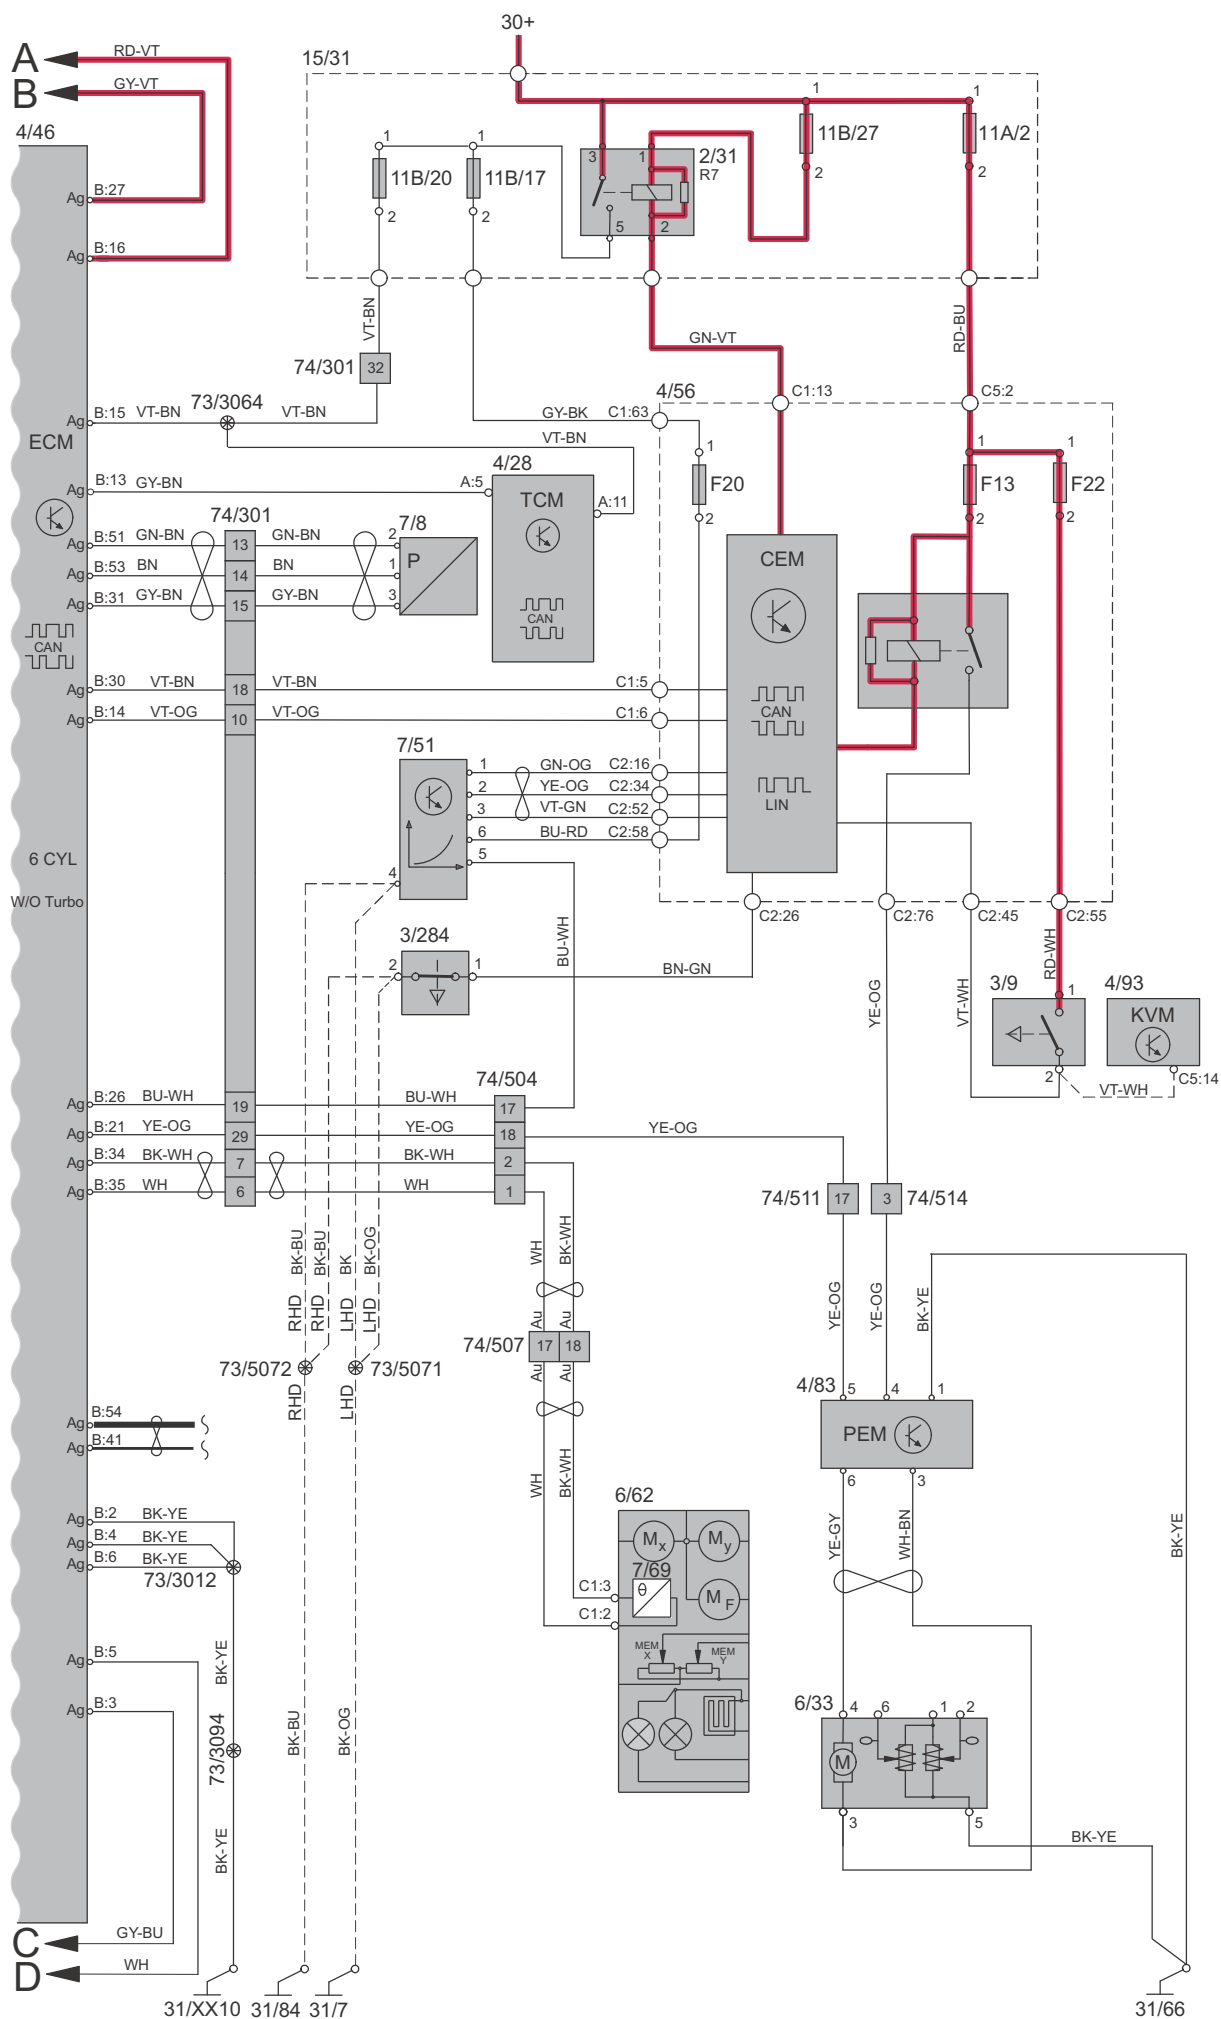


Group 28 Ignition and control system

Engine management system, 6-Cyl. Turbo 1:2

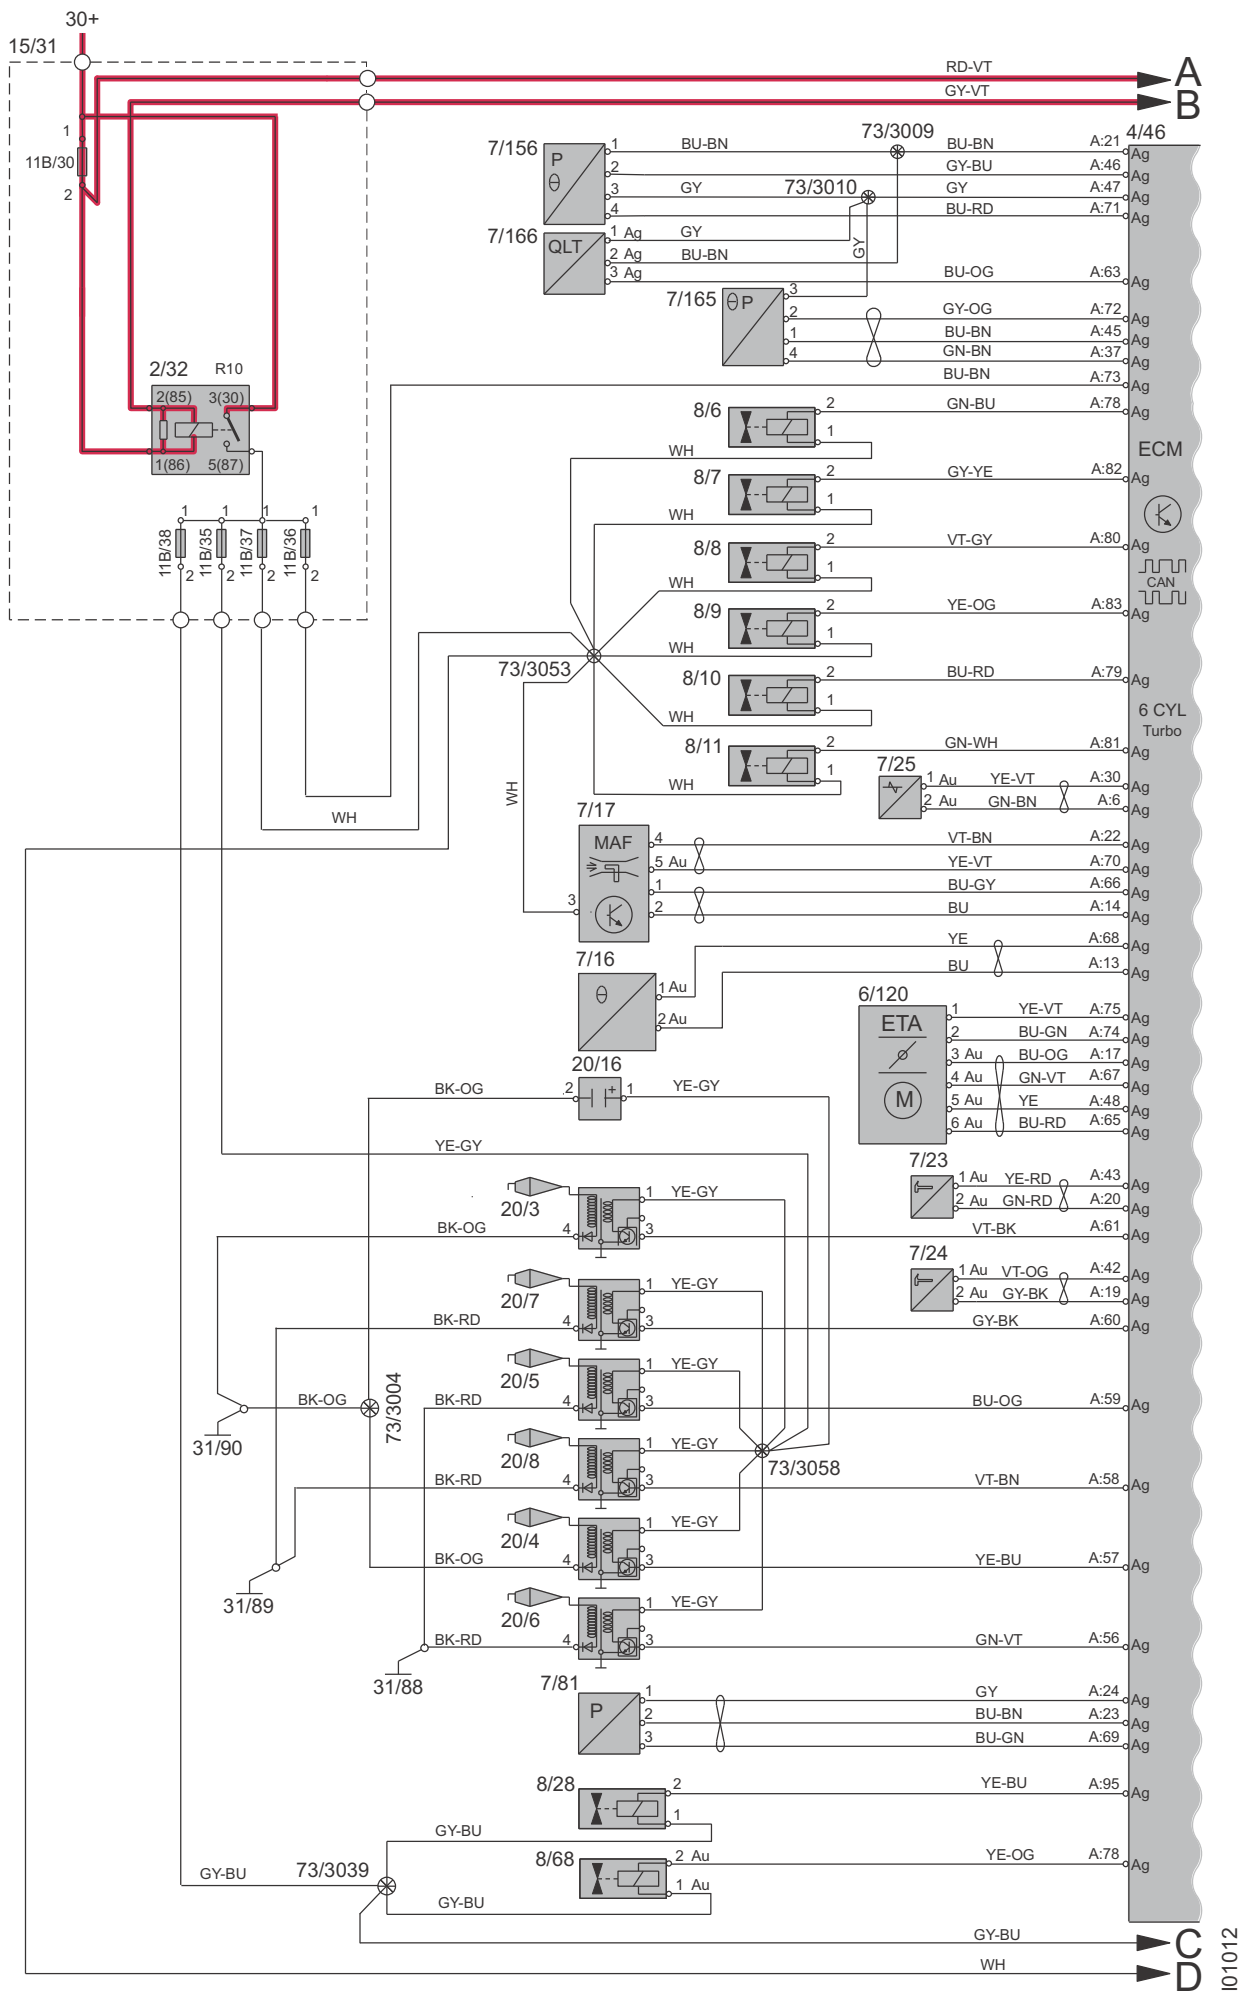


Group 28 Ignition and control system

Engine management system, 6-Cyl. Turbo 2:2

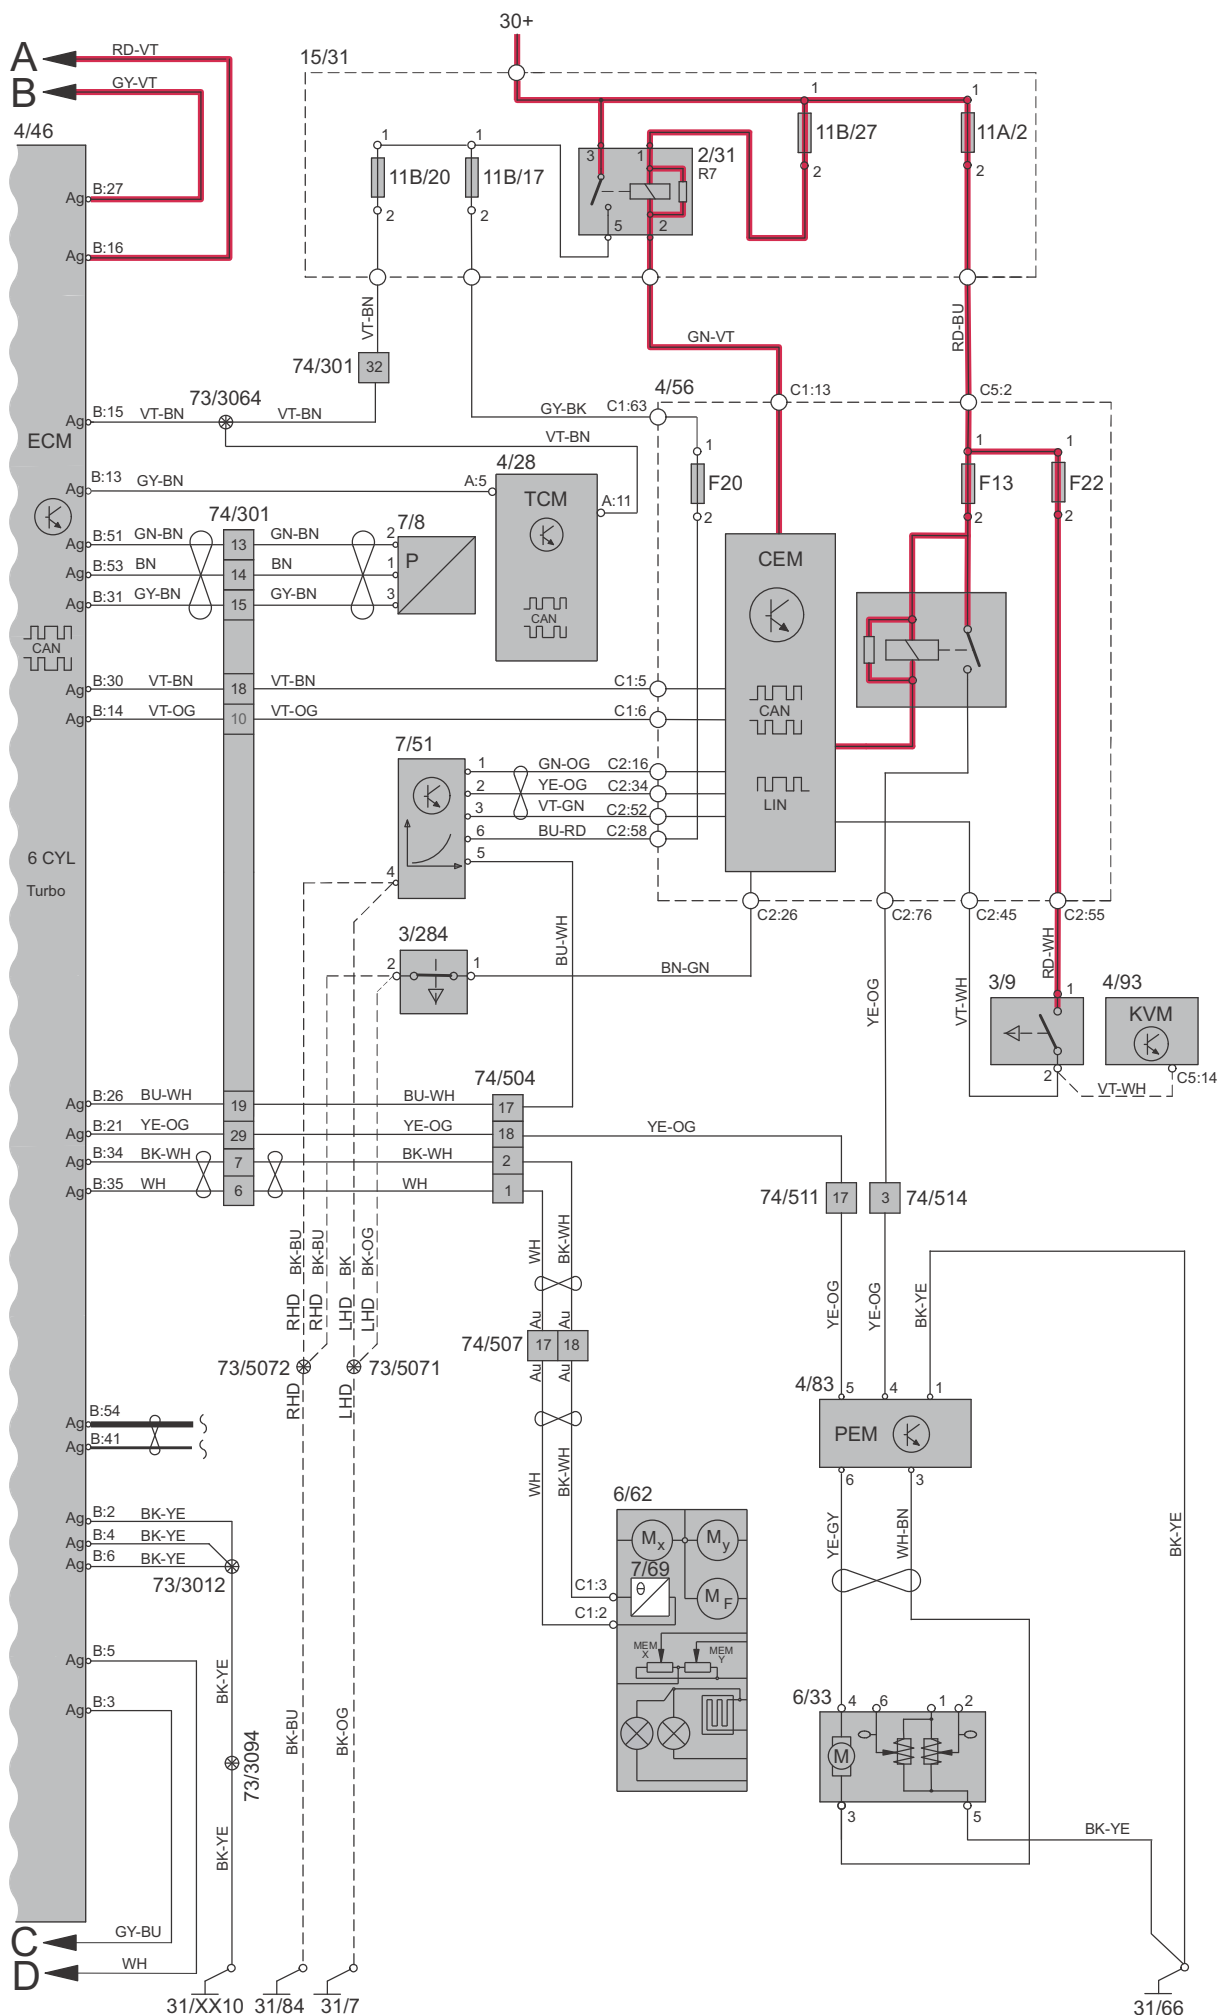


Group 28 Ignition and control system

Emission control 4-Cyl. 1.6l Turbo

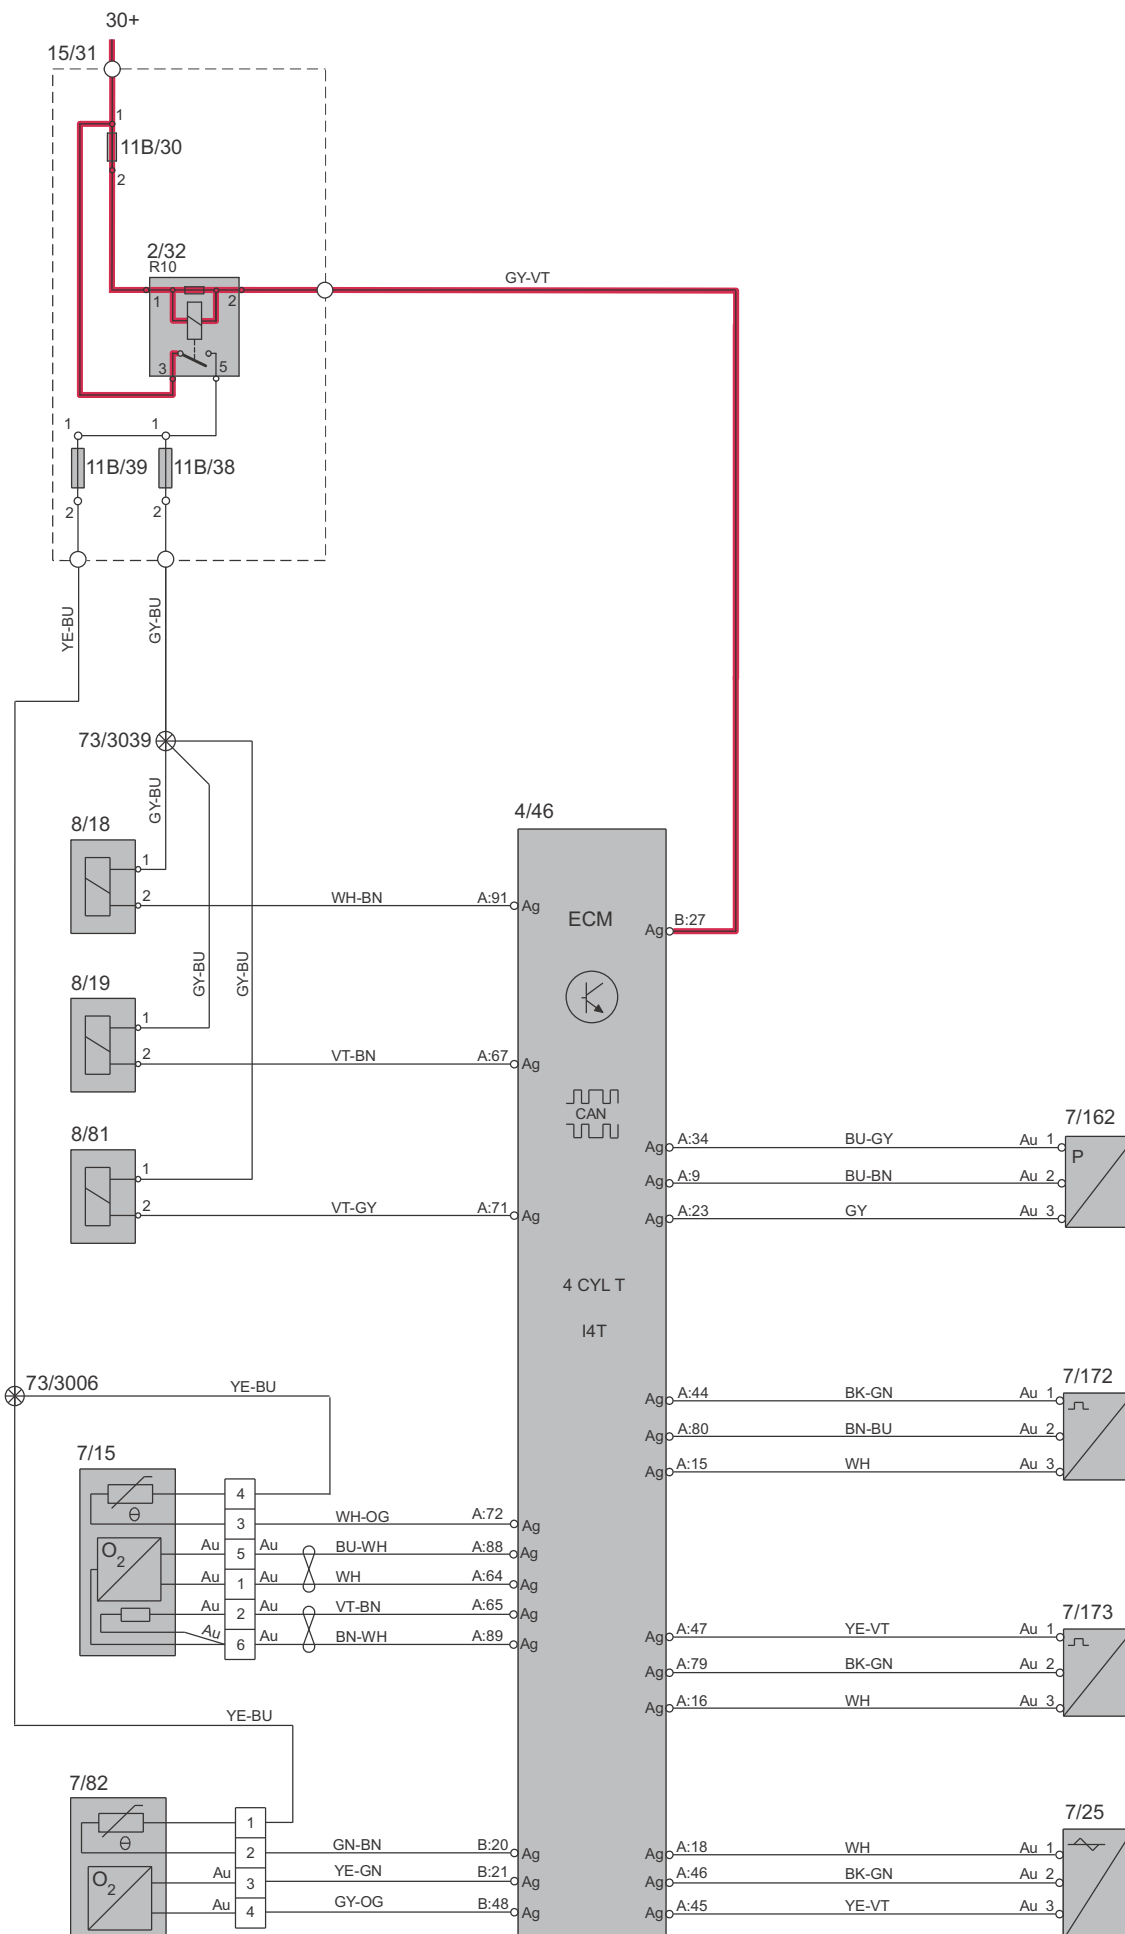


Group 28 Ignition and control system

Emission control 4-Cyl. 2.0l Turbo

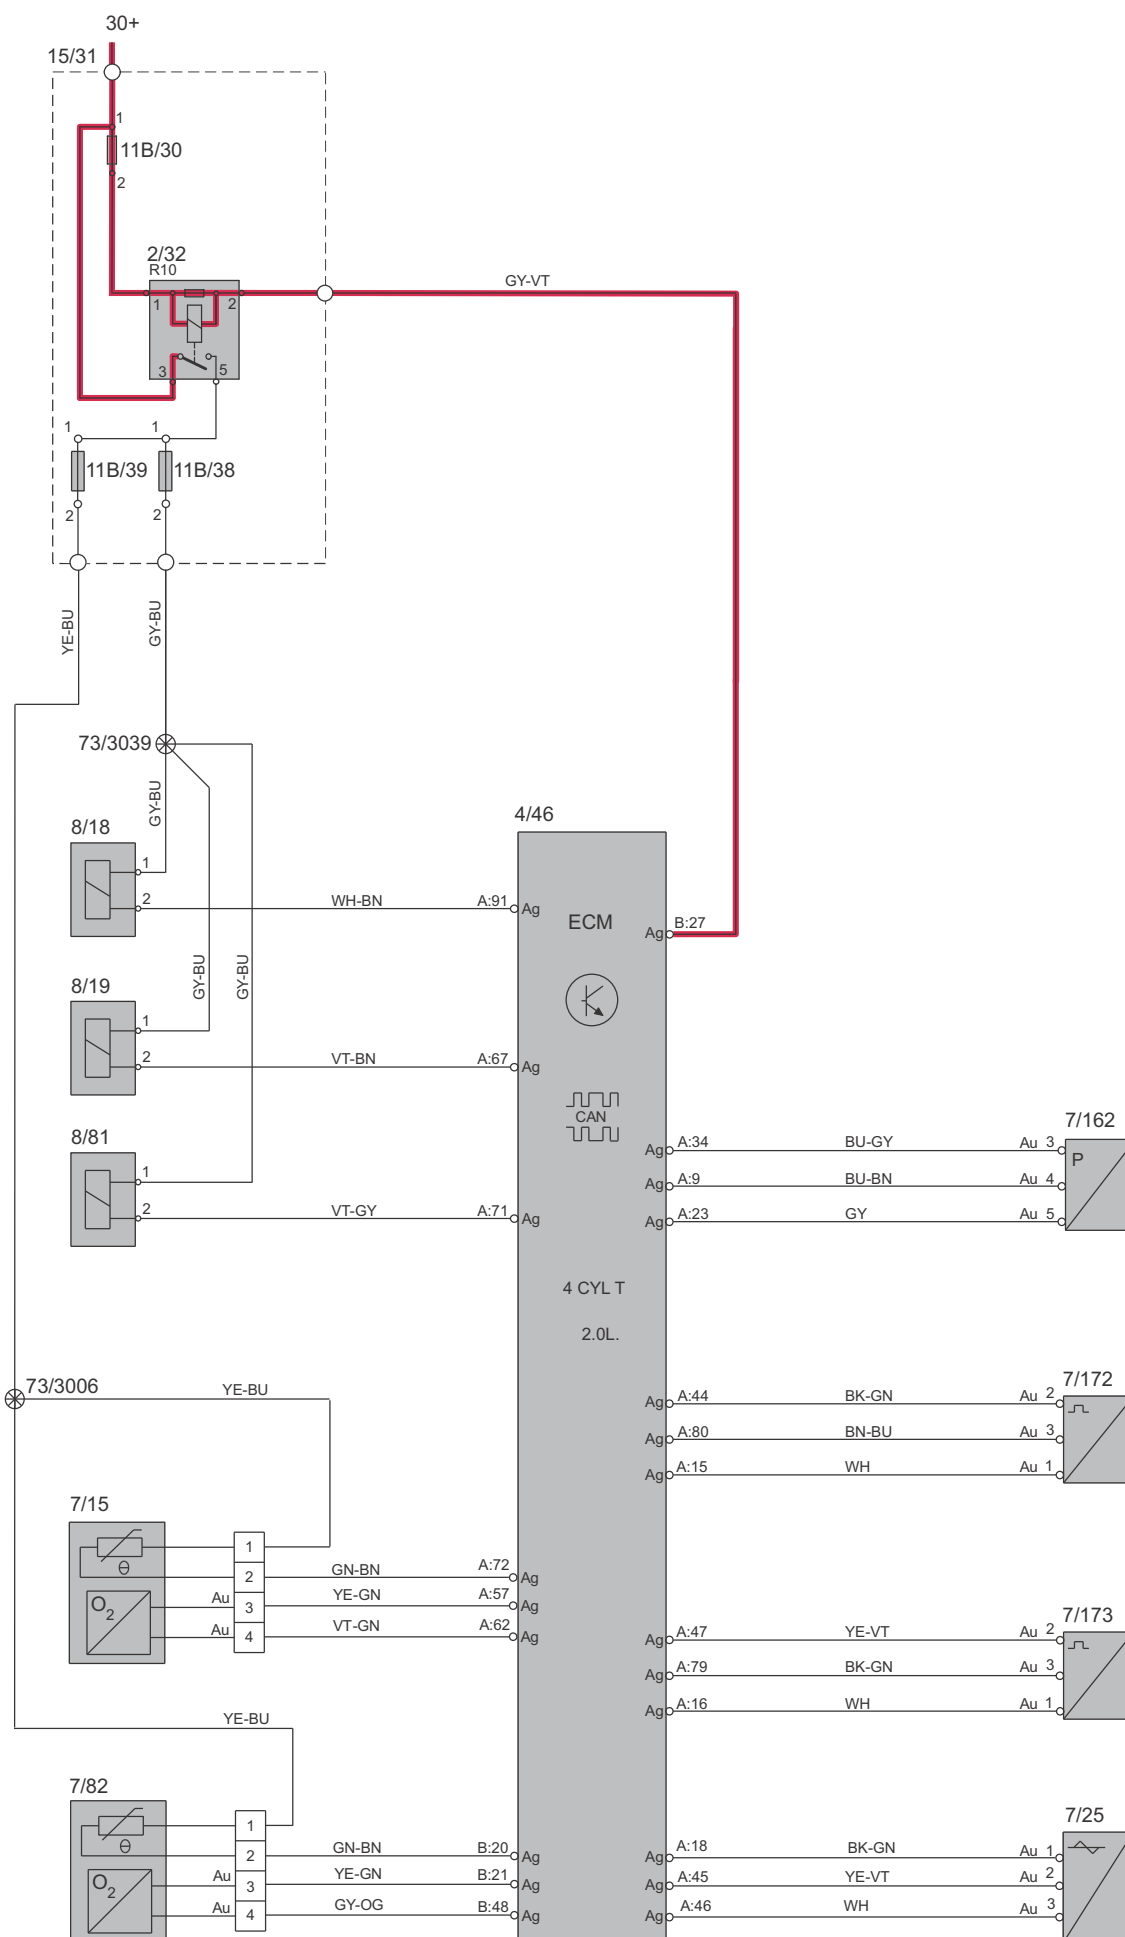


Group 28 Ignition and control system

Emission control 5-Cyl. Turbo

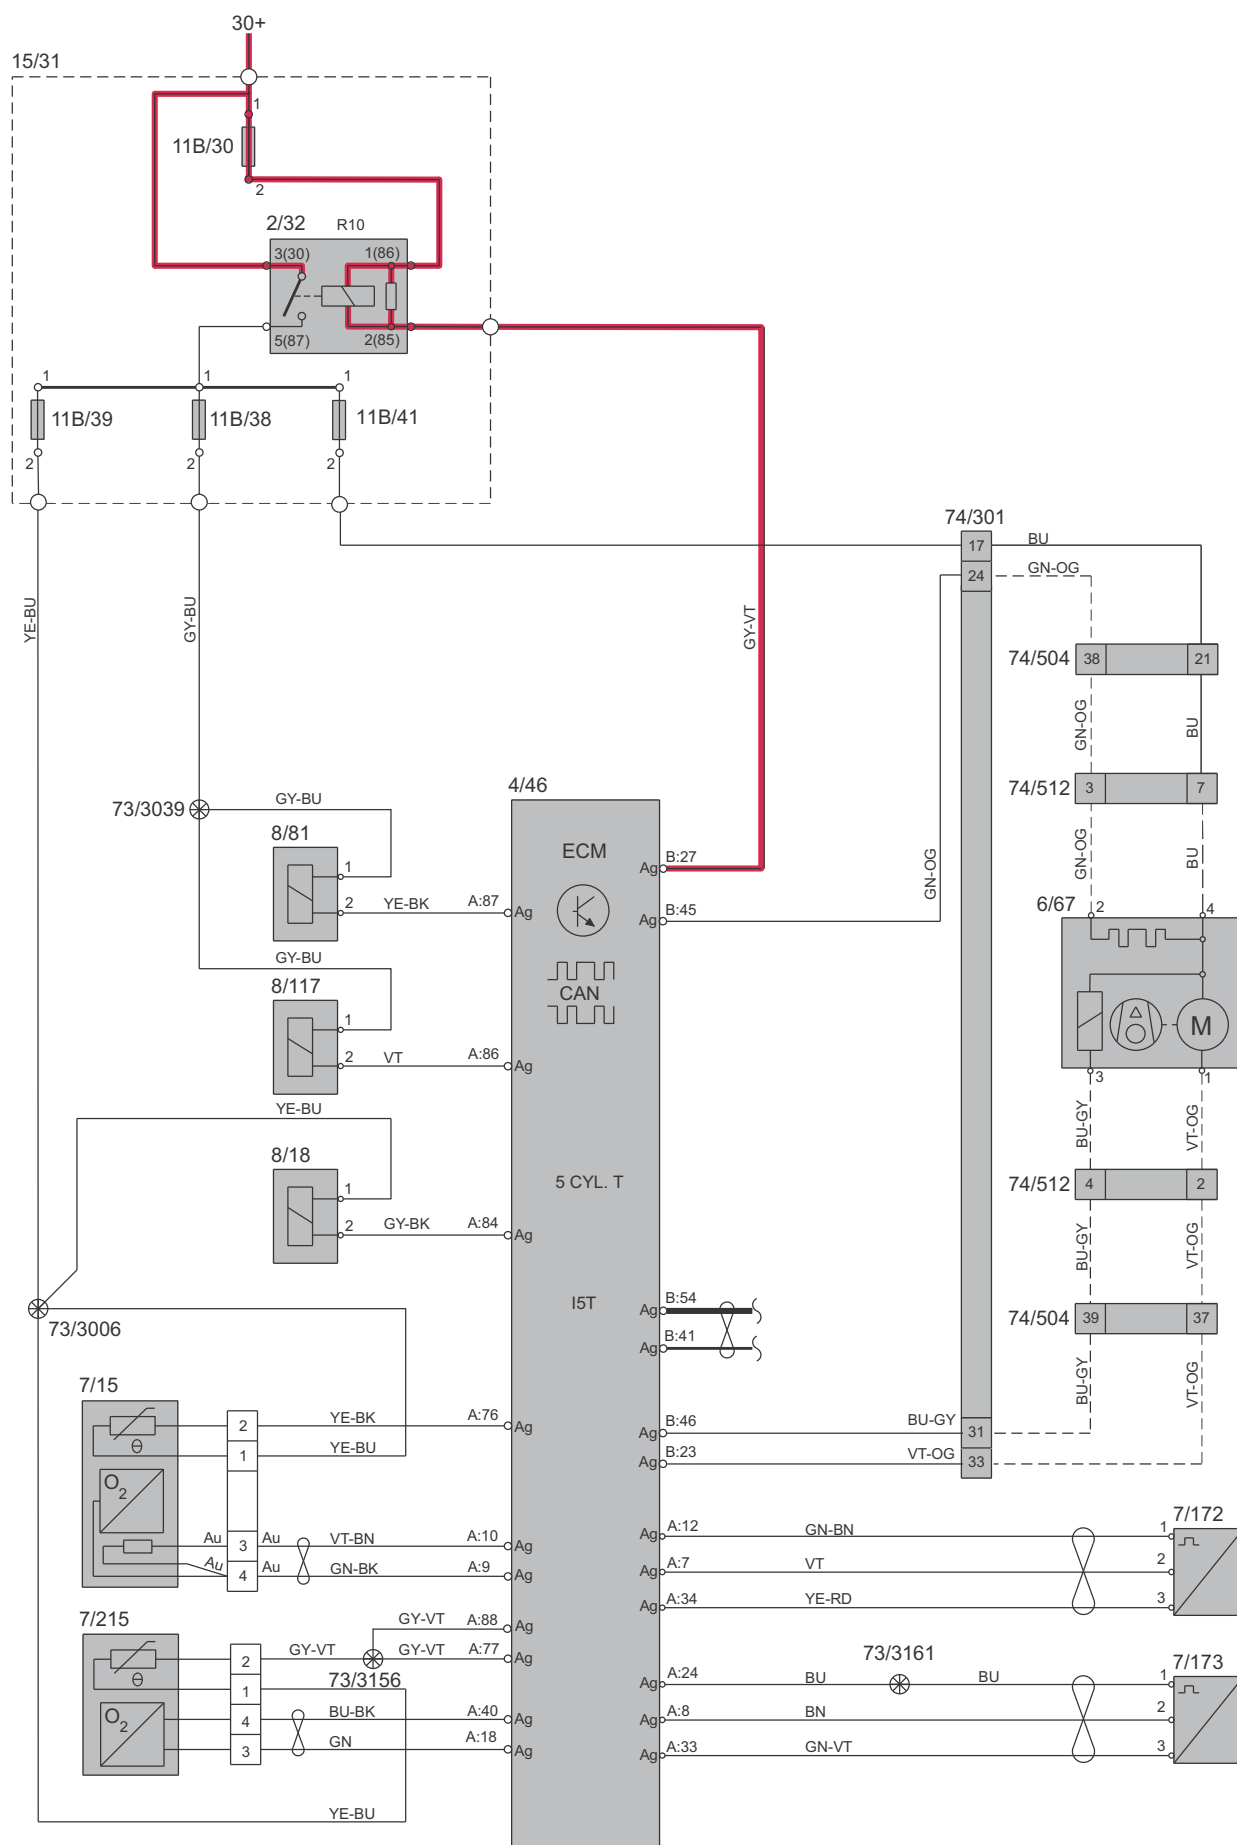


Group 28 Ignition and control system Emission control 6-Cyl.

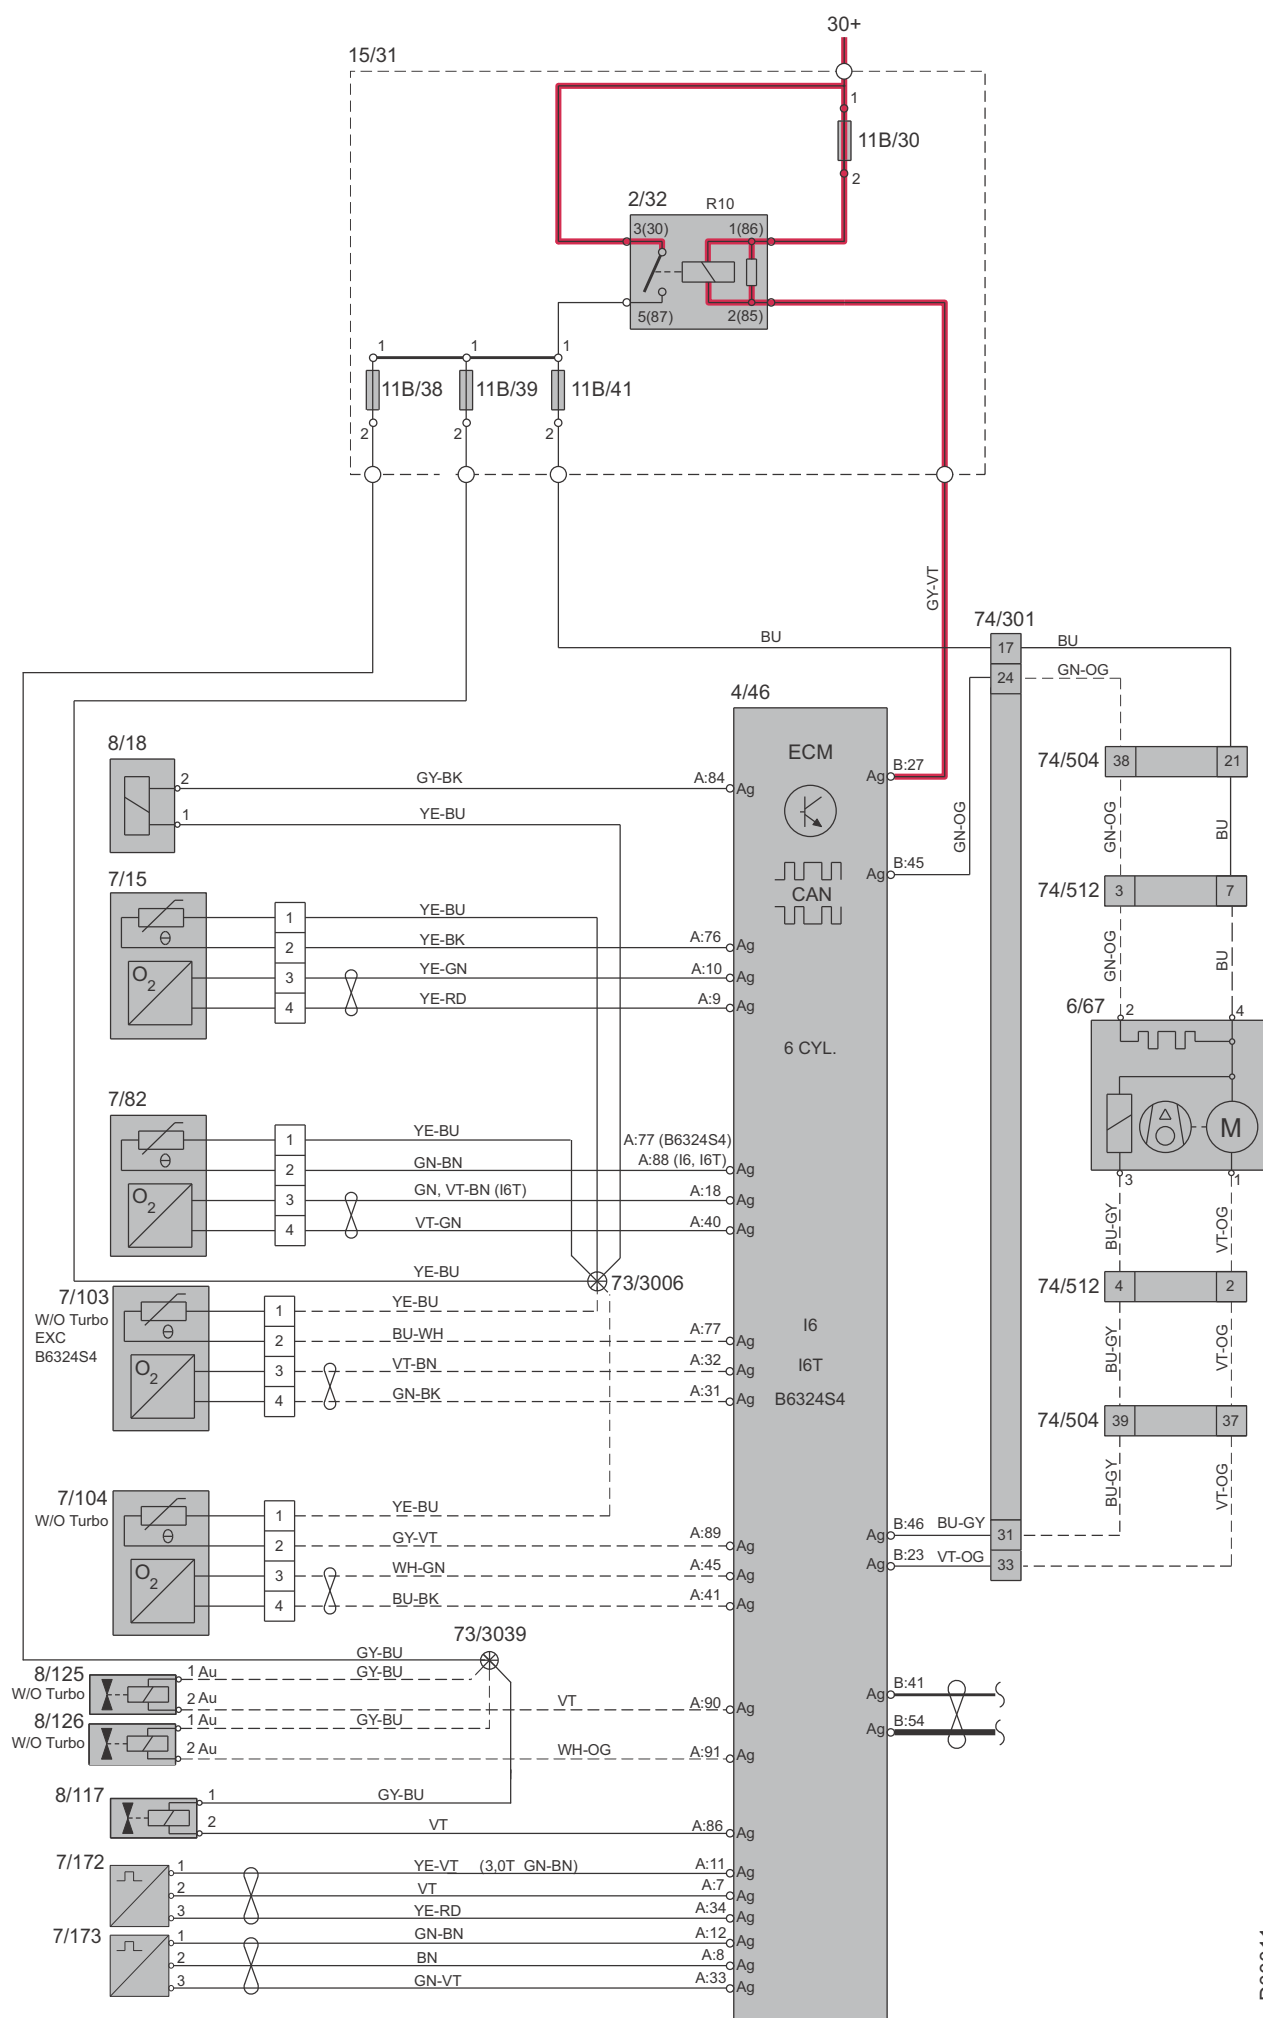


Group 32 Alternator and voltage regulator


Power supply 4-Cyl. Turbo

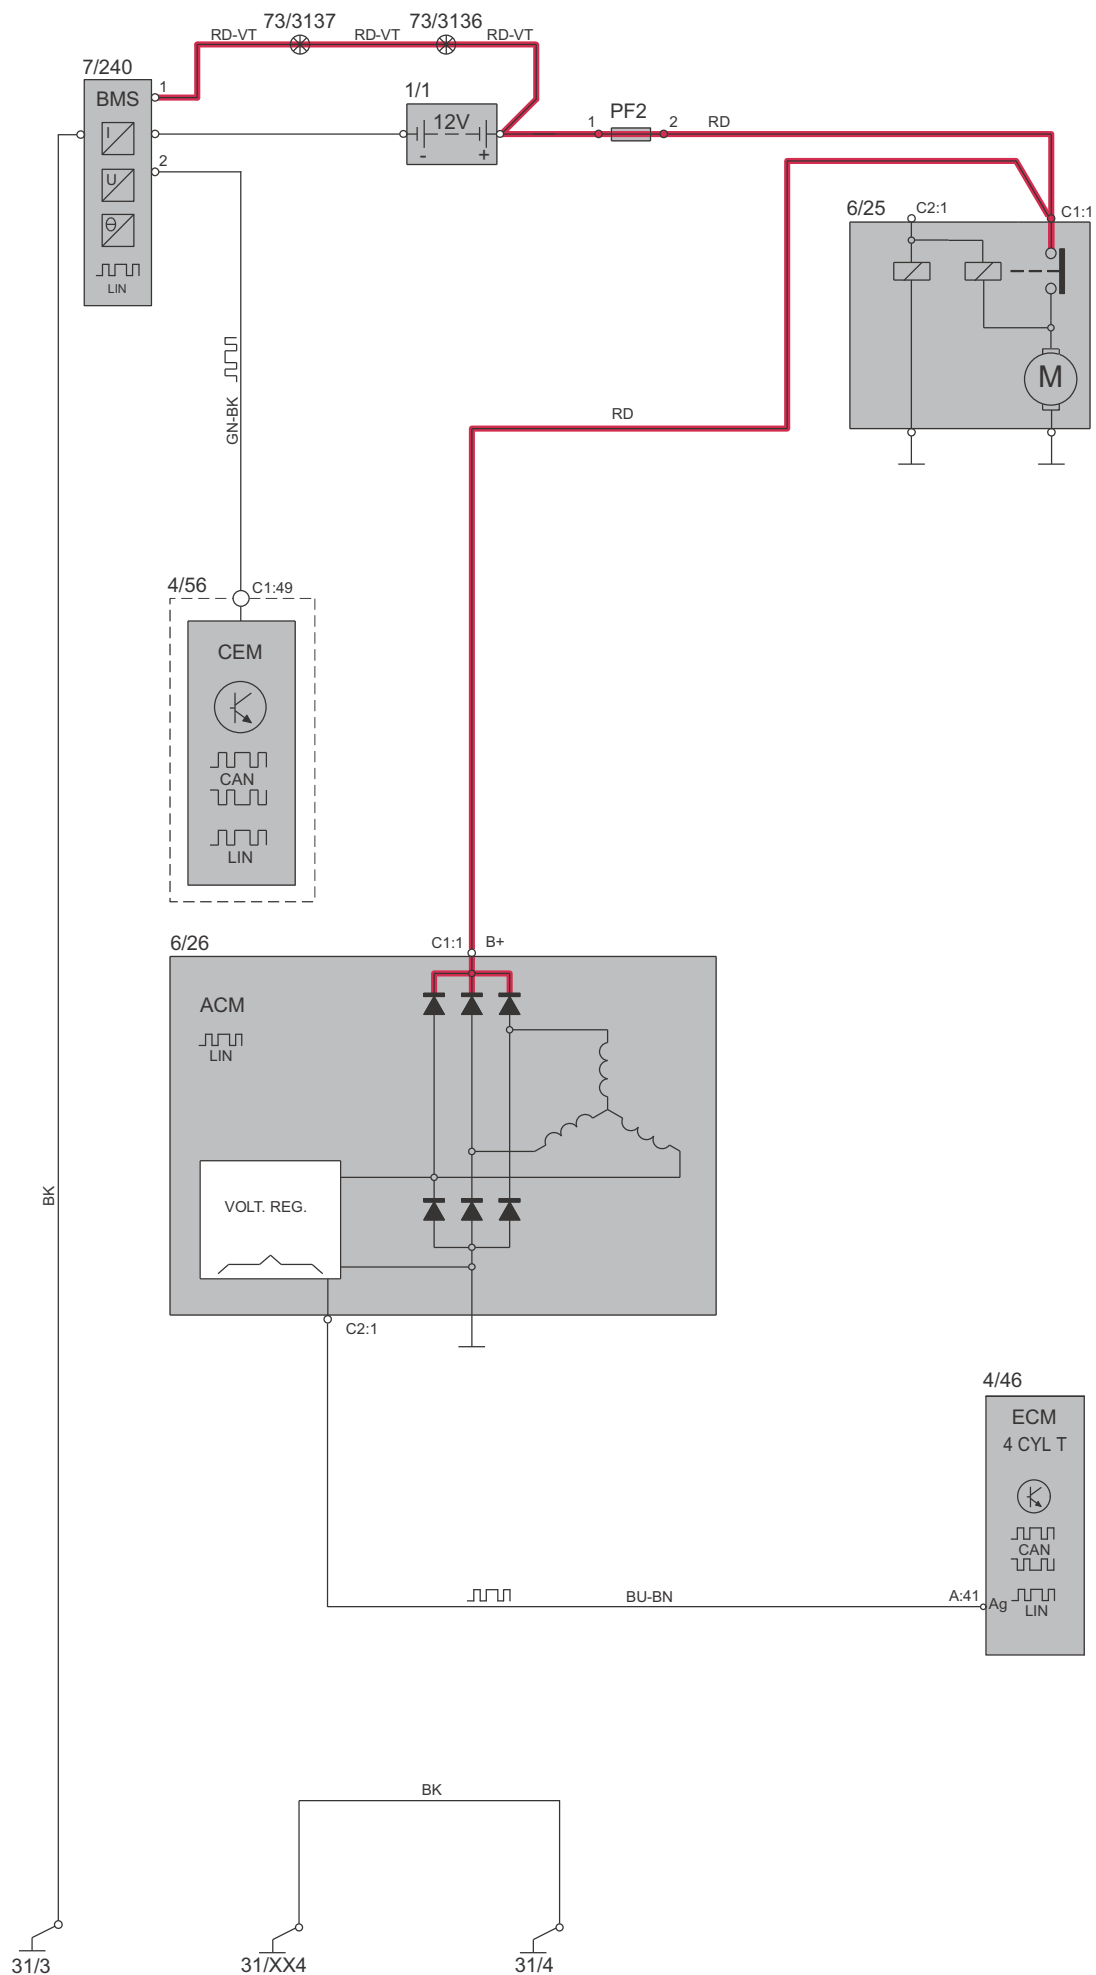

Group 32 Alternator and voltage regulator Power supply 4-Cyl. & 5-Cyl. with start/stop

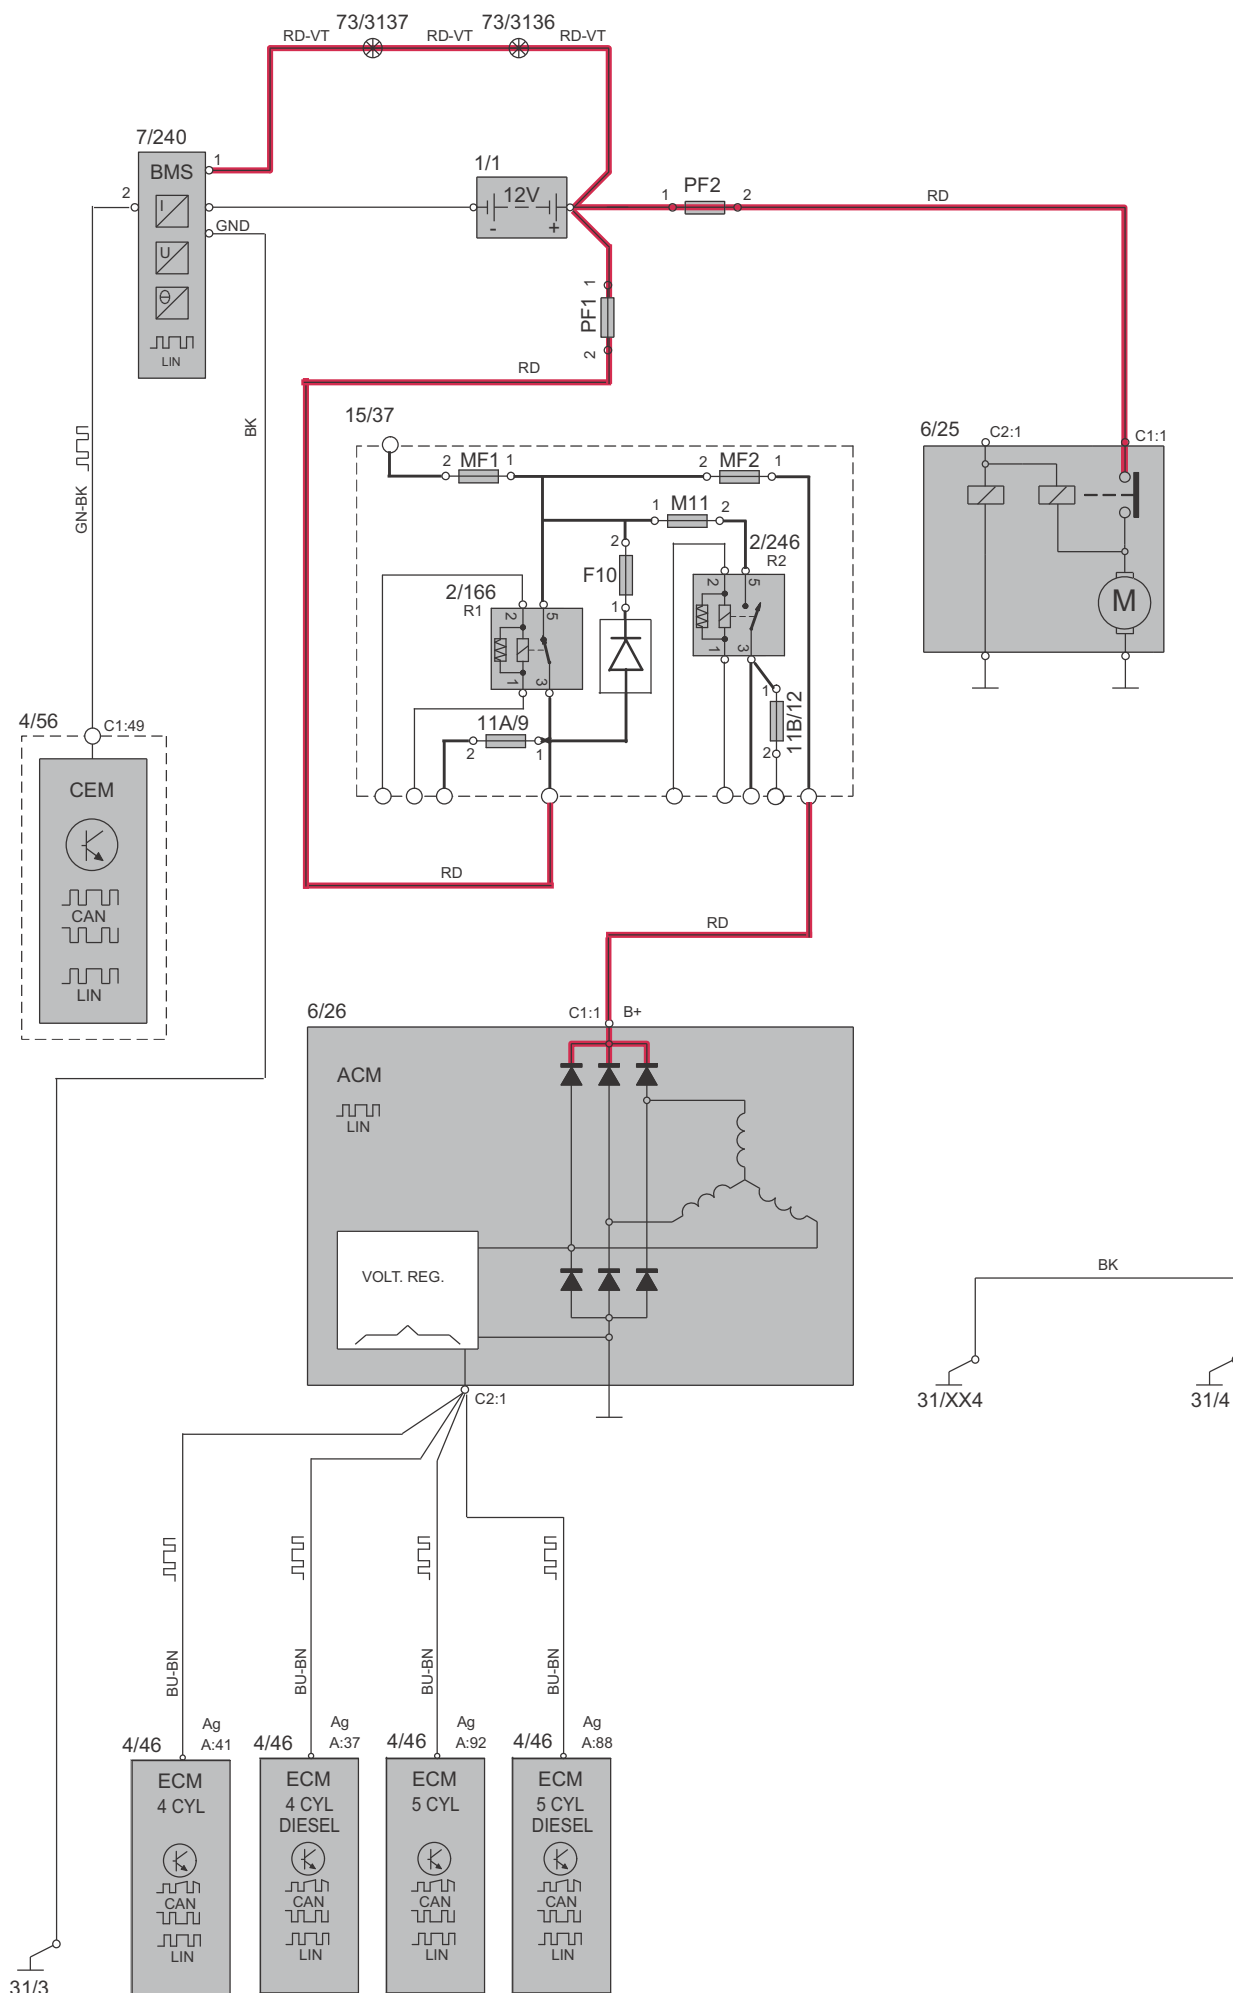


Group 32 Alternator and voltage regulator Power supply 5-Cyl. & 6-Cyl.

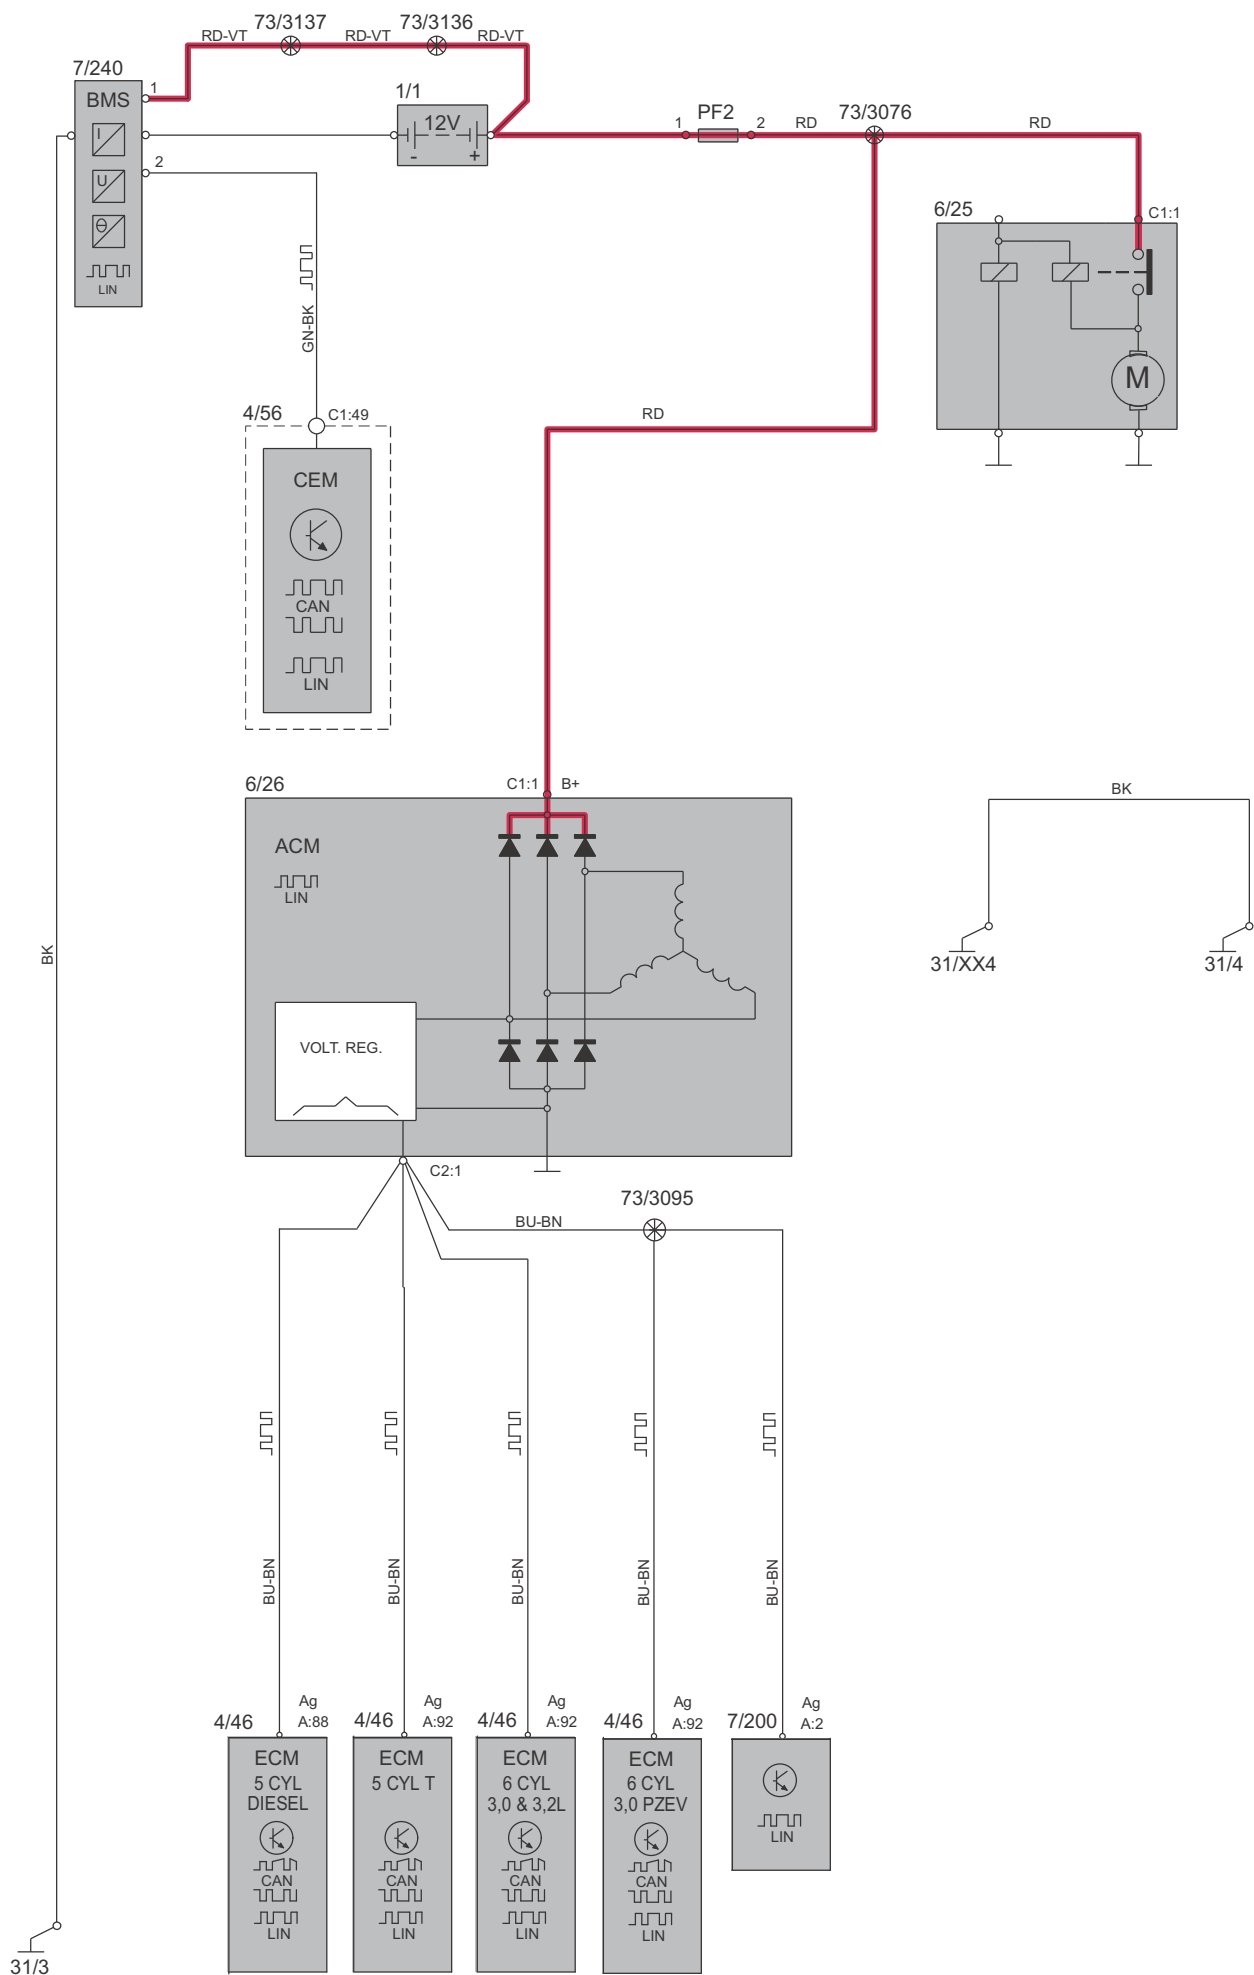


P00024

Group 33 Starting system Starting system 4-Cyl. Turbo

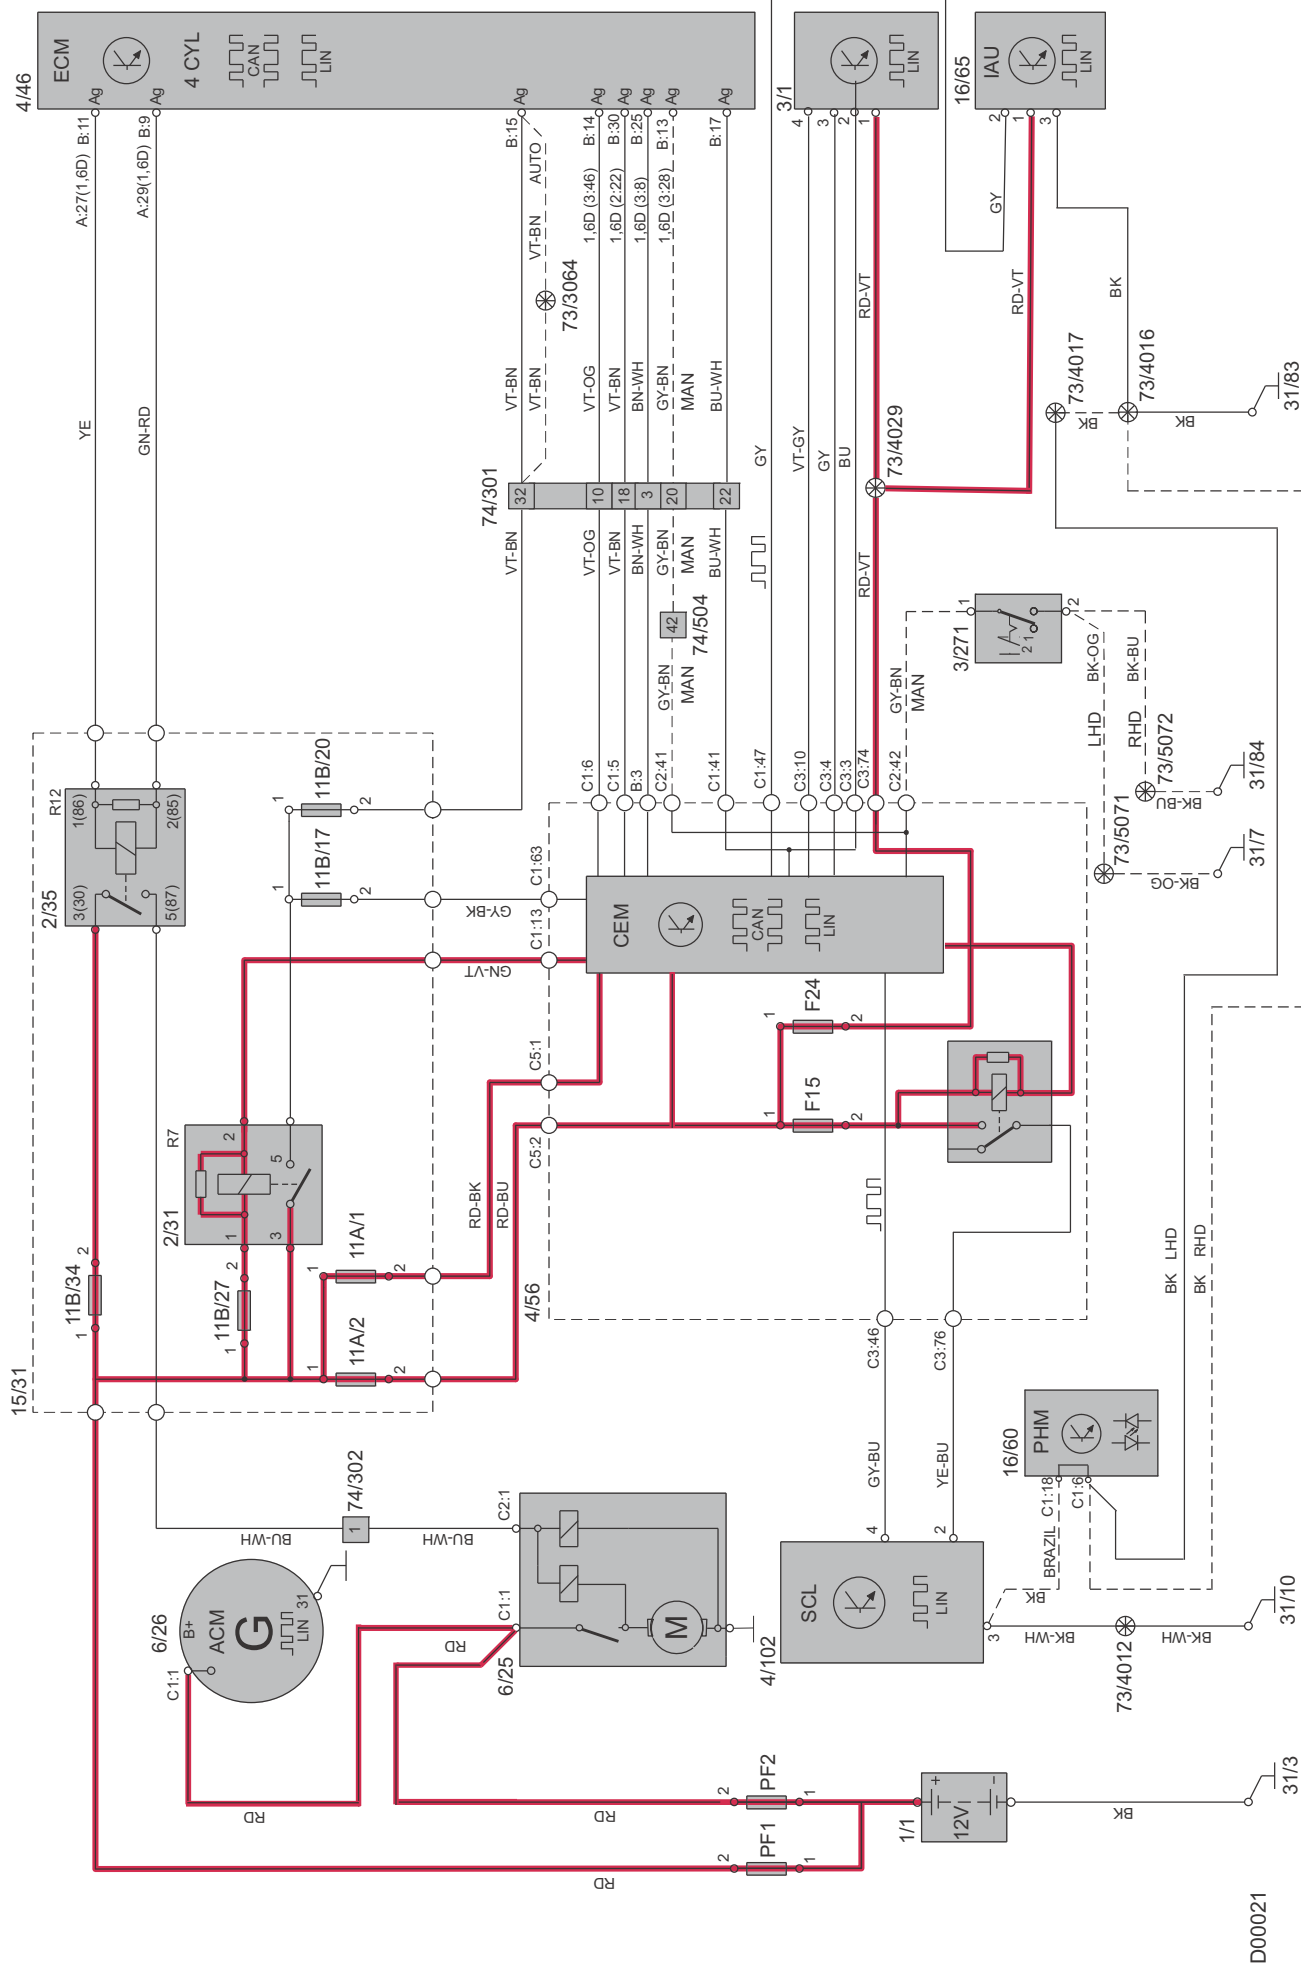


D00021


Group 33 Starting system Starting system 4-Cyl. Diesel

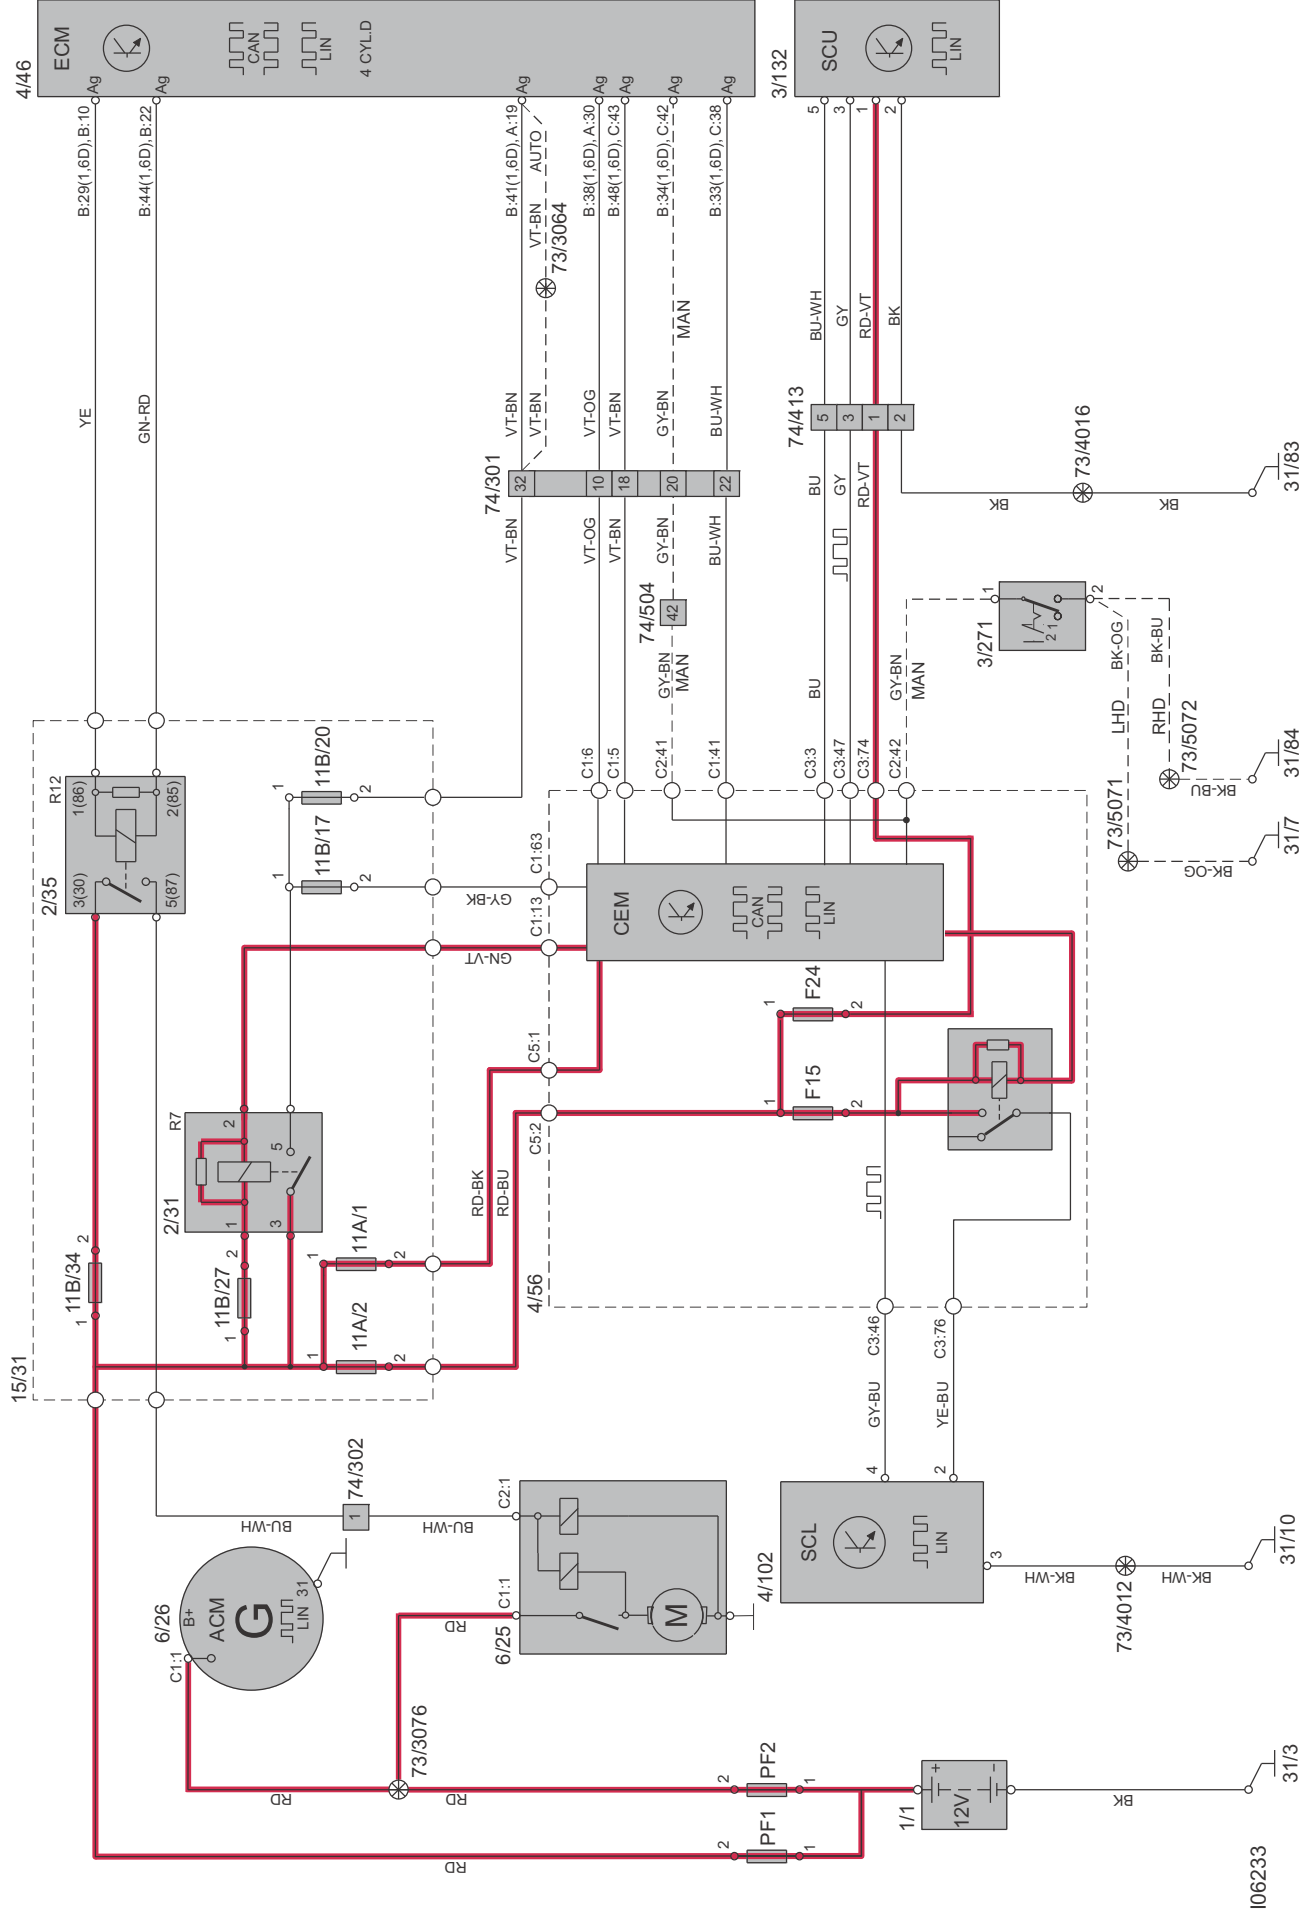

Group 33 Starting system Starting system 5-Cyl. Diesel

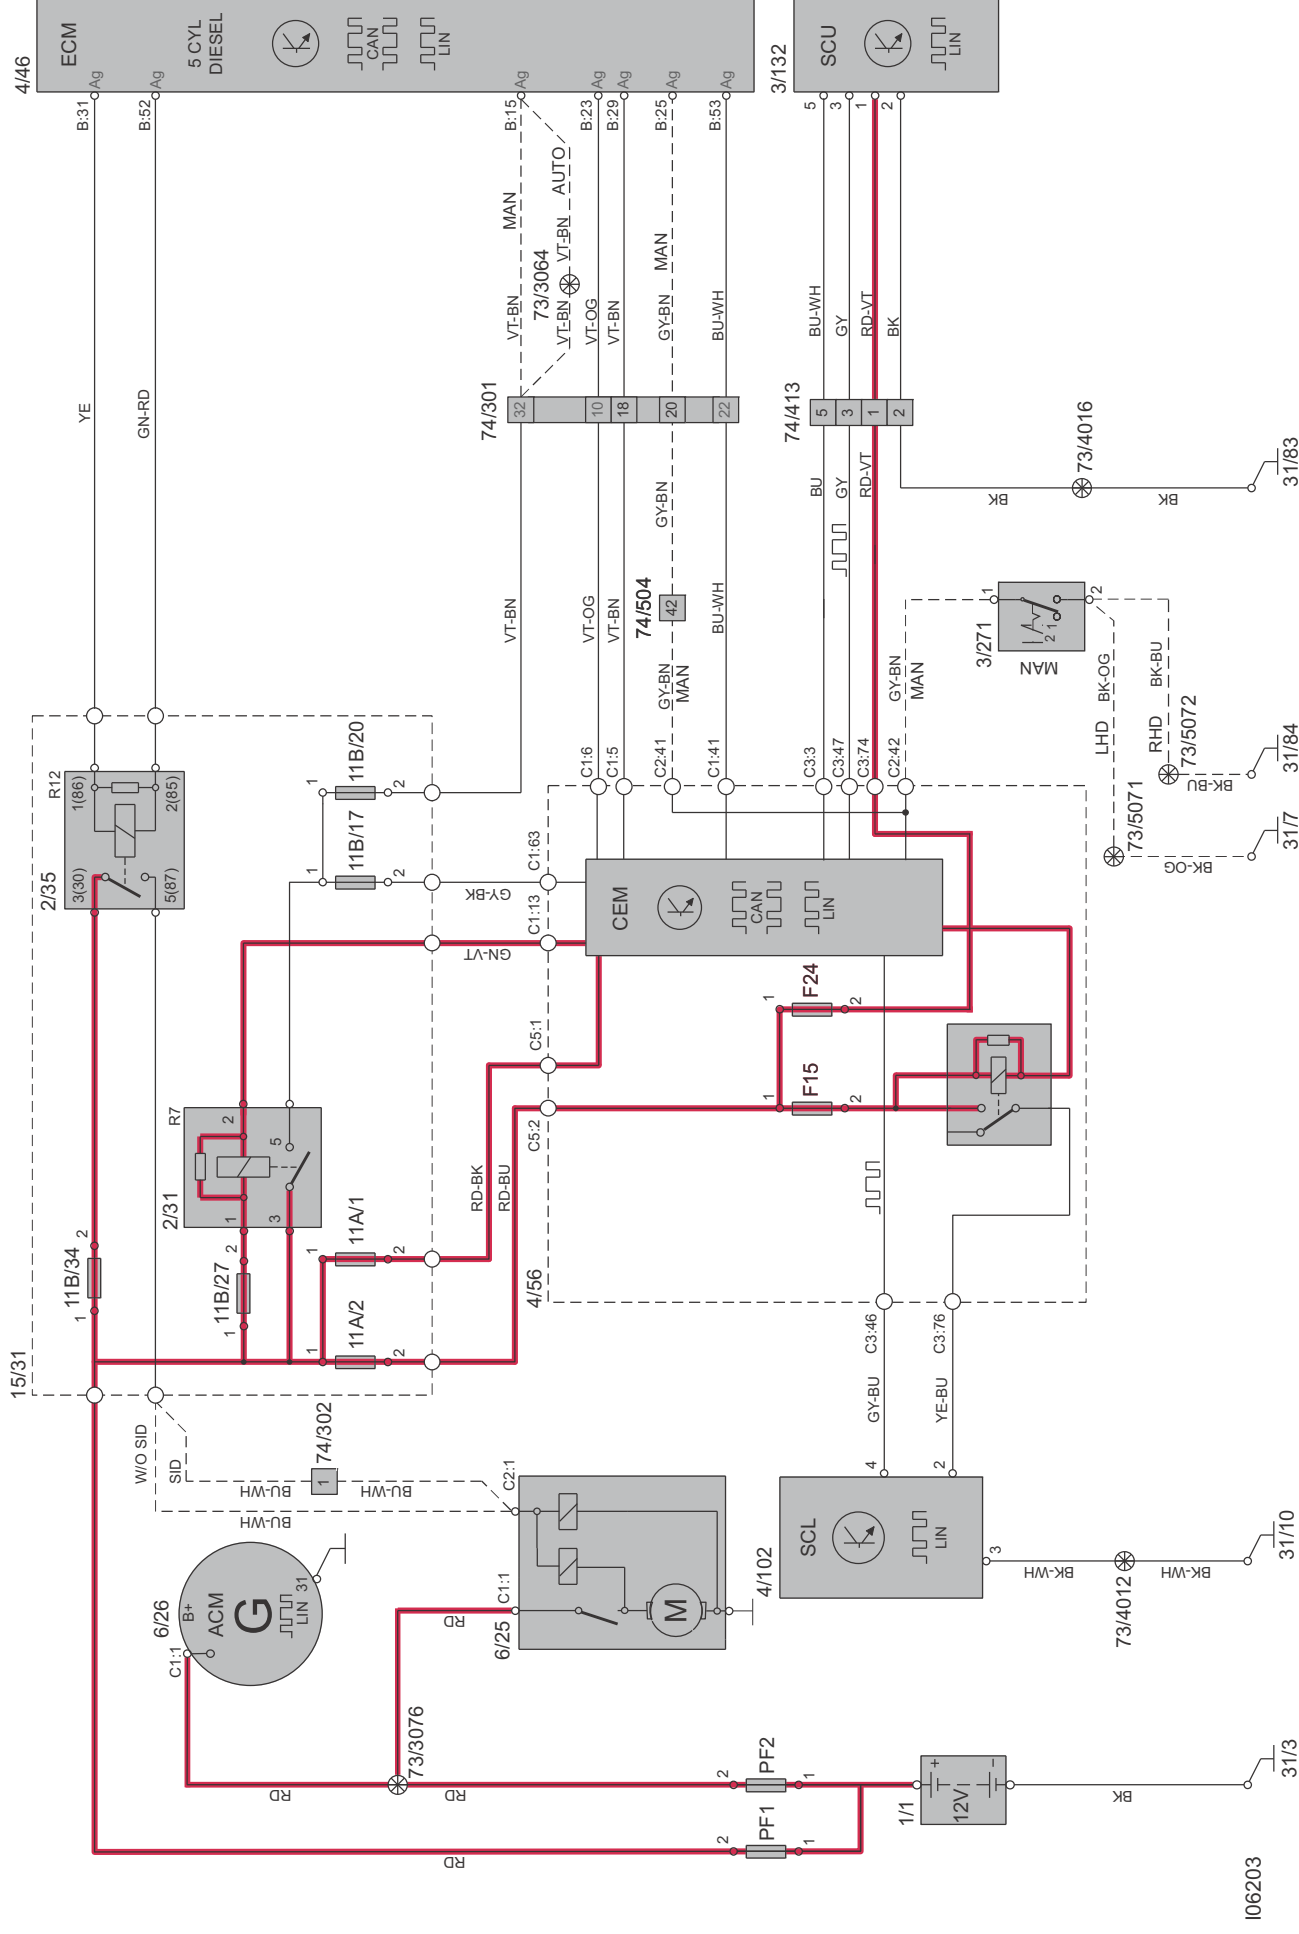


Group 35 Lighting High and low beam

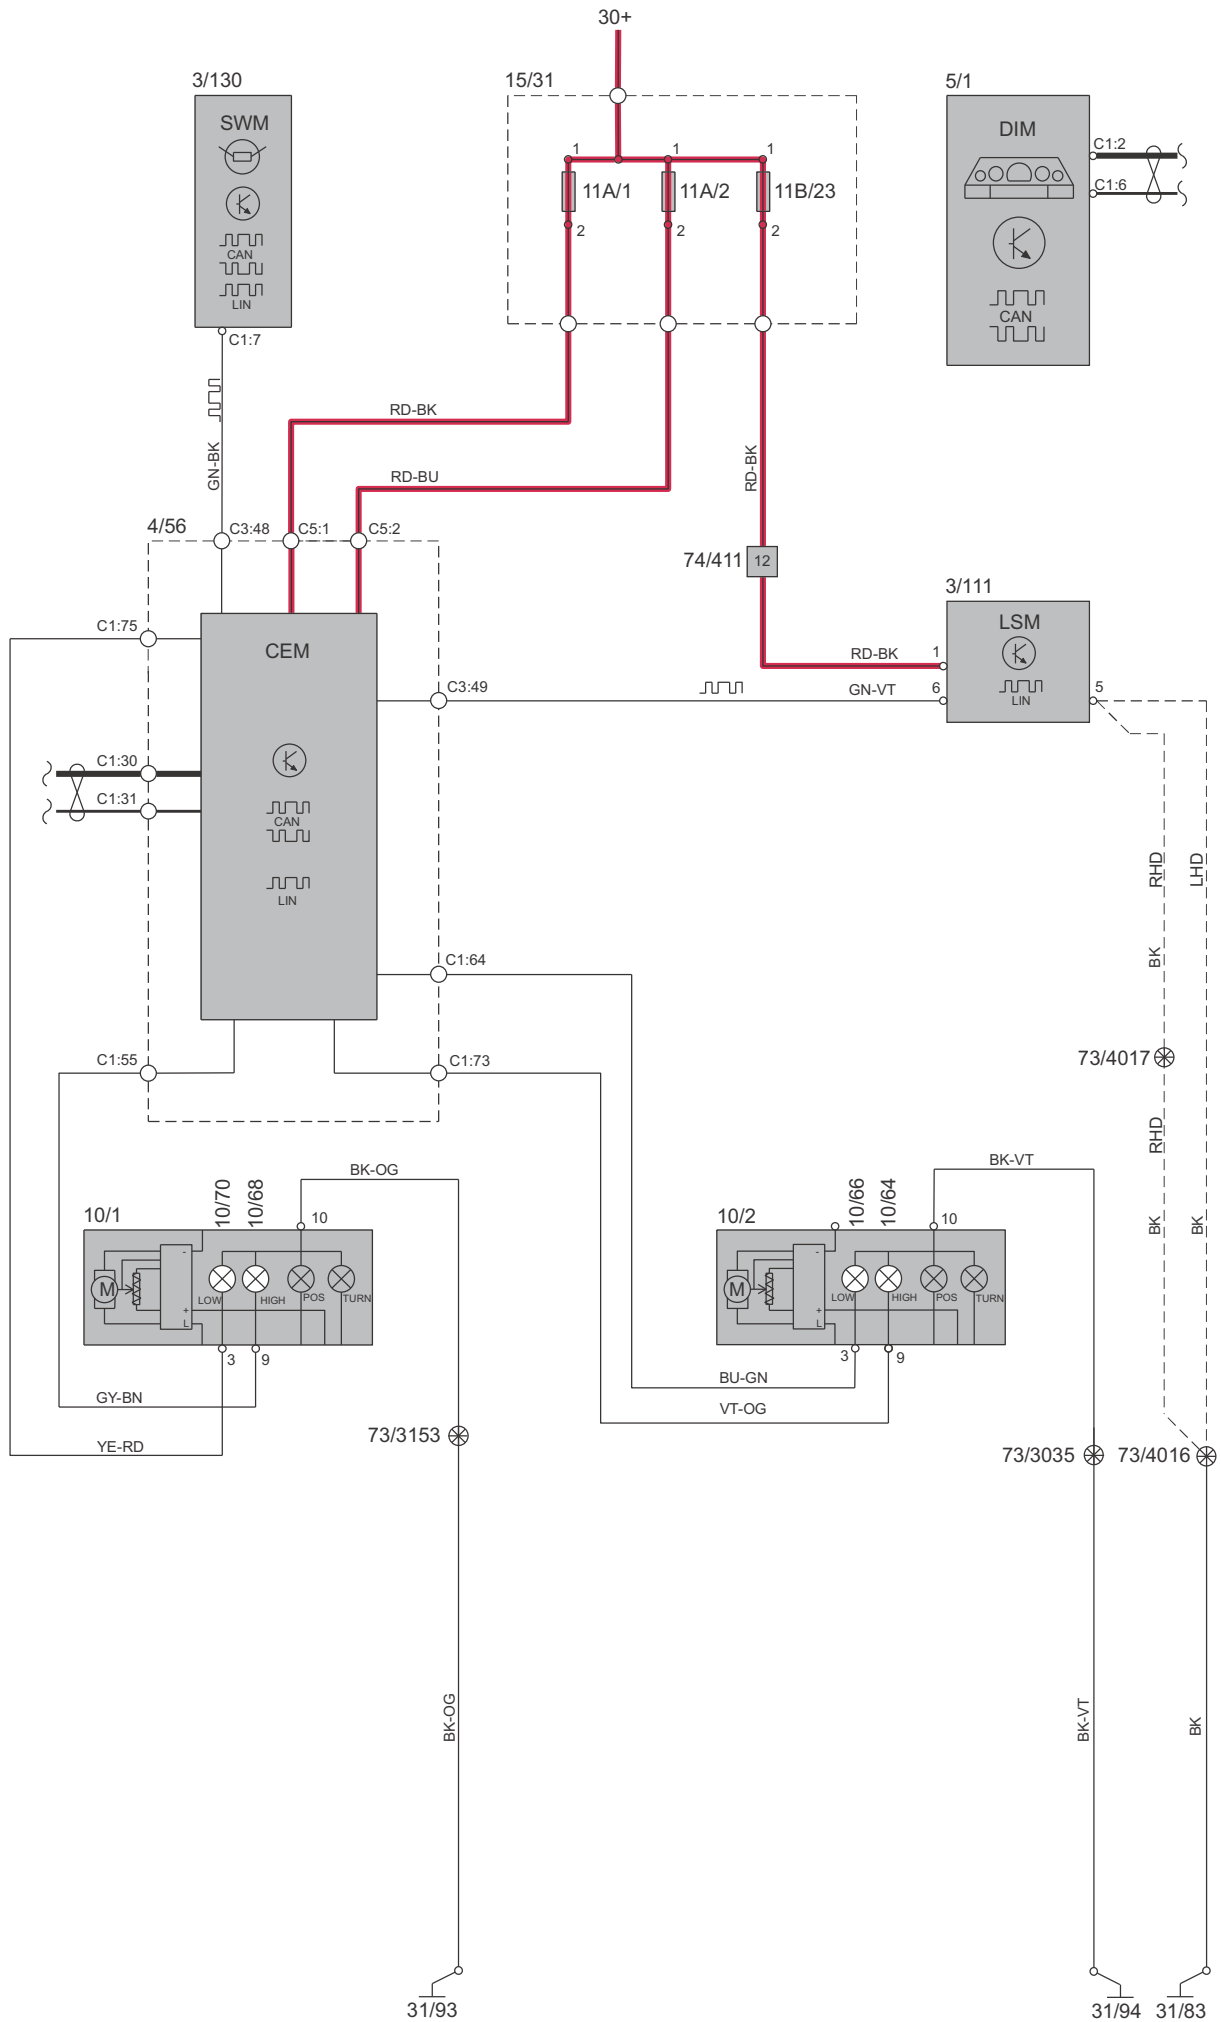


Group 35 Lighting

High and low beam (Dual Xenon)

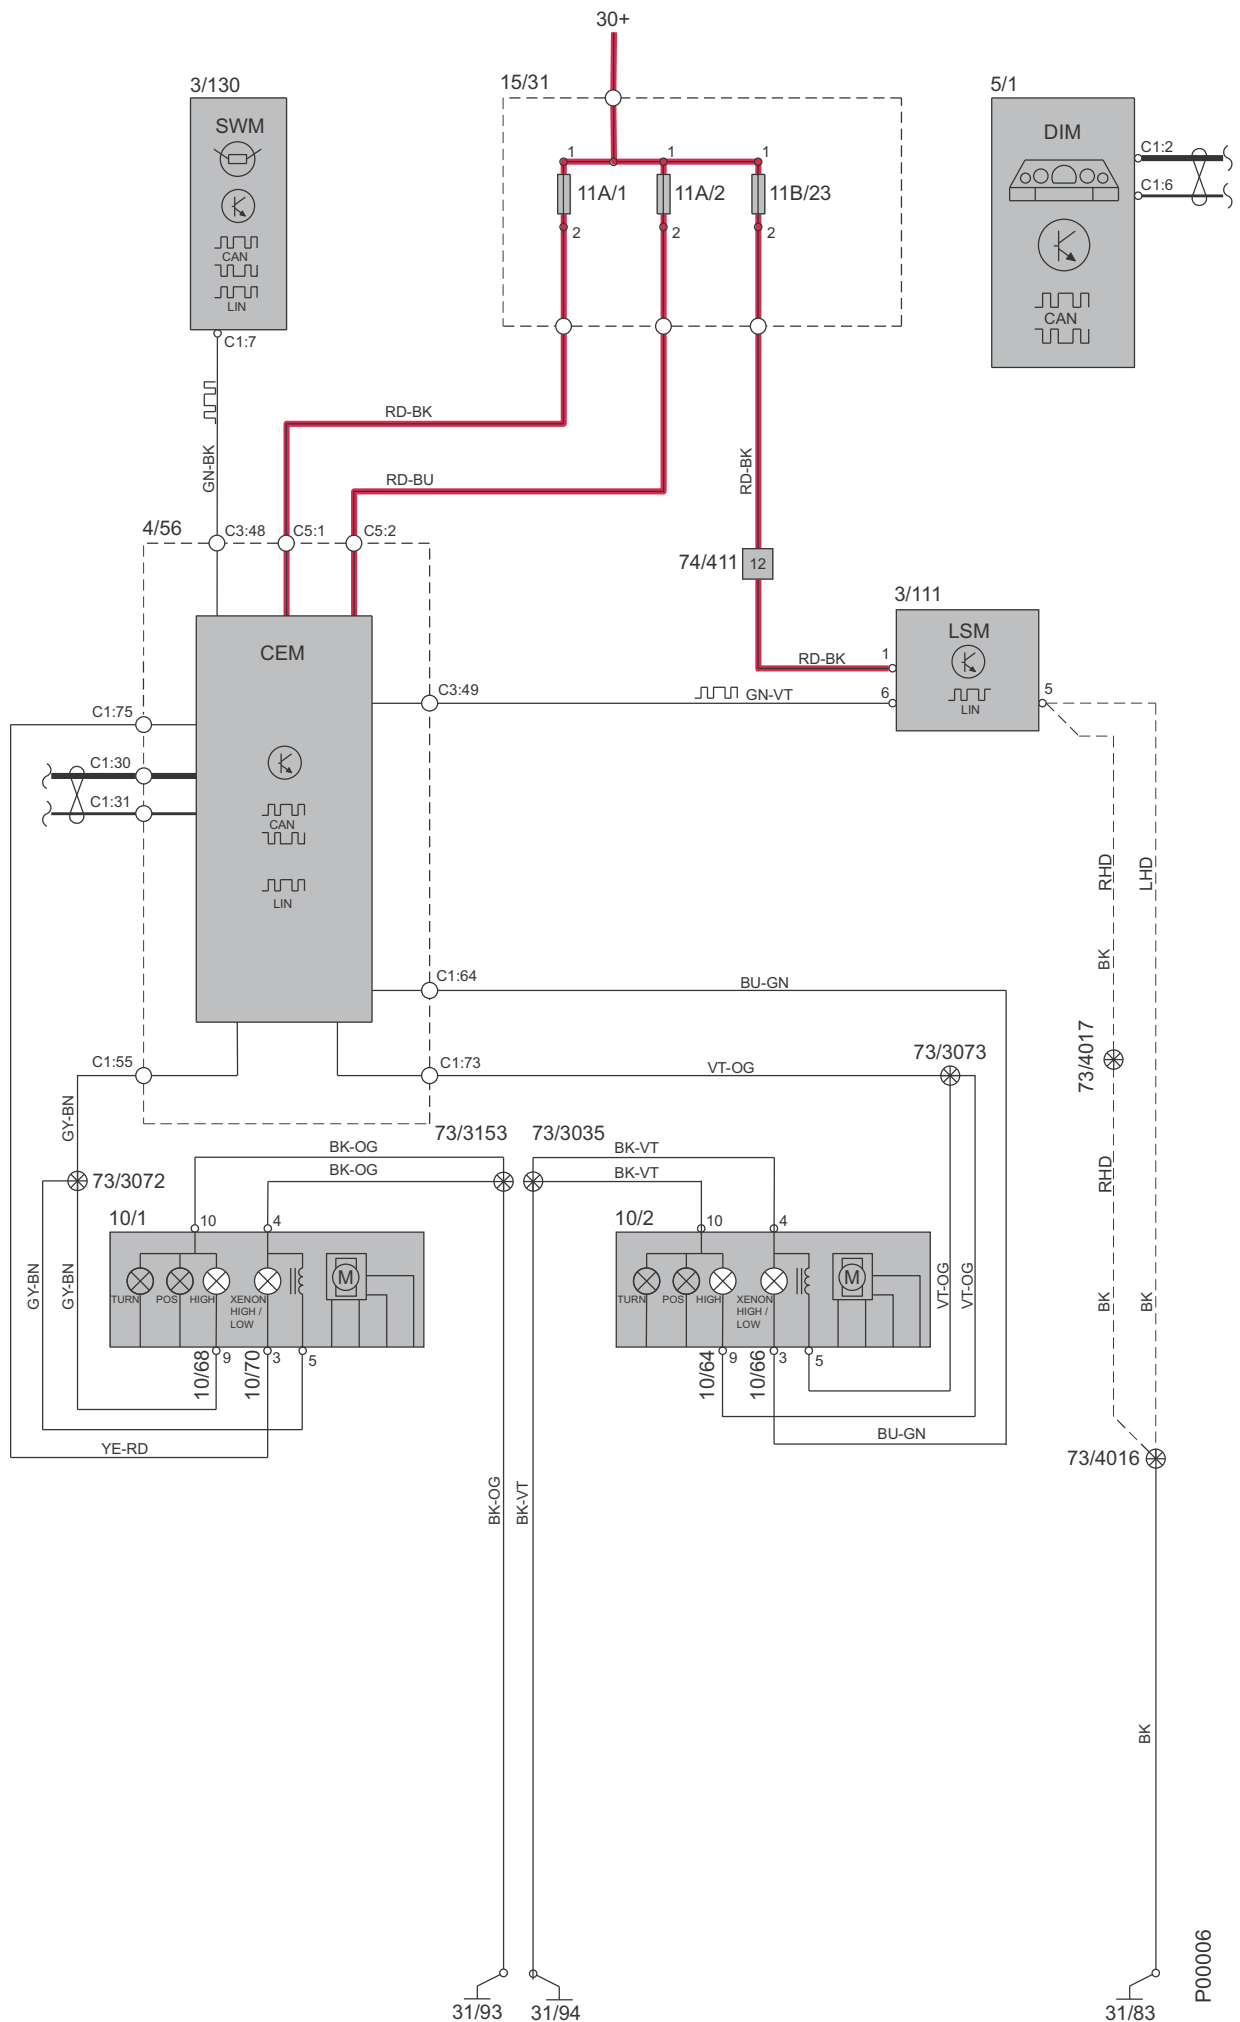

Group 35 Lighting


Beam length adjustment, manual

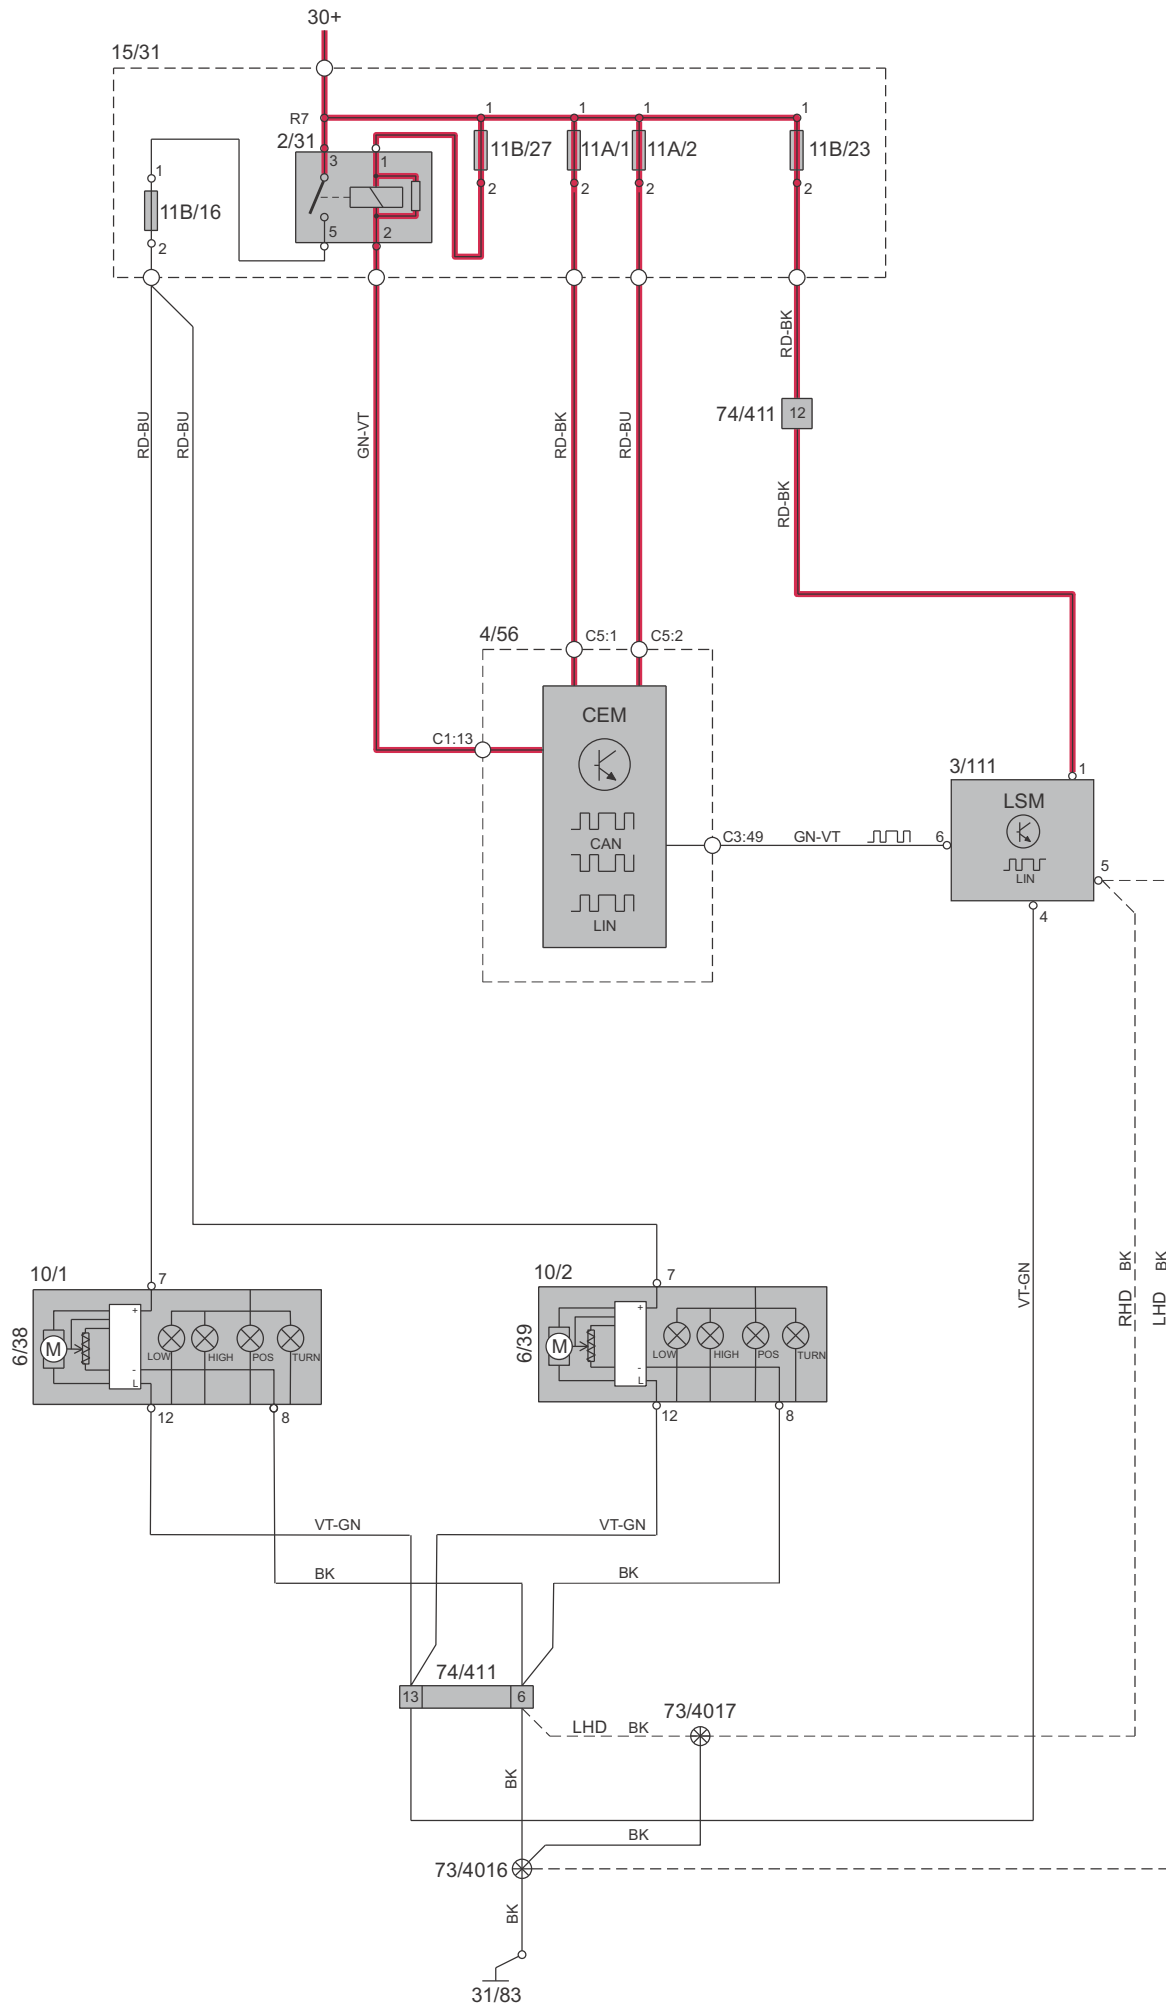

101022


Group 35 Lighting

Running/Parking light, Tail lights V70

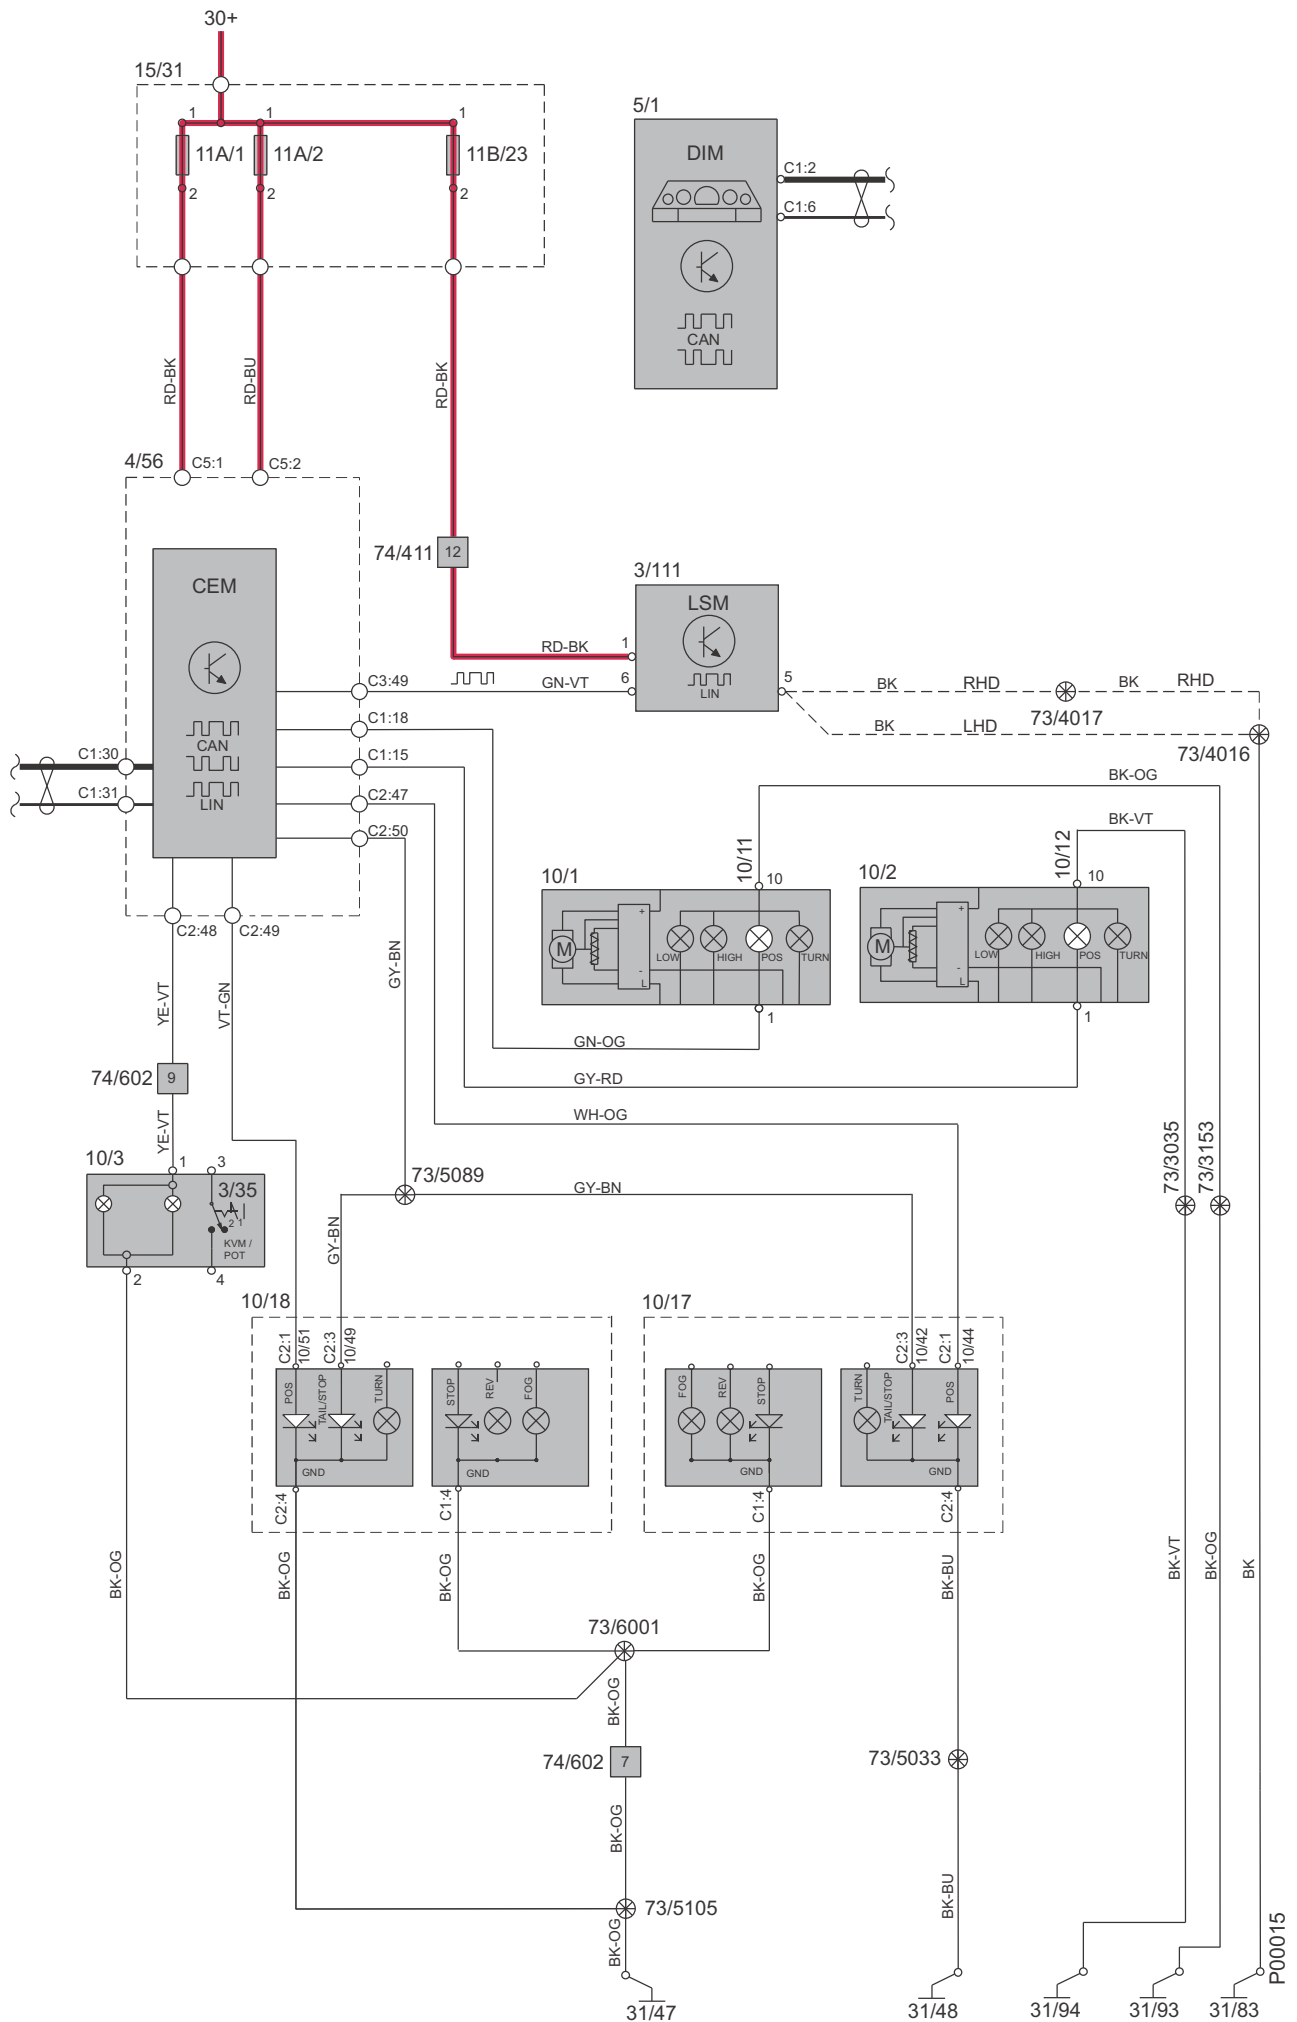


Group 35 Lighting

Running/Parking light, Tail lights S80

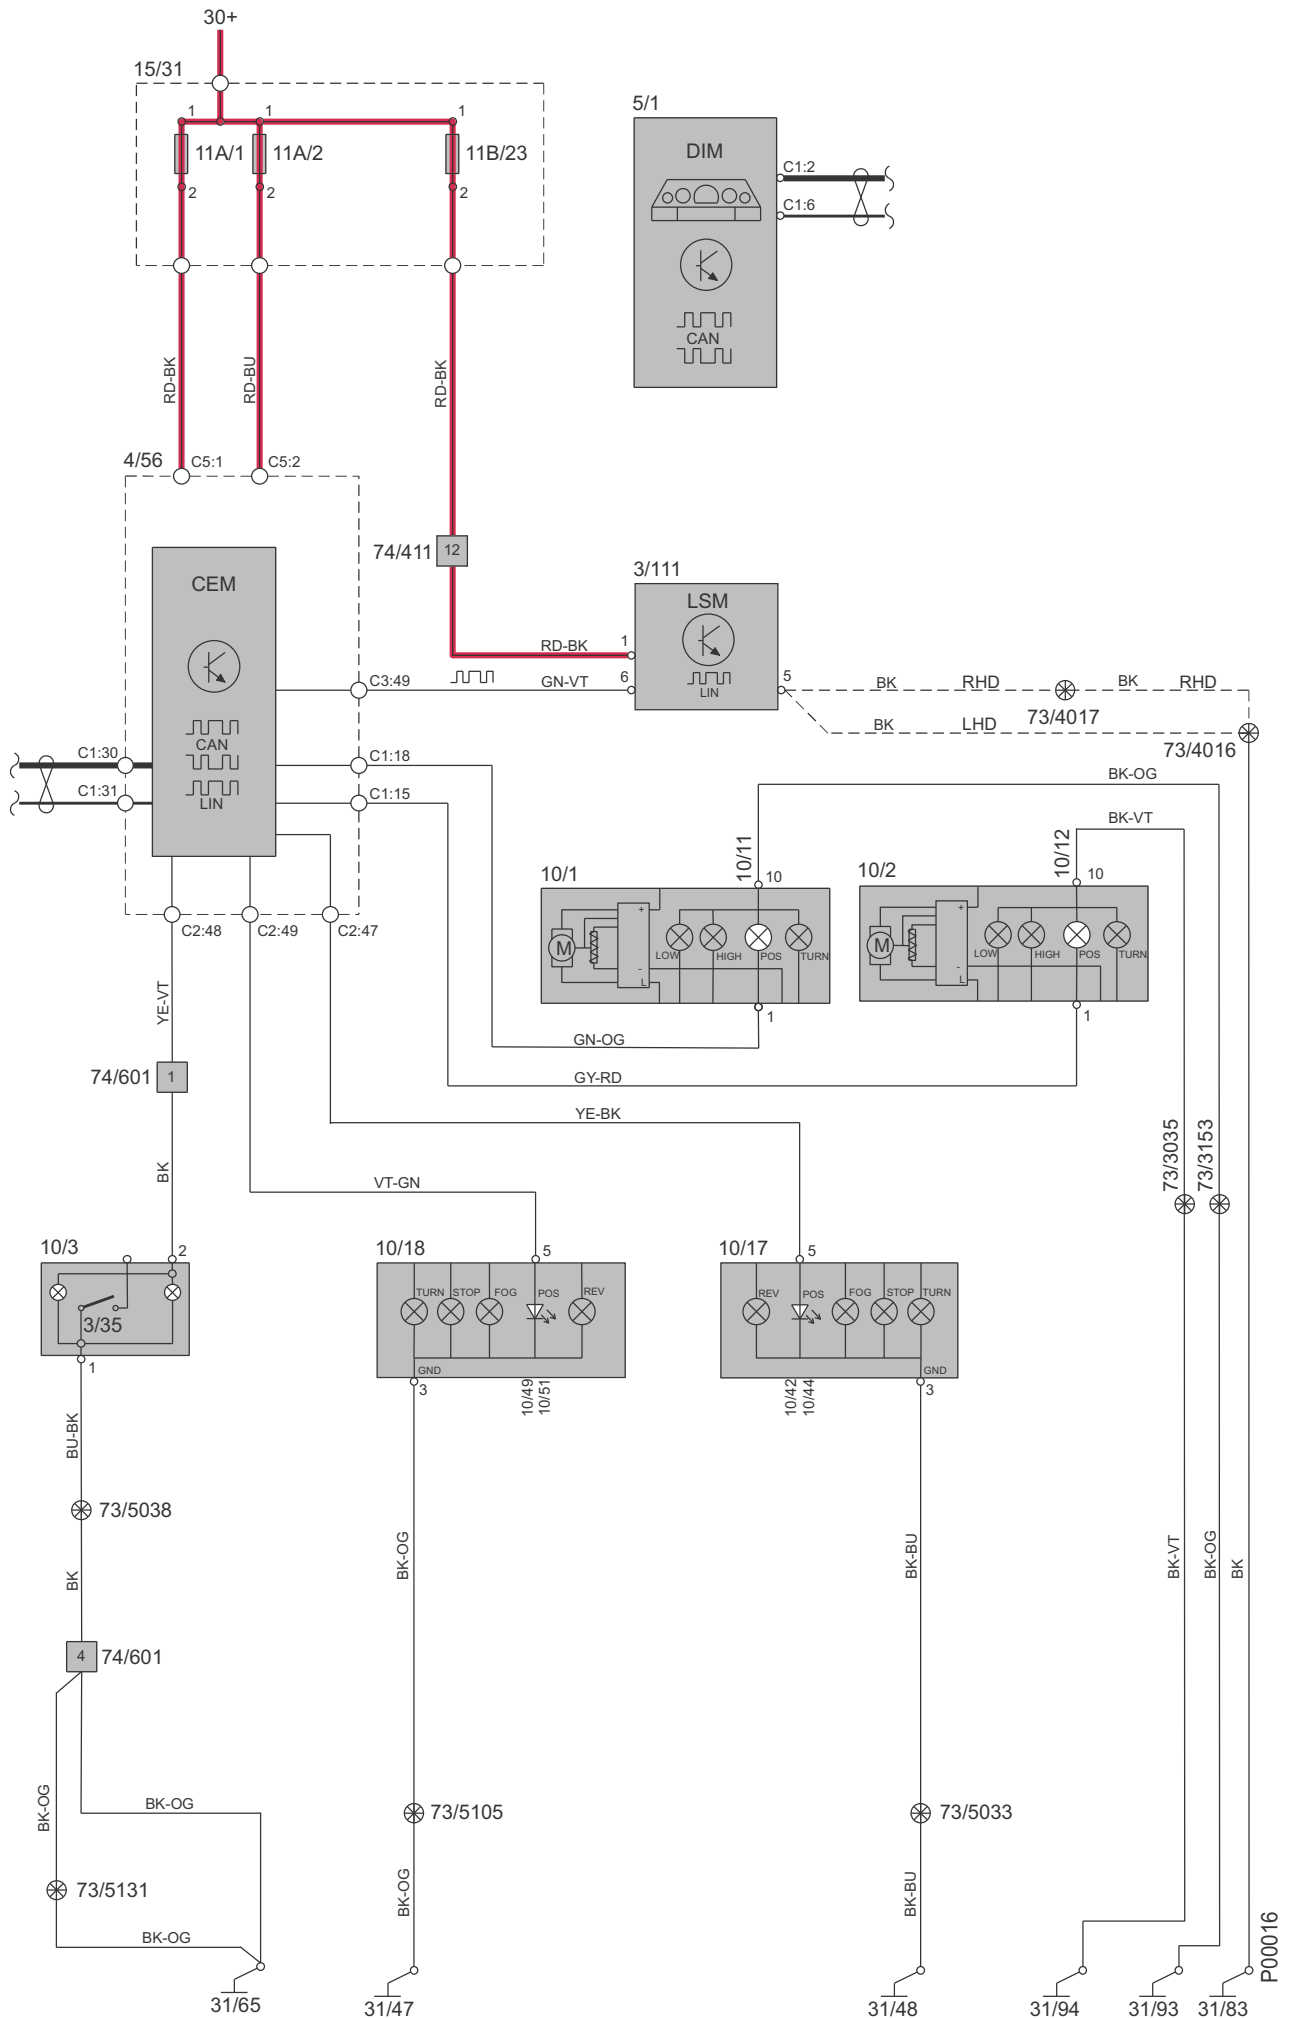


Group 35 Lighting Fog/Daytime running lights V70

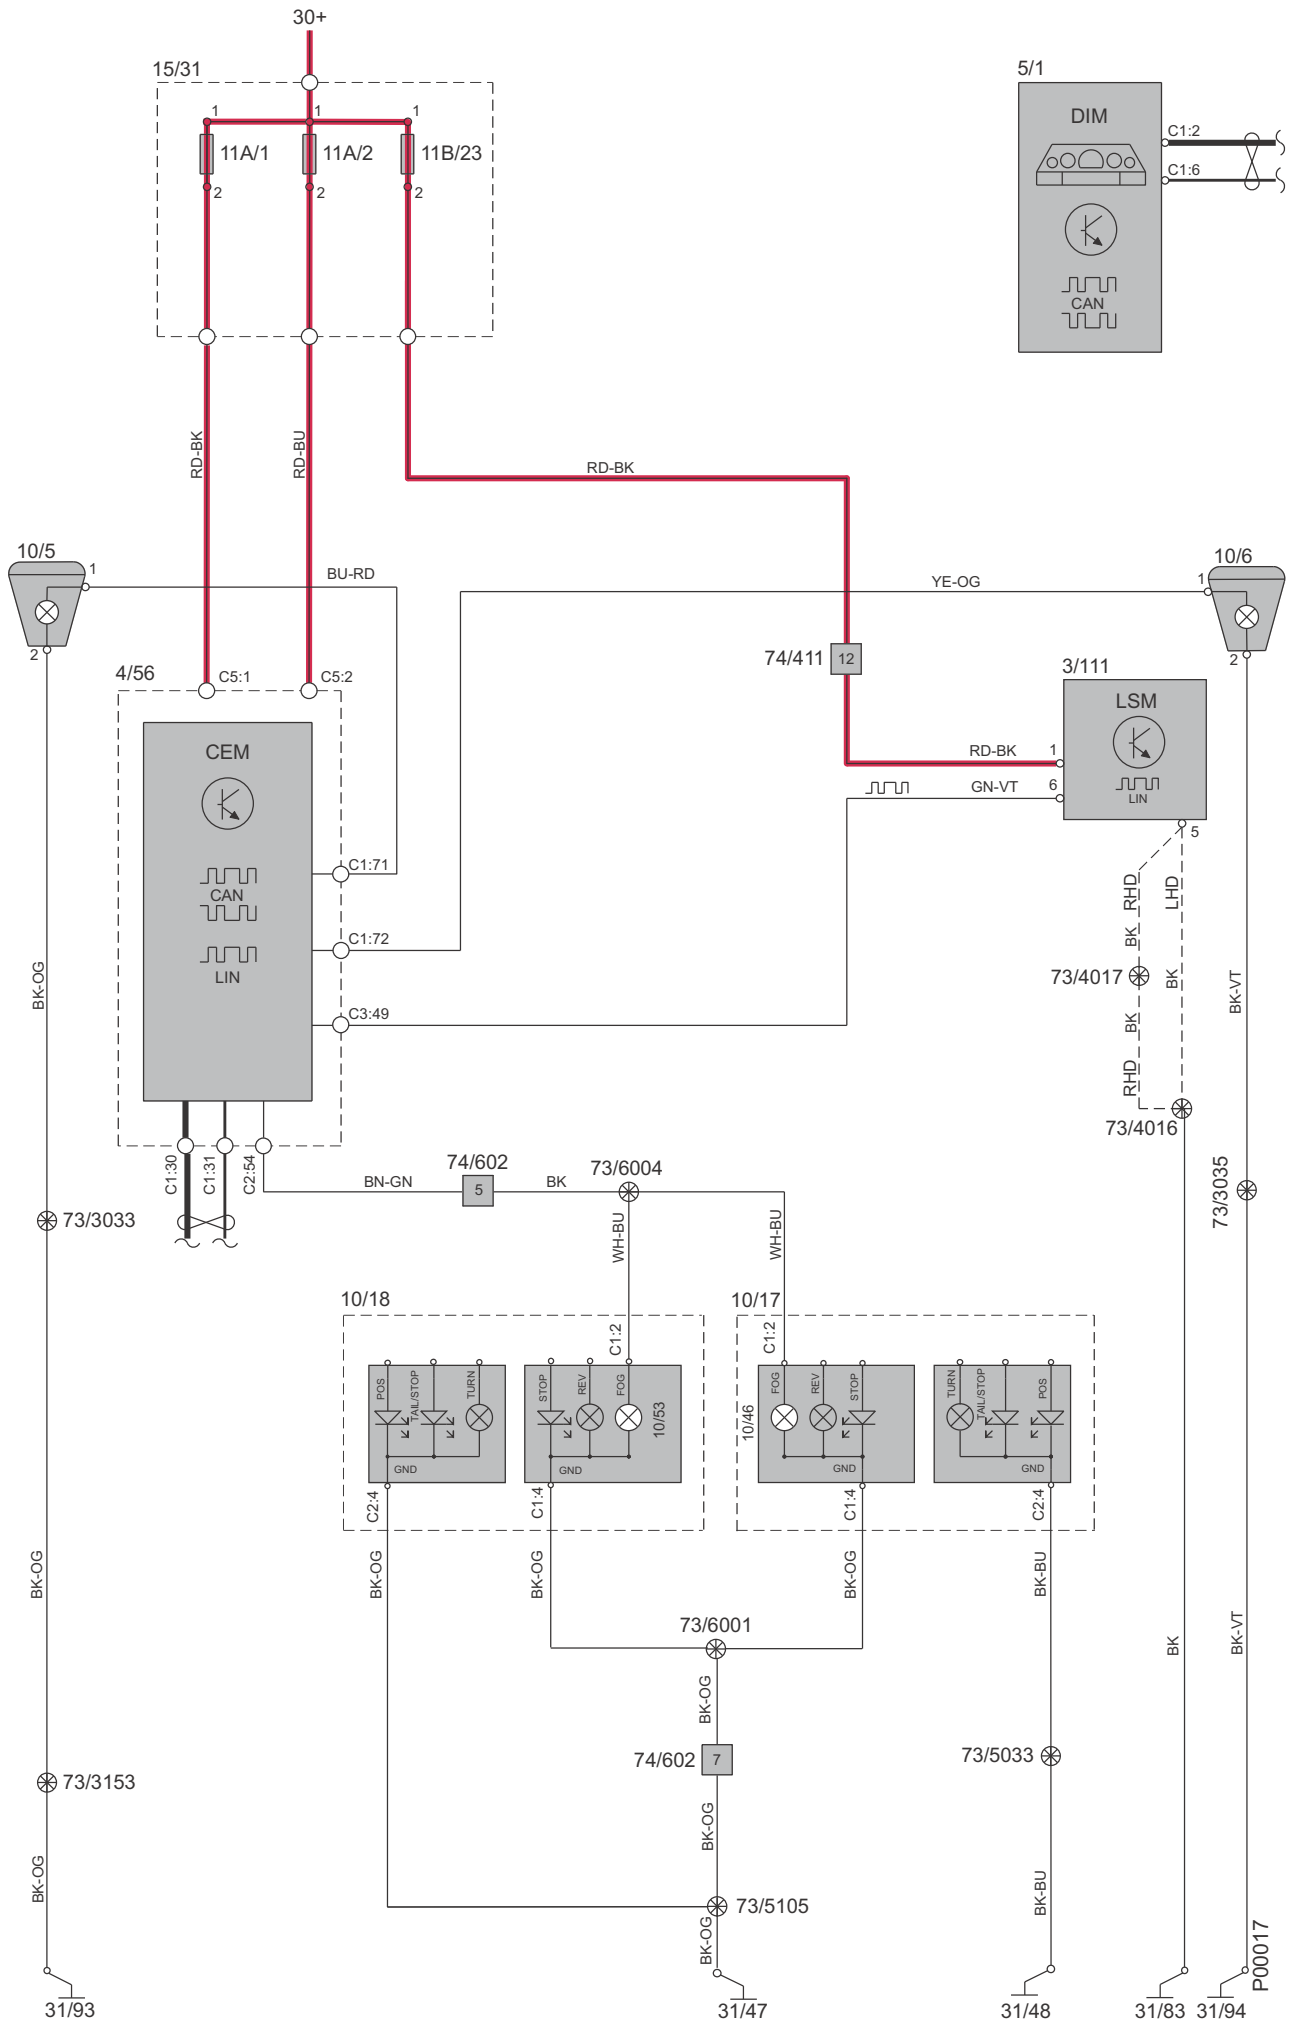


Group 35 Lighting


Fog/Daytime running lights S80

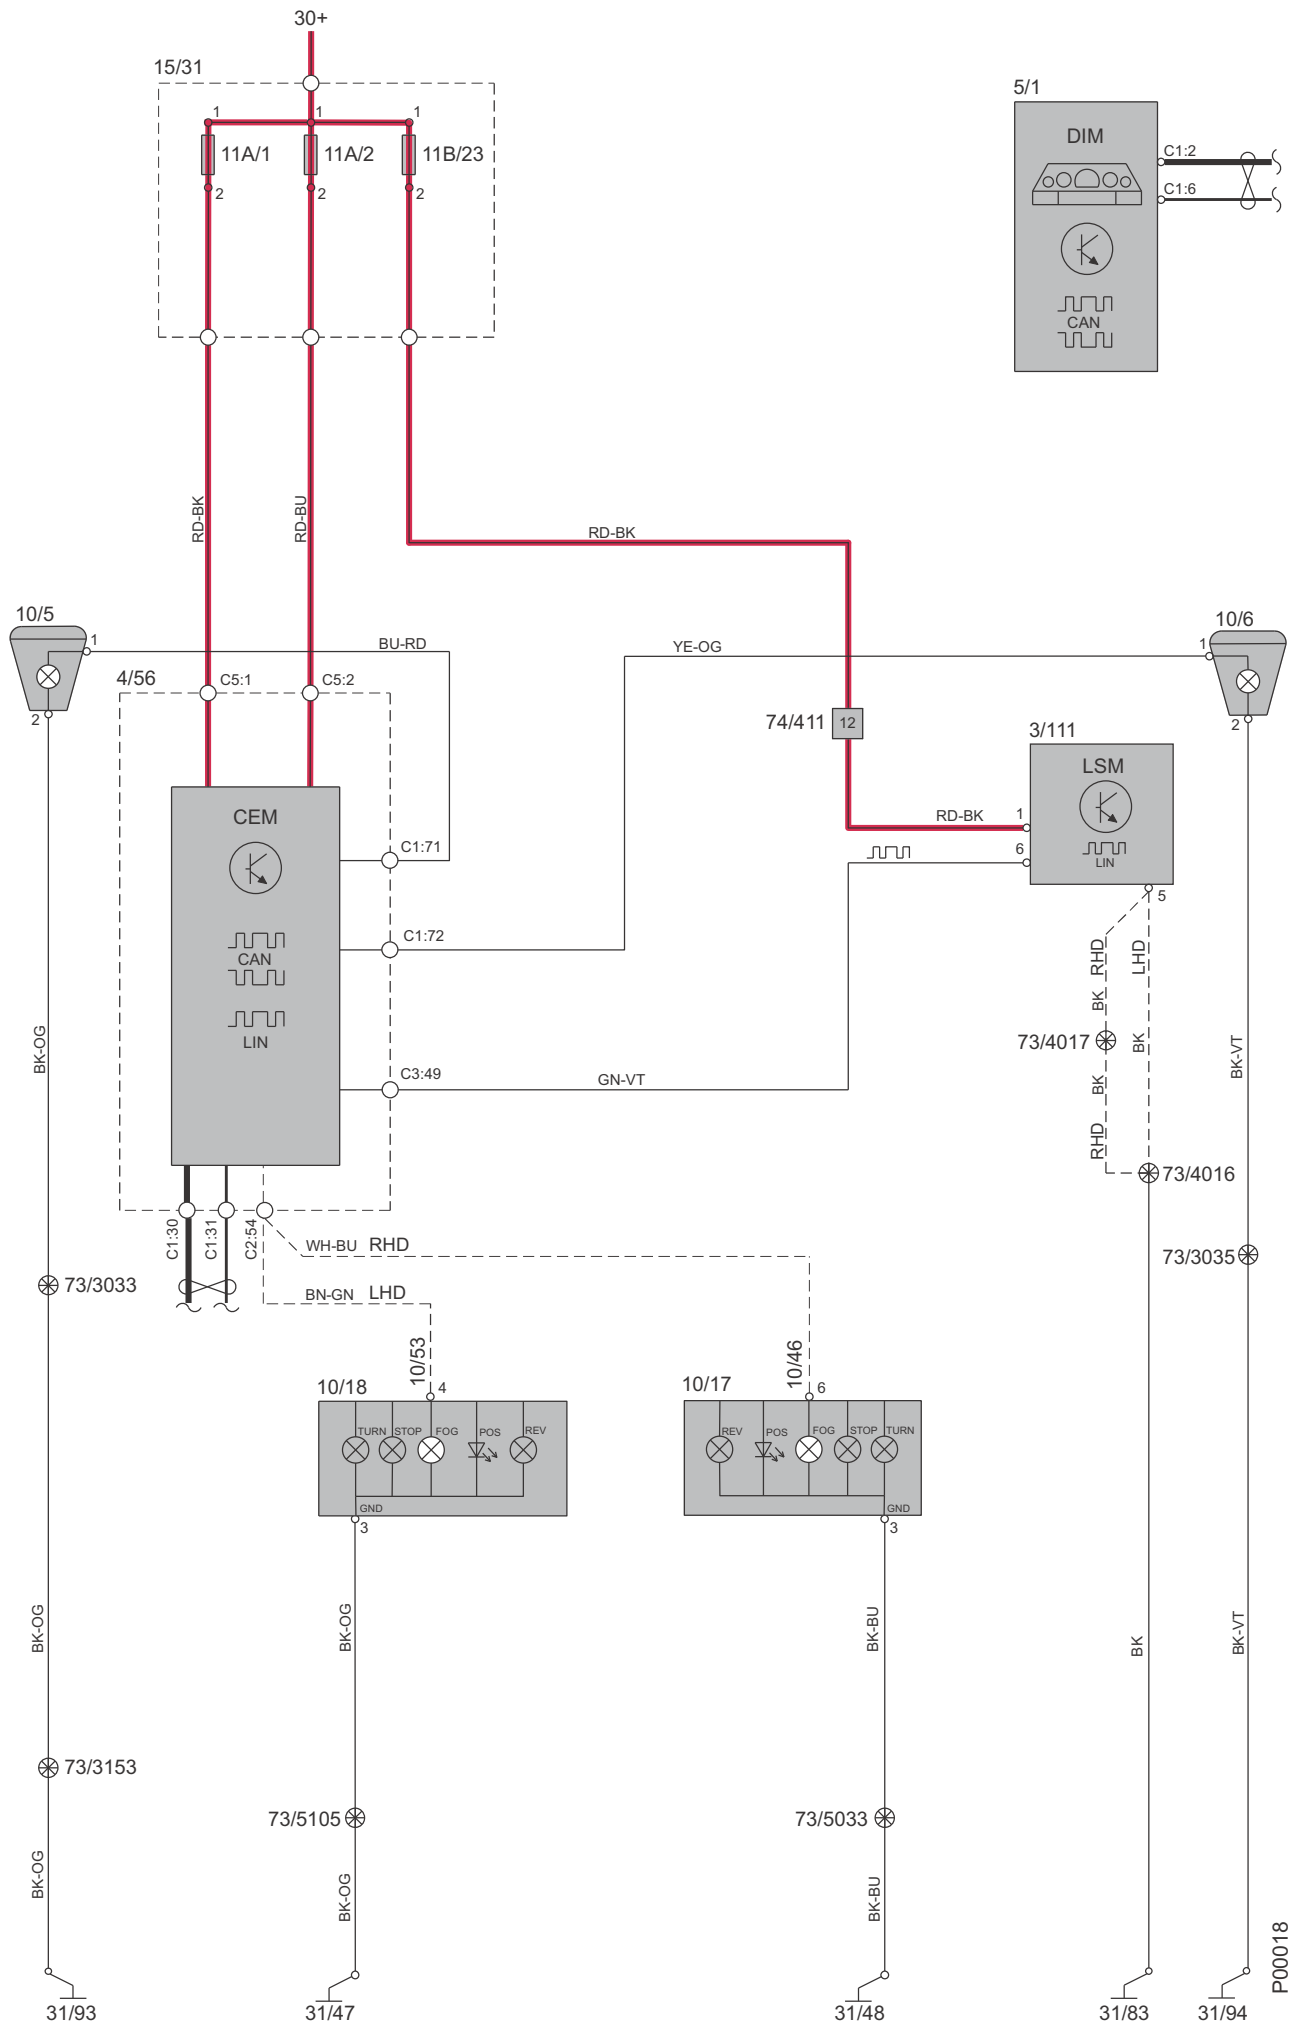


Group 35 Lighting Brake lights V70

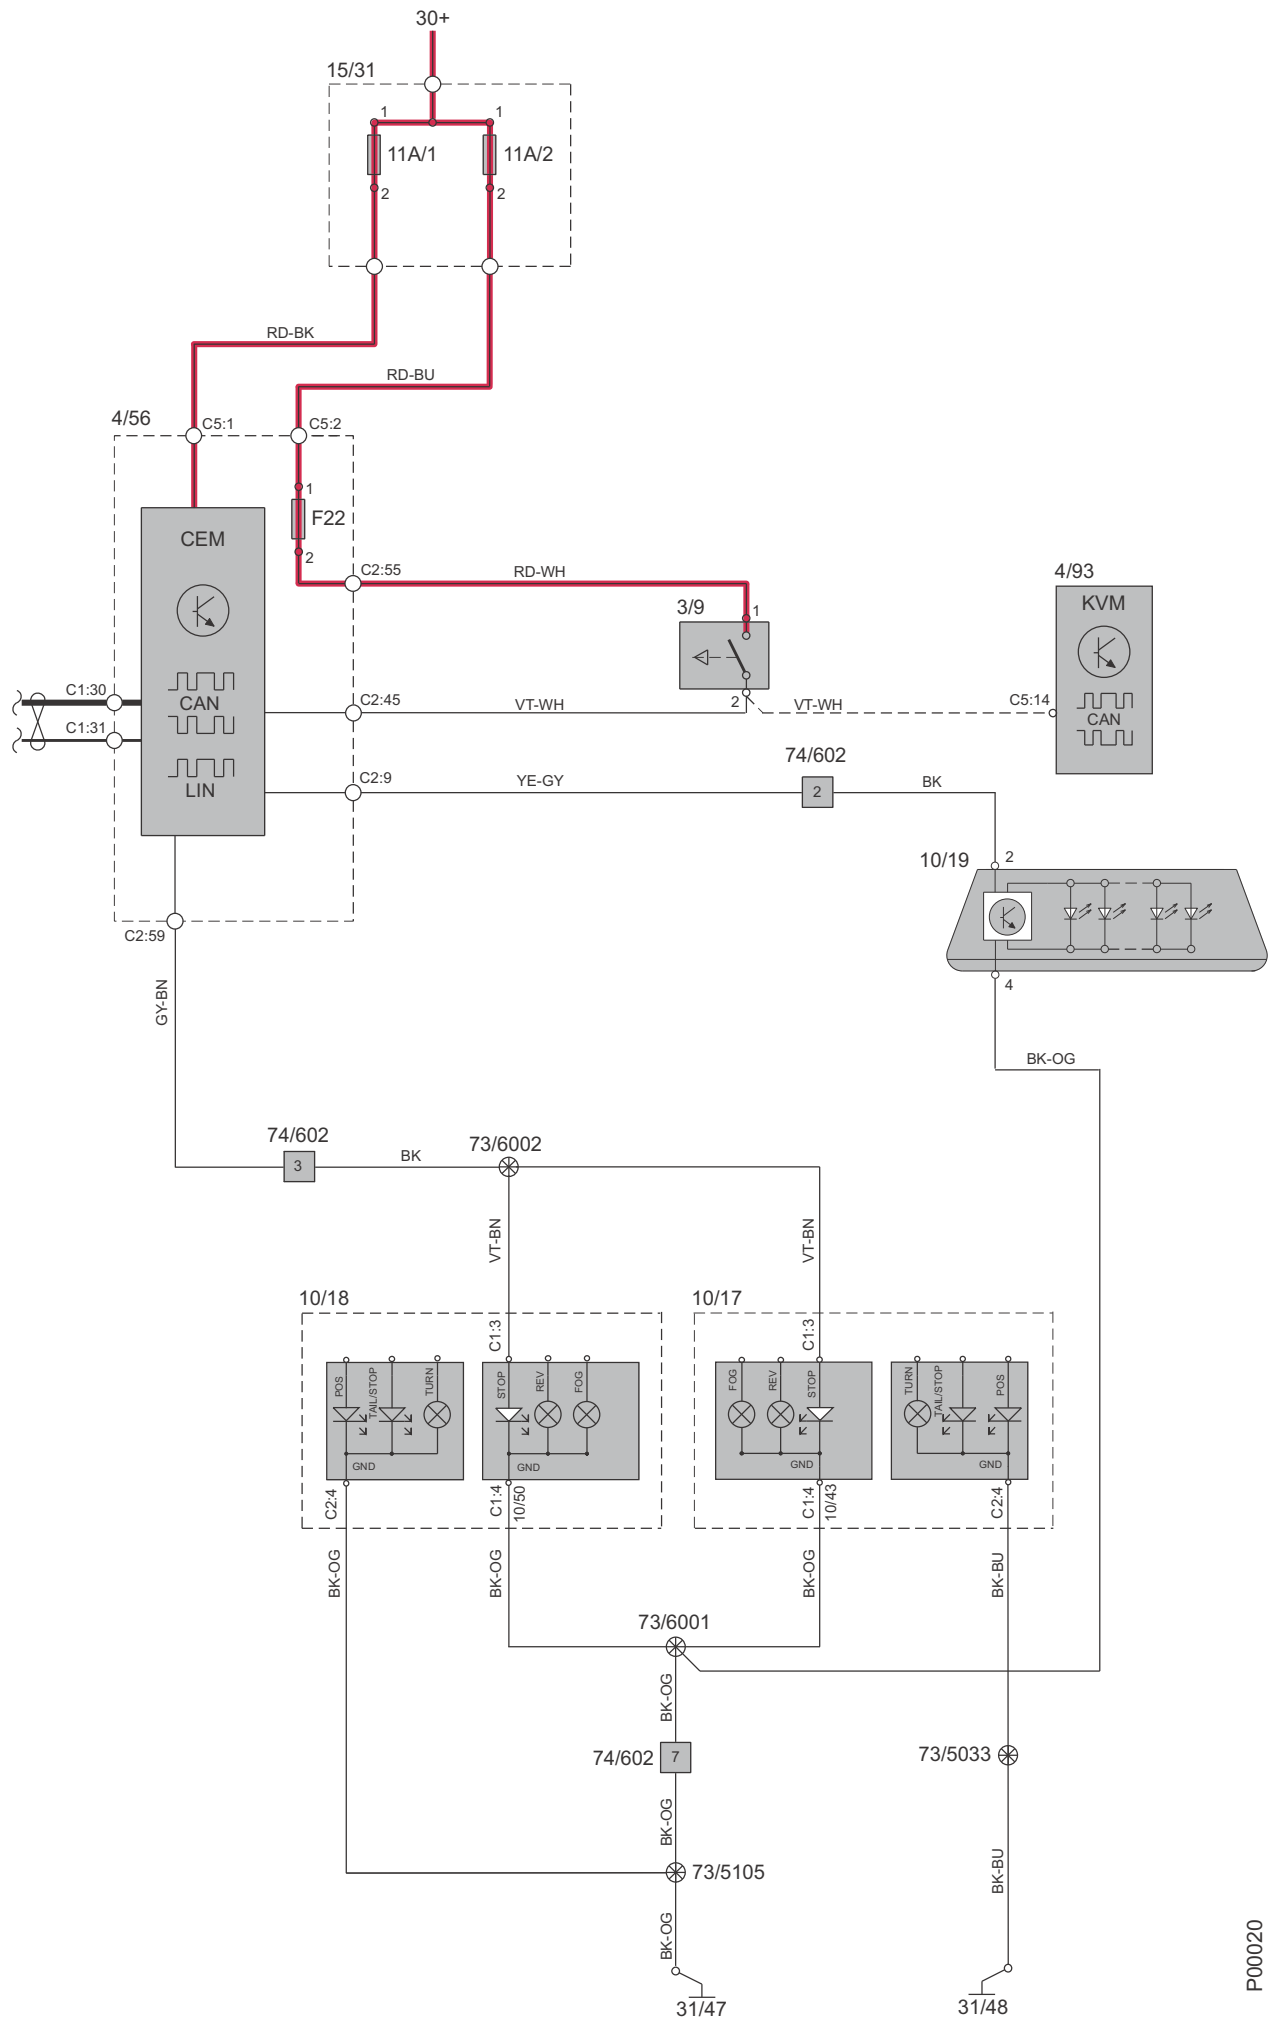

Group 35 Lighting Brake lights S80

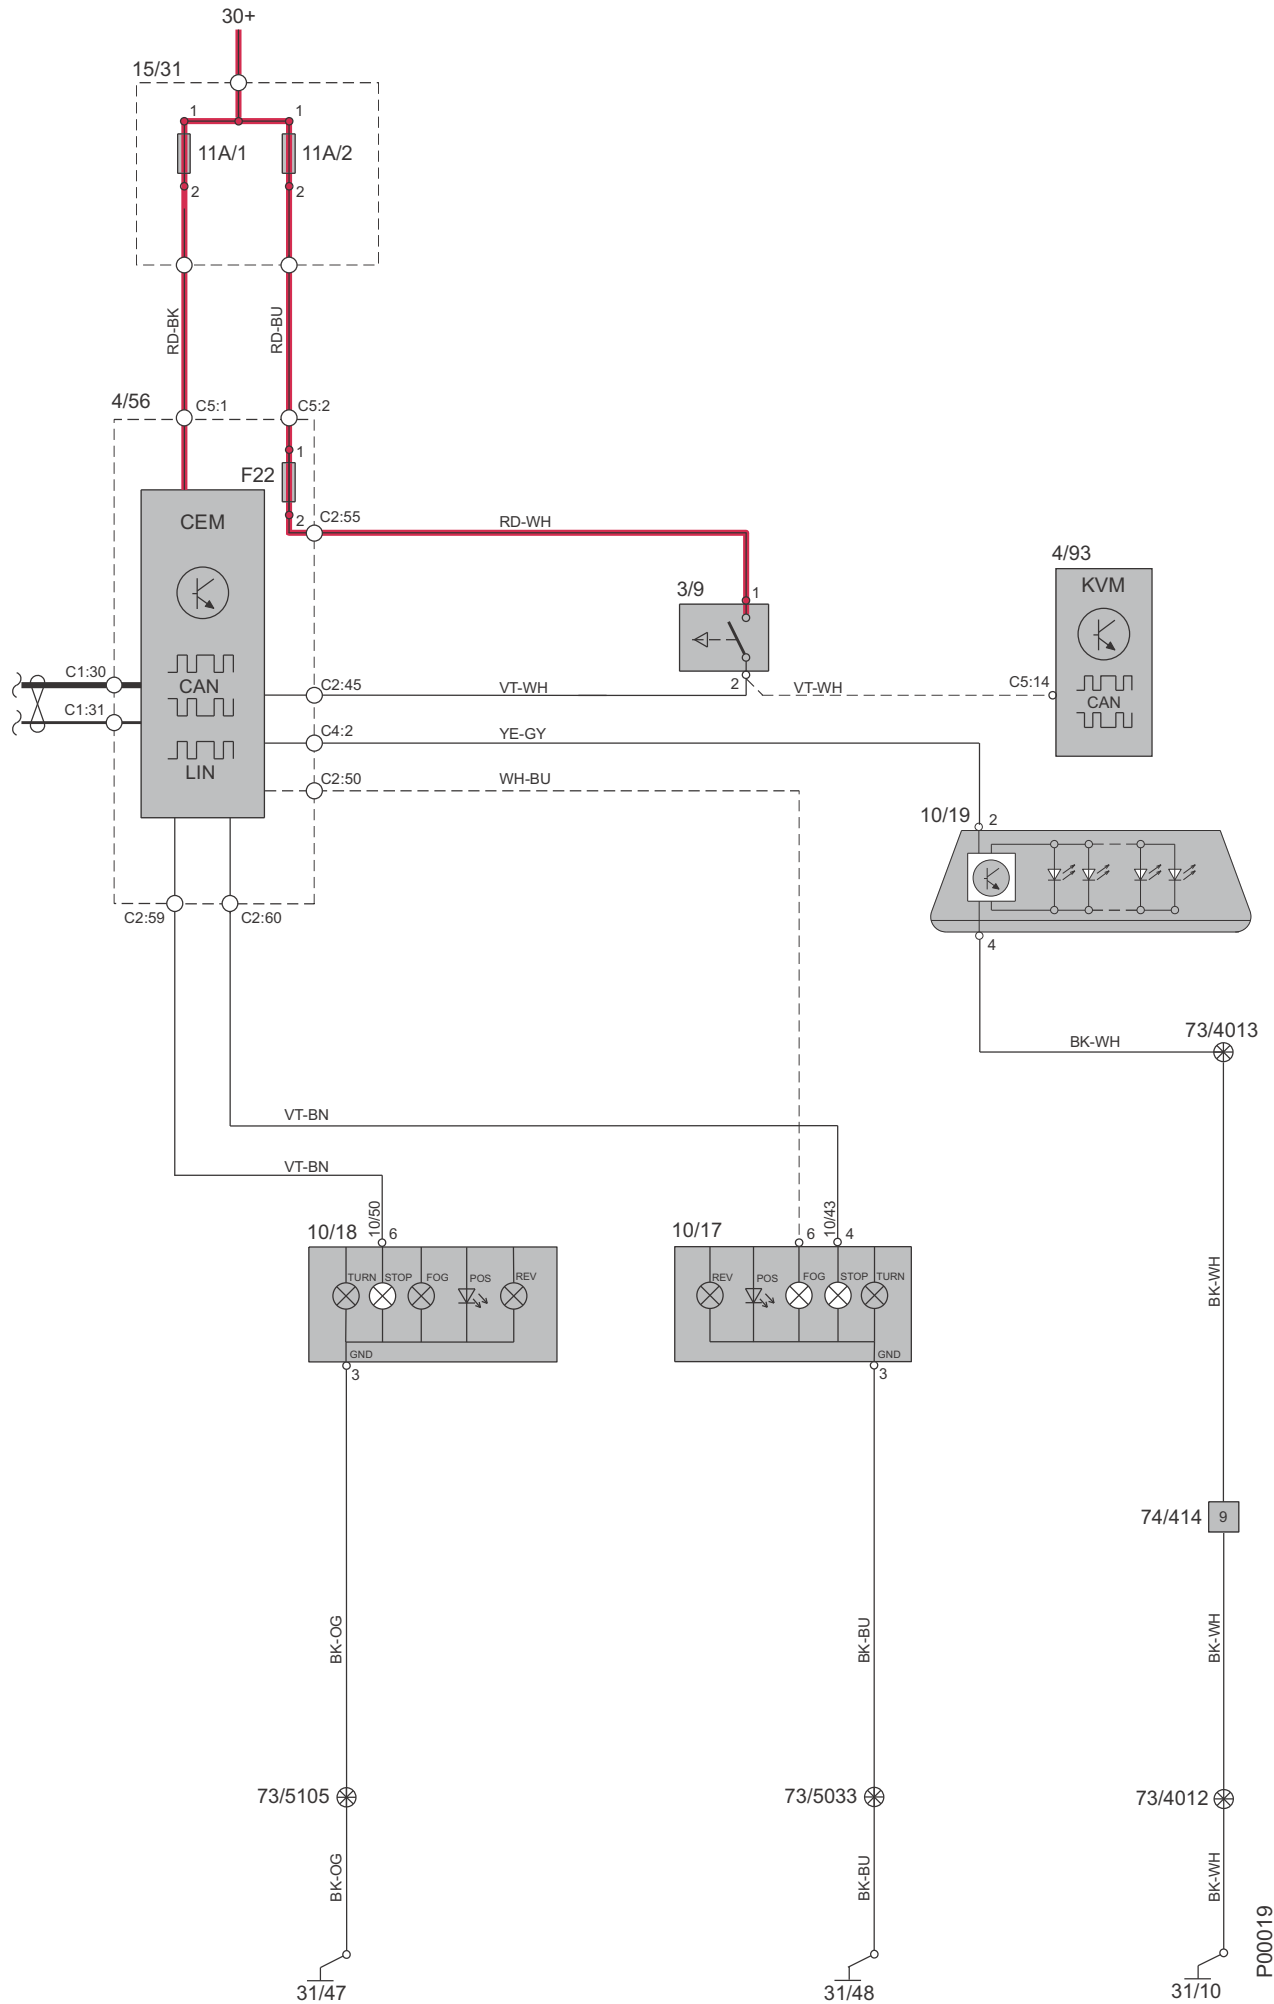


Group 35 Lighting Reversing lights V70

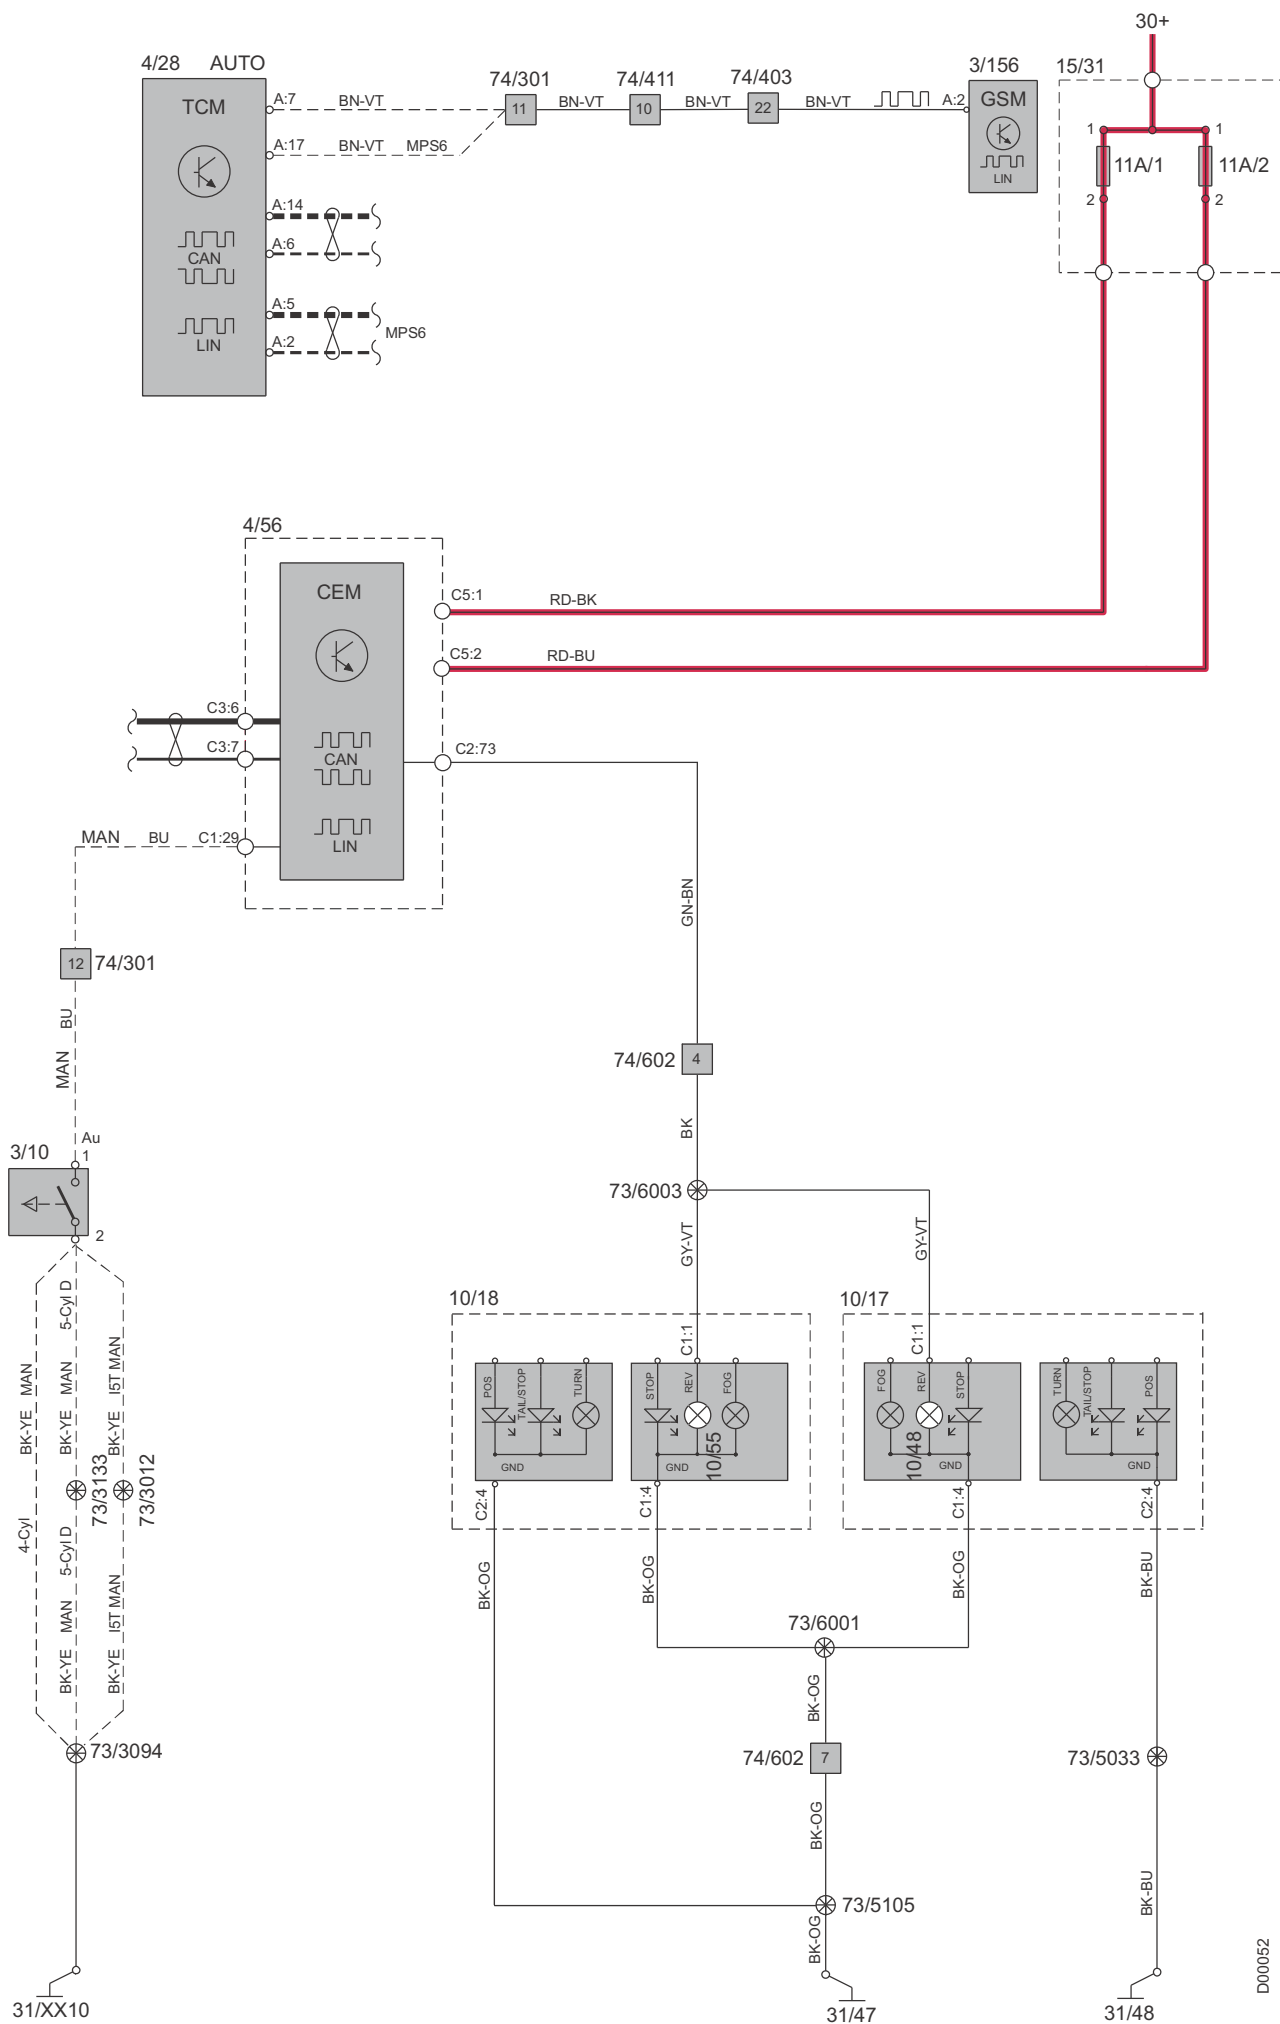


D00052

Group 35 Lighting Reversing lights S80

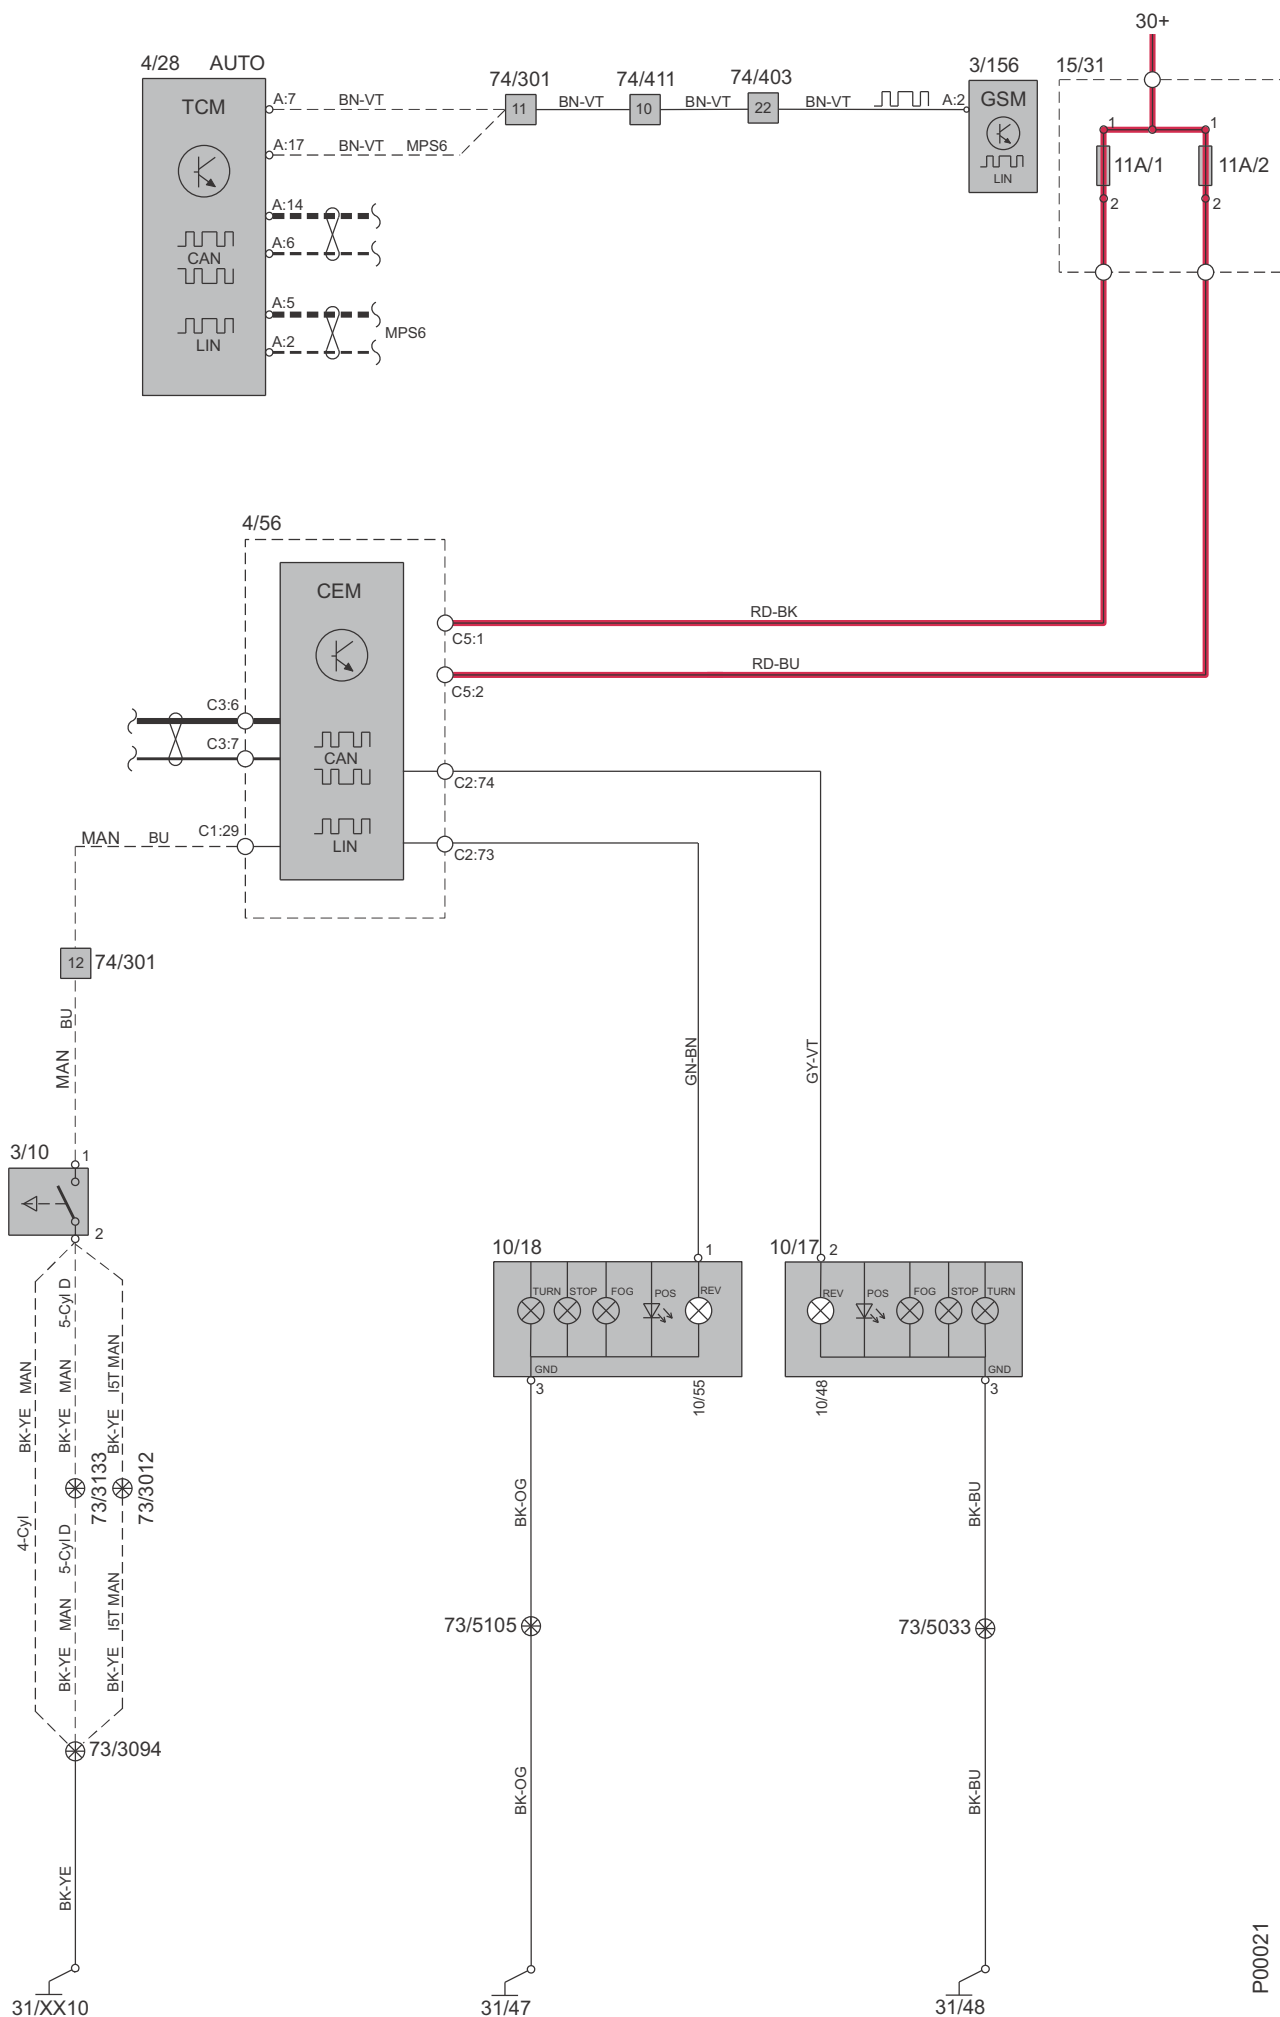


Group 35 Lighting

Follow-me-home lighting LHD

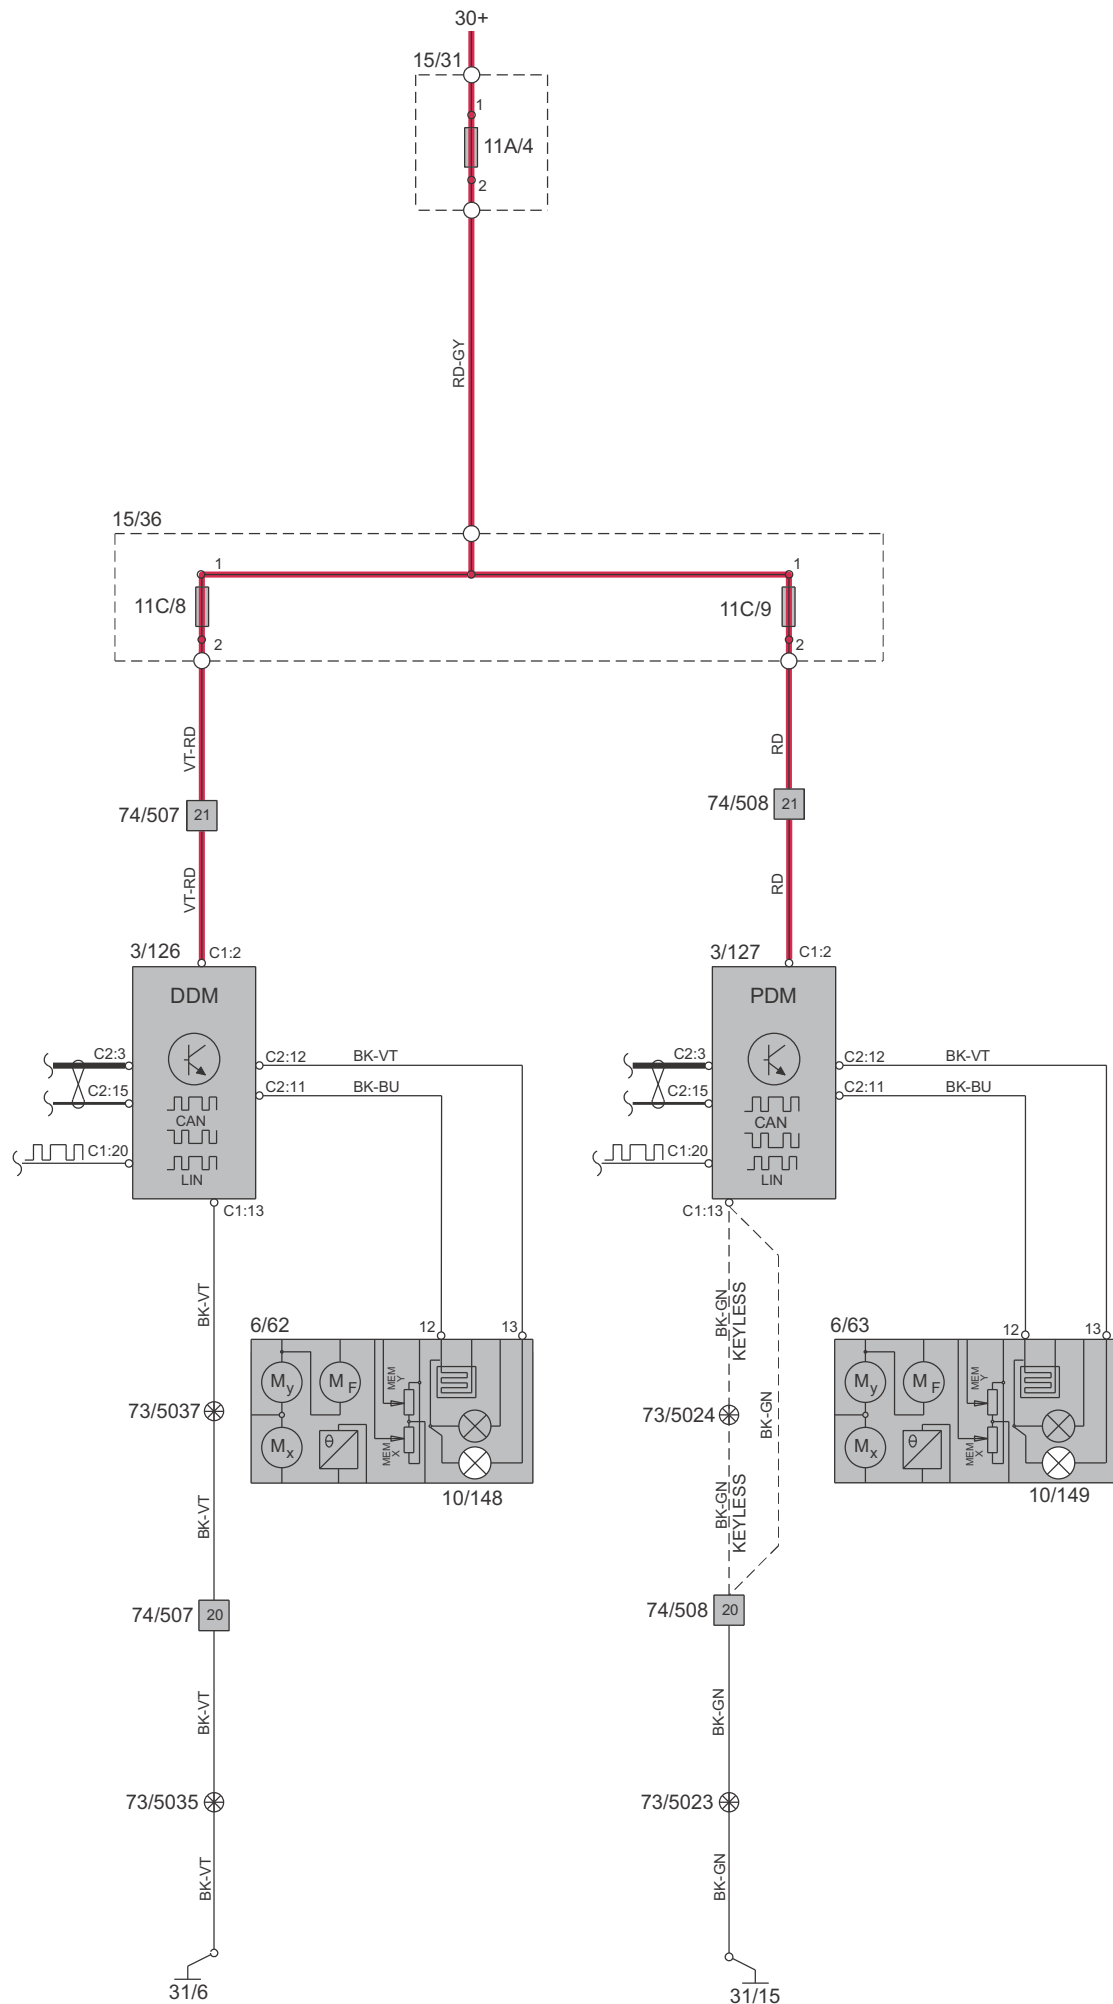


Group 35 Lighting

Follow-me-home lighting RHD

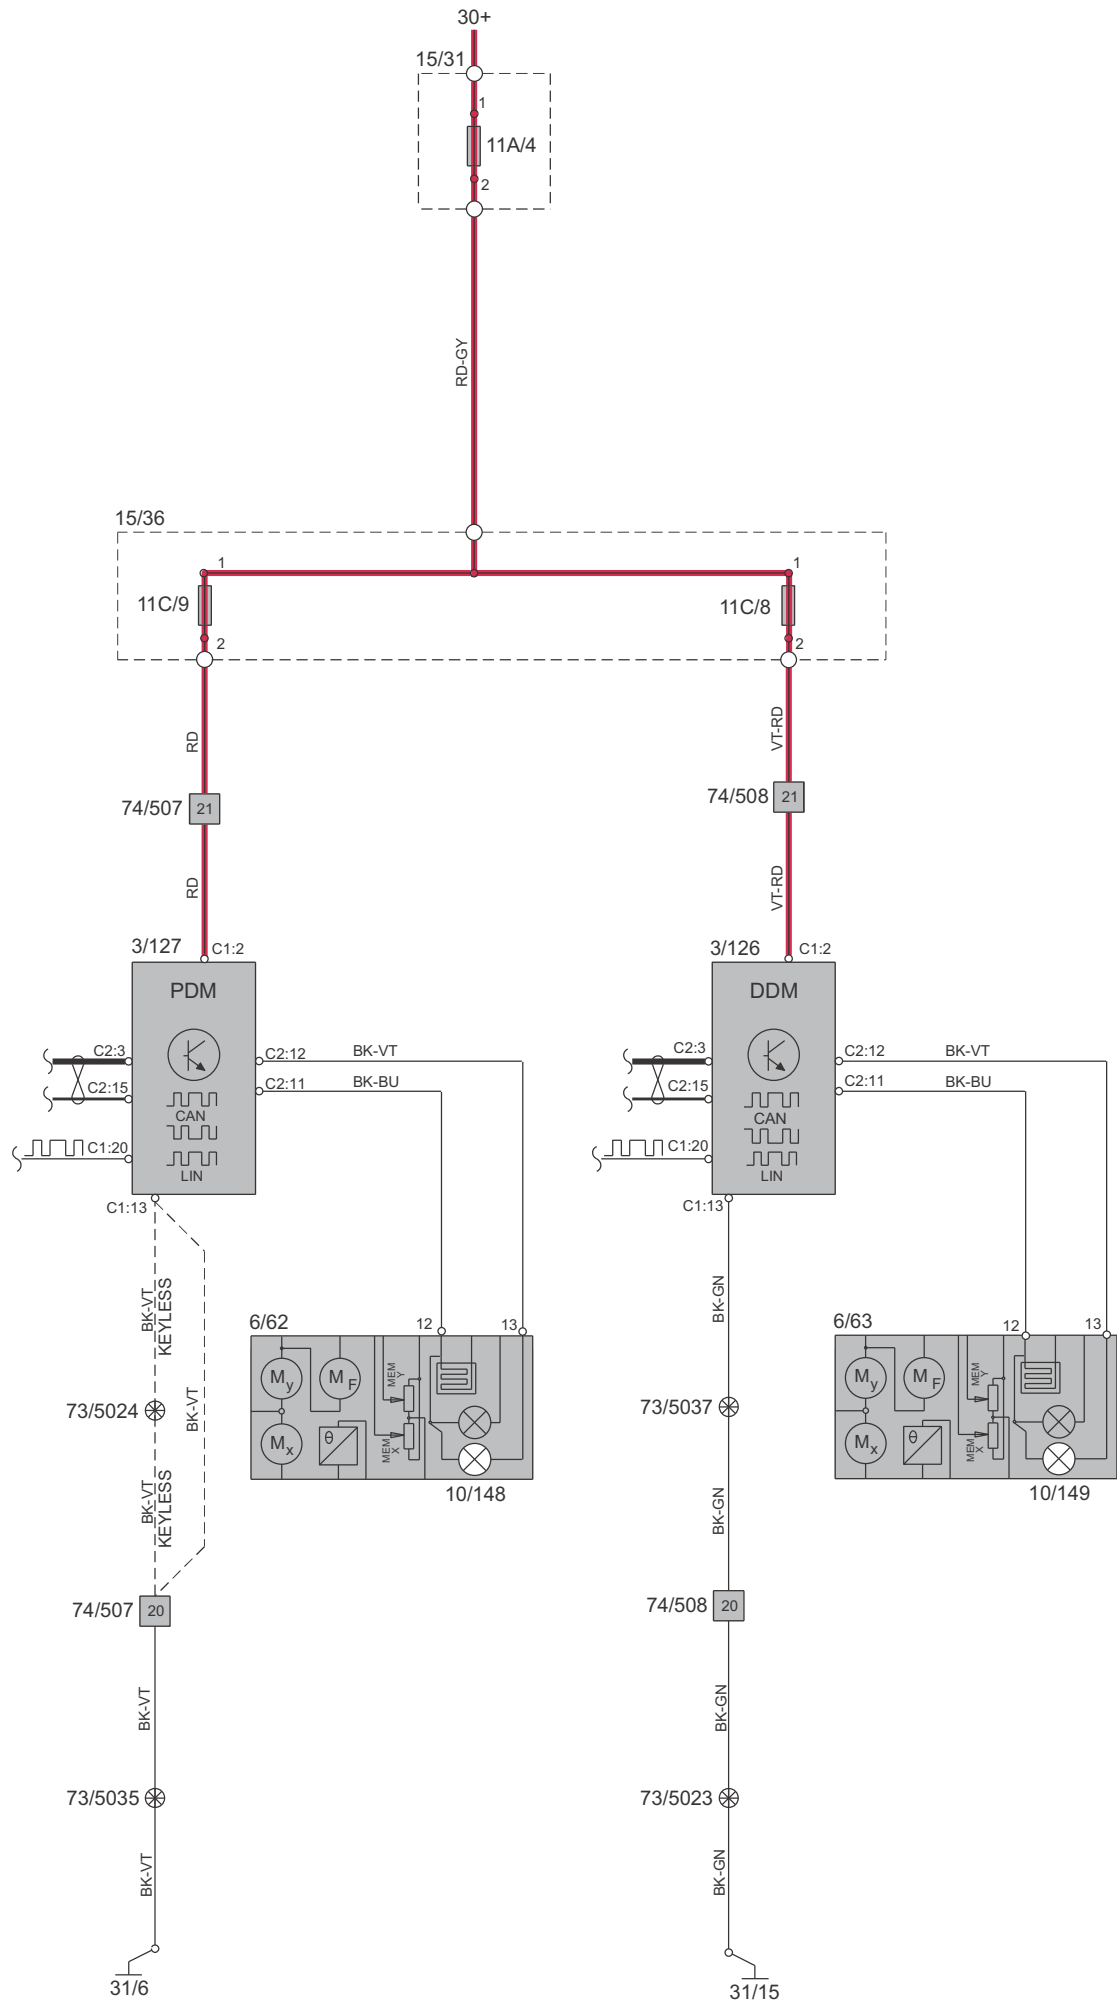


Group 35 Lighting
Interior lighting, LHD 1:2

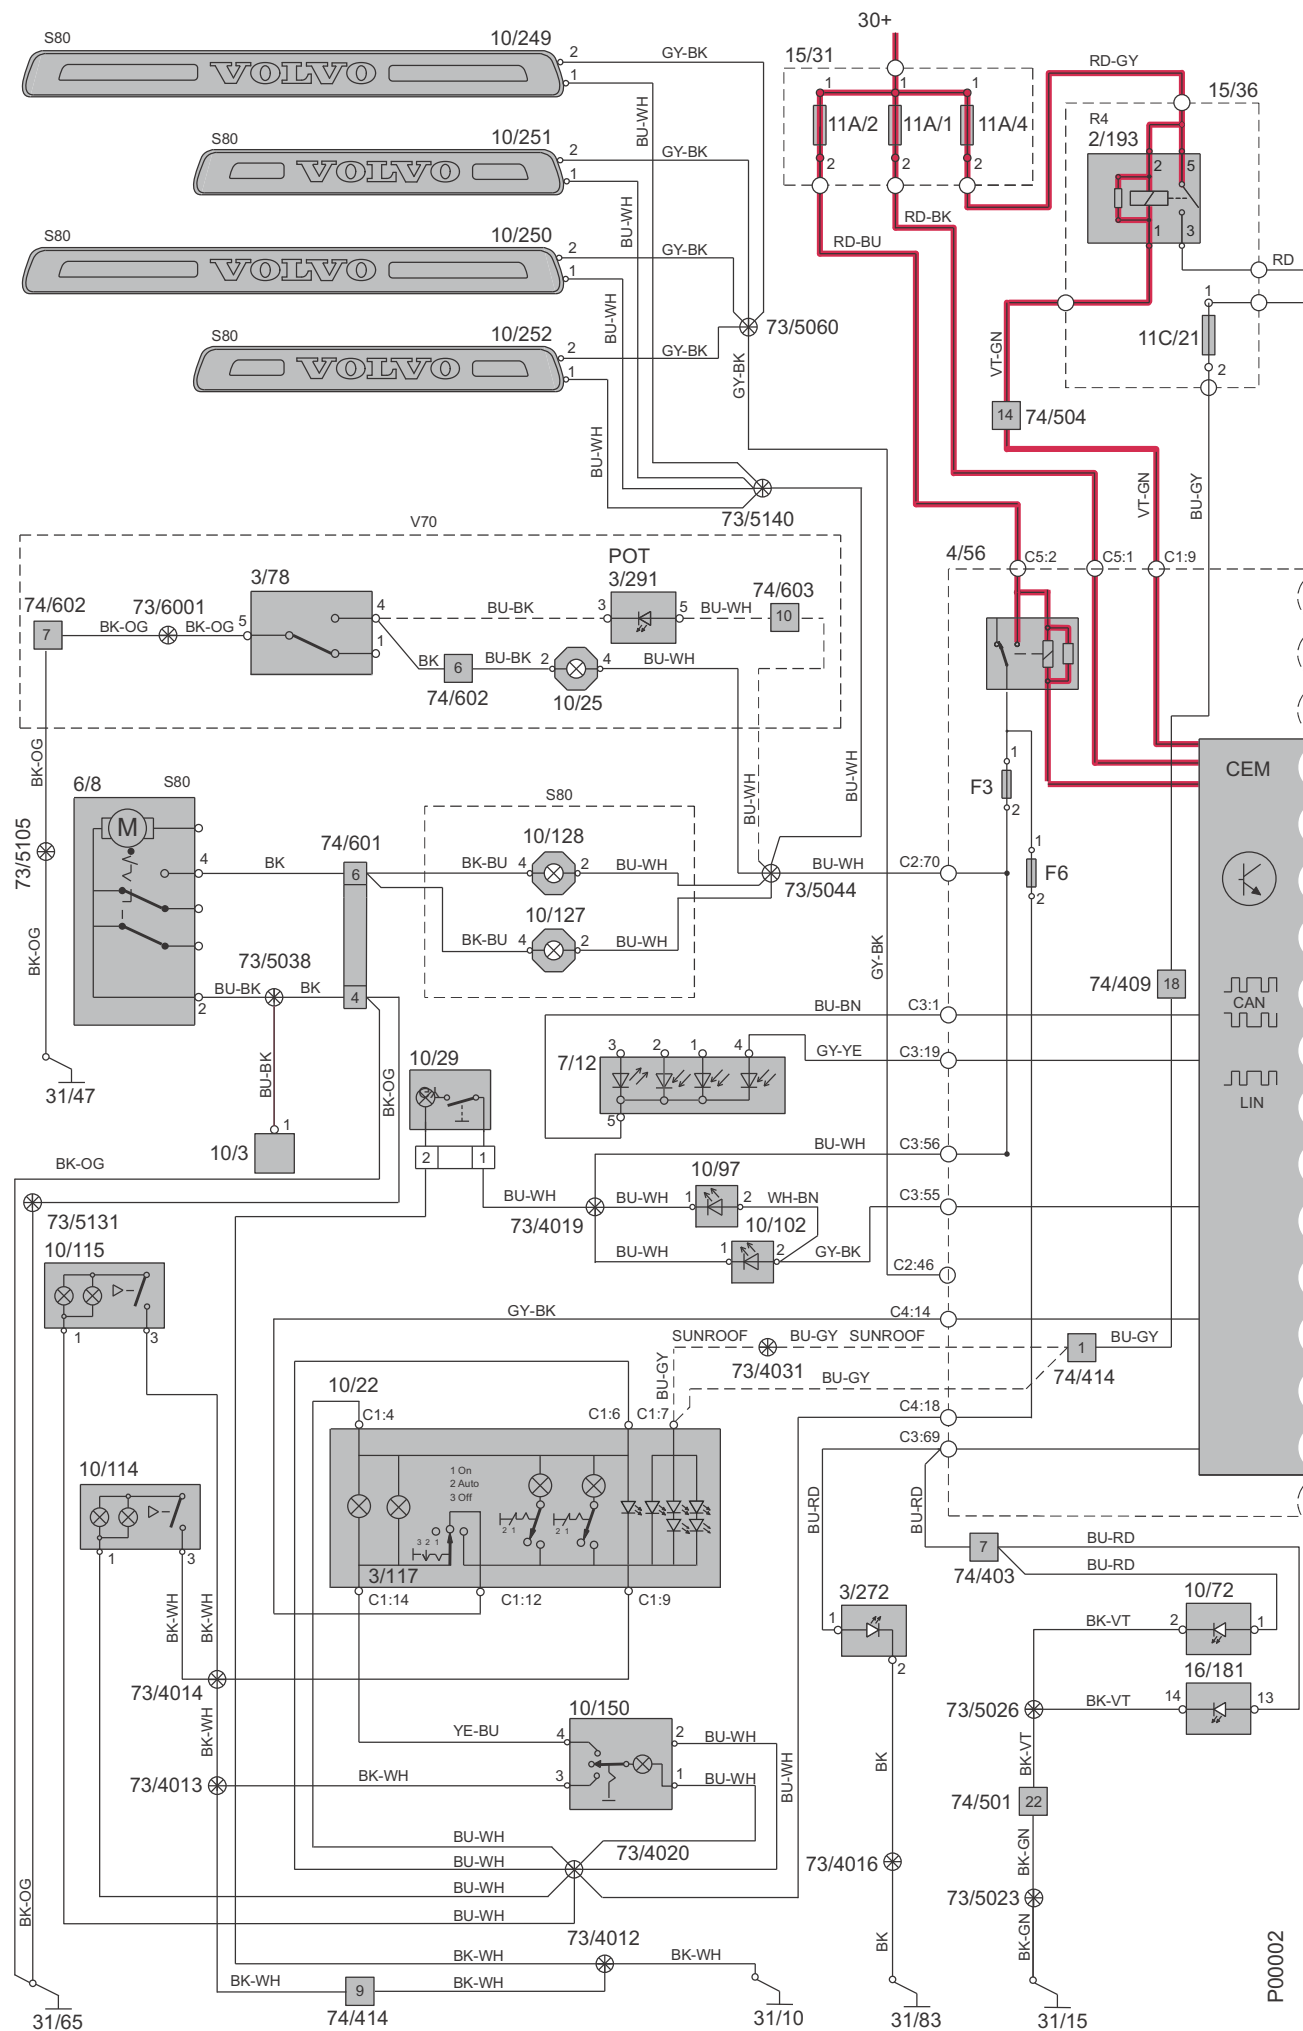


Group 35 Lighting

Interior lighting, LHD 2:2

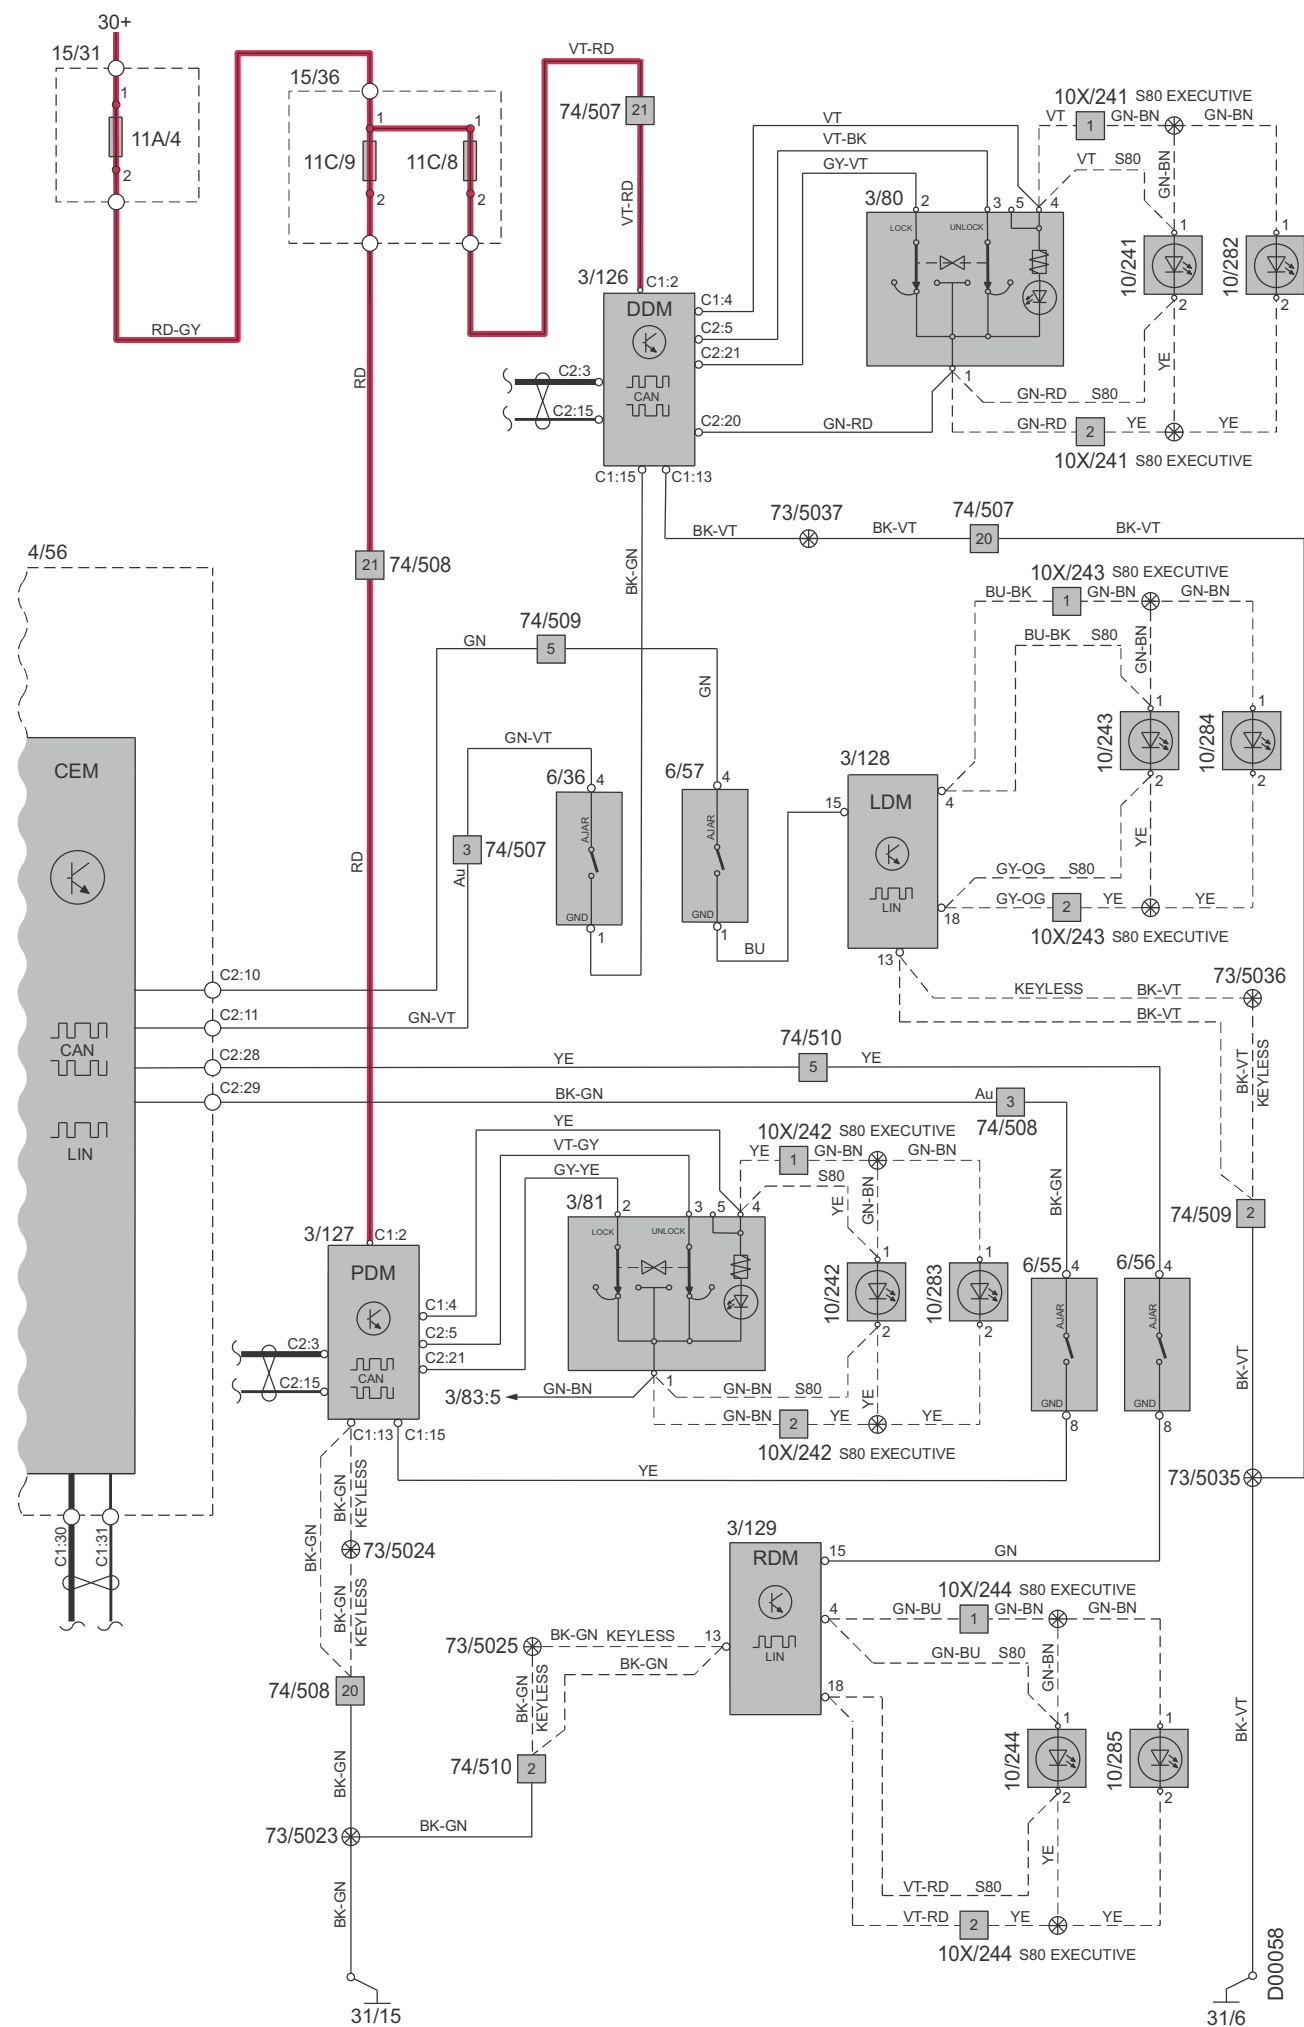


Group 35 Lighting


Interior lighting, RHD 1:2

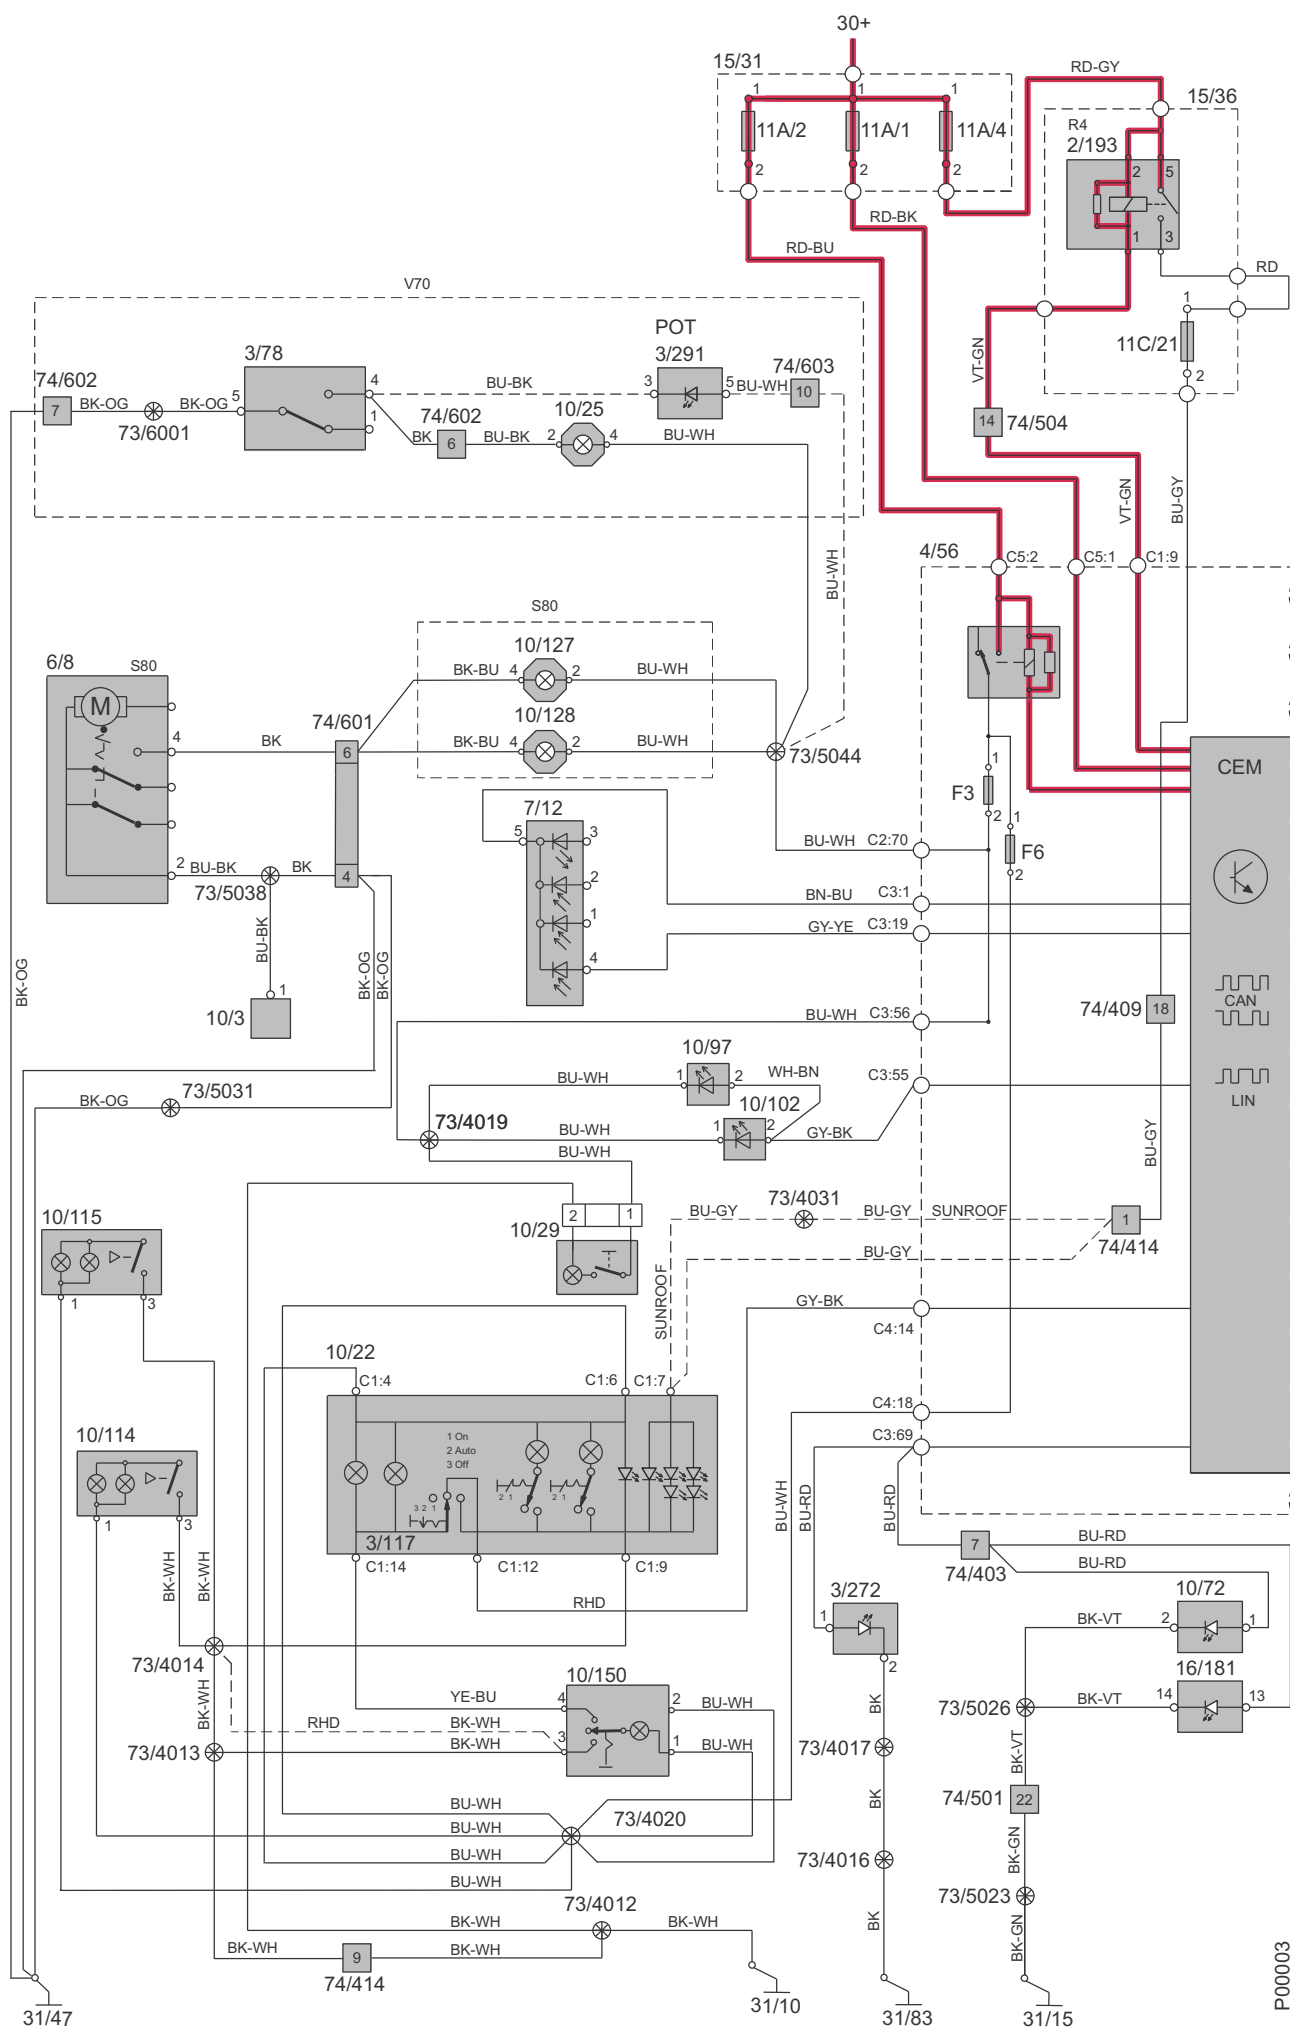

Group 35 Lighting
Interior lighting, RHD 2:2

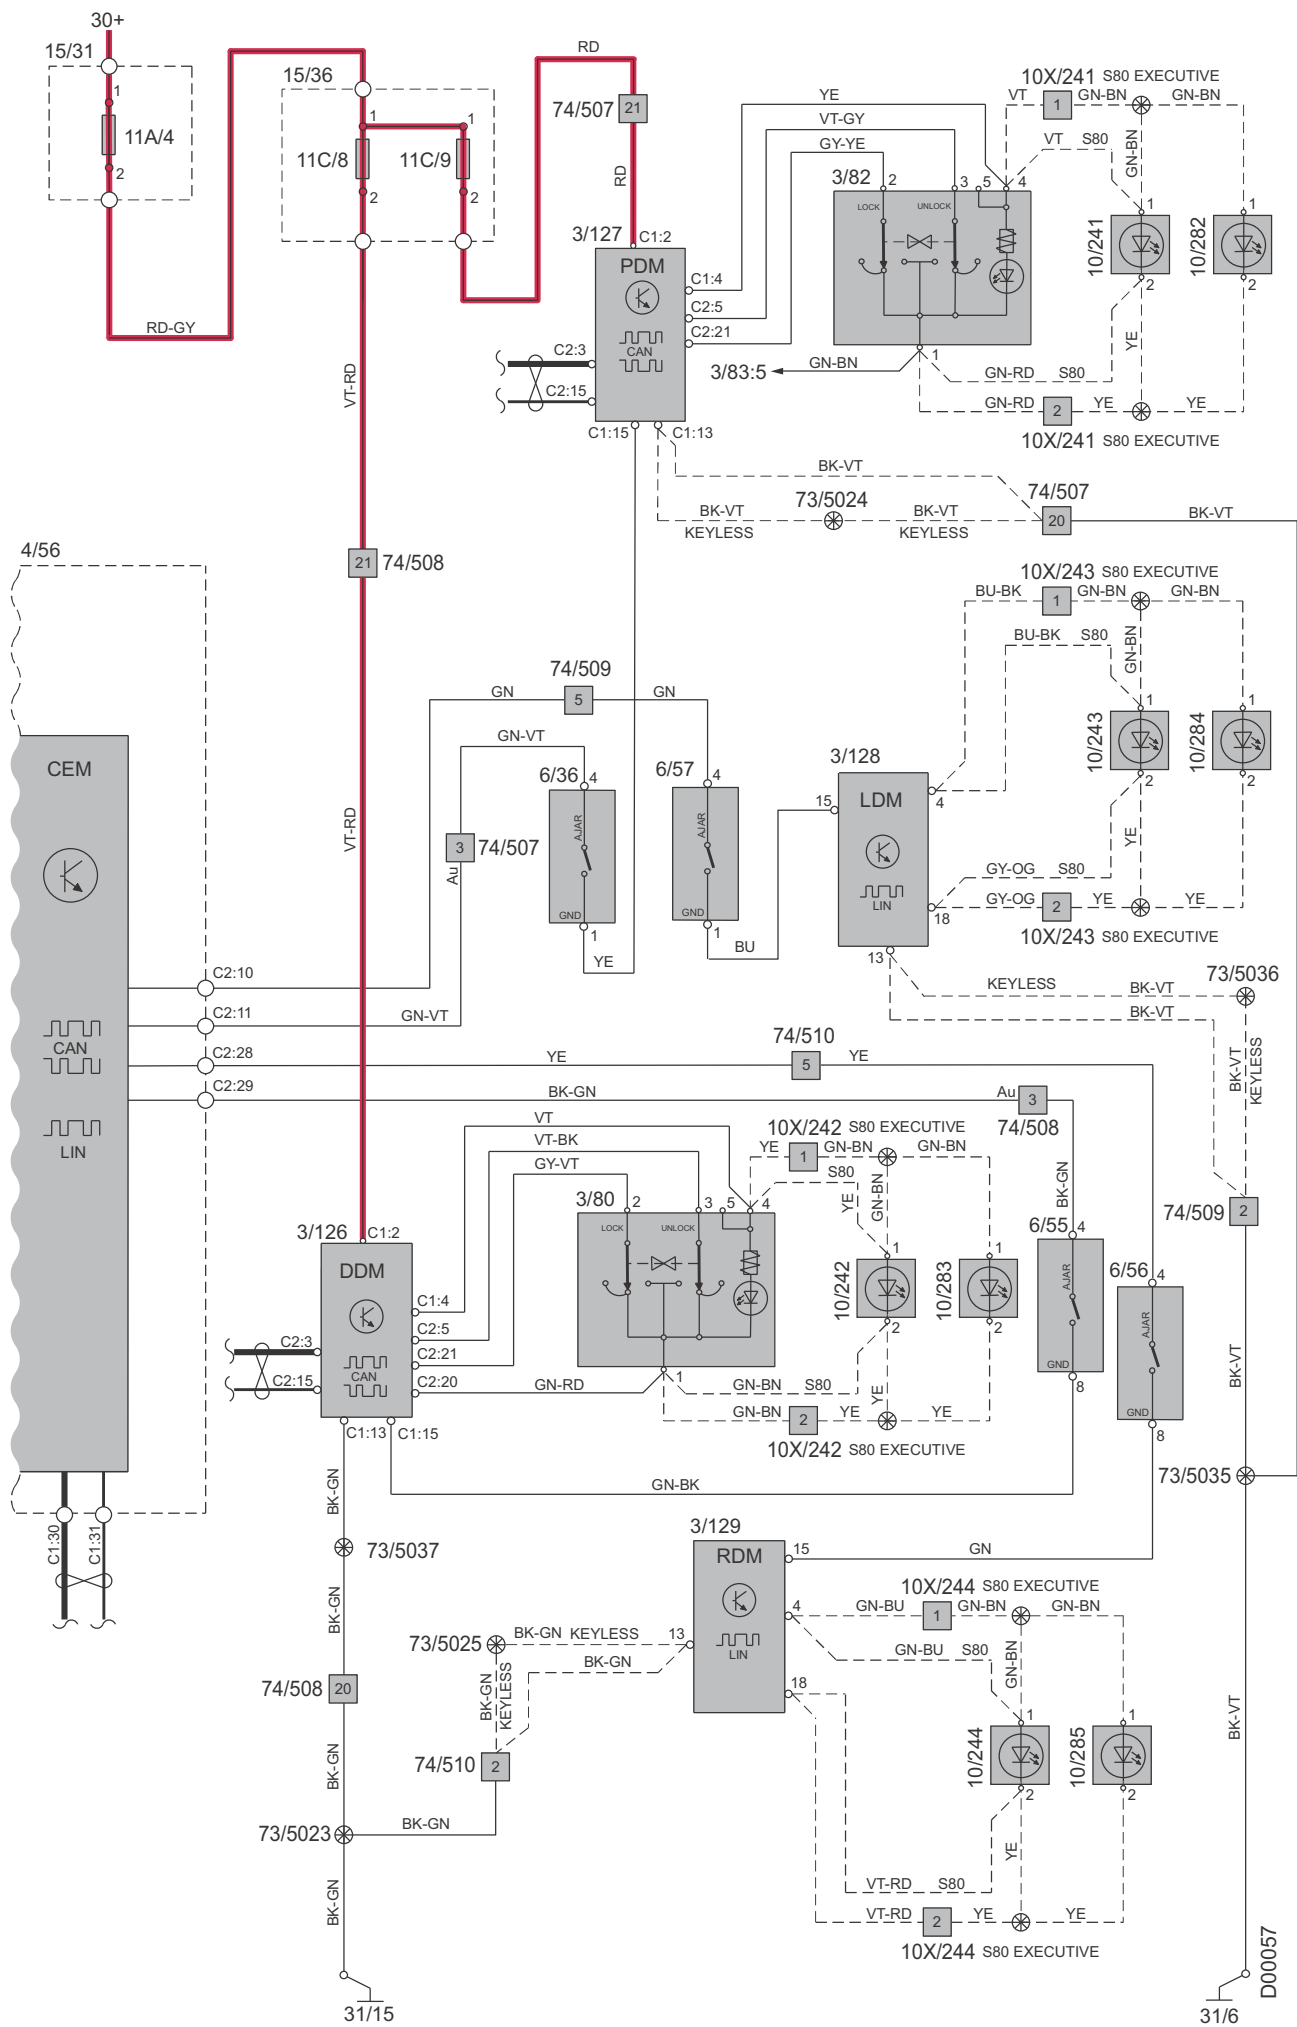


Group 35 Lighting Active headlight

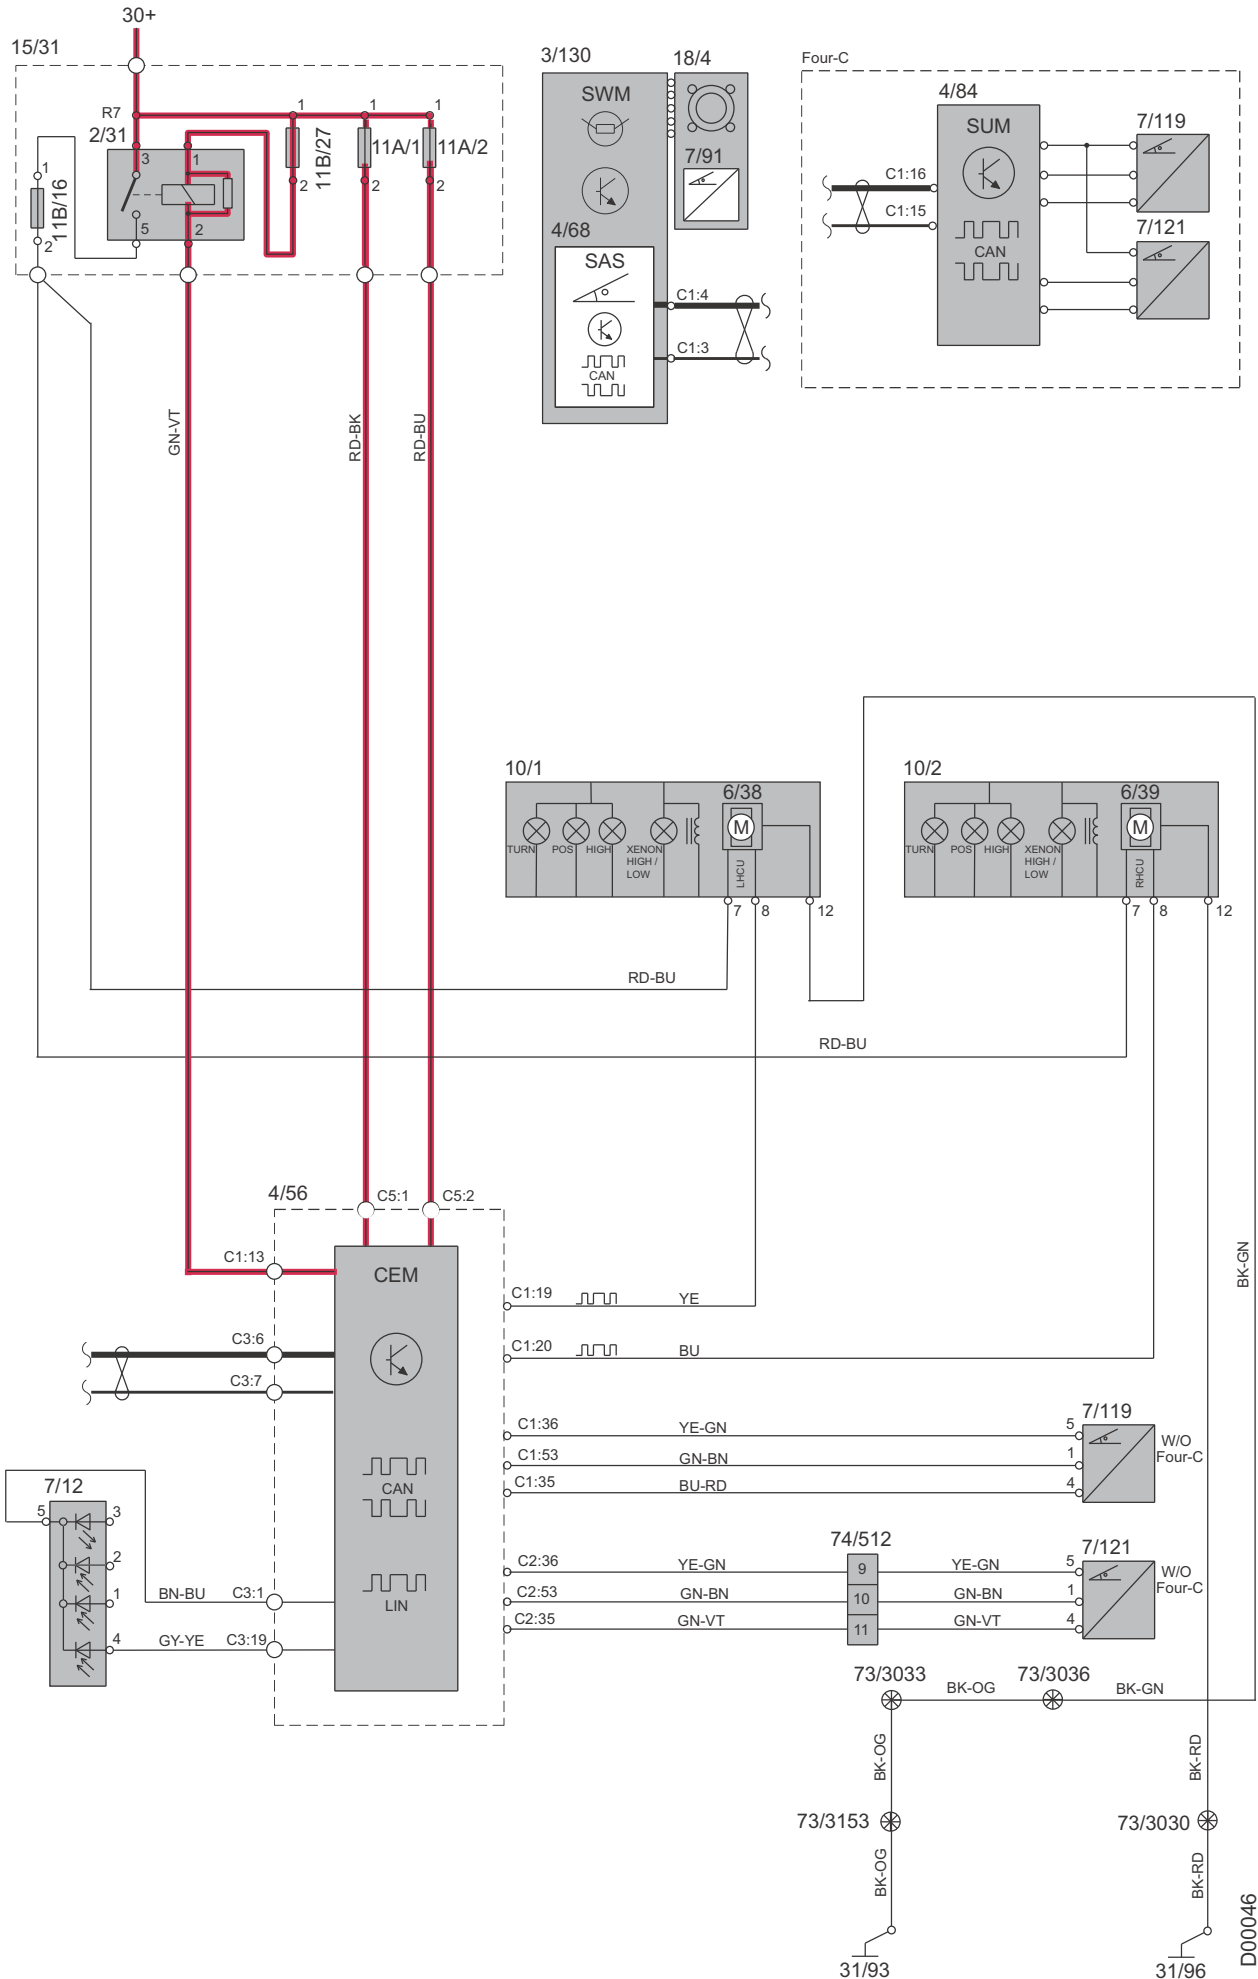


Group 35 Lighting, Accessories

Lighting in door sill trims

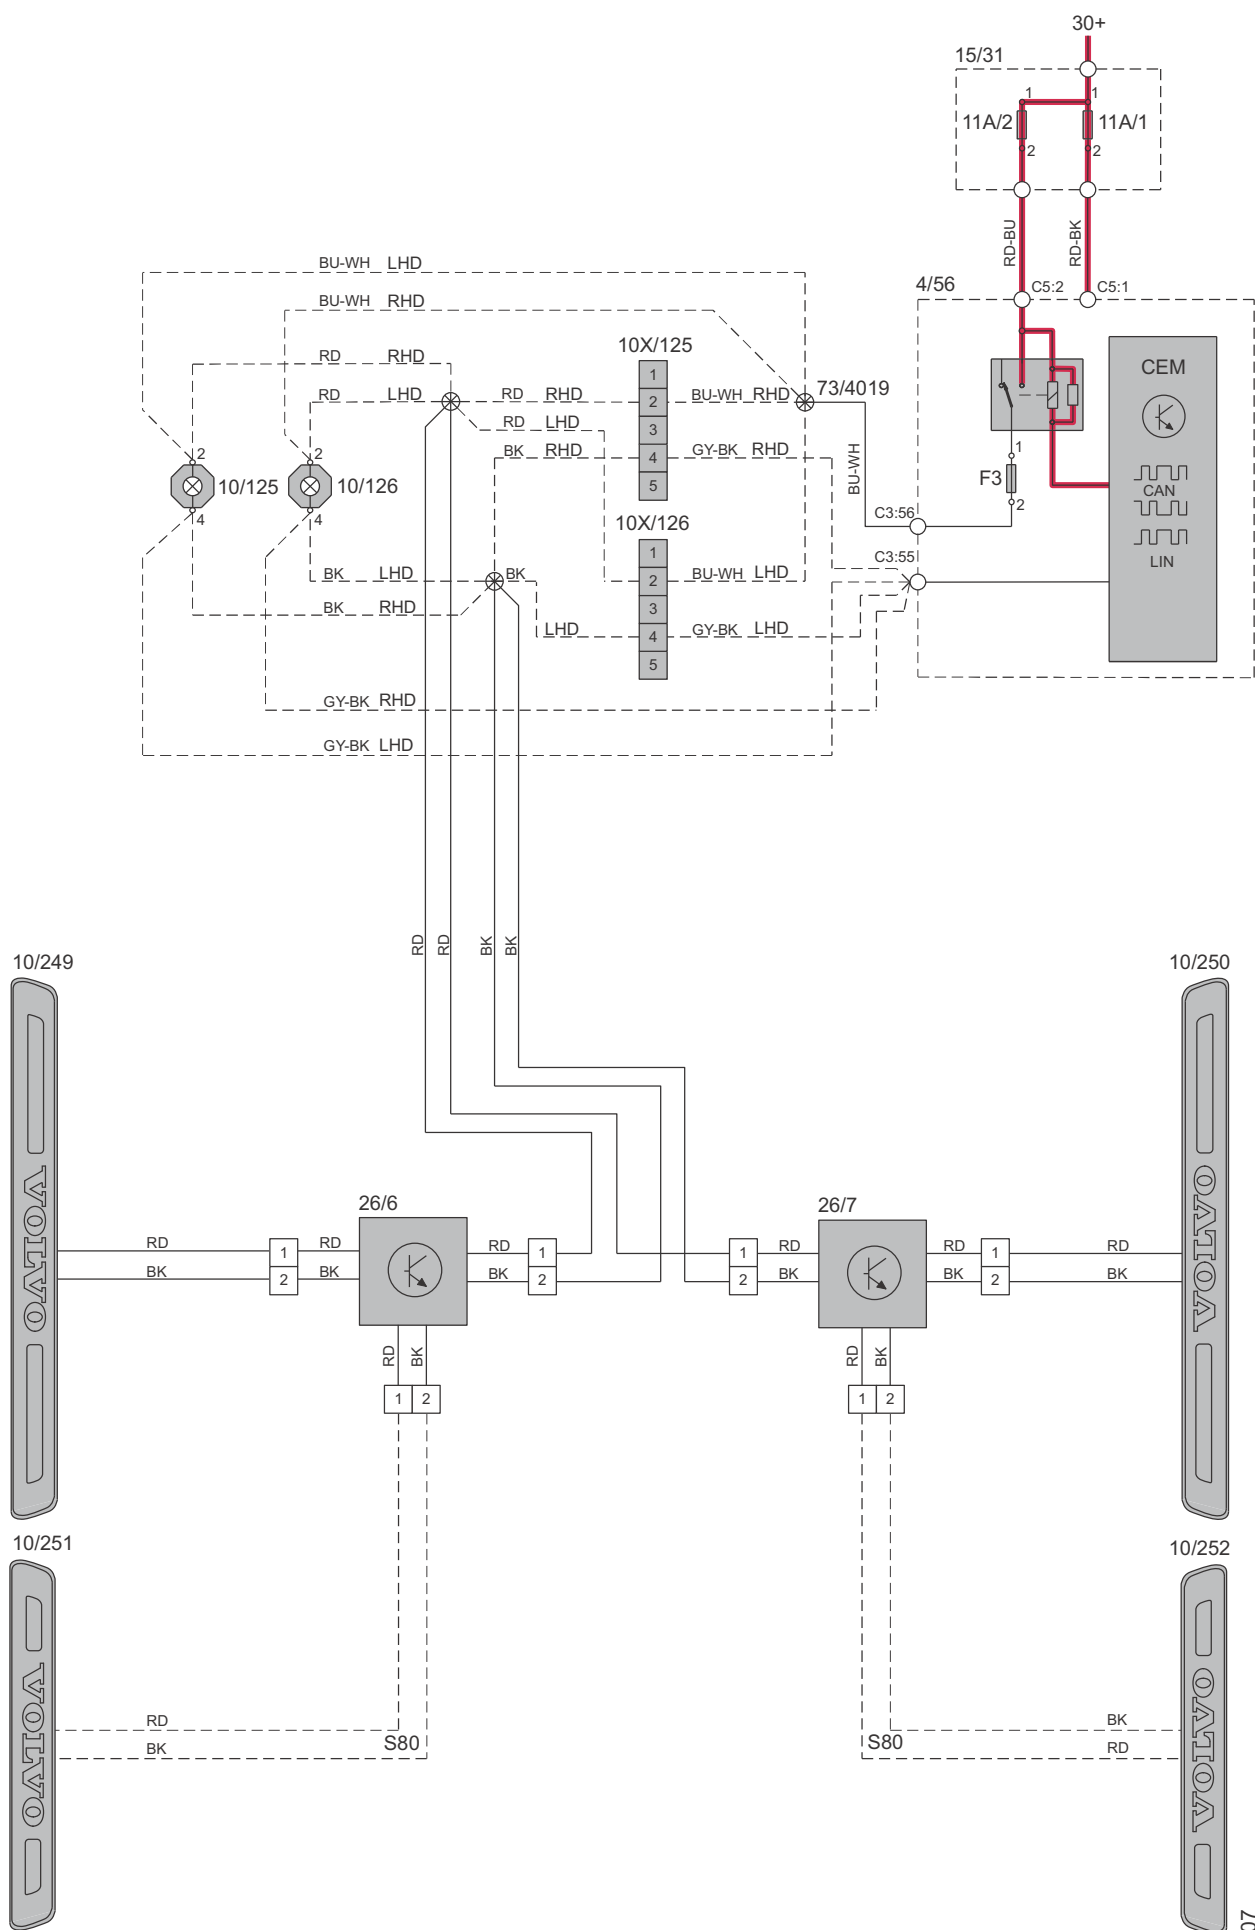


Group 35 Lighting, Accessories

Auxiliary lights

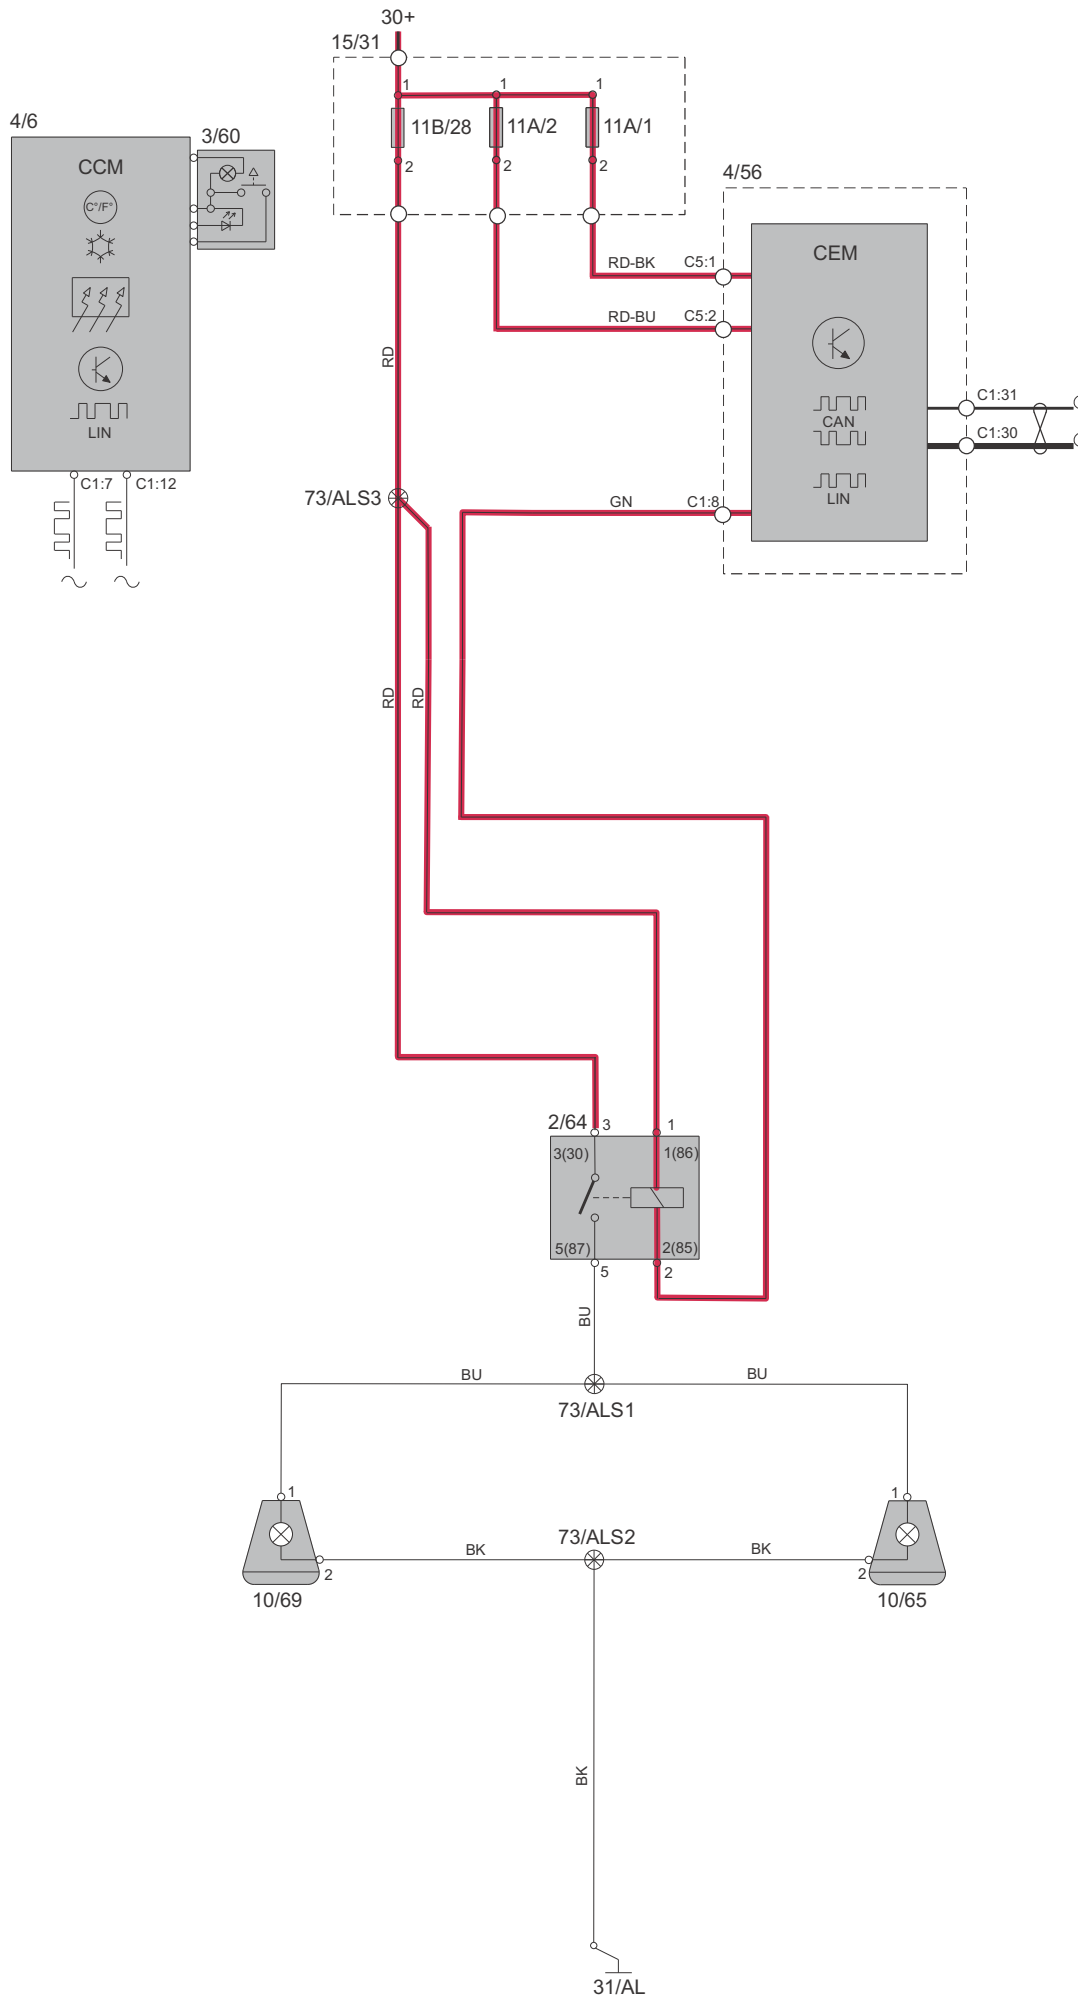

Group 35 Lighting


Lighting mug holder and floor

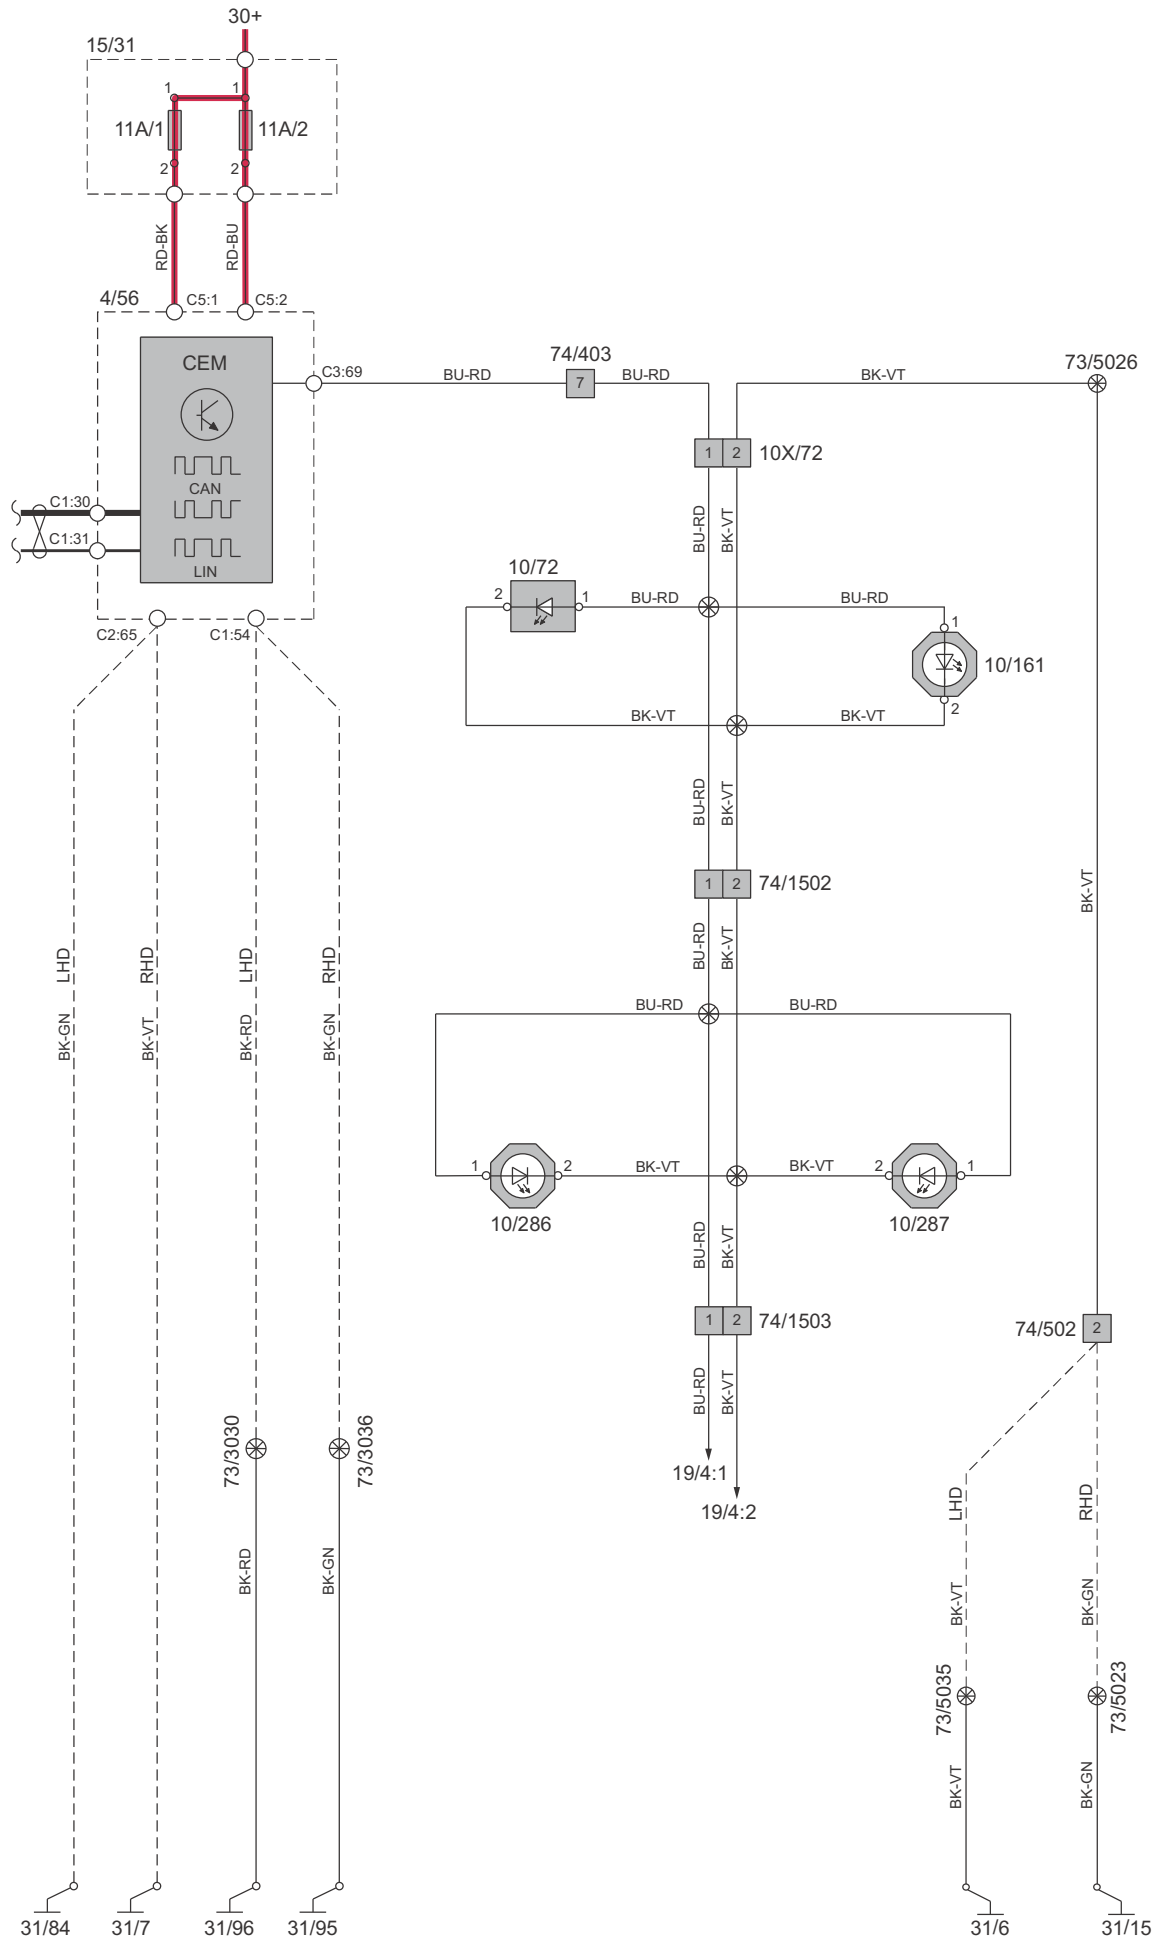

G042613


Group 36 Additional electrical equipment

Rain sensor

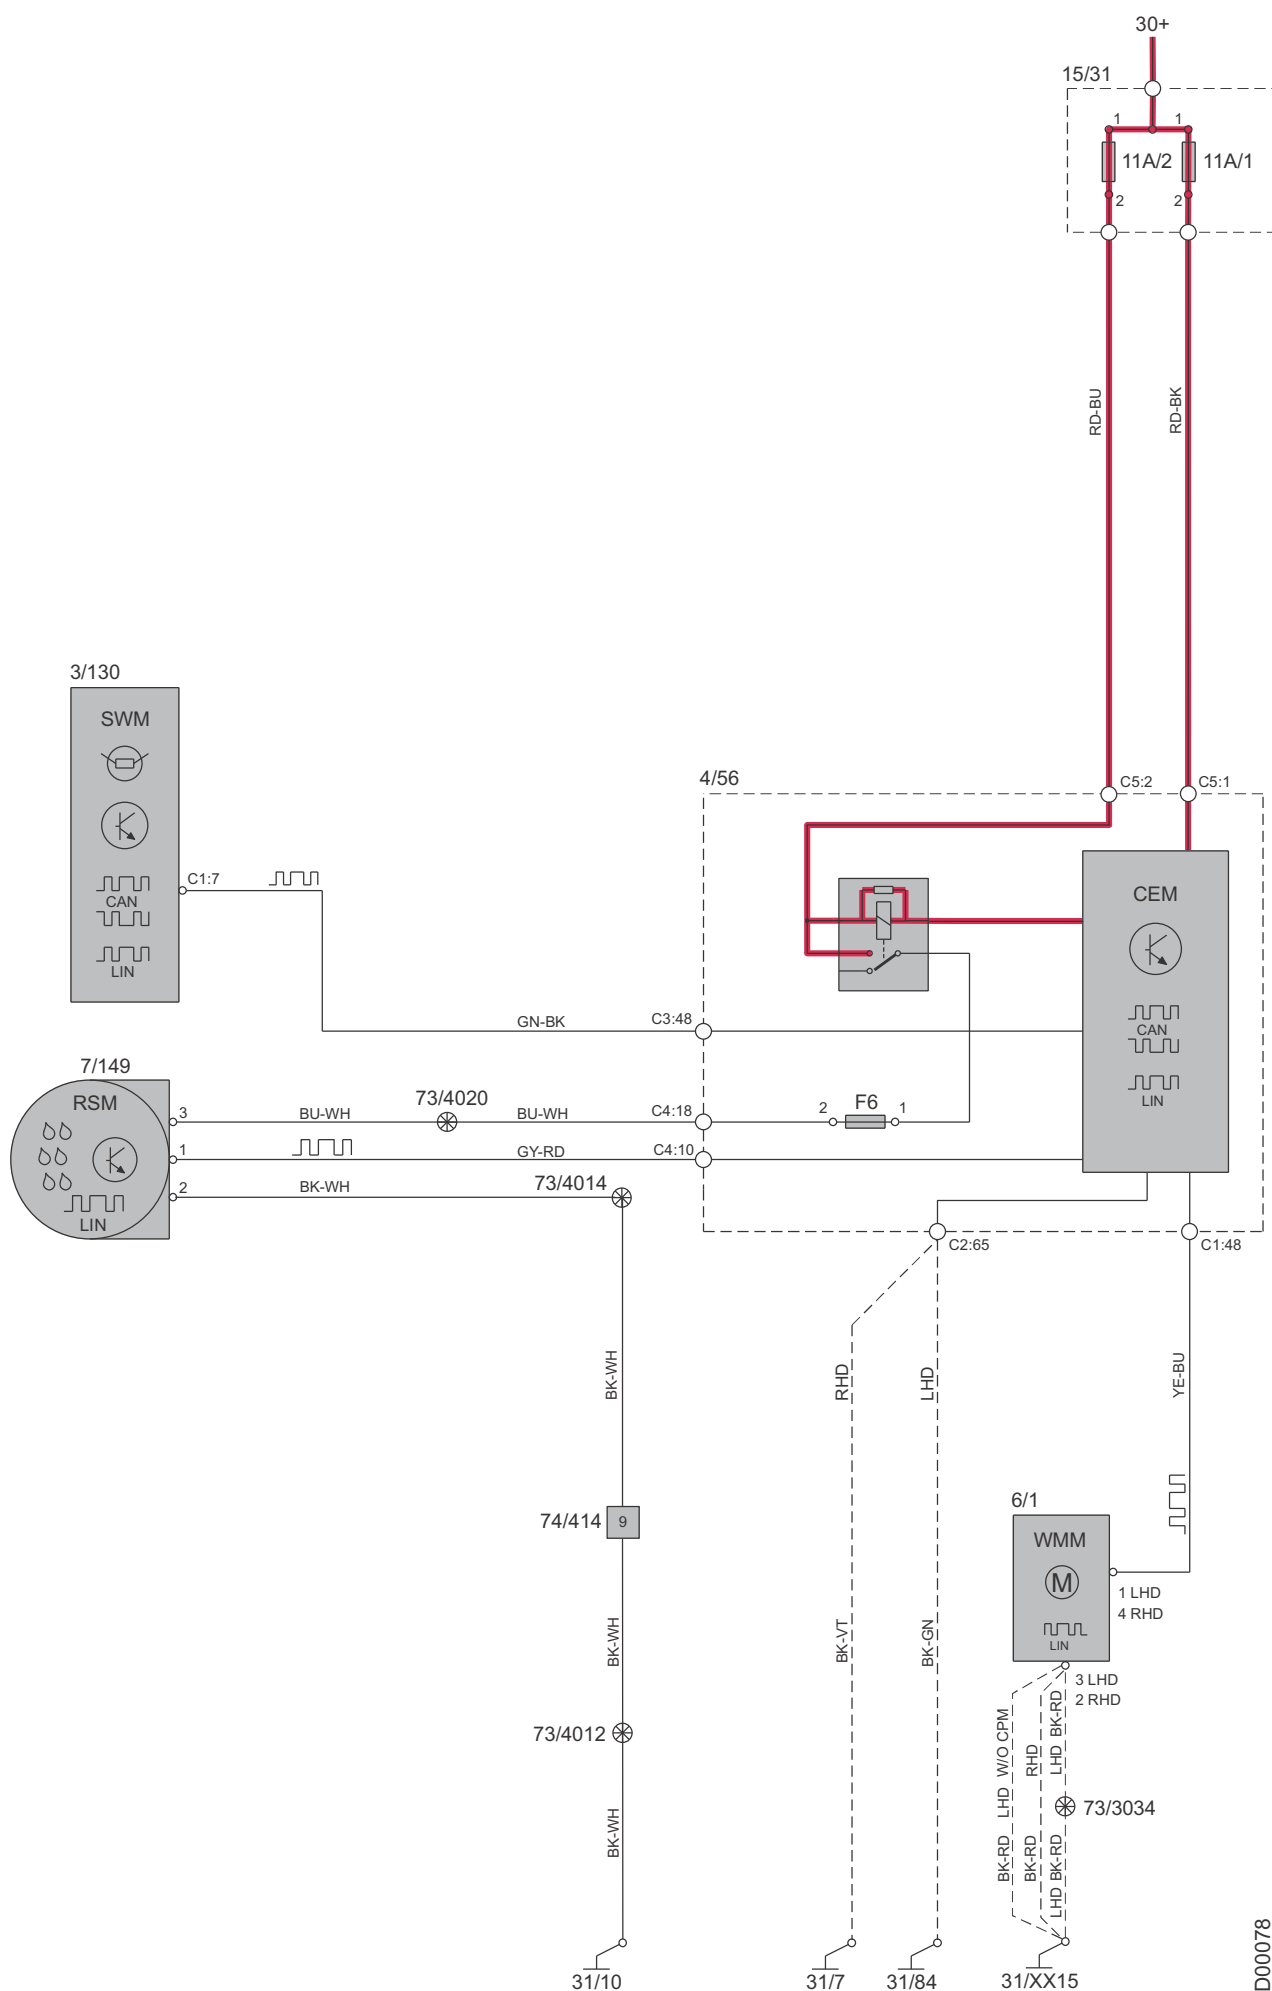


D00078


Direction indicator and hazard warning flashers LHD V70

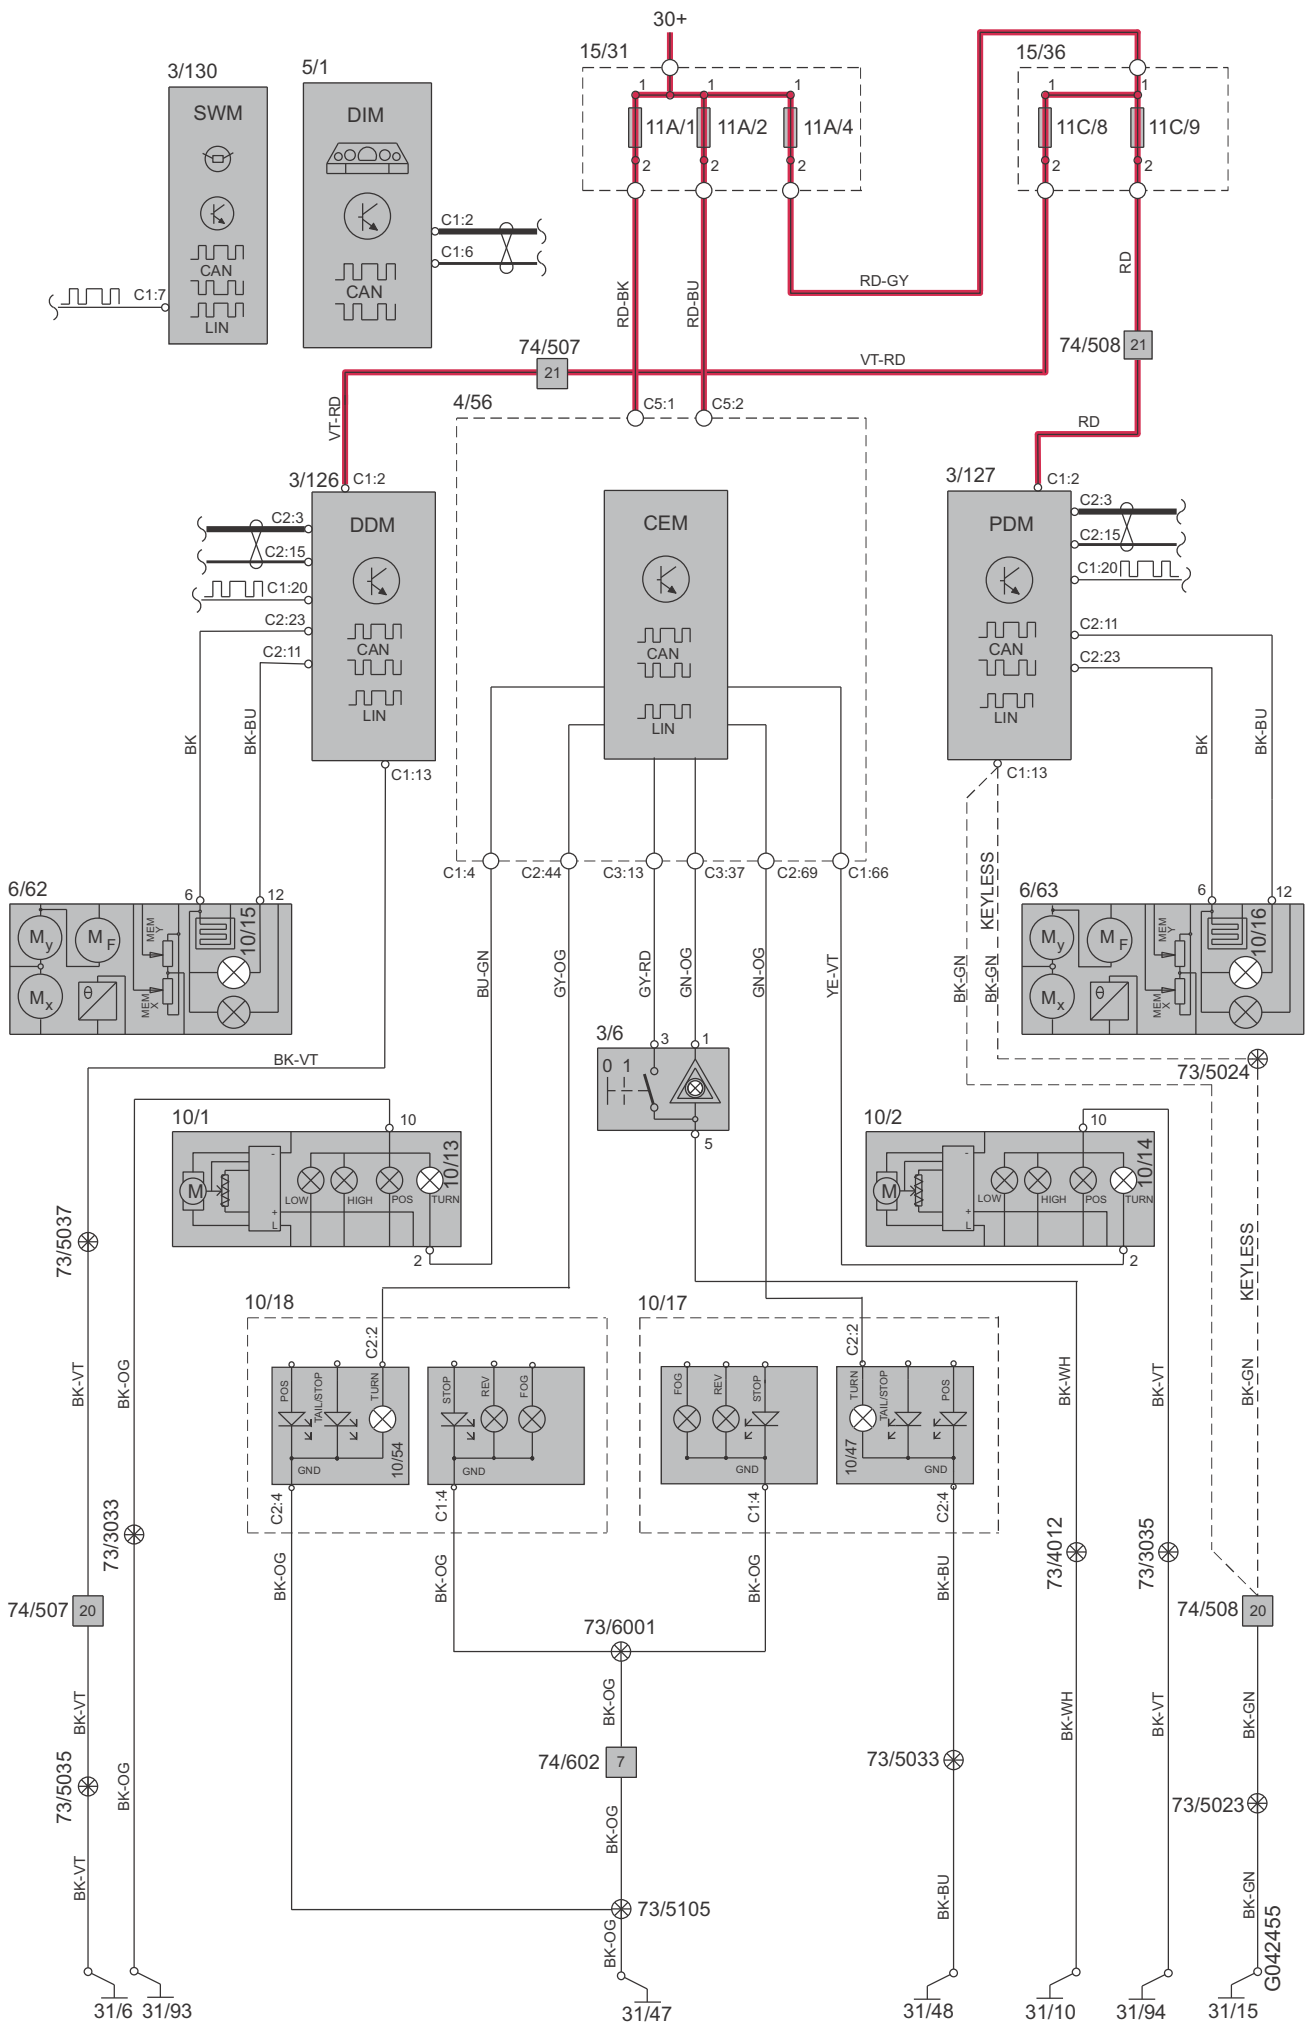

Direction indicator and hazard warning flashers LHD S80

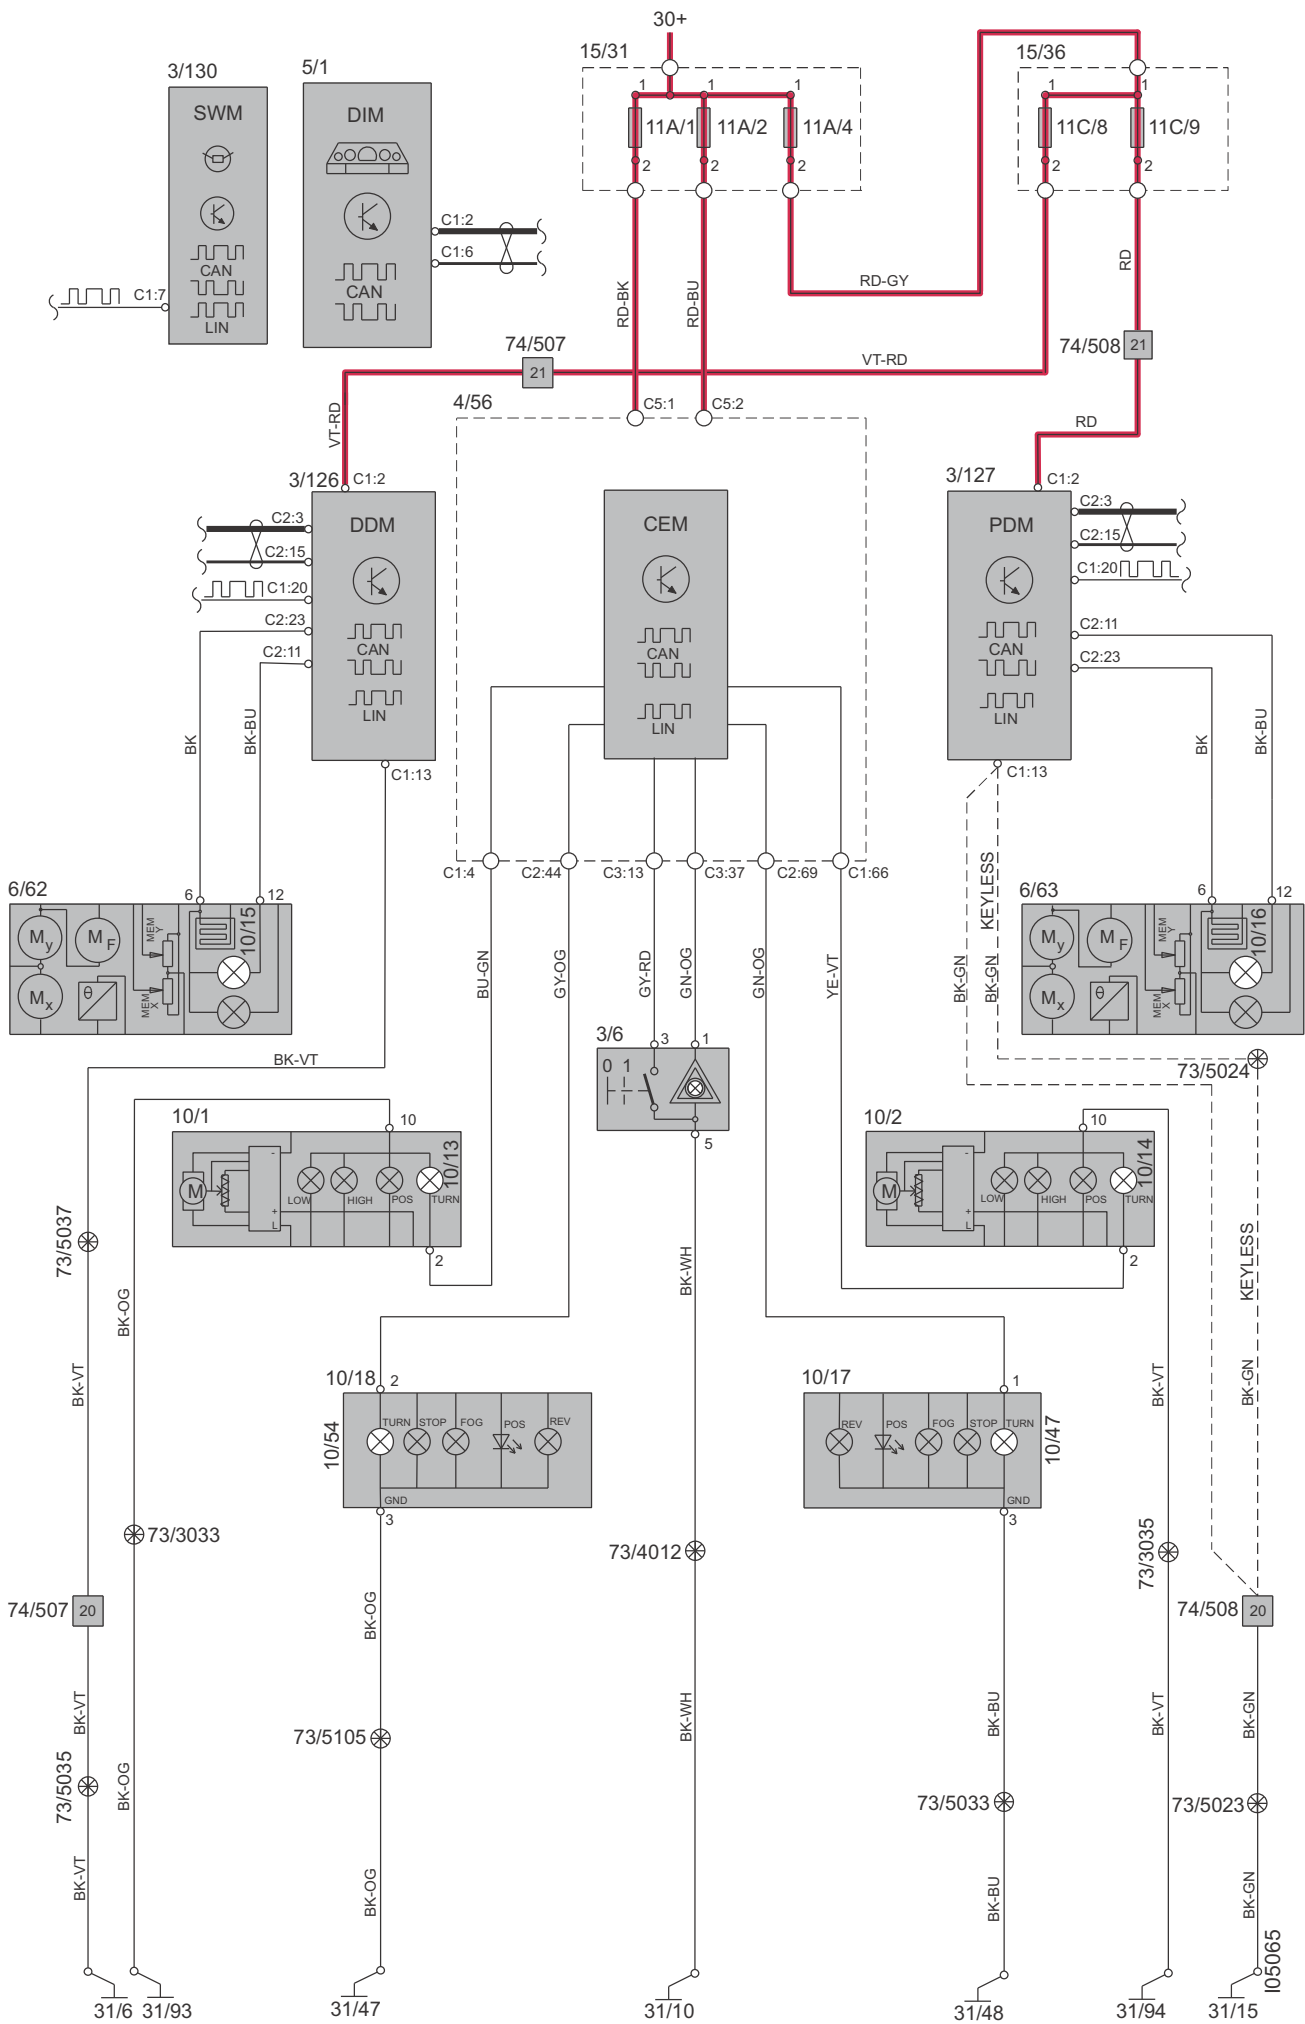


Direction indicator and hazard warning flashers RHD V70

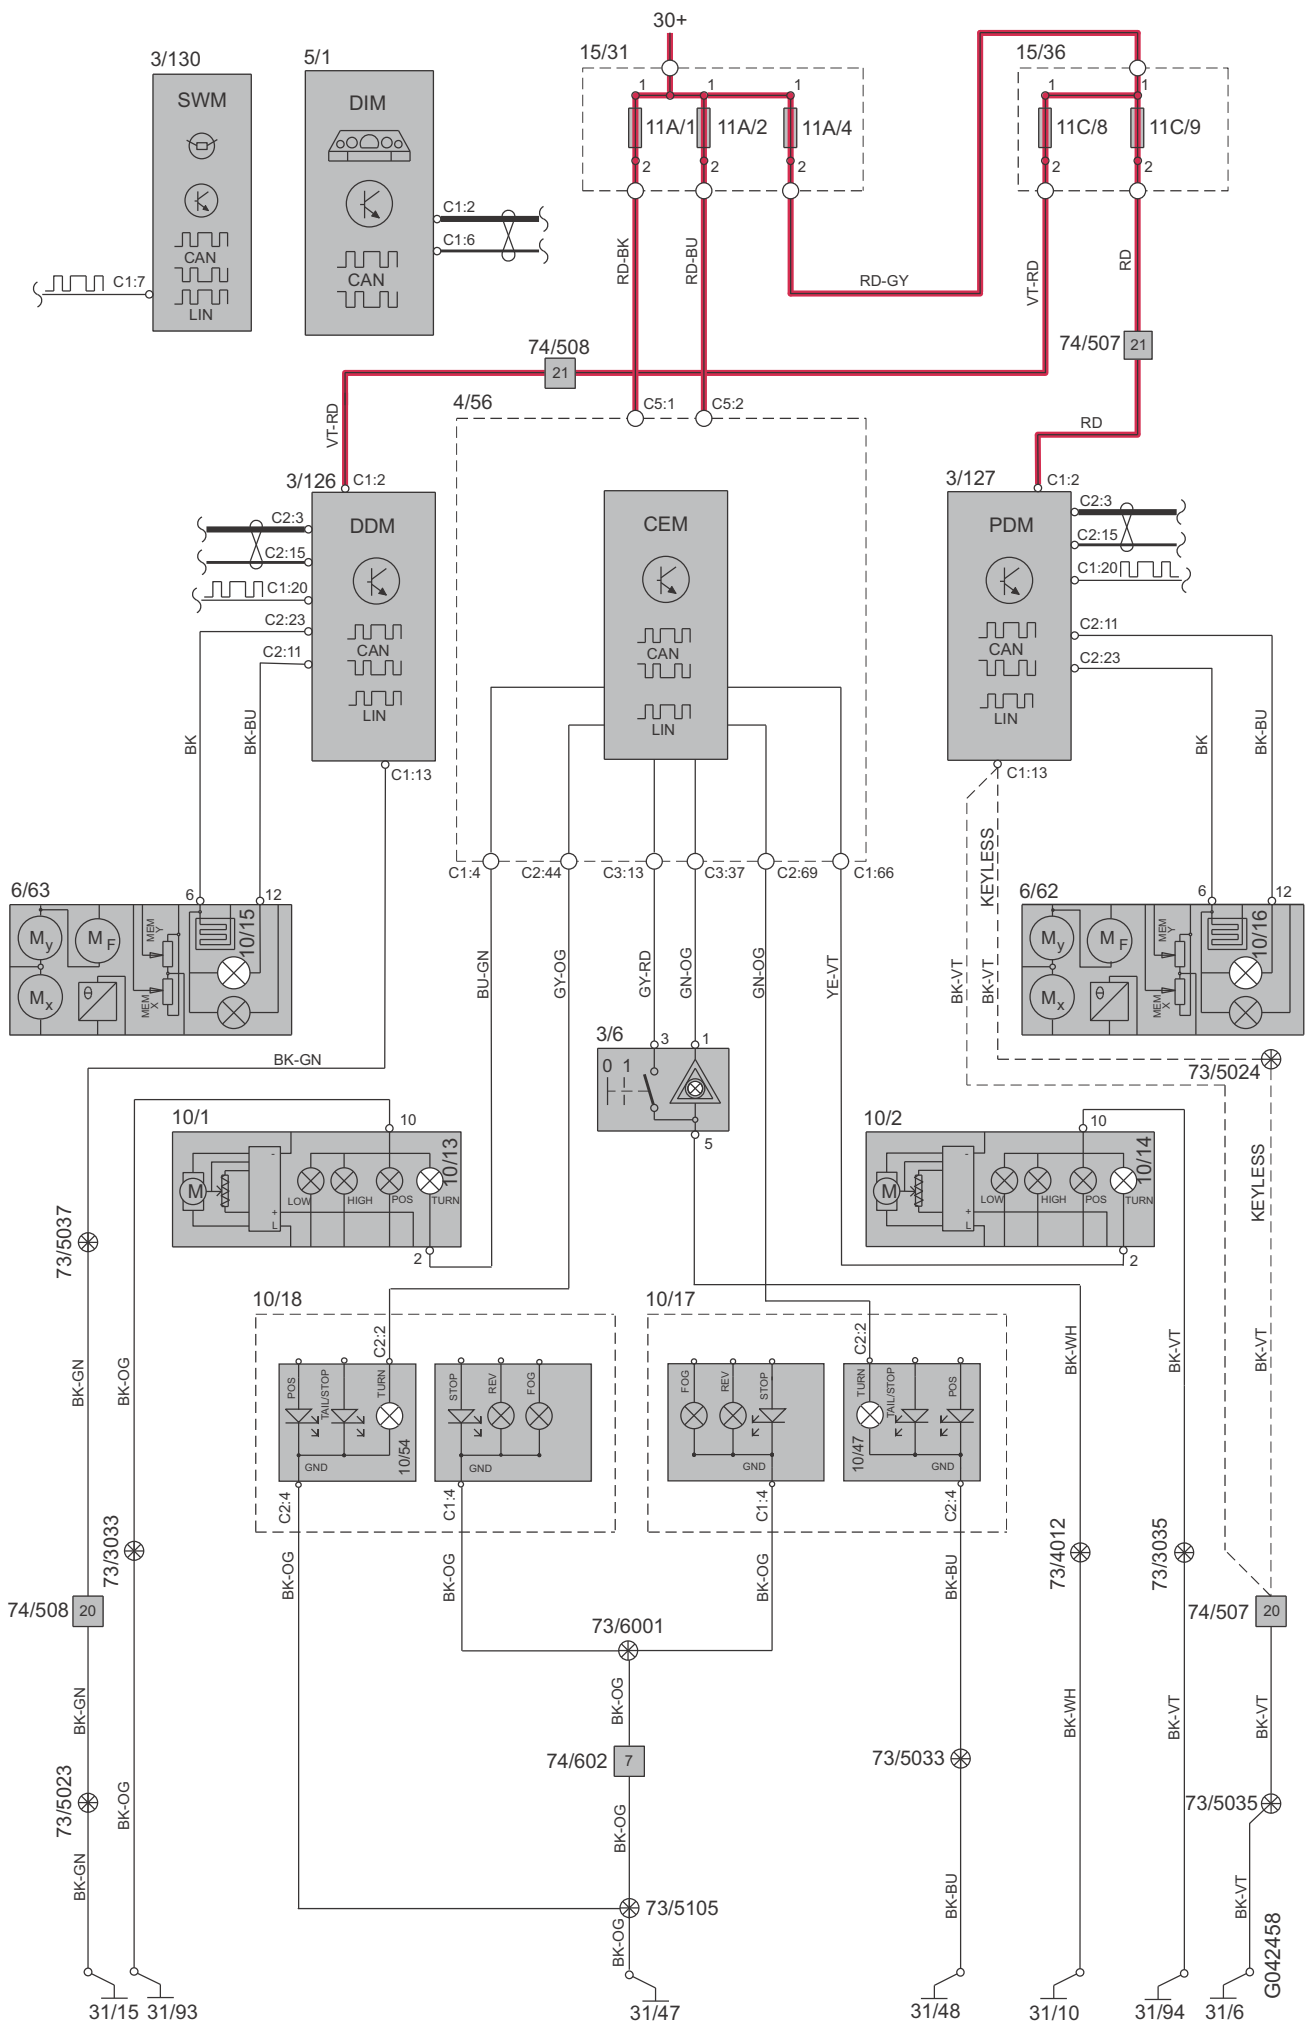


Group 36 Additional electrical equipment

Direction indicator and hazard warning flashers RHD S80

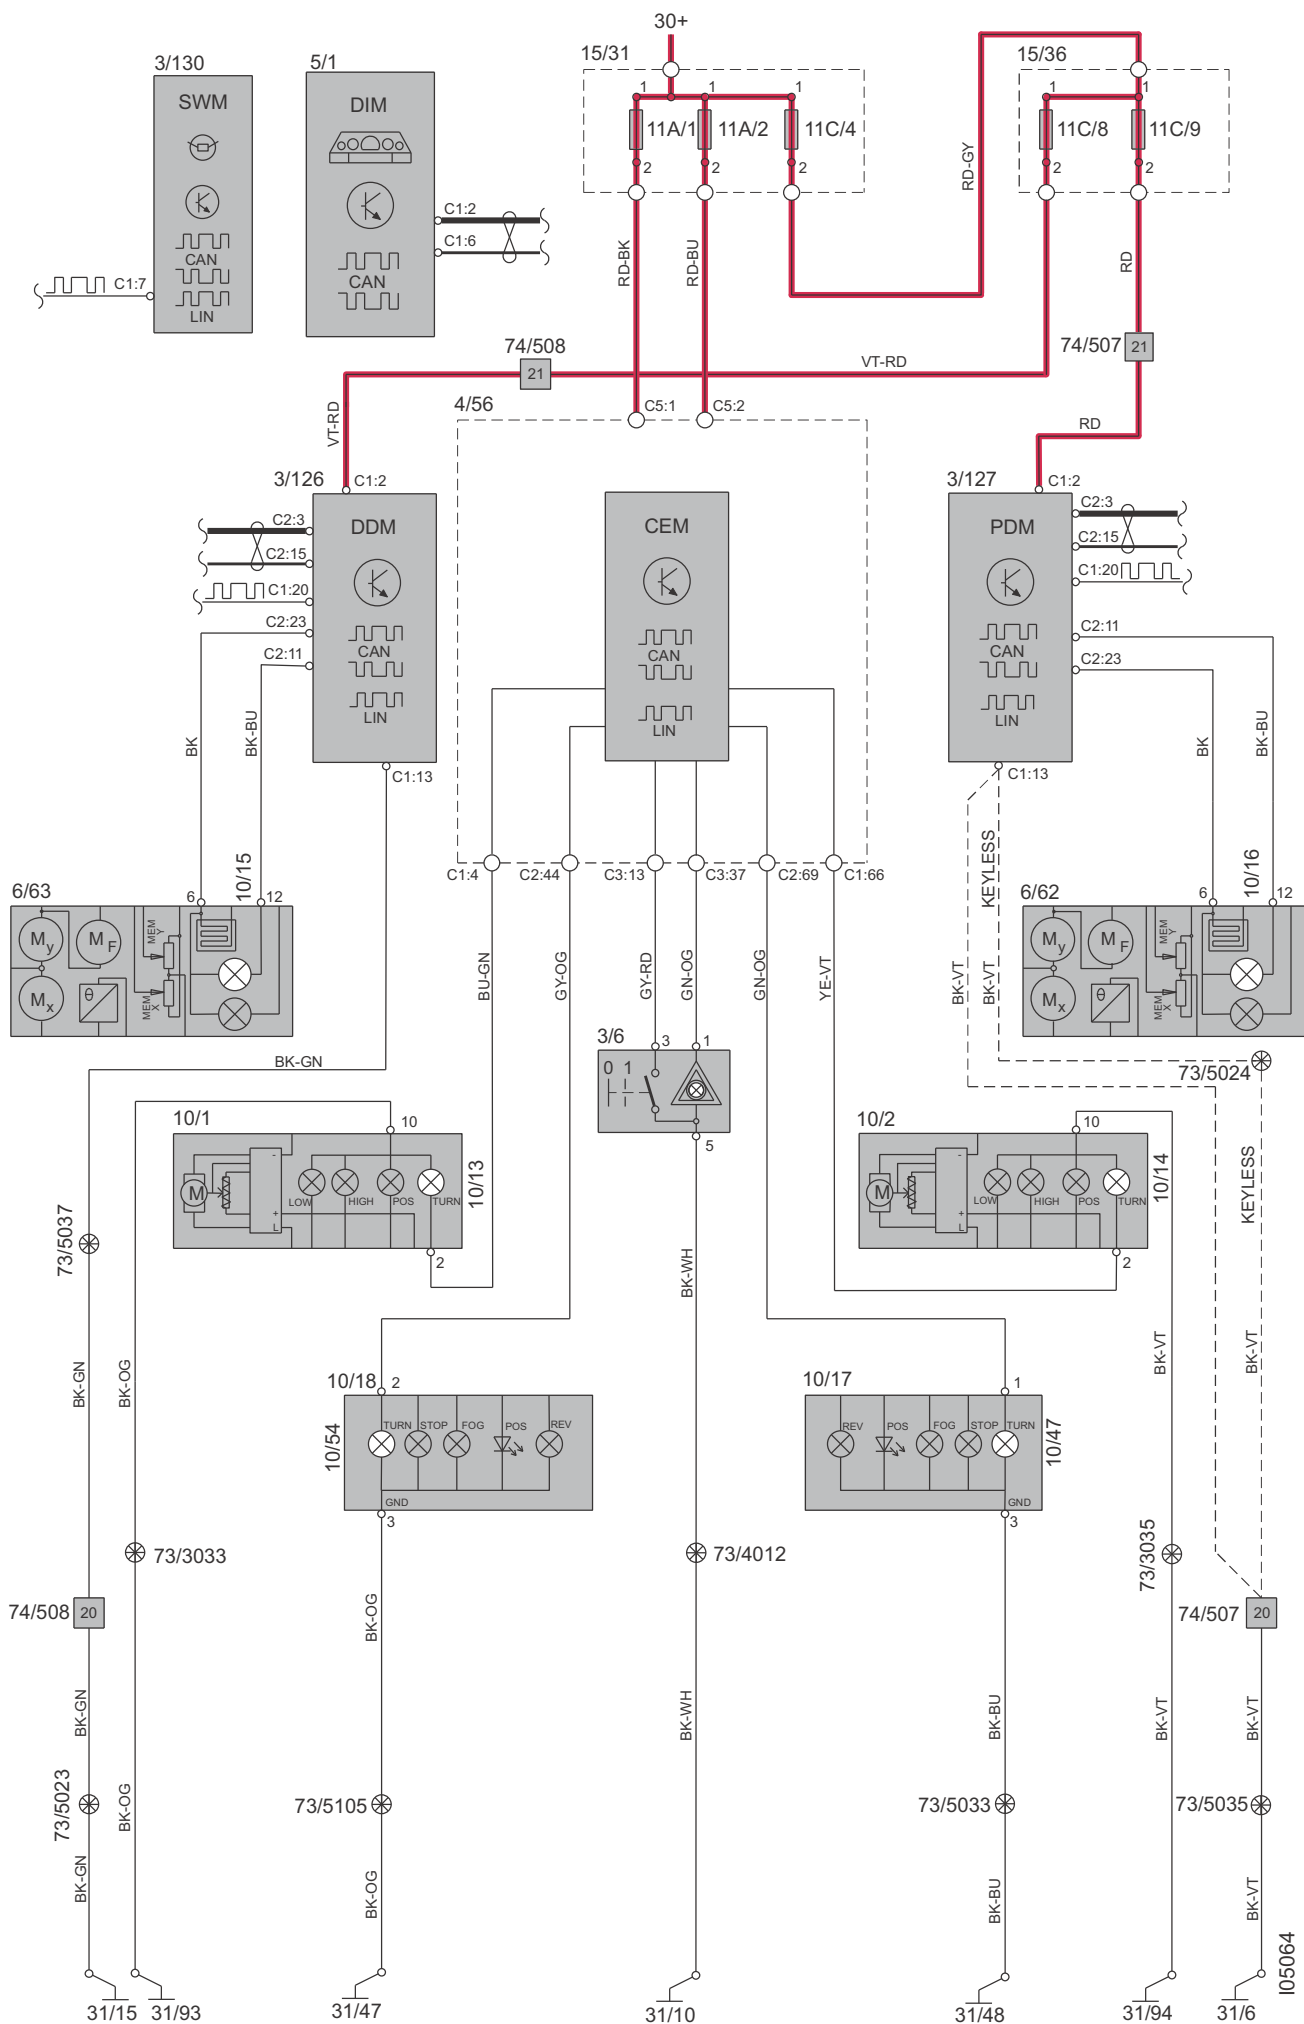


Group 36 Additional electrical equipment
Wiper/washer windshield

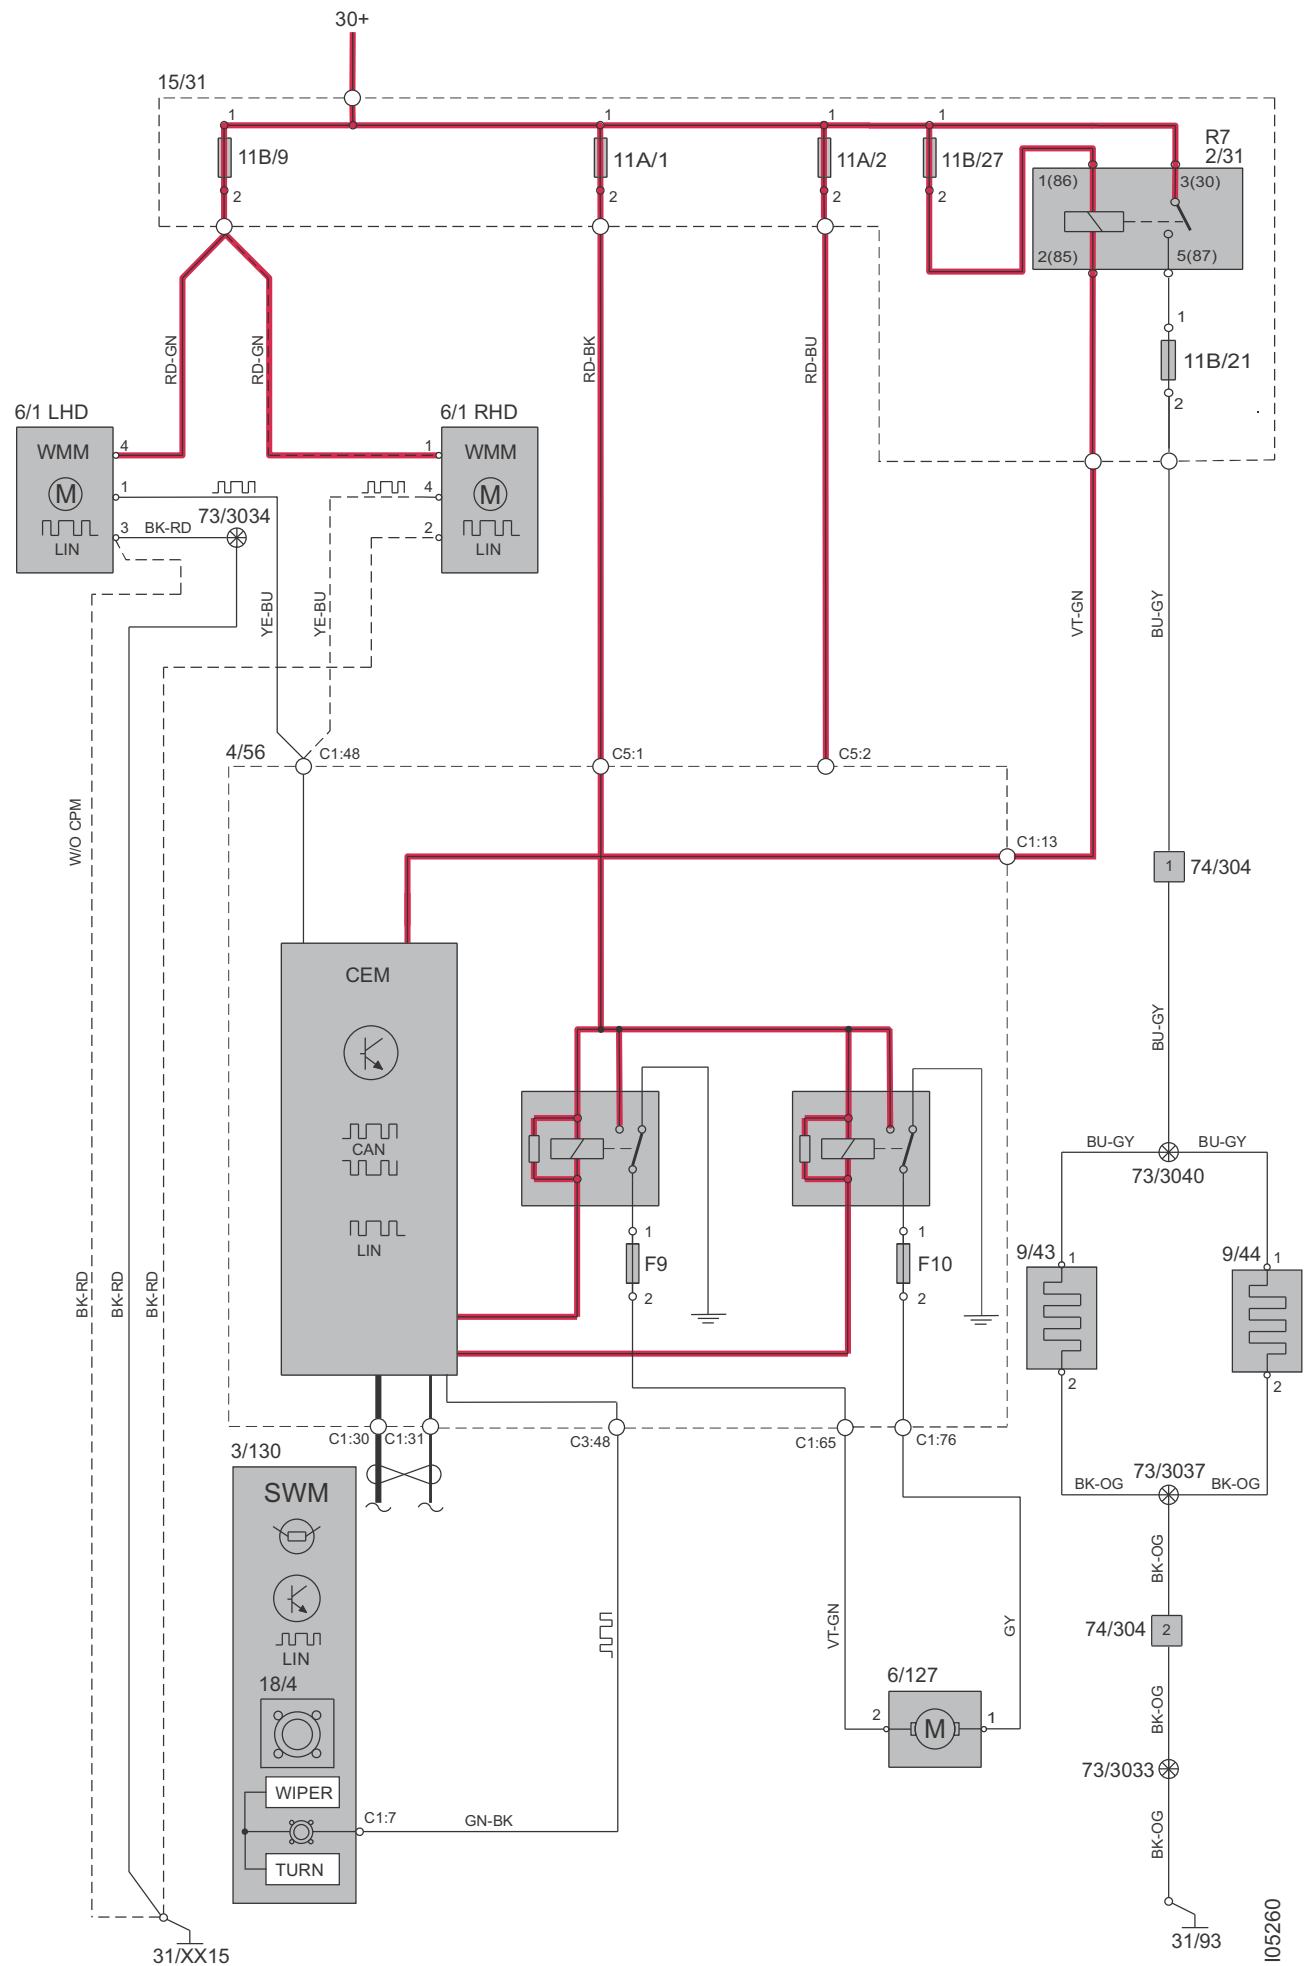


Group 36 Additional electrical equipment

High pressure headlight washer

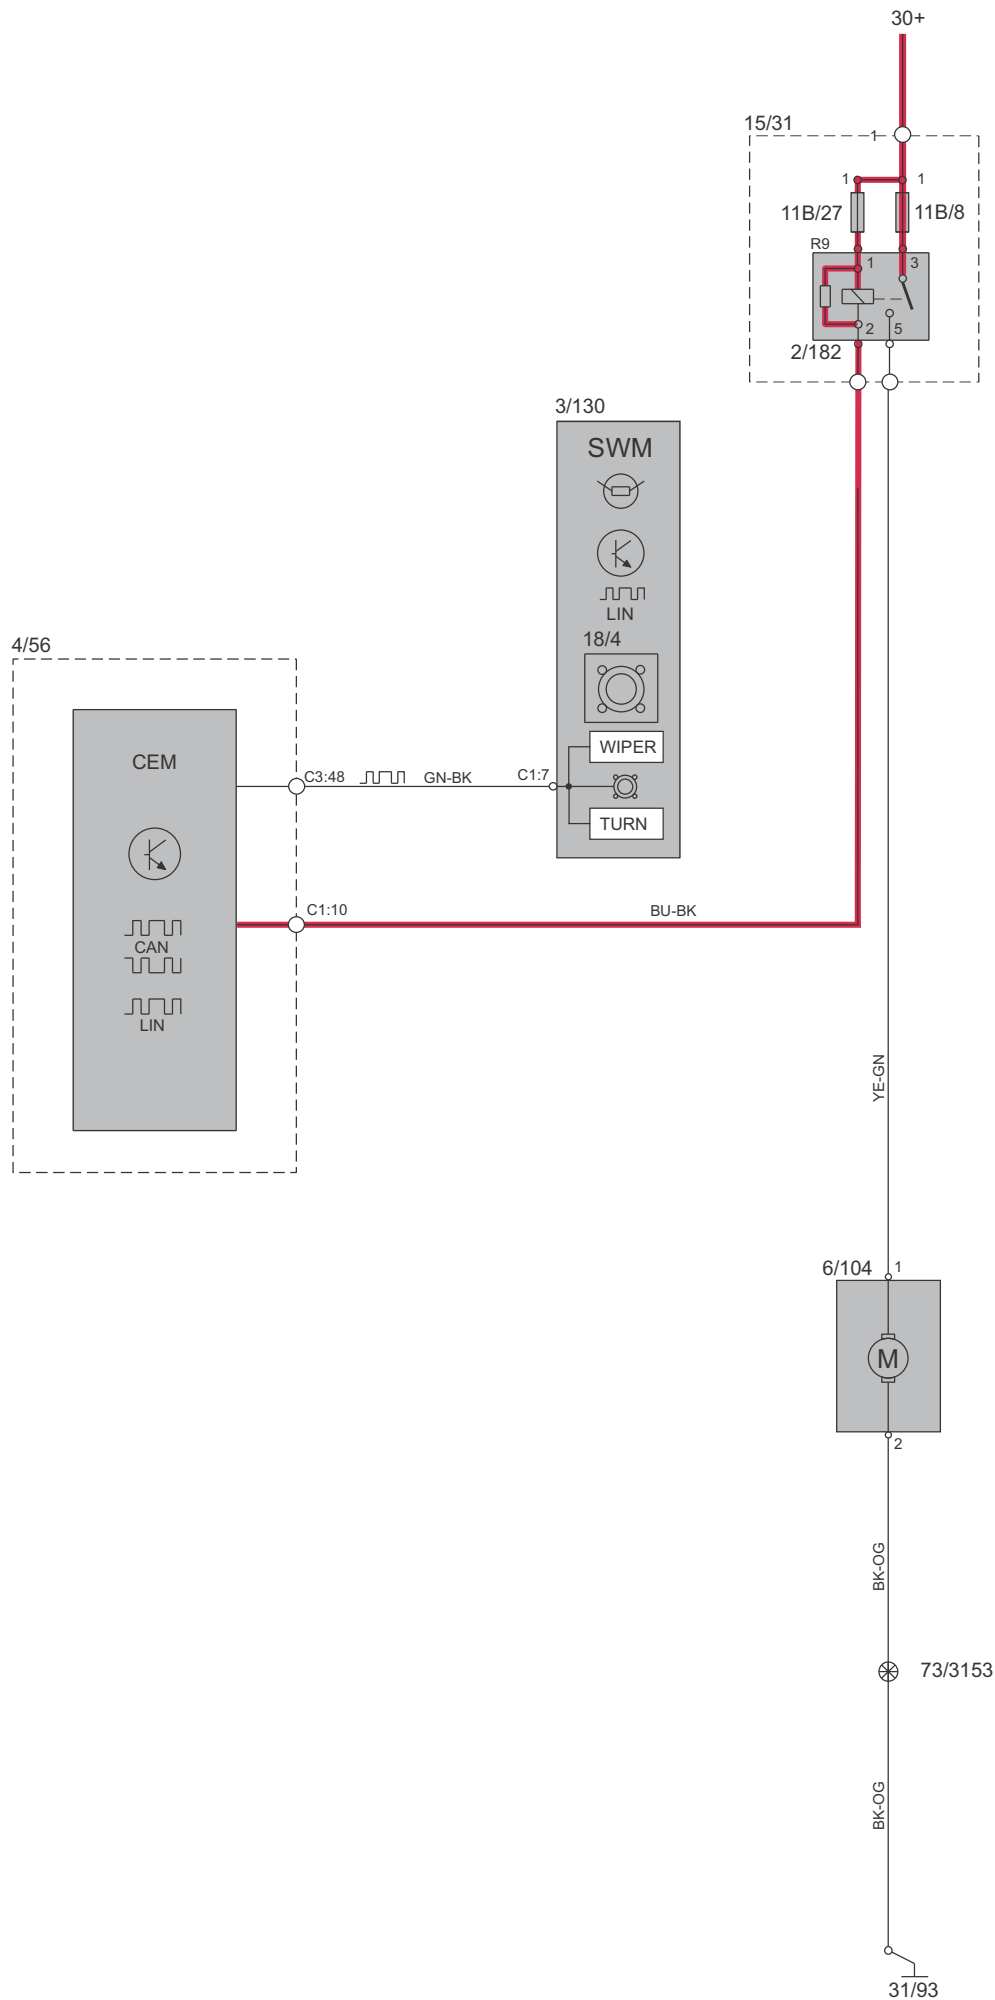


Group 36 Additional electrical equipment

Wiper/Washer rear window

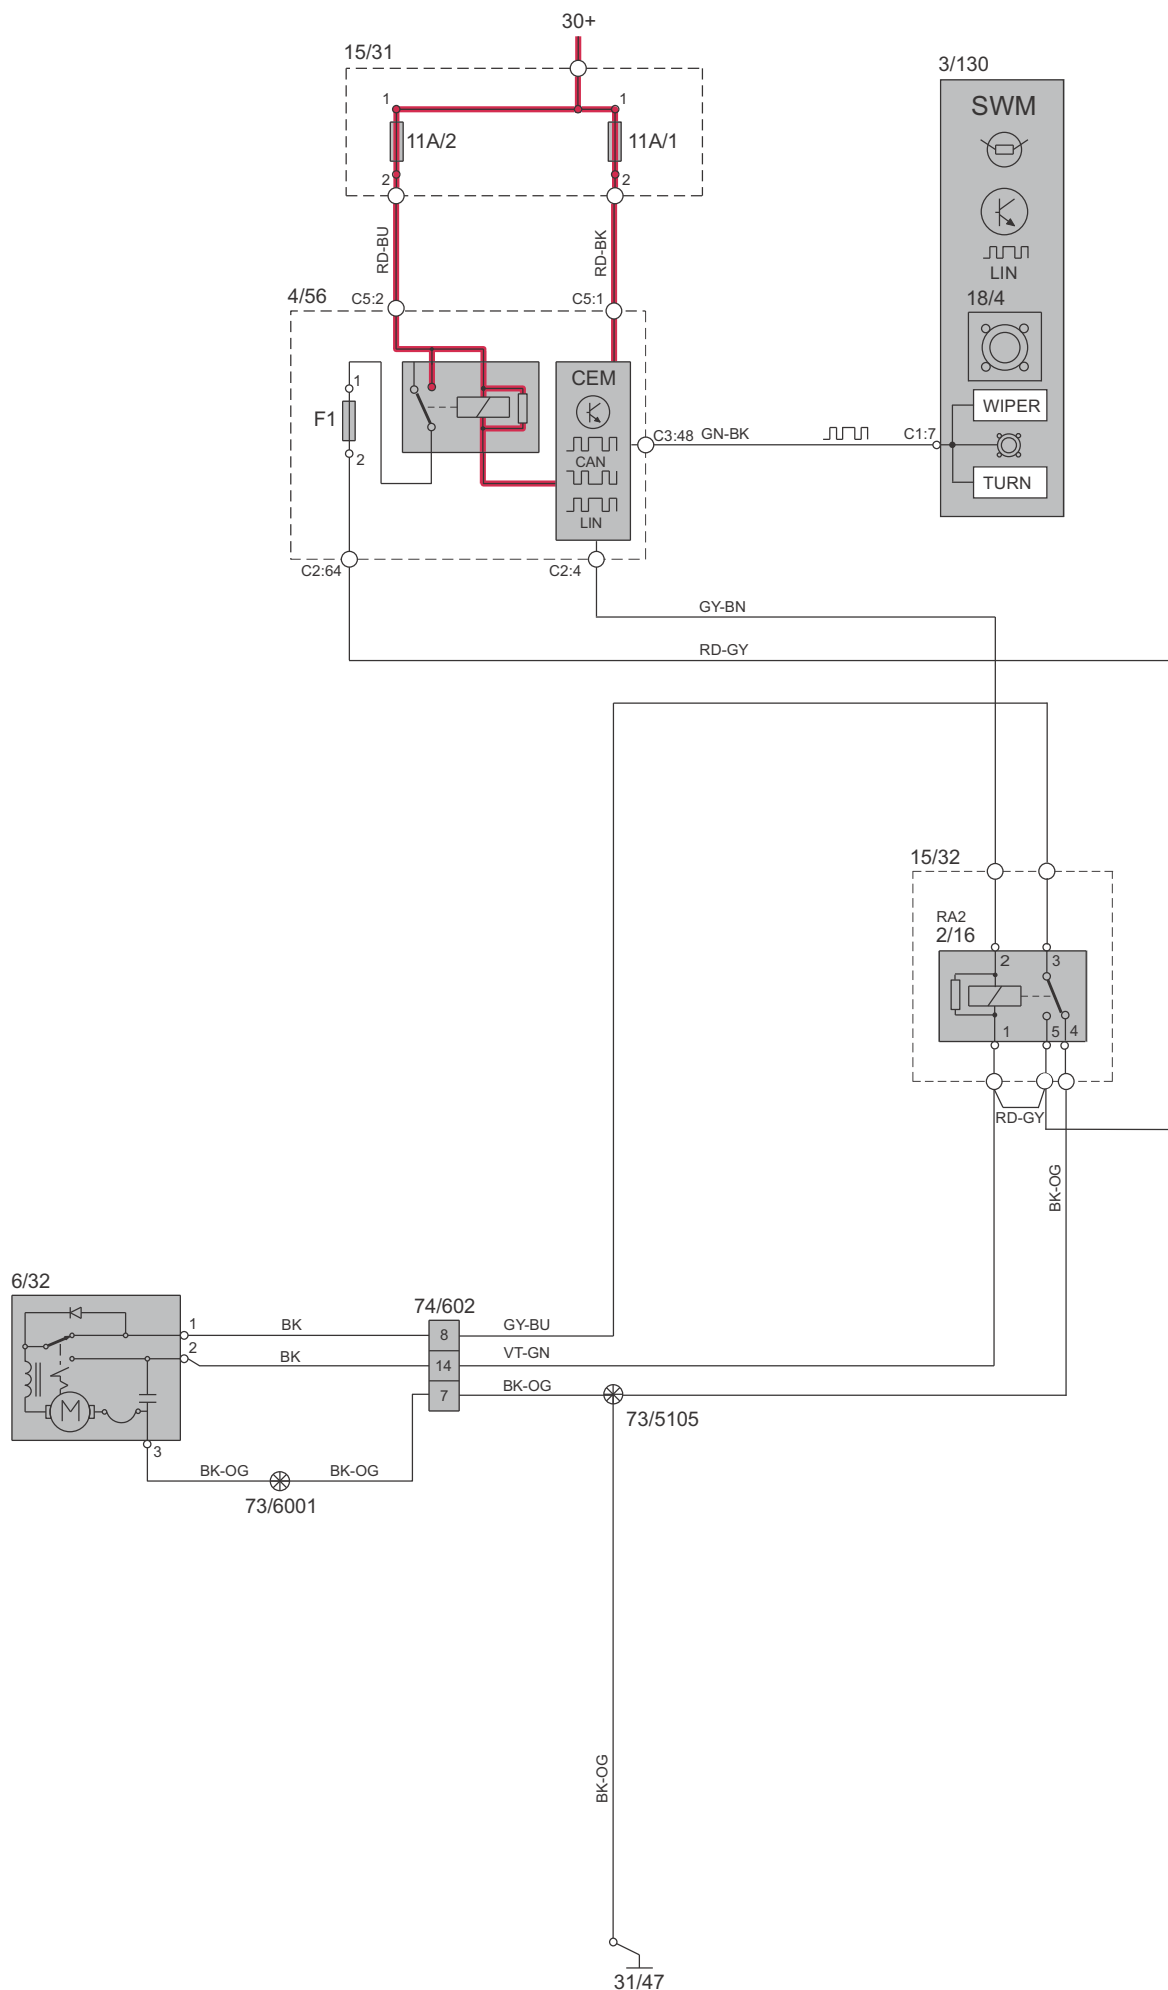


Group 36 Additional electrical equipment

Keyless vehicle 1:2

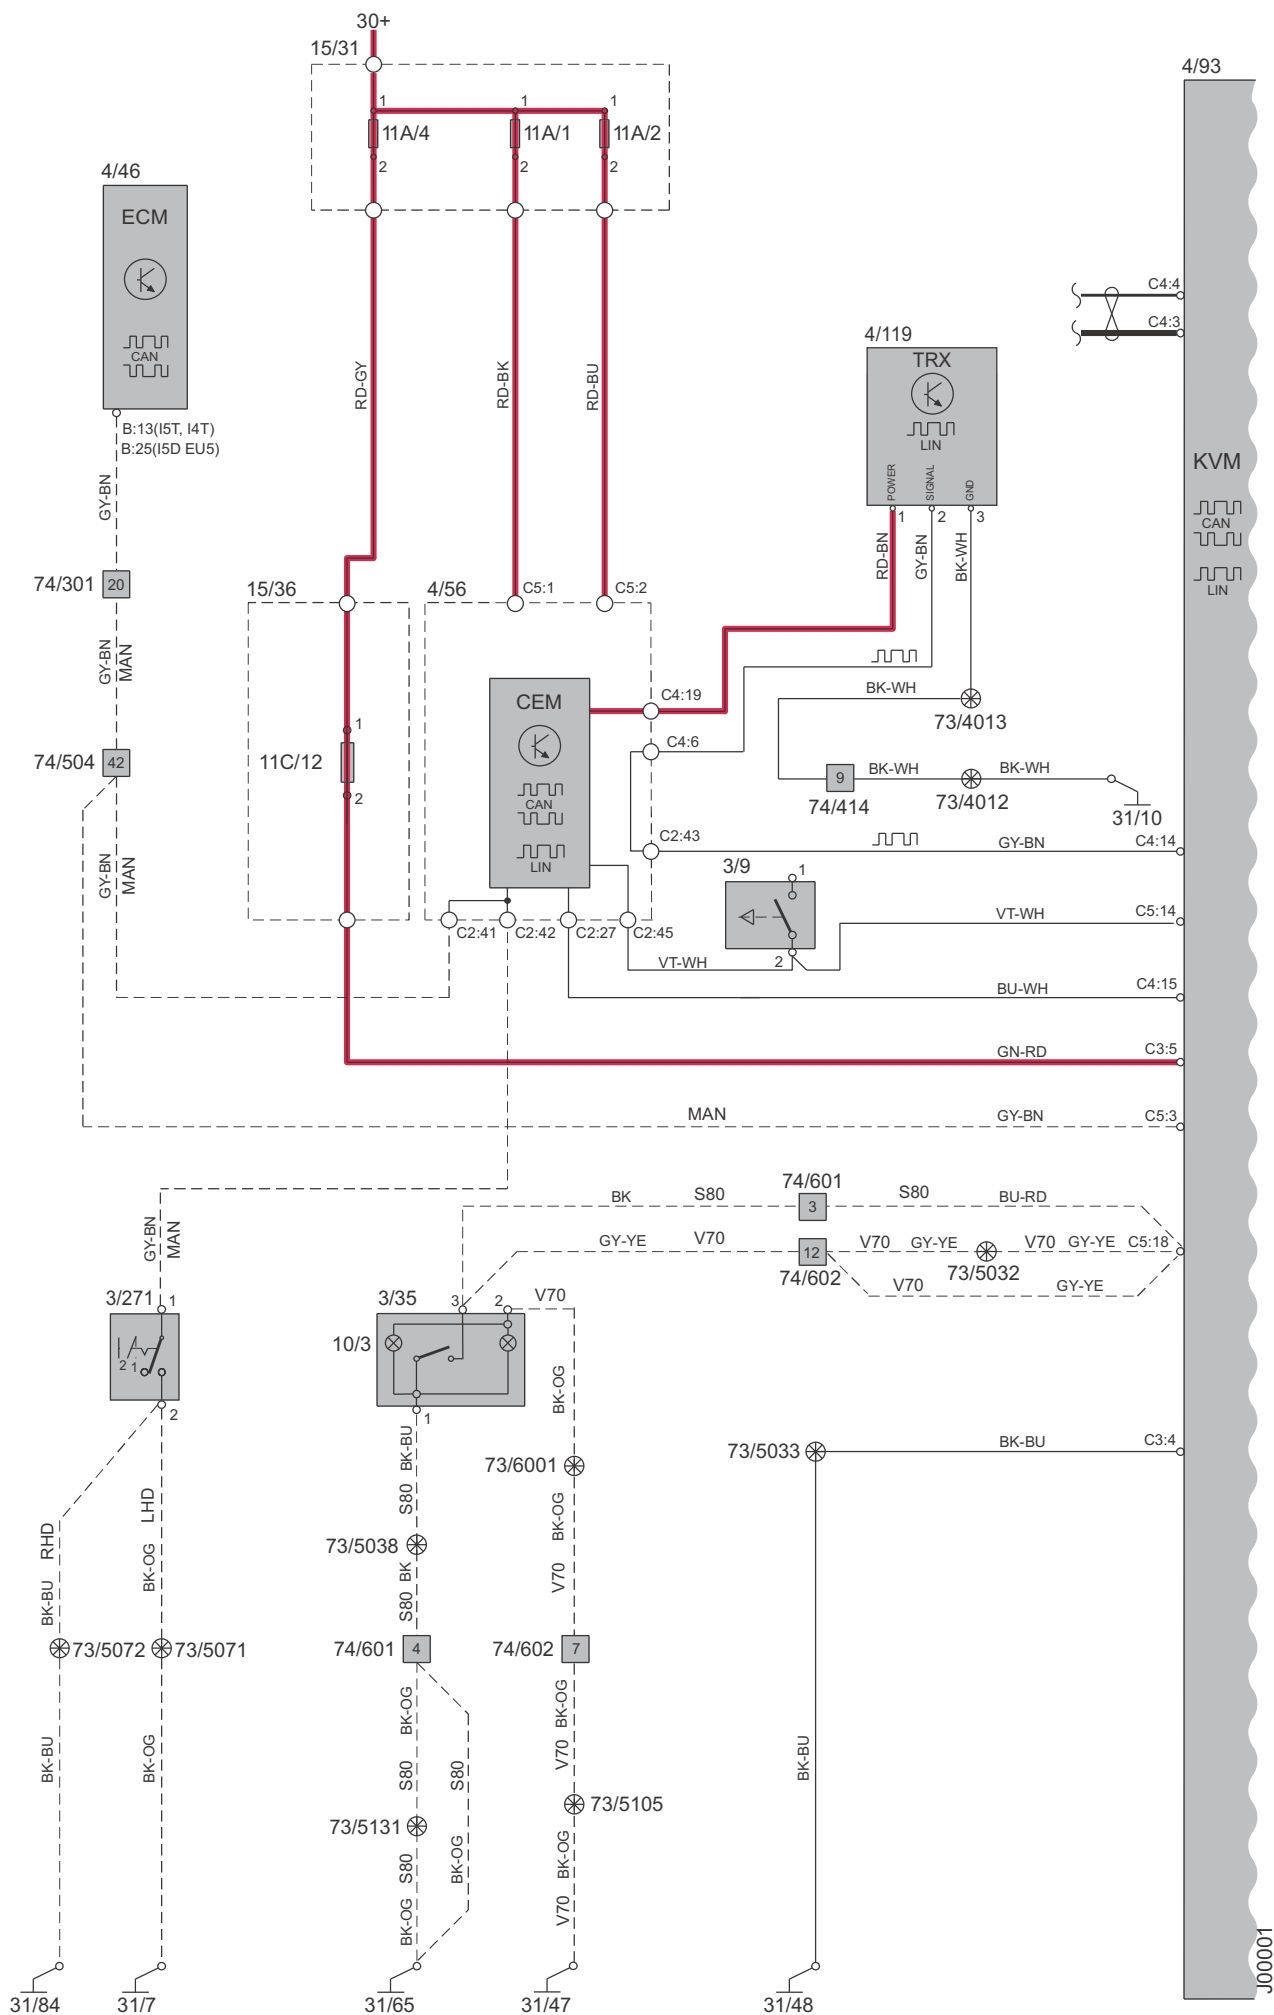


Group 36 Additional electrical equipment

Keyless vehicle 2:2

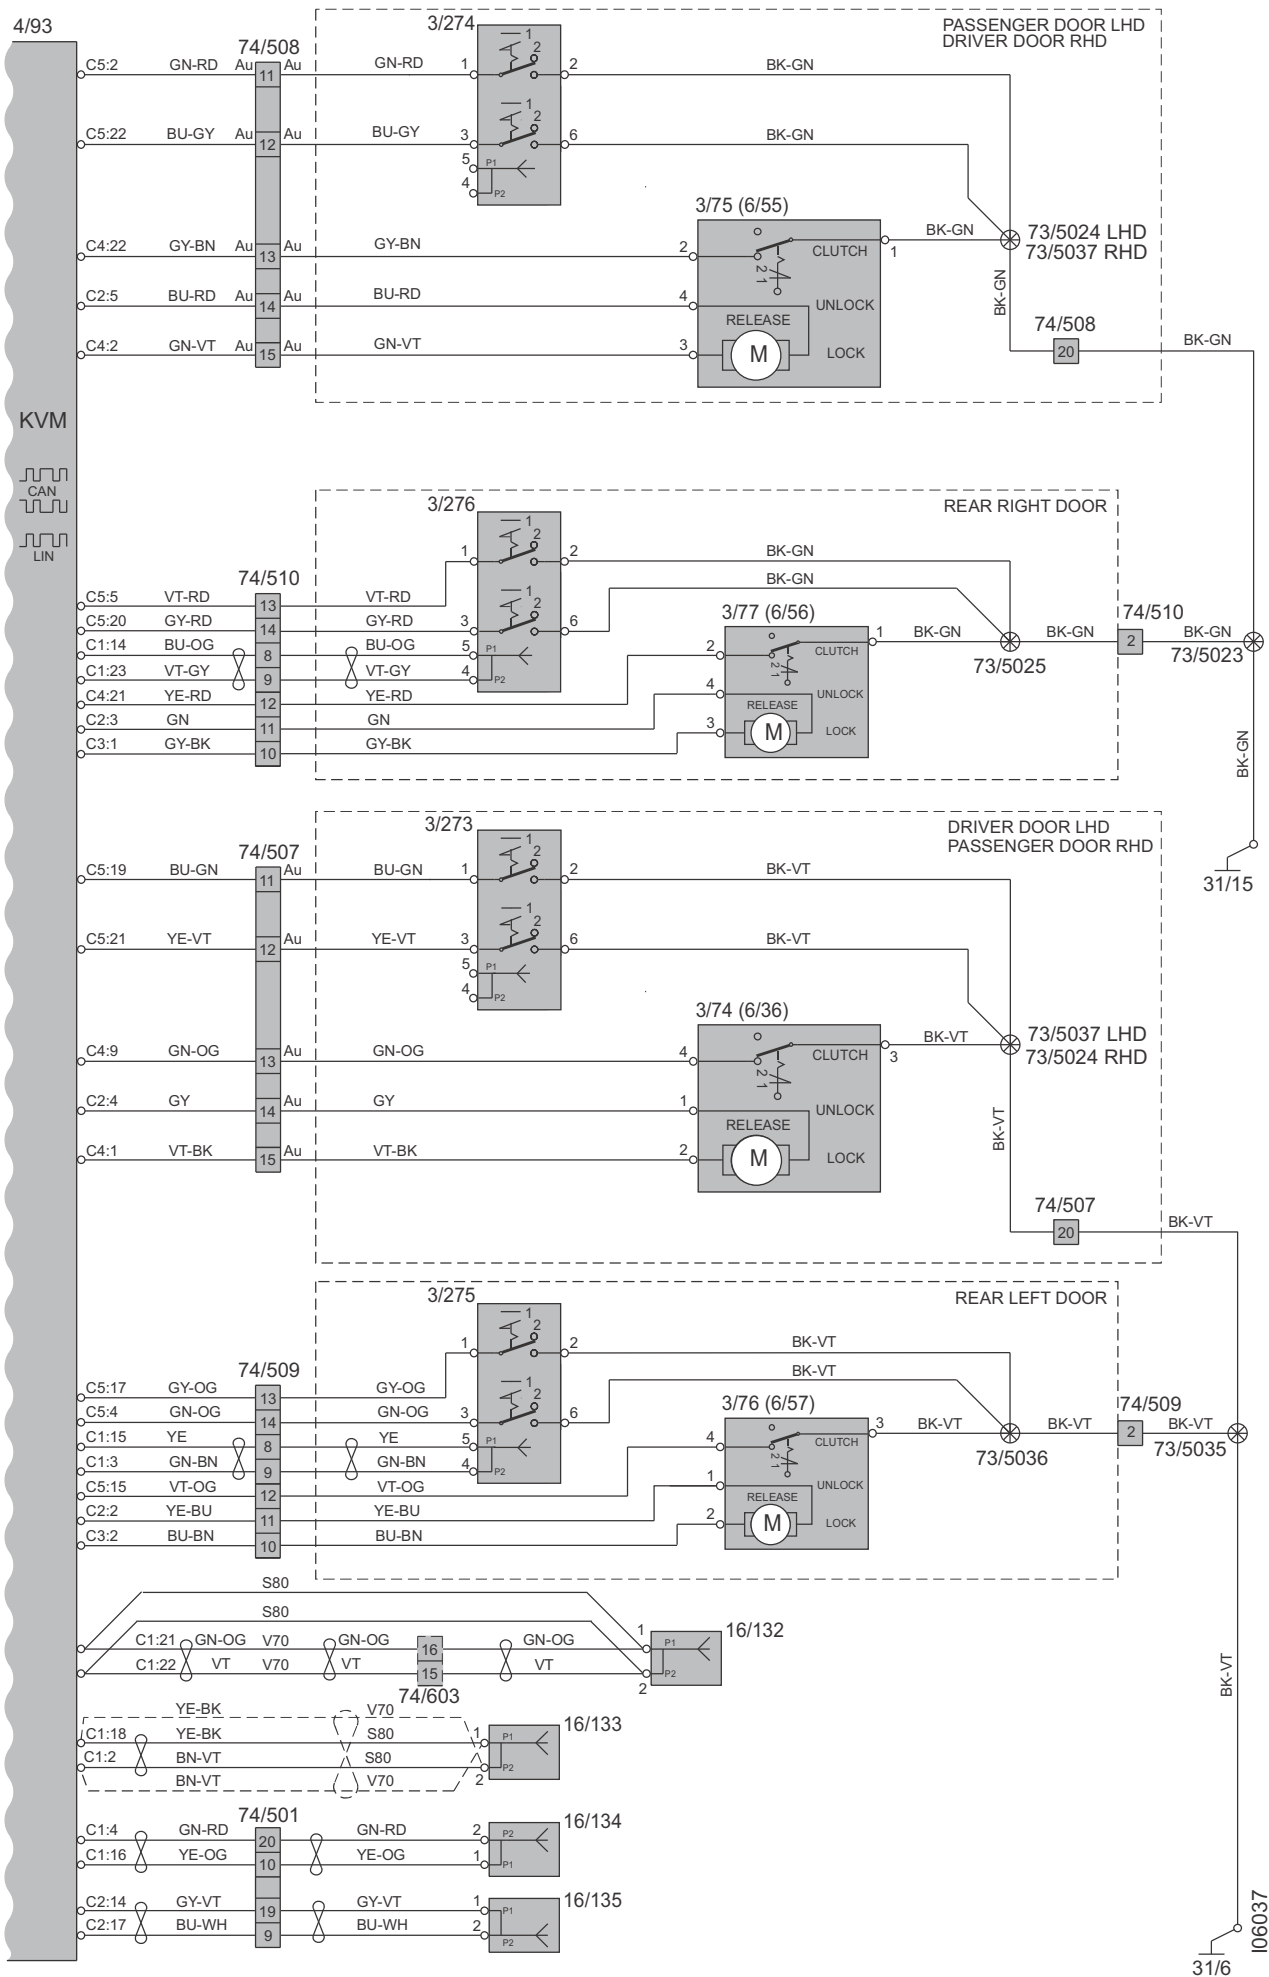


Group 36 Additional electrical equipment

Horn

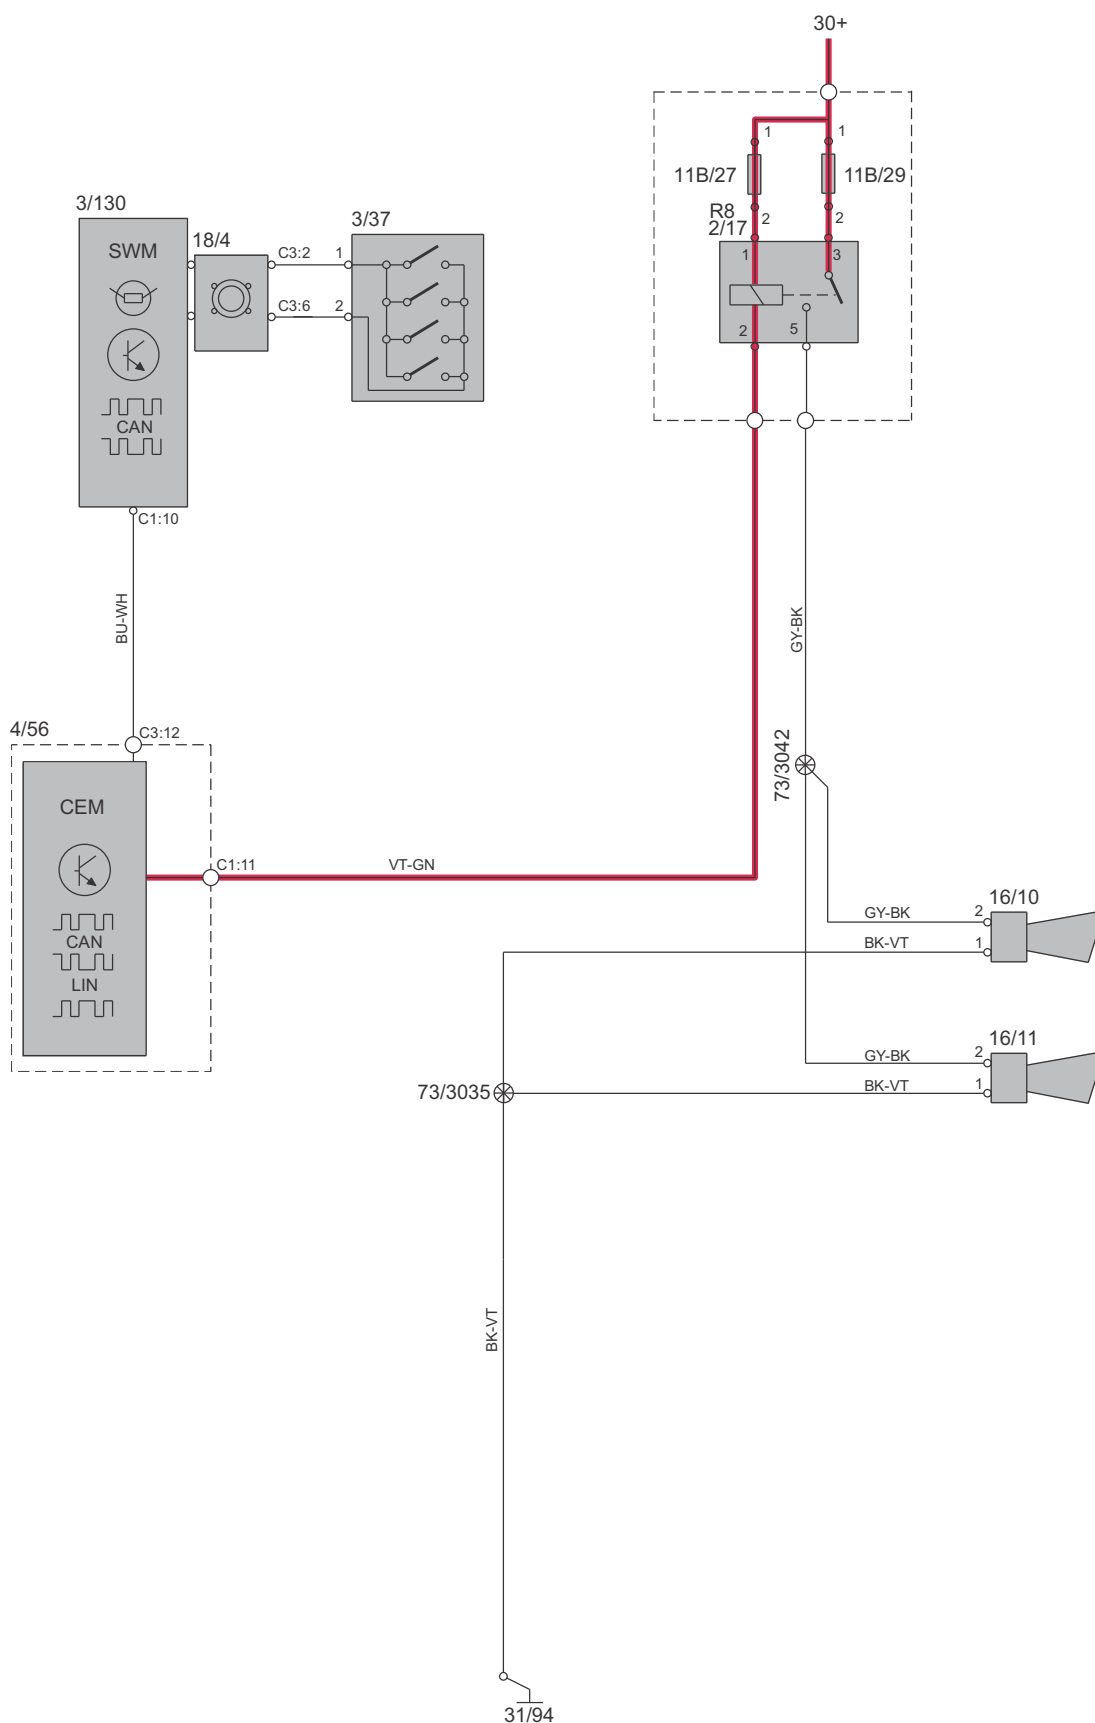


Group 36 Additional electrical equipment

Anti-theft alarm

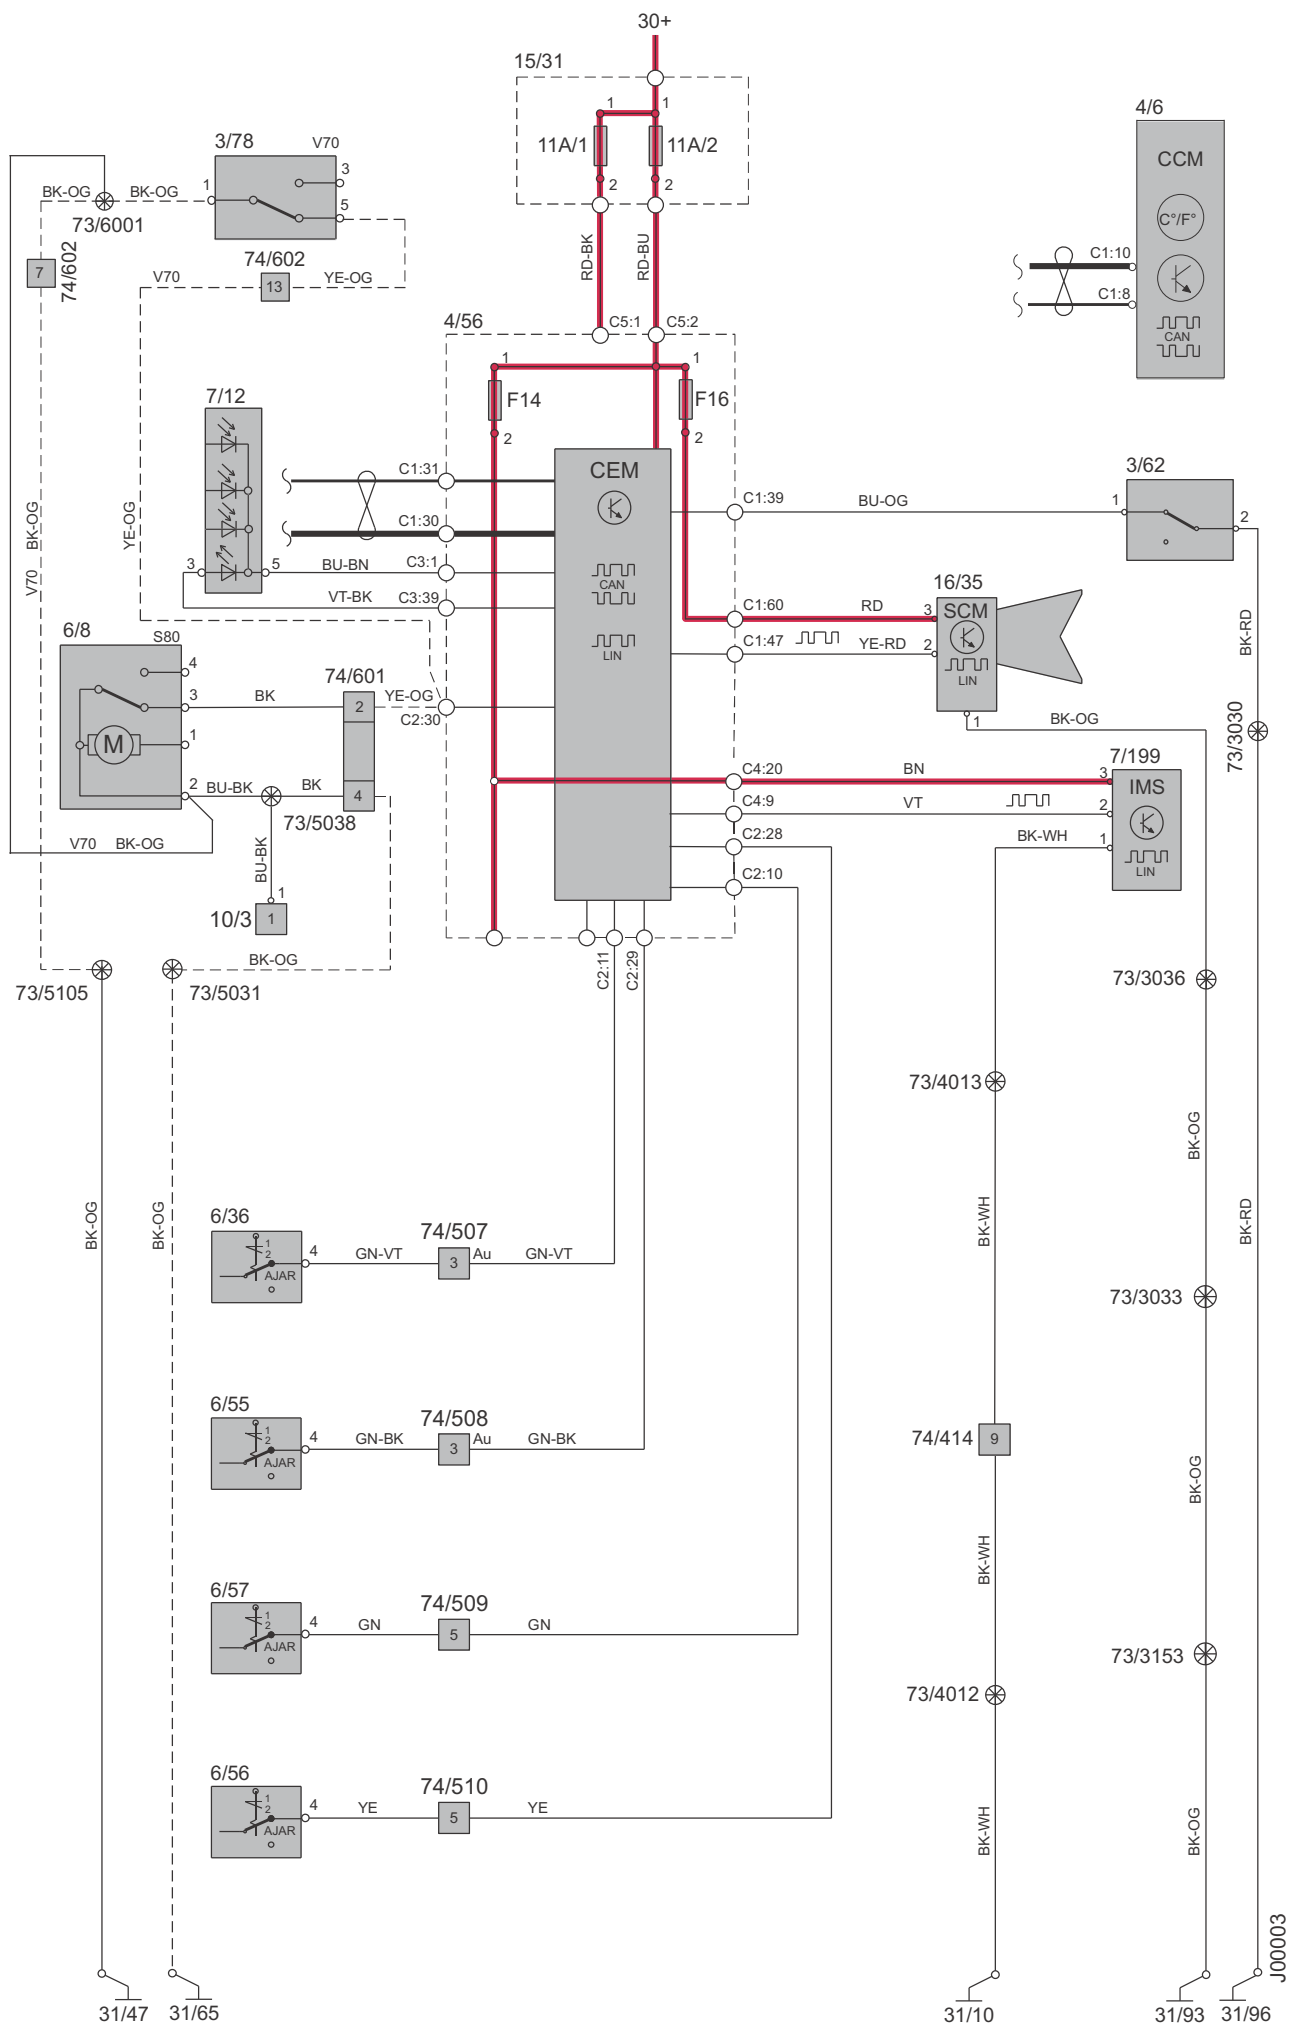

Group 36 Additional electrical equipment


Parking assistance

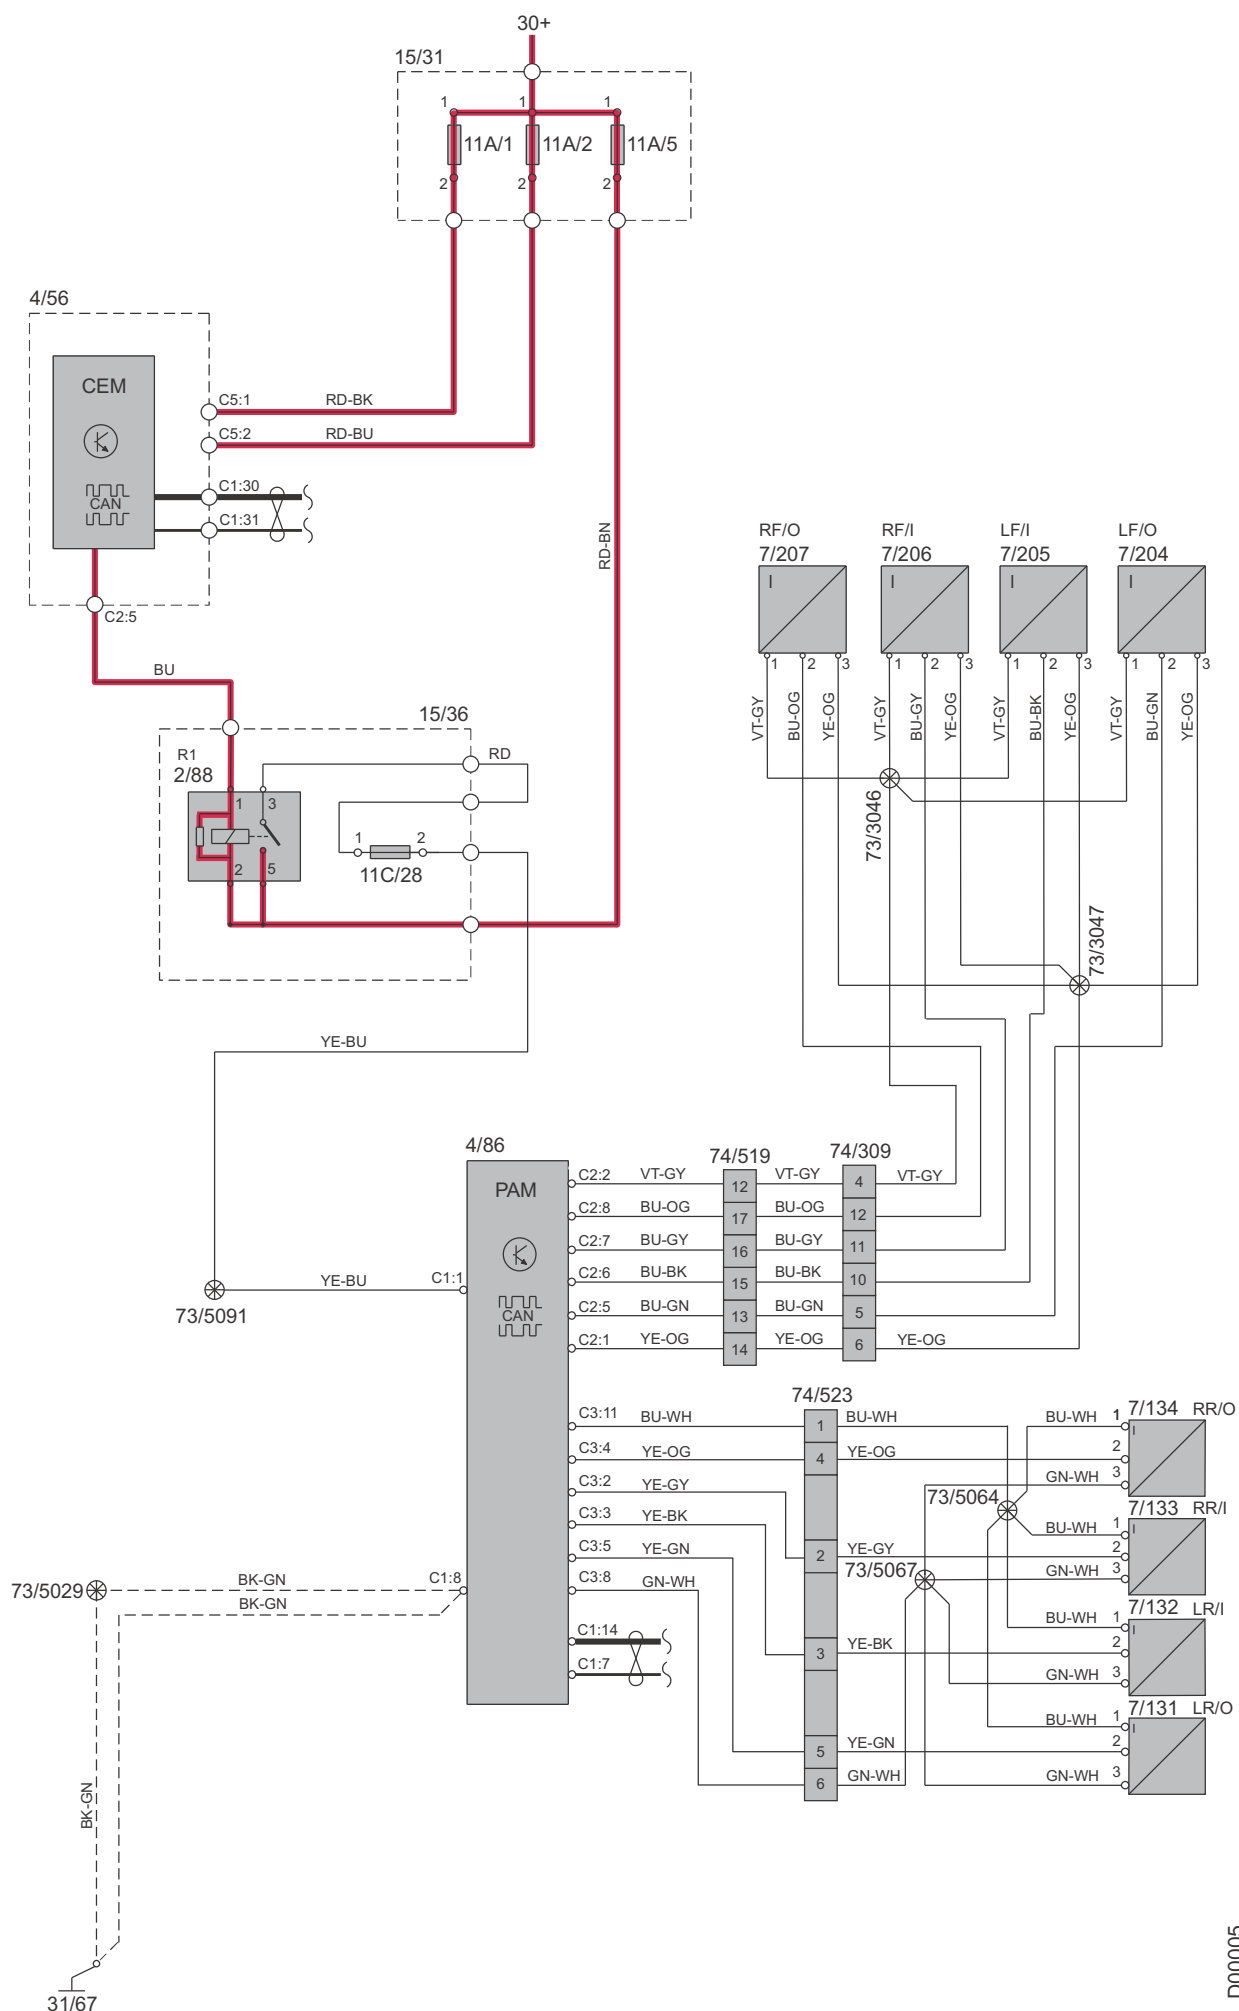

D00005


Group 36 Additional electrical equipment

Collision warning with power brake booster

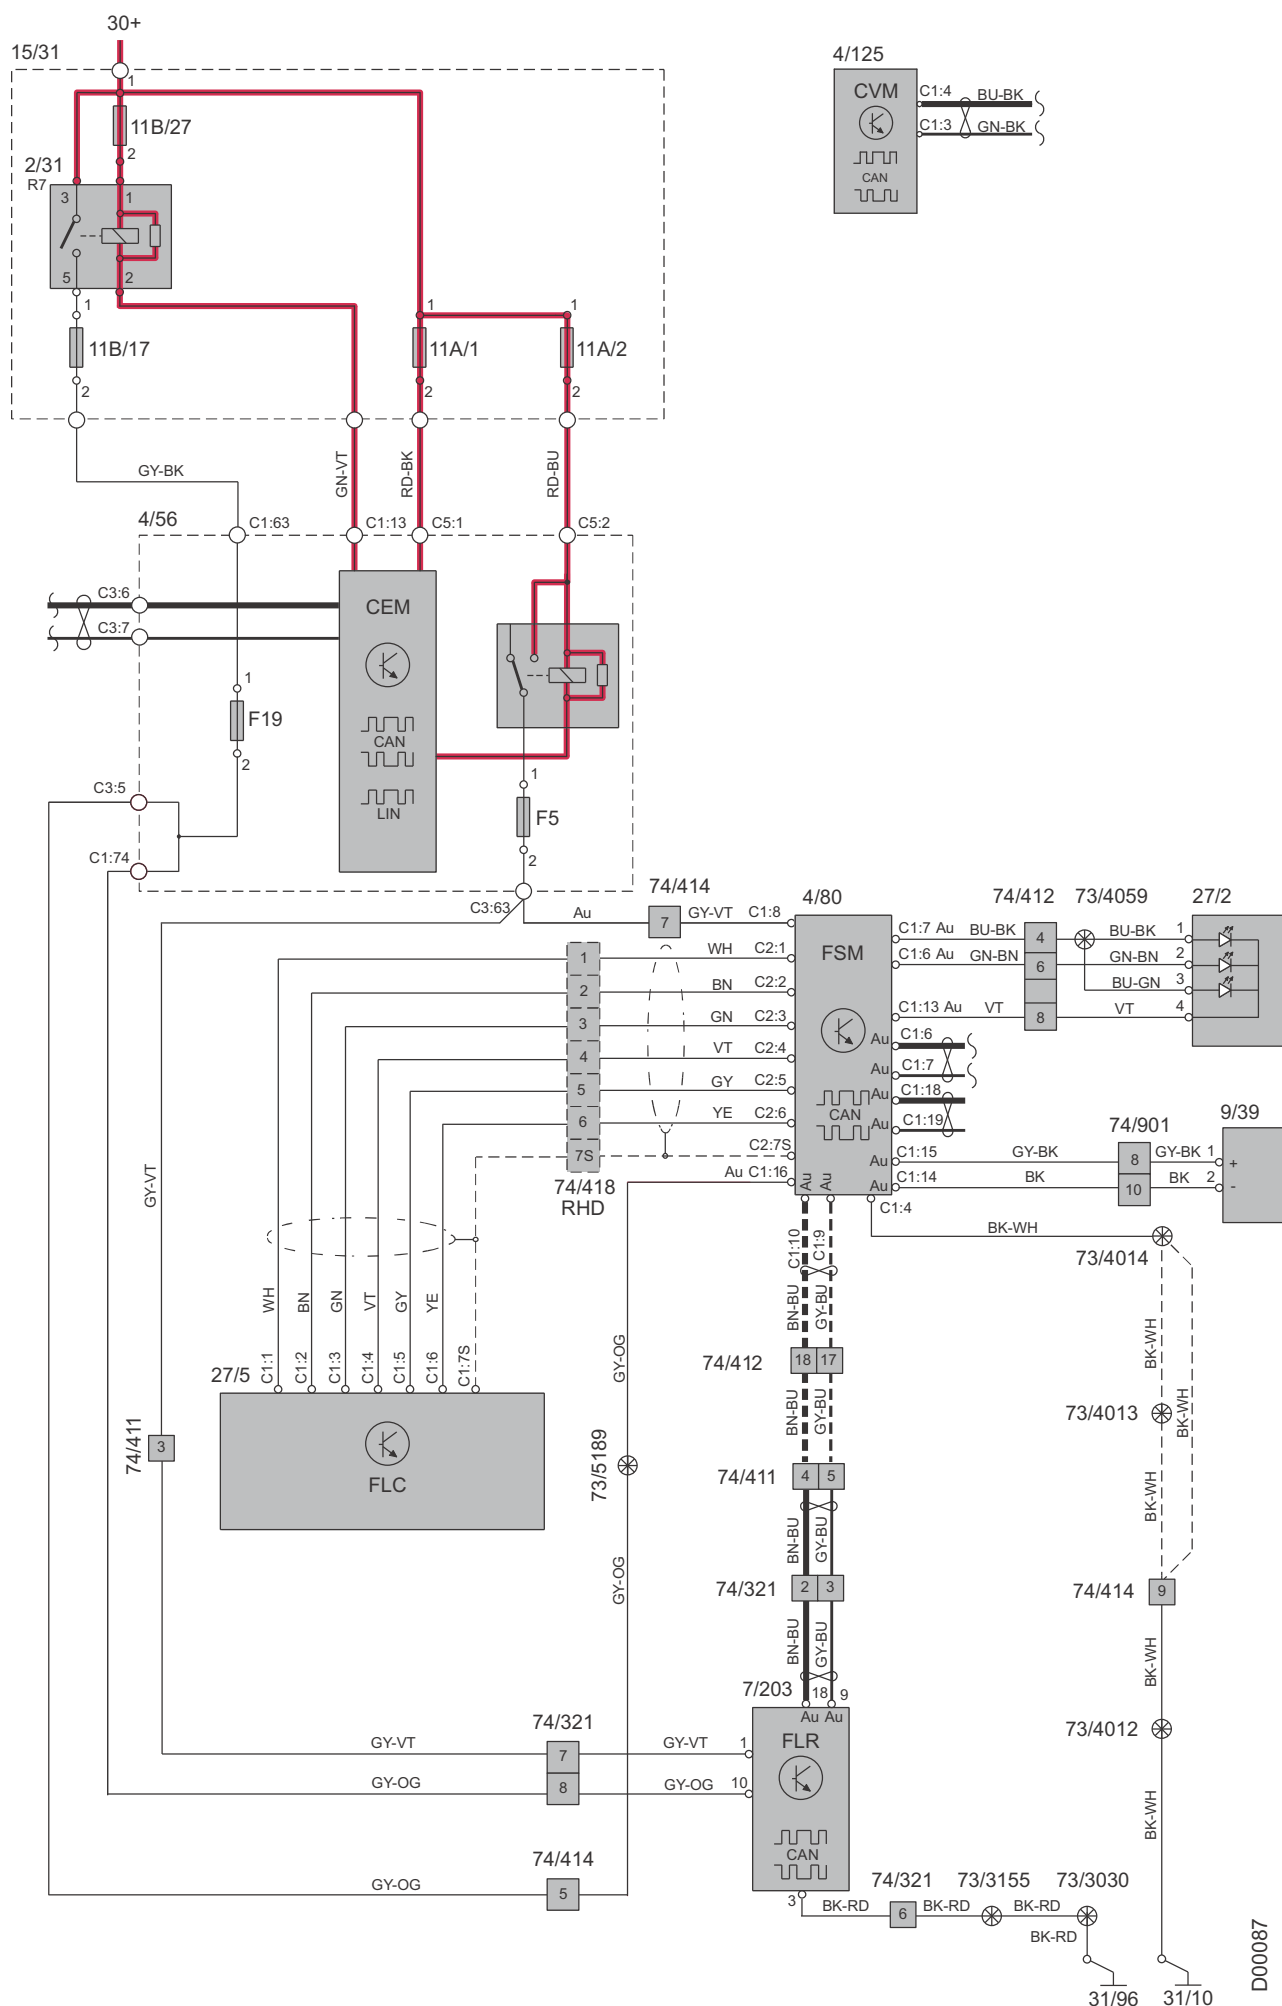


Group 36 Additional electrical equipment

Tire pressure monitoring system (TPMS)

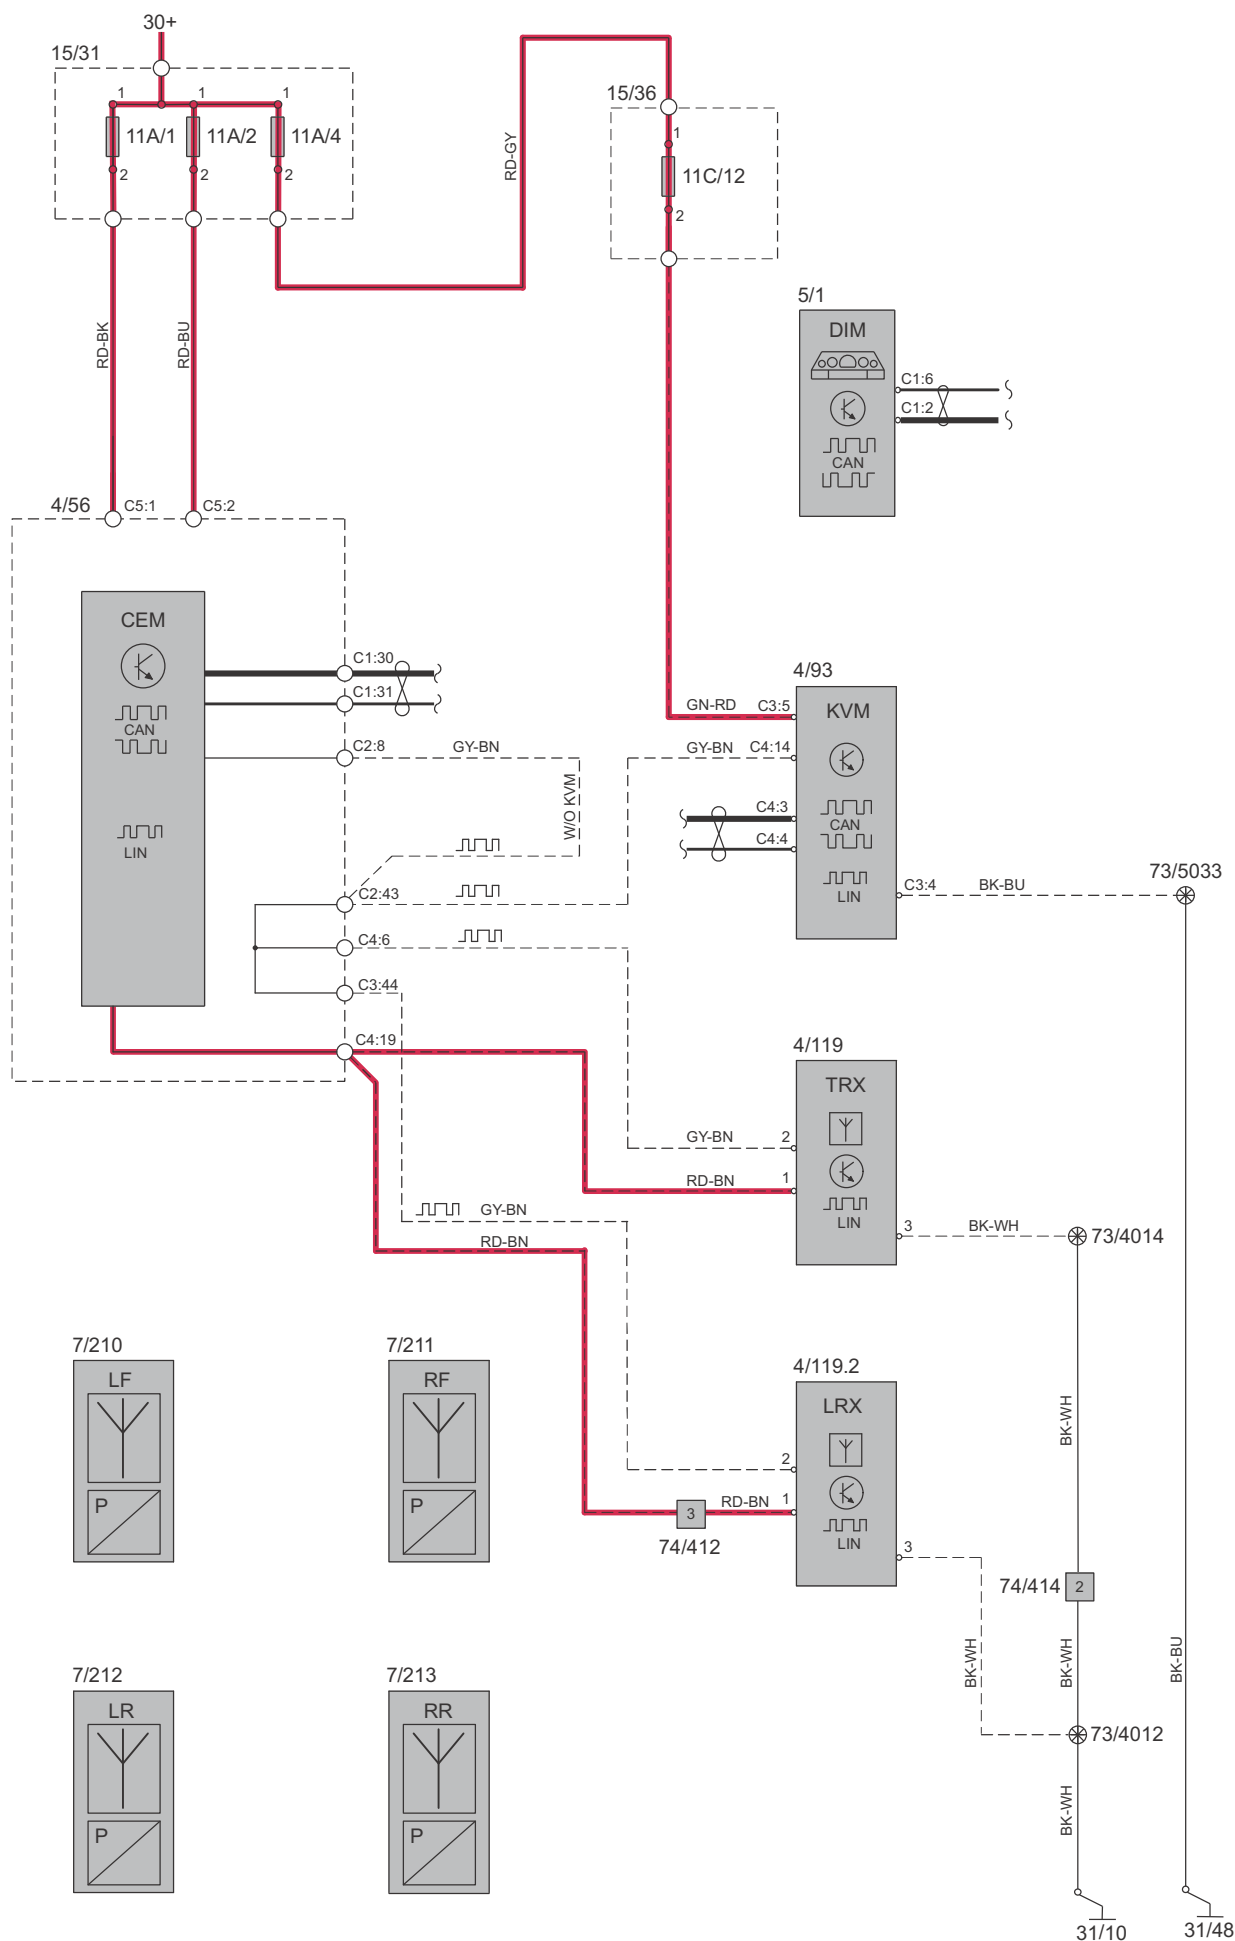


Group 36 Additional electrical equipment, Accessories
Alcohol lock

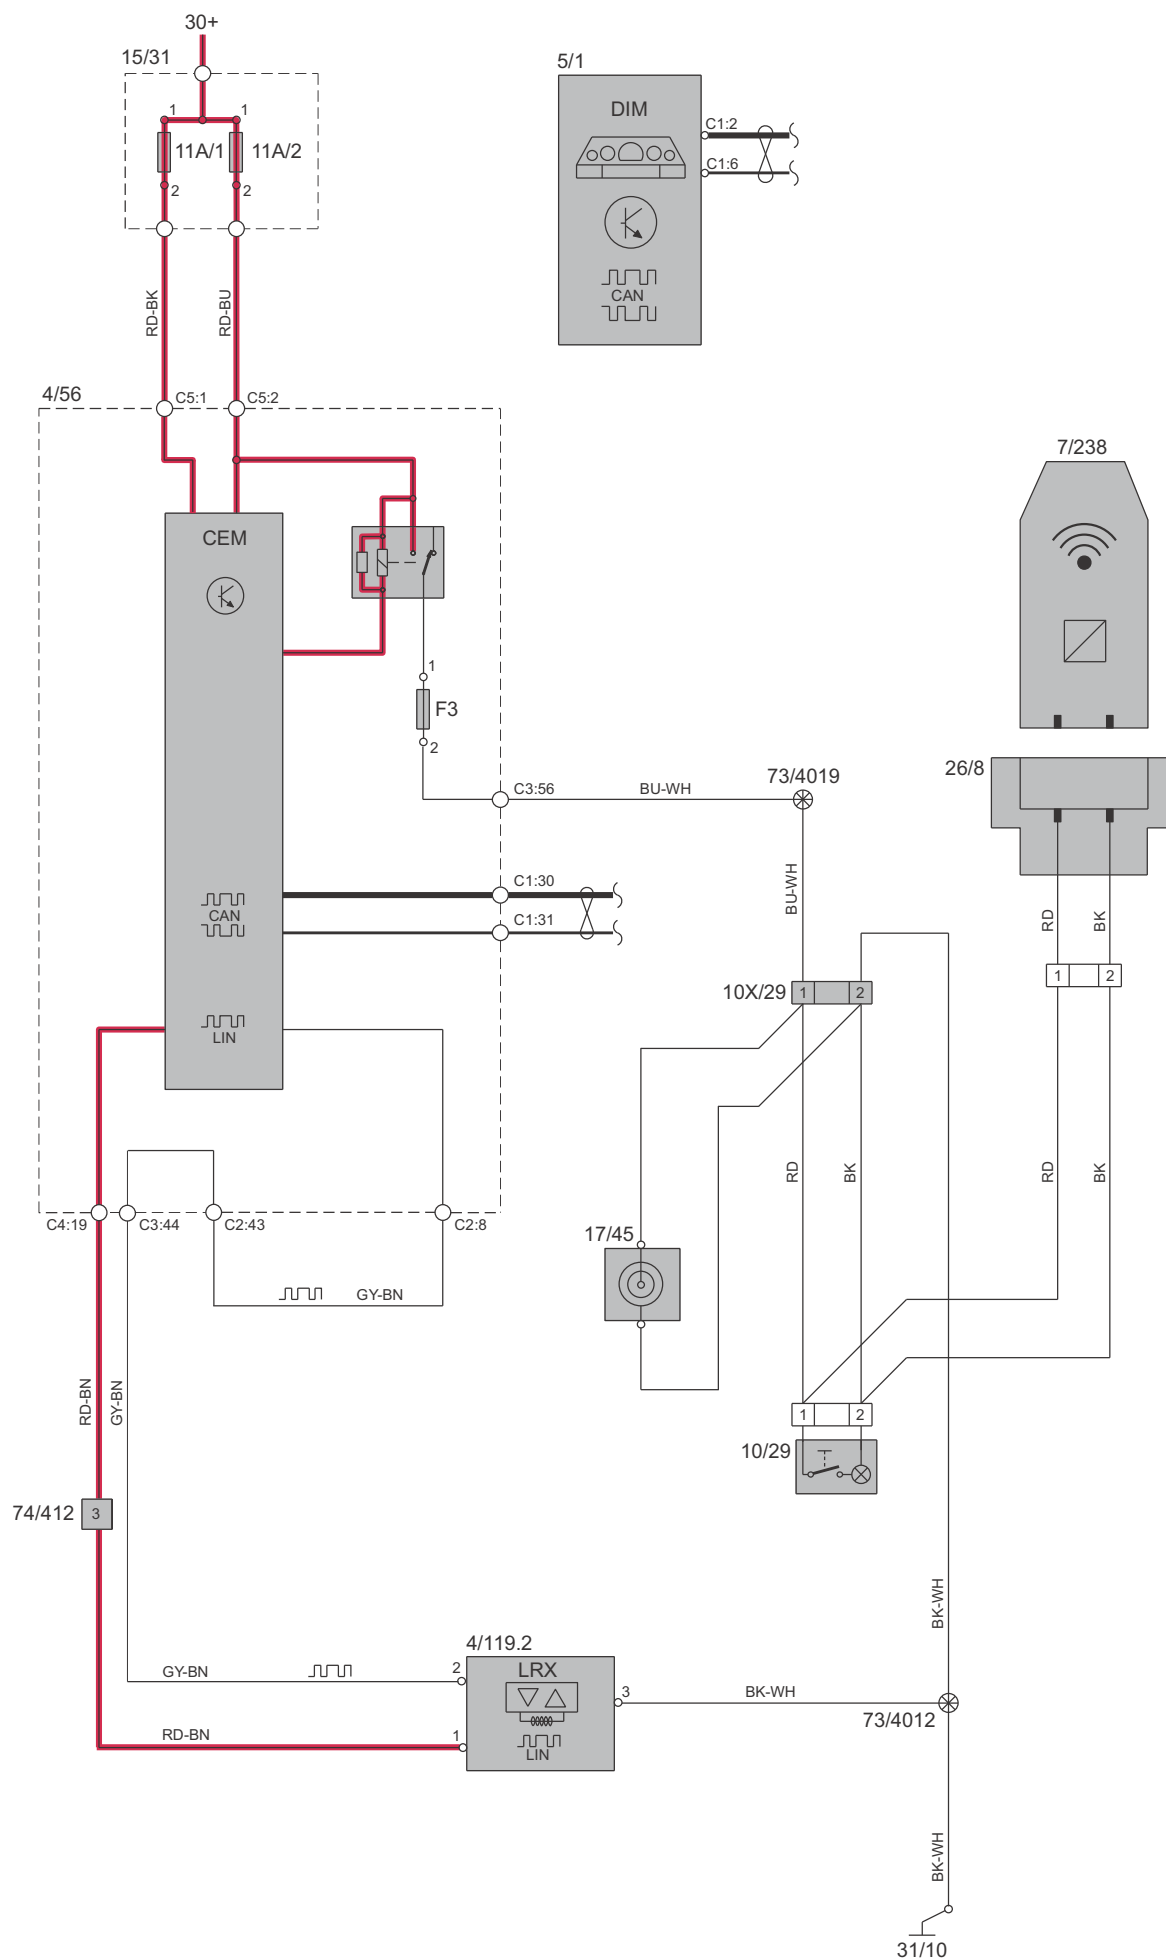


Group 37 Wiring and fuses

Diagnostics system

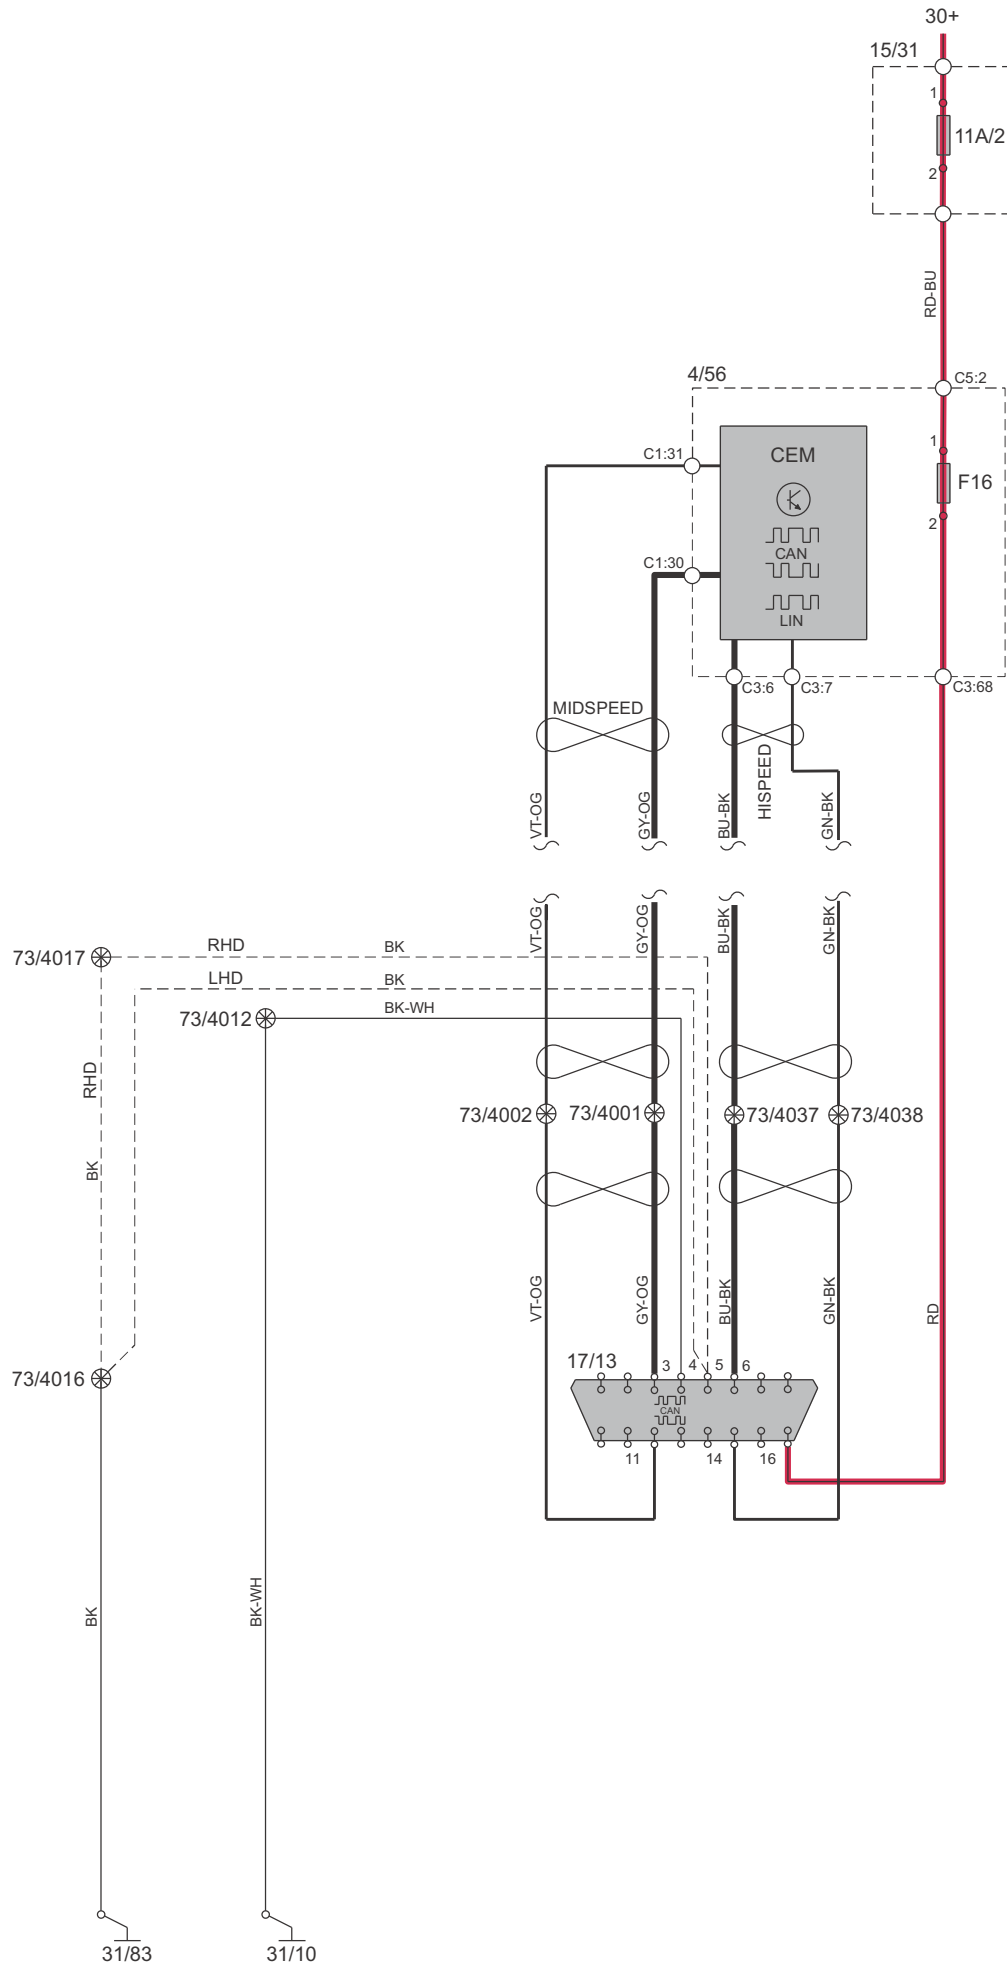


Group 37 Wiring and fuses

Outlet 12 V

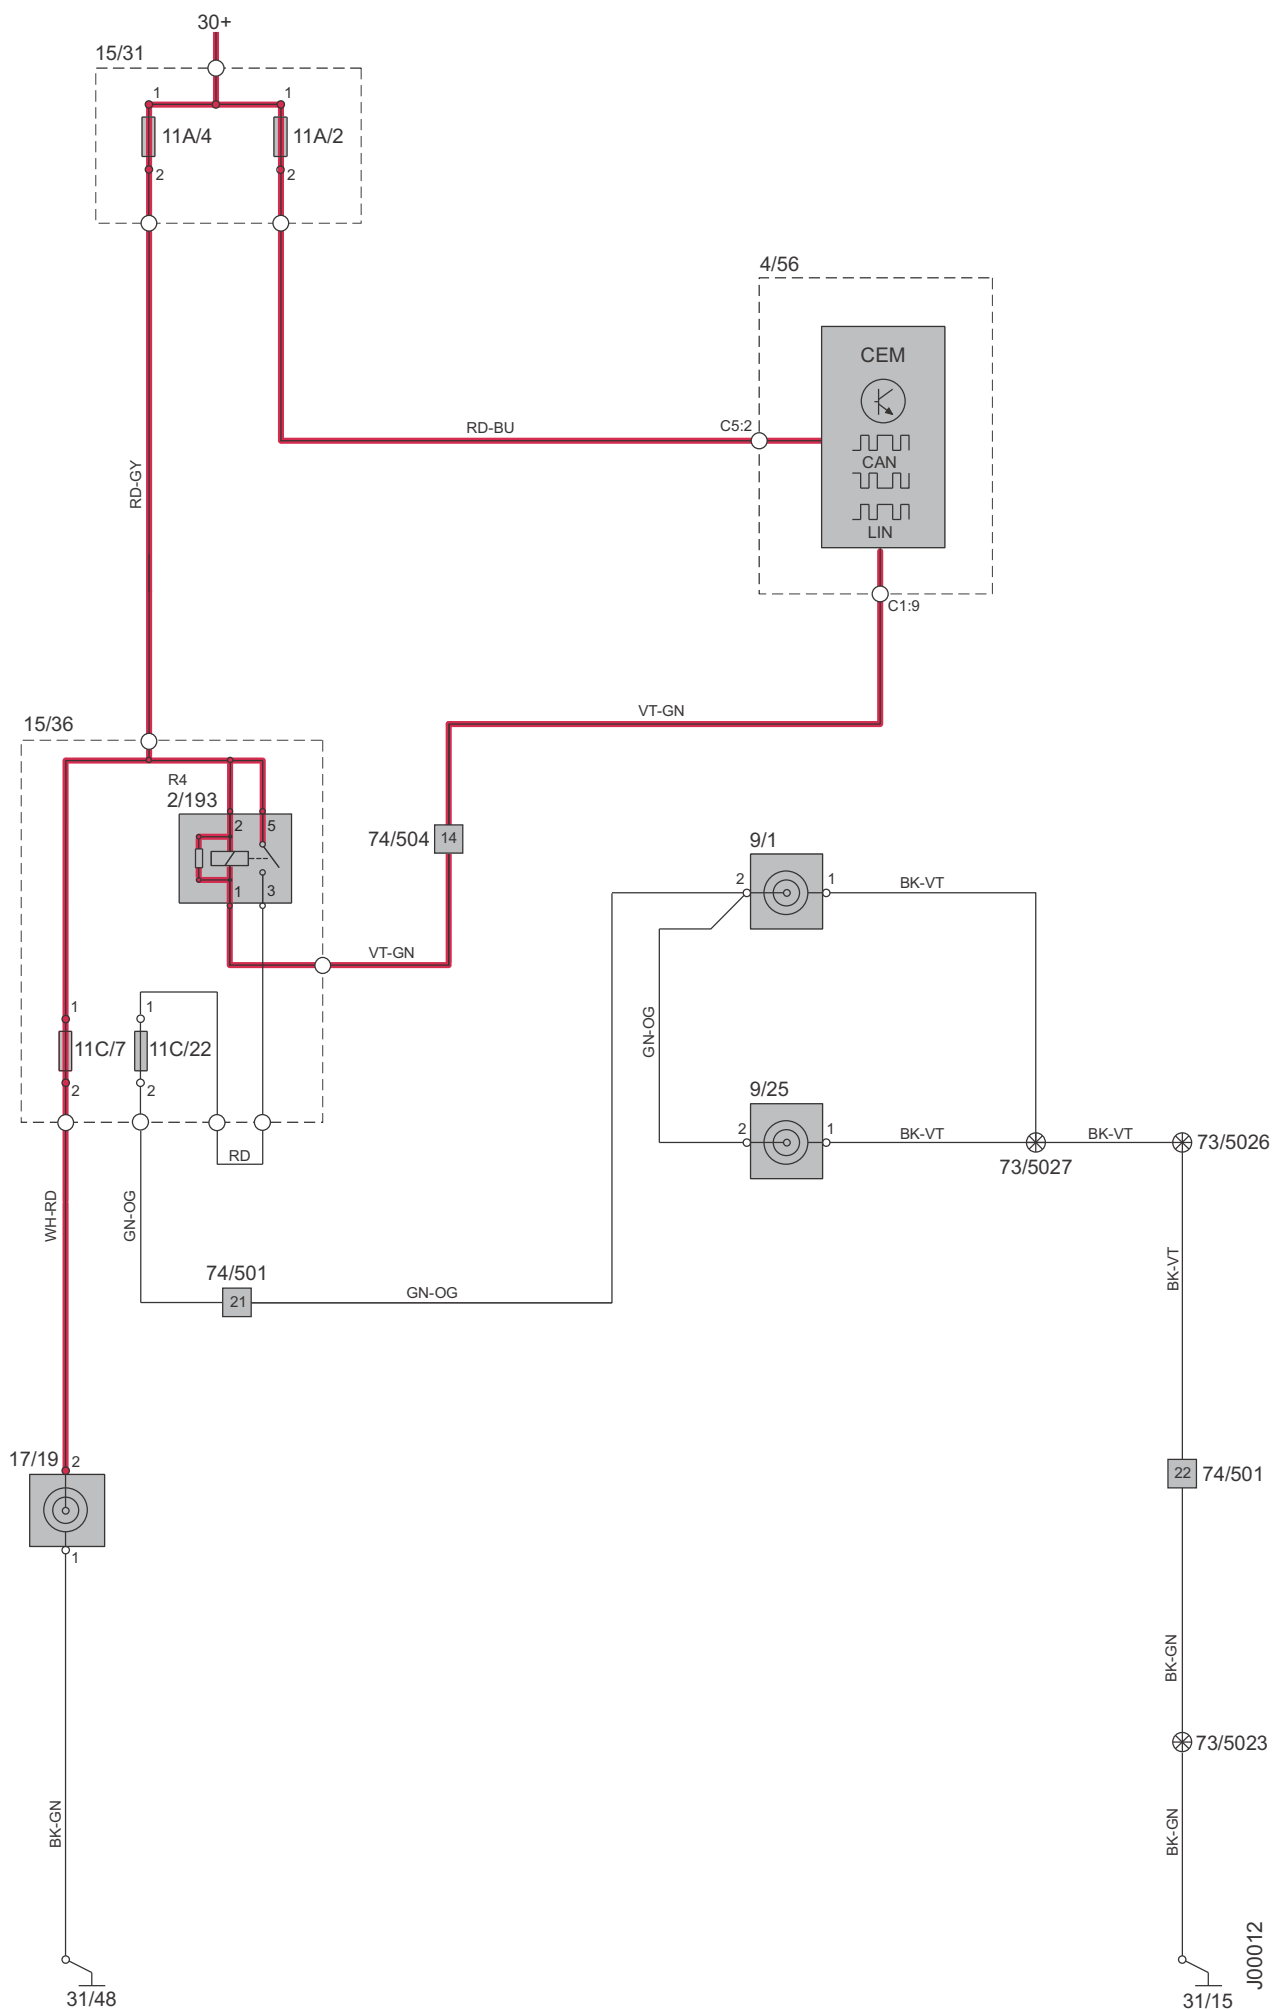

Group 37 Wiring and fuses, Accessories


Outlet 12 V, S80

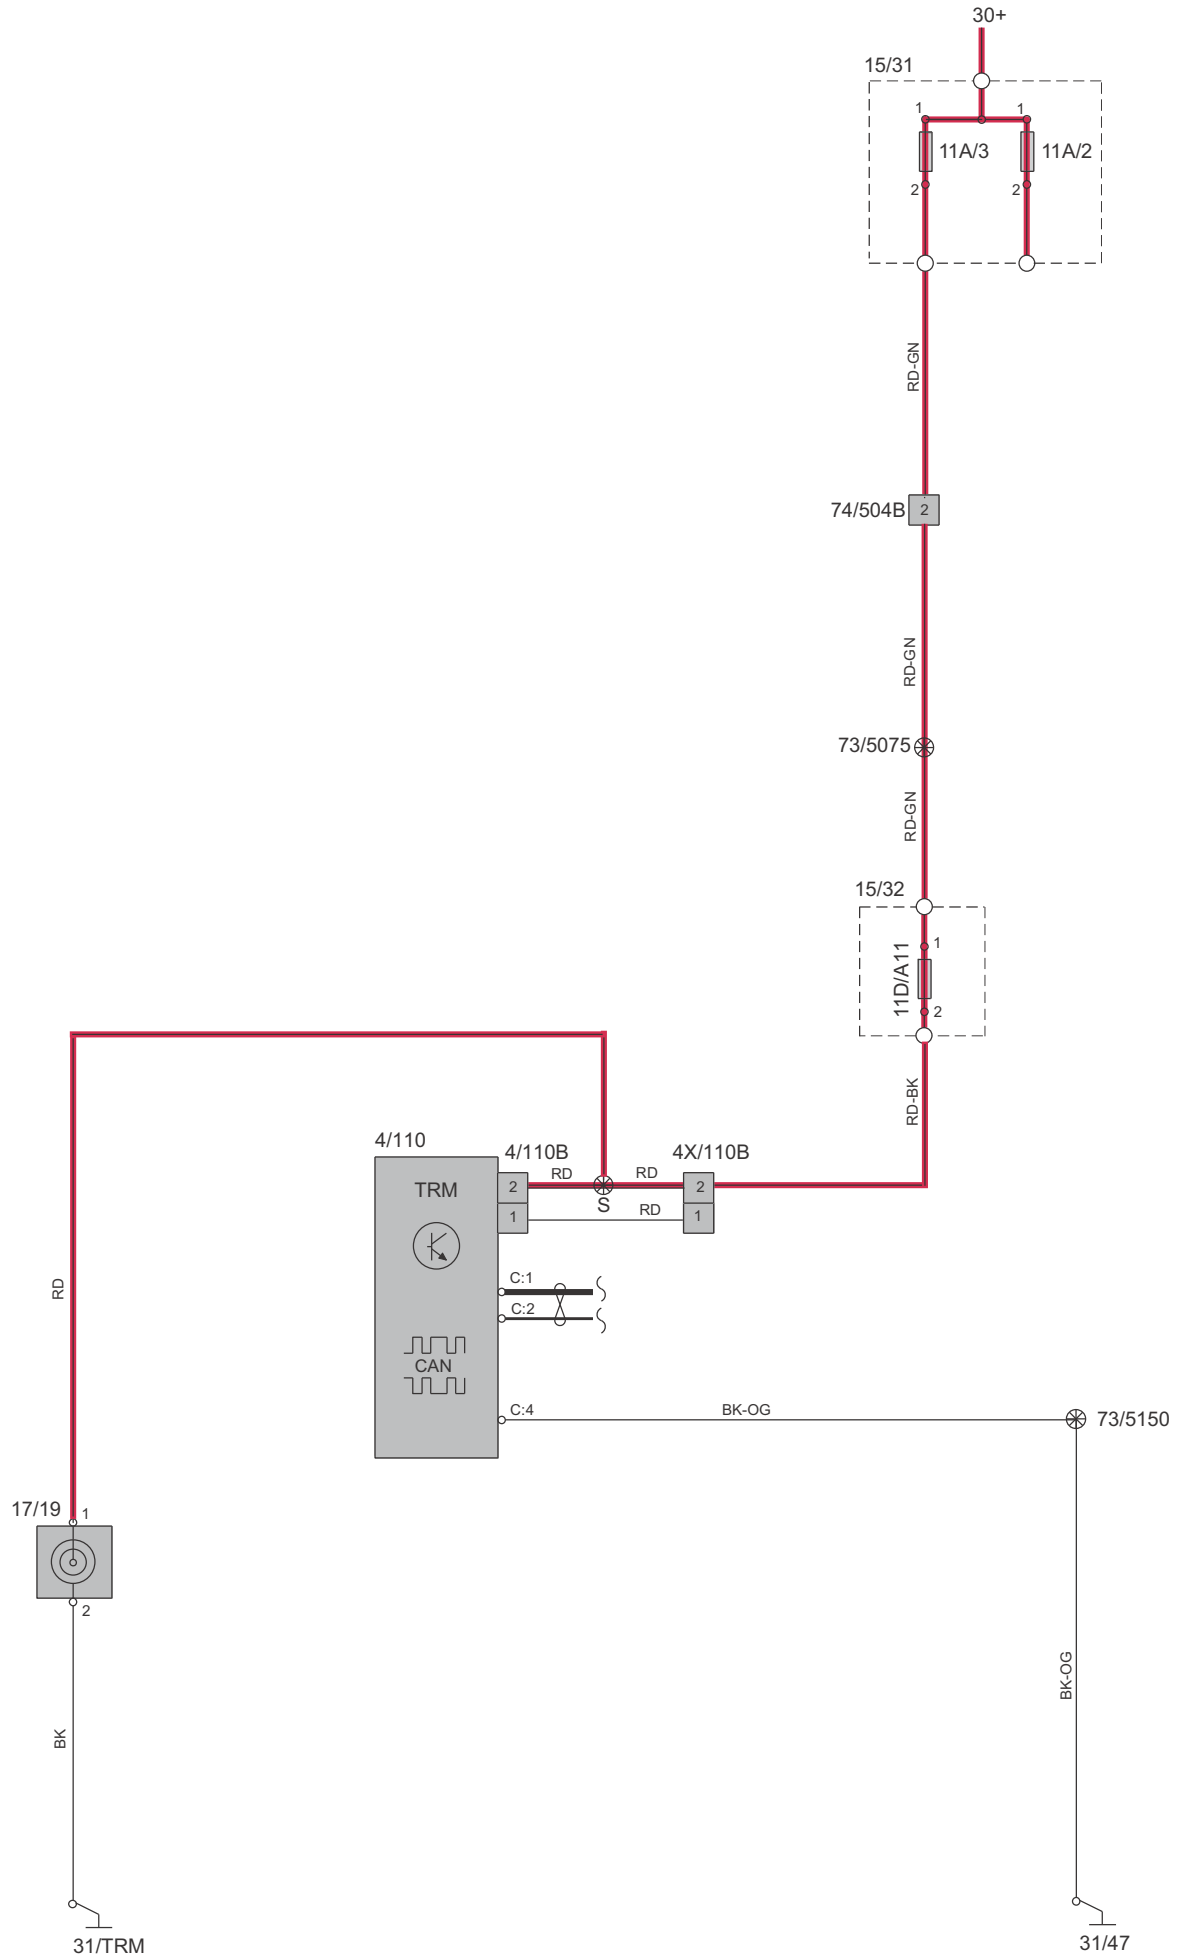

I0151917


Group 37 Wiring and fuses, Accessories

Cable harness towbar/tow hitch 4-pin V70

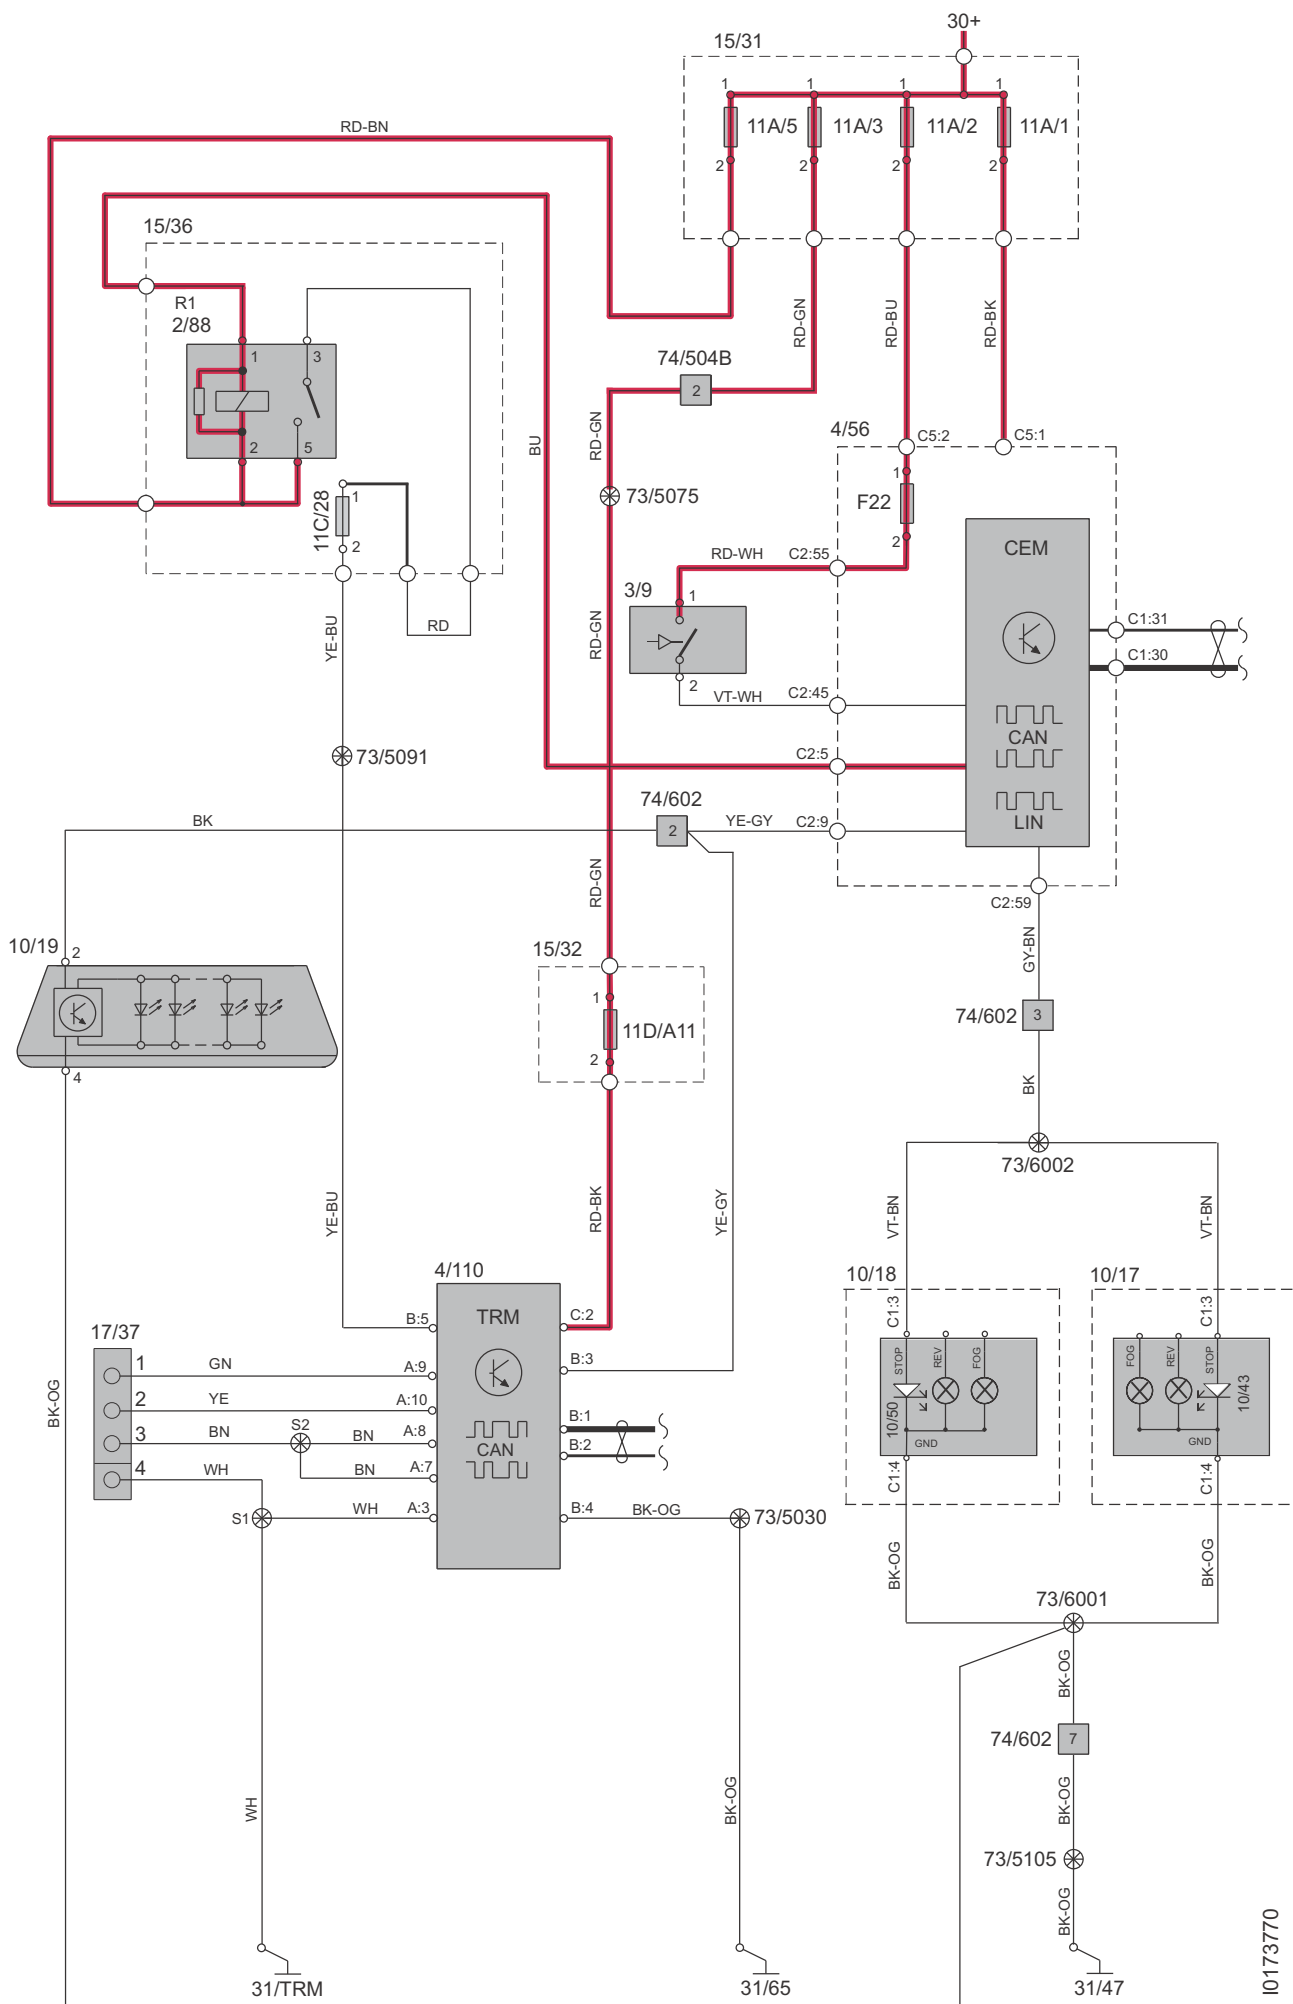

Group 37 Wiring and fuses, Accessories


Cable harness towbar/tow hitch 4-pin S80

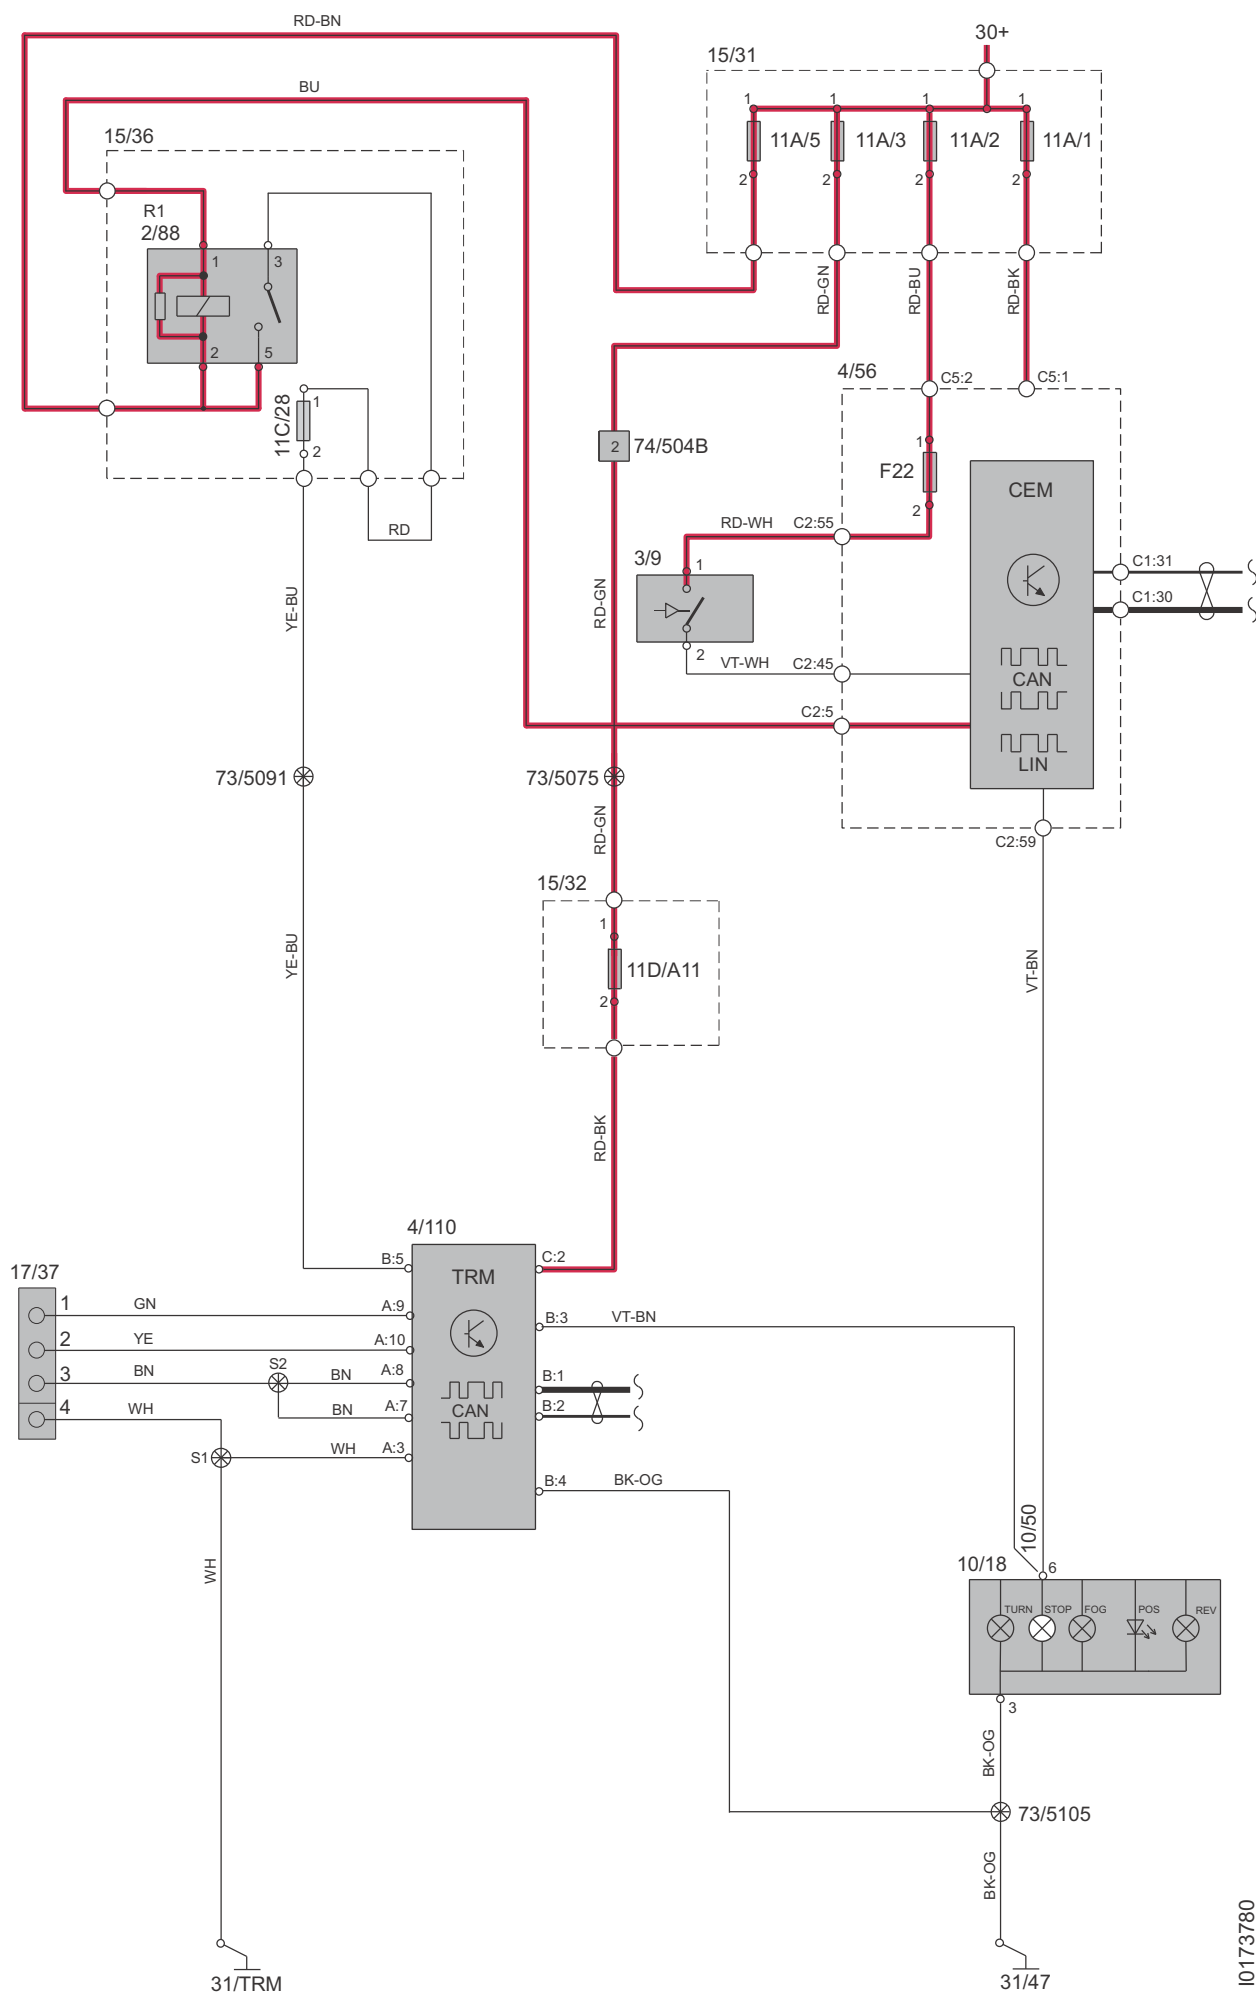


I0173780

Group 37 Wiring and fuses, Accessories

Cable harness towbar/tow hitch 7-pin V70

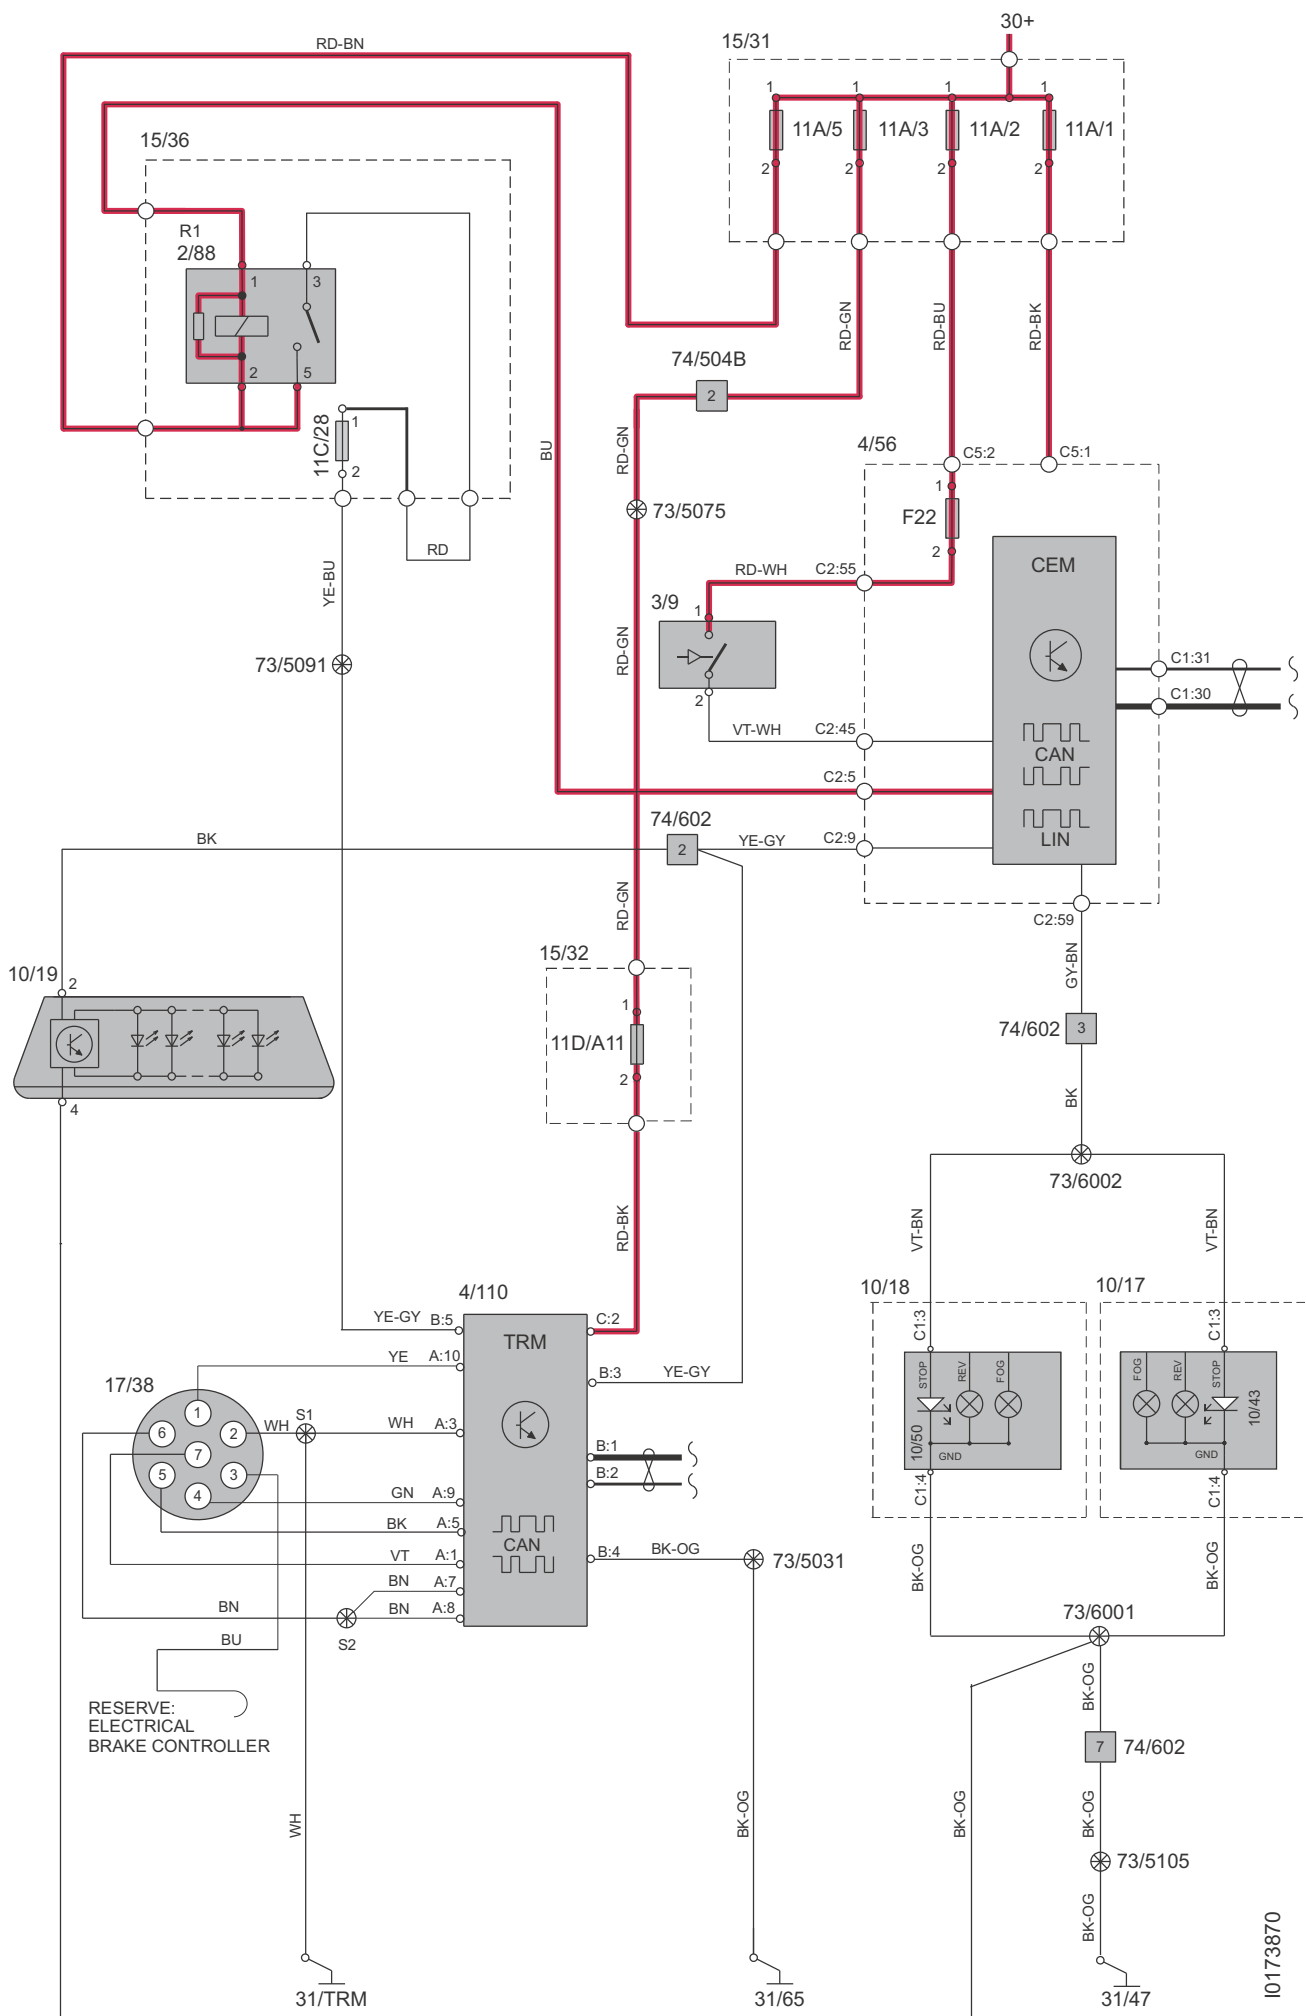


Group 37 Wiring and fuses, Accessories **Cable harness towbar/tow hitch 7-pin S80**

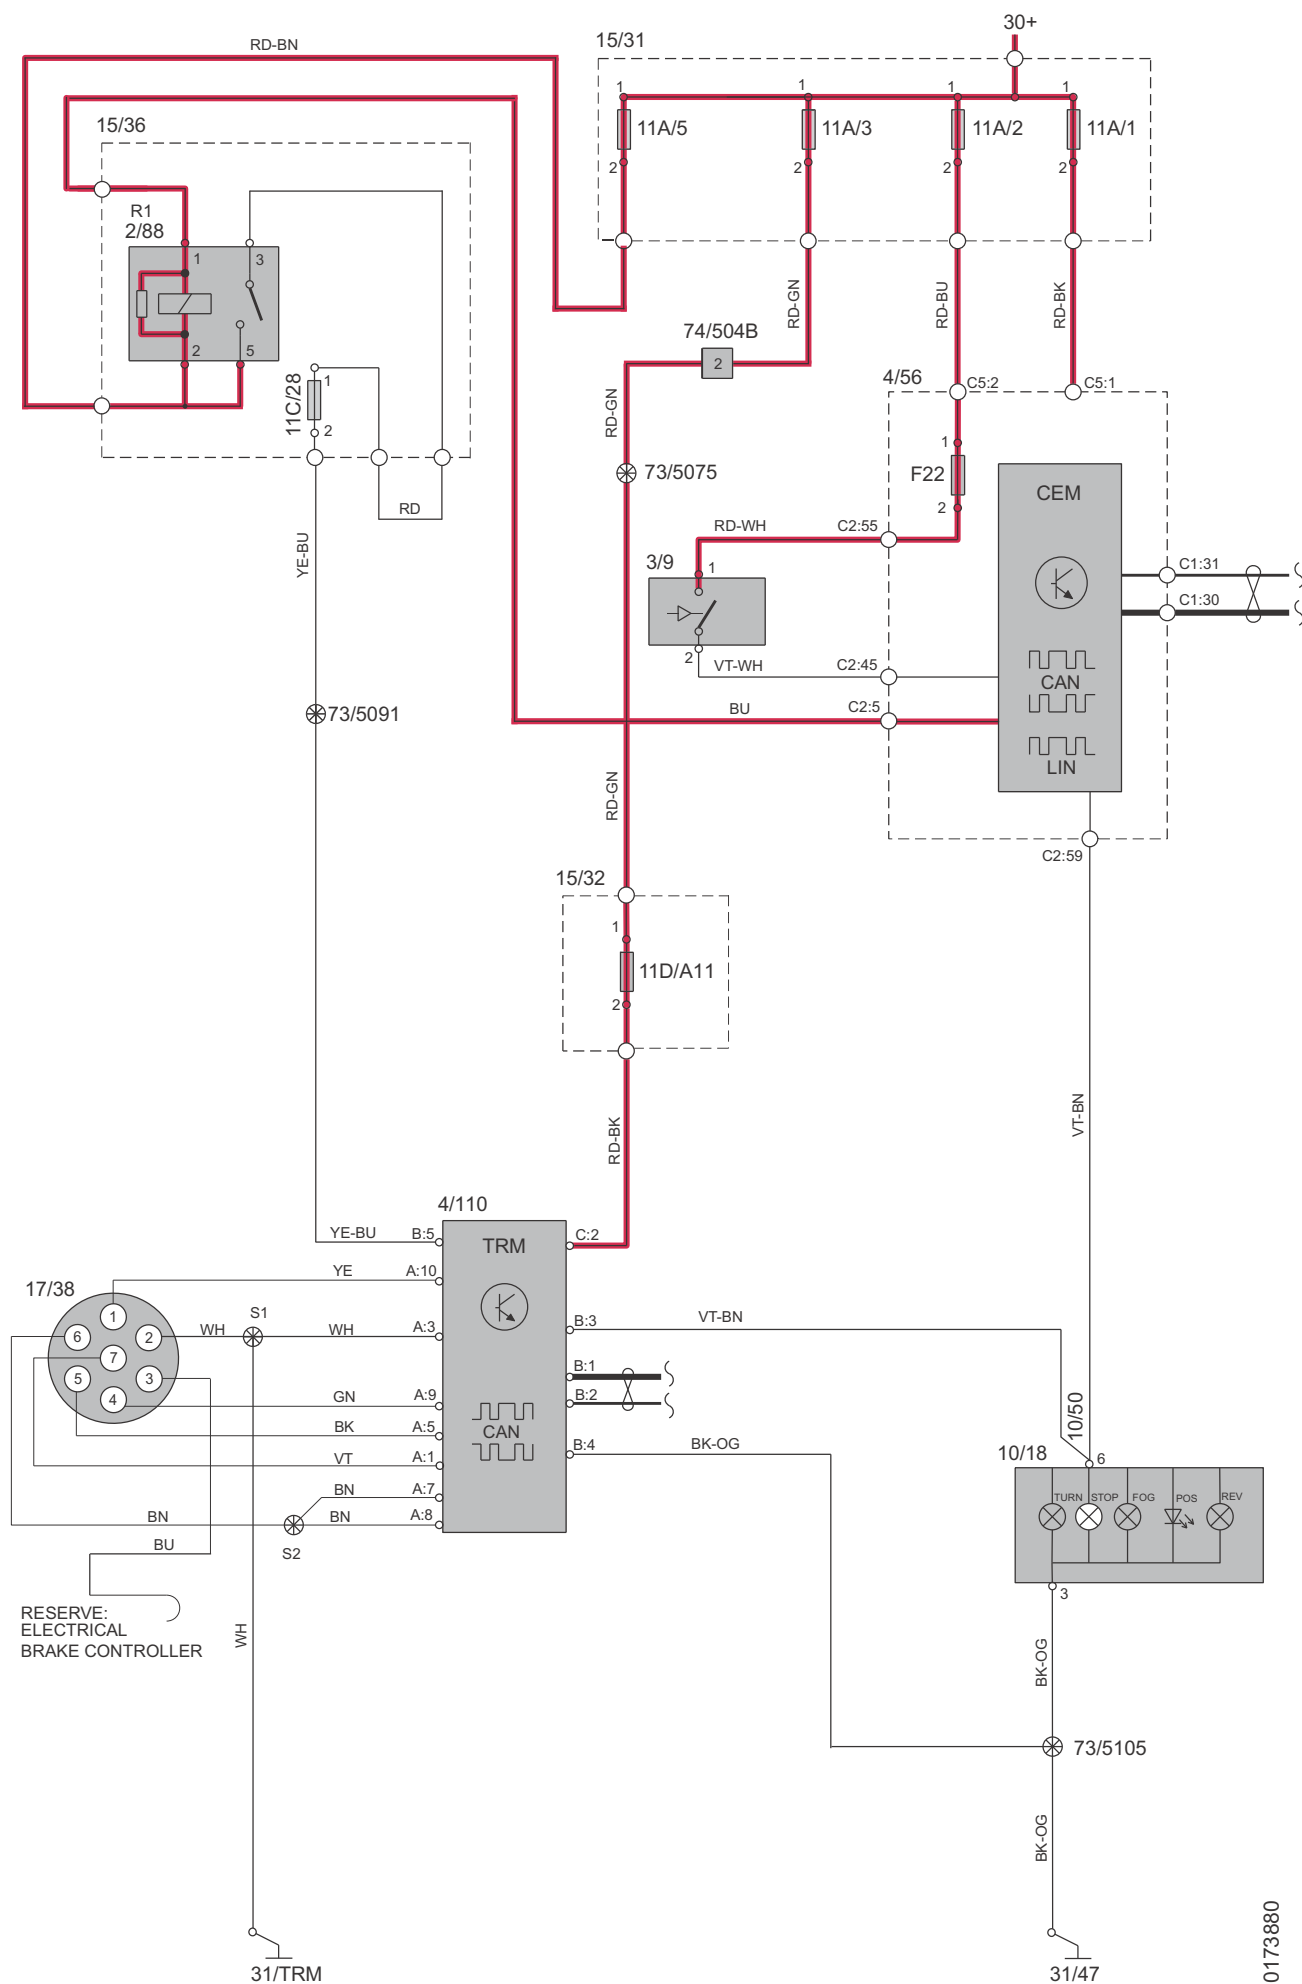


I0173880

Group 37 Wiring and fuses, Accessories

Cable harness towbar/tow hitch 13-pin V70

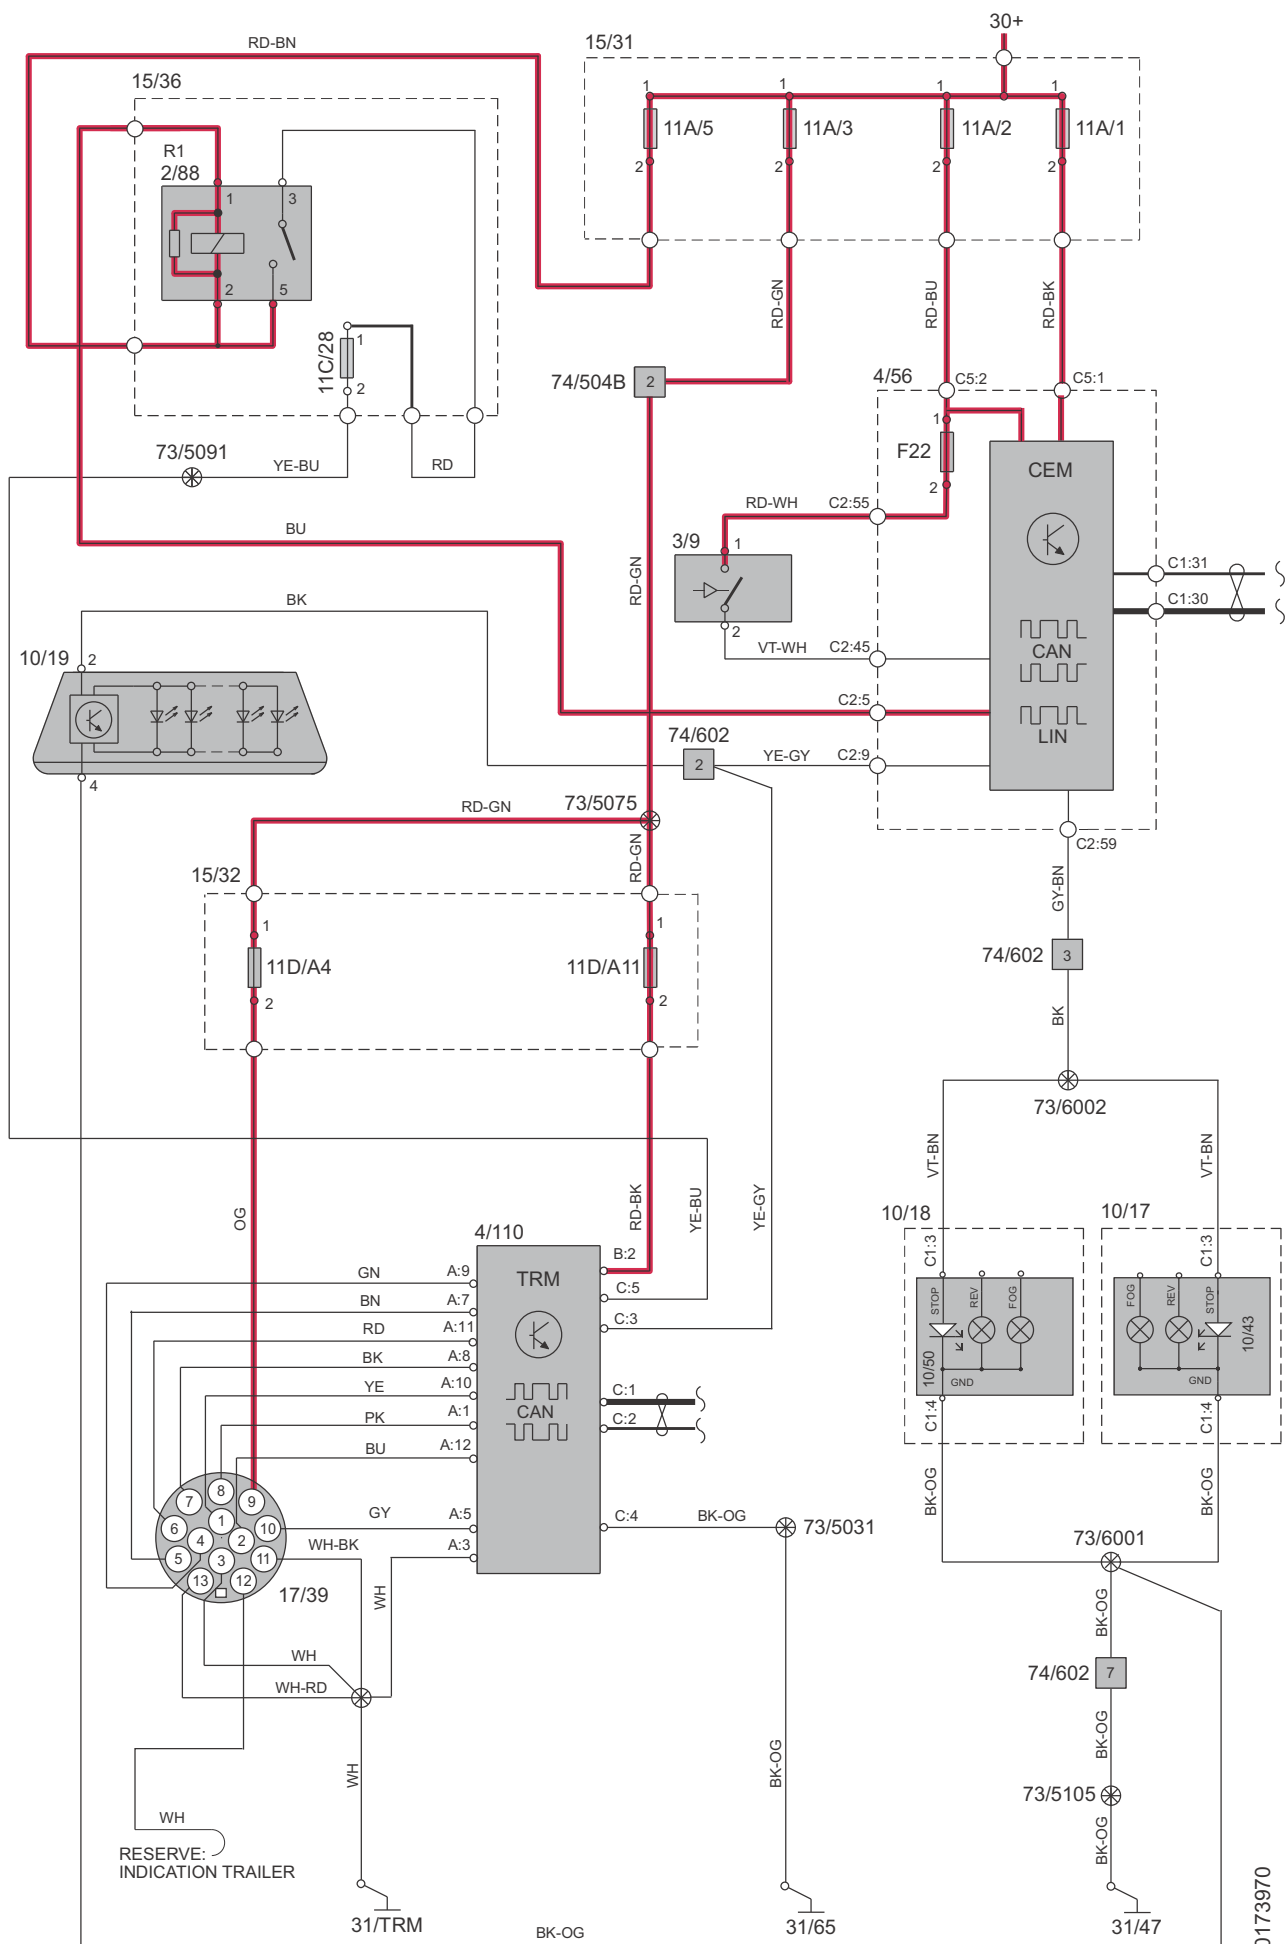


Group 37 Wiring and fuses, Accessories **Cable harness towbar/tow hitch 13-pin S80**

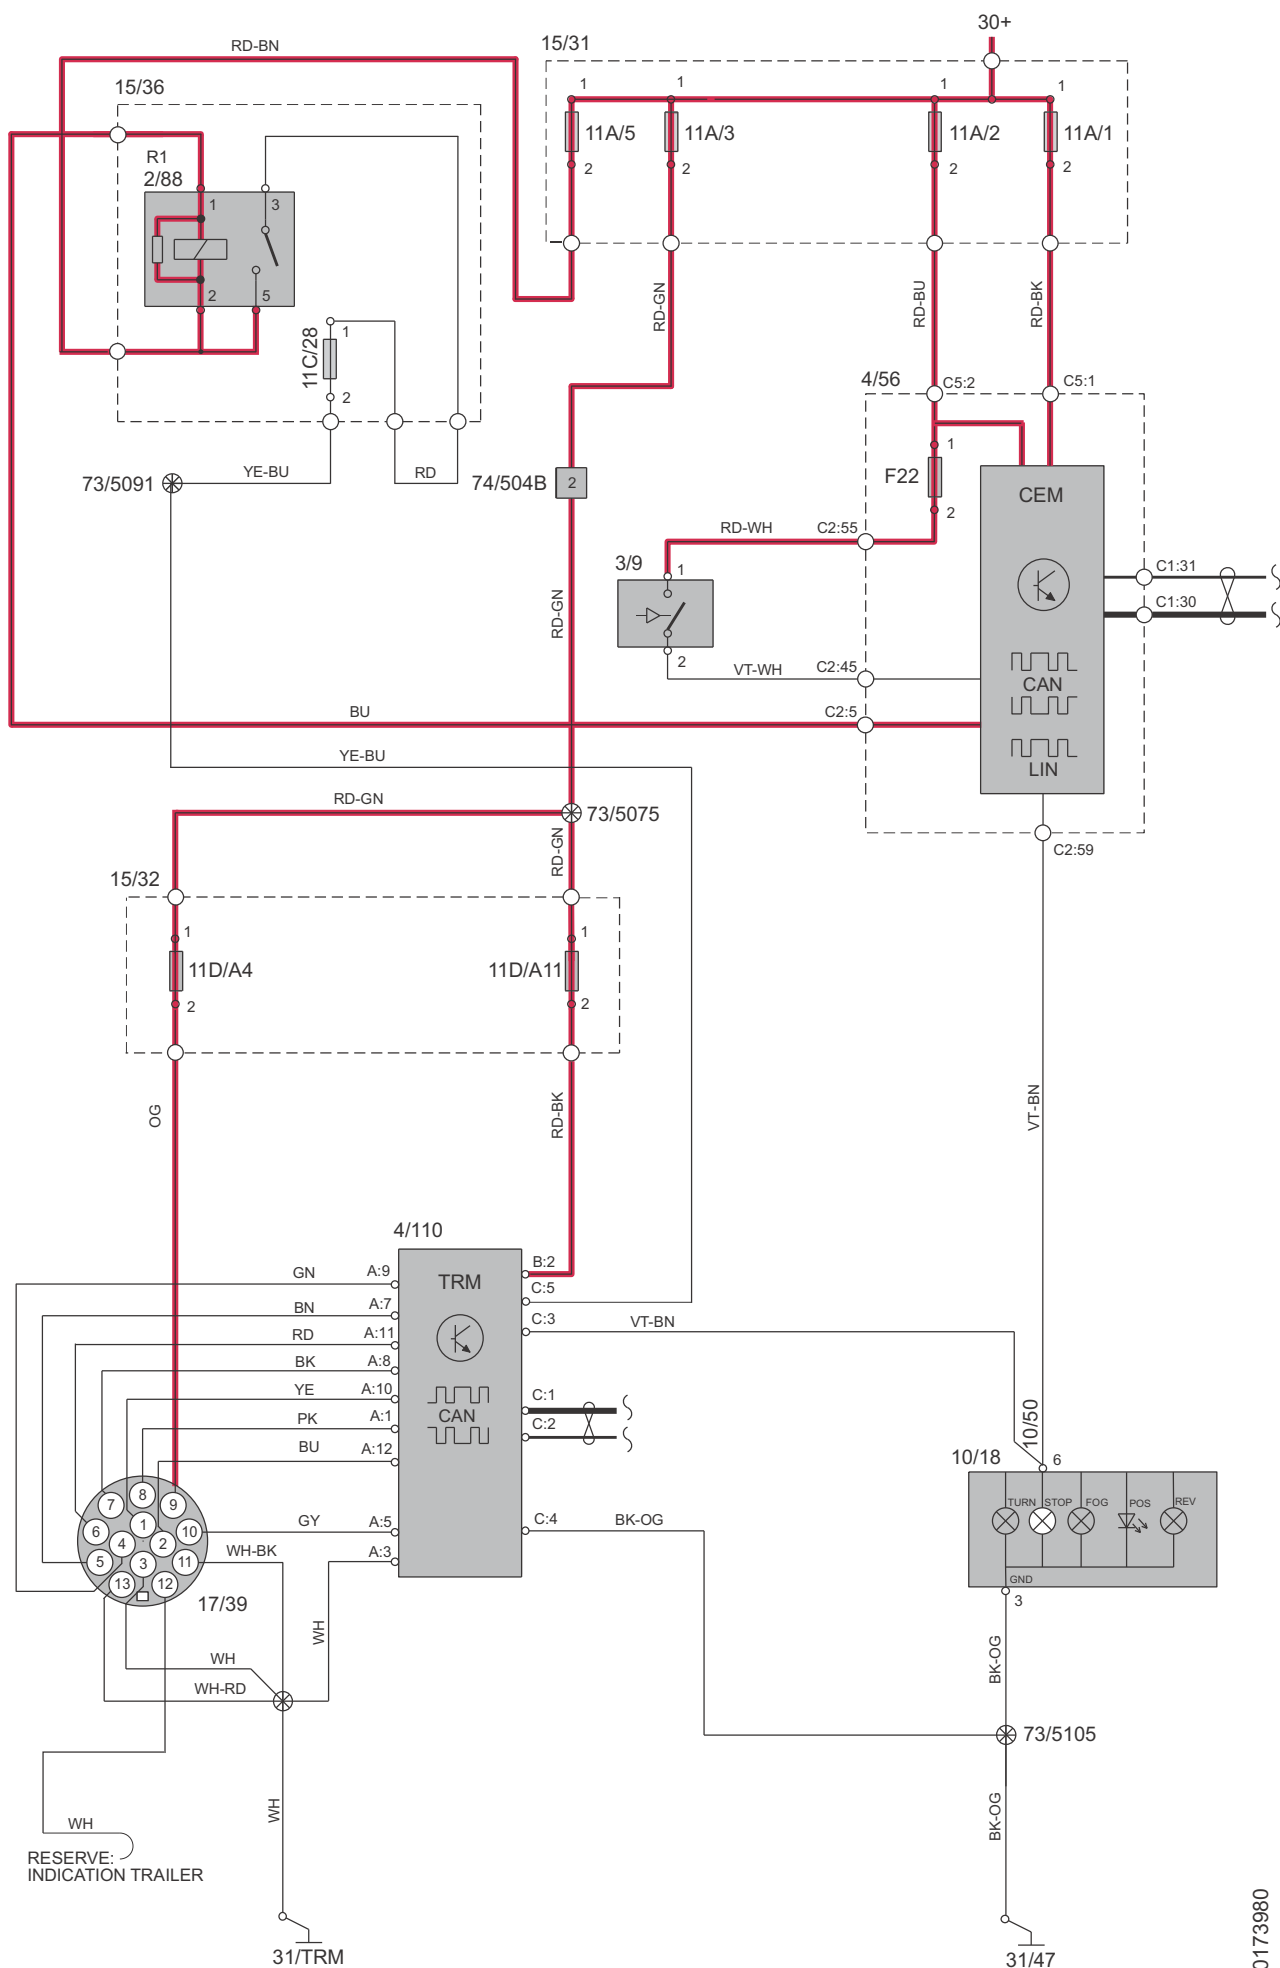


Group 37 Wiring and fuses, Accessories

Accessory USB unit (AUU)

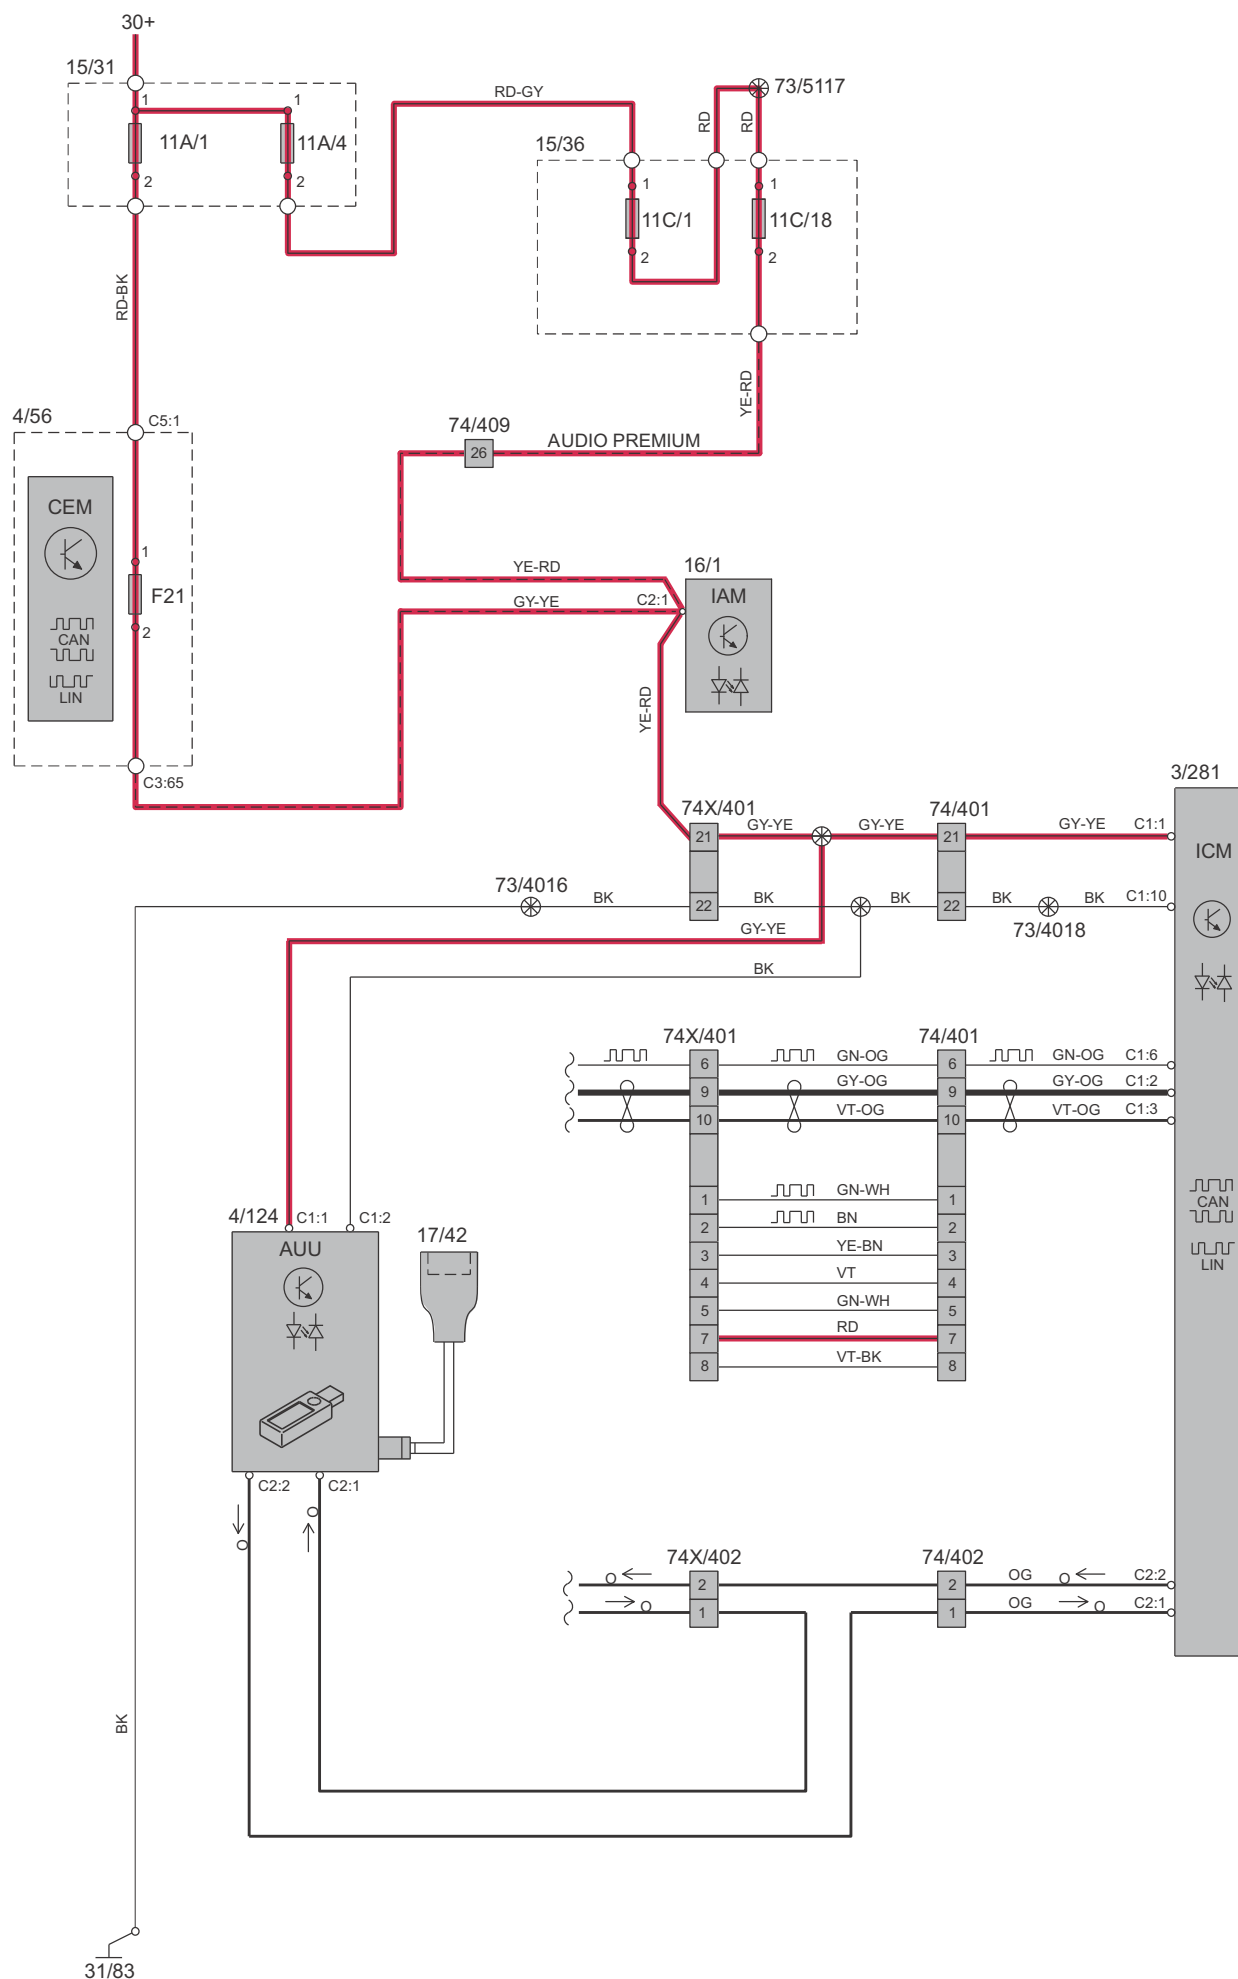

Group 38 Instruments


Seat belt reminder

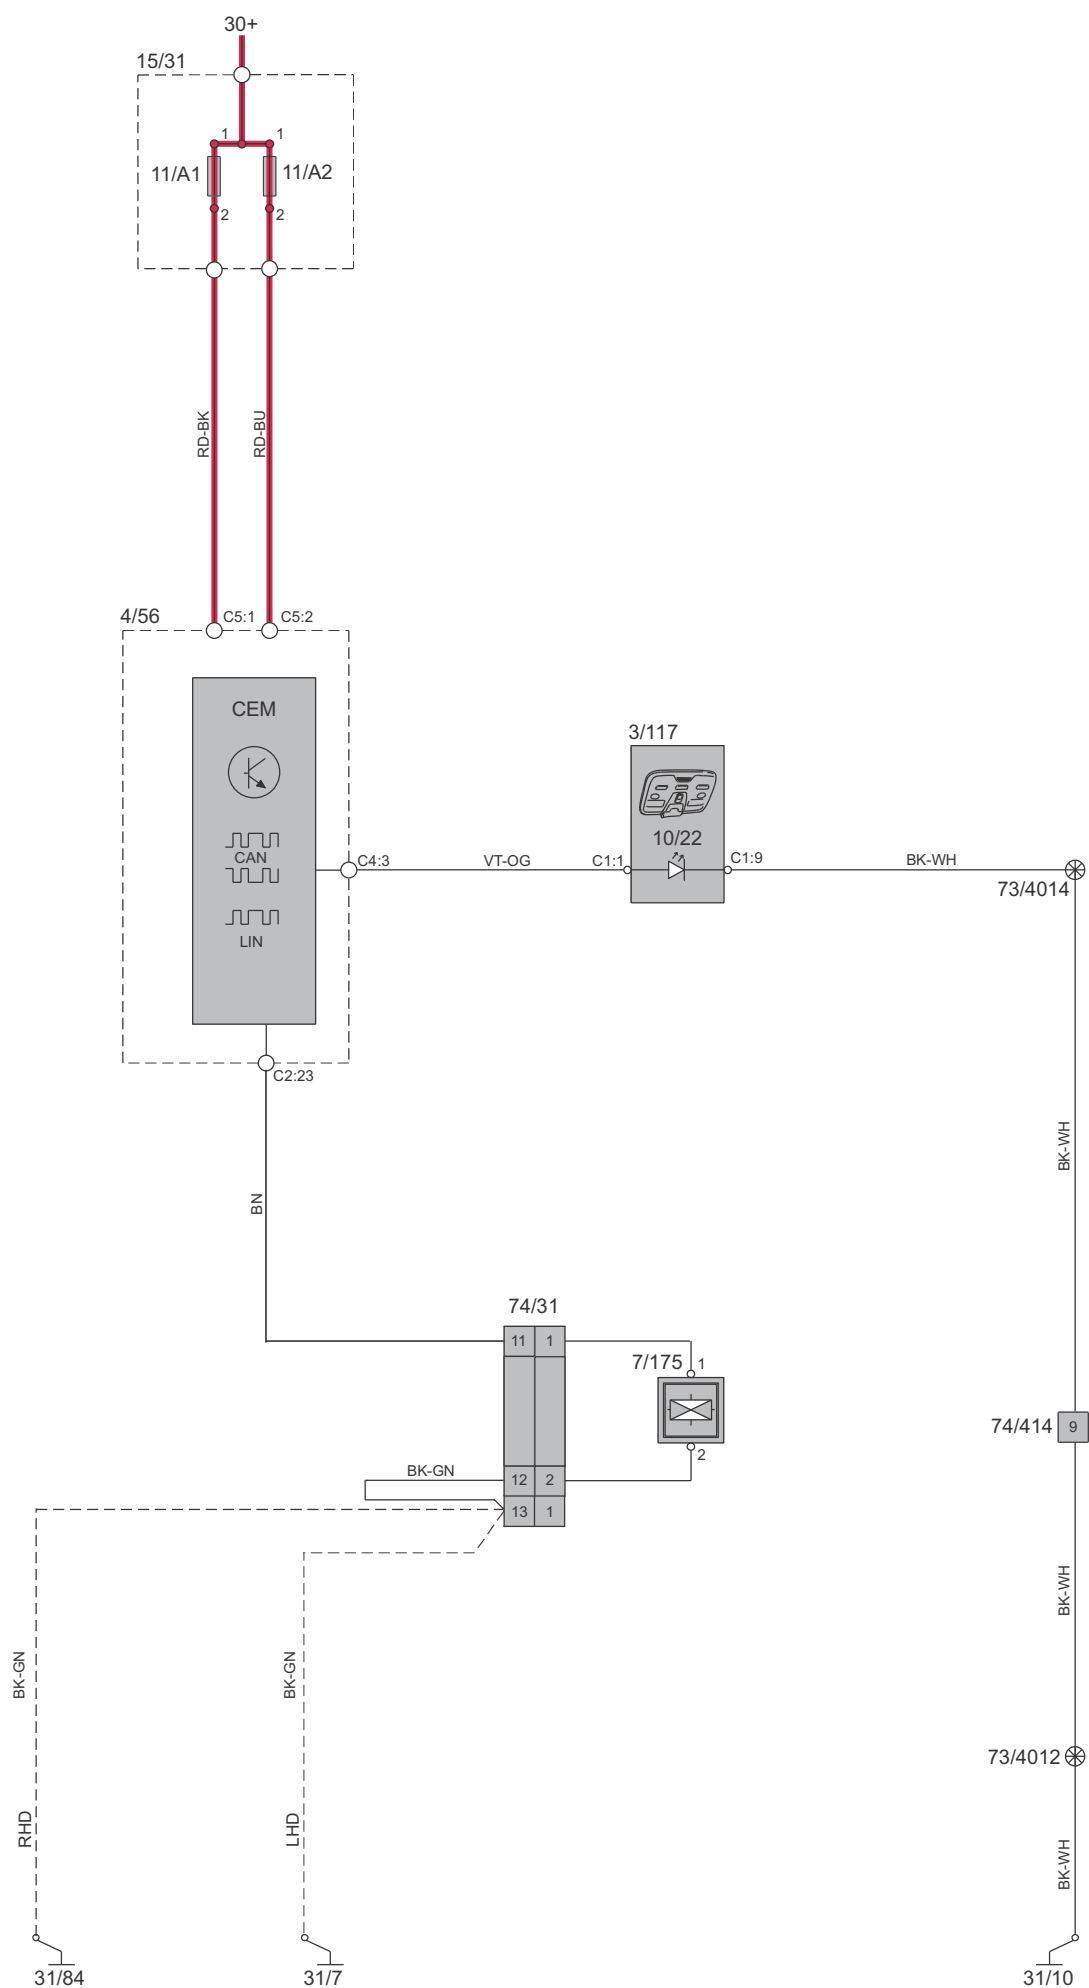

D00085


Group 38 Instruments

Driver information module

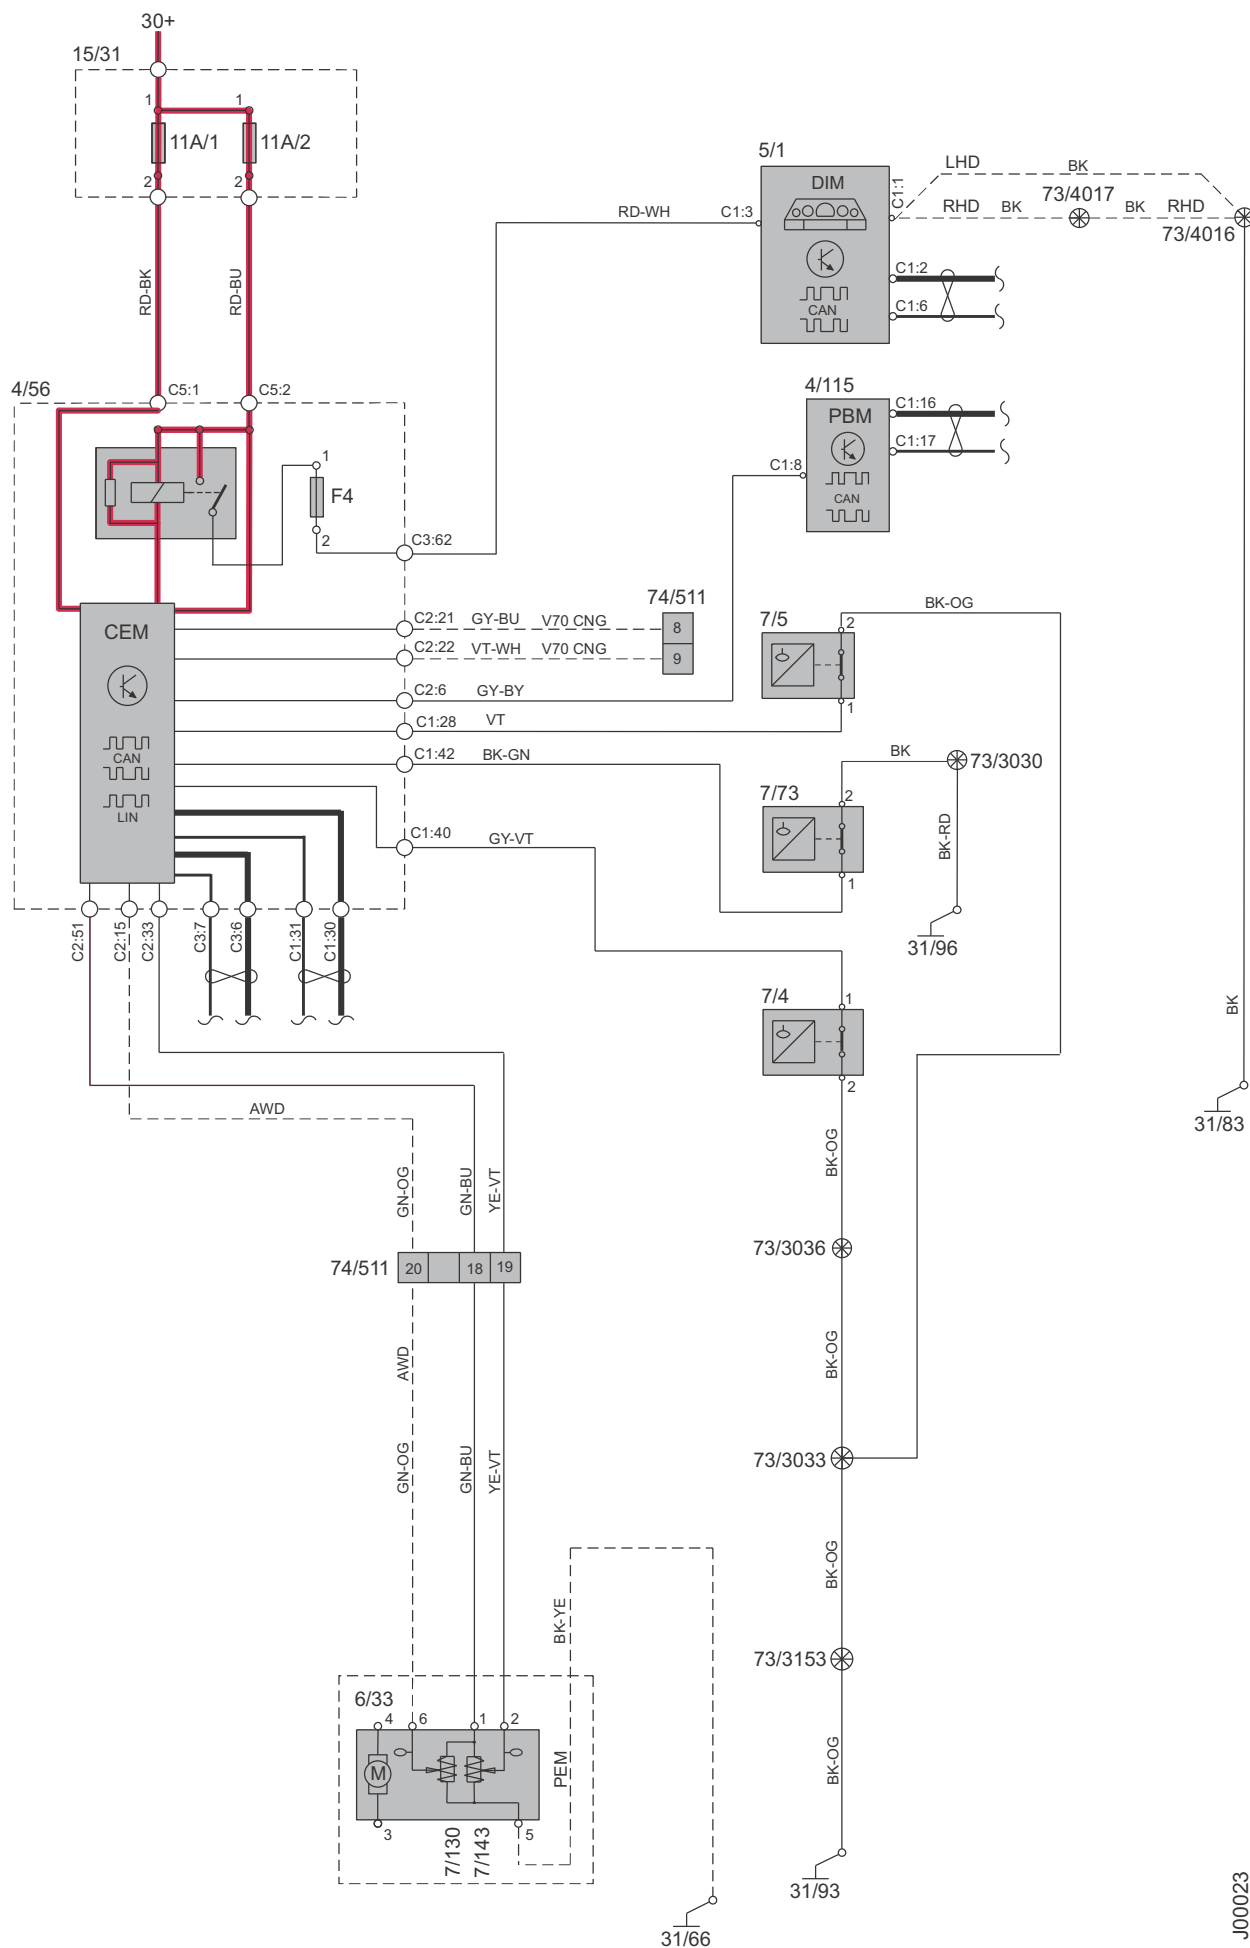


Group 38 Instruments

Analog clock

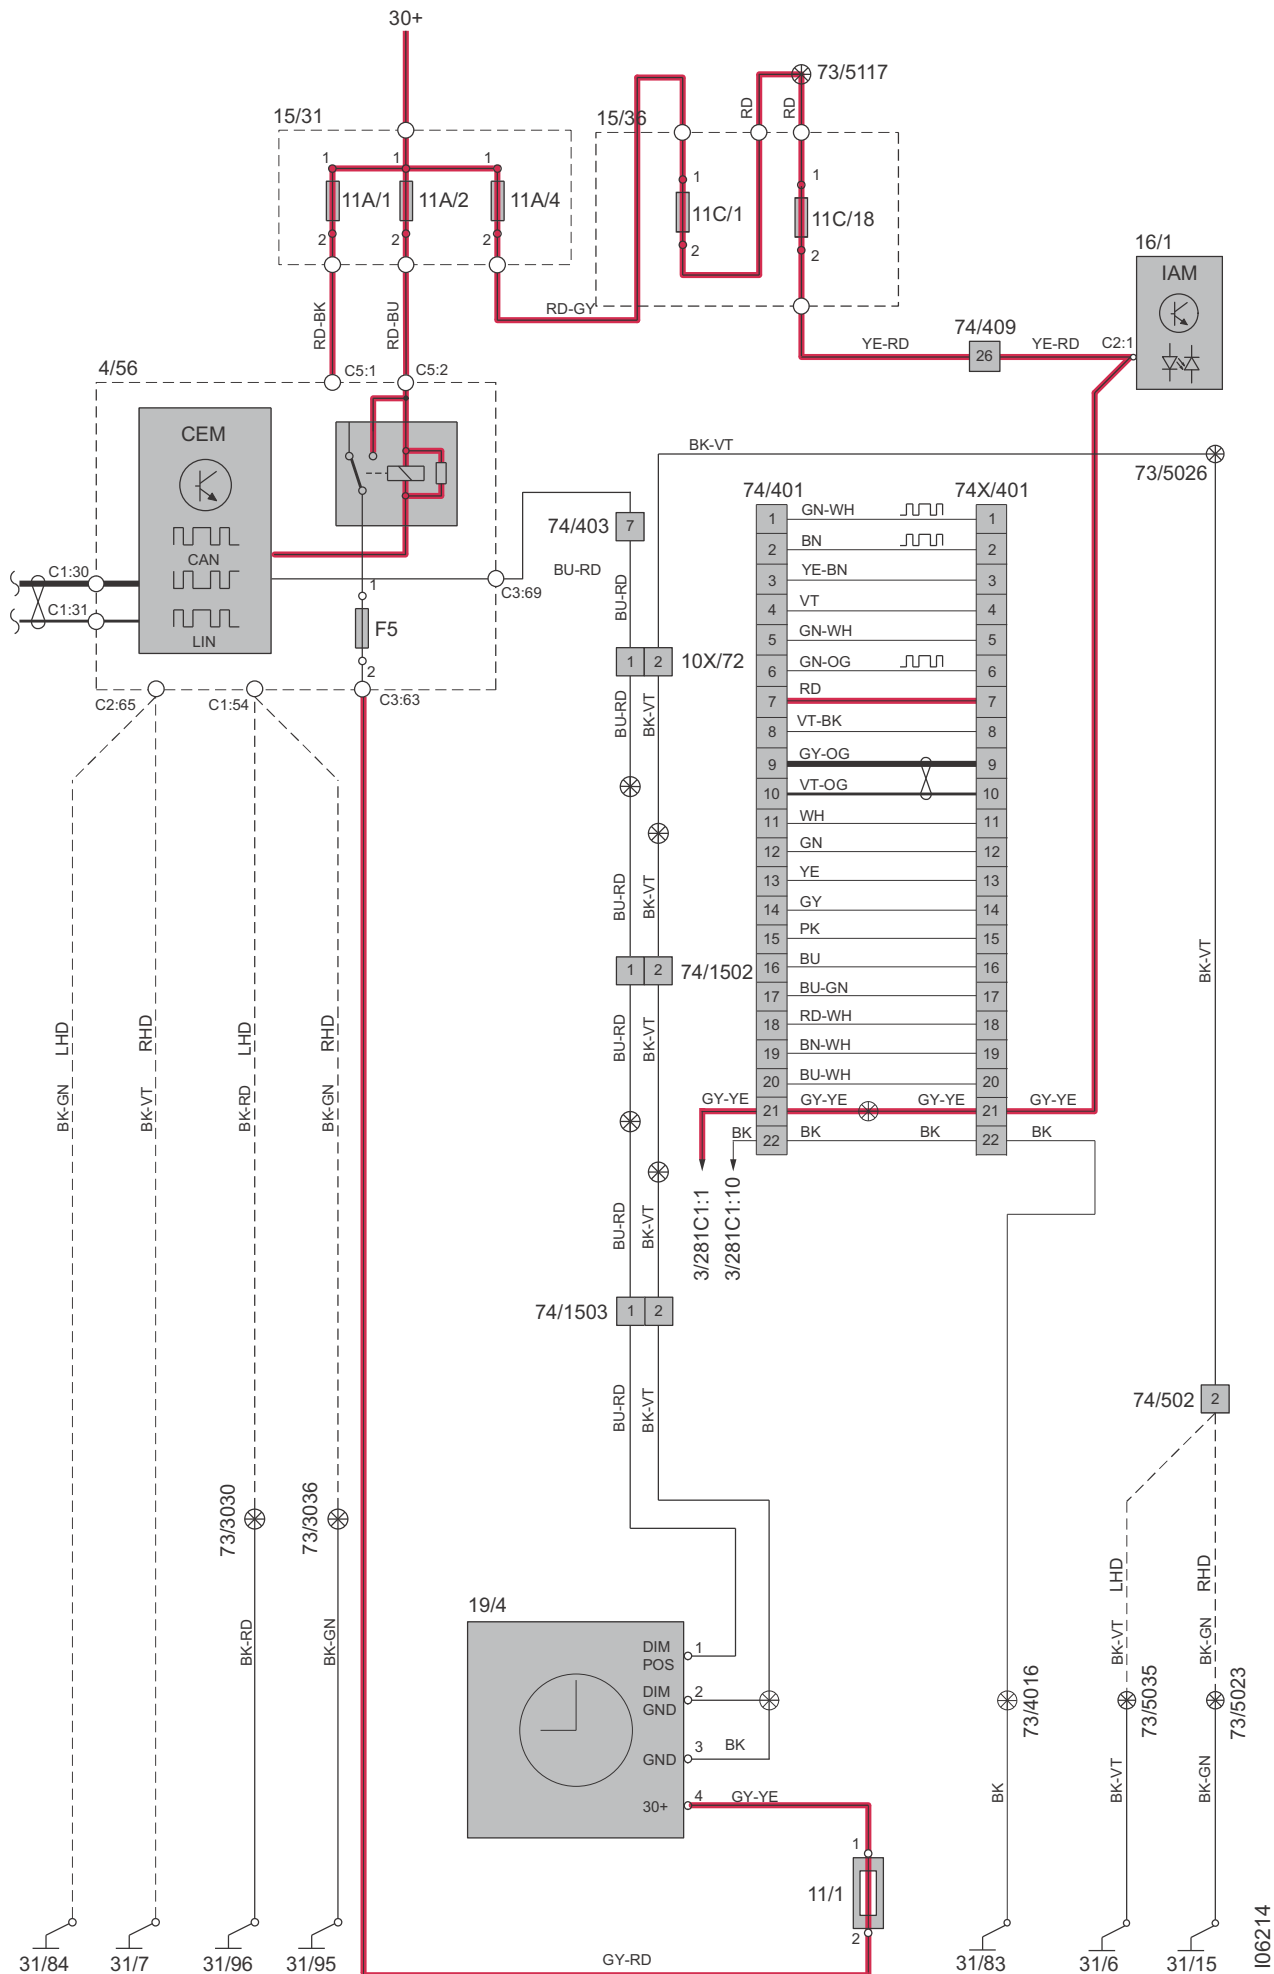


Group 39 Other, Accessories


TV

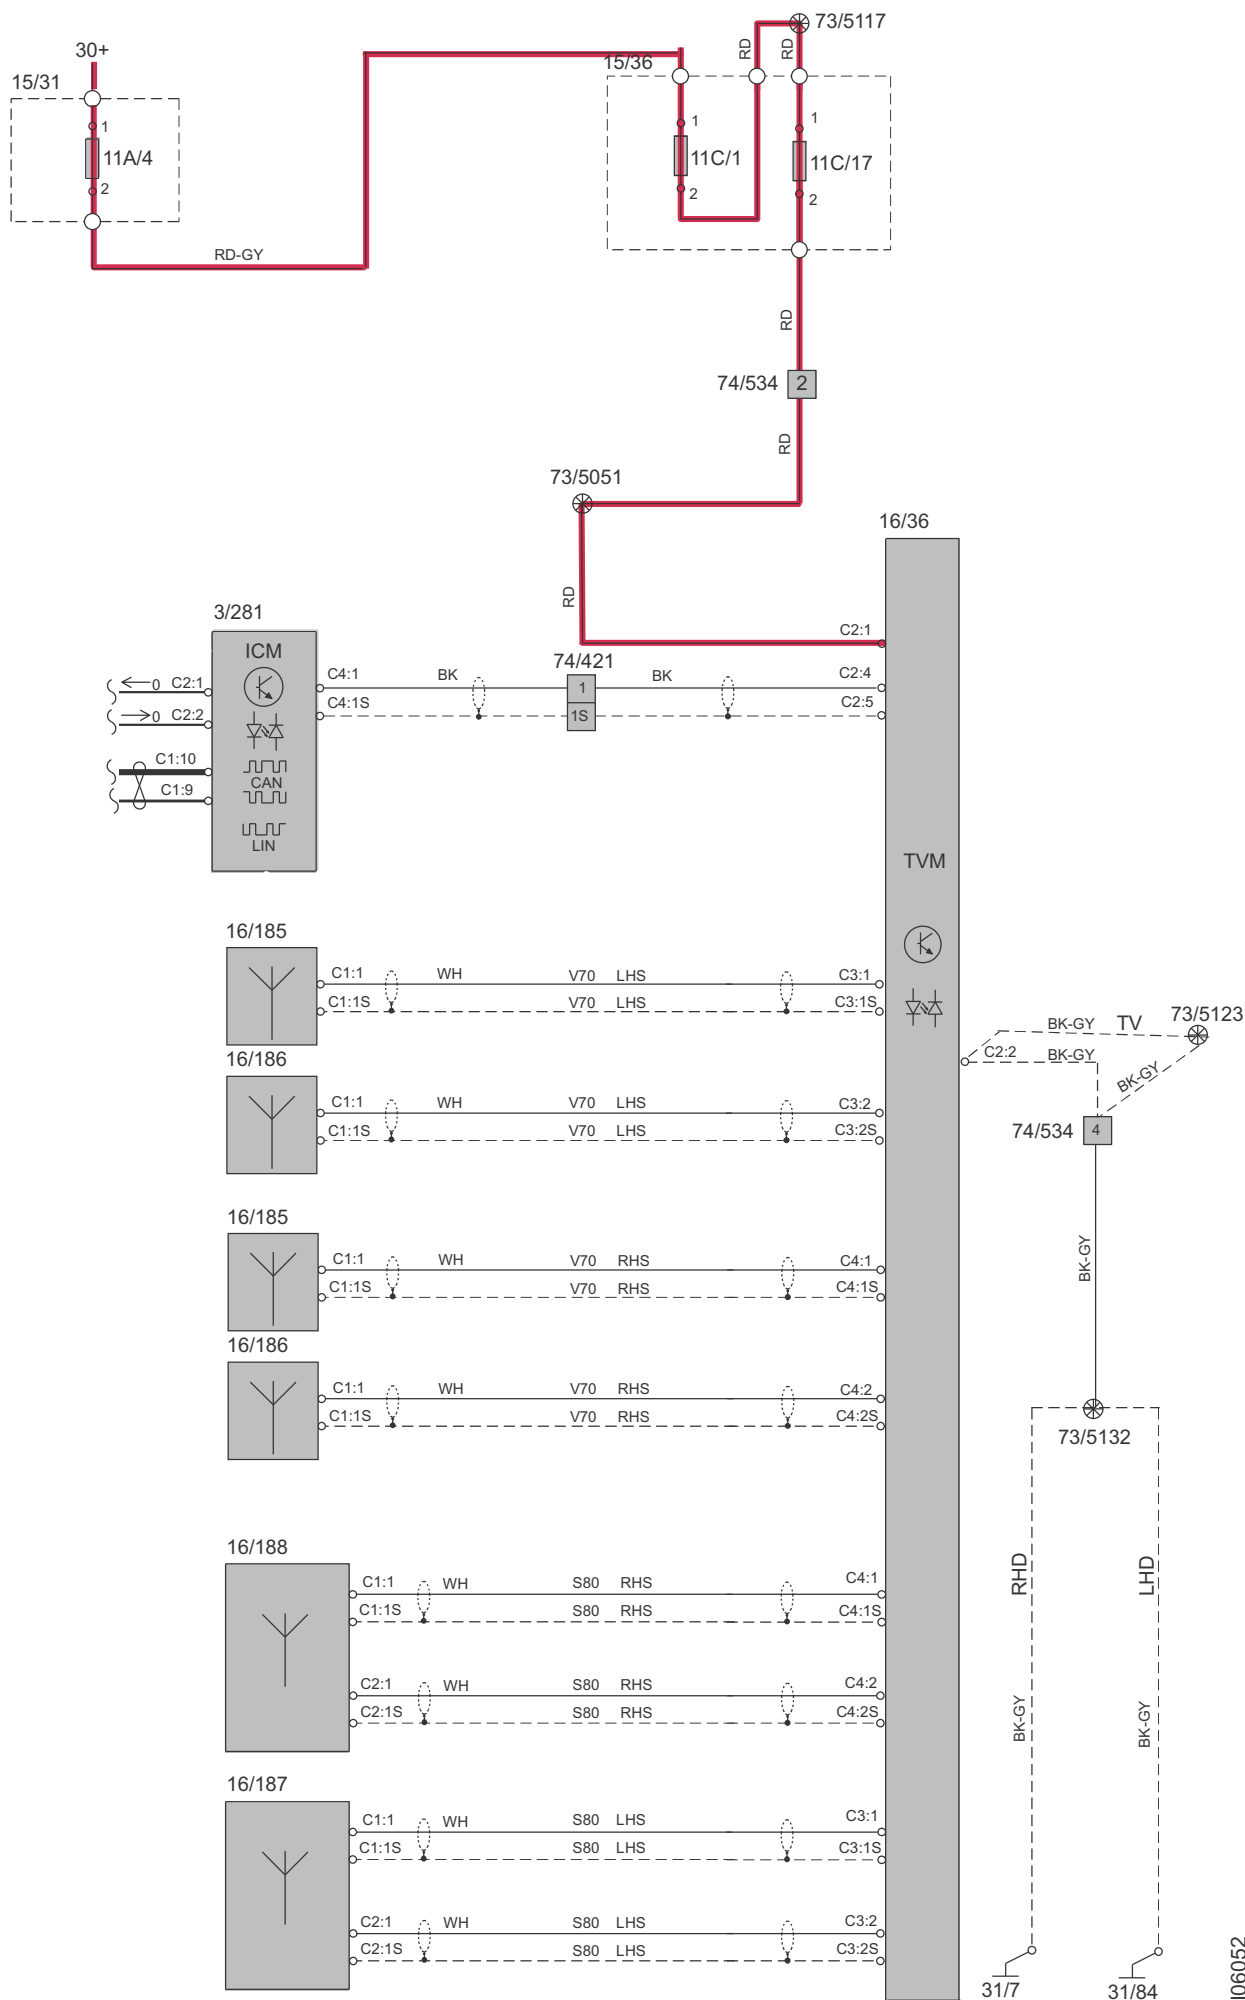

Group 39 Other
Cellular phone 1:2

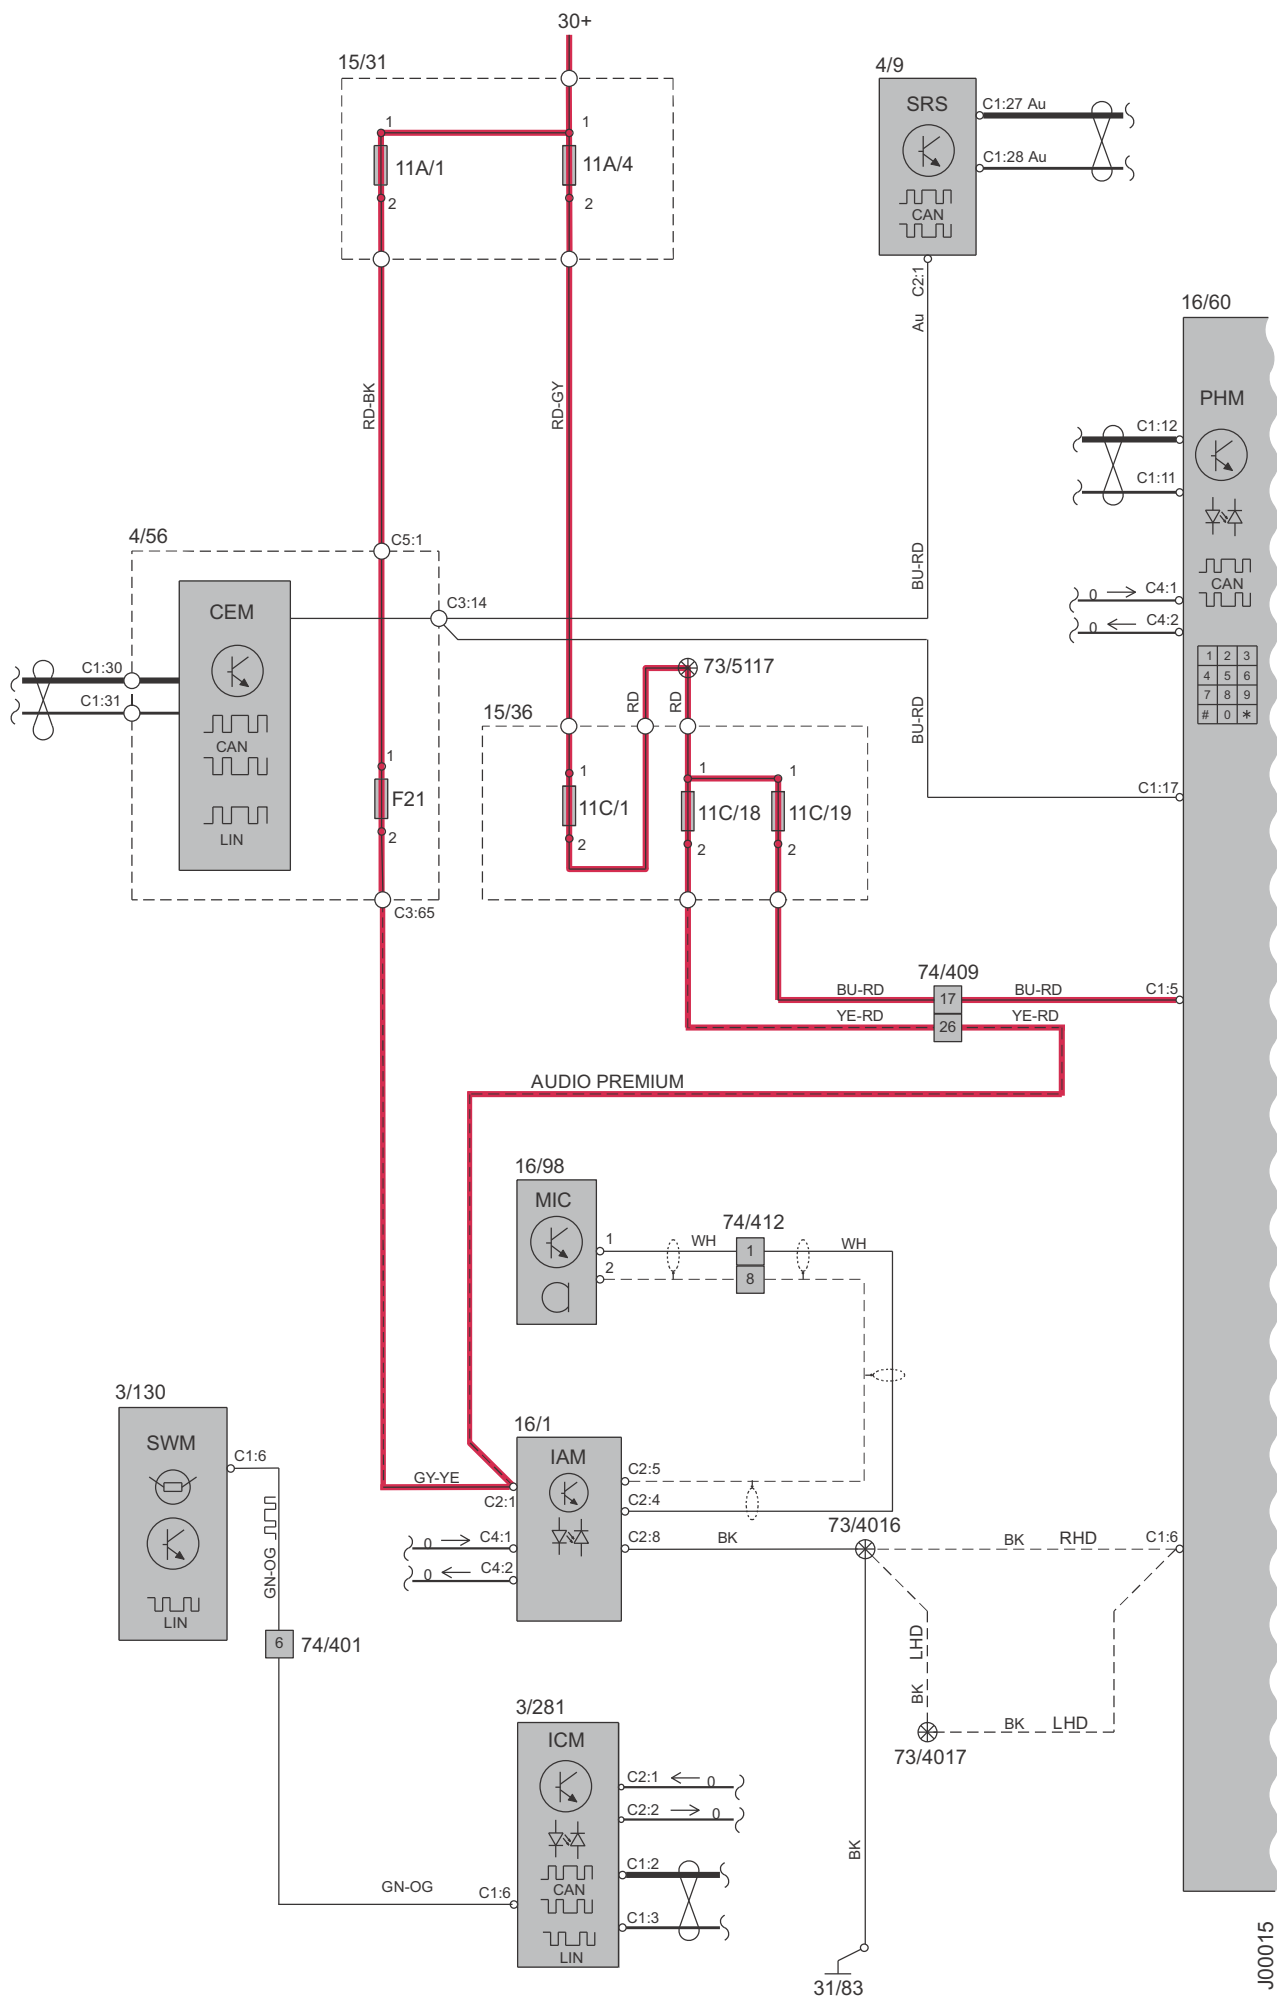

Group 39 Other Cellular phone 2:2

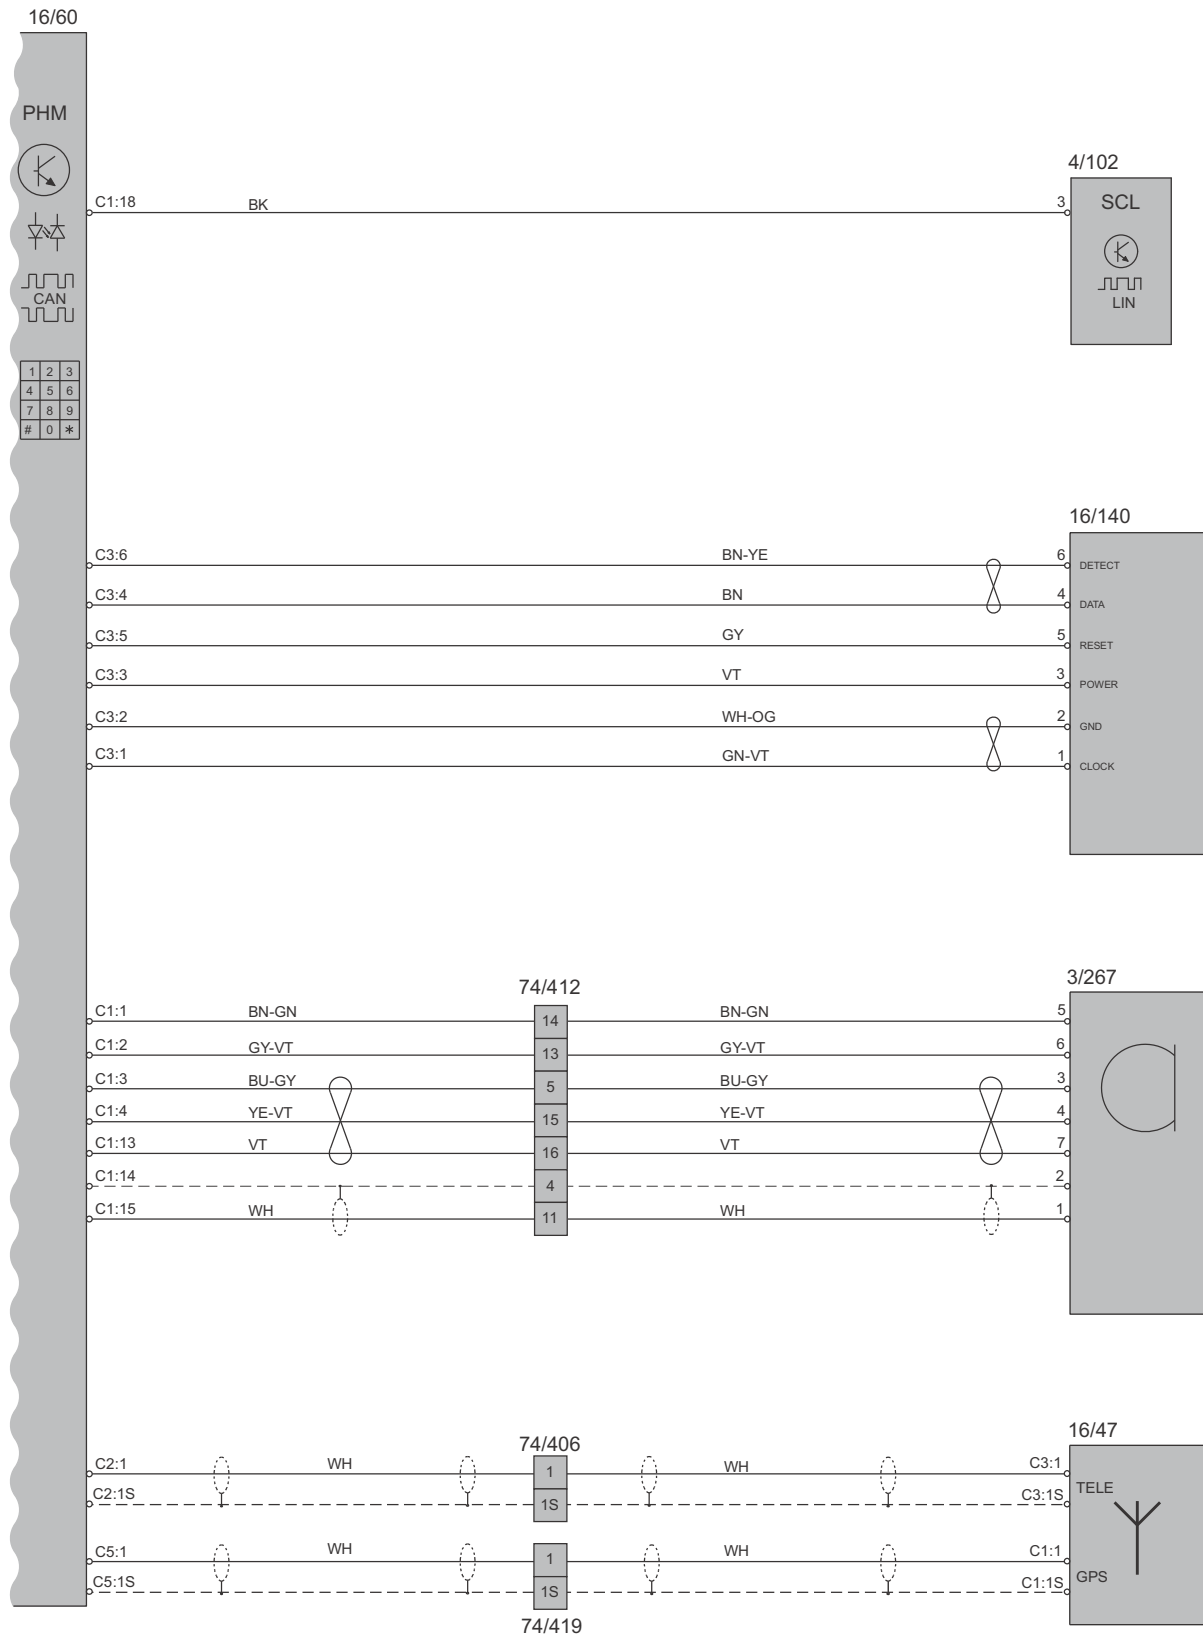


I06044

Group 39 Other
Audio 1:2




Group 39 Other Audio 2:2

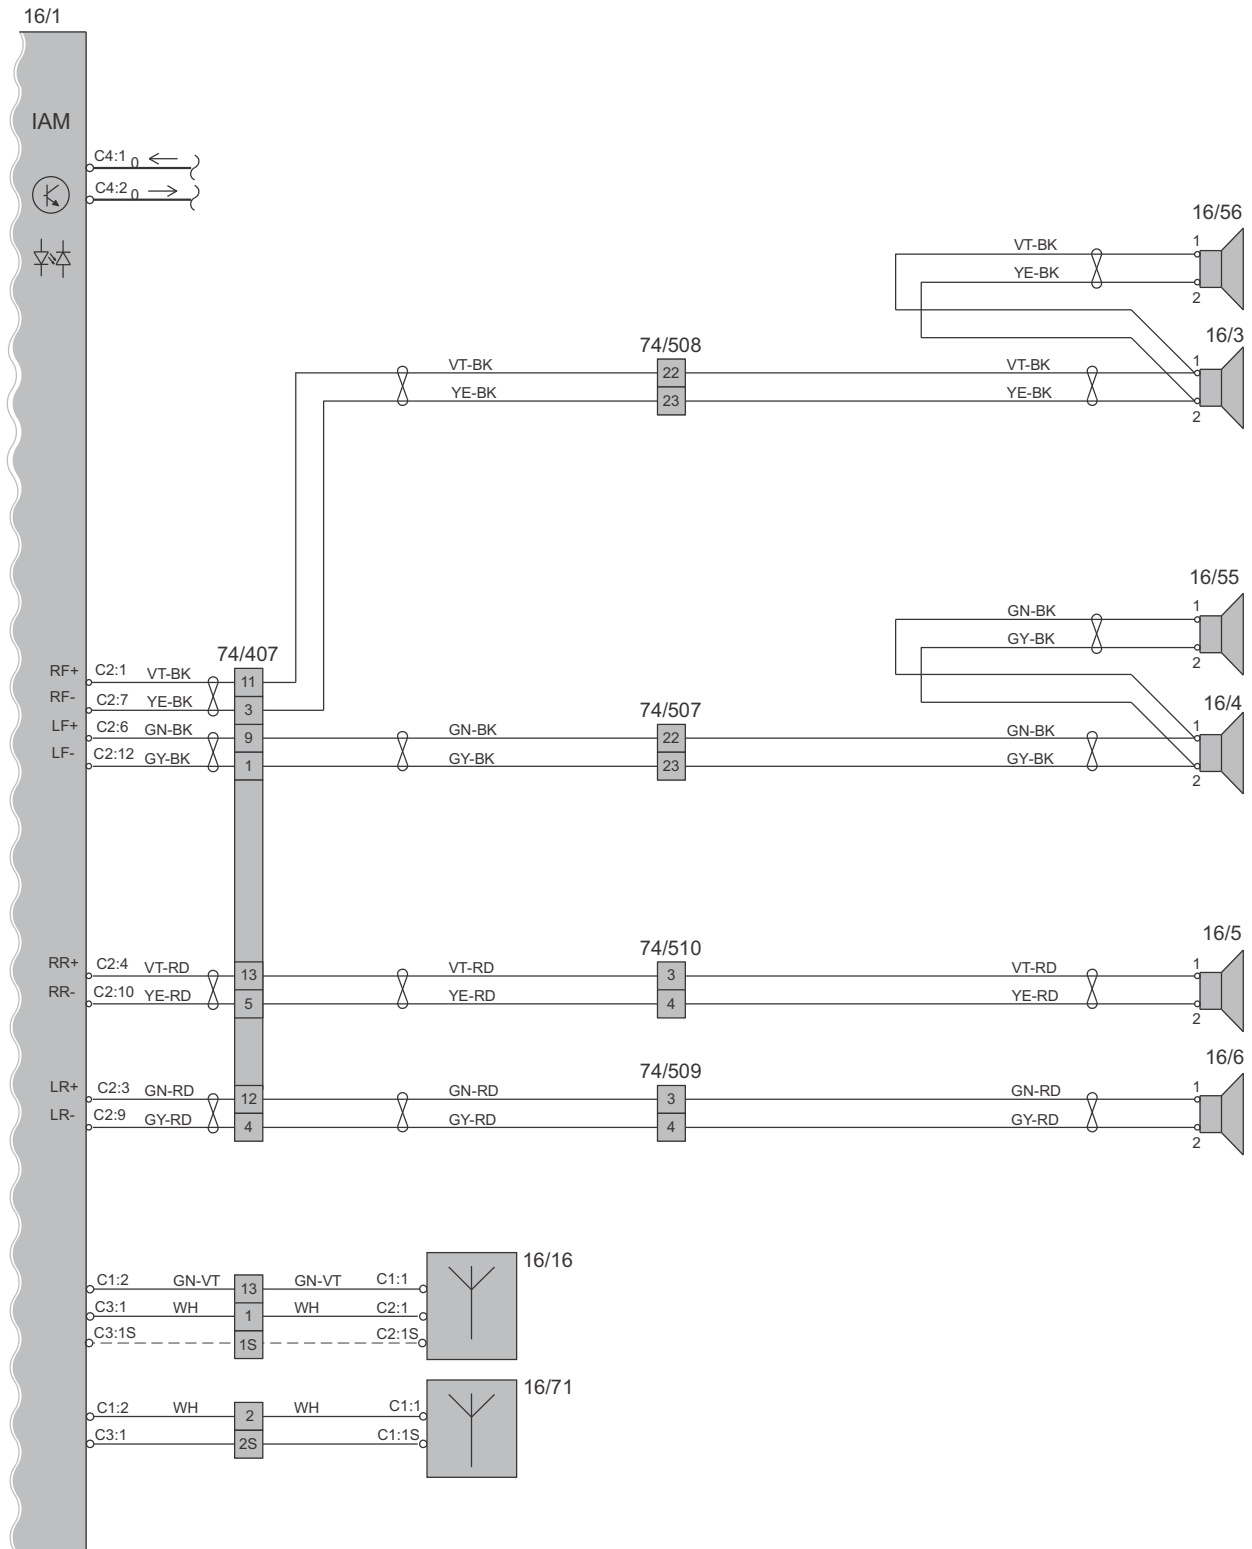


D00048


Group 39 Other Audio Premium 1:3

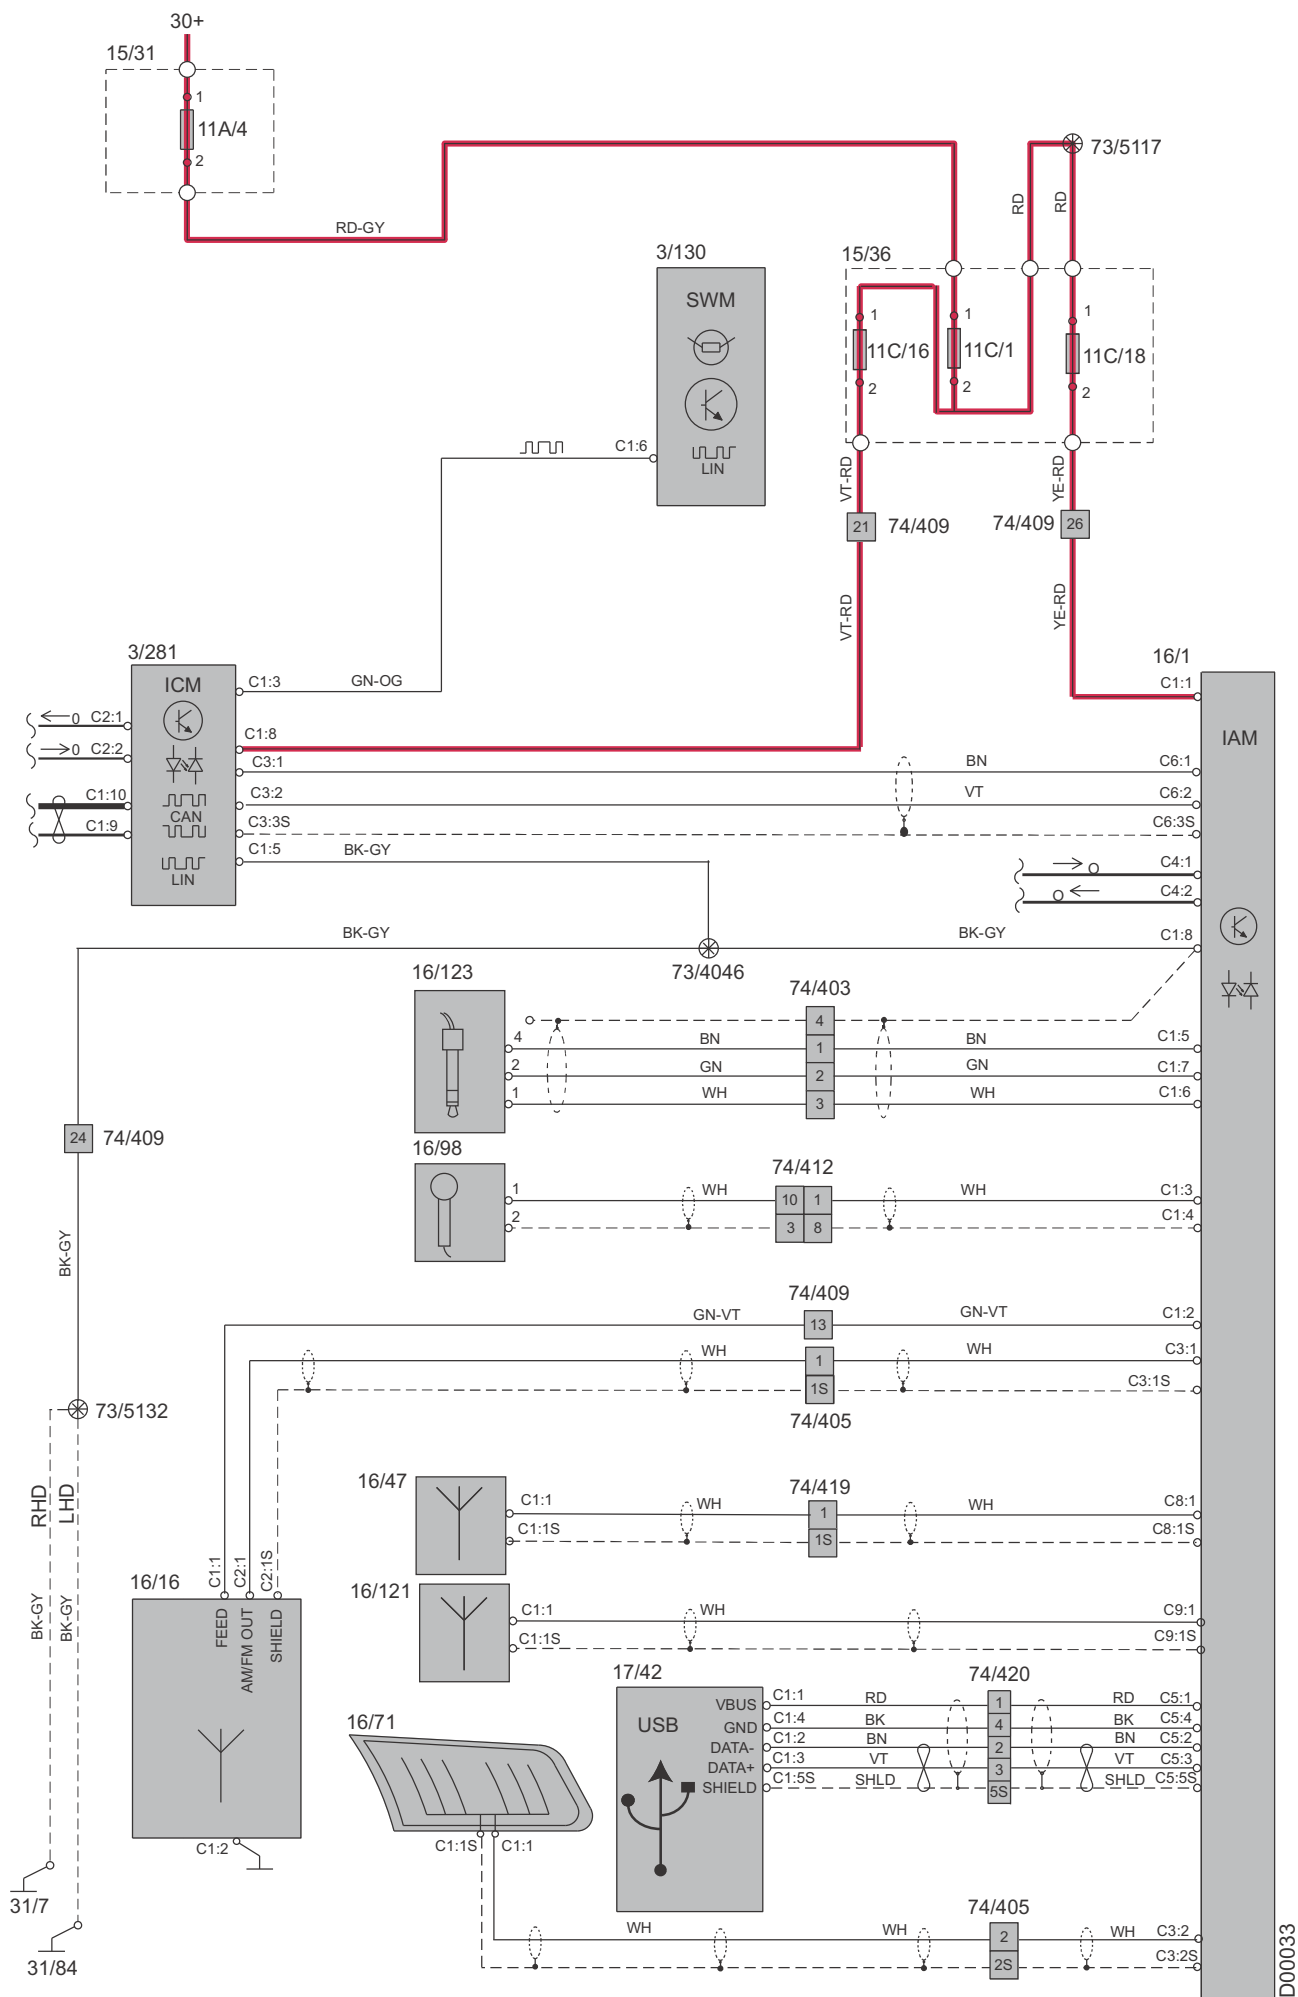

**Group 39 Other
Audio Premium 2:3**

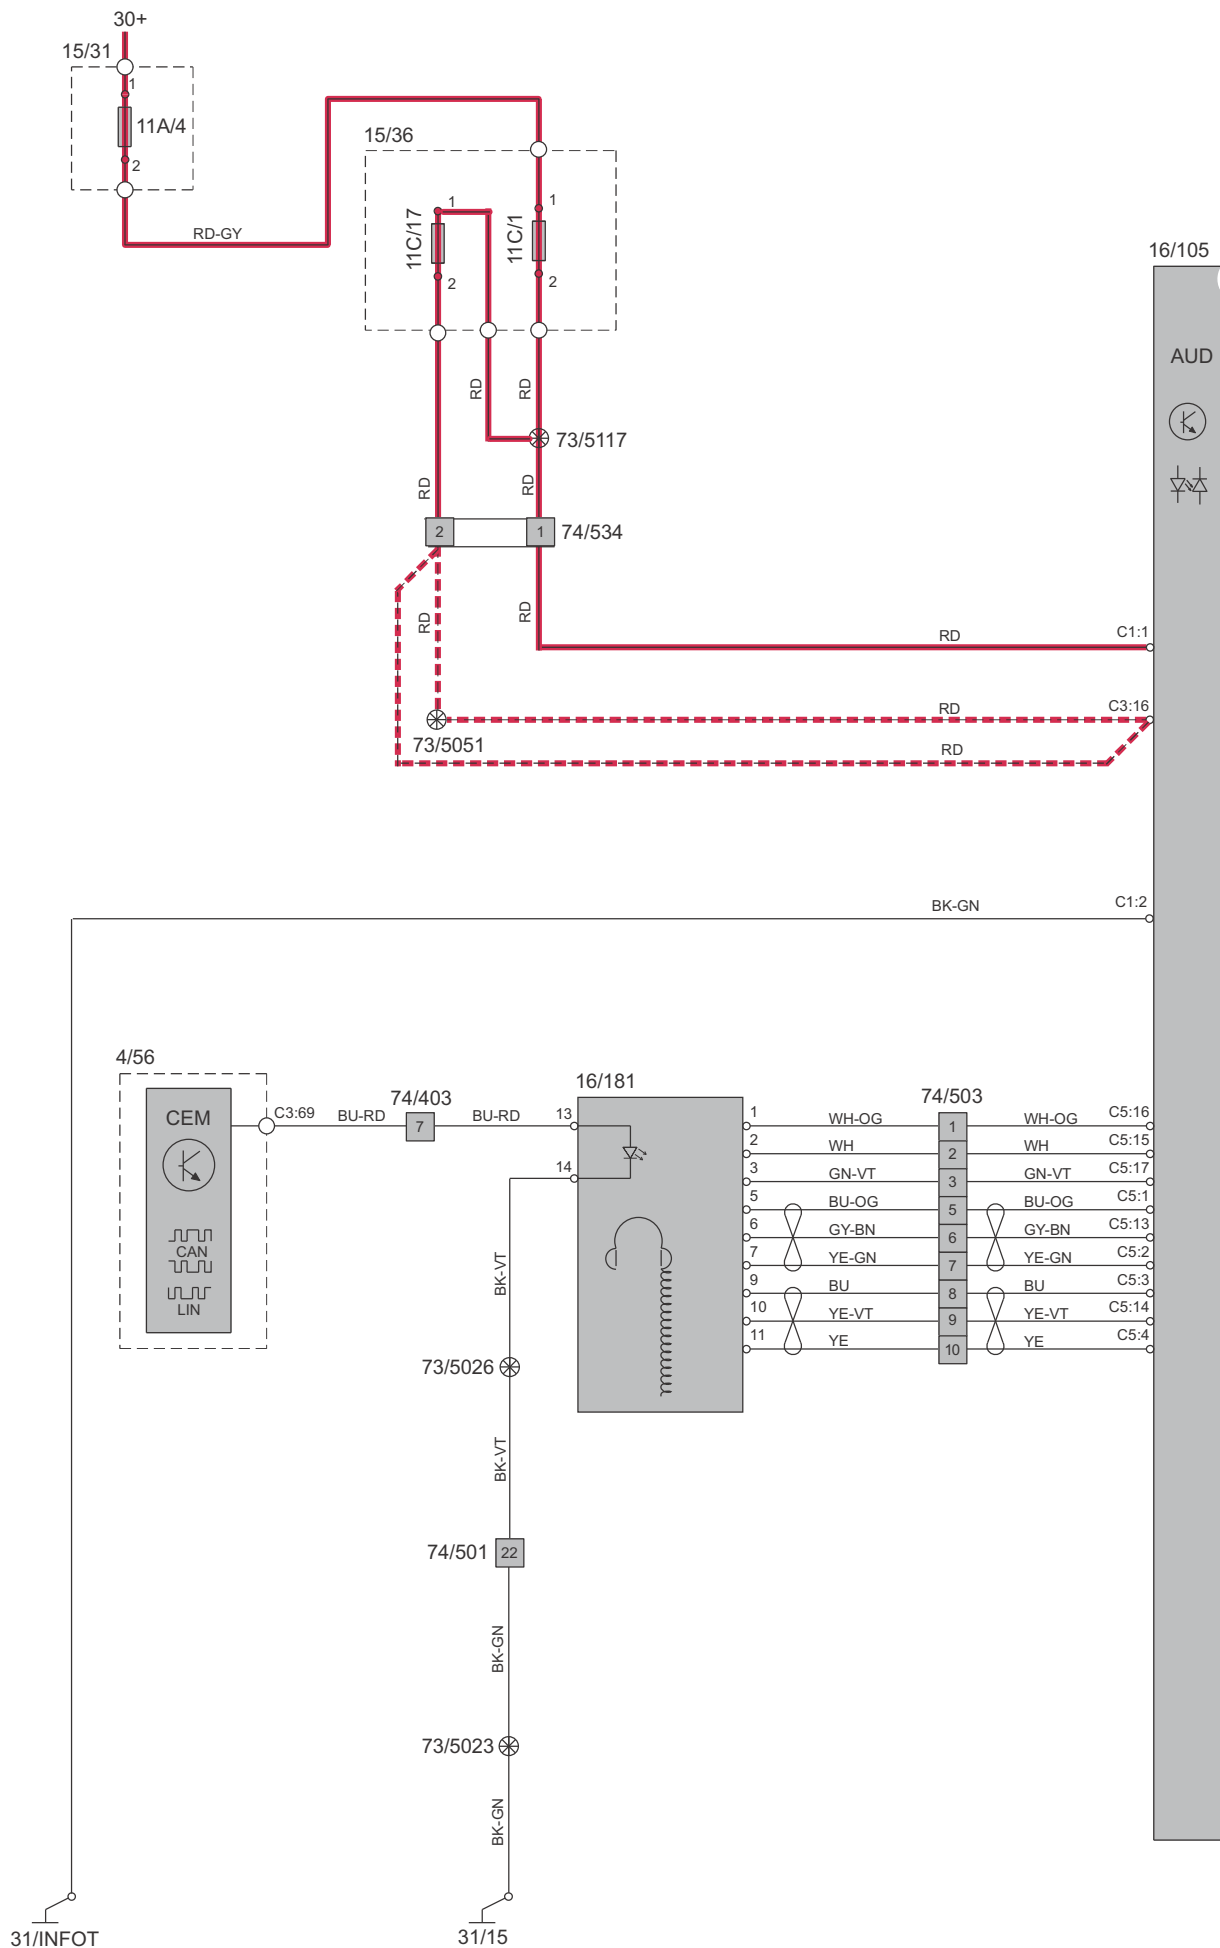


Group 39 Other Audio Premium 3:3

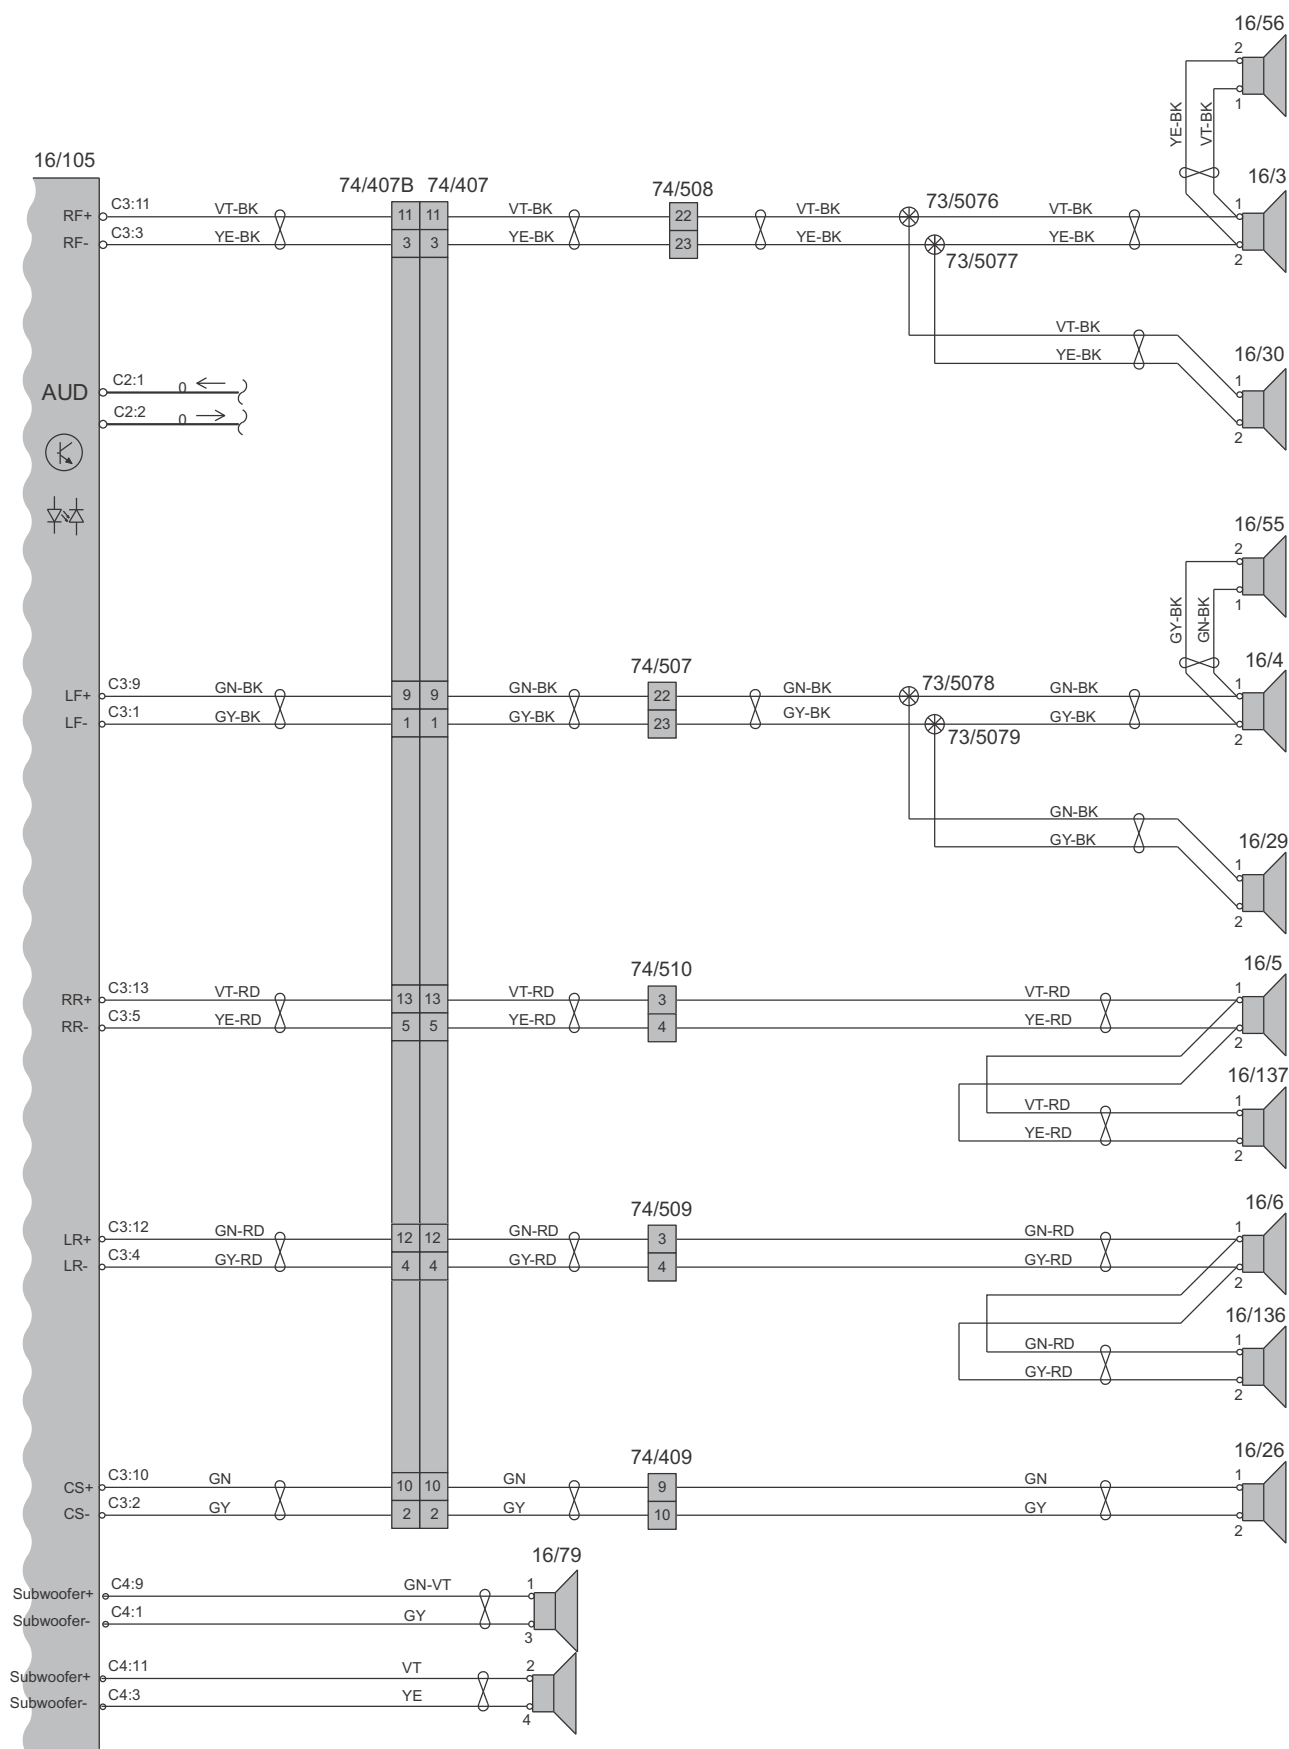


101082


Group 39 Other, Accessories
DAB Radio

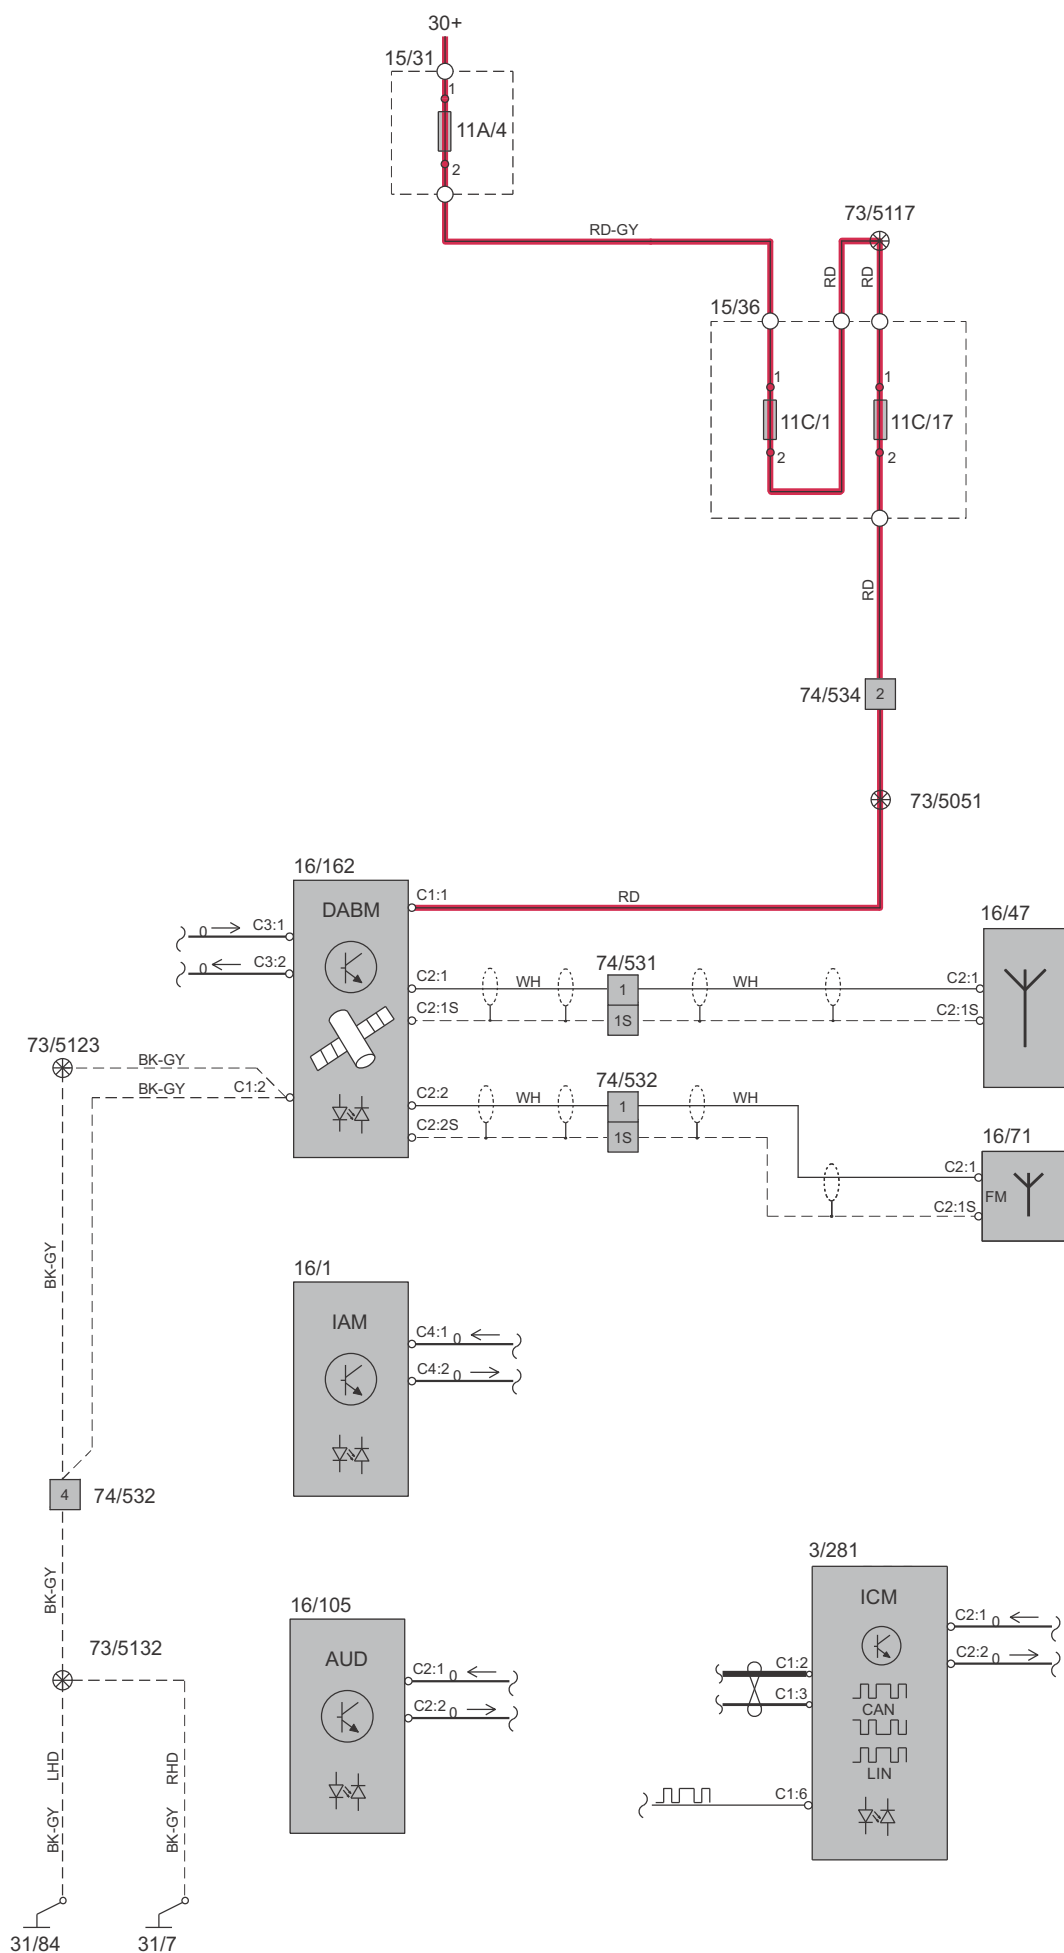

Group 39 Other, Accessories Bluetooth Handsfree

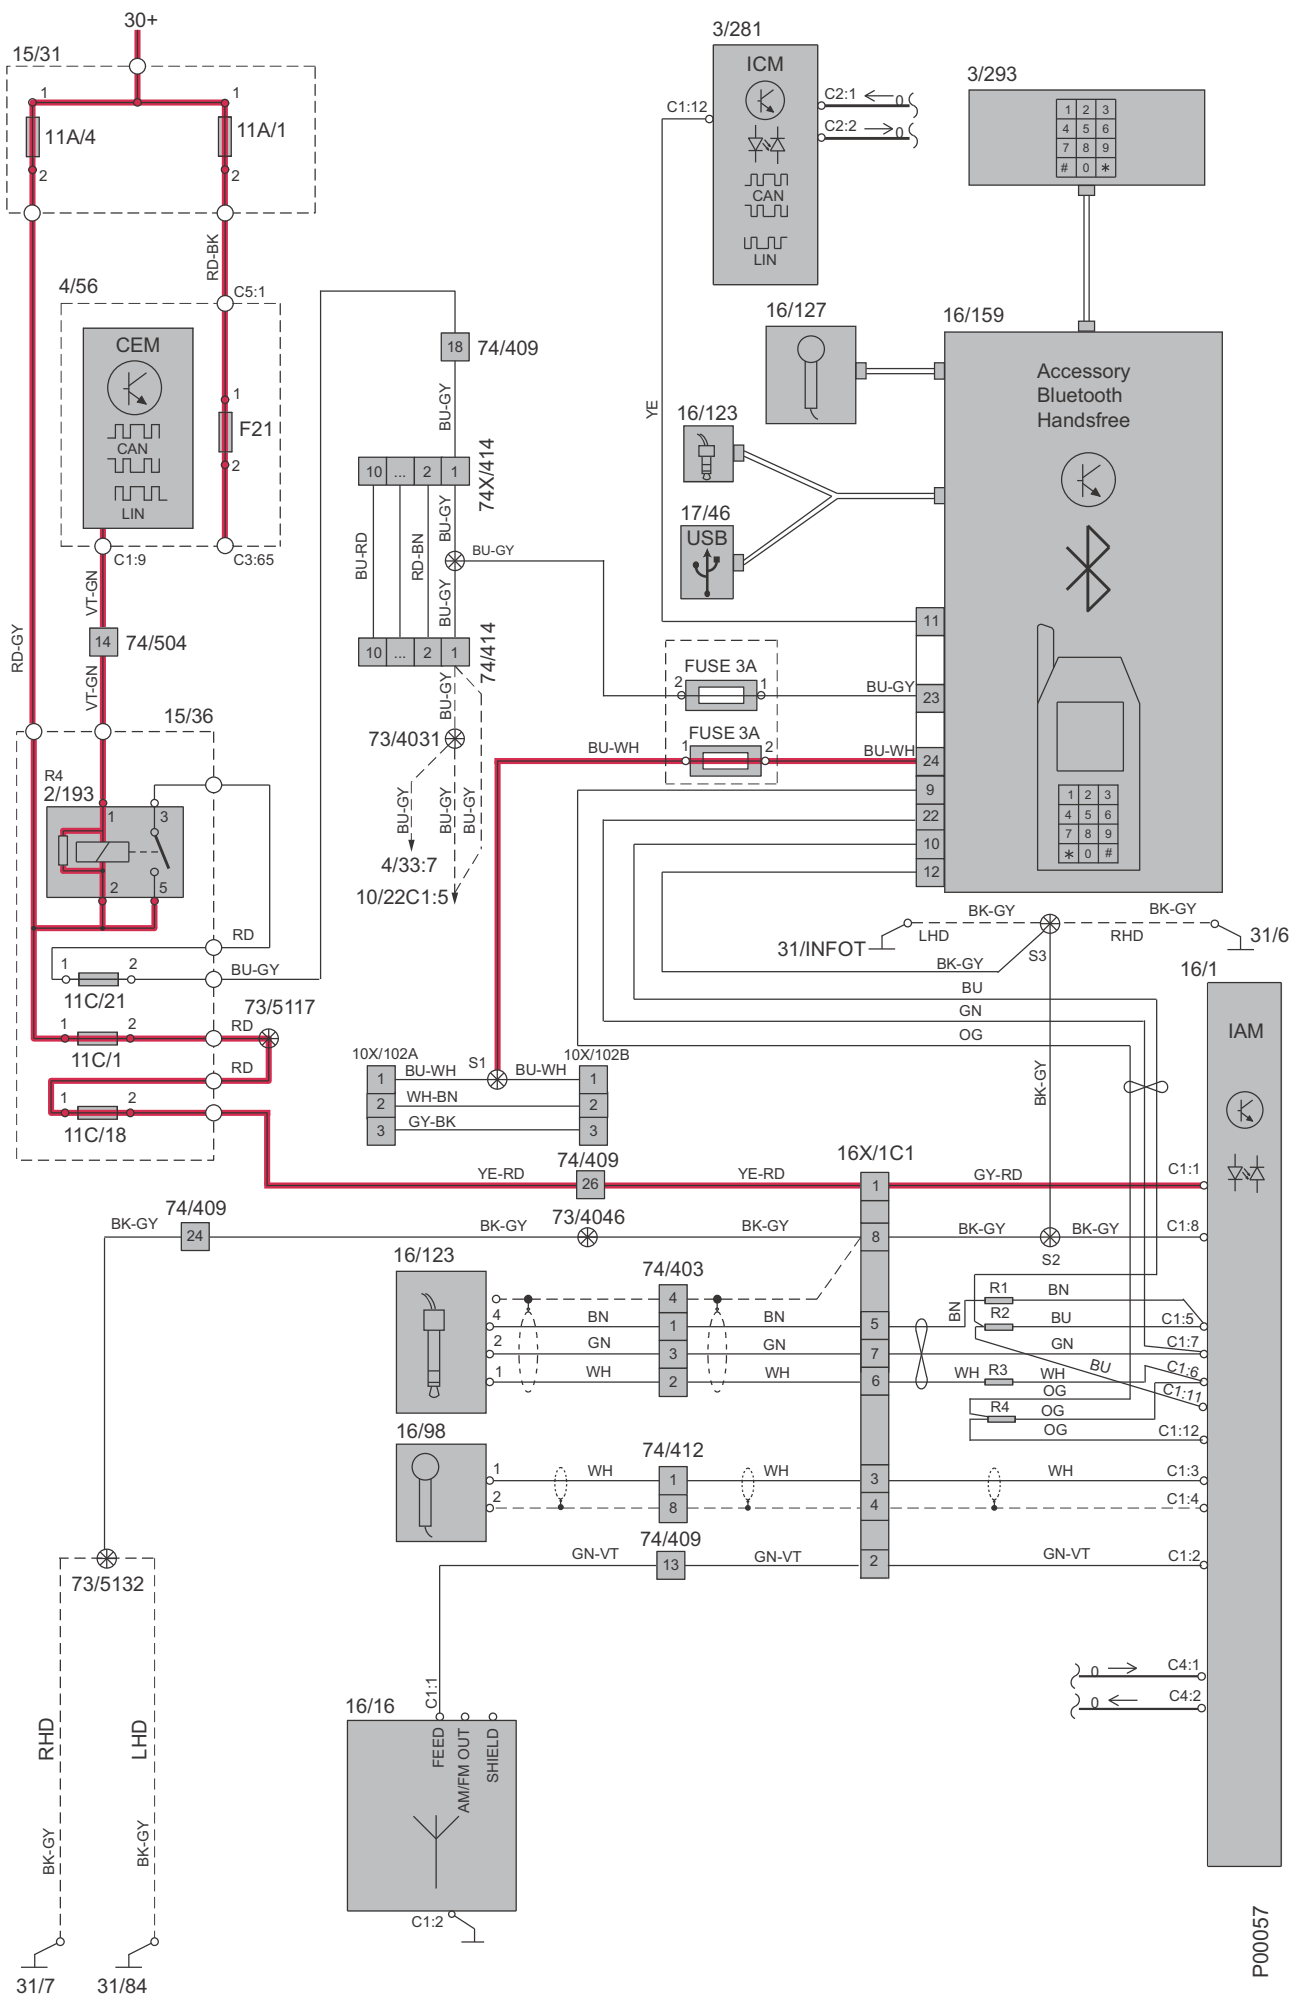


Group 39 Other

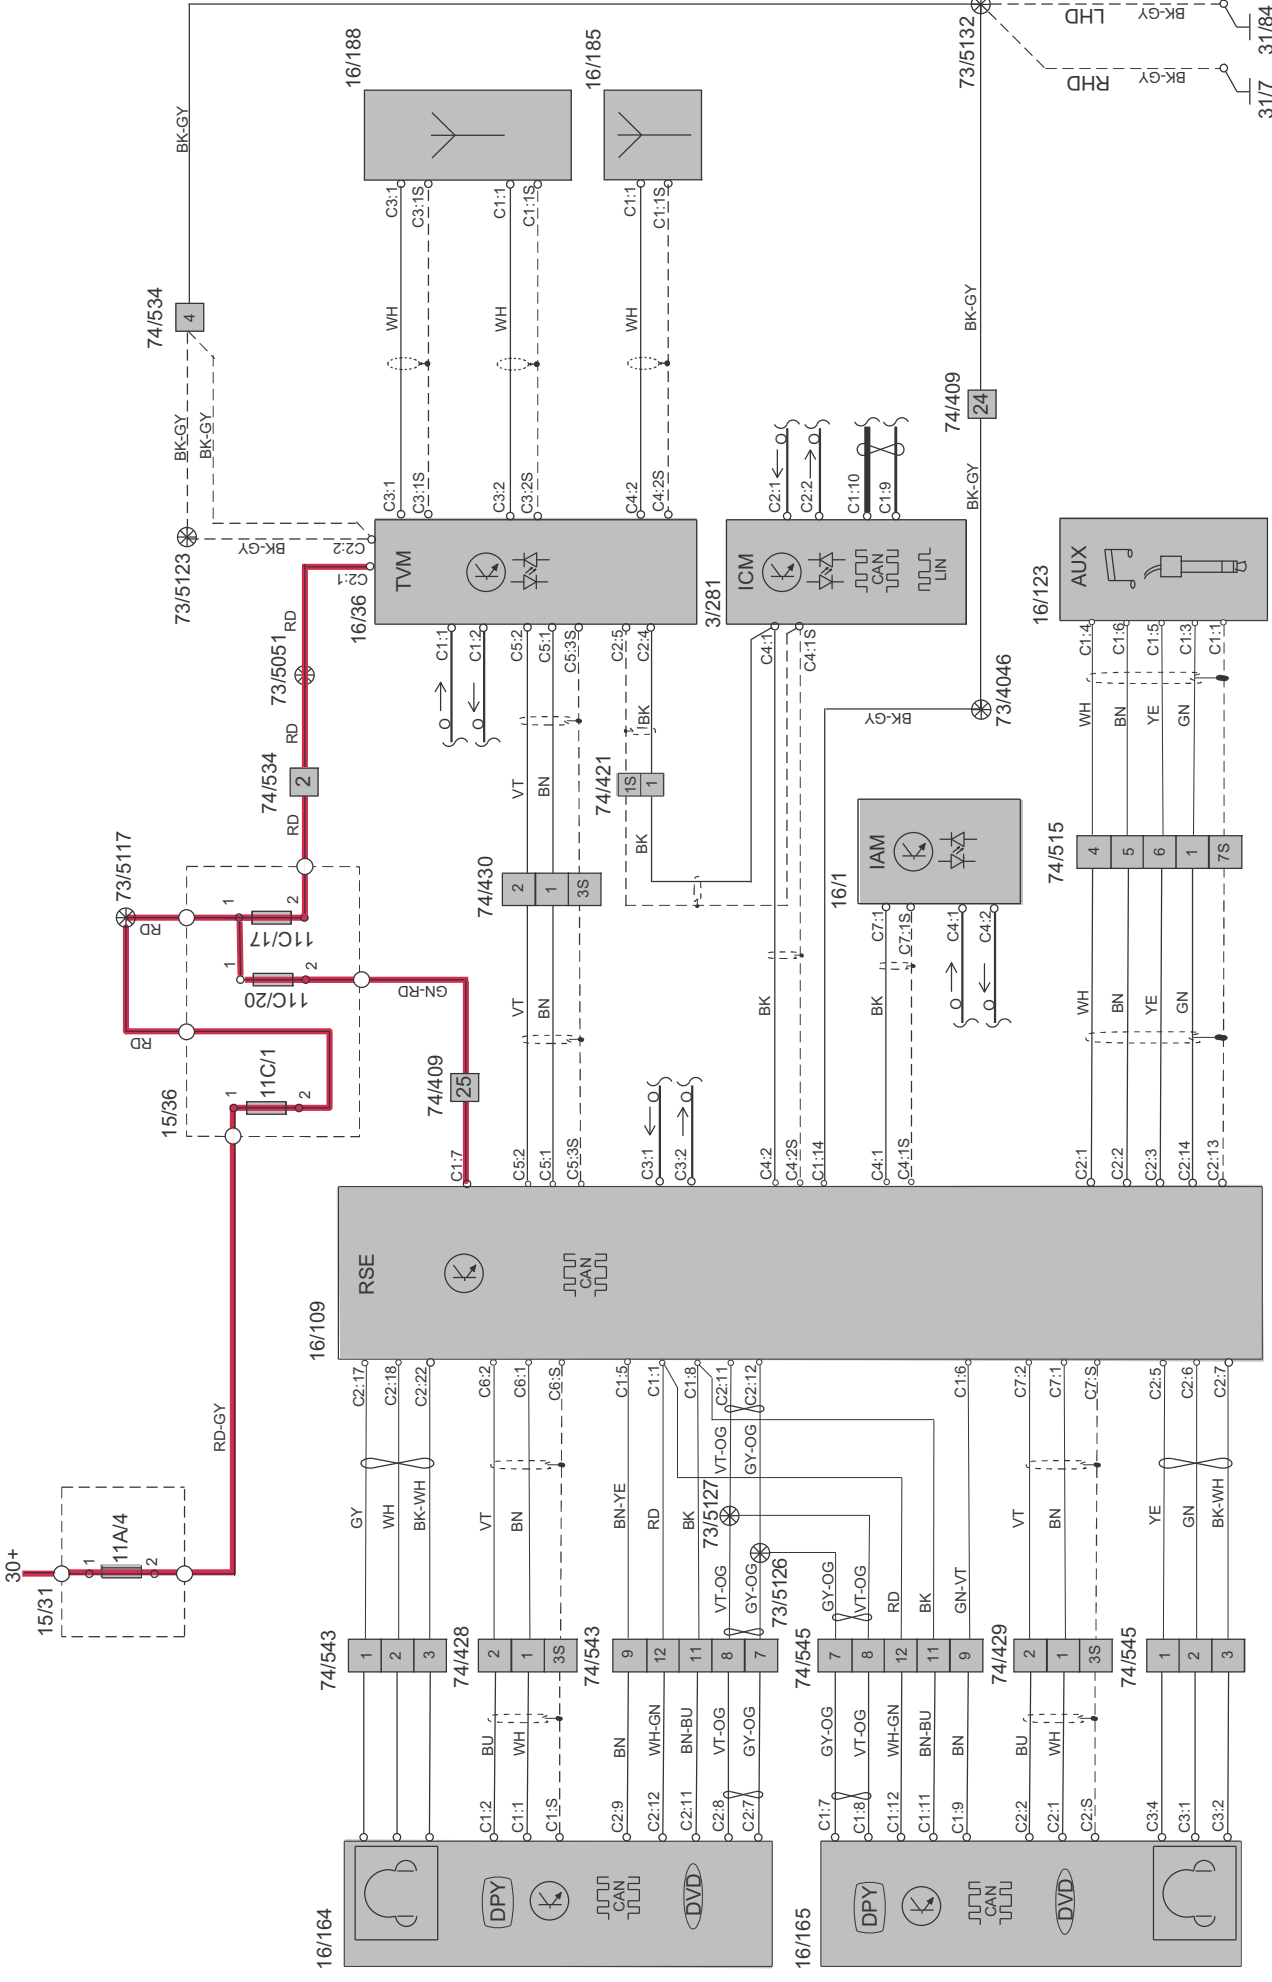

Group 39 Other, Accessories


Satellite radio

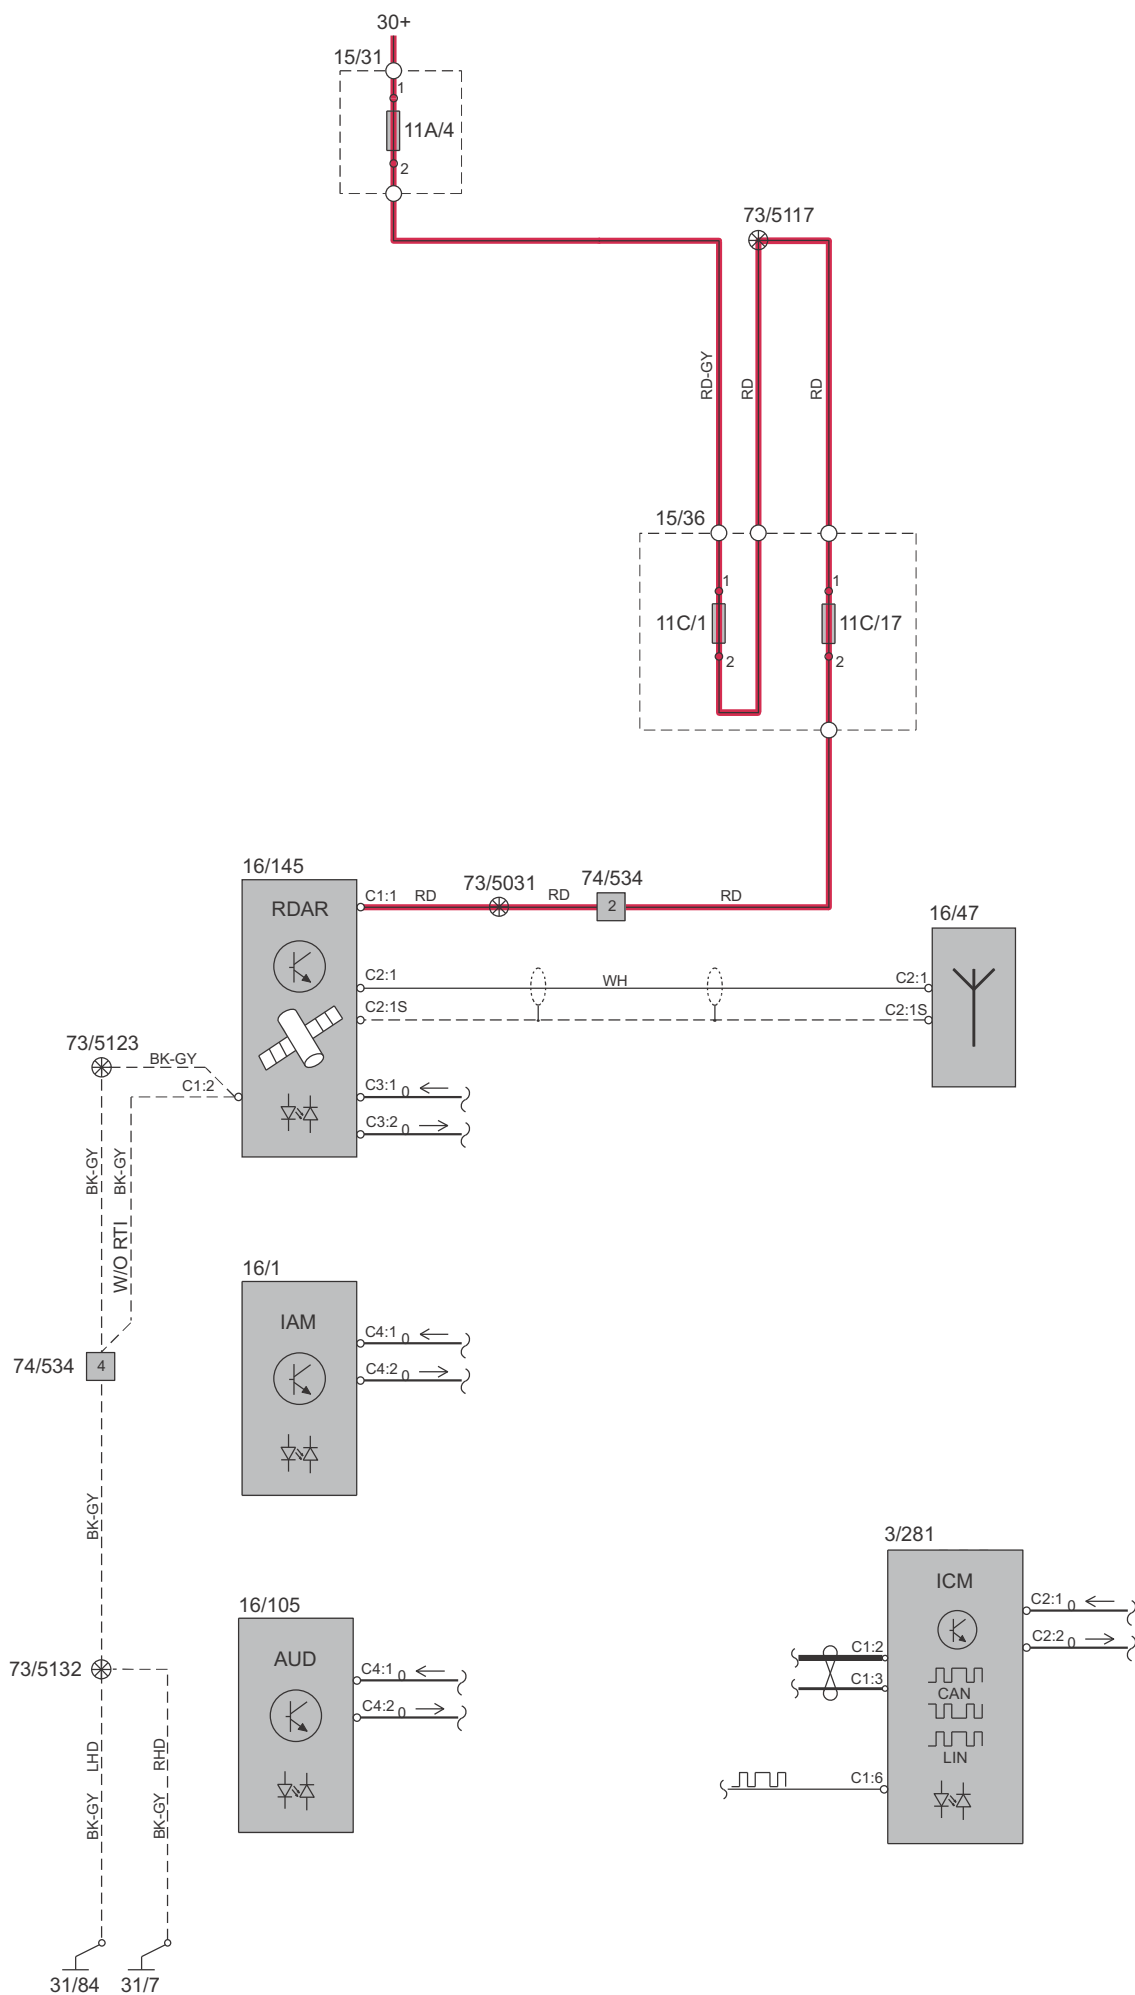


D00017

Group 39 Other, Accessories

Parking camera

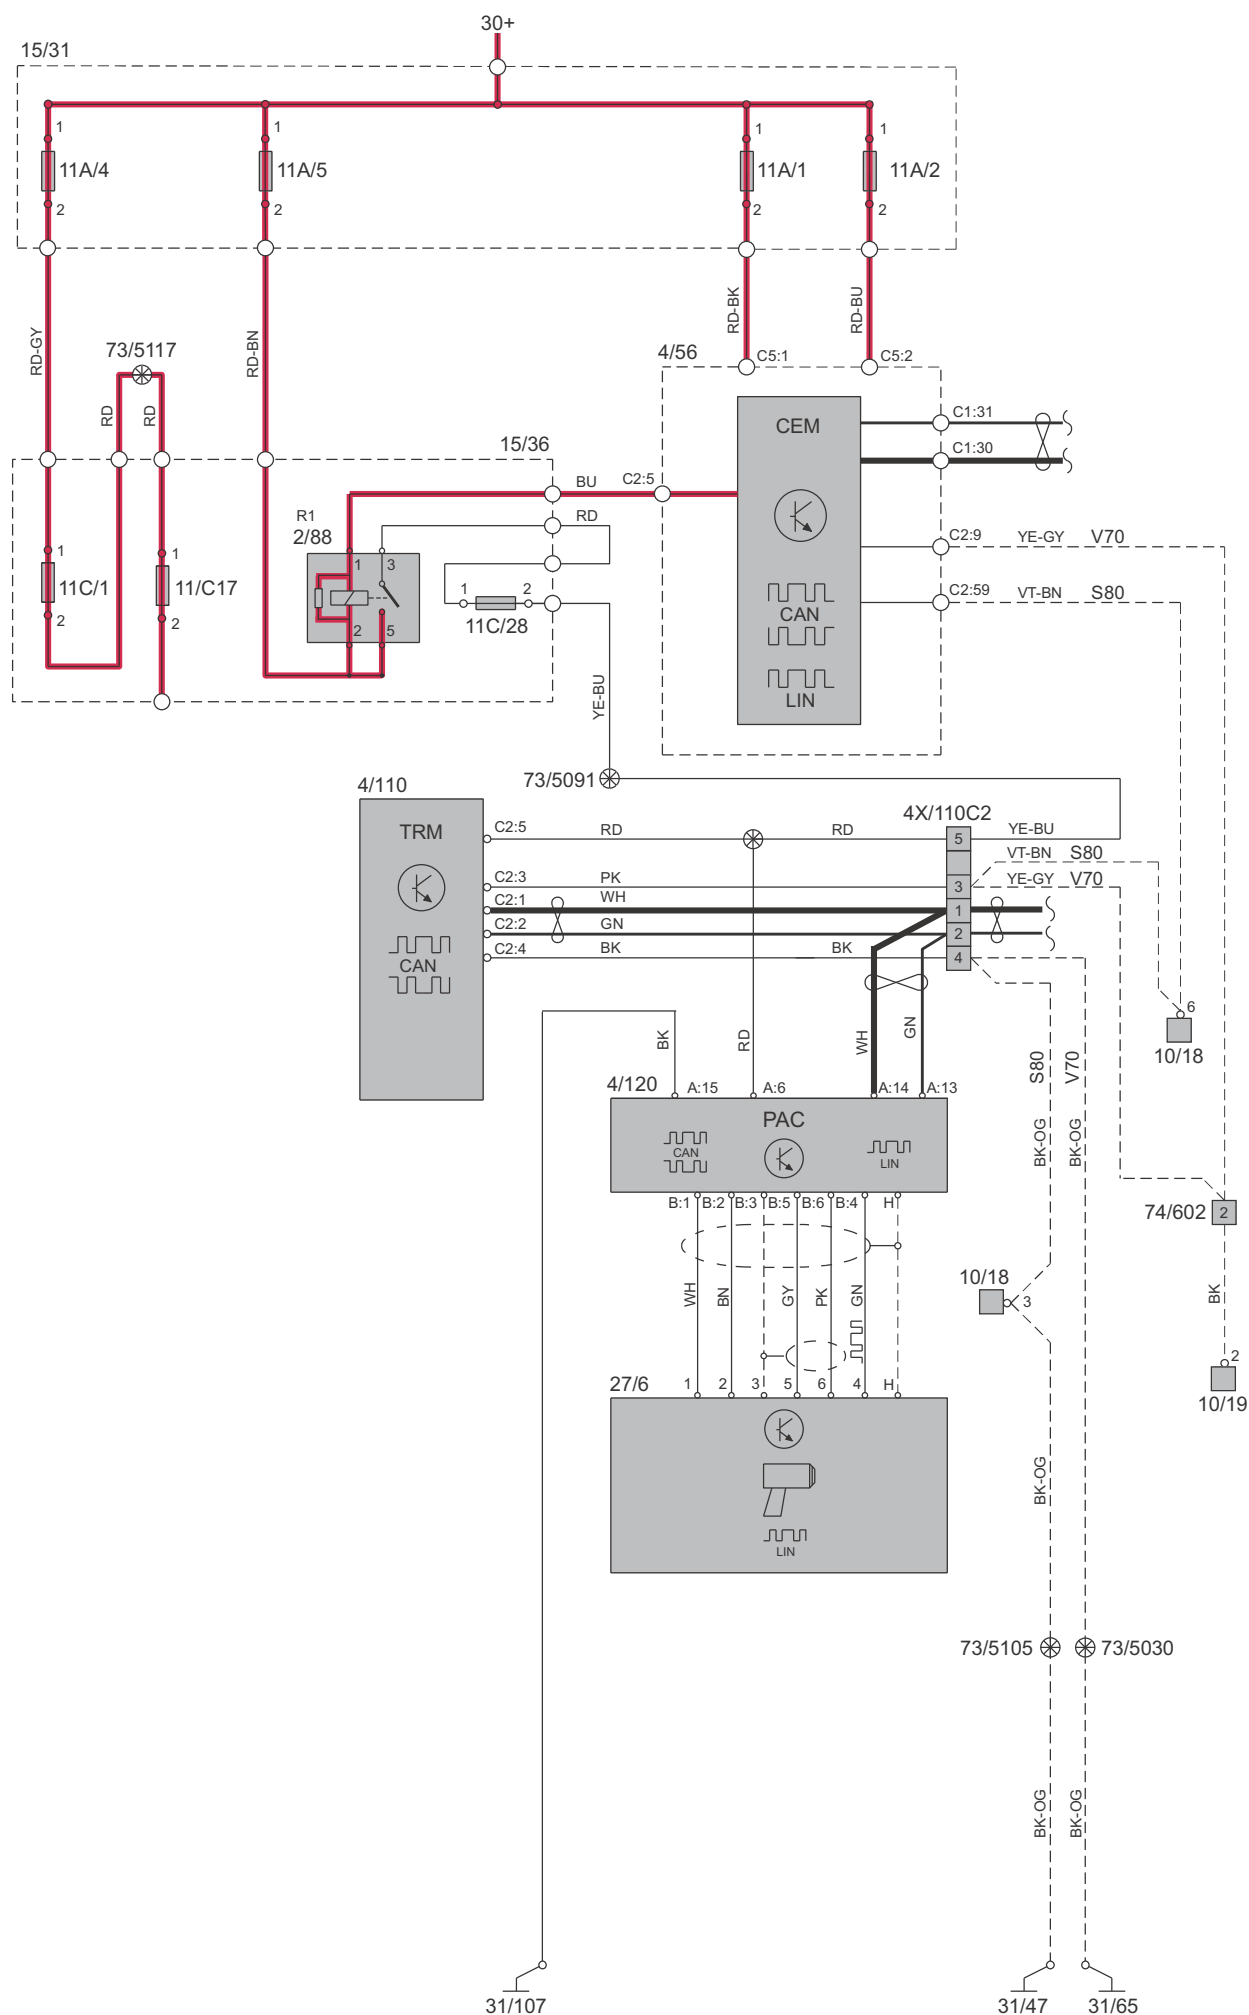


Group 39 Other, Accessories Parking camera wide-angle, front

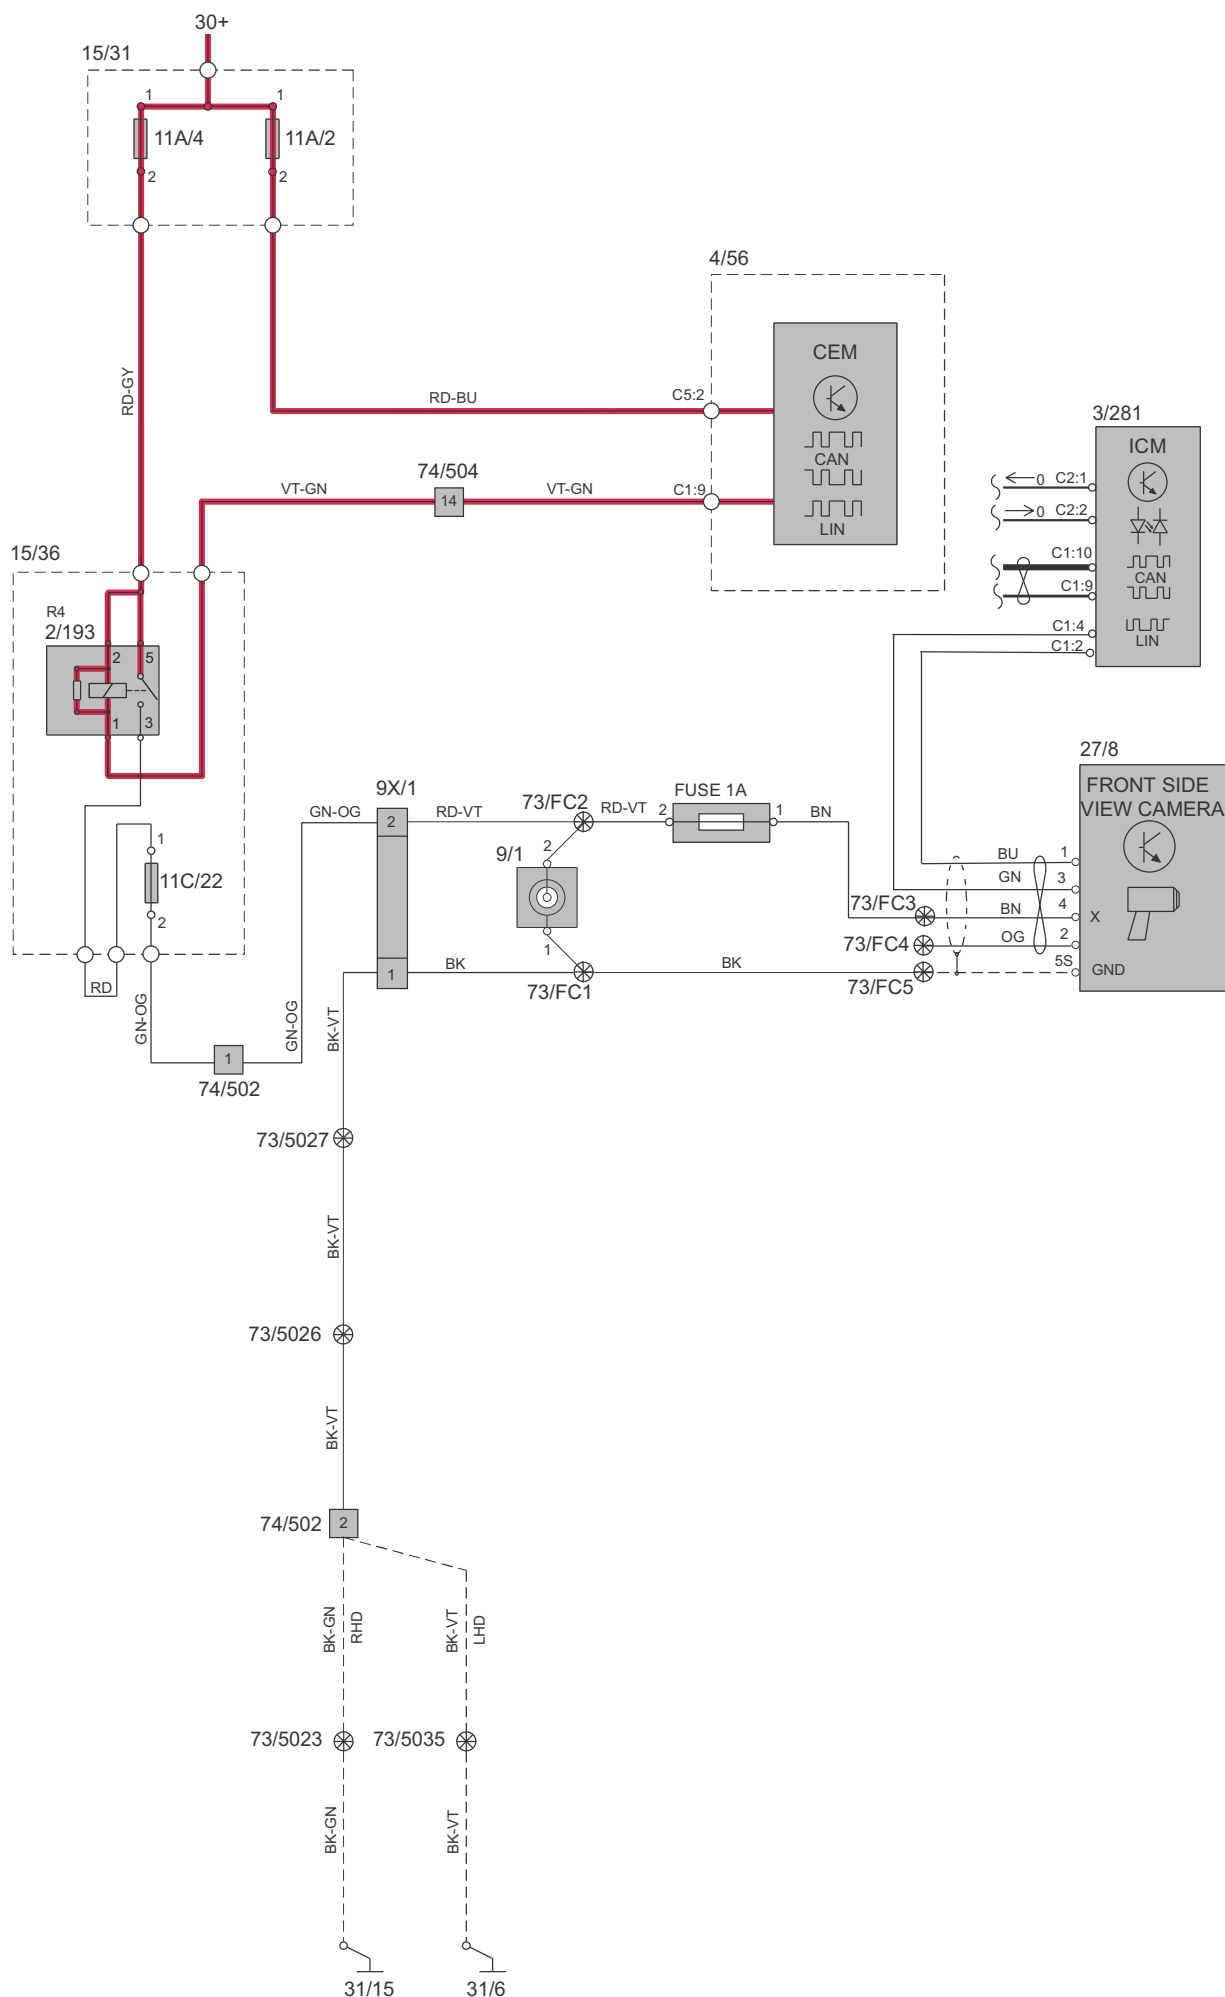

I011986-V

Group 39 Other, Accessories


Navigation system, portable

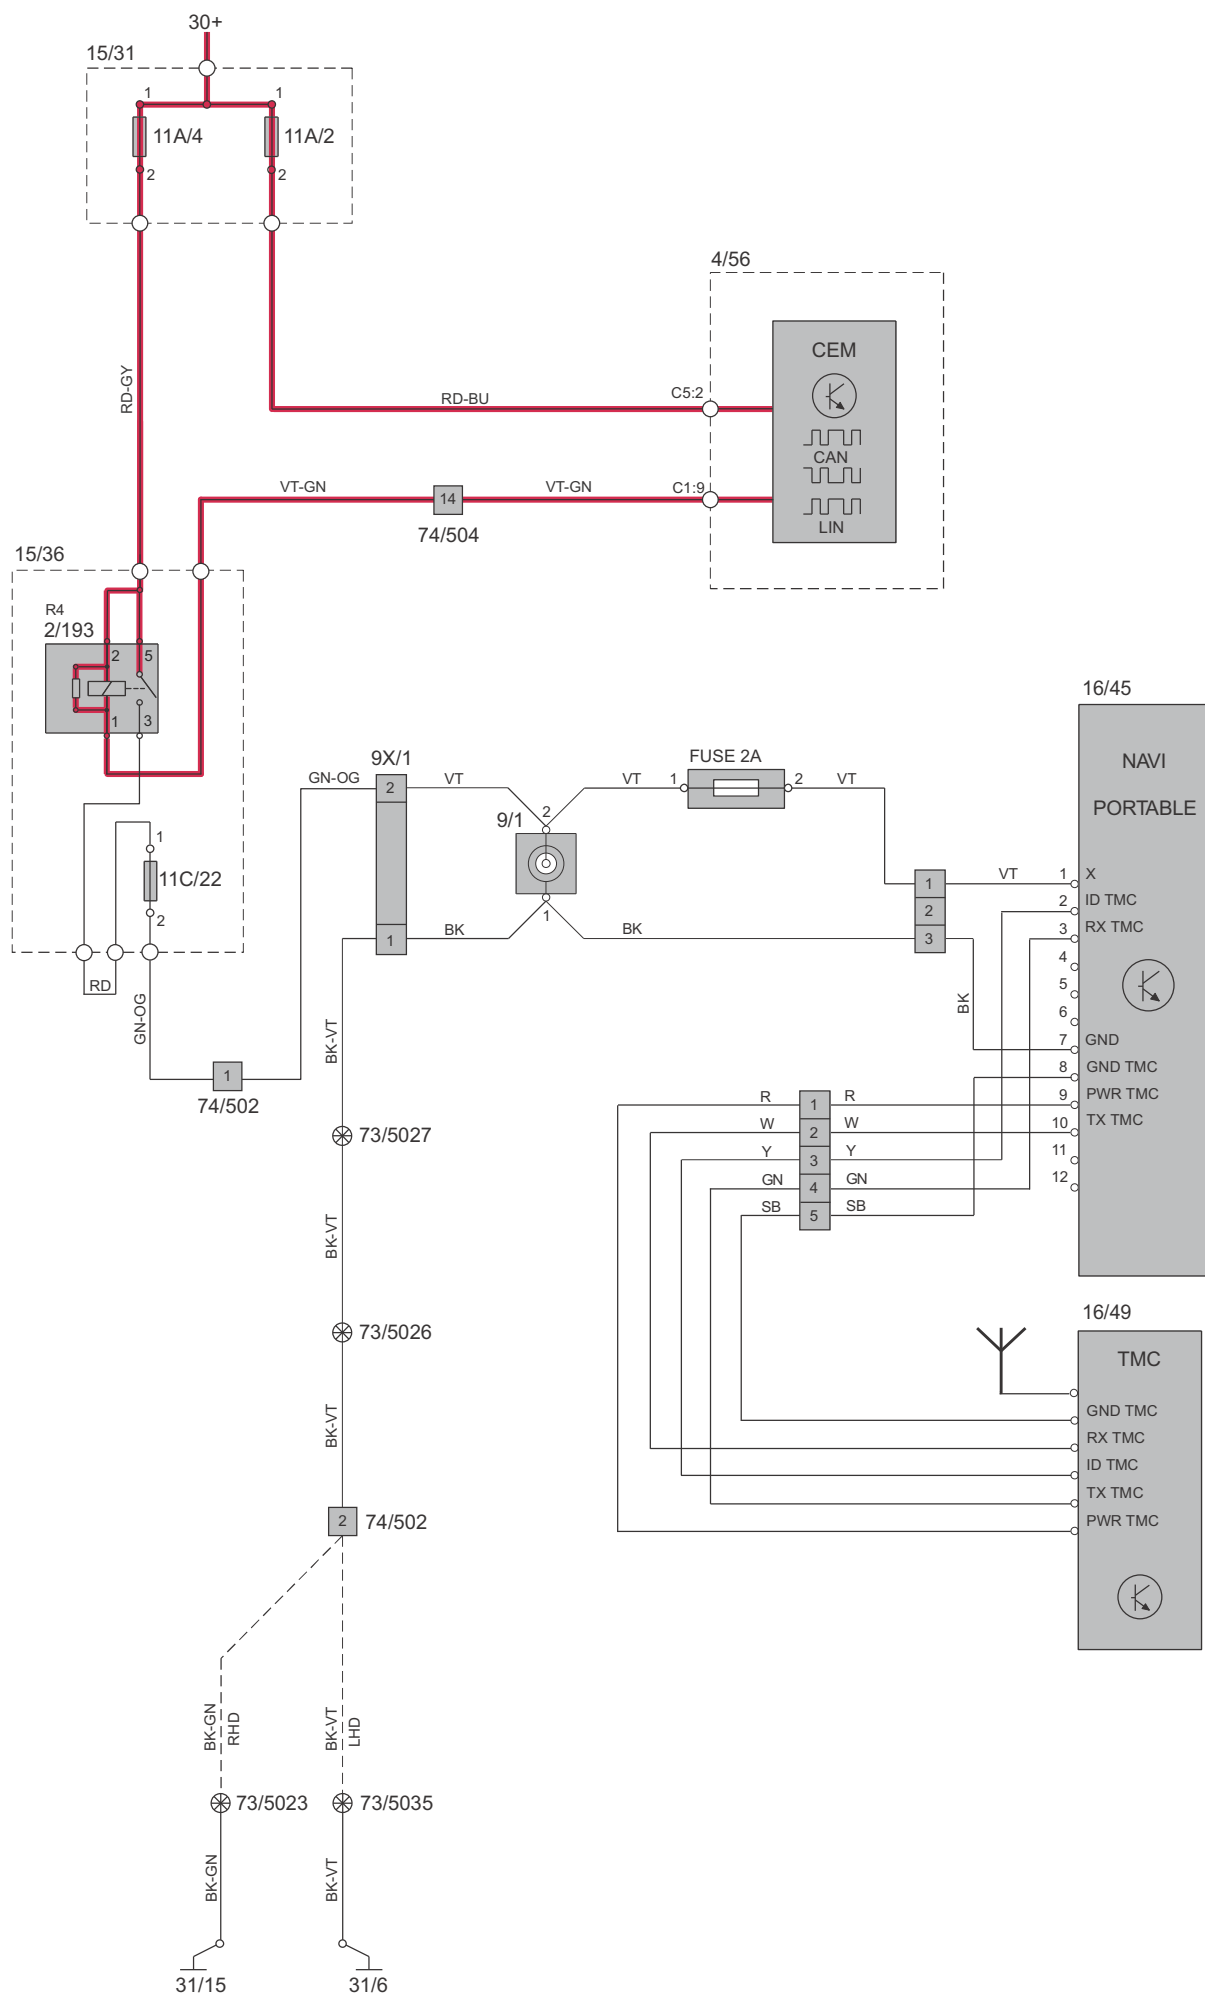

I05030

Group 43 Transmission


Transmission M66

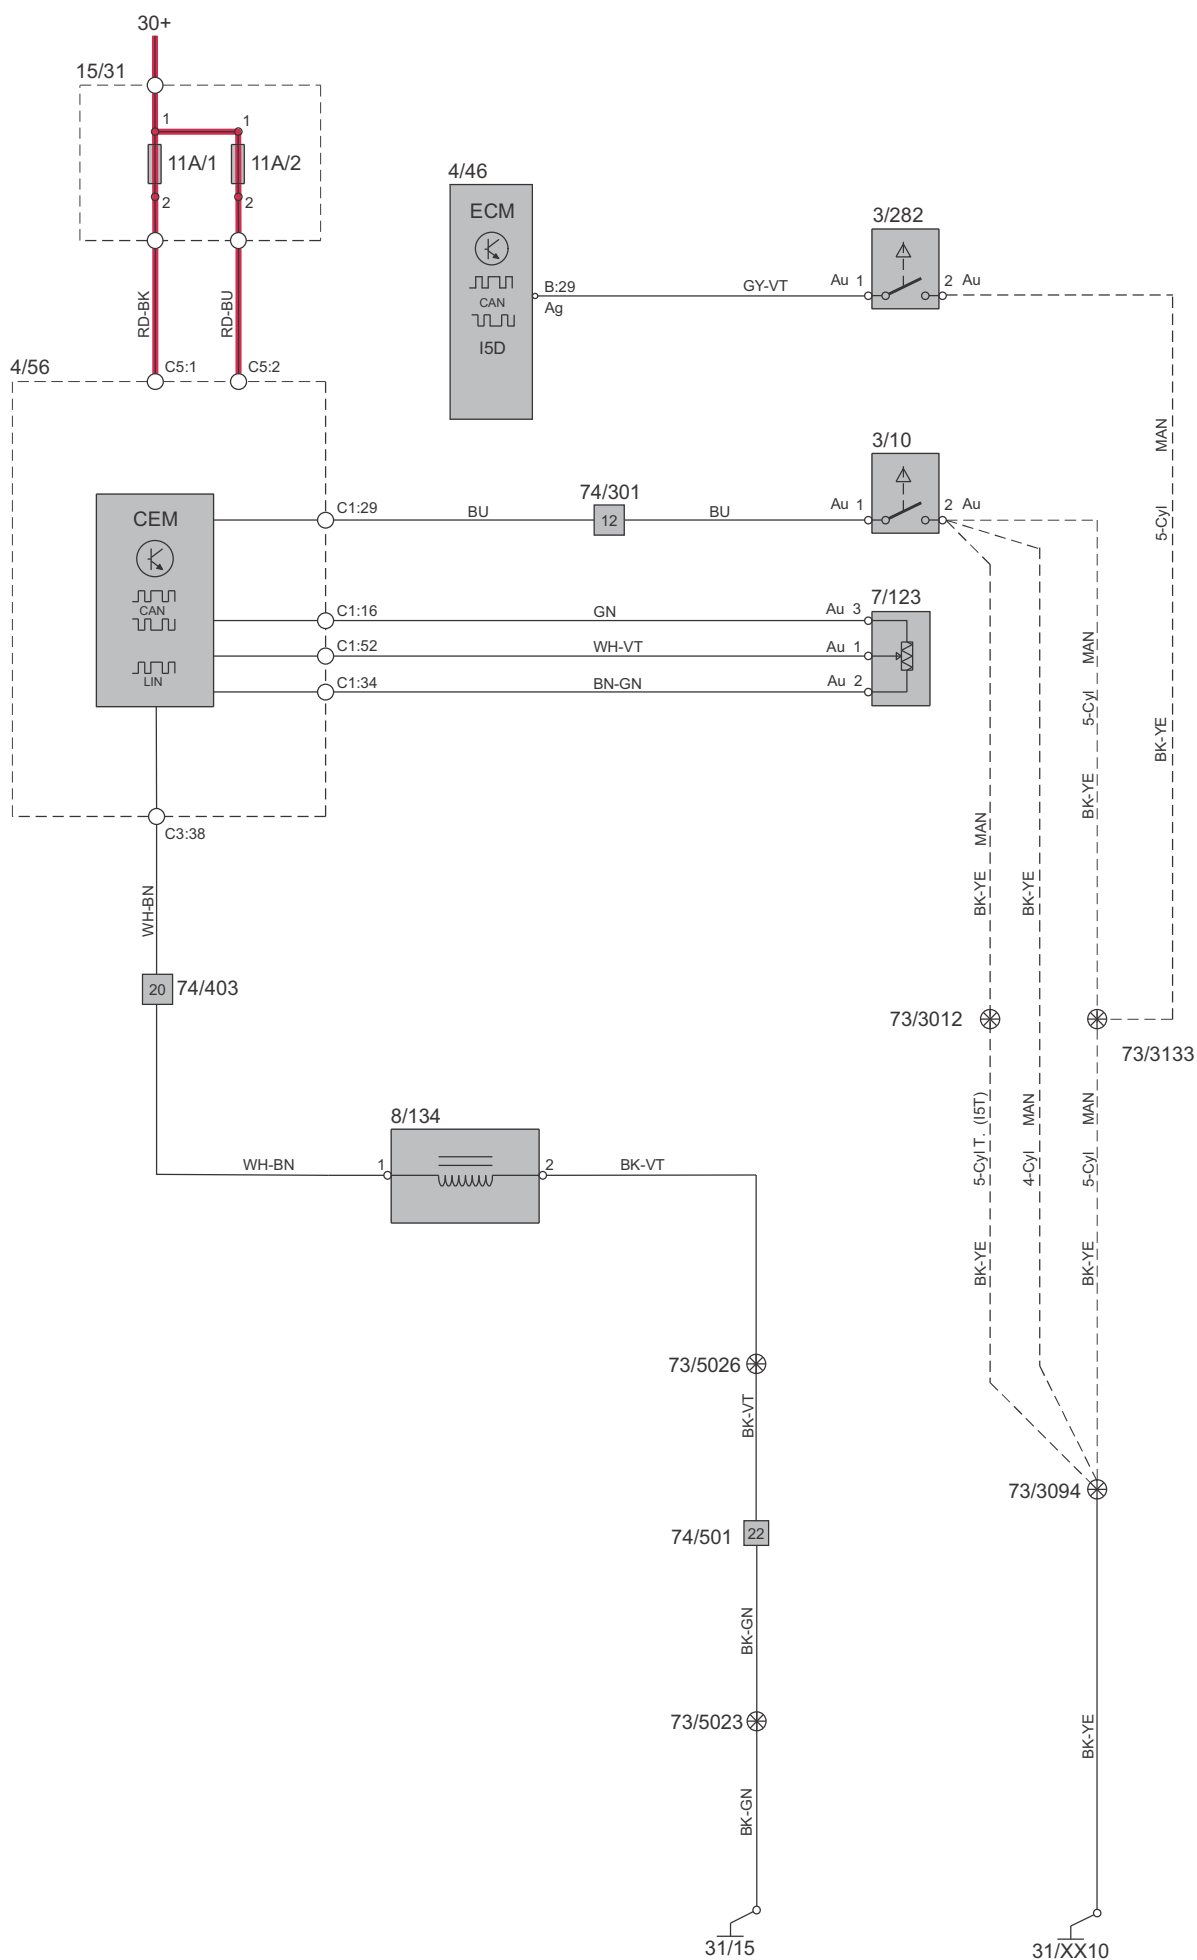

P00040

Group 43 Transmission


Automatic transmission MPS6

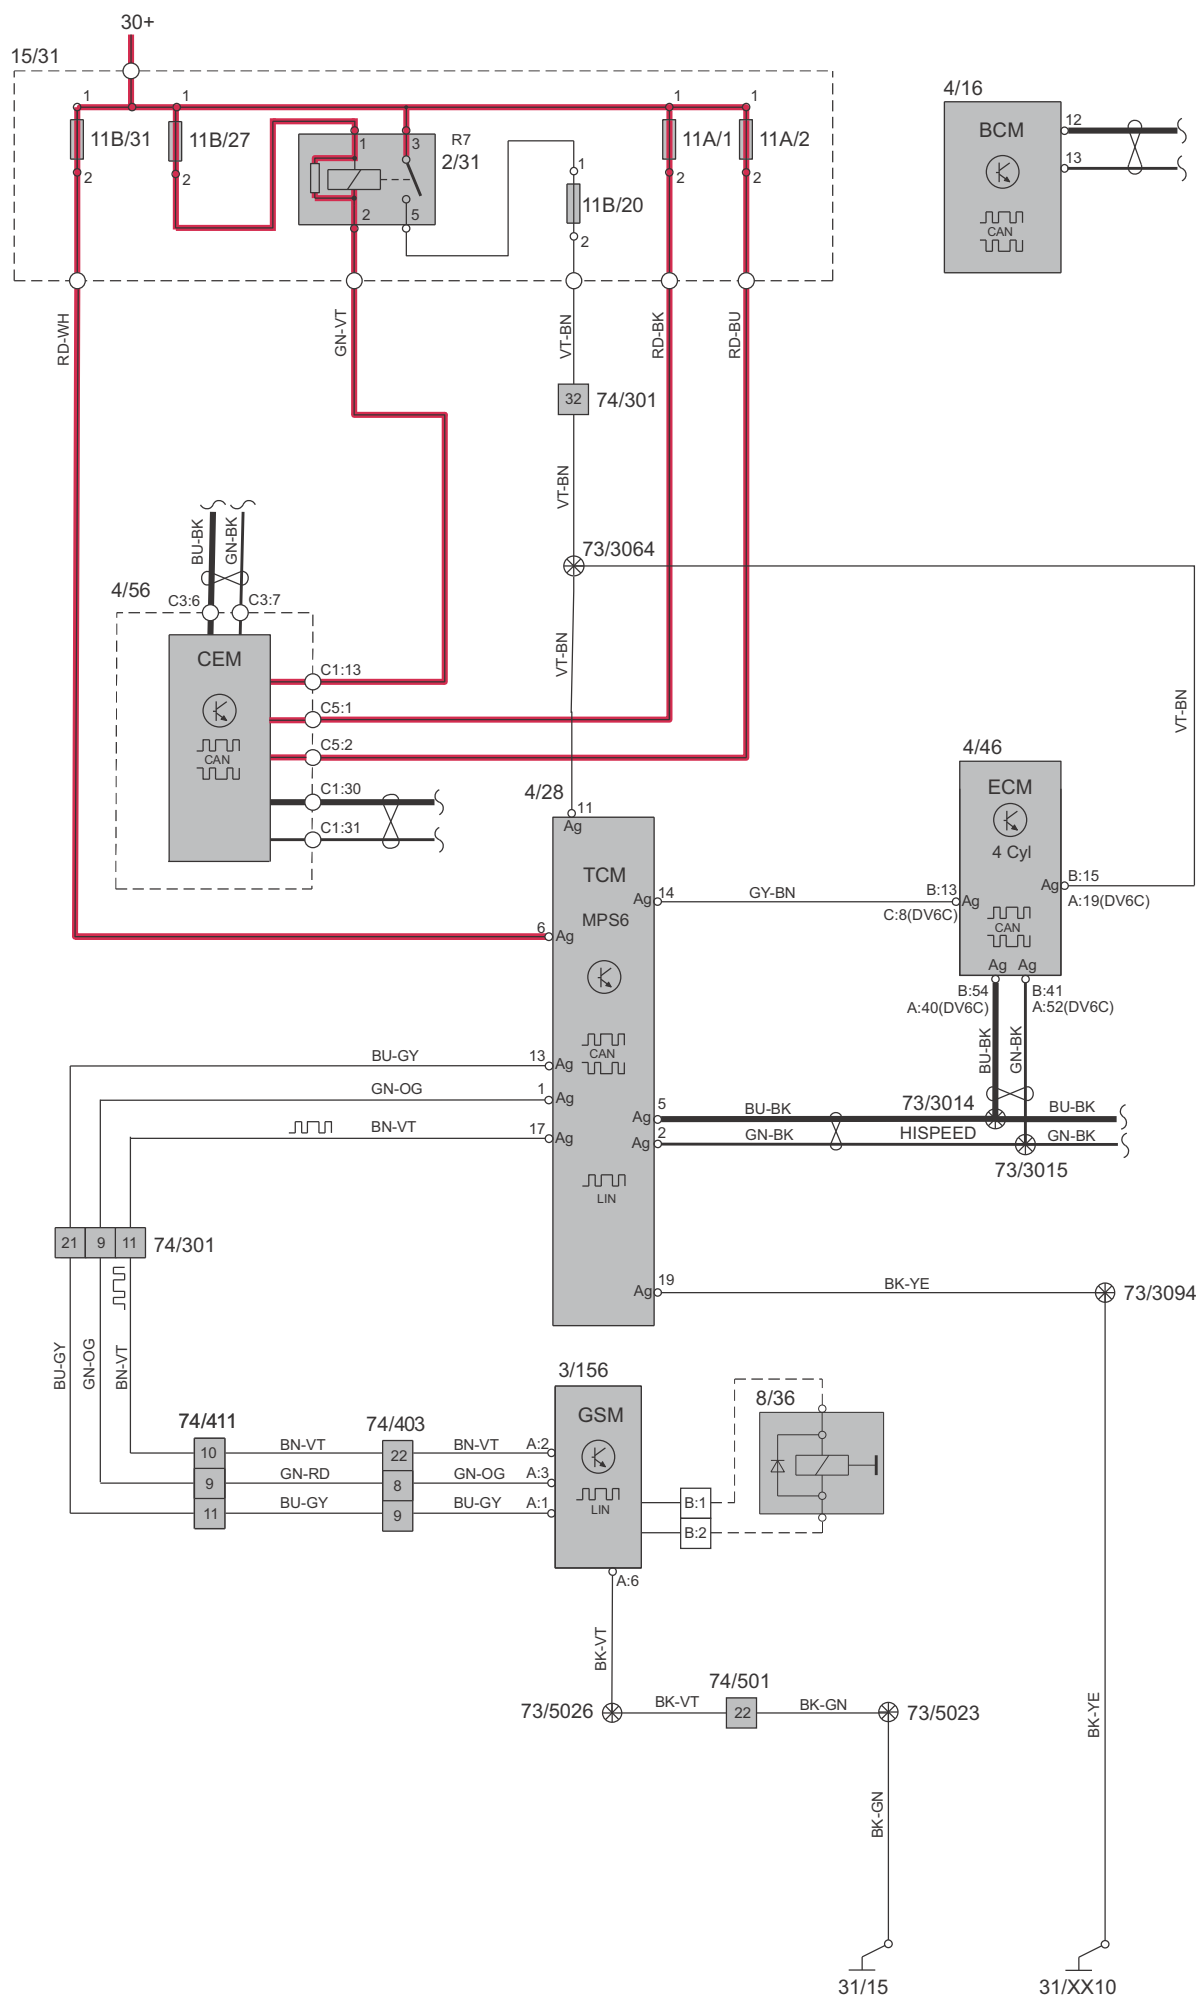


P00041

Group 43 Transmission

Automatic transmission AWF21

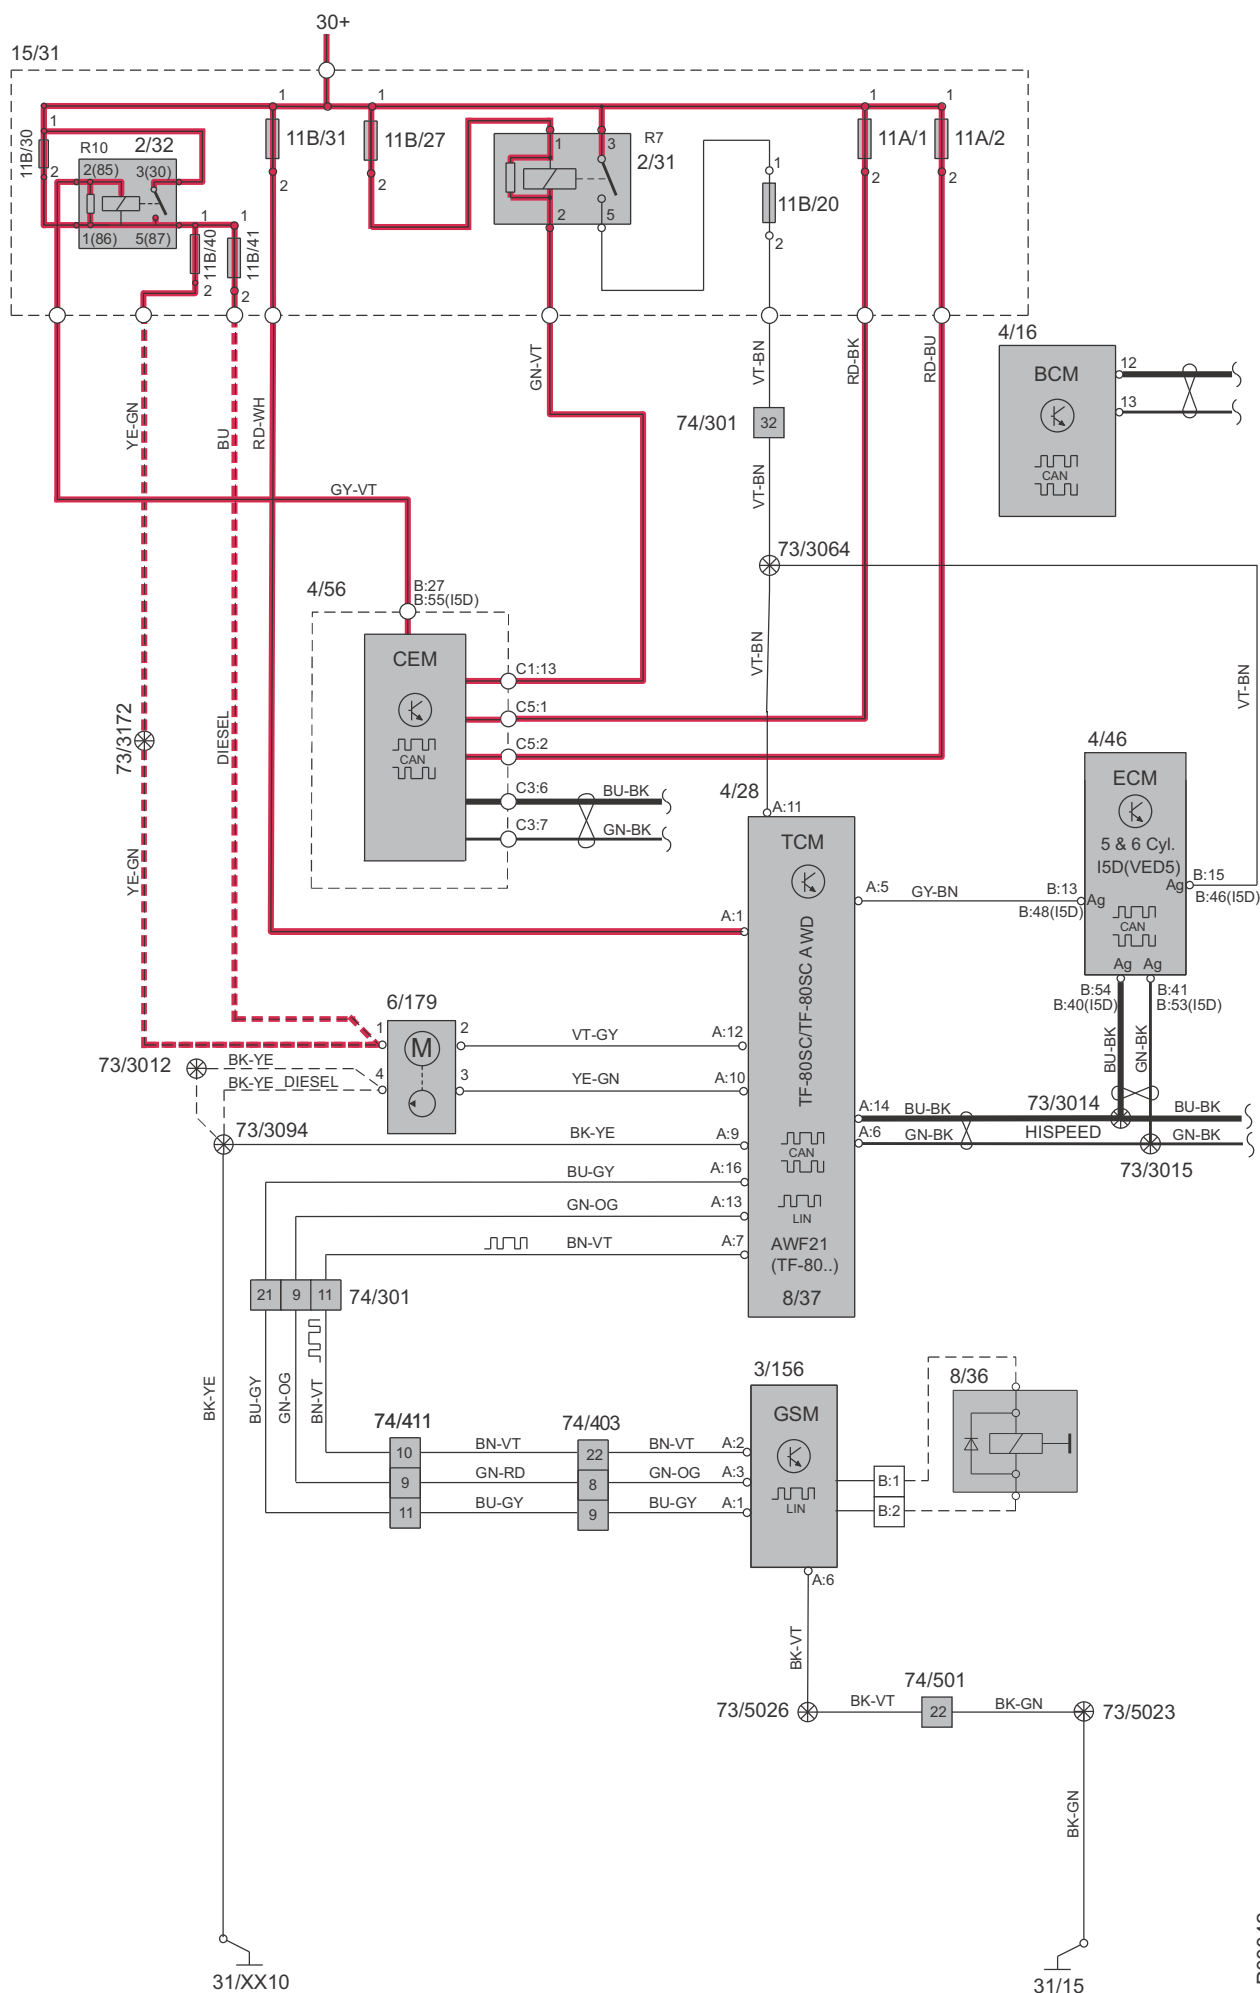


Group 43 Transmission Differential Electronic Module (DEM)

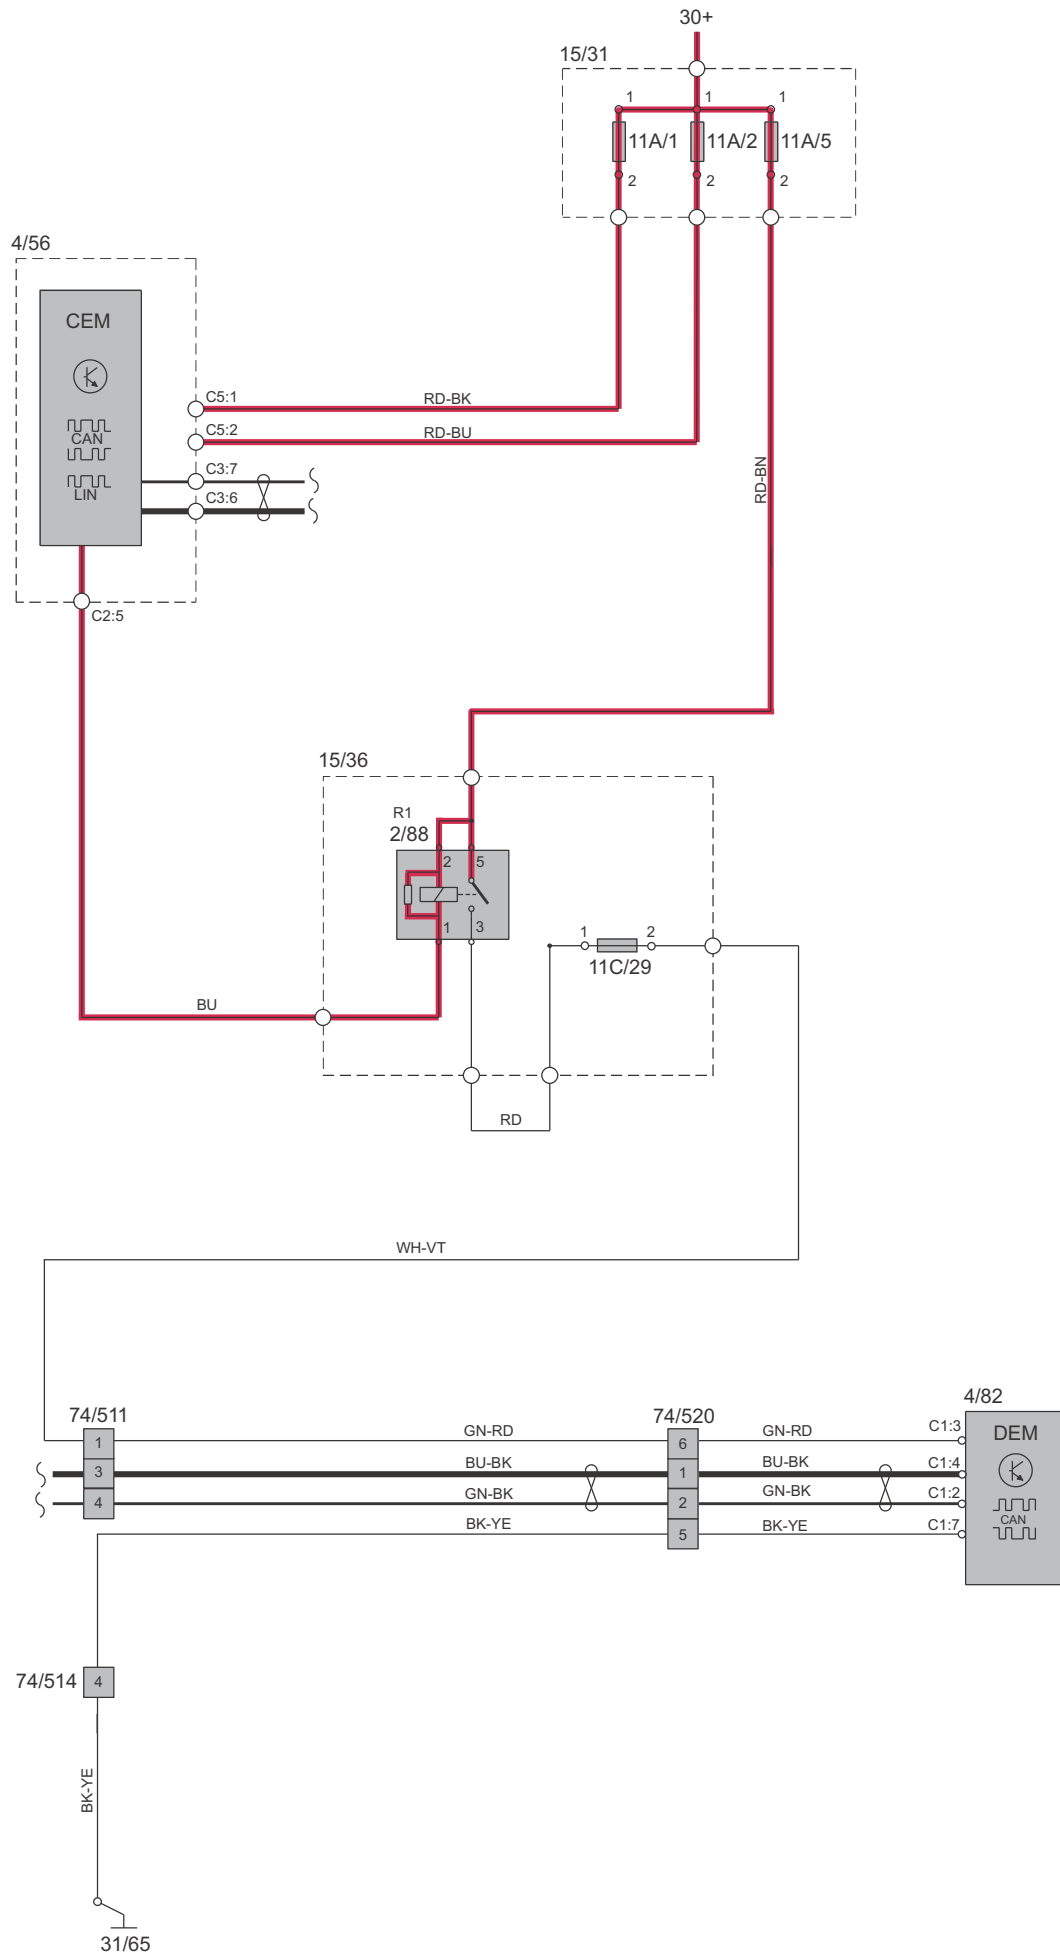

Group 55 Parking brake


Electric parking brake

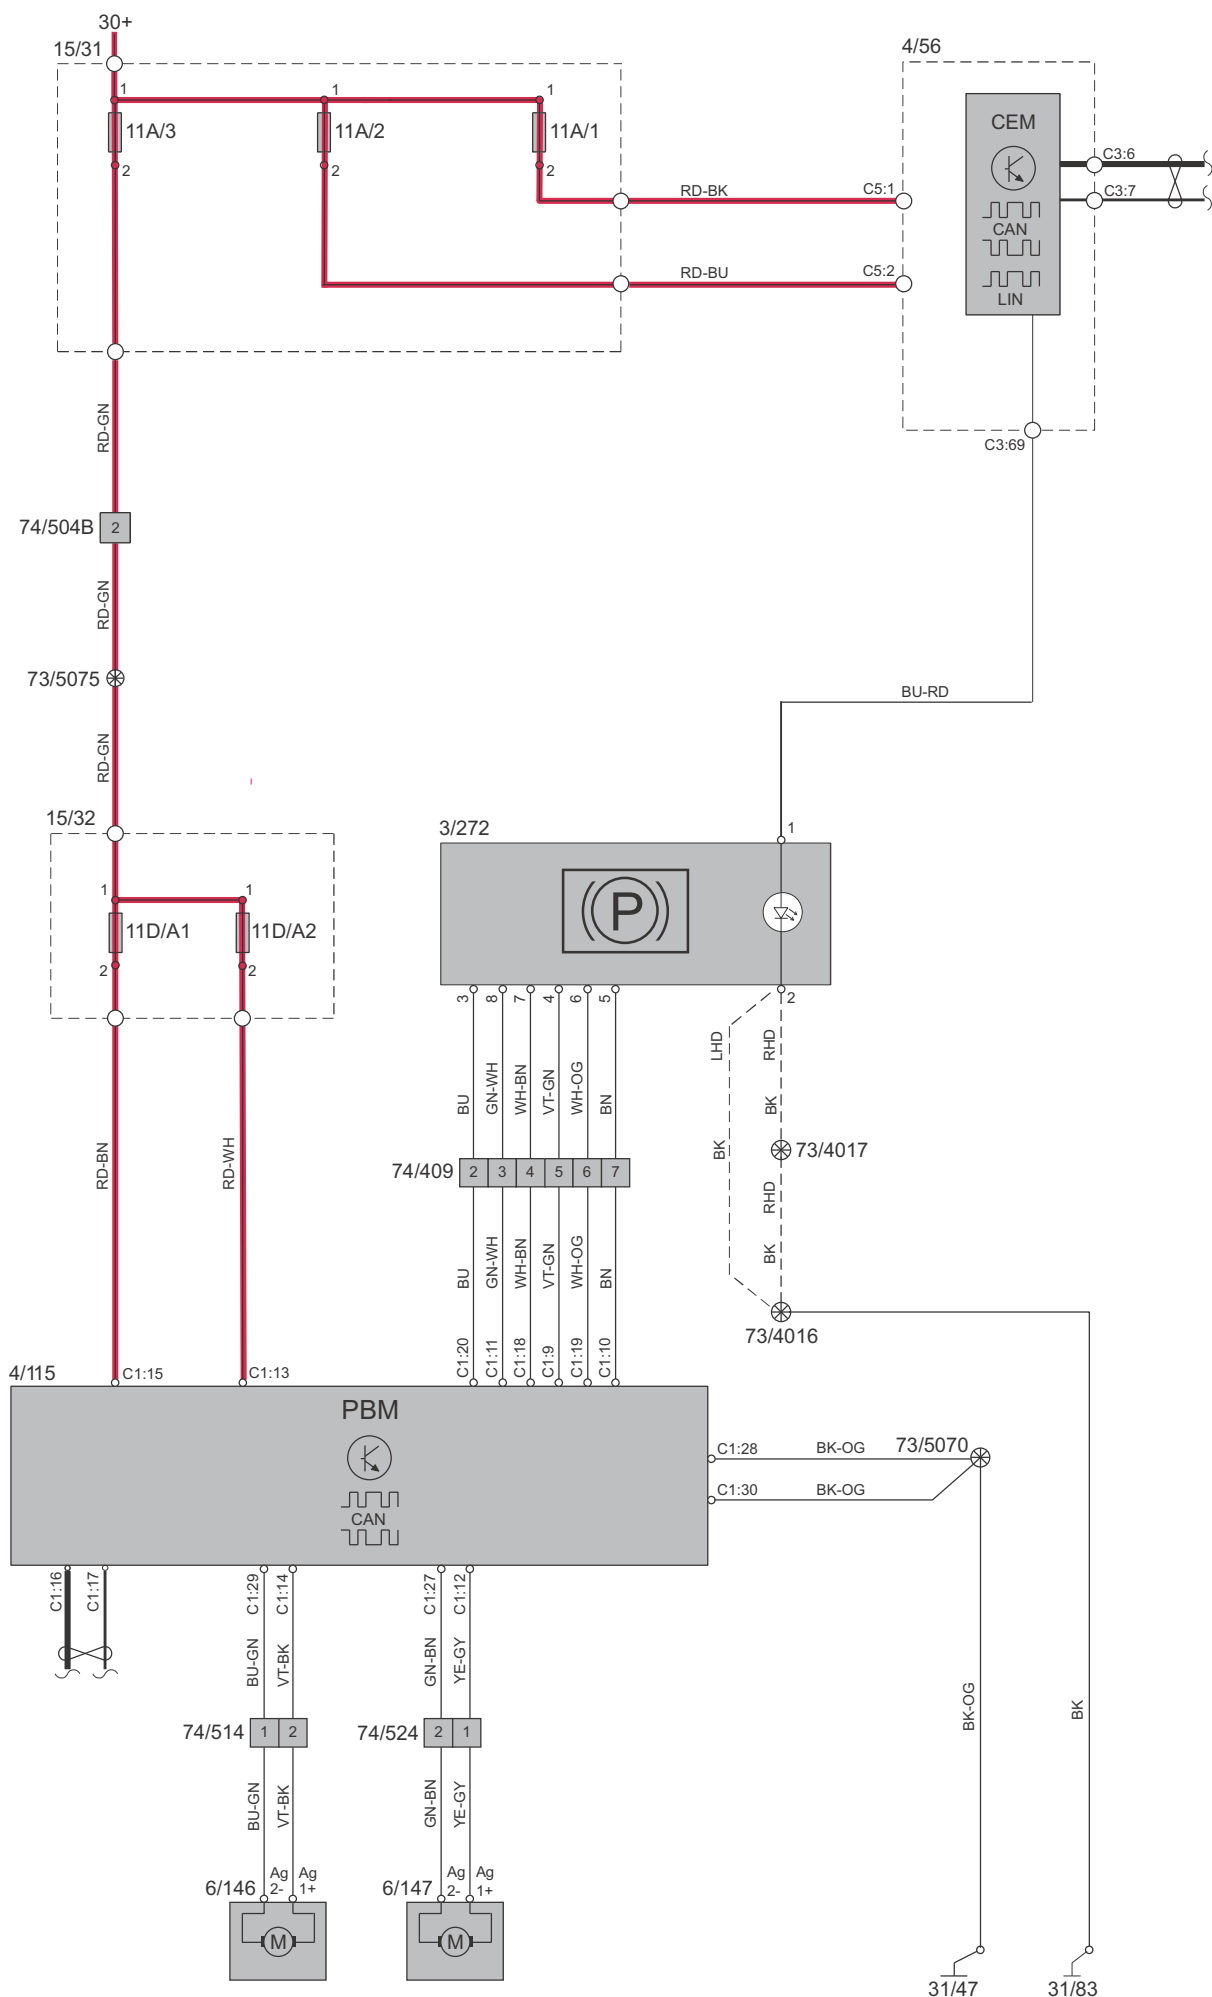

G042392


Group 59 Brake system

Brake control system & DSTC

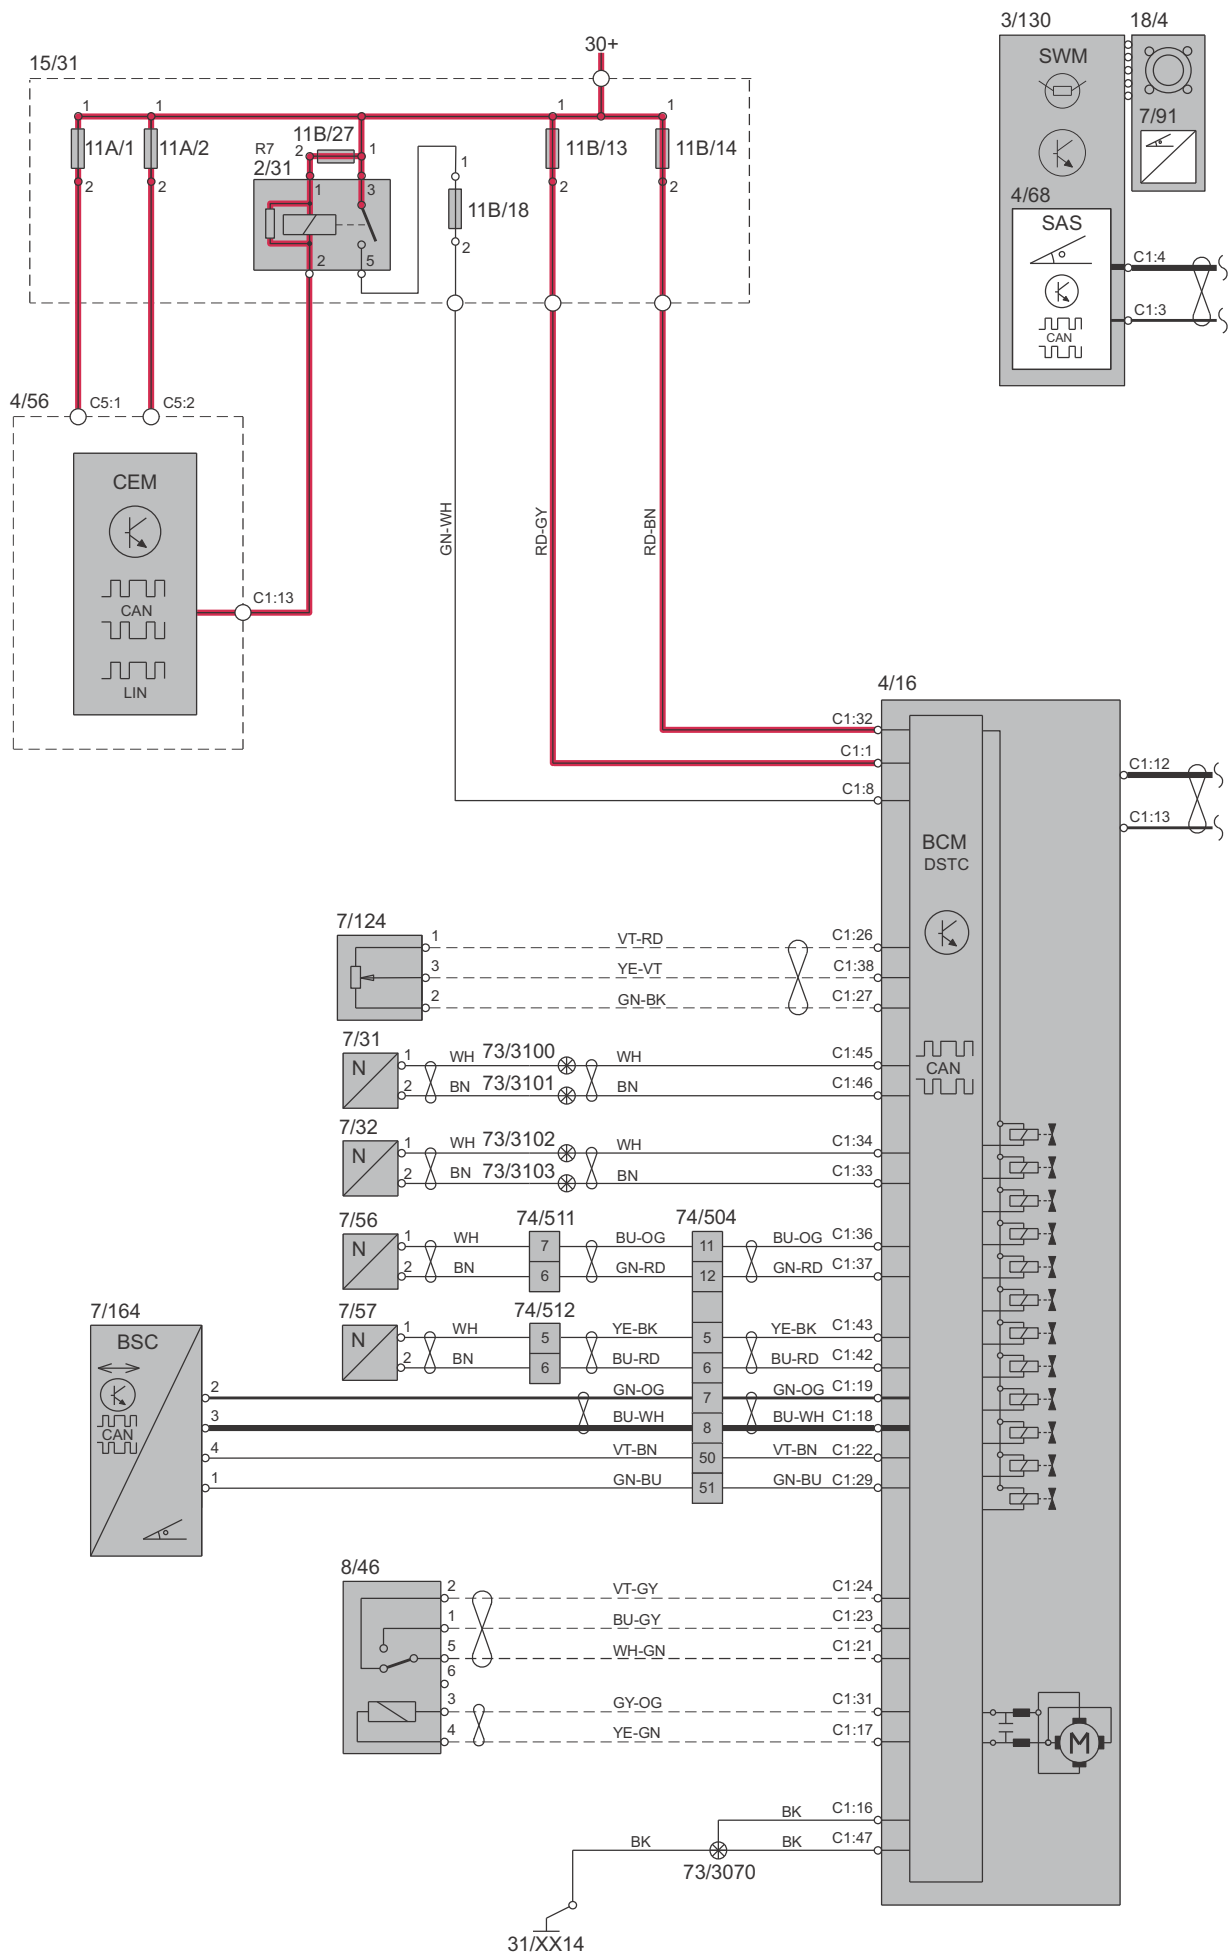


Group 64 Steering

Speed dependent power steering

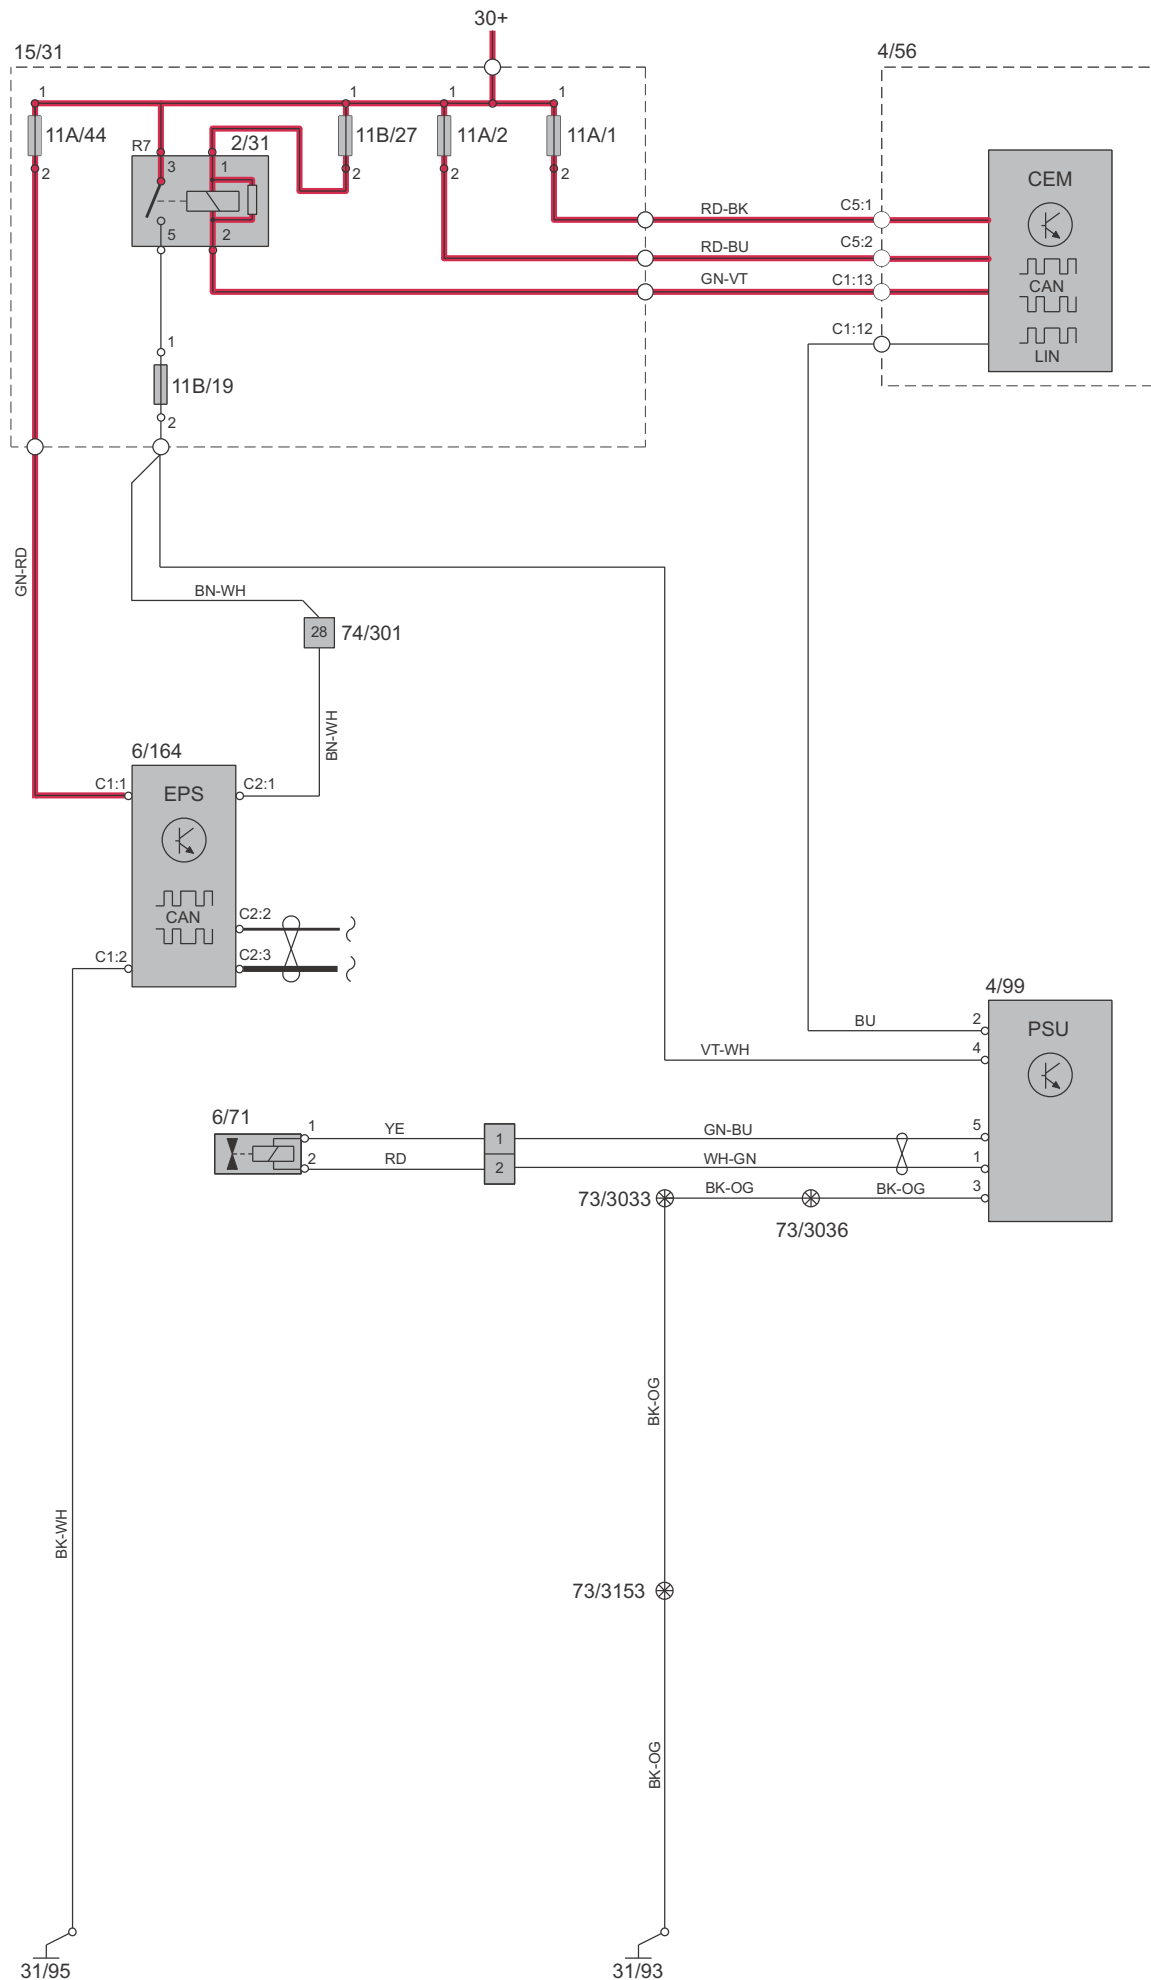

Group 76 Shock absorbers

Four-C

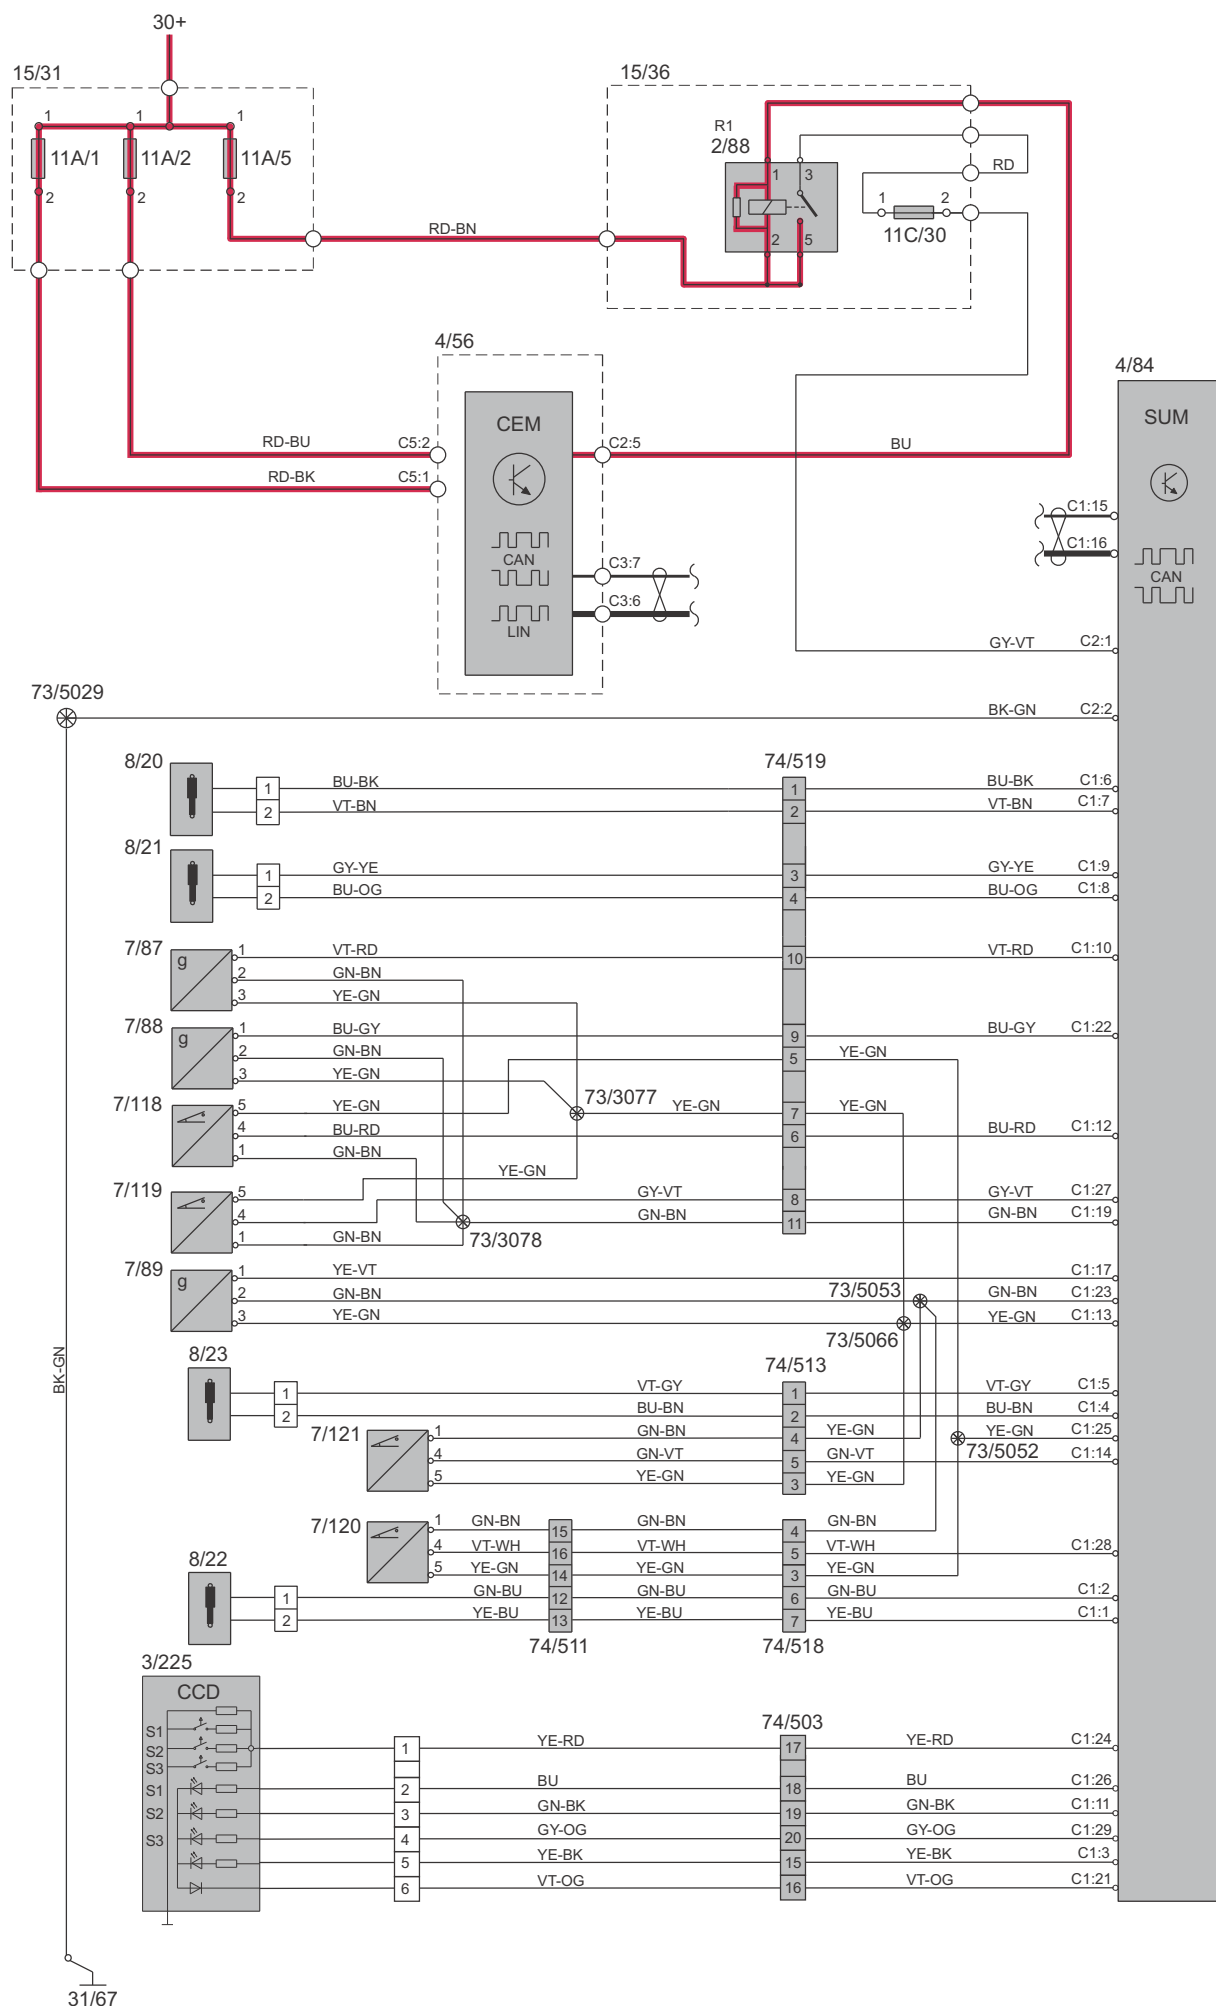







Group 83 Doors and openings

Central locking rear doors

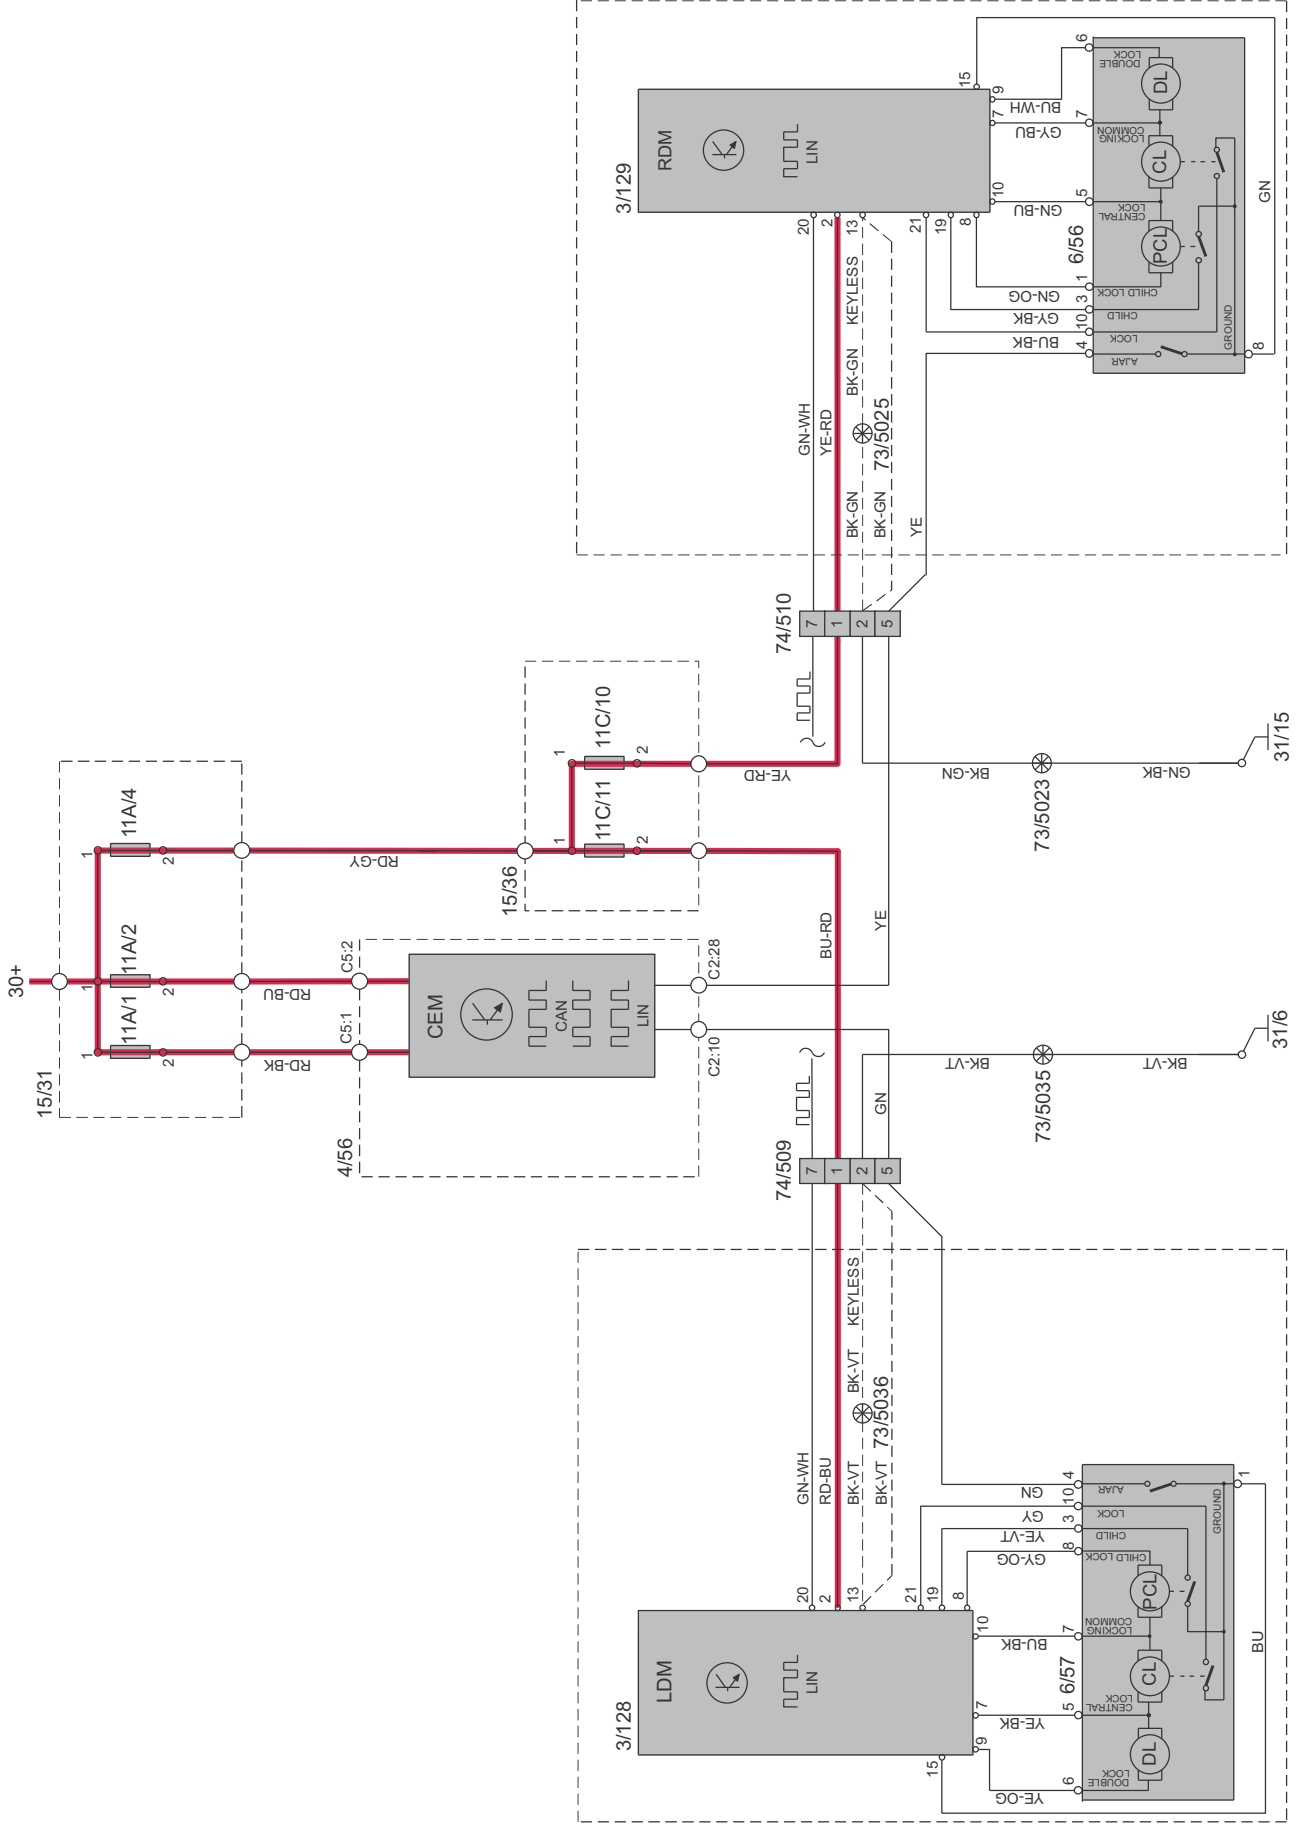


Group 83 Doors and openings

Central locking trunk lid/tailgate V70

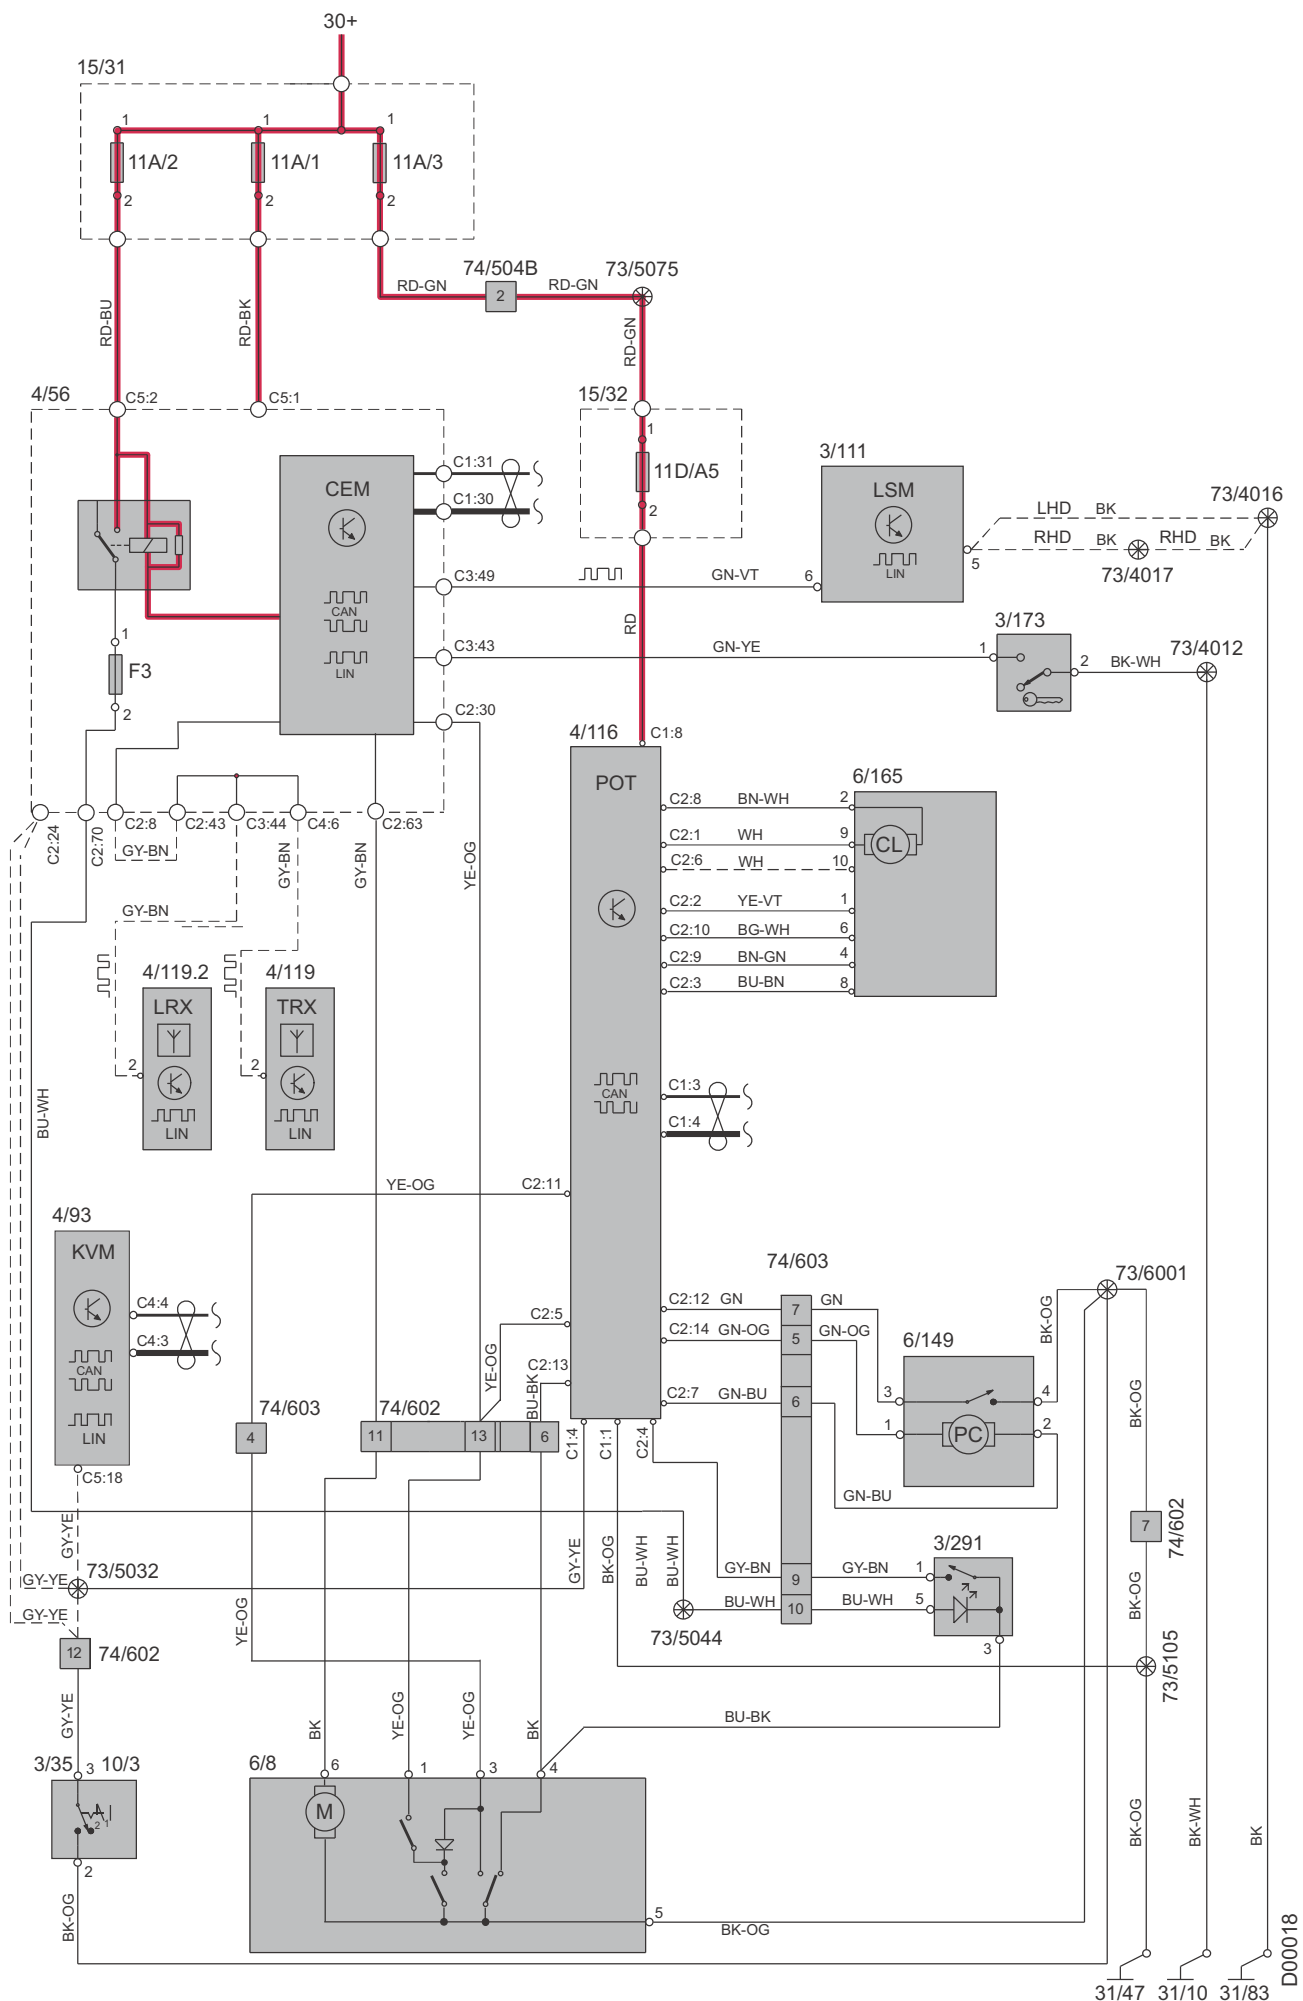


Group 83 Doors and openings

Central locking trunk lid/tailgate S80

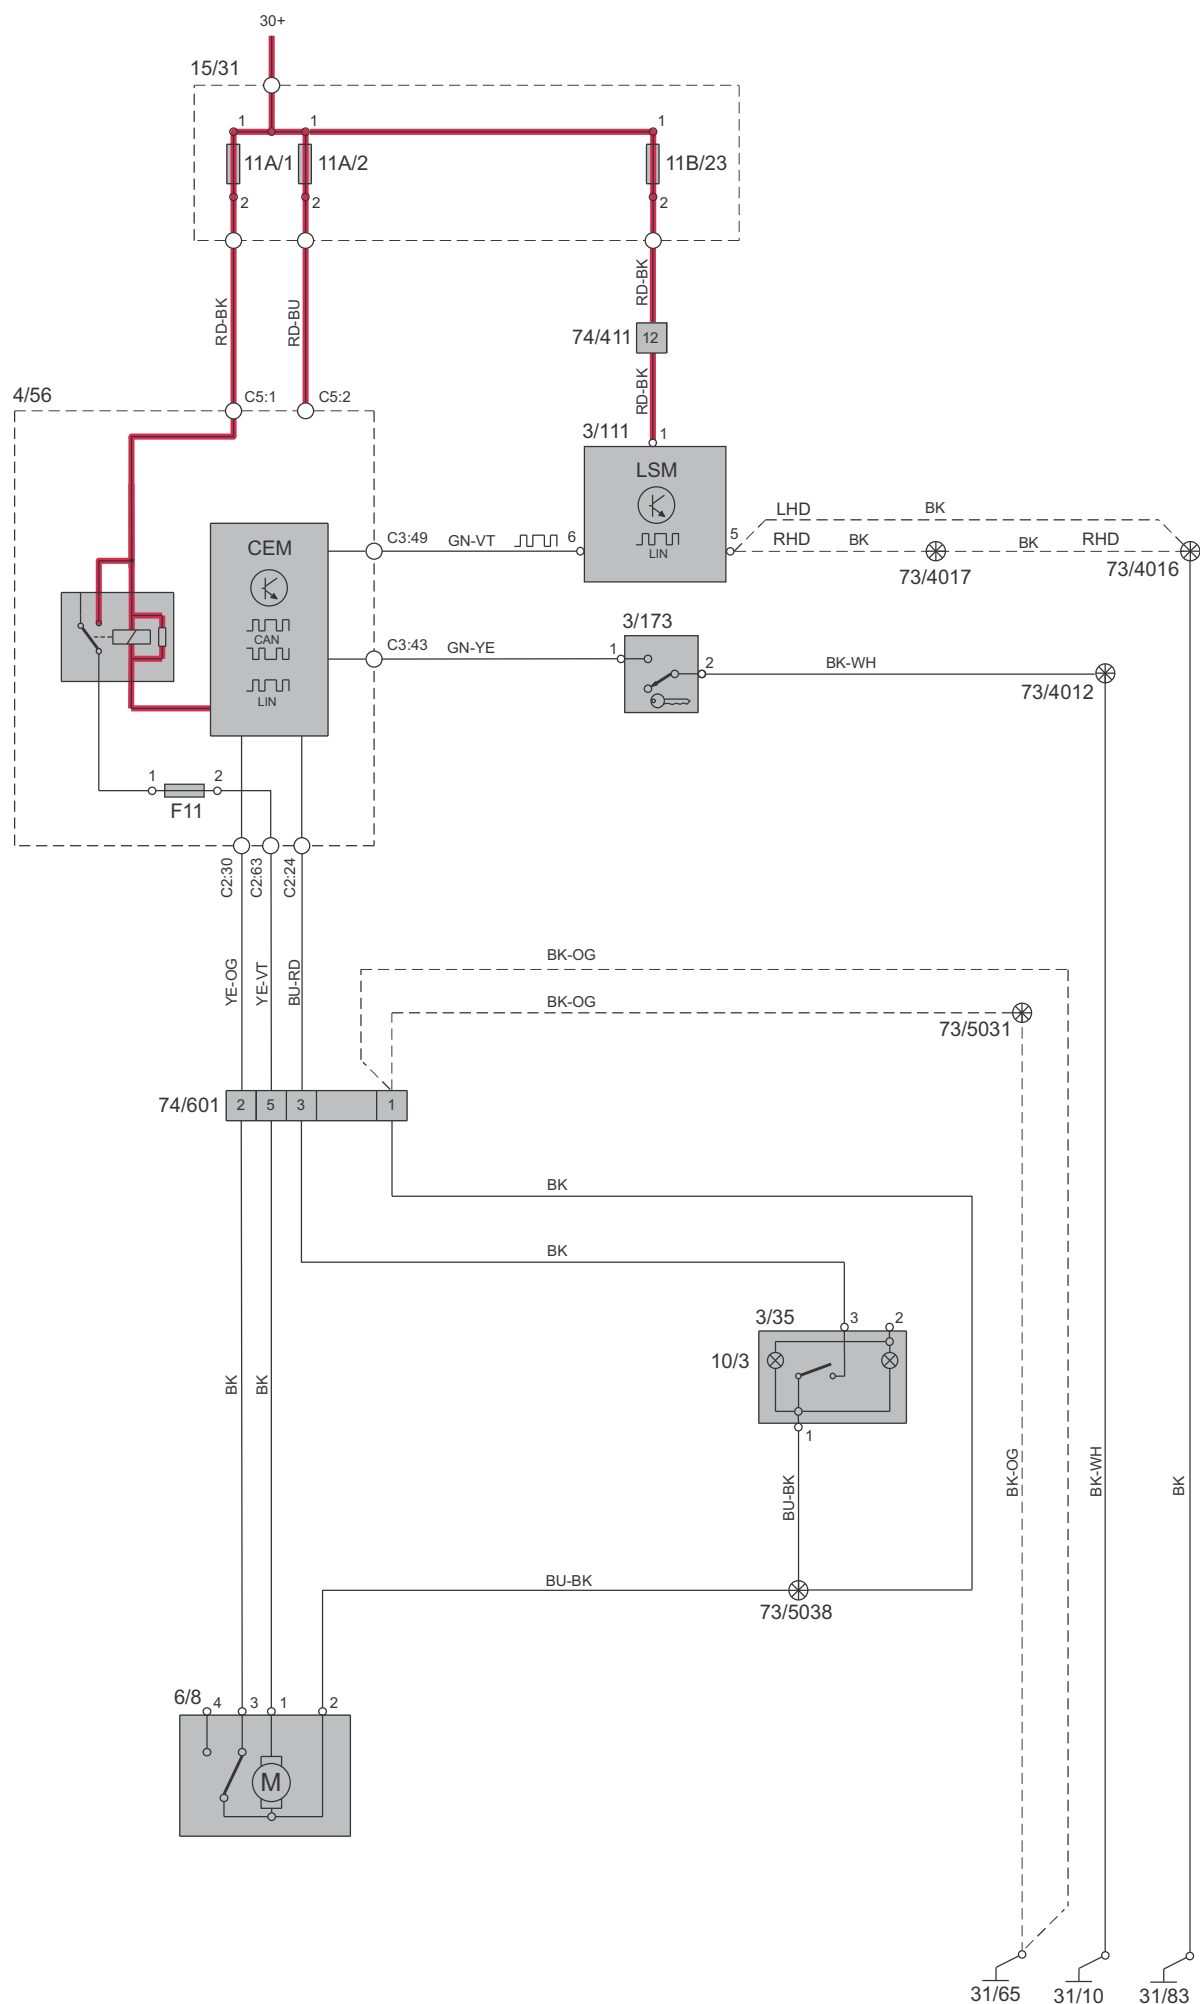

Group 83 Doors and openings


Central locking fuel filler flap

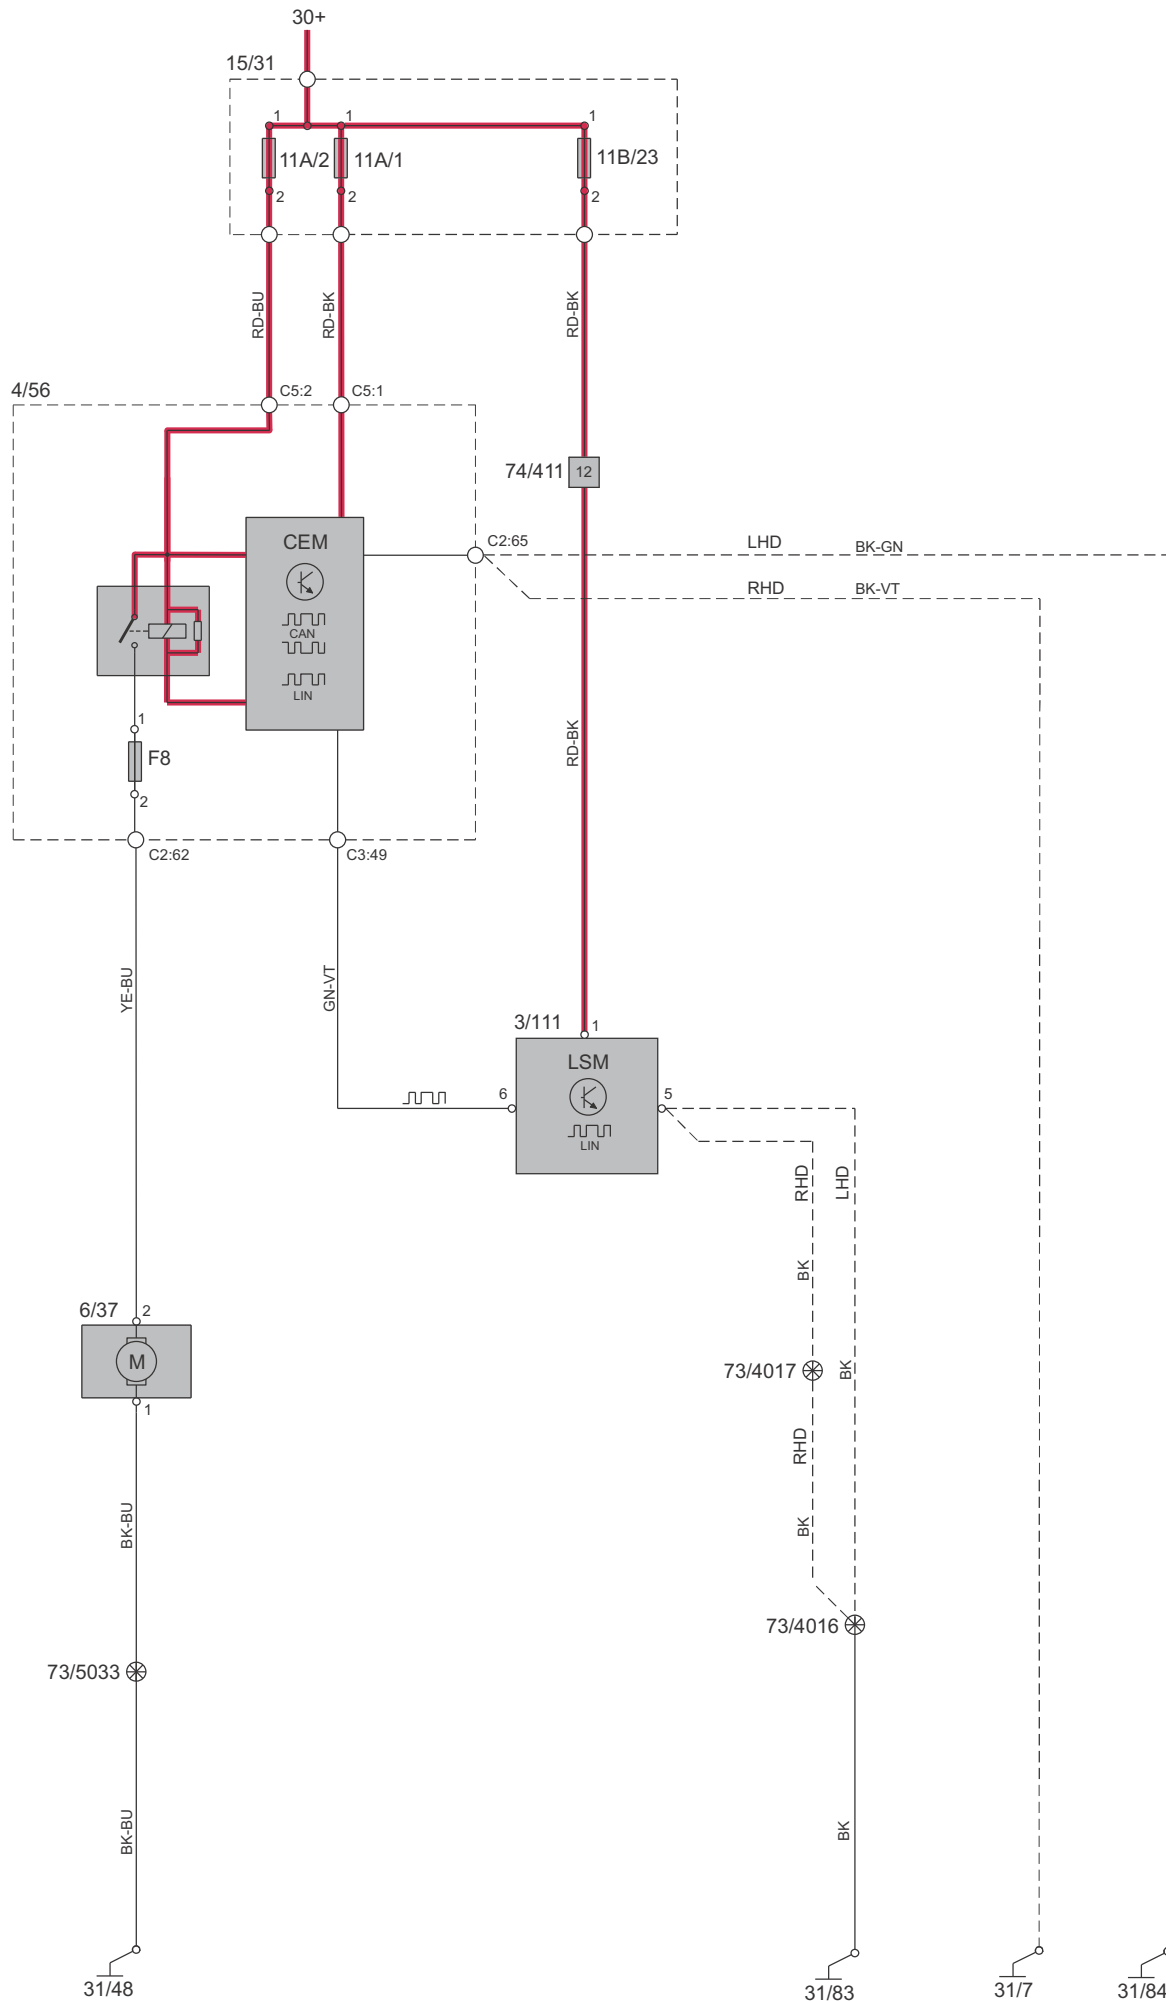


G042354

Group 83 Doors and openings

Signal receiver central locking

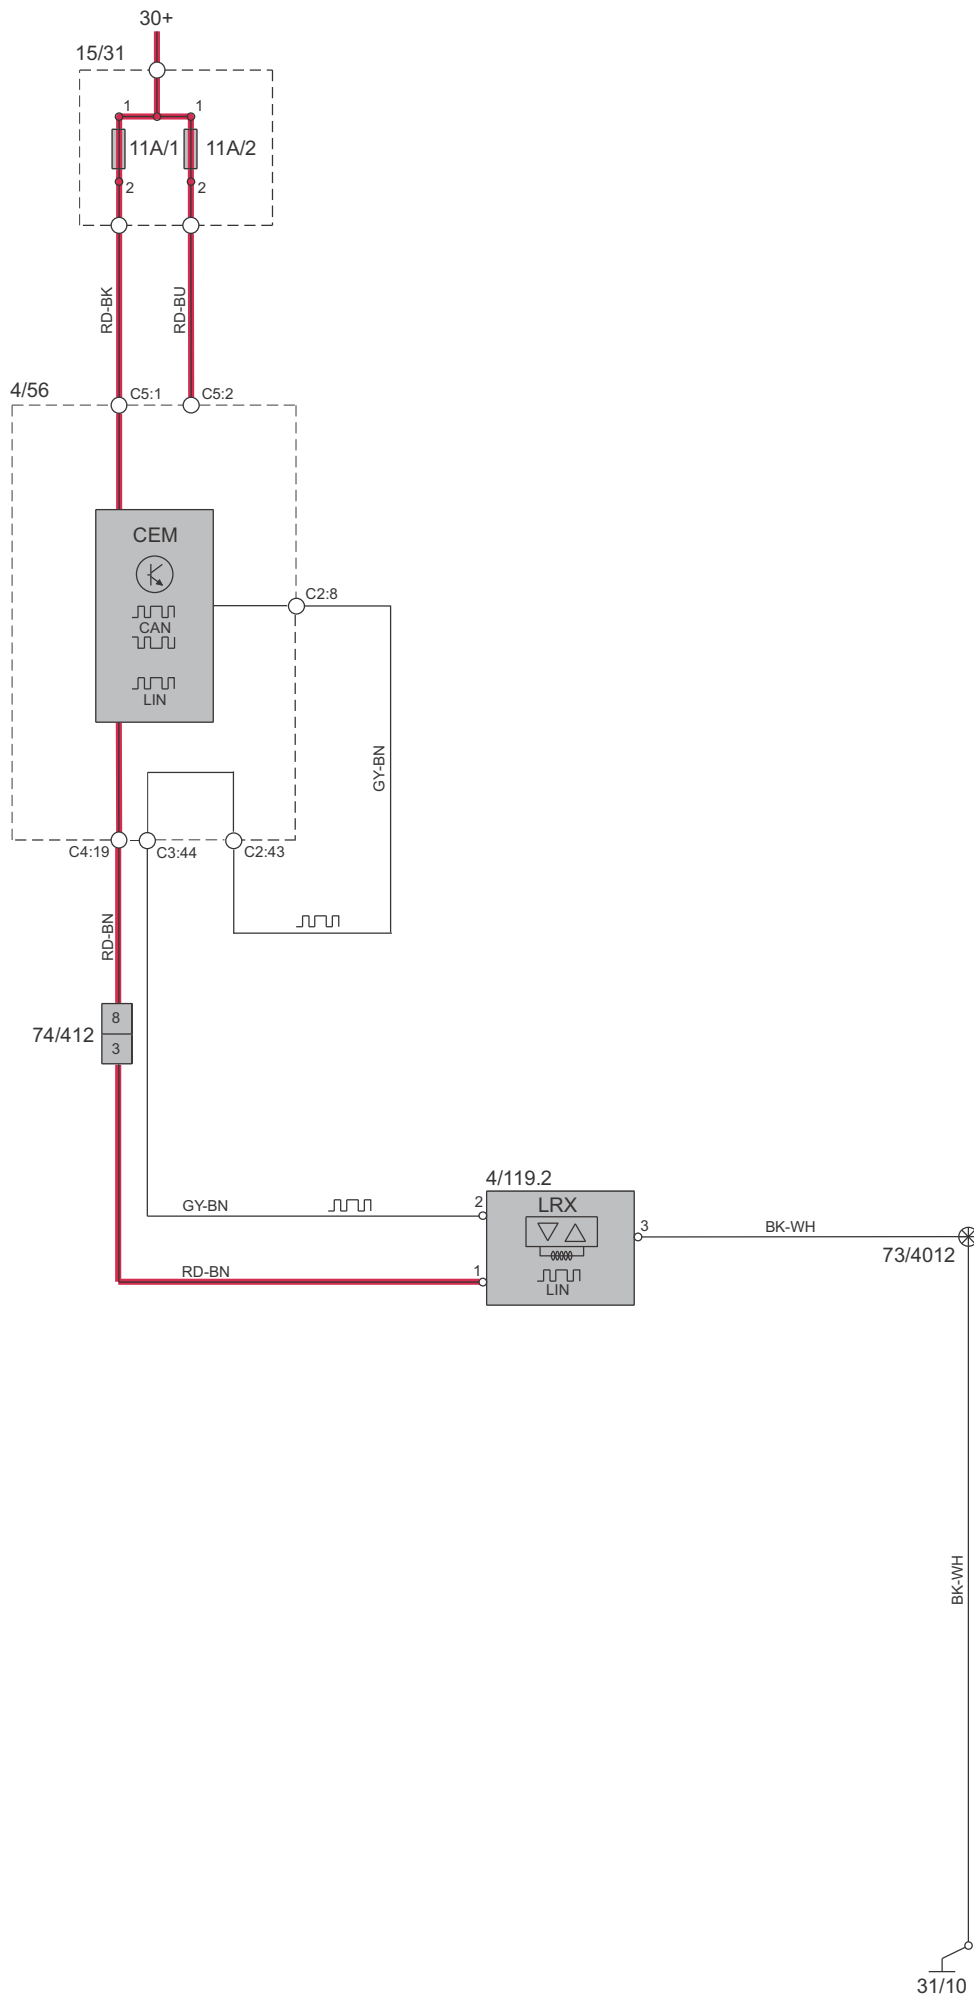


Group 83 Doors and openings
Power windows front doors LHD

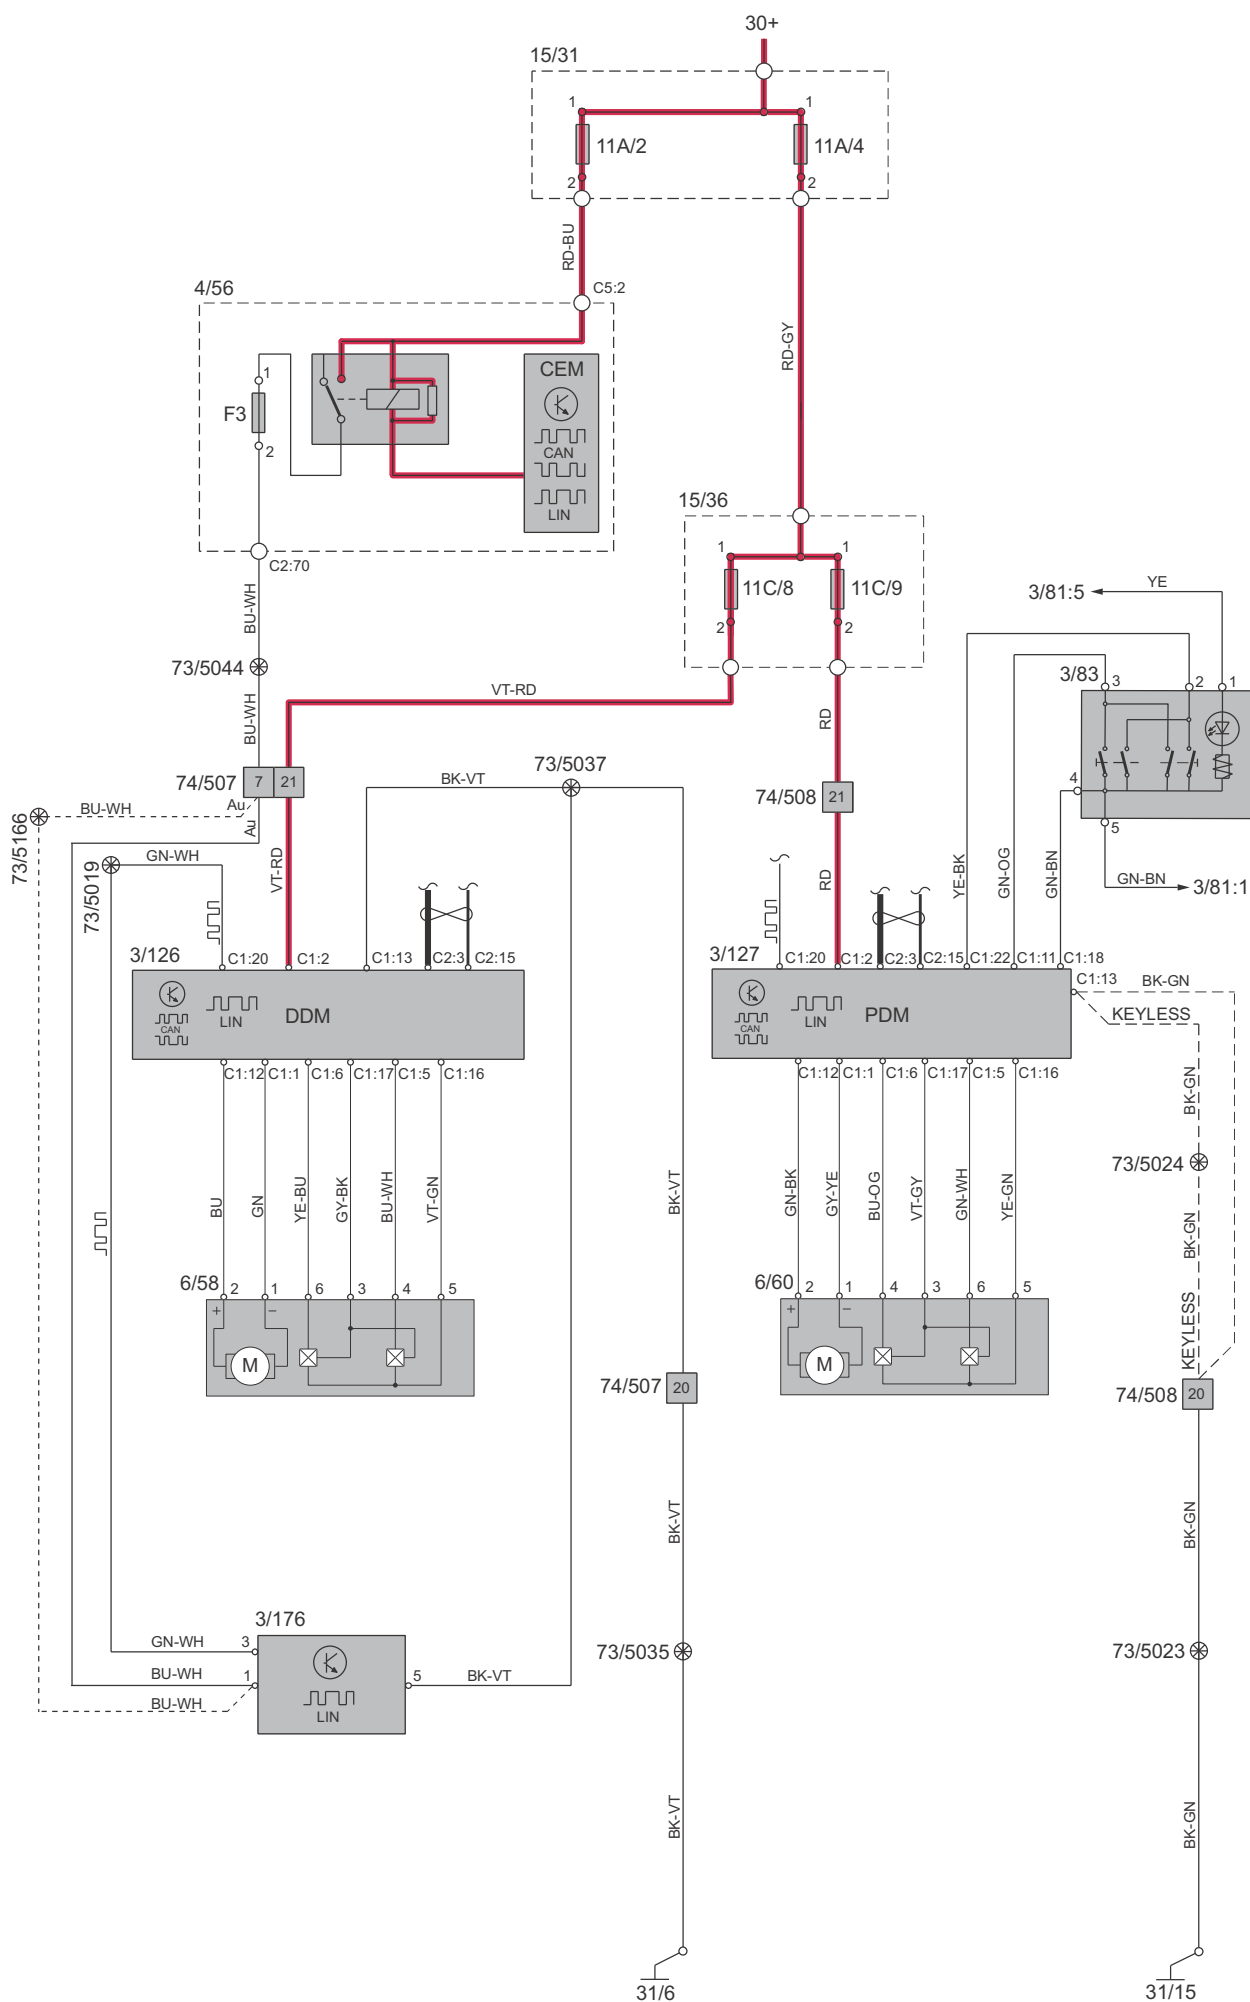

Group 83 Doors and openings


Power windows front doors RHD

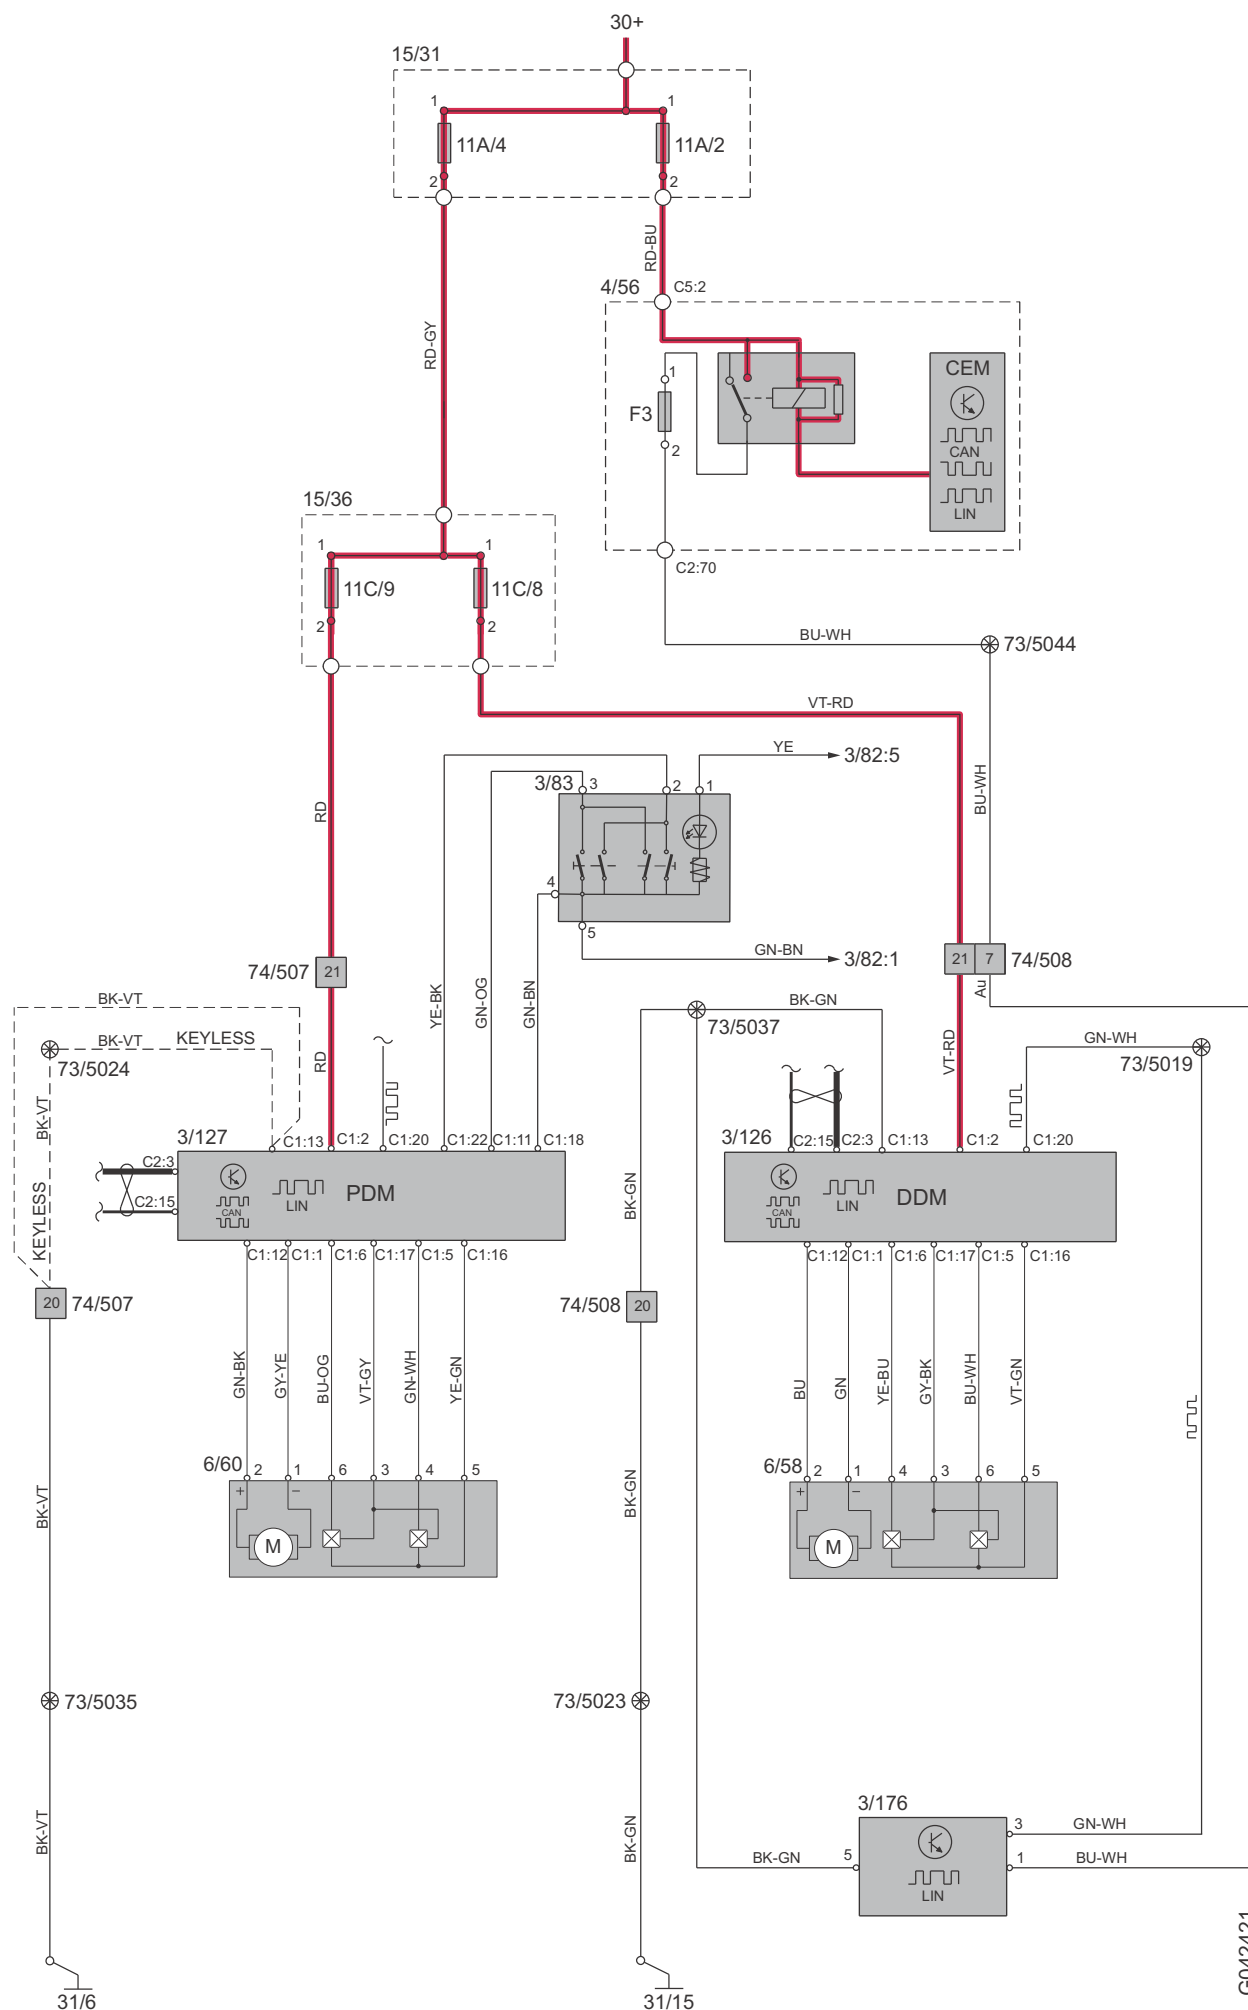

G042421


Group 83 Doors and openings

Power windows rear doors

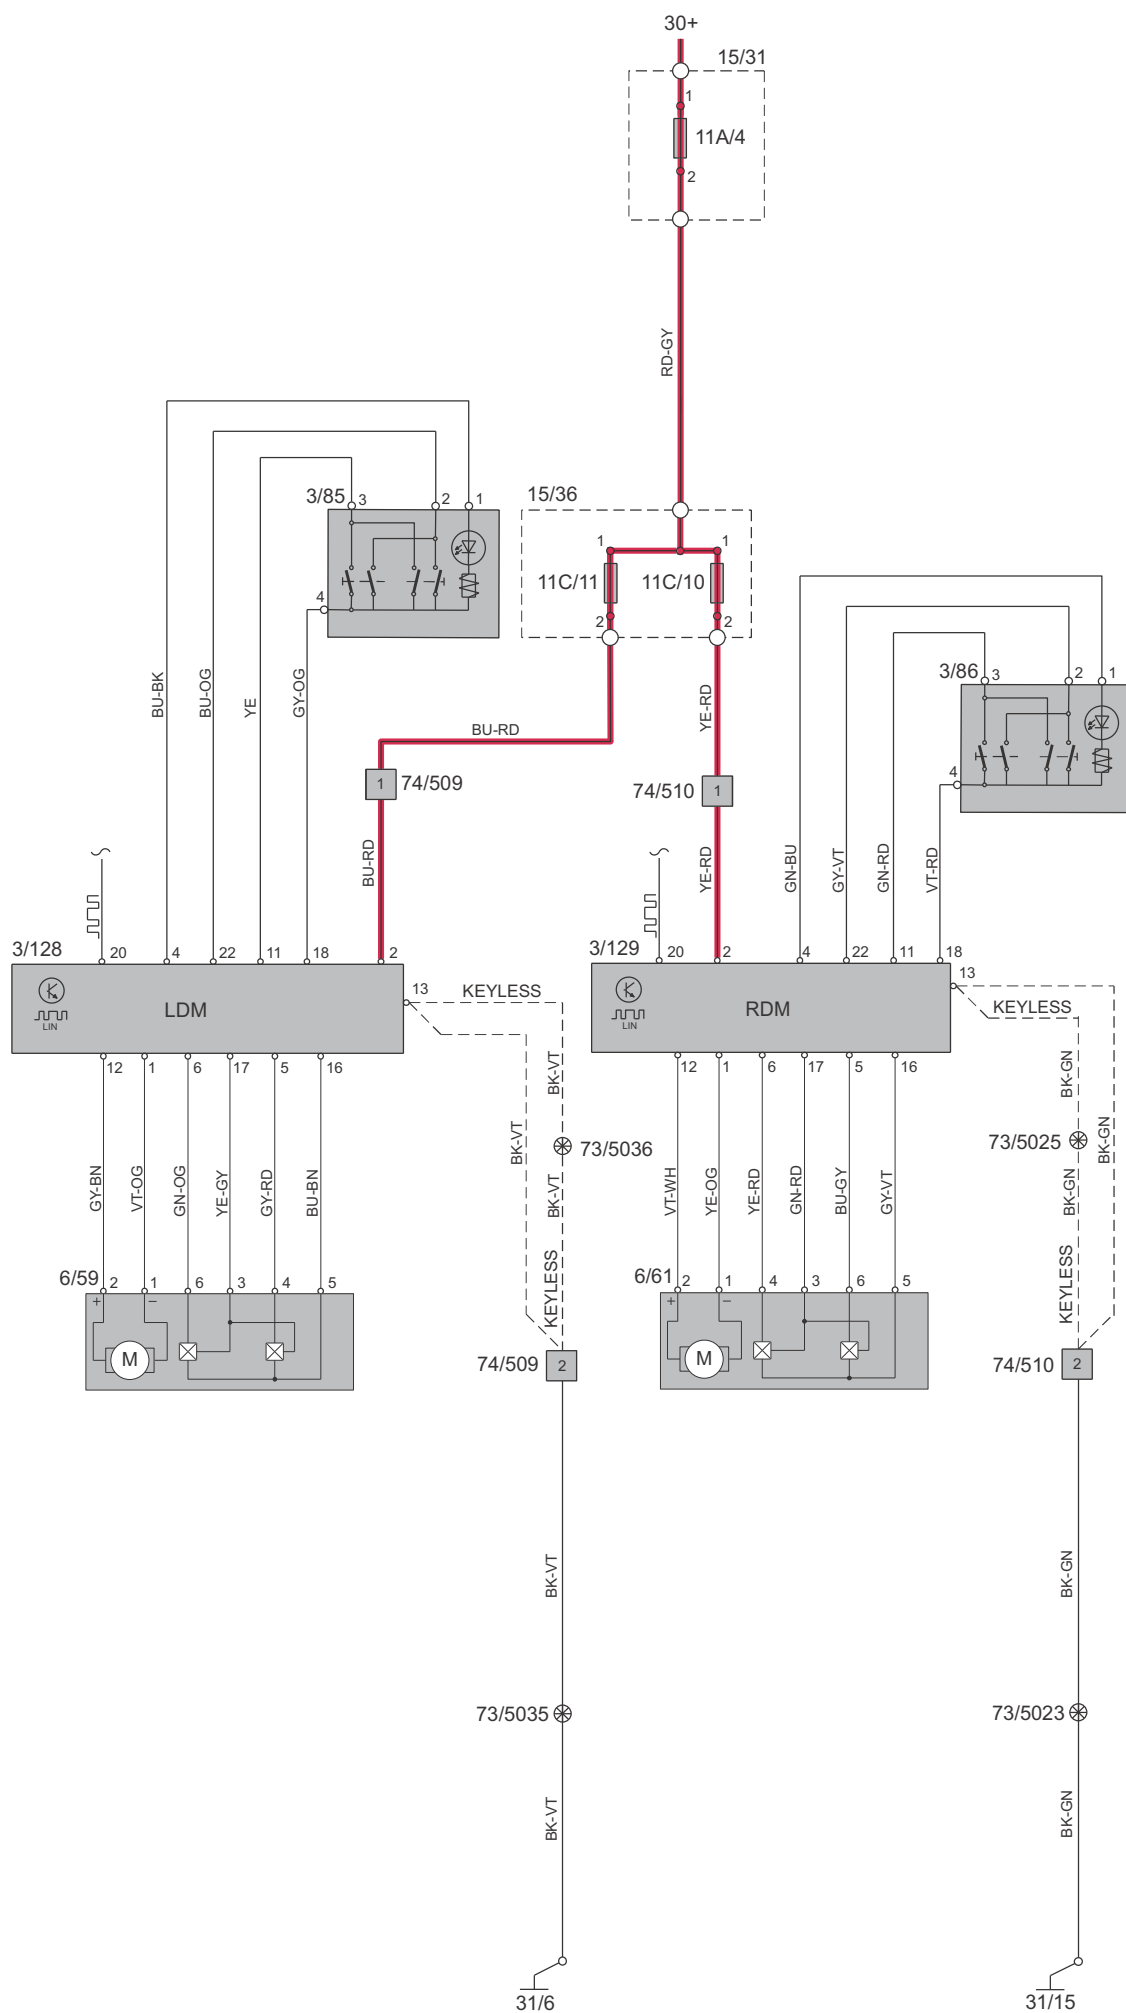


Group 83 Doors and openings

Power sunroof

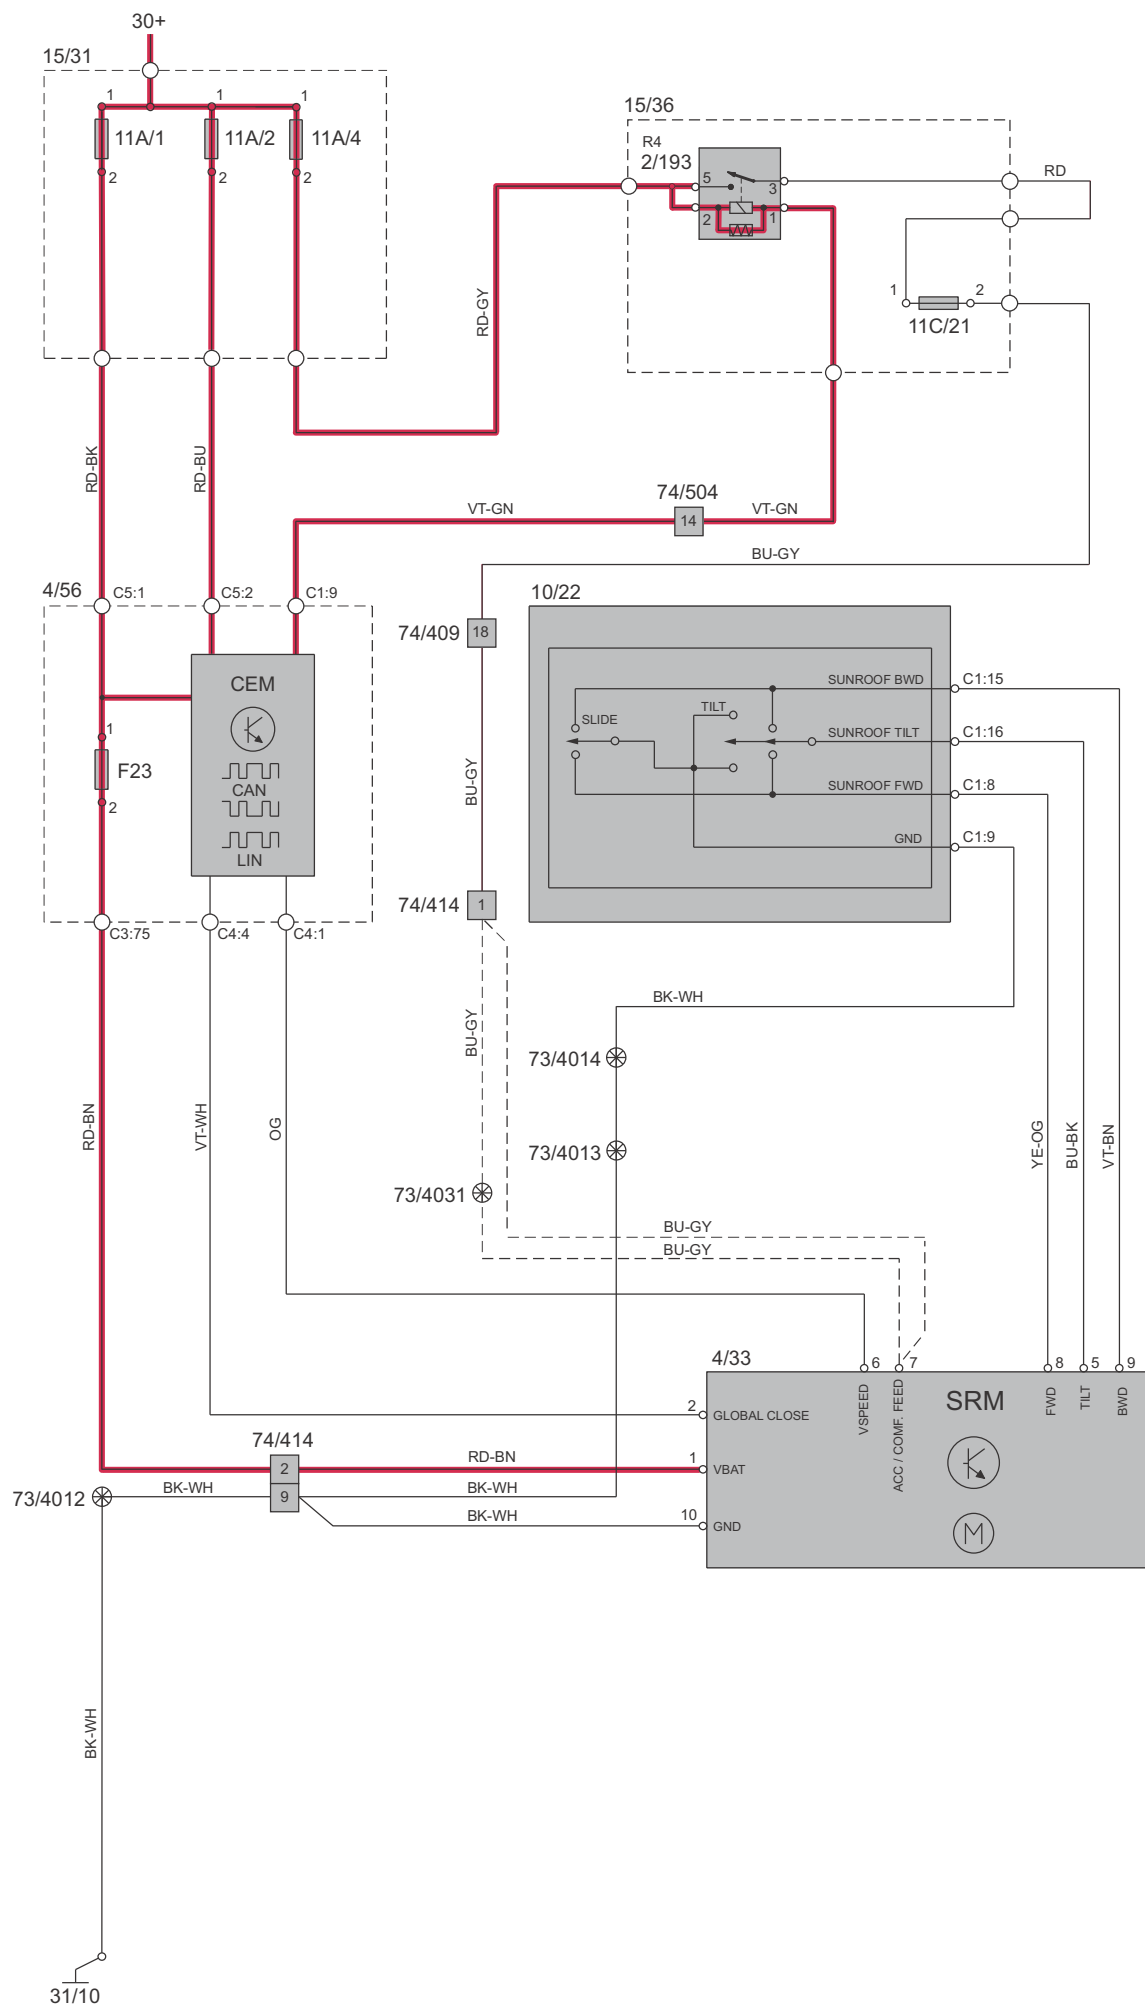


D00013

Group 84 Exterior decorative elements, etc. Power door mirrors LHD

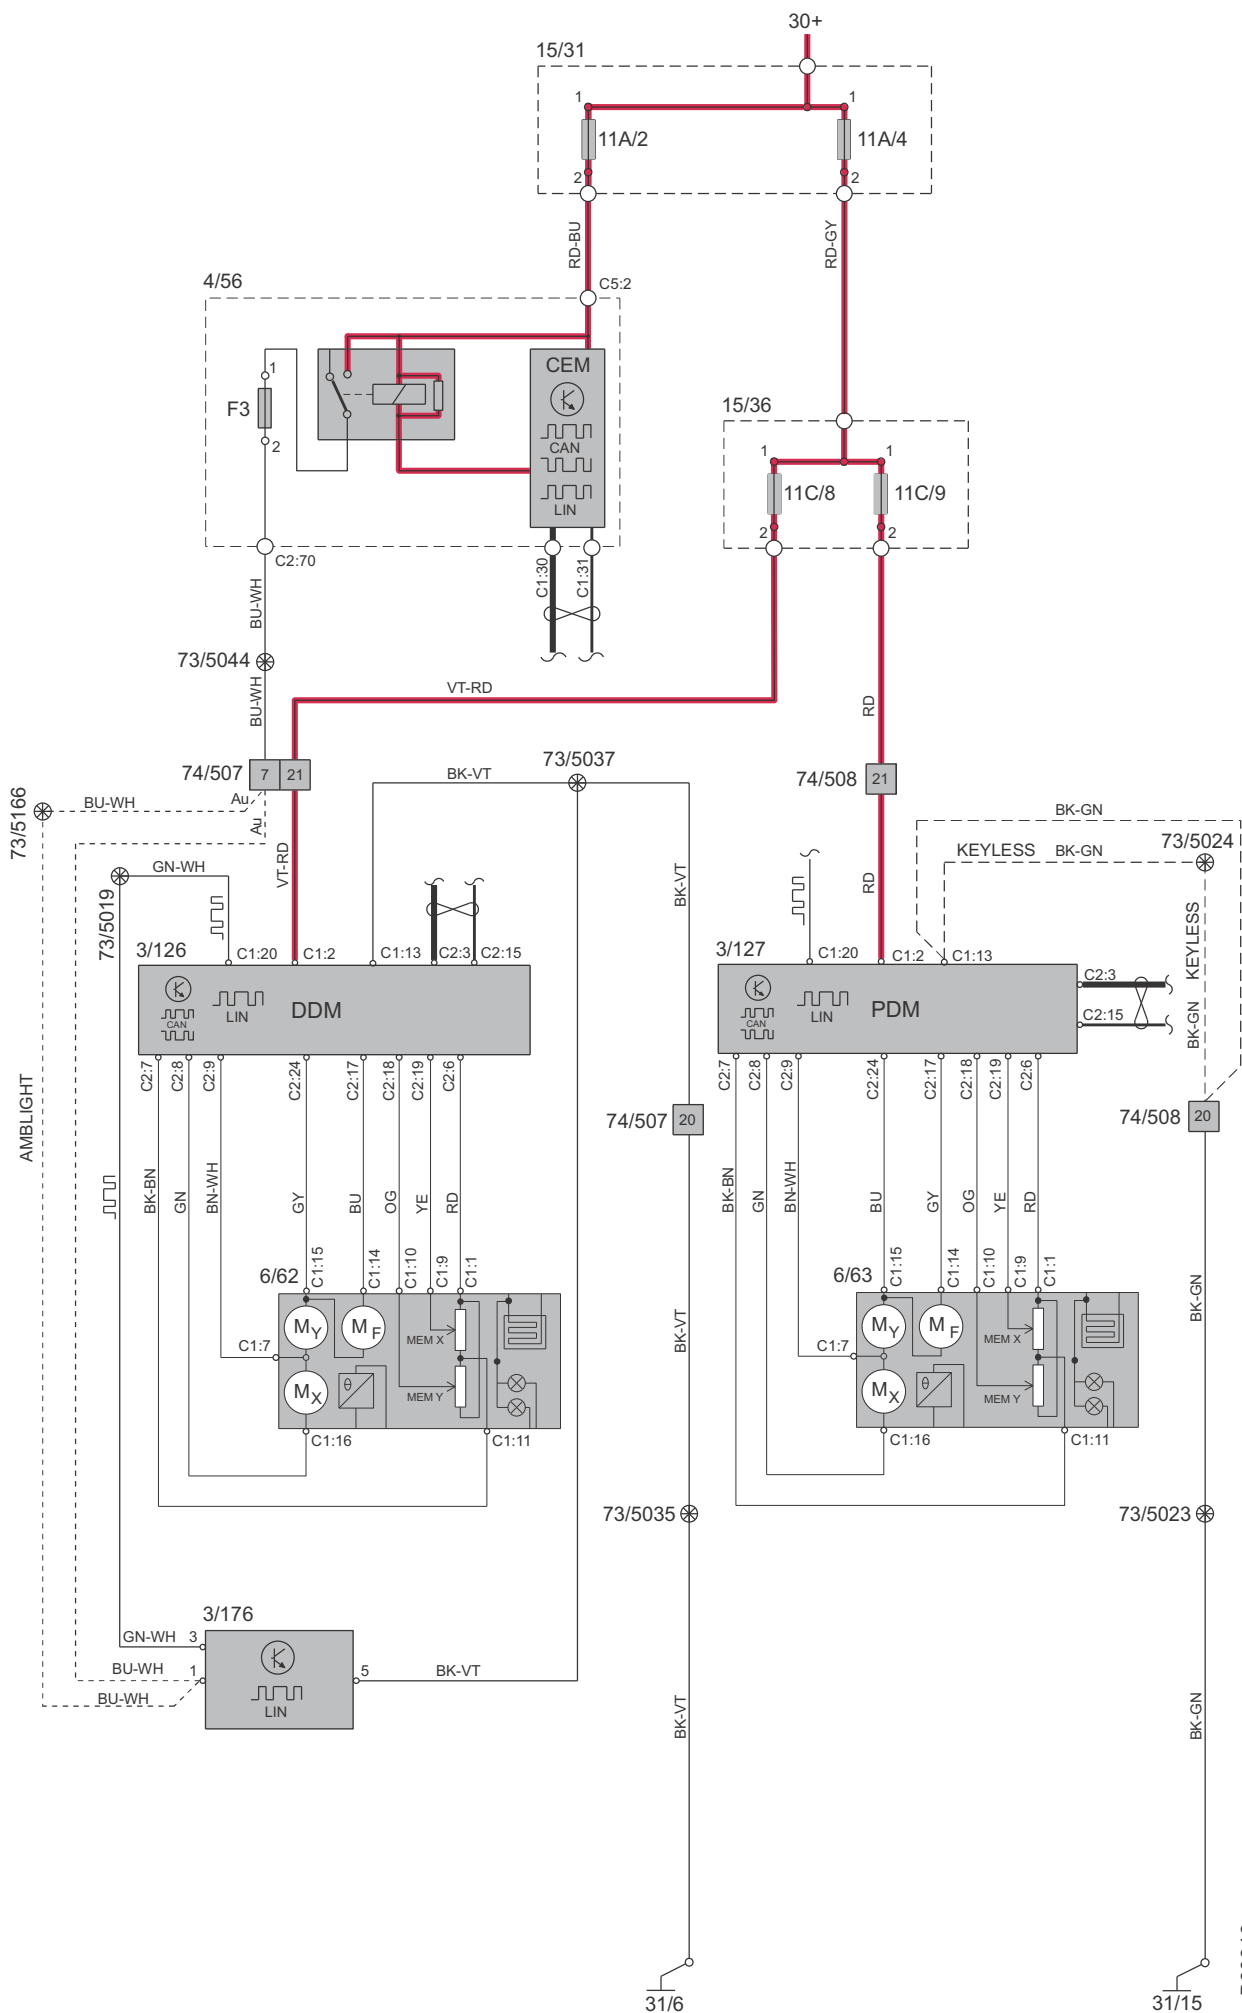


Group 84 Exterior decorative elements, etc.


Power door mirrors RHD

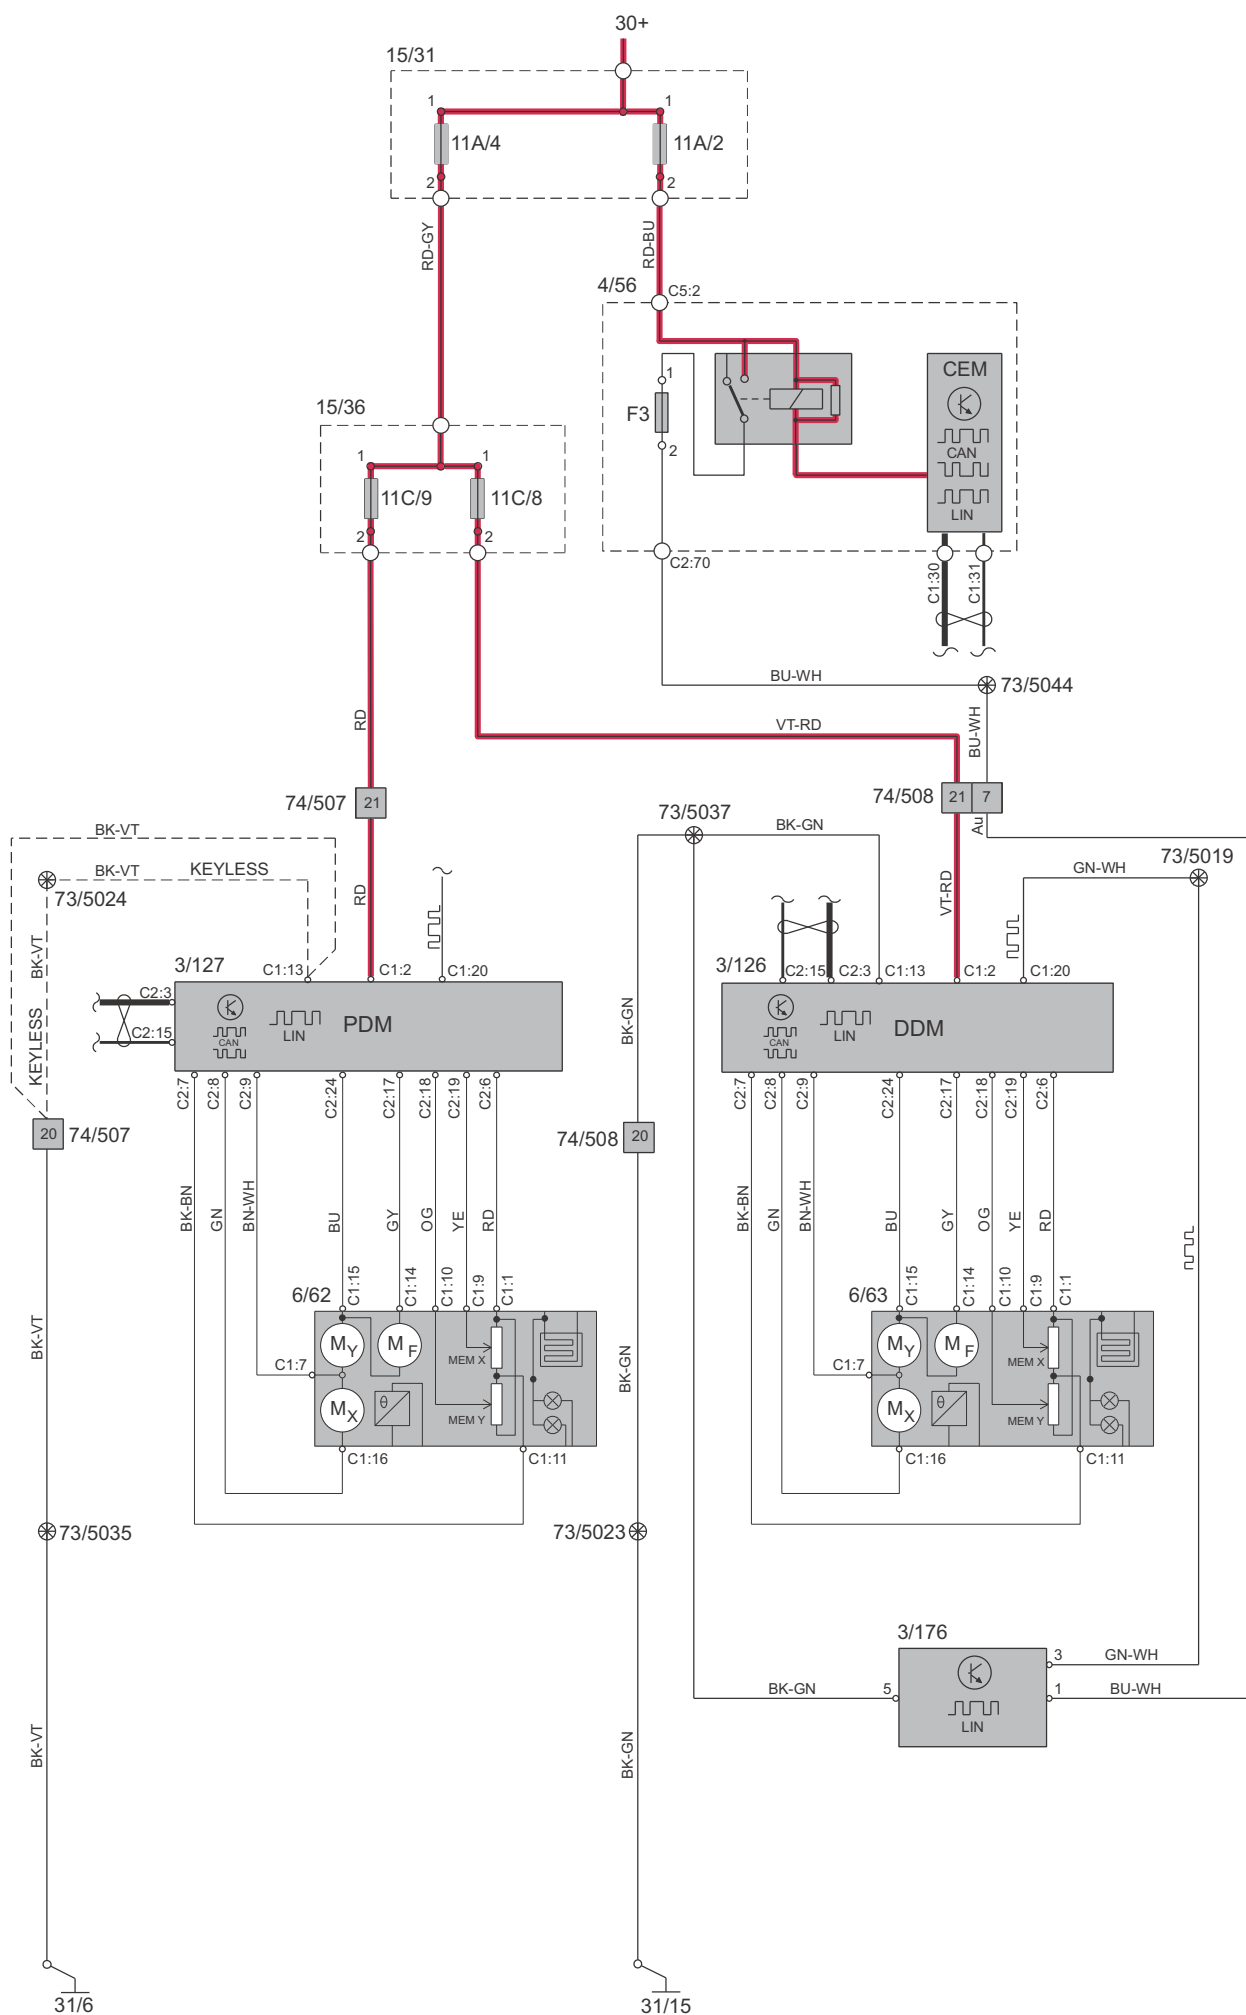


Group 84 Exterior decorative elements, etc.
Heated door mirrors LHD

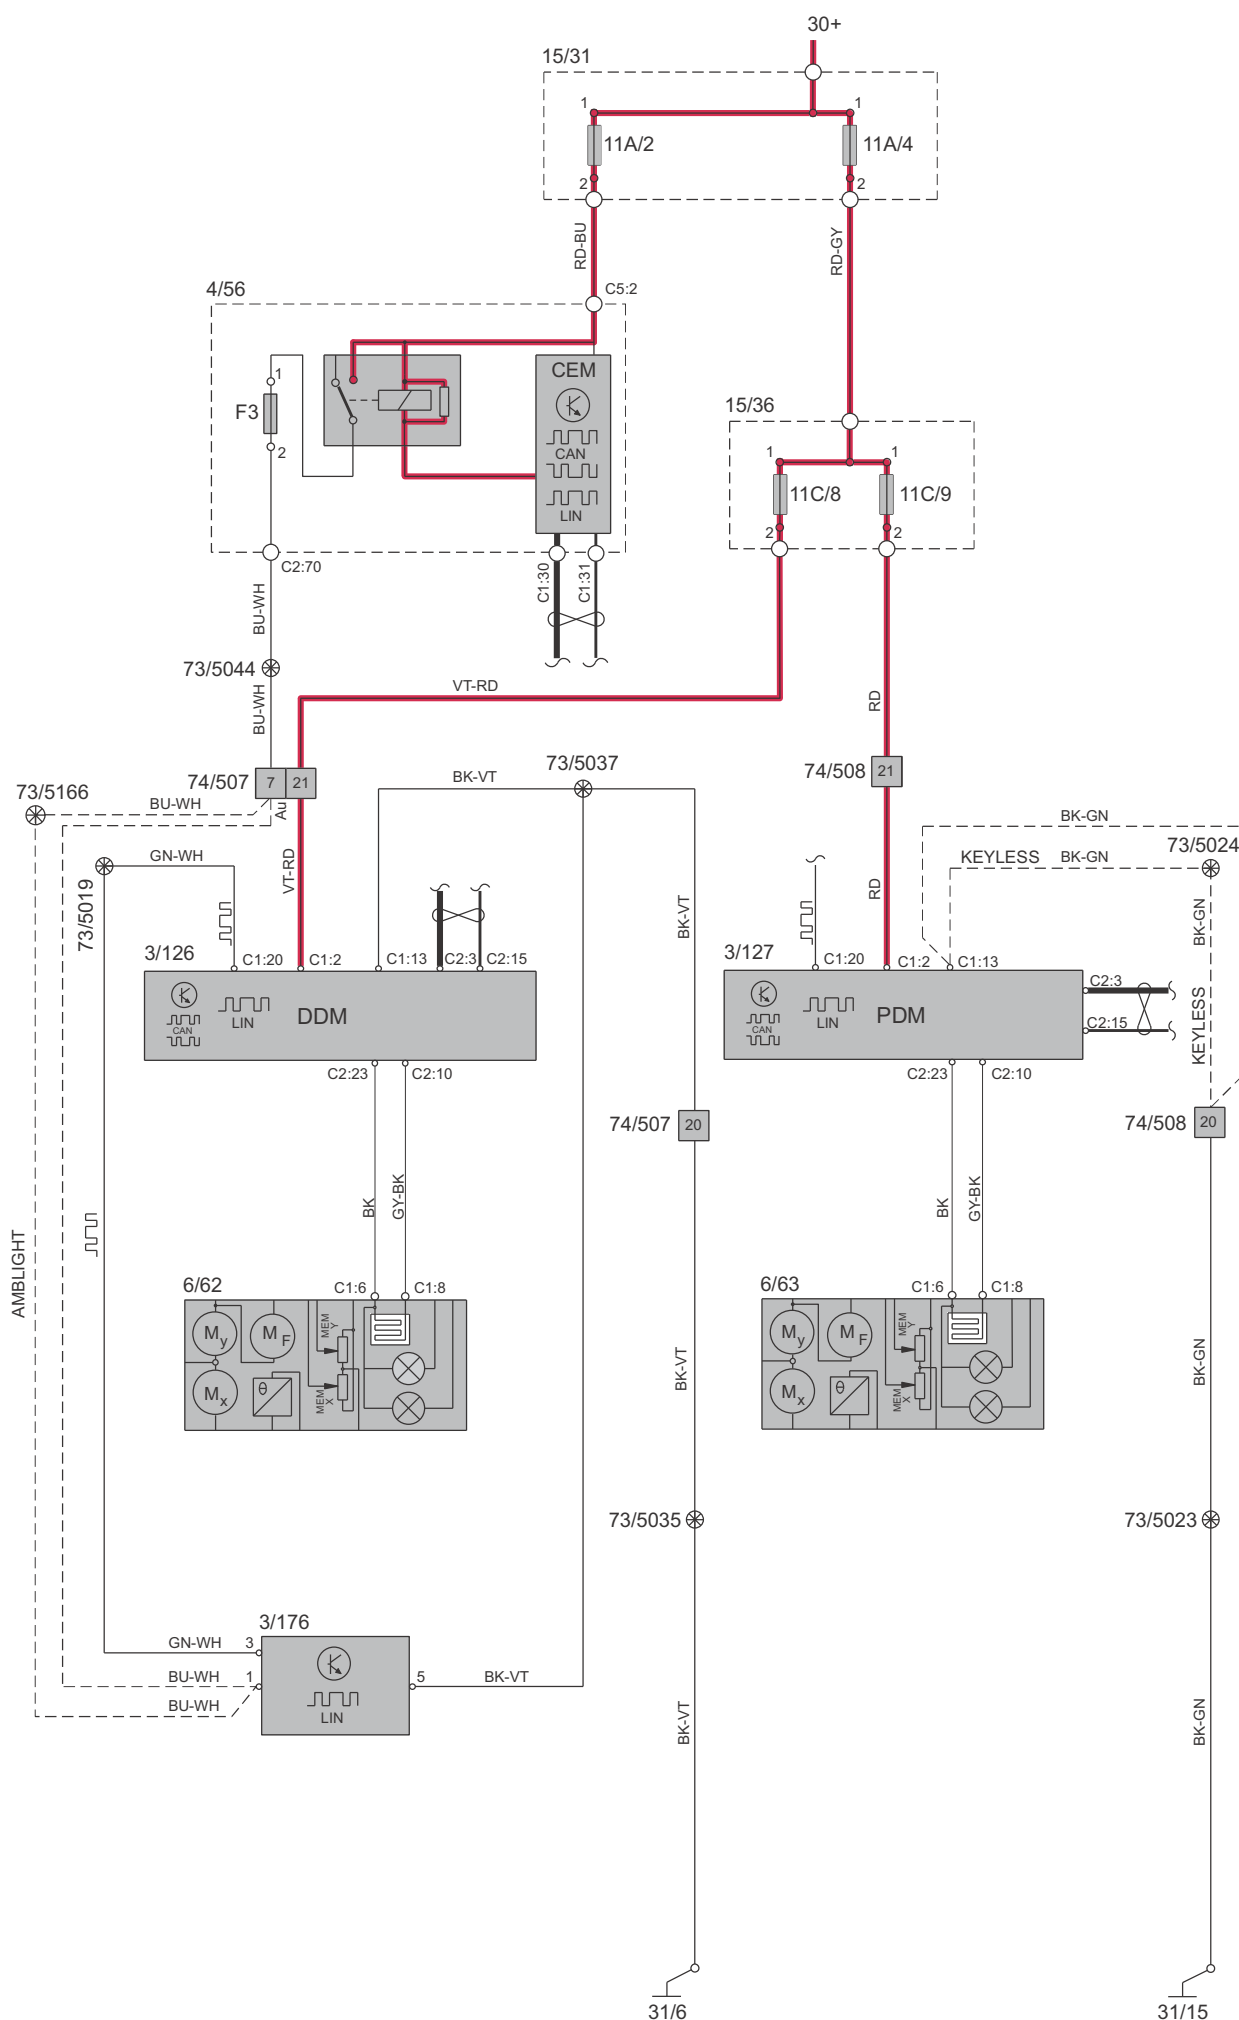


Group 84 Exterior decorative elements, etc. Heated door mirrors RHD

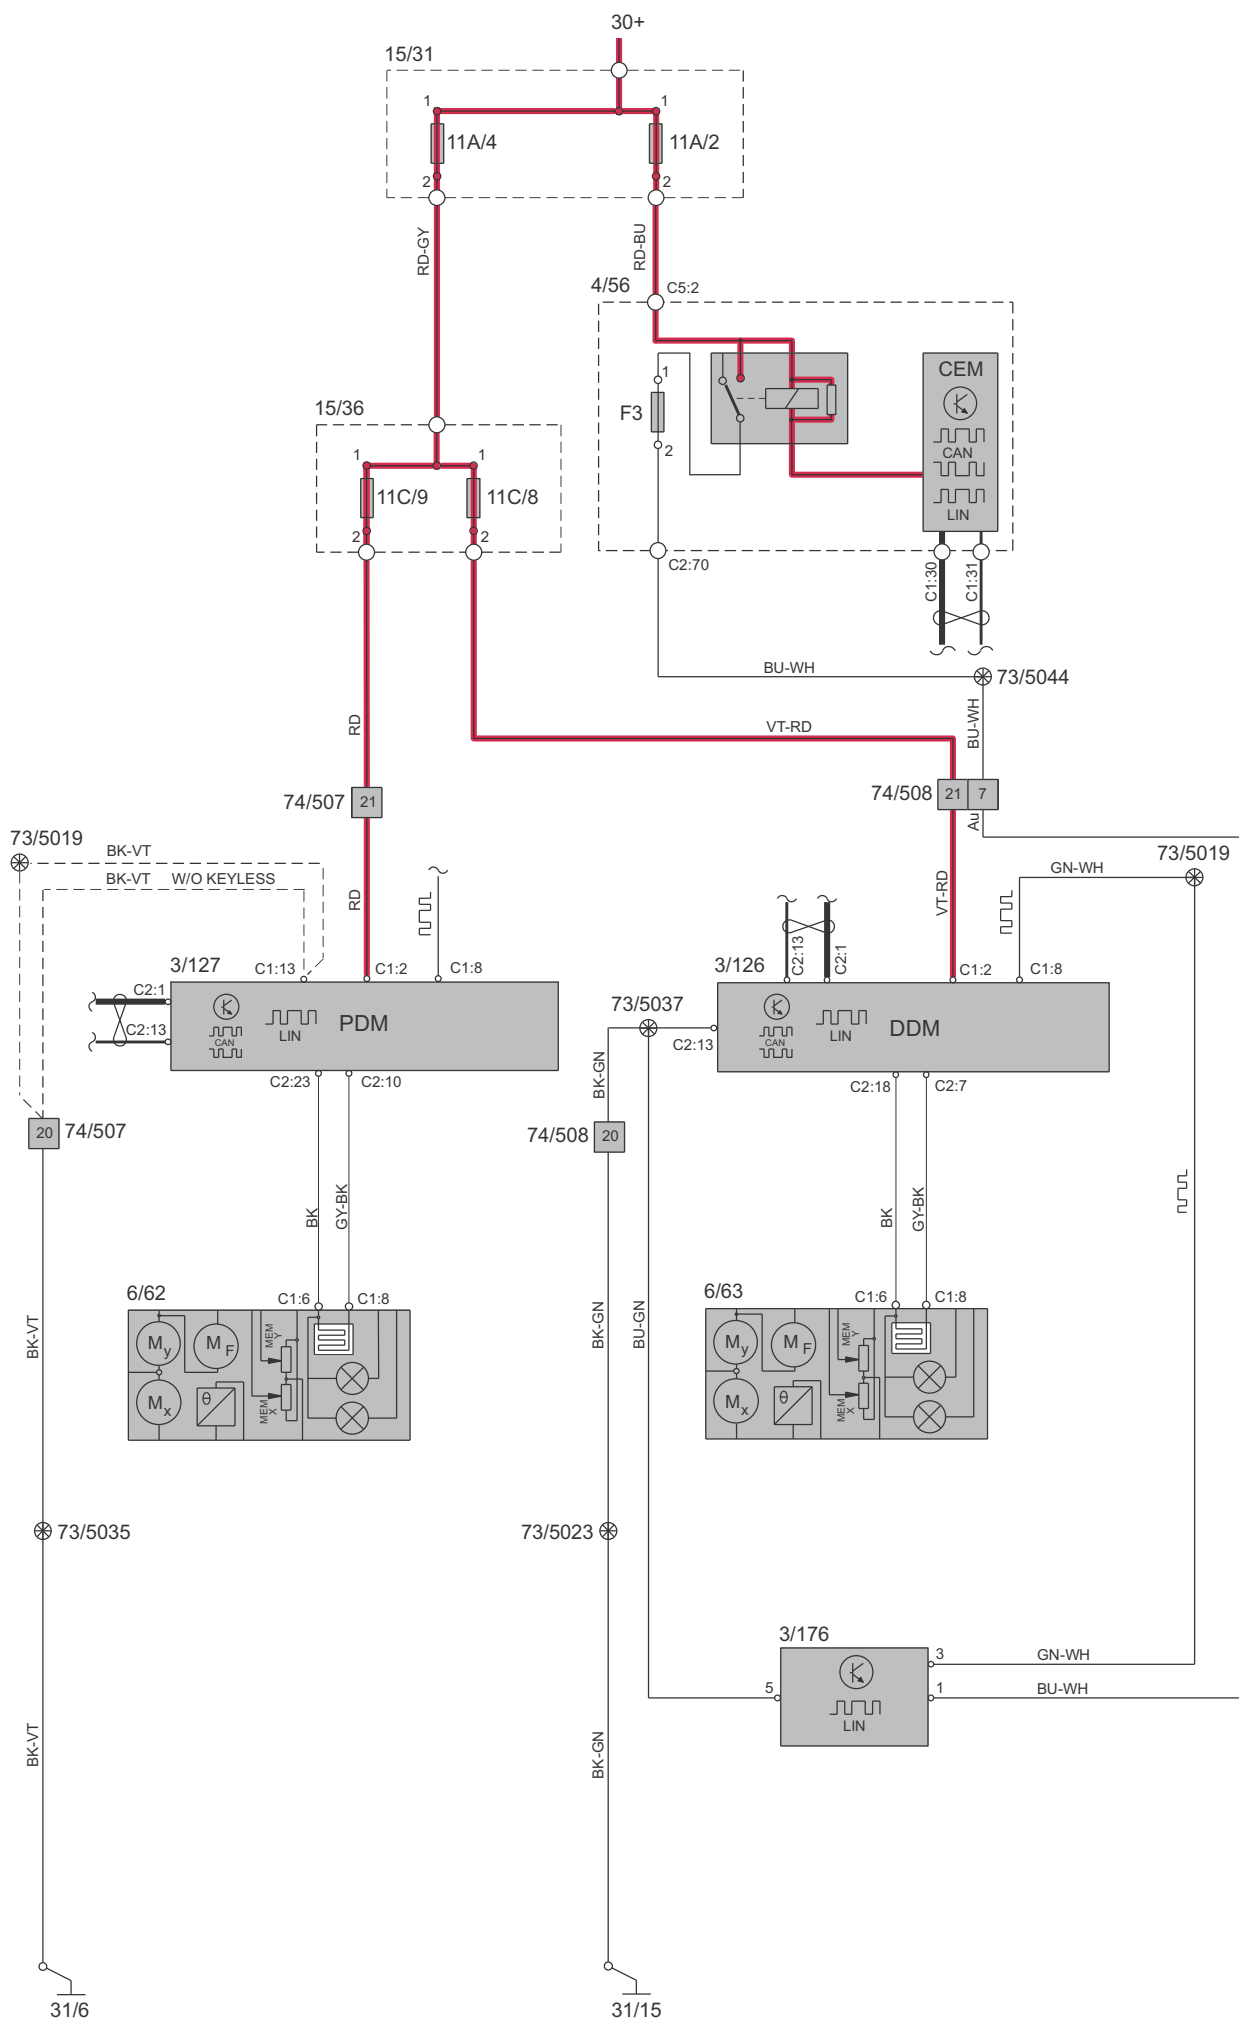

Group 84 Exterior decorative elements, etc. Blind spot information system LHD

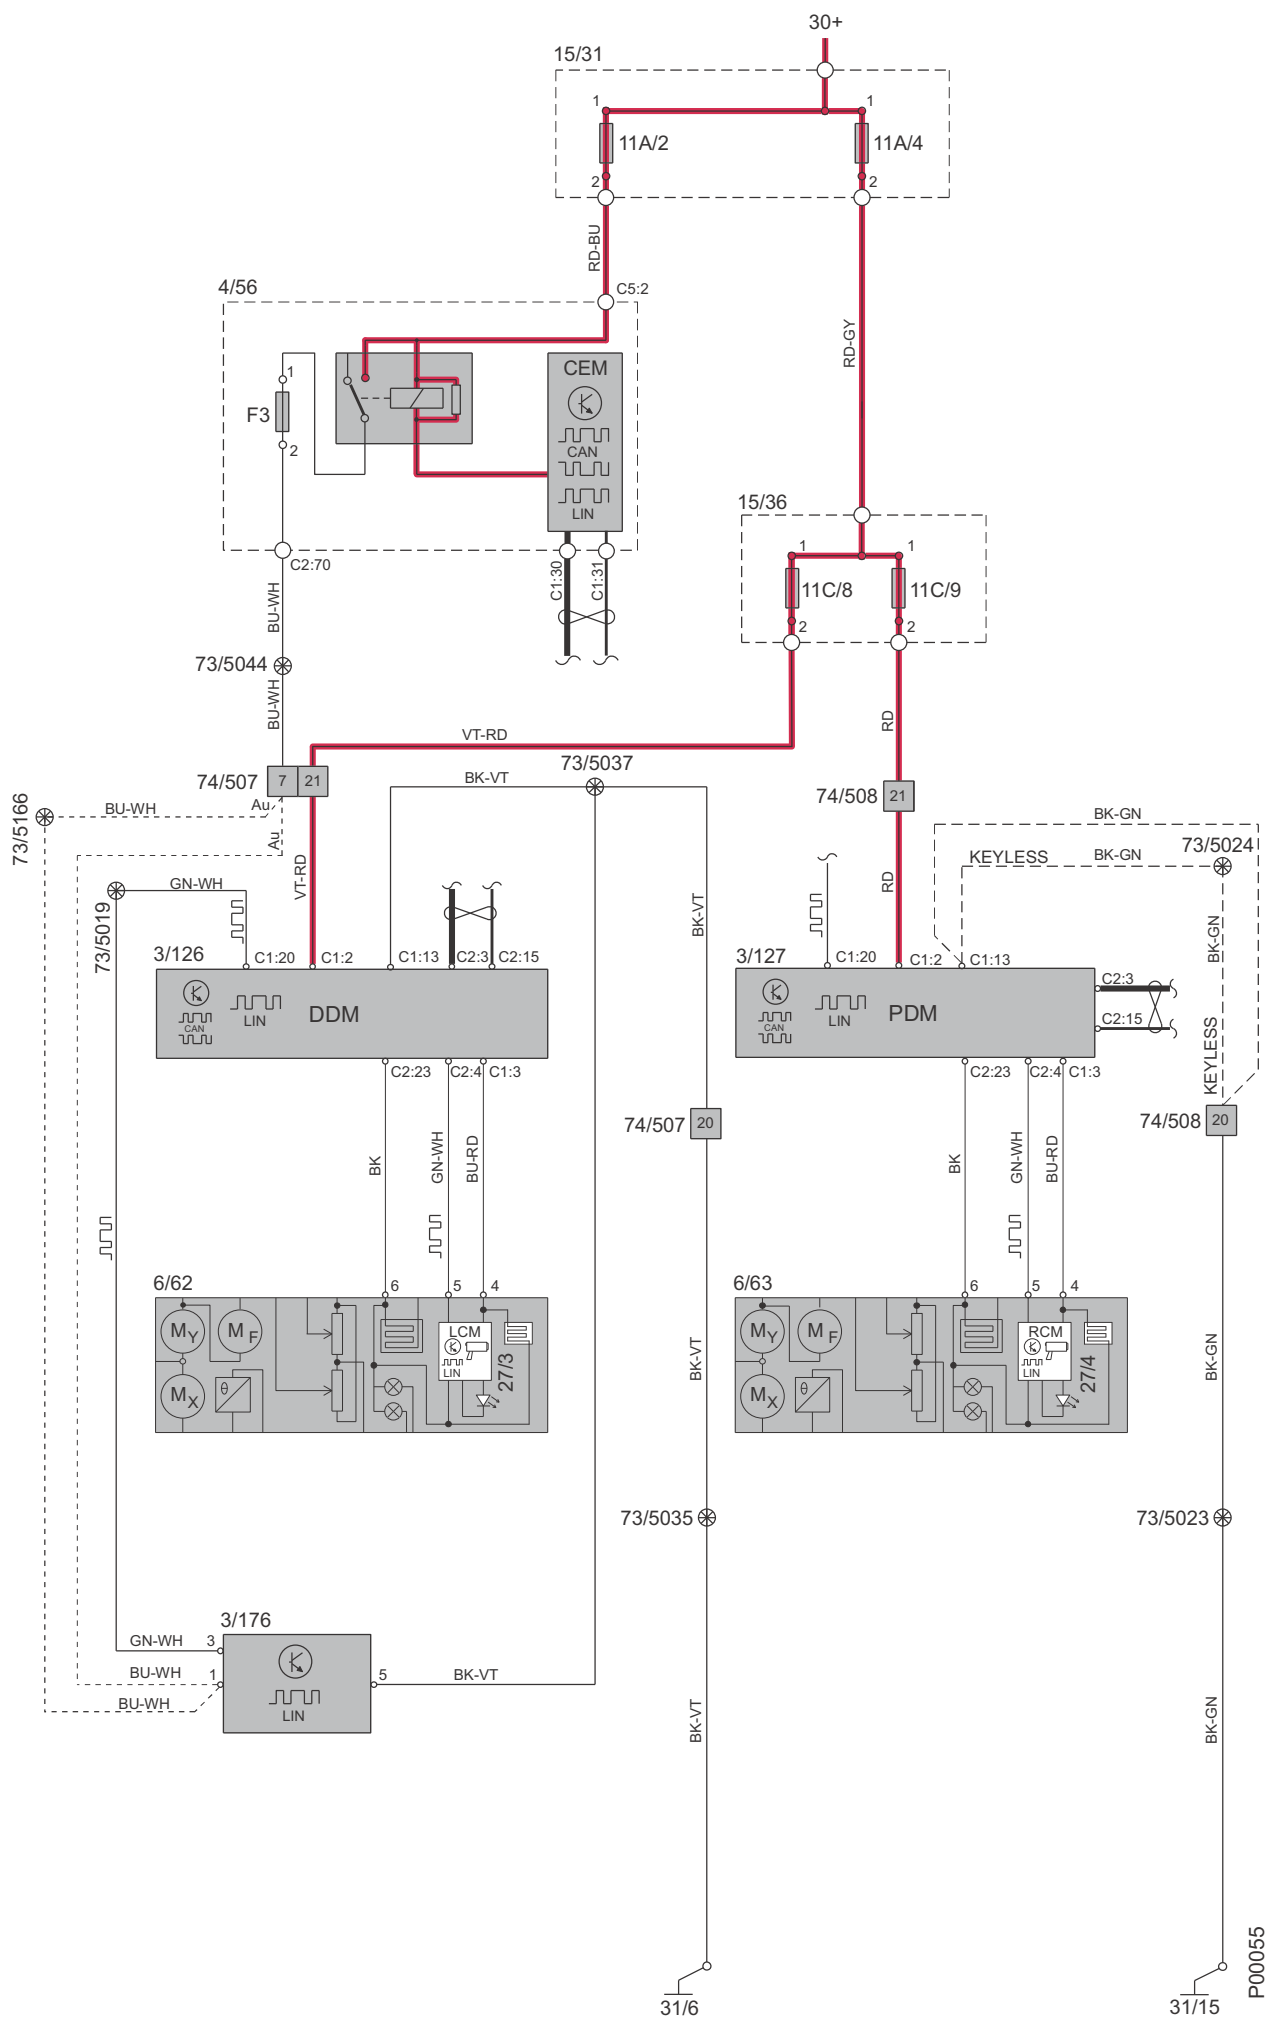


Group 84 Exterior decorative elements, etc. Blind spot information system RHD

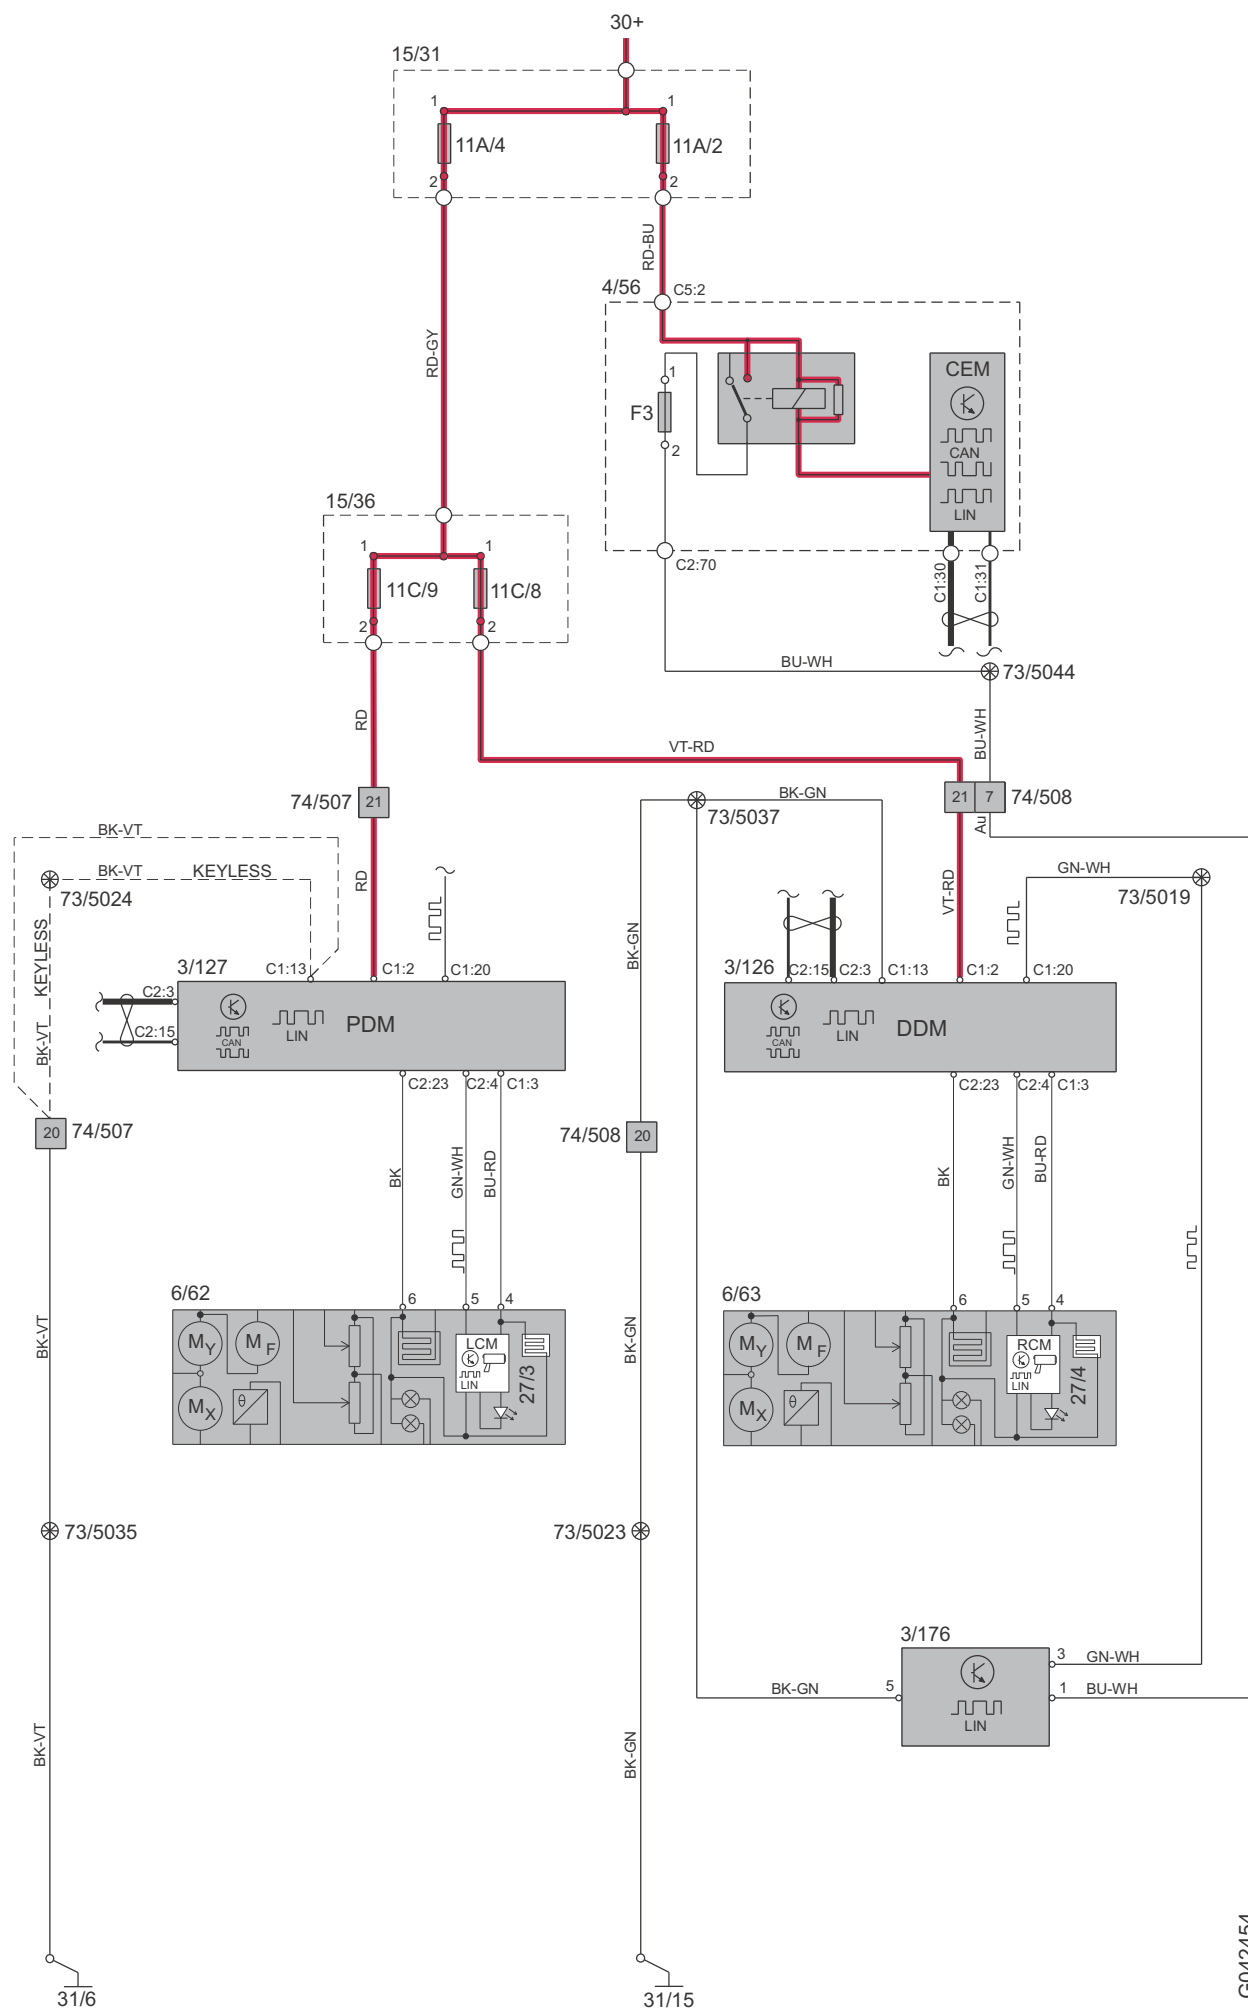


G042454

Group 84 Exterior decorative elements, etc. Heated rear window

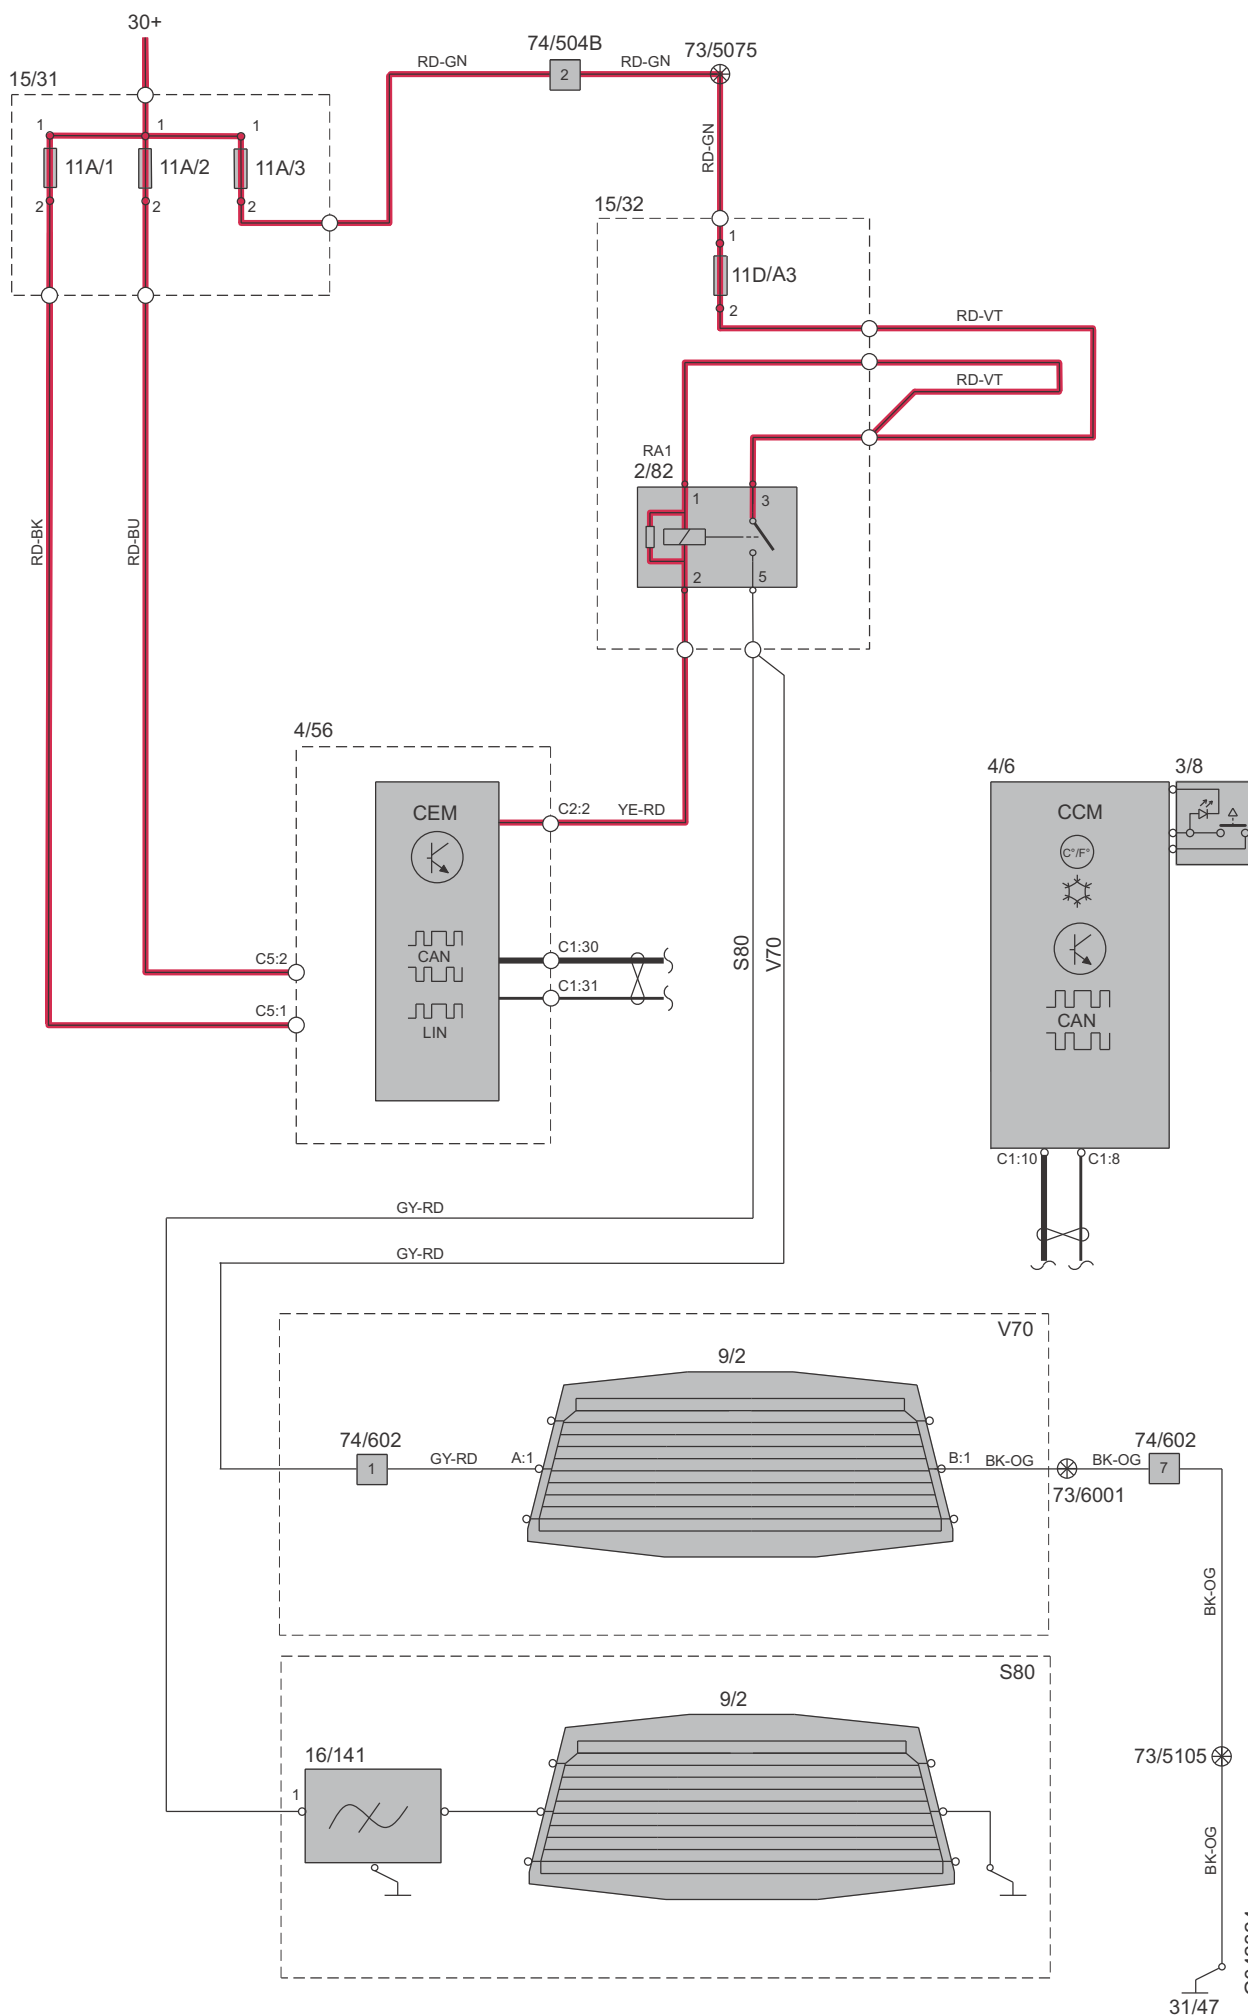


Group 85 Interior equipment Power driver's seat with memory function, LHD

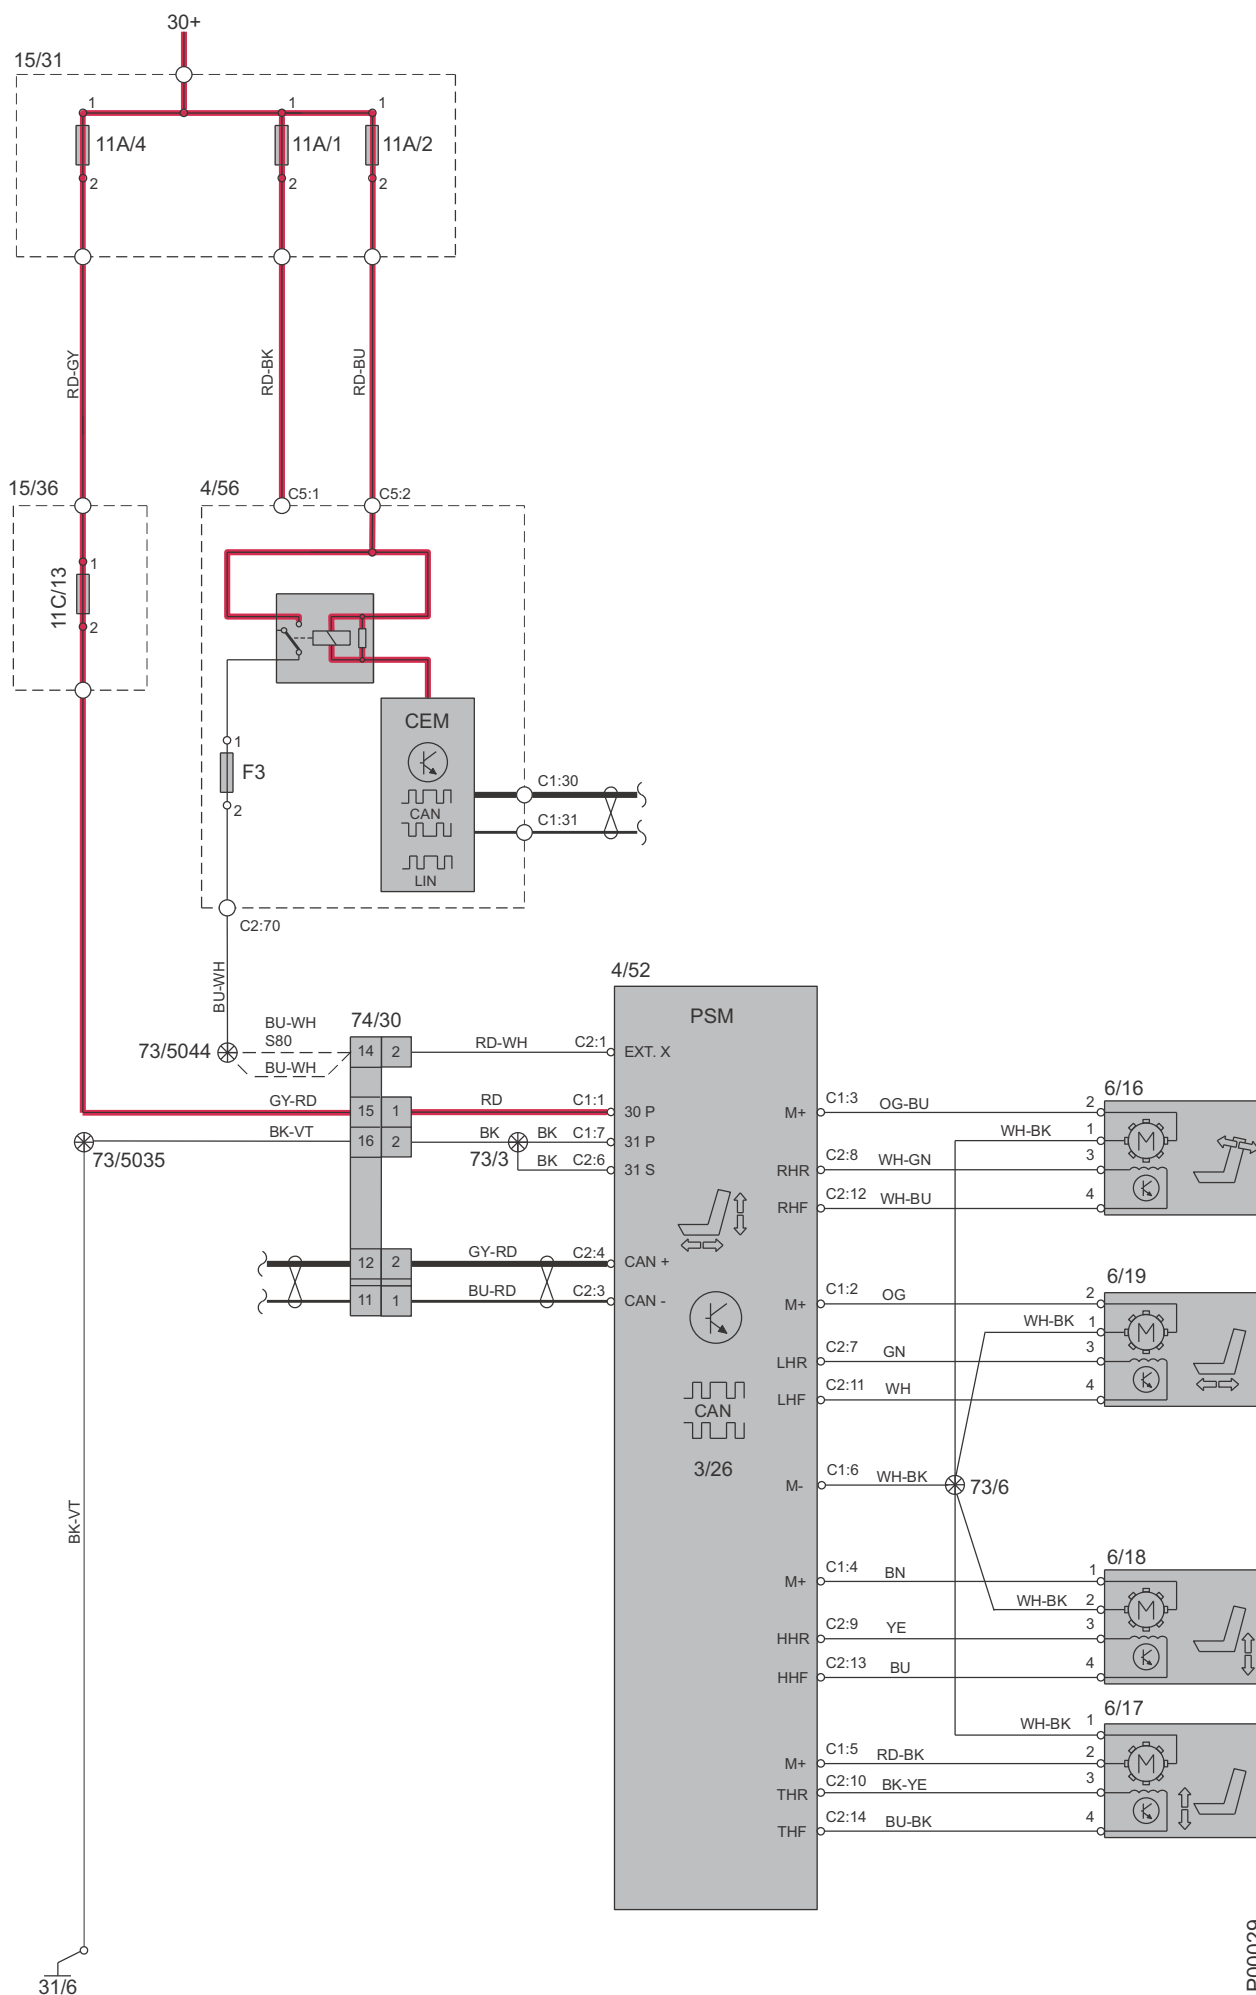

P00029


Group 85 Interior equipment Power driver's seat with memory function, RHD

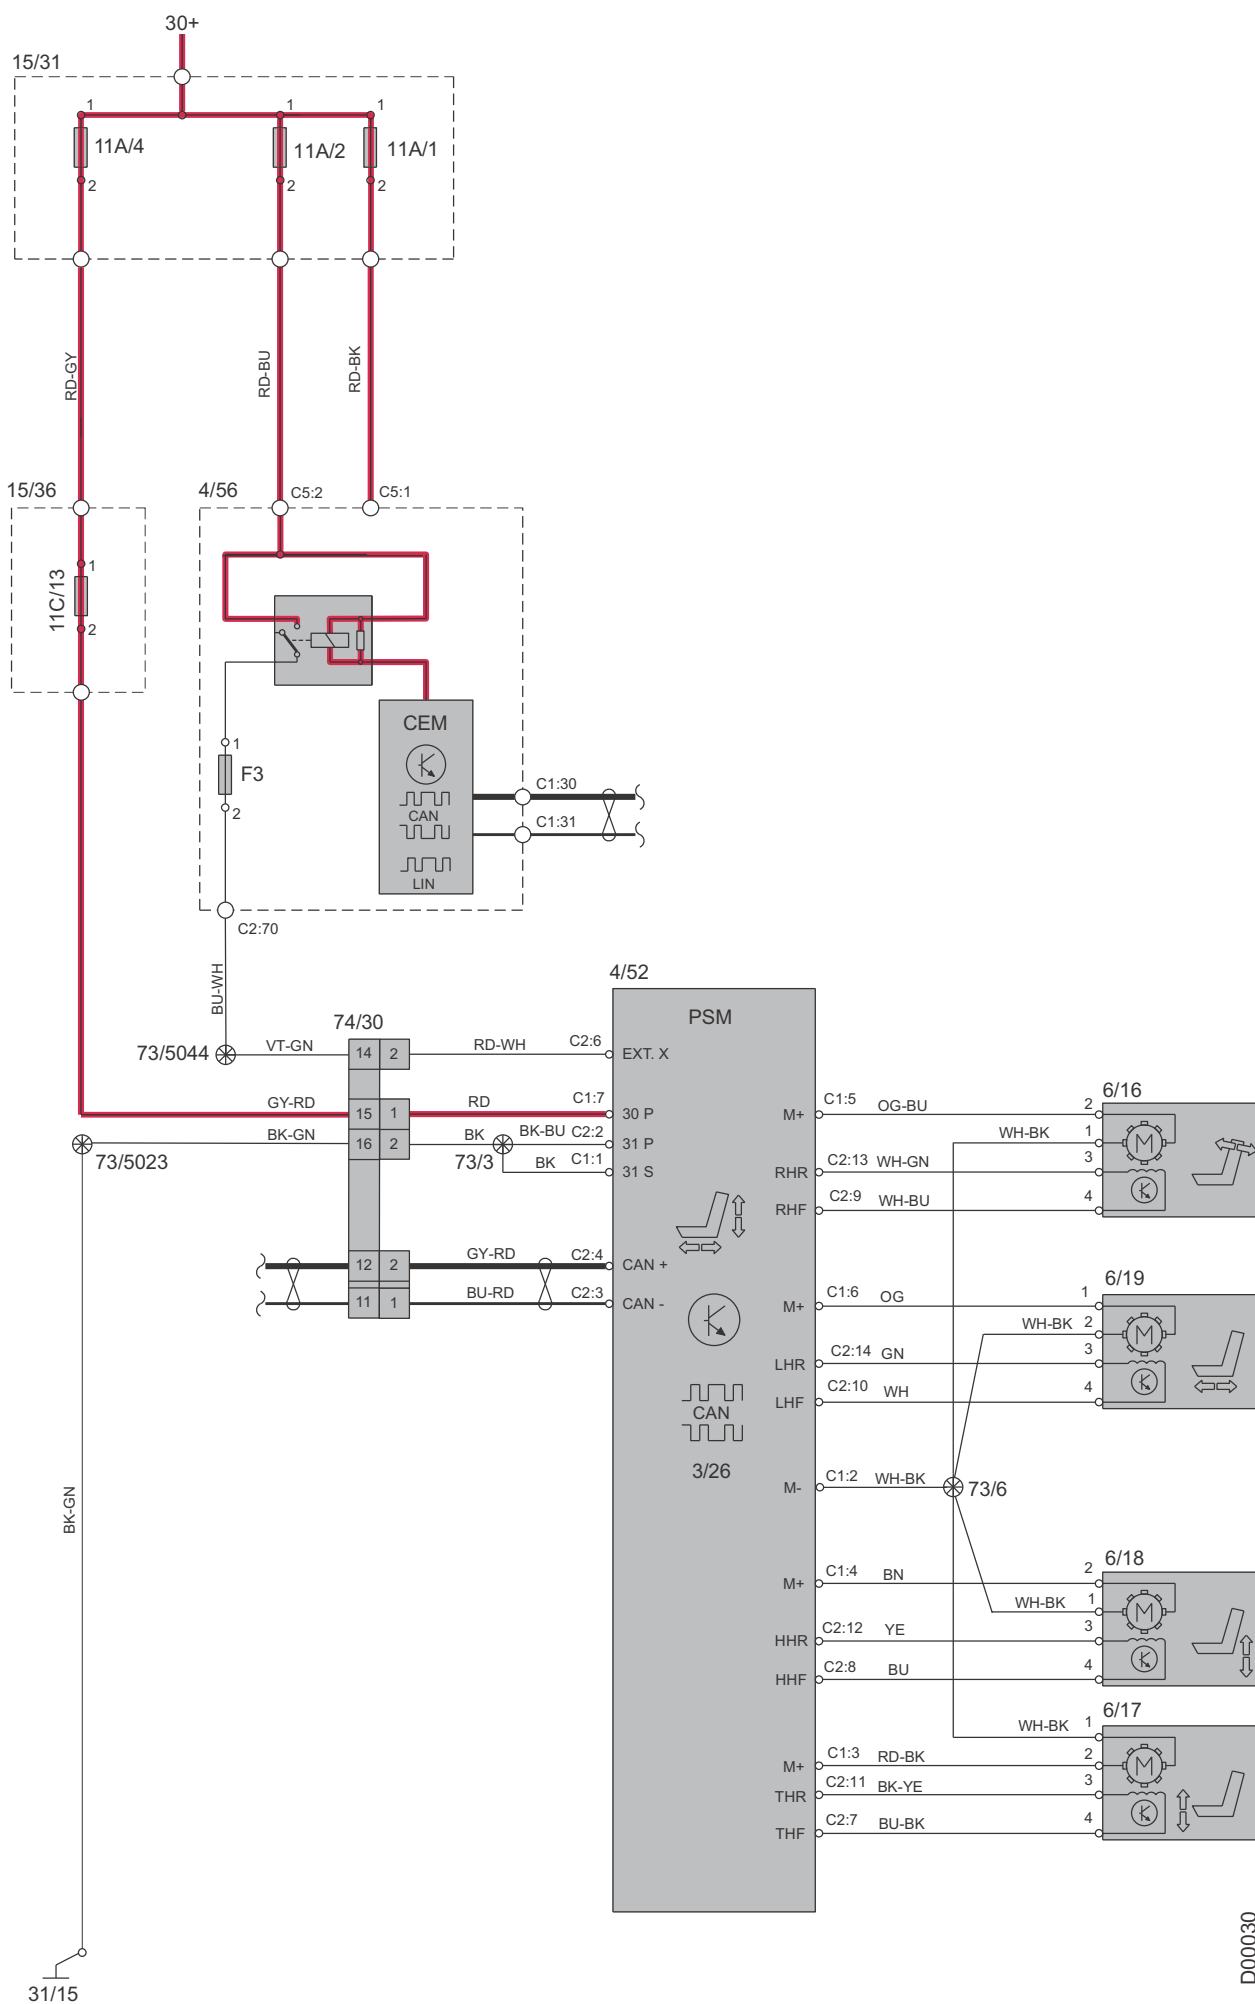

D00030


Group 85 Interior equipment

Power passenger seat, LHD

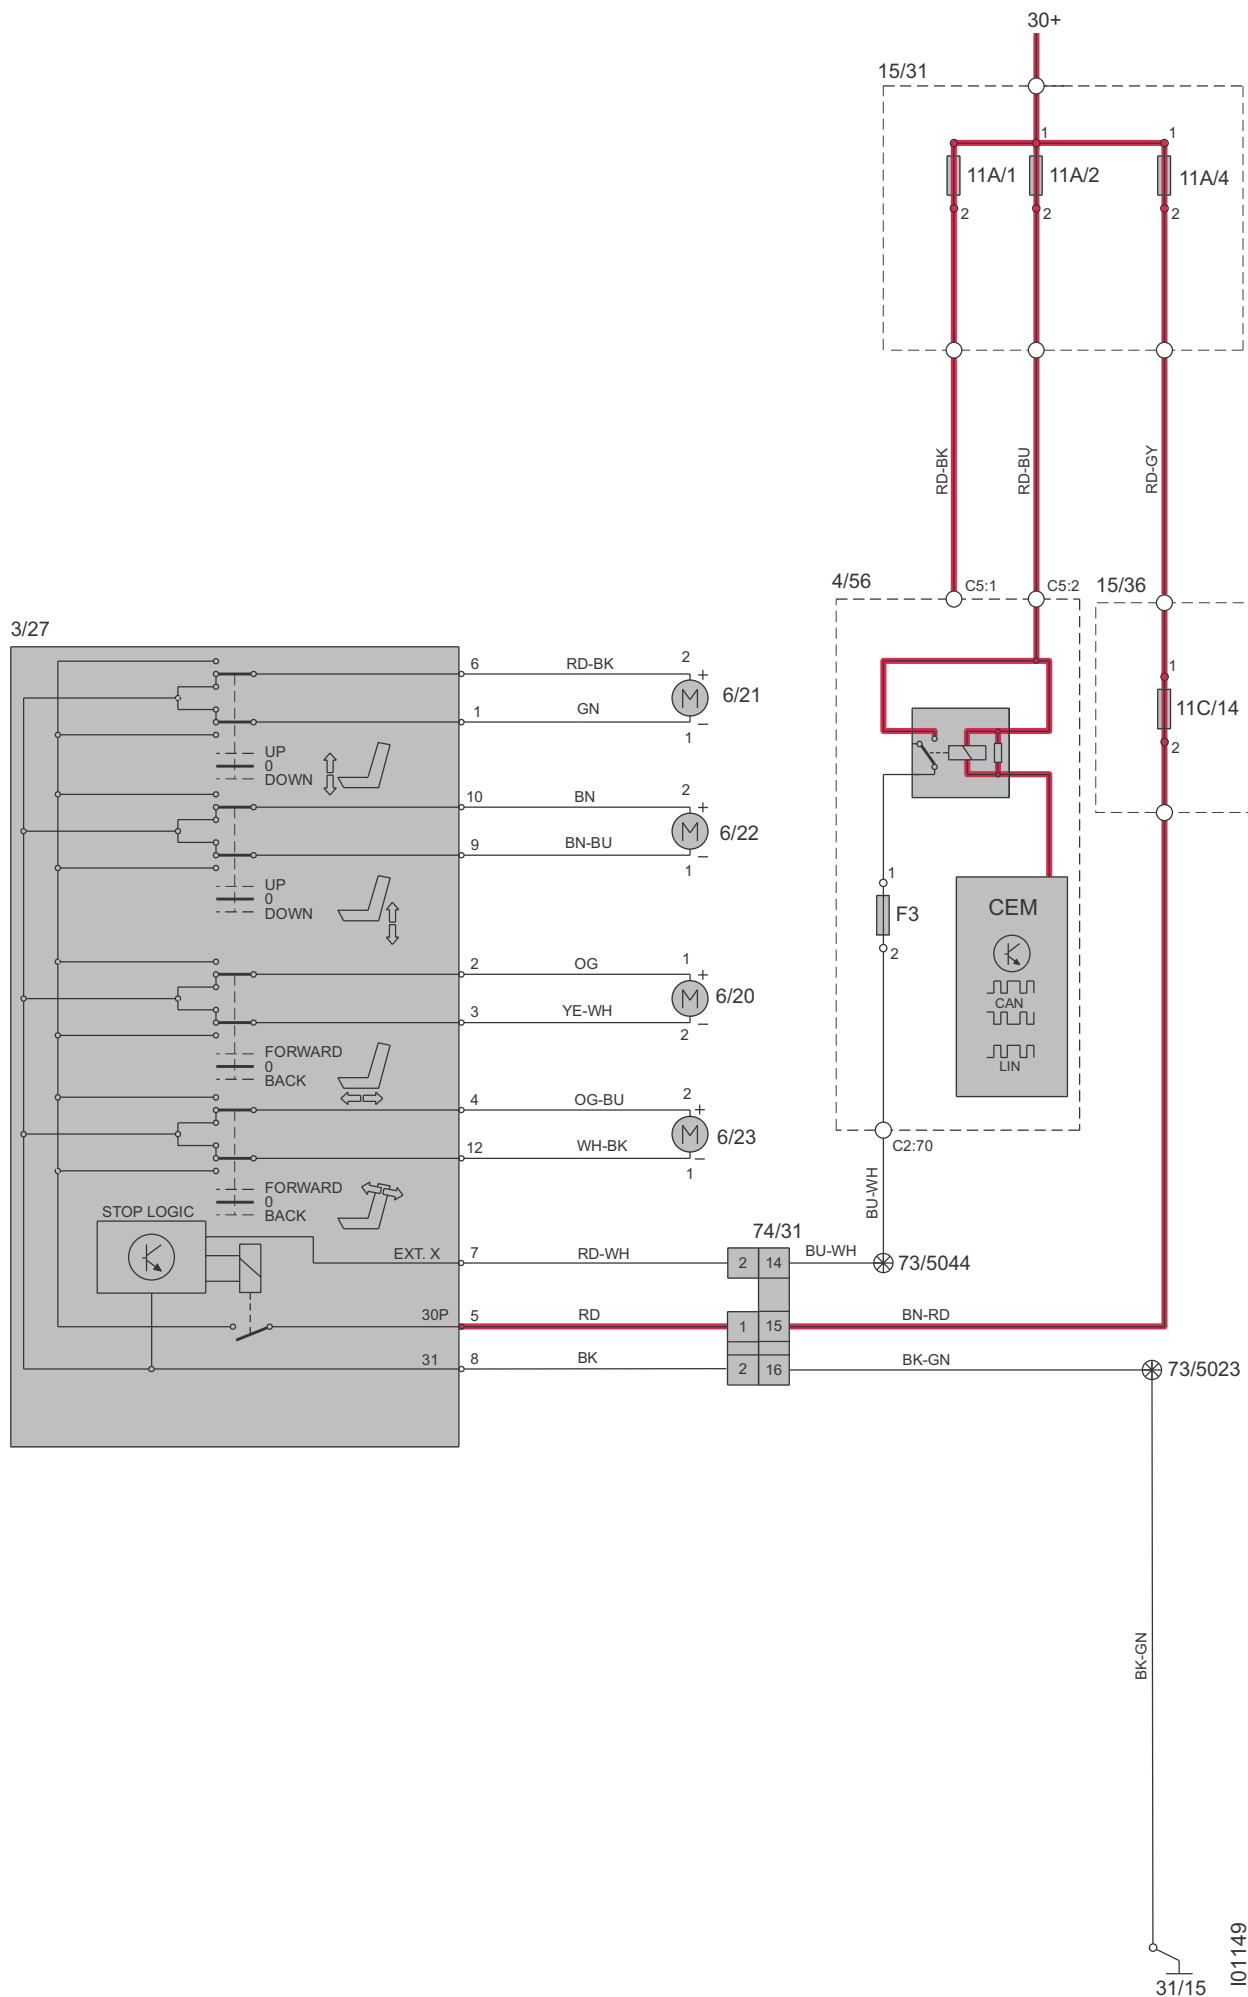


Group 85 Interior equipment

Power passenger seat, RHD

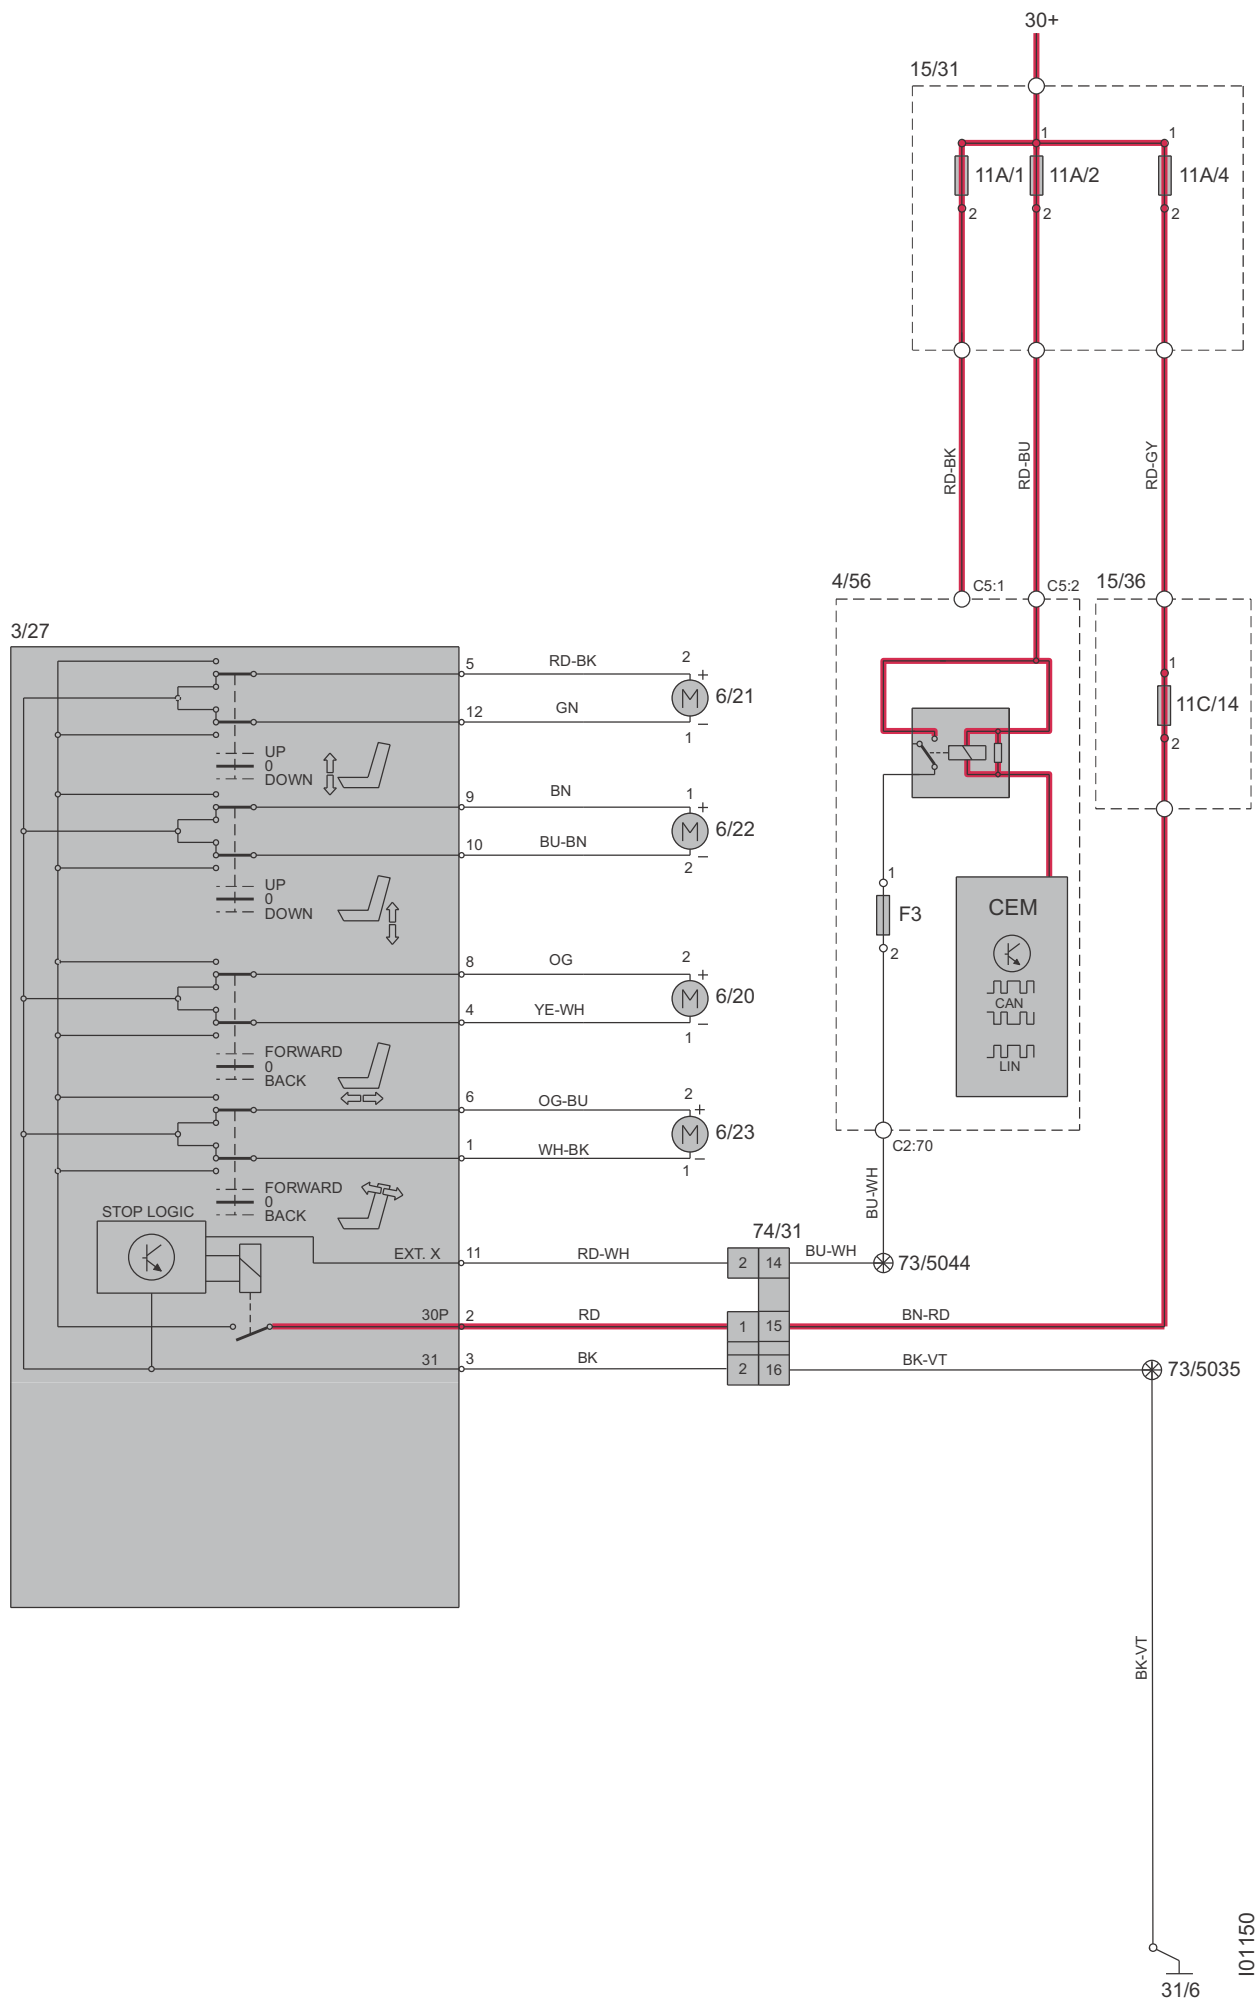


Group 85 Interior equipment
Heated front seats with fans

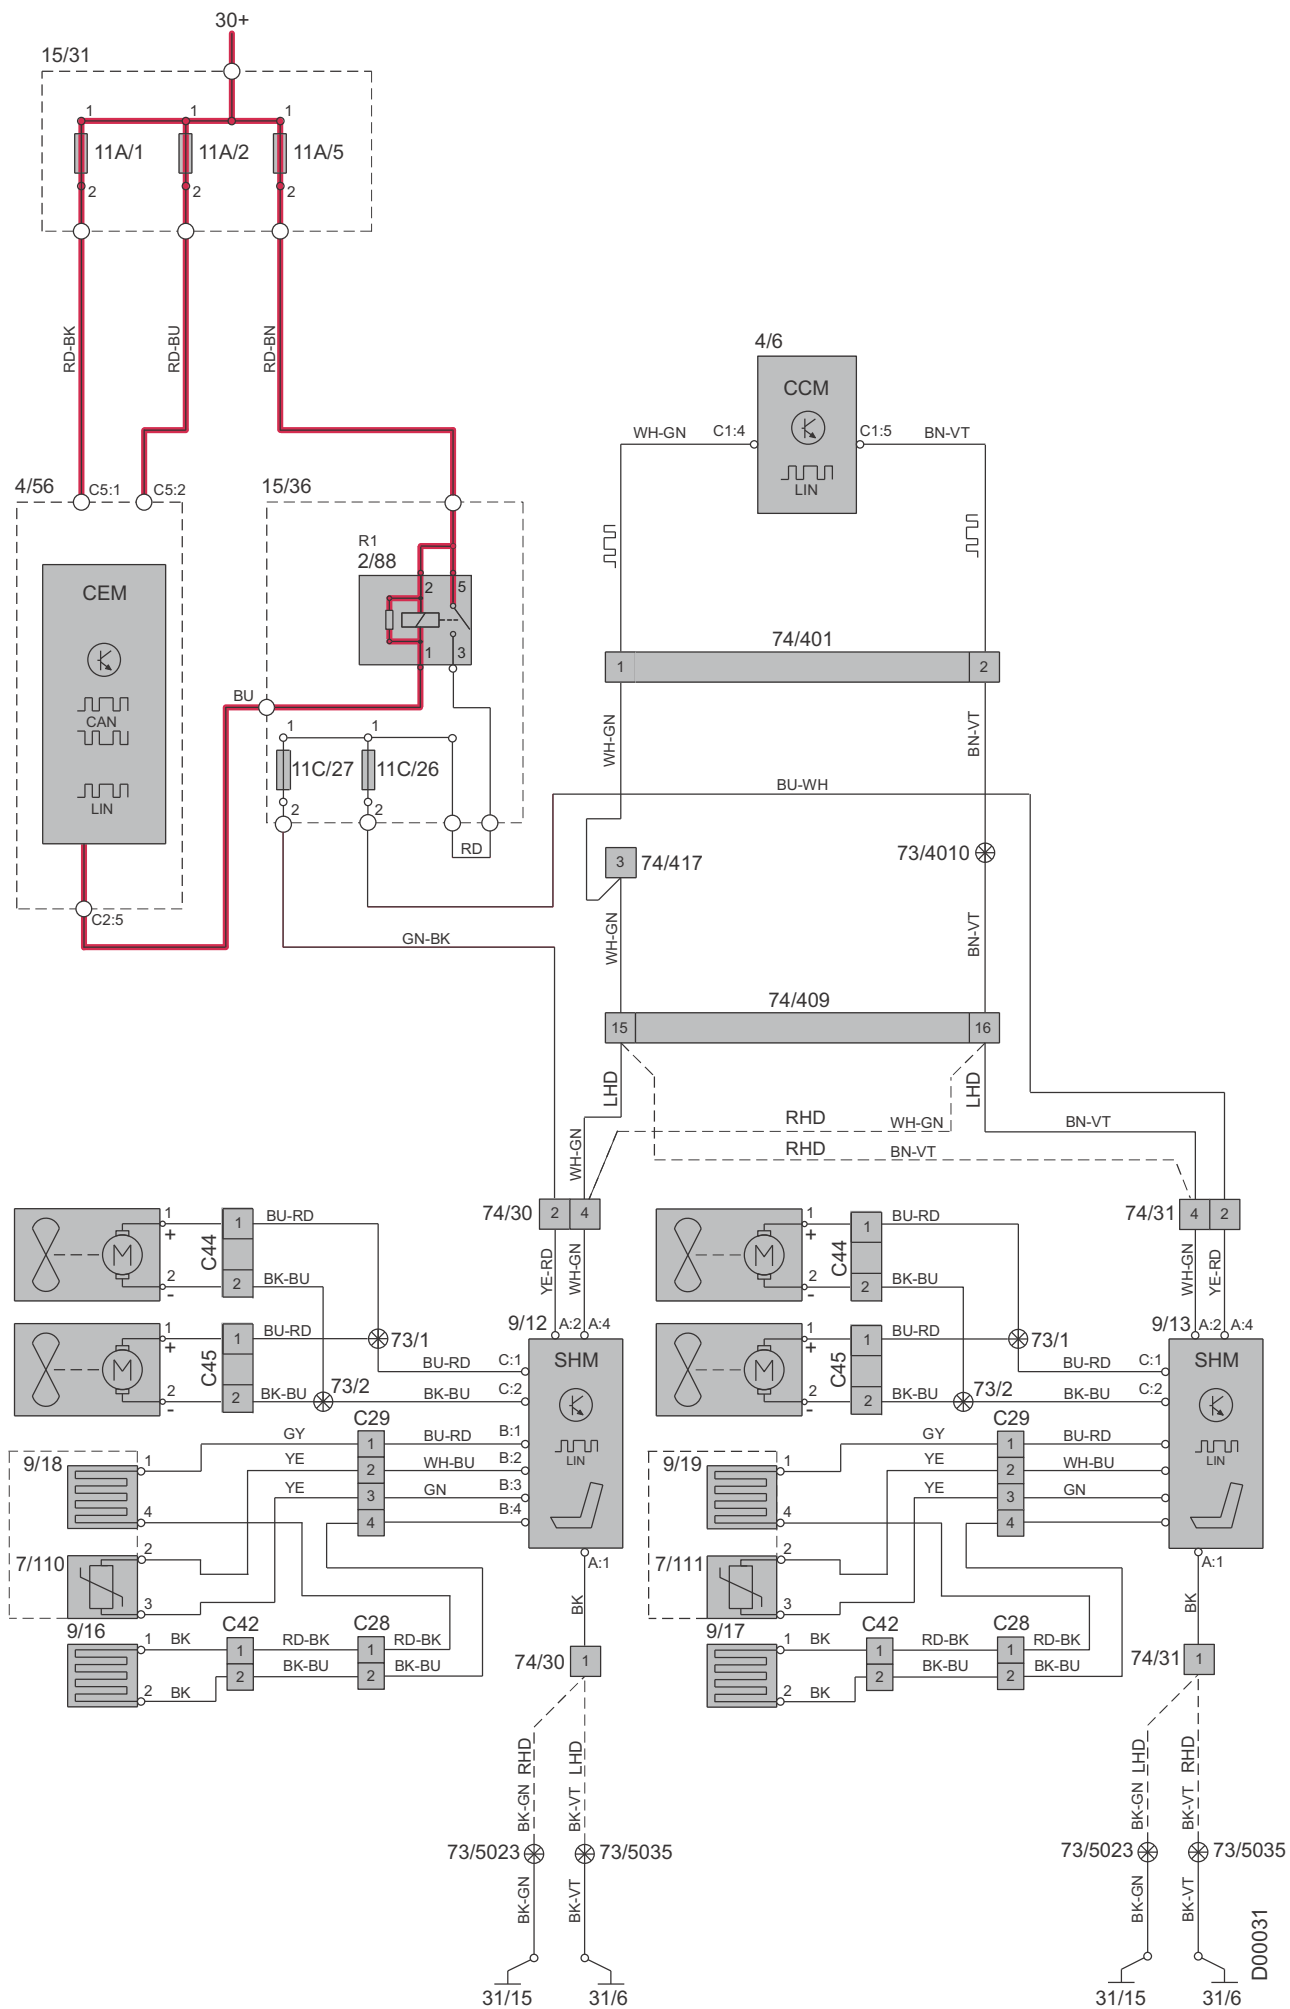


Group 85 Interior equipment

Heated front seats without fans

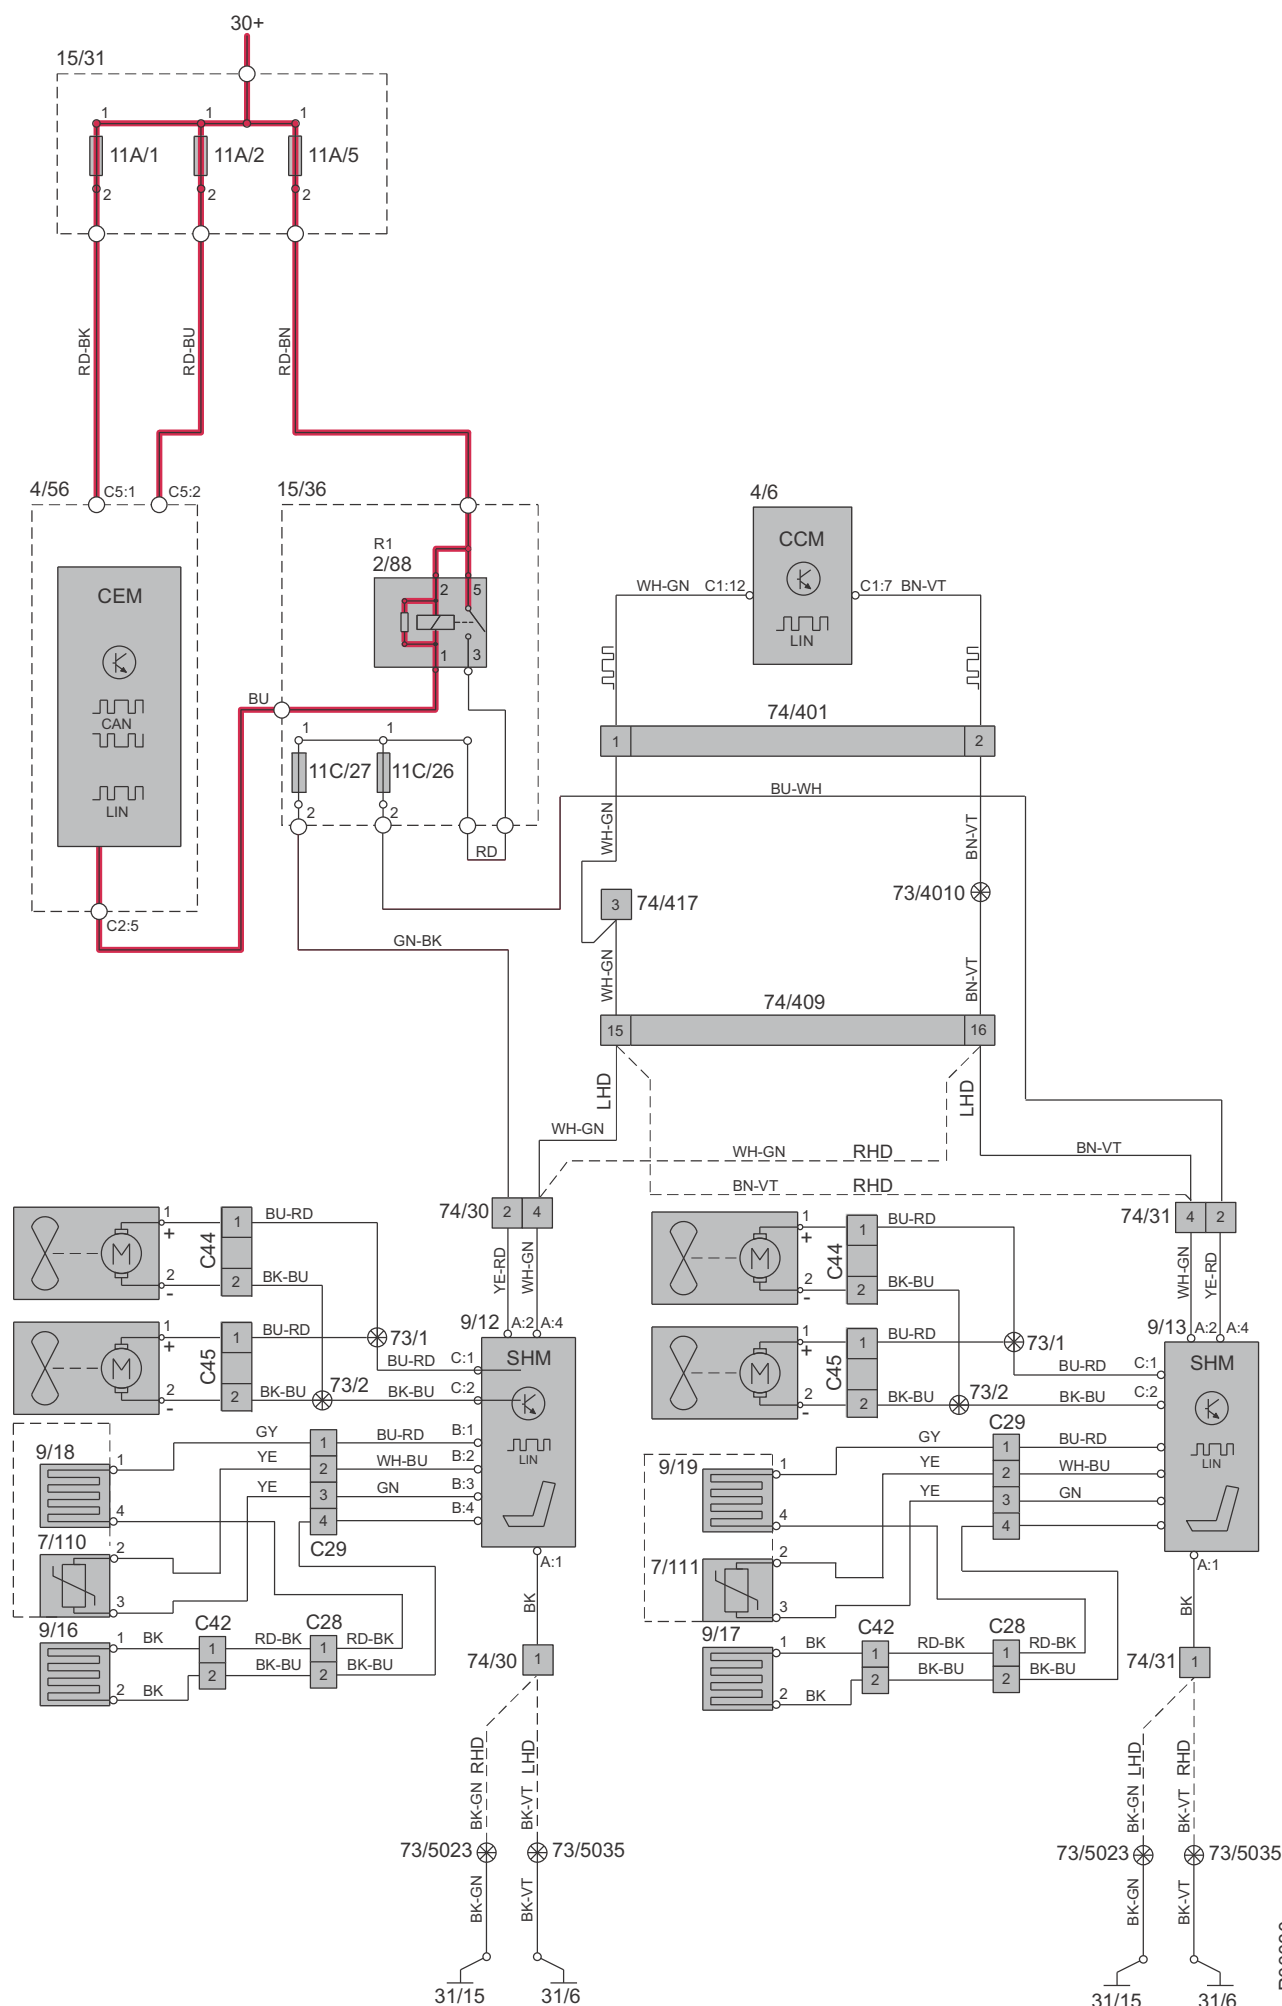


Group 85 Interior equipment

Heated rear seat

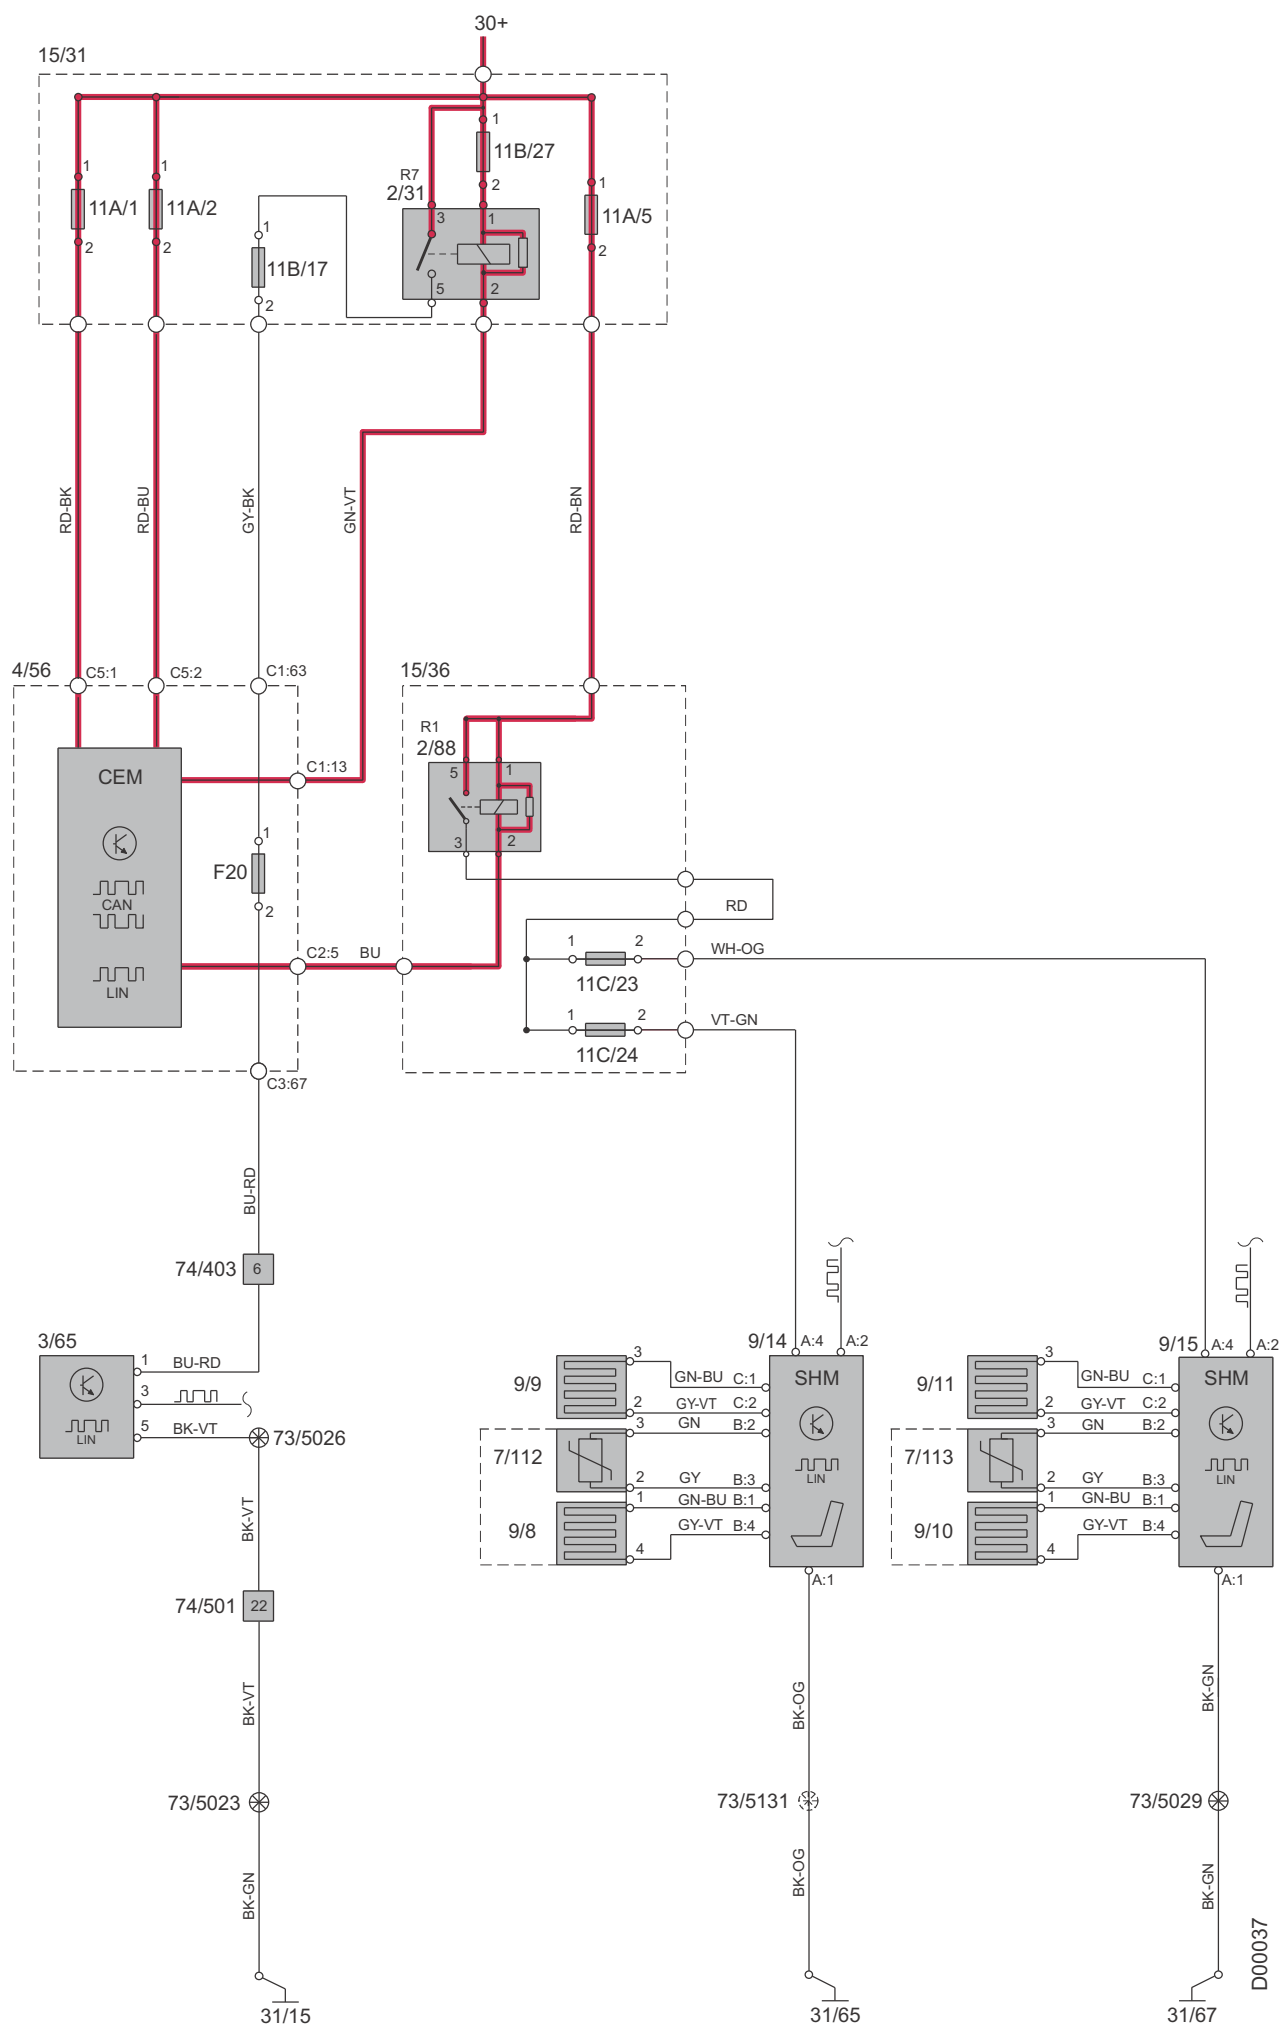


Group 85 Interior equipment

Massage seats

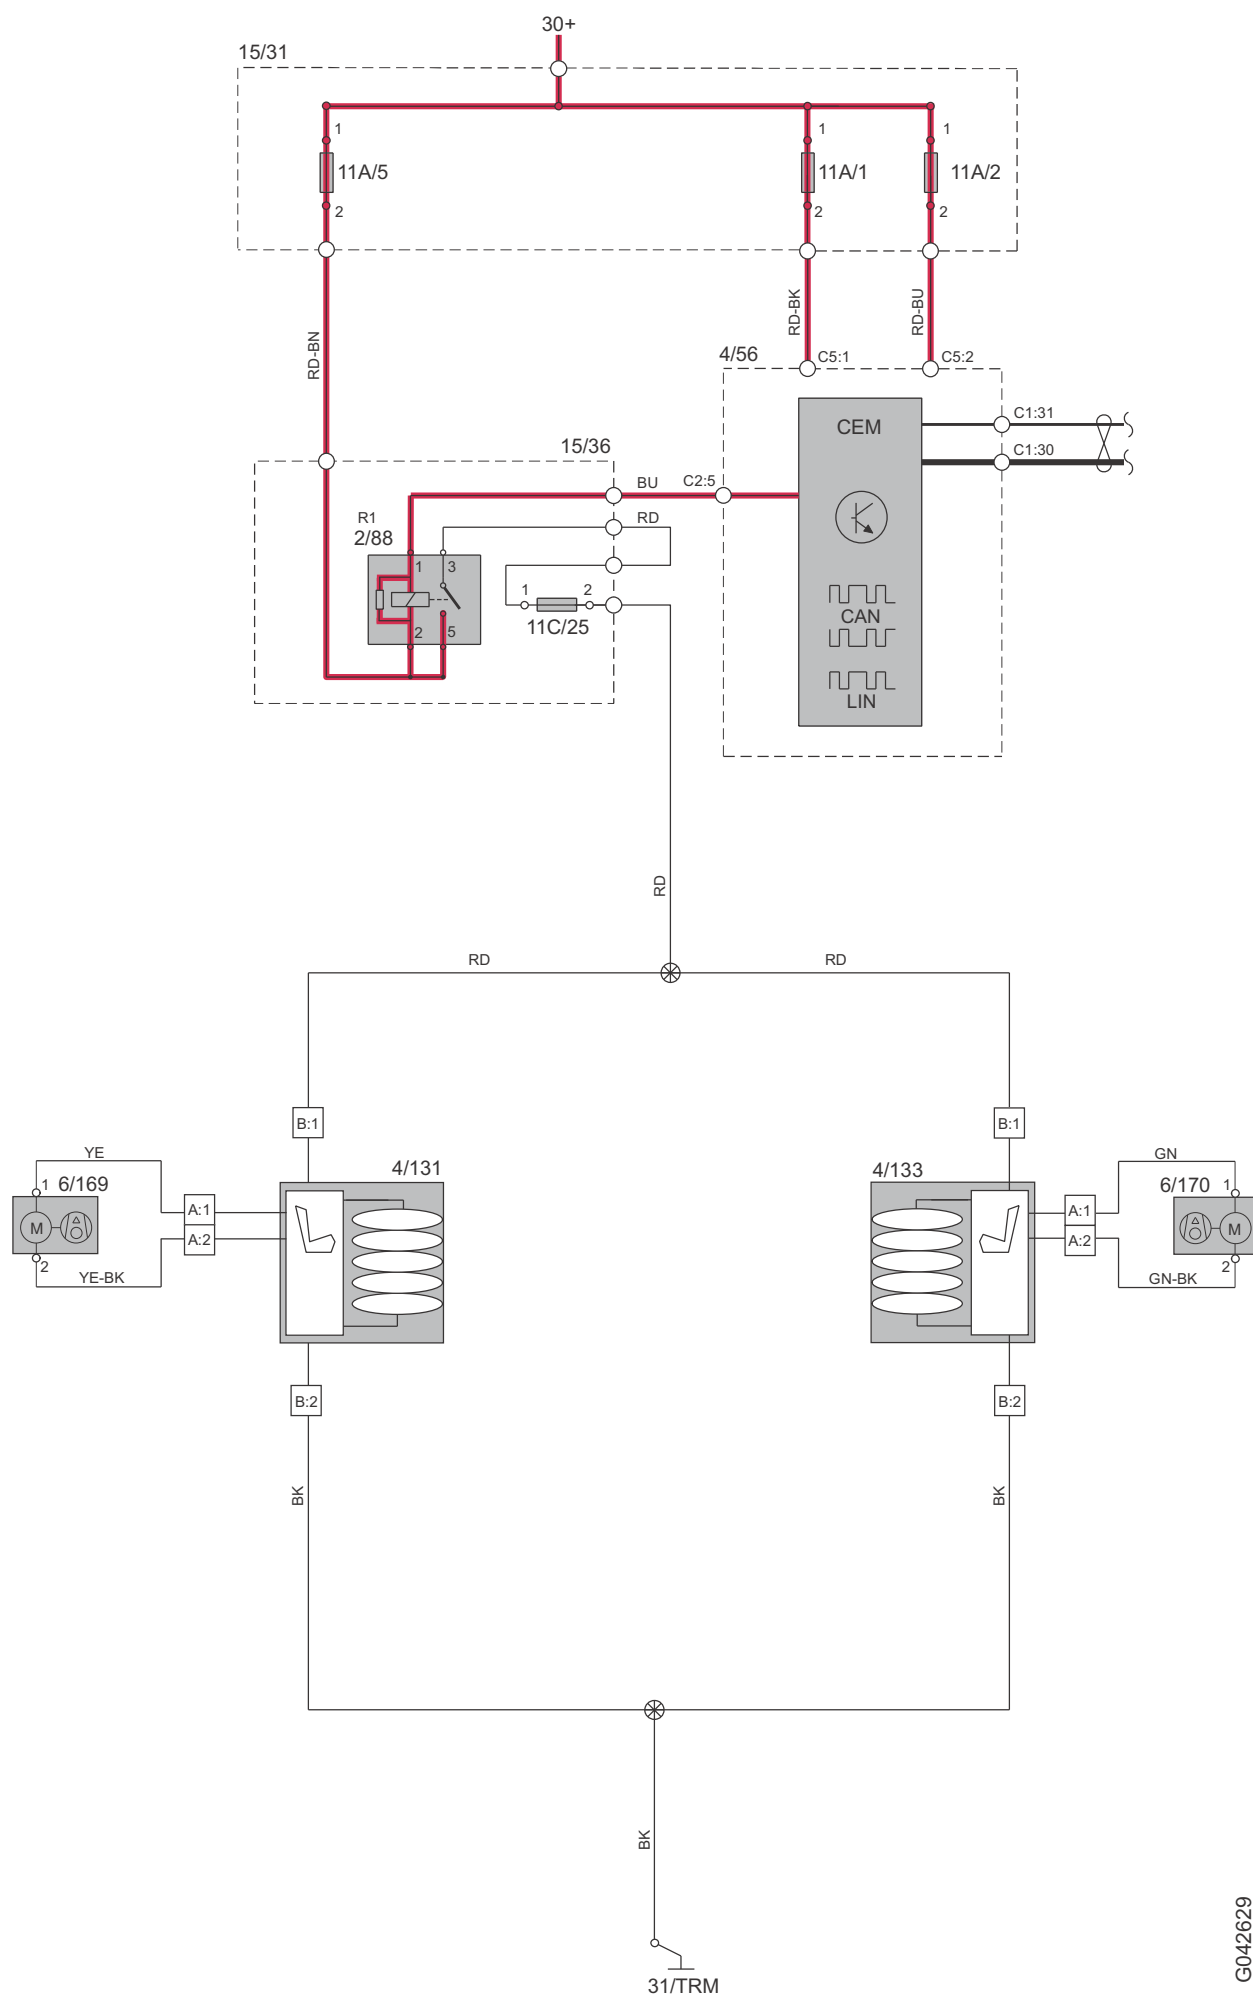


Group 87 Climate control system

Climate control system, 4-Cyl. Turbo 1:2

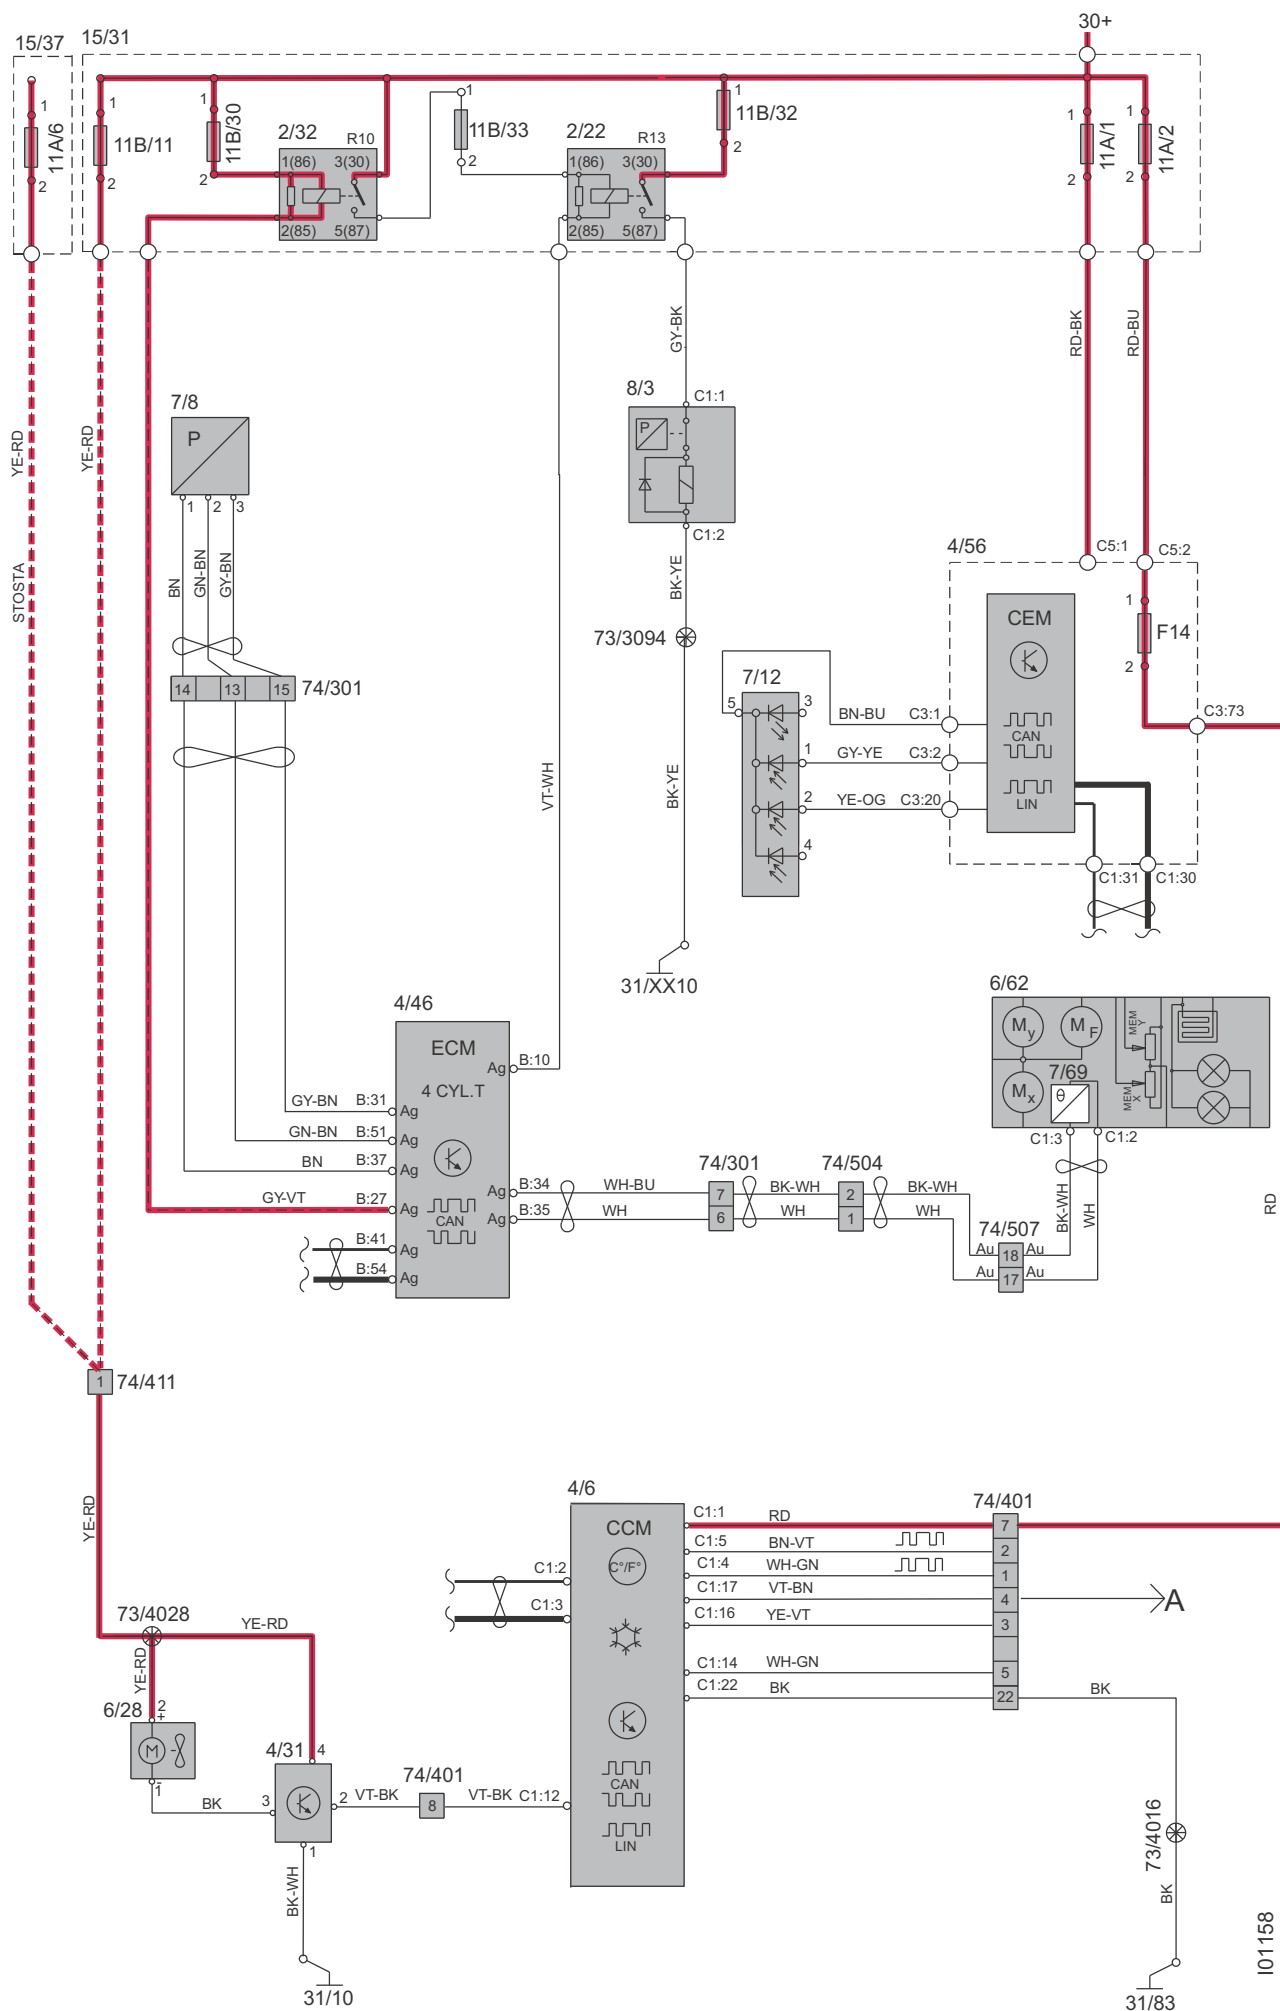


Group 87 Climate control system

Climate control system, 4-Cyl. Turbo 2:2

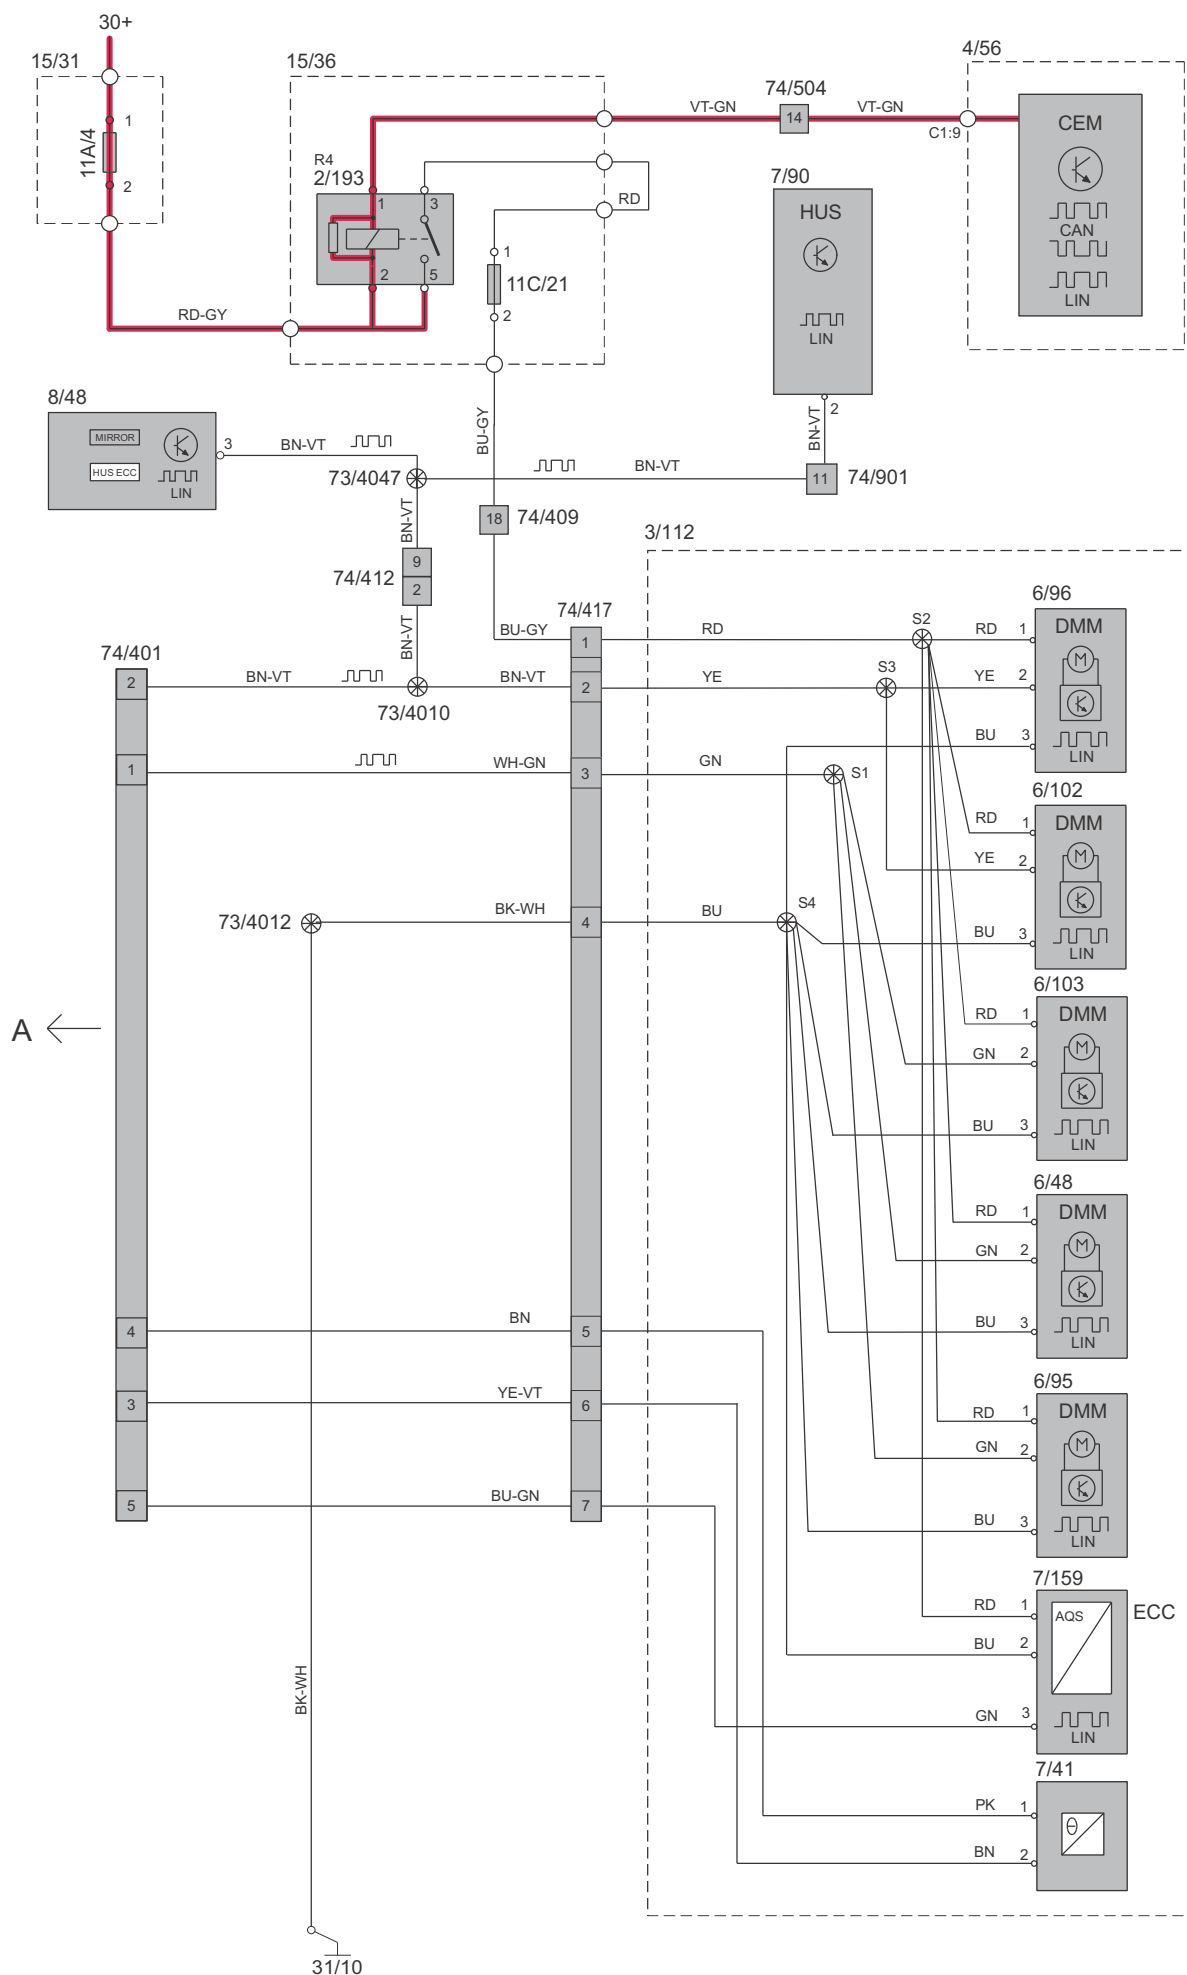


Group 87 Climate control system

Climate control system 4-Cyl. Diesel 1:2

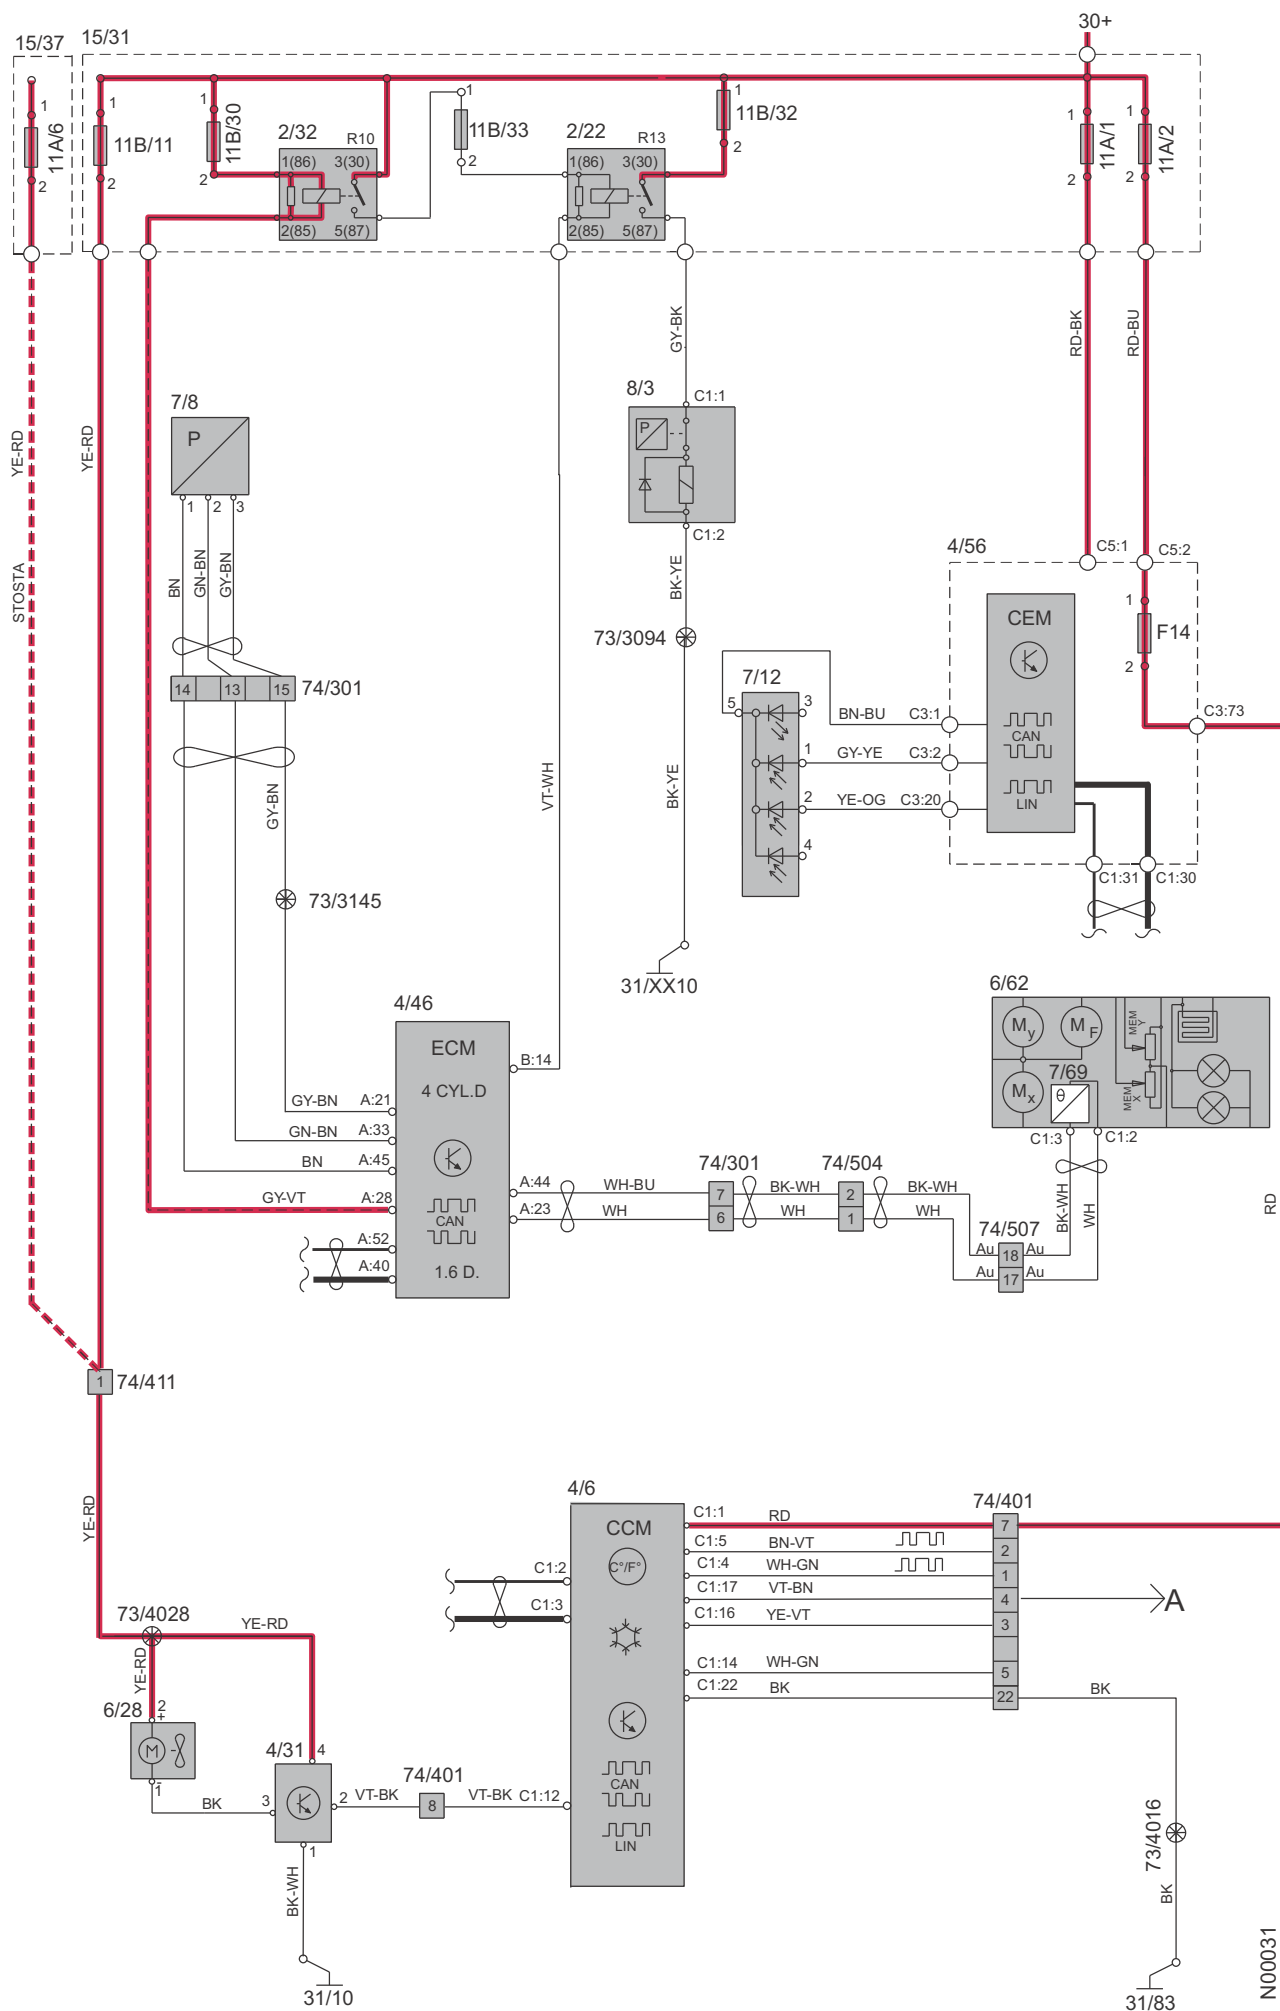


Group 87 Climate control system
Climate control system 4-Cyl. Diesel 2:2

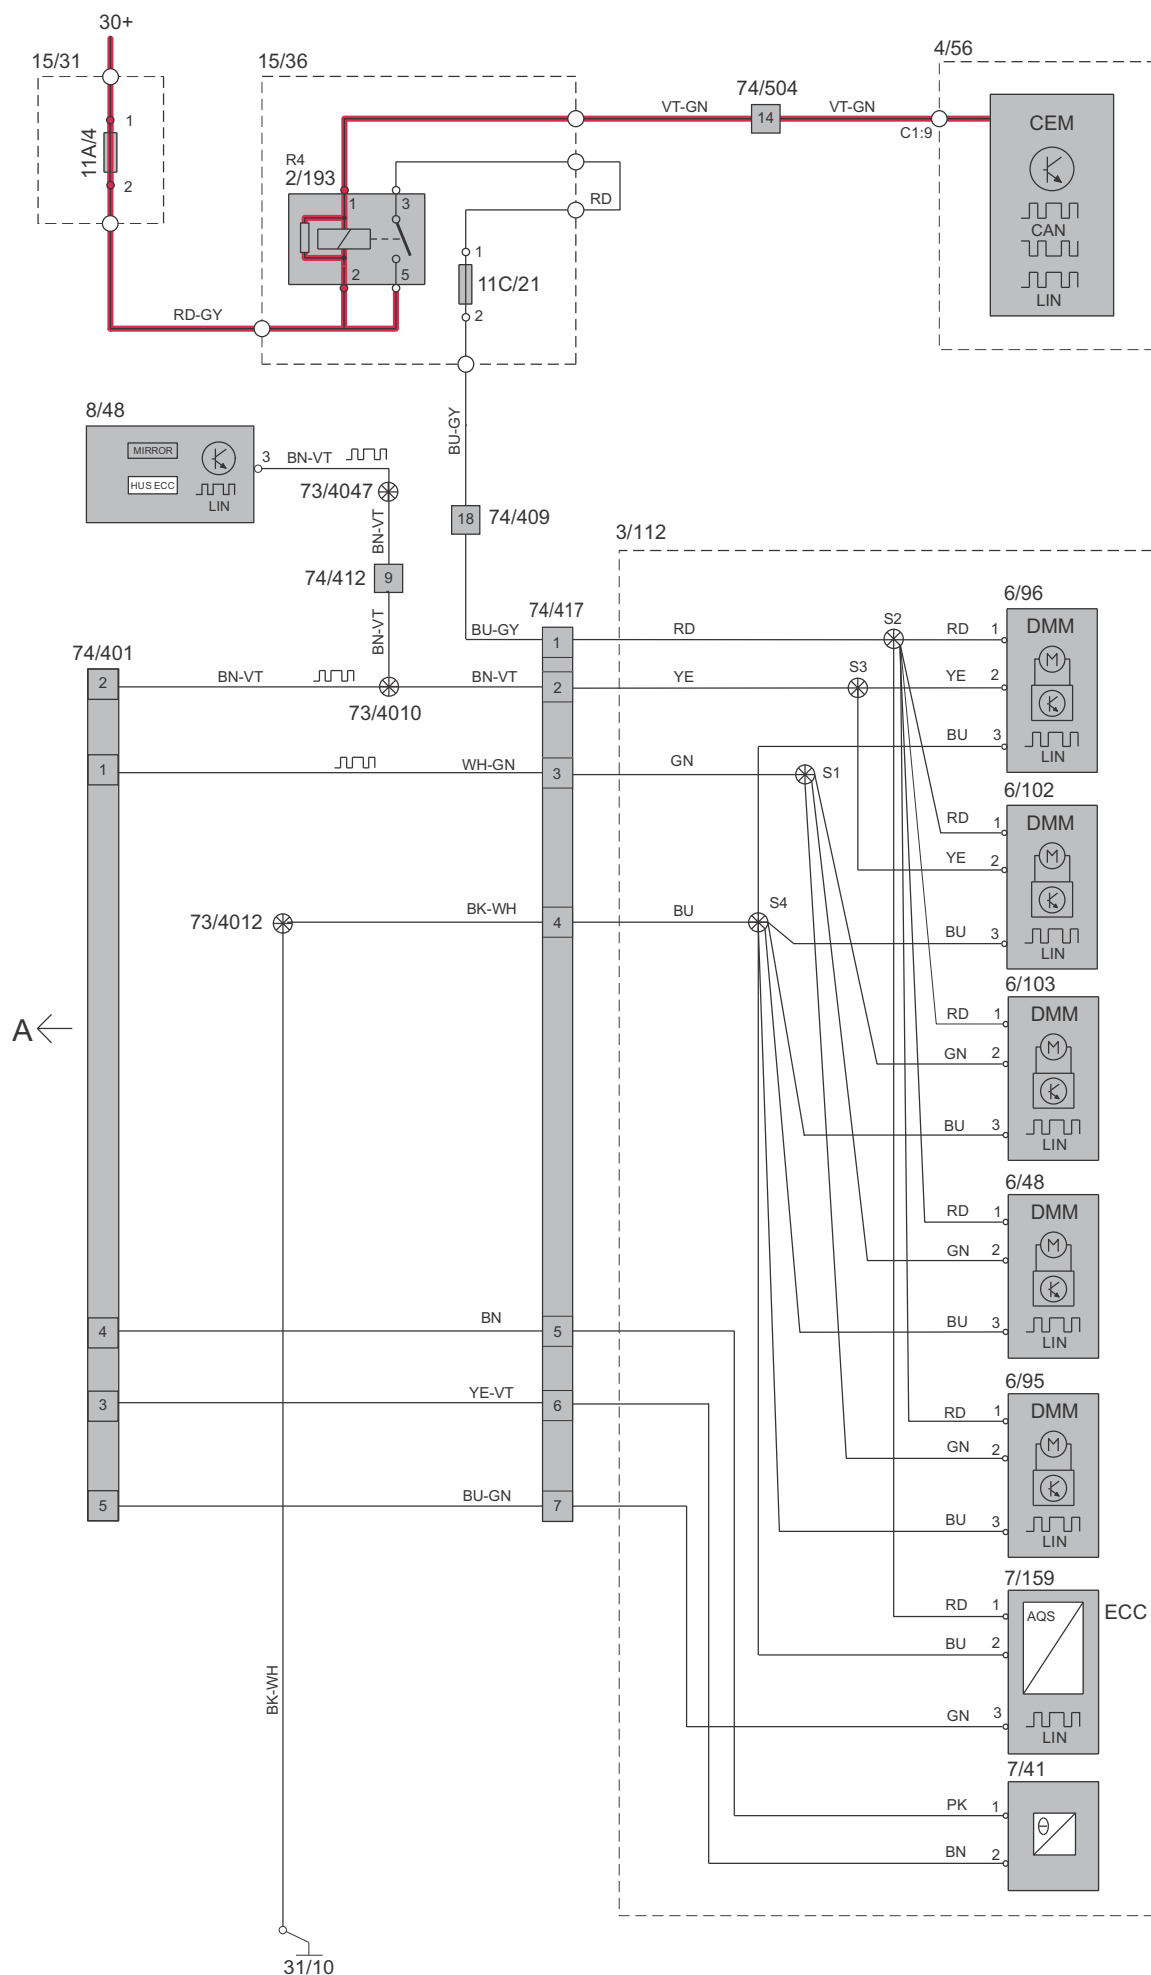


Group 87 Climate control system

Climate control system 5- & 6-Cyl. 1:2

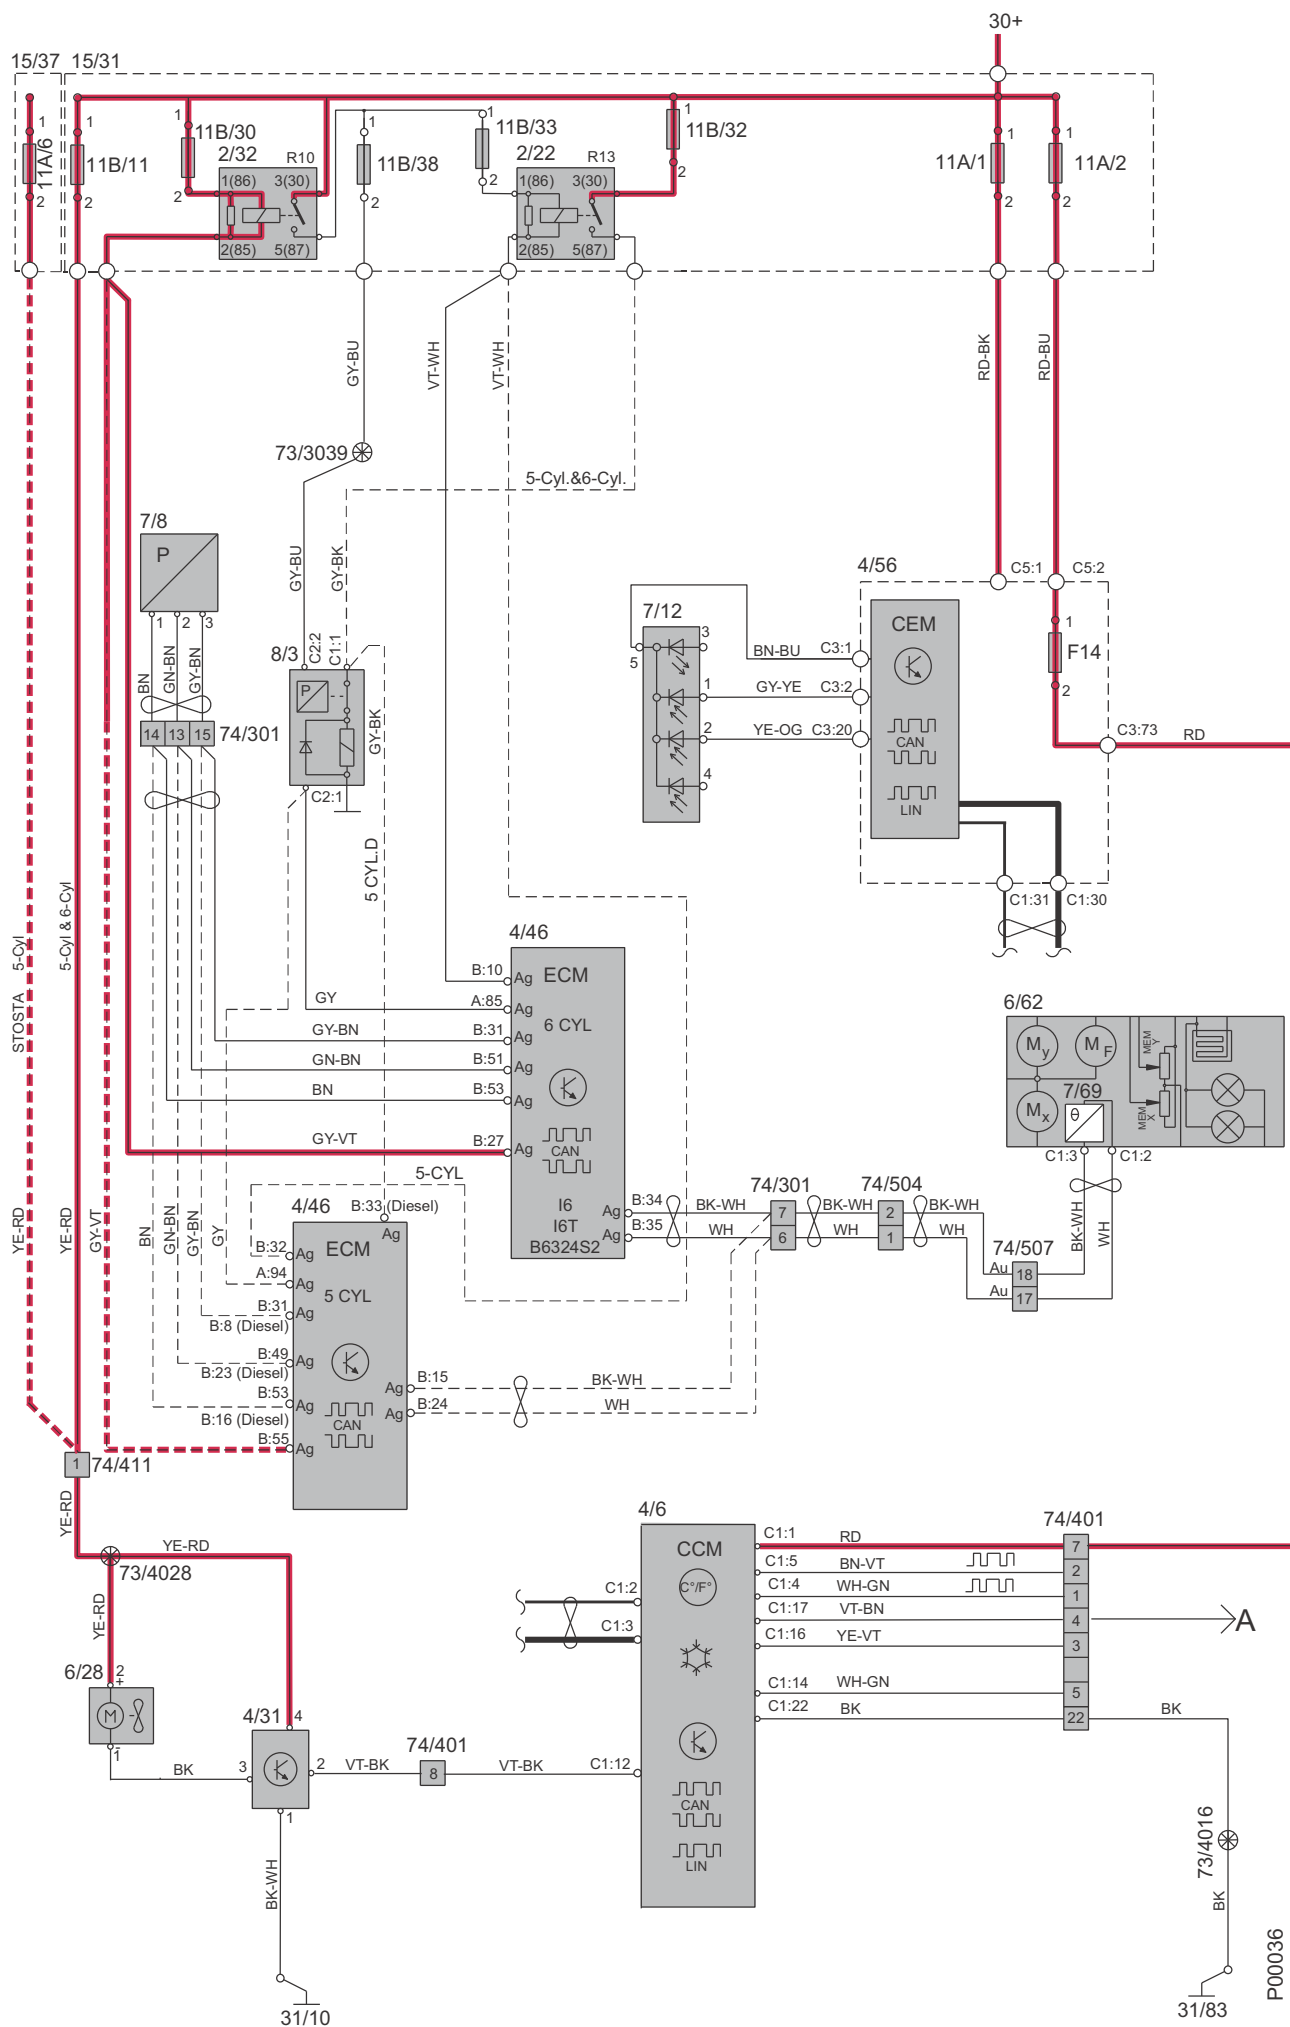


Group 87 Climate control system

Climate control system 5- & 6-Cyl. 2:2

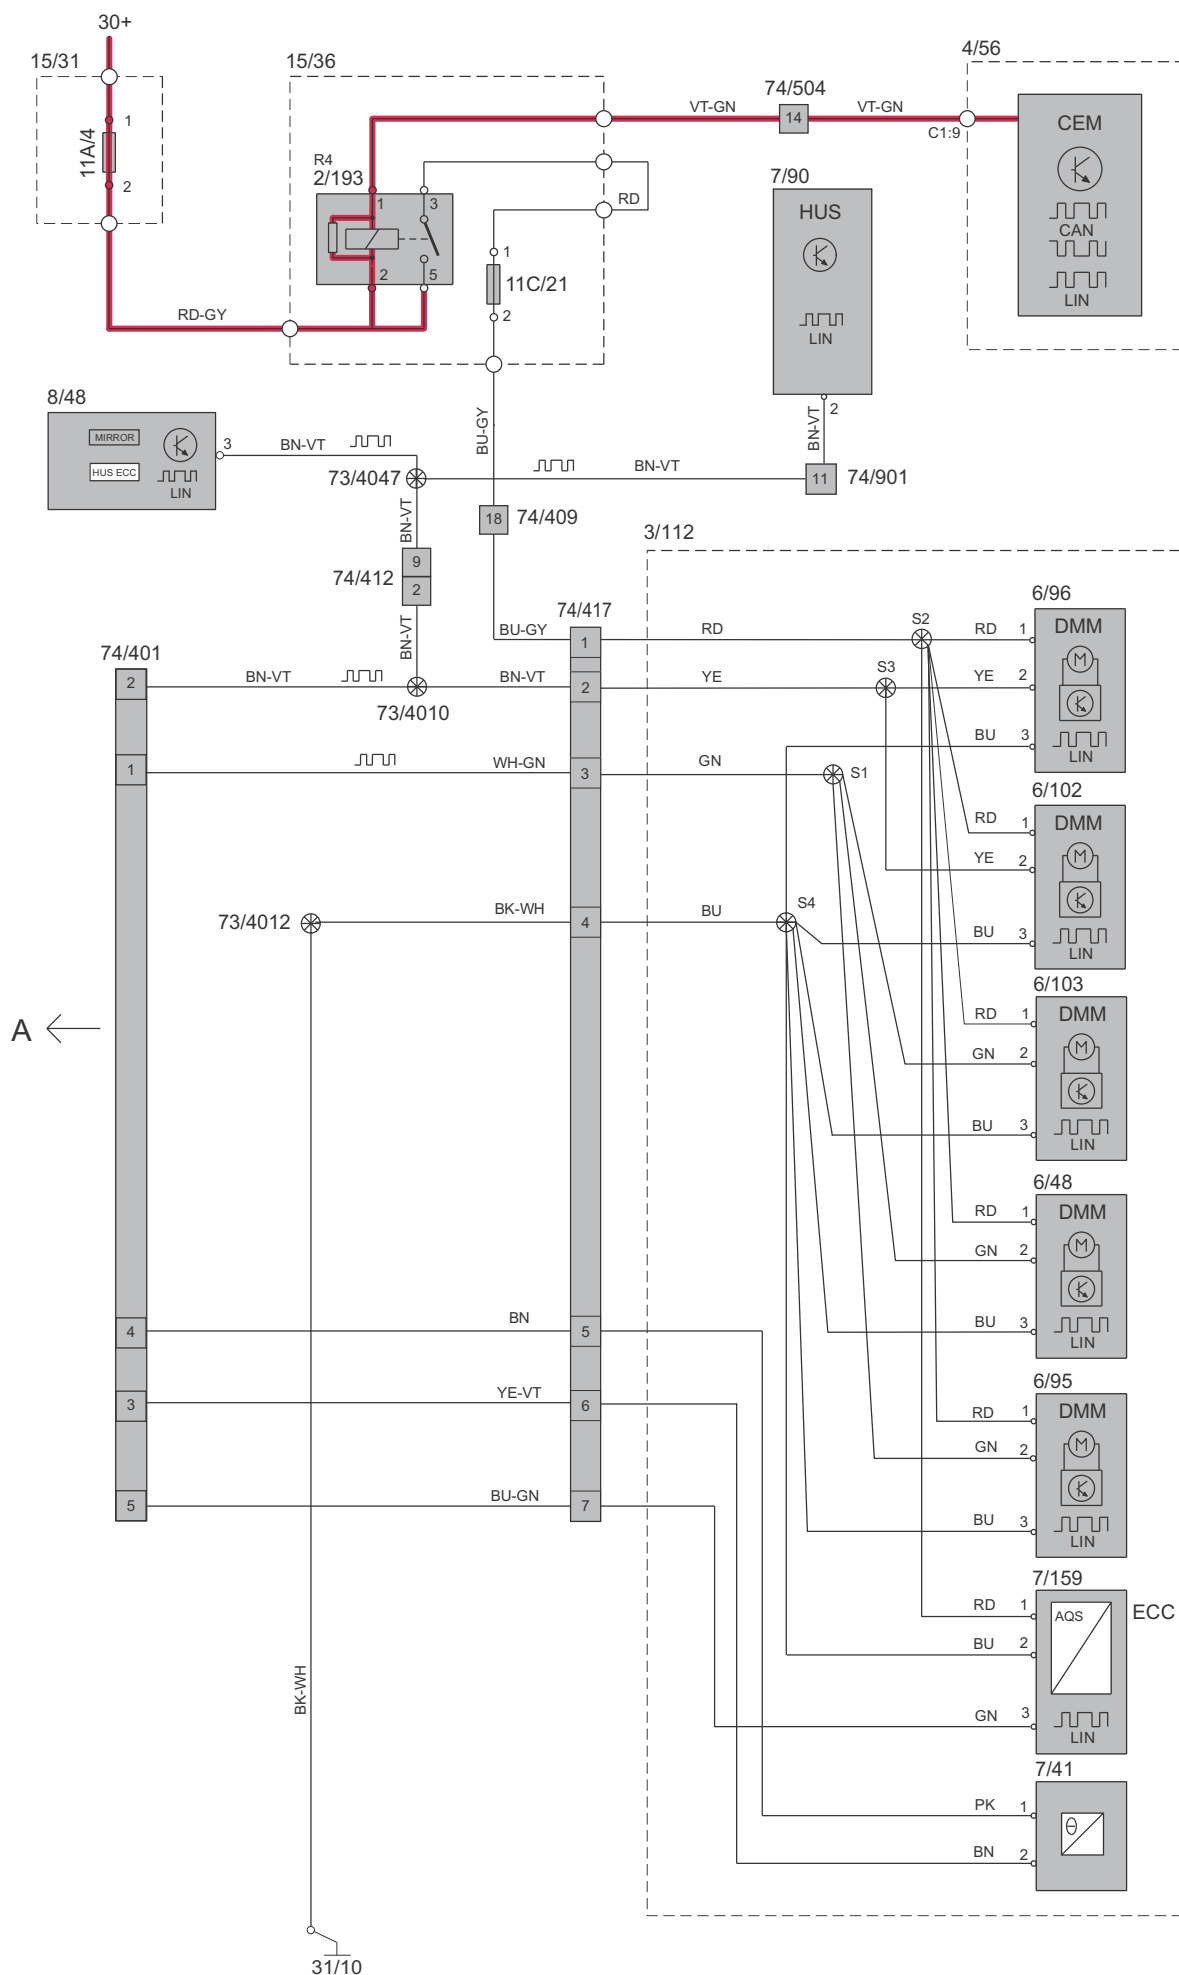


Group 87 Climate control system

Climate control system PTC-elements

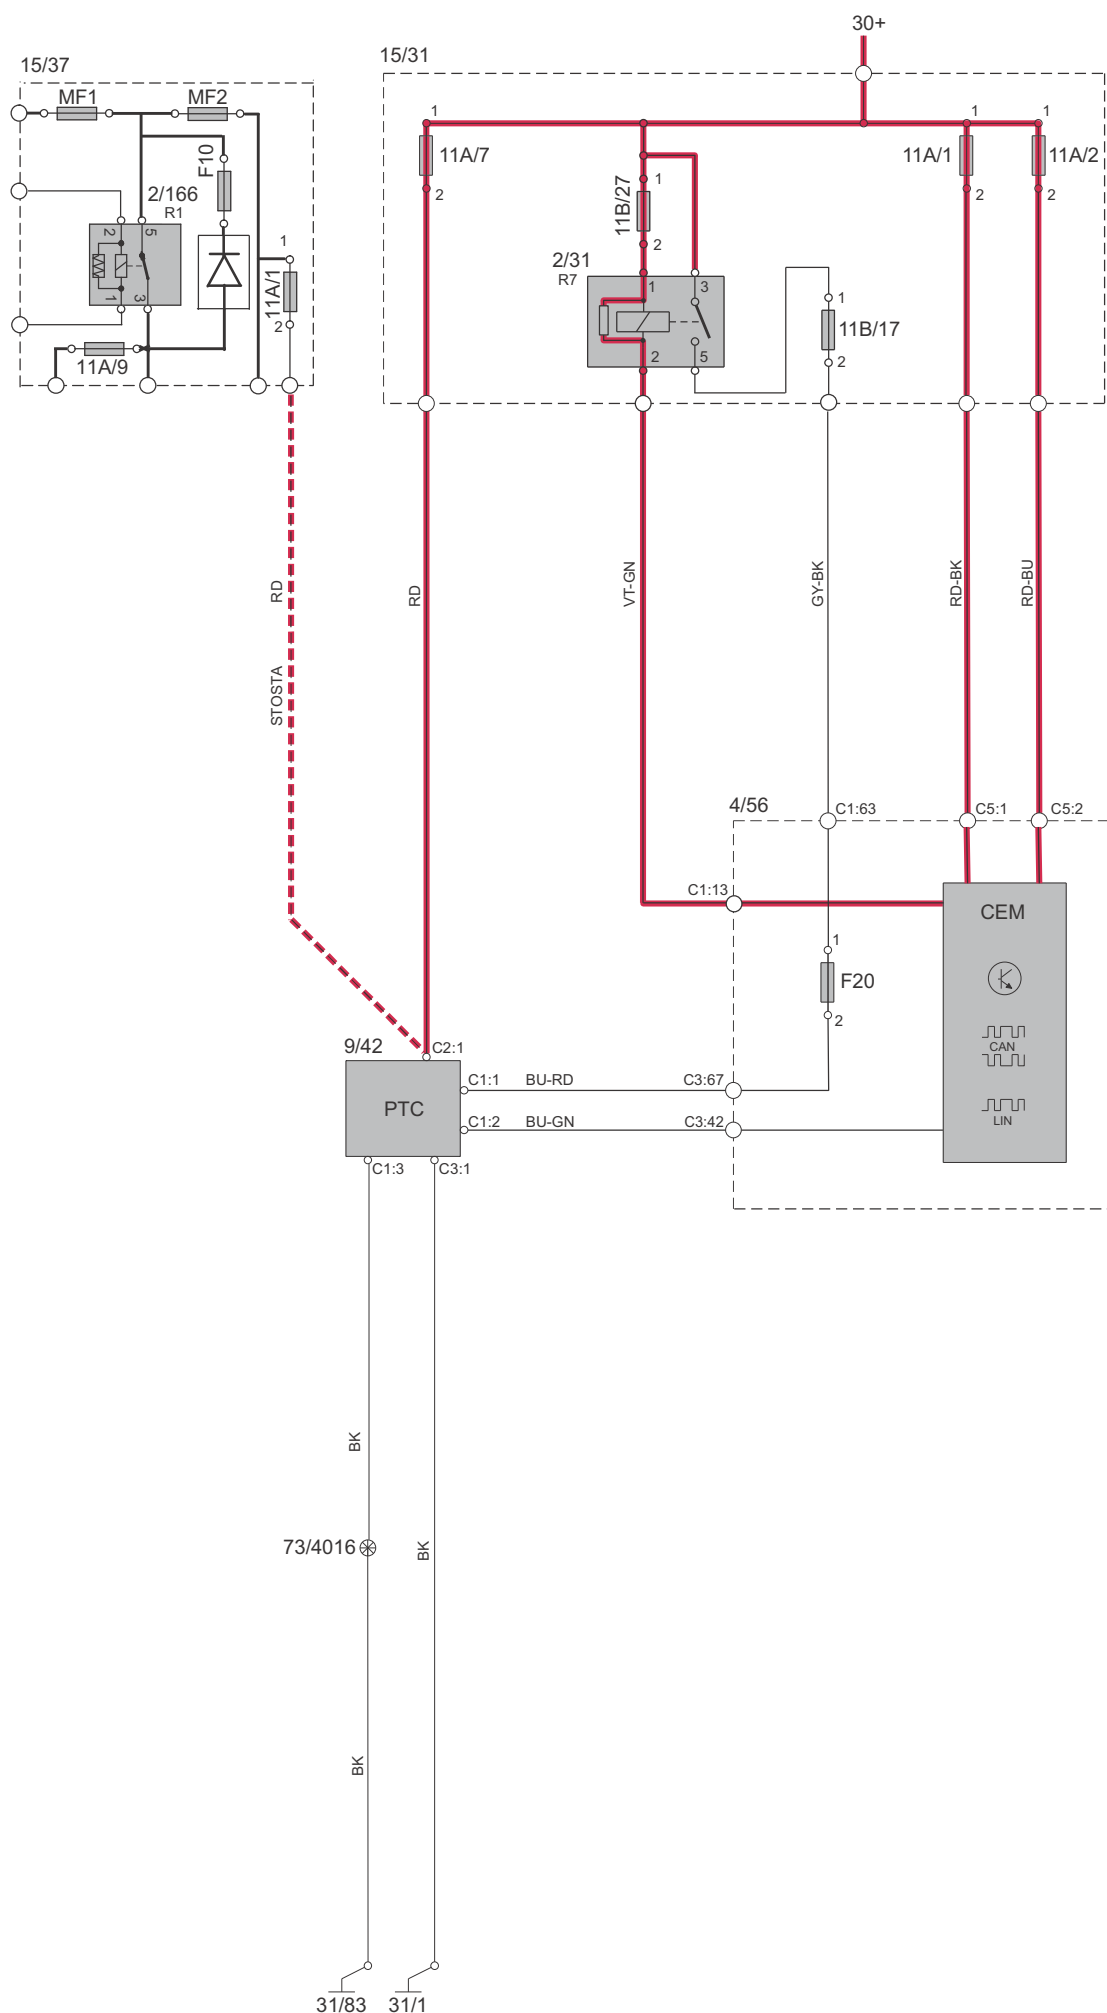


Group 87 Climate control system
Parking heater, auxiliary heater

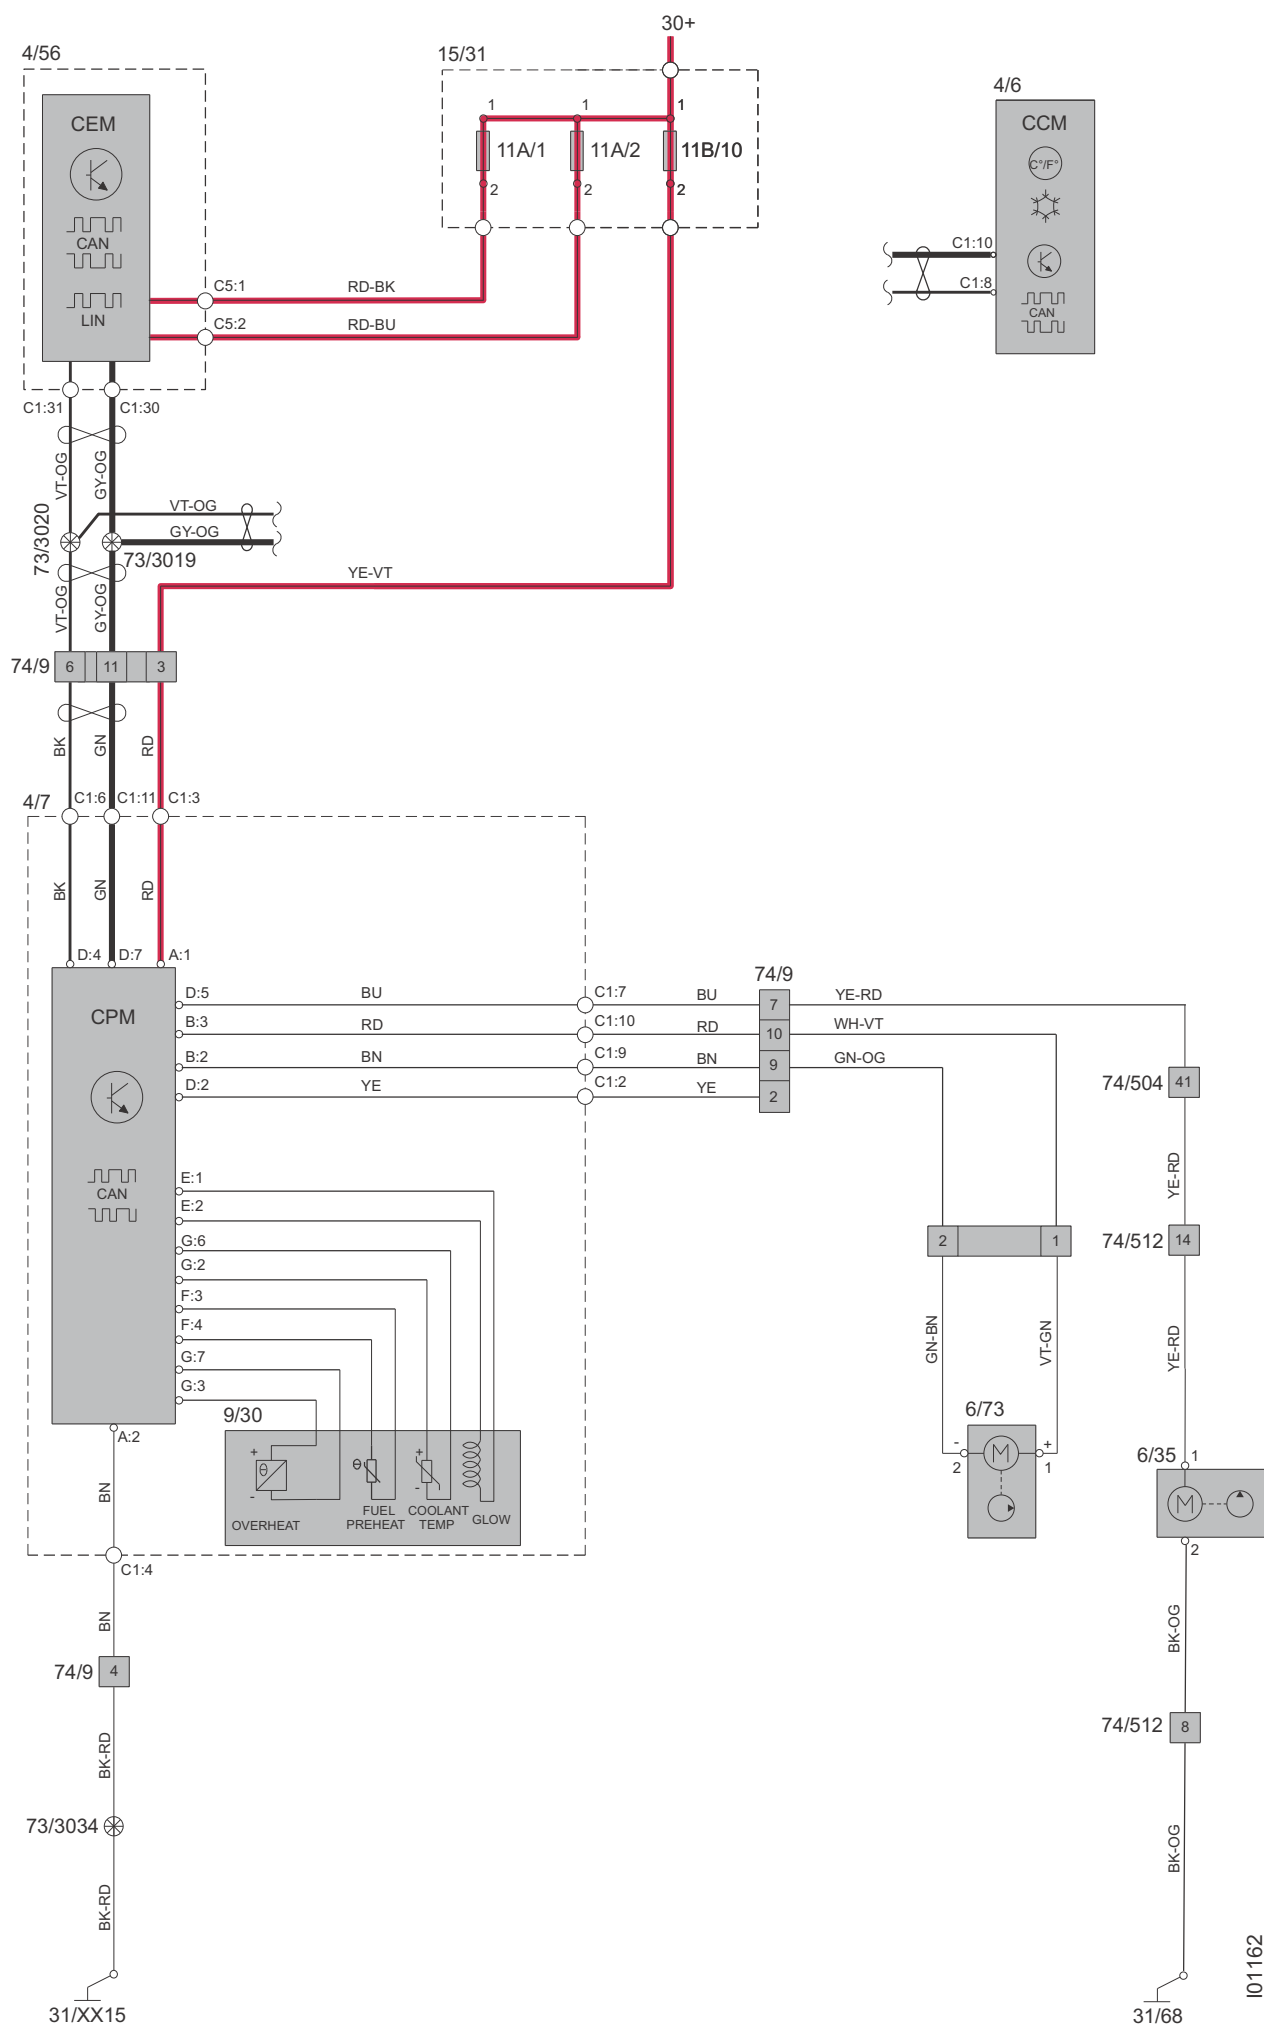


Group 87 Climate control system, Accessories

Parking heater, remote start

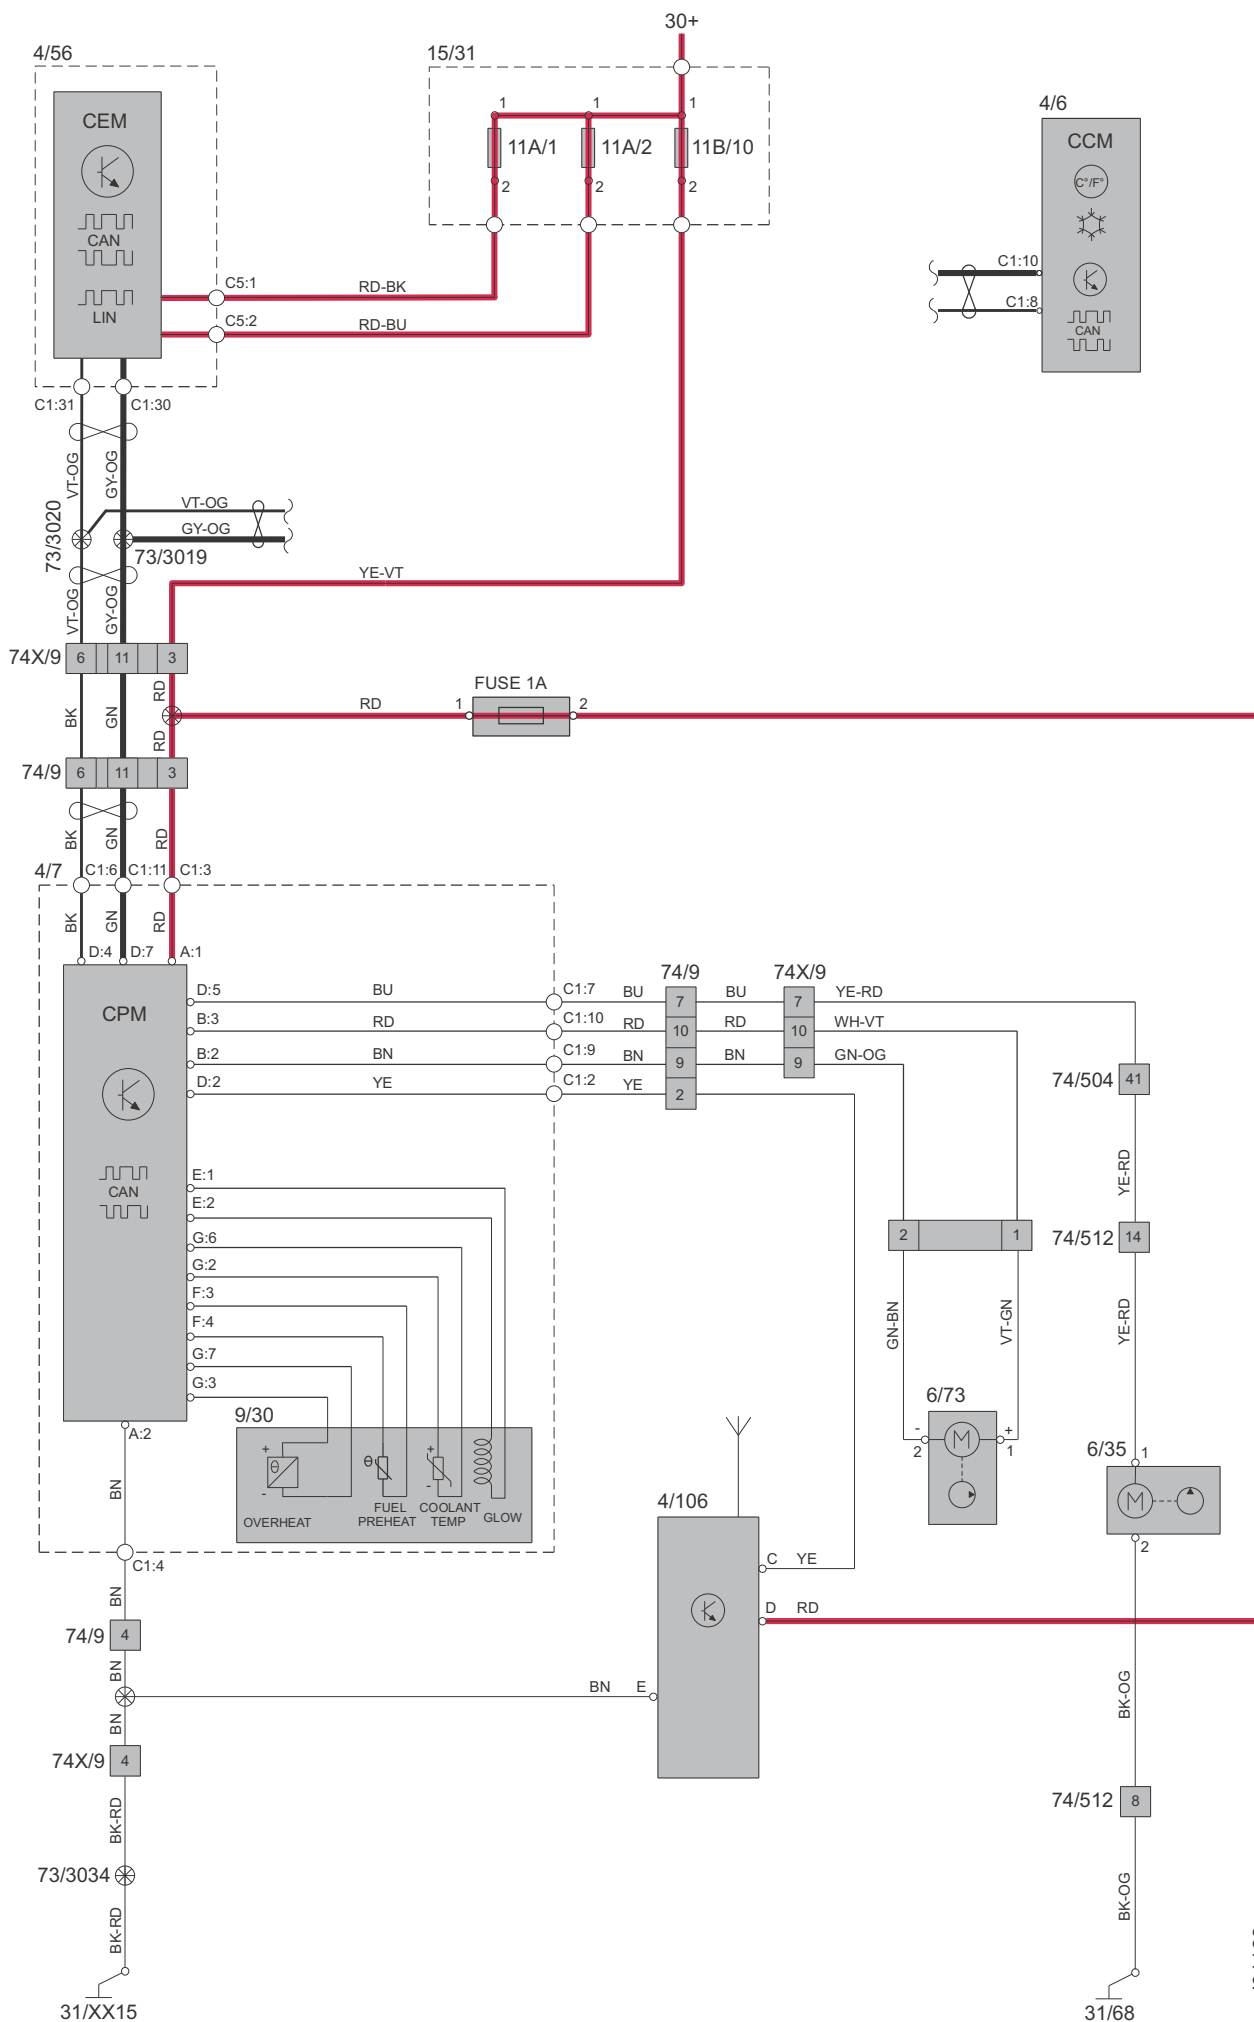


Group 87 Climate control system

Refrigeration box rear seat

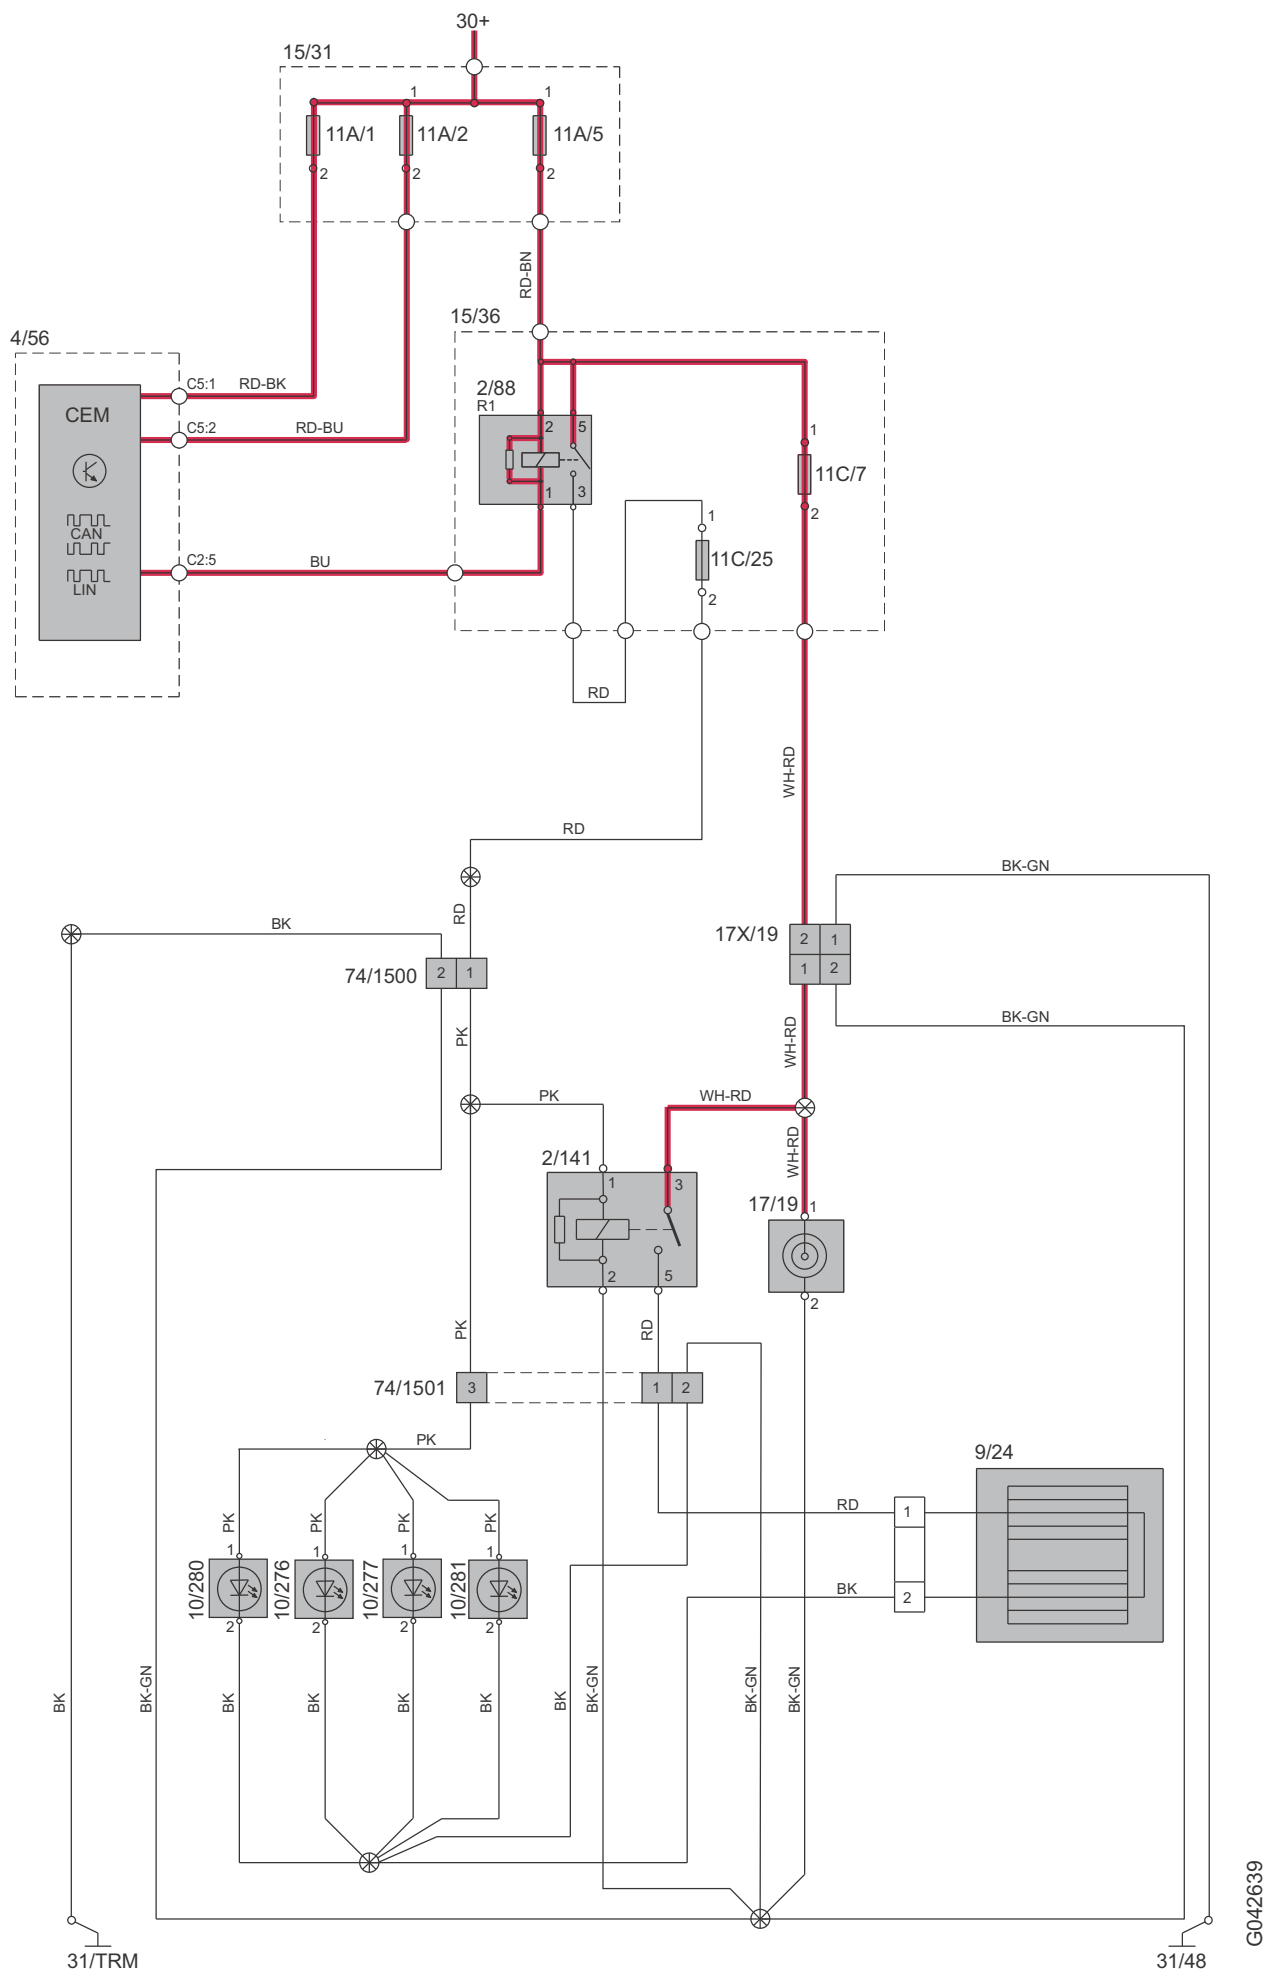


Group 88 Internal equipment Supplemental restraint system 1:2

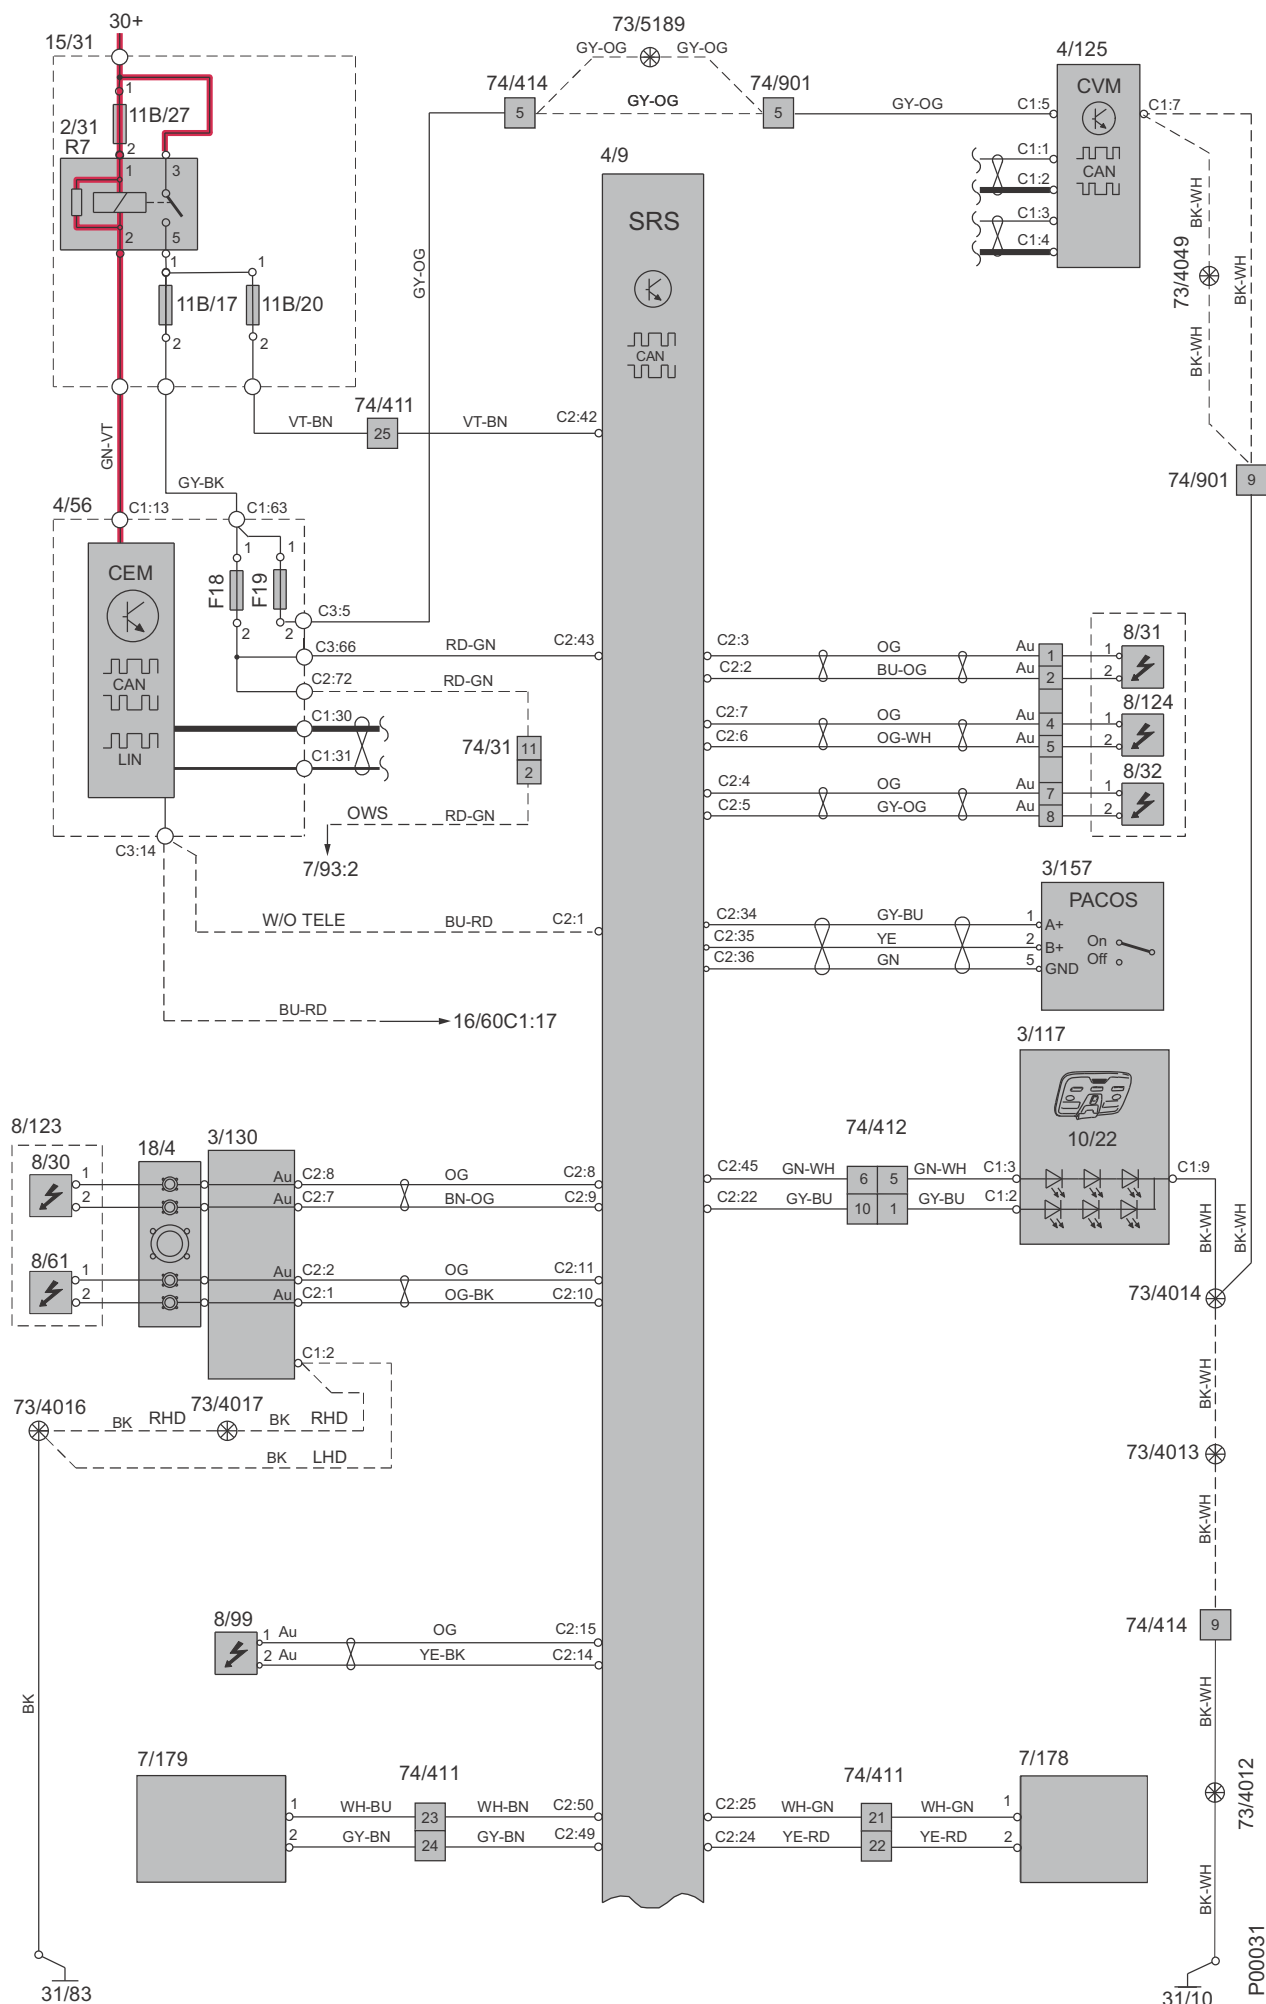


Group 88 Internal equipment
Supplemental restraint system 2:2

4/9

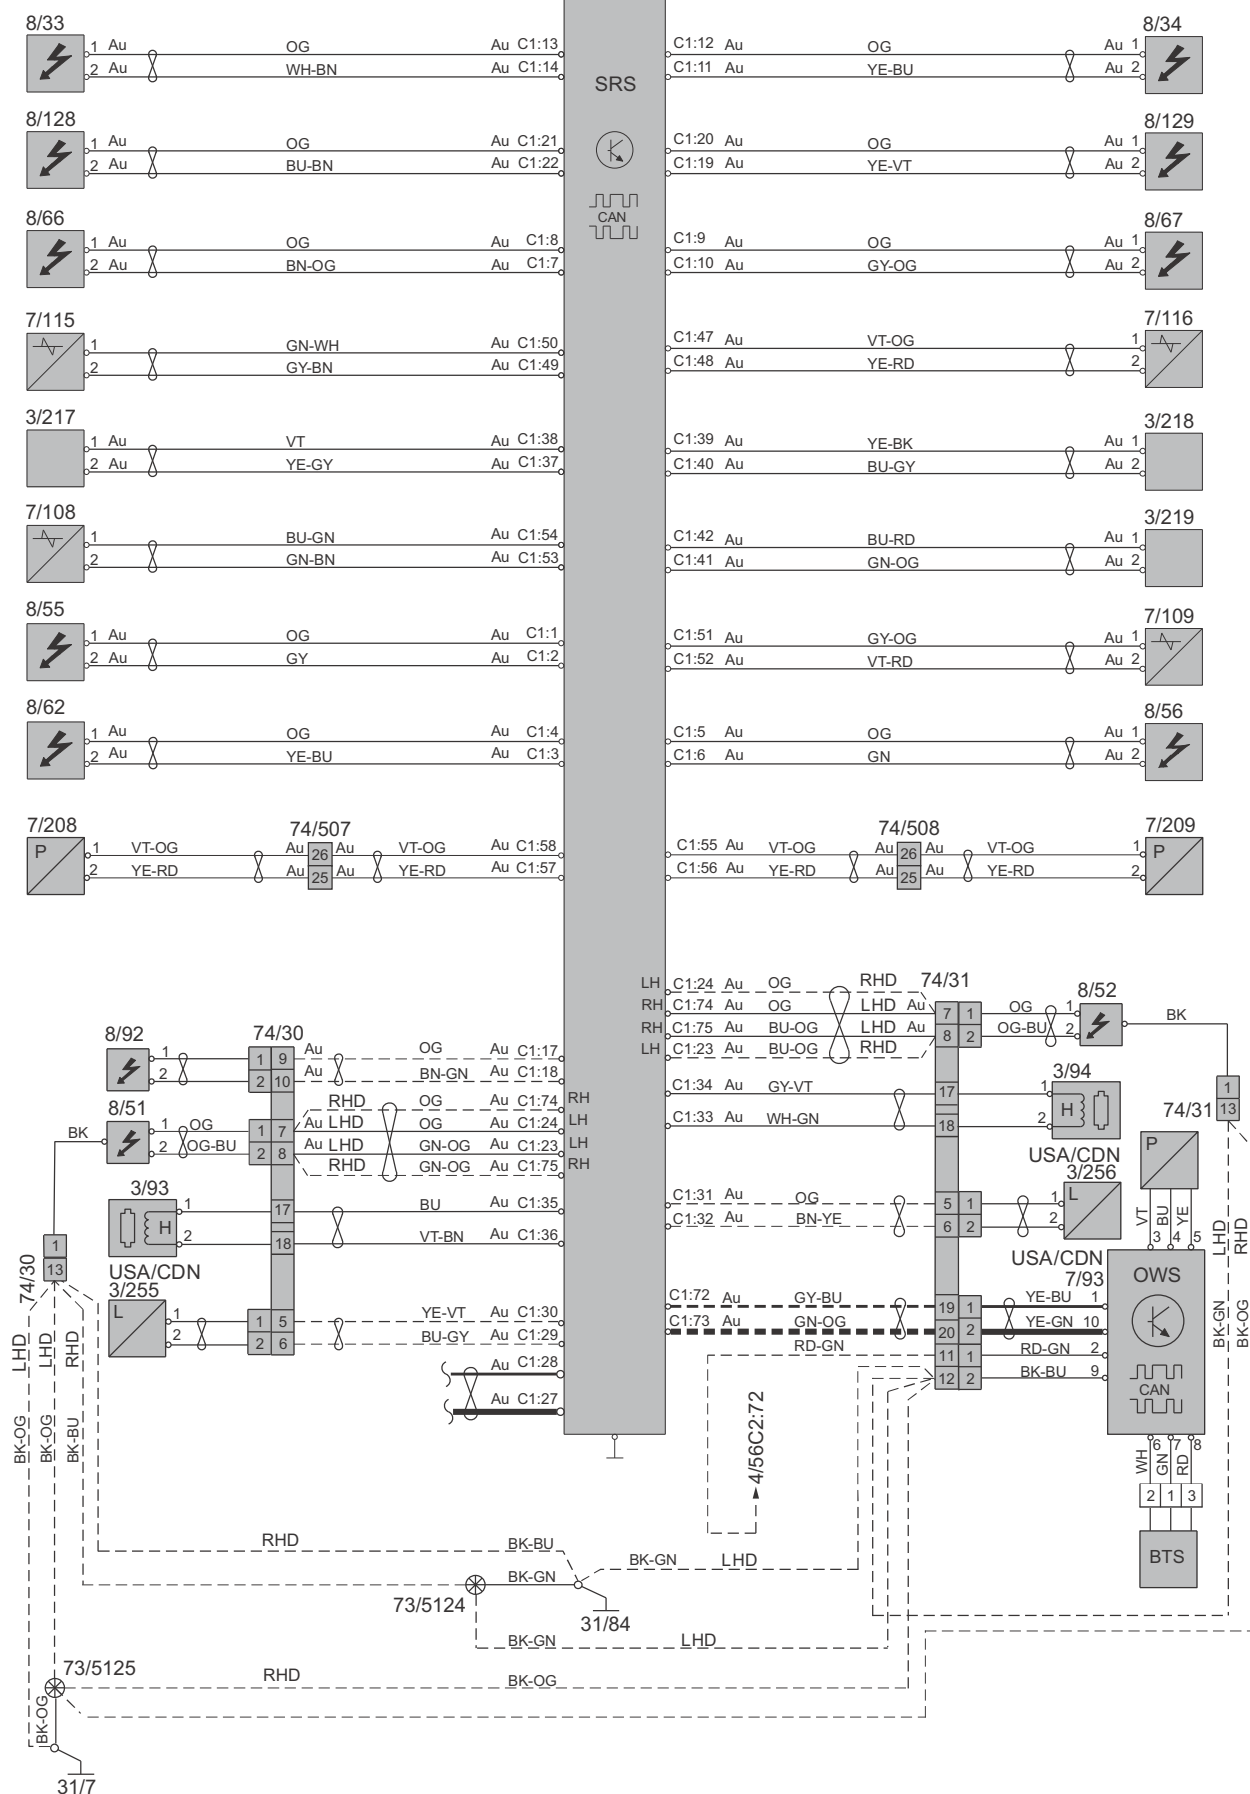

Group 88 Internal equipment


Power folding headrest

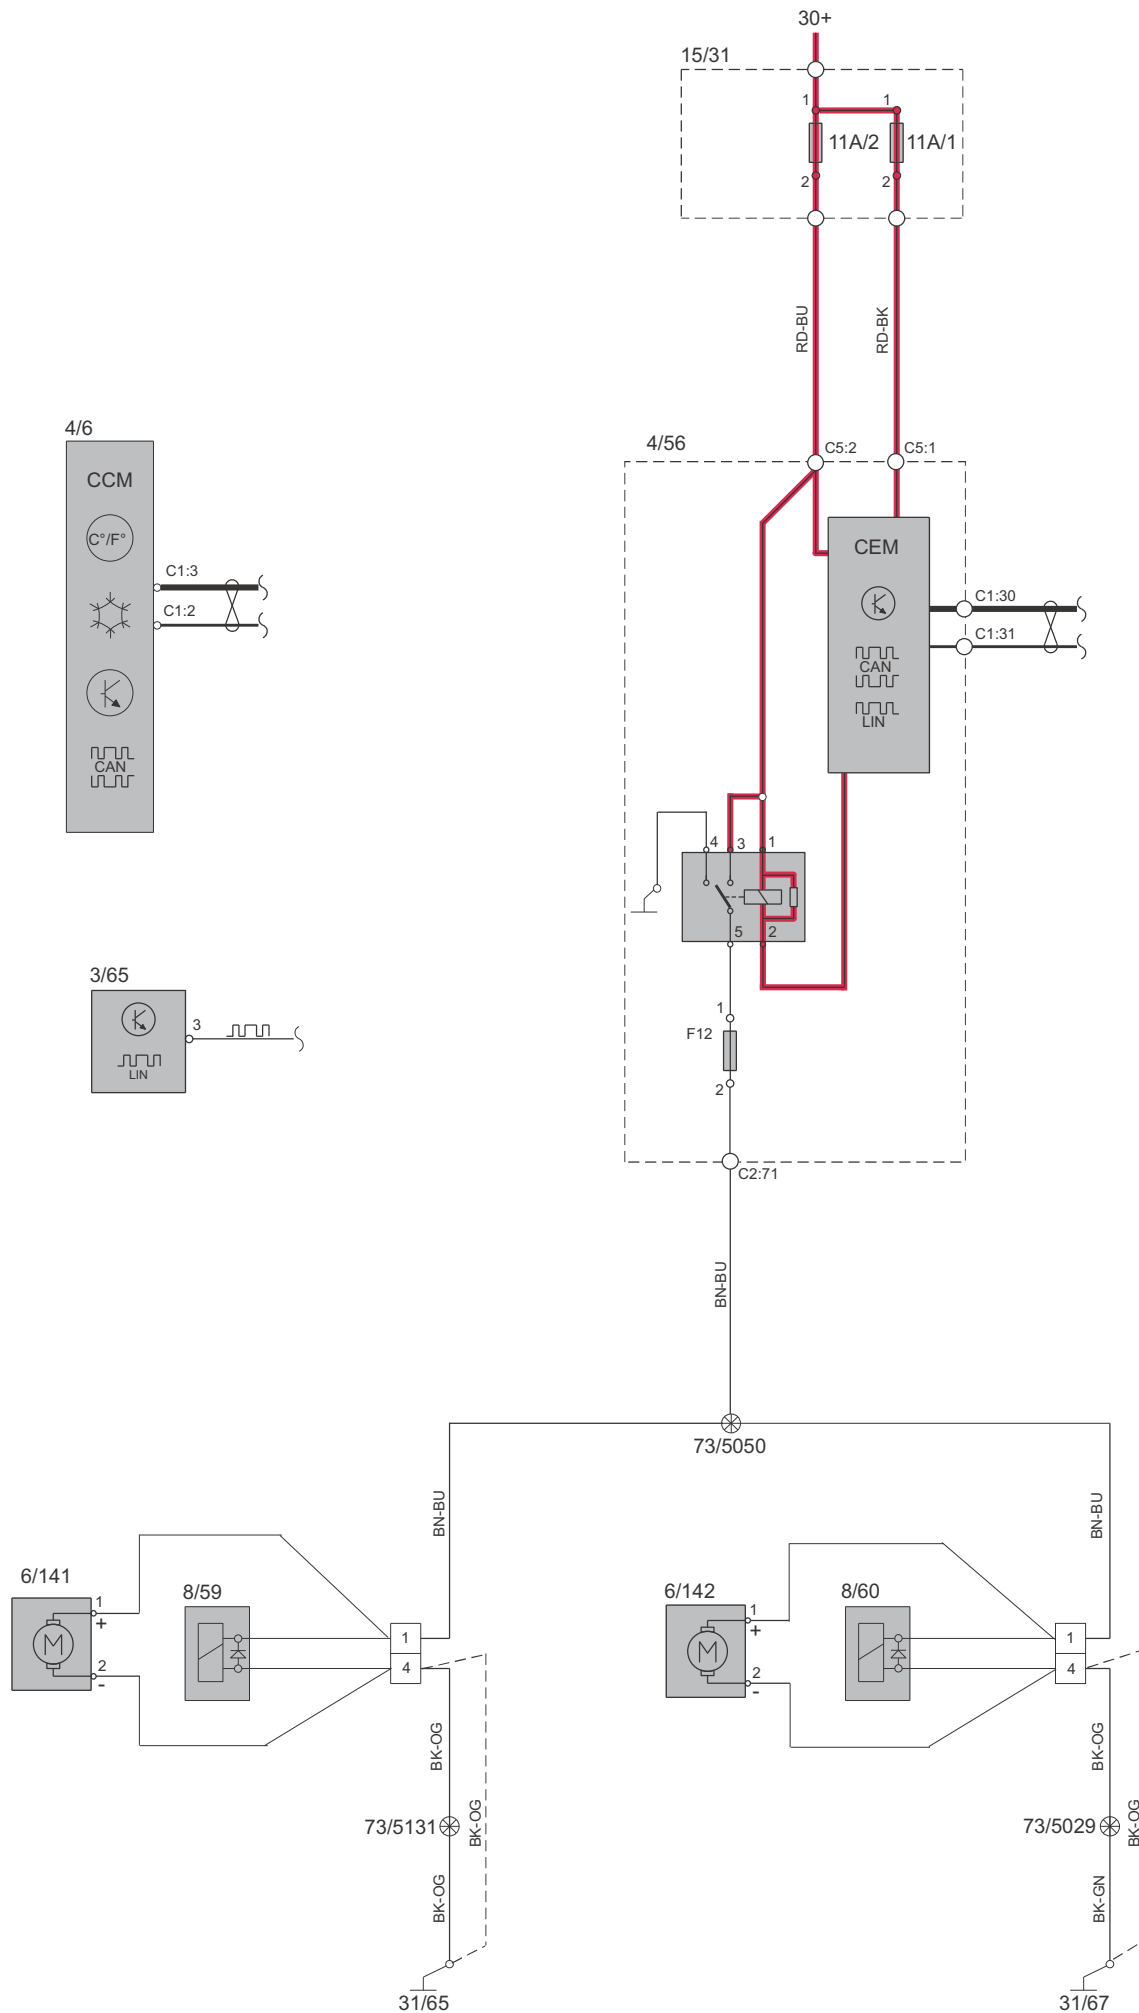

P00037

Group 88 Internal equipment


Remote control garage opening

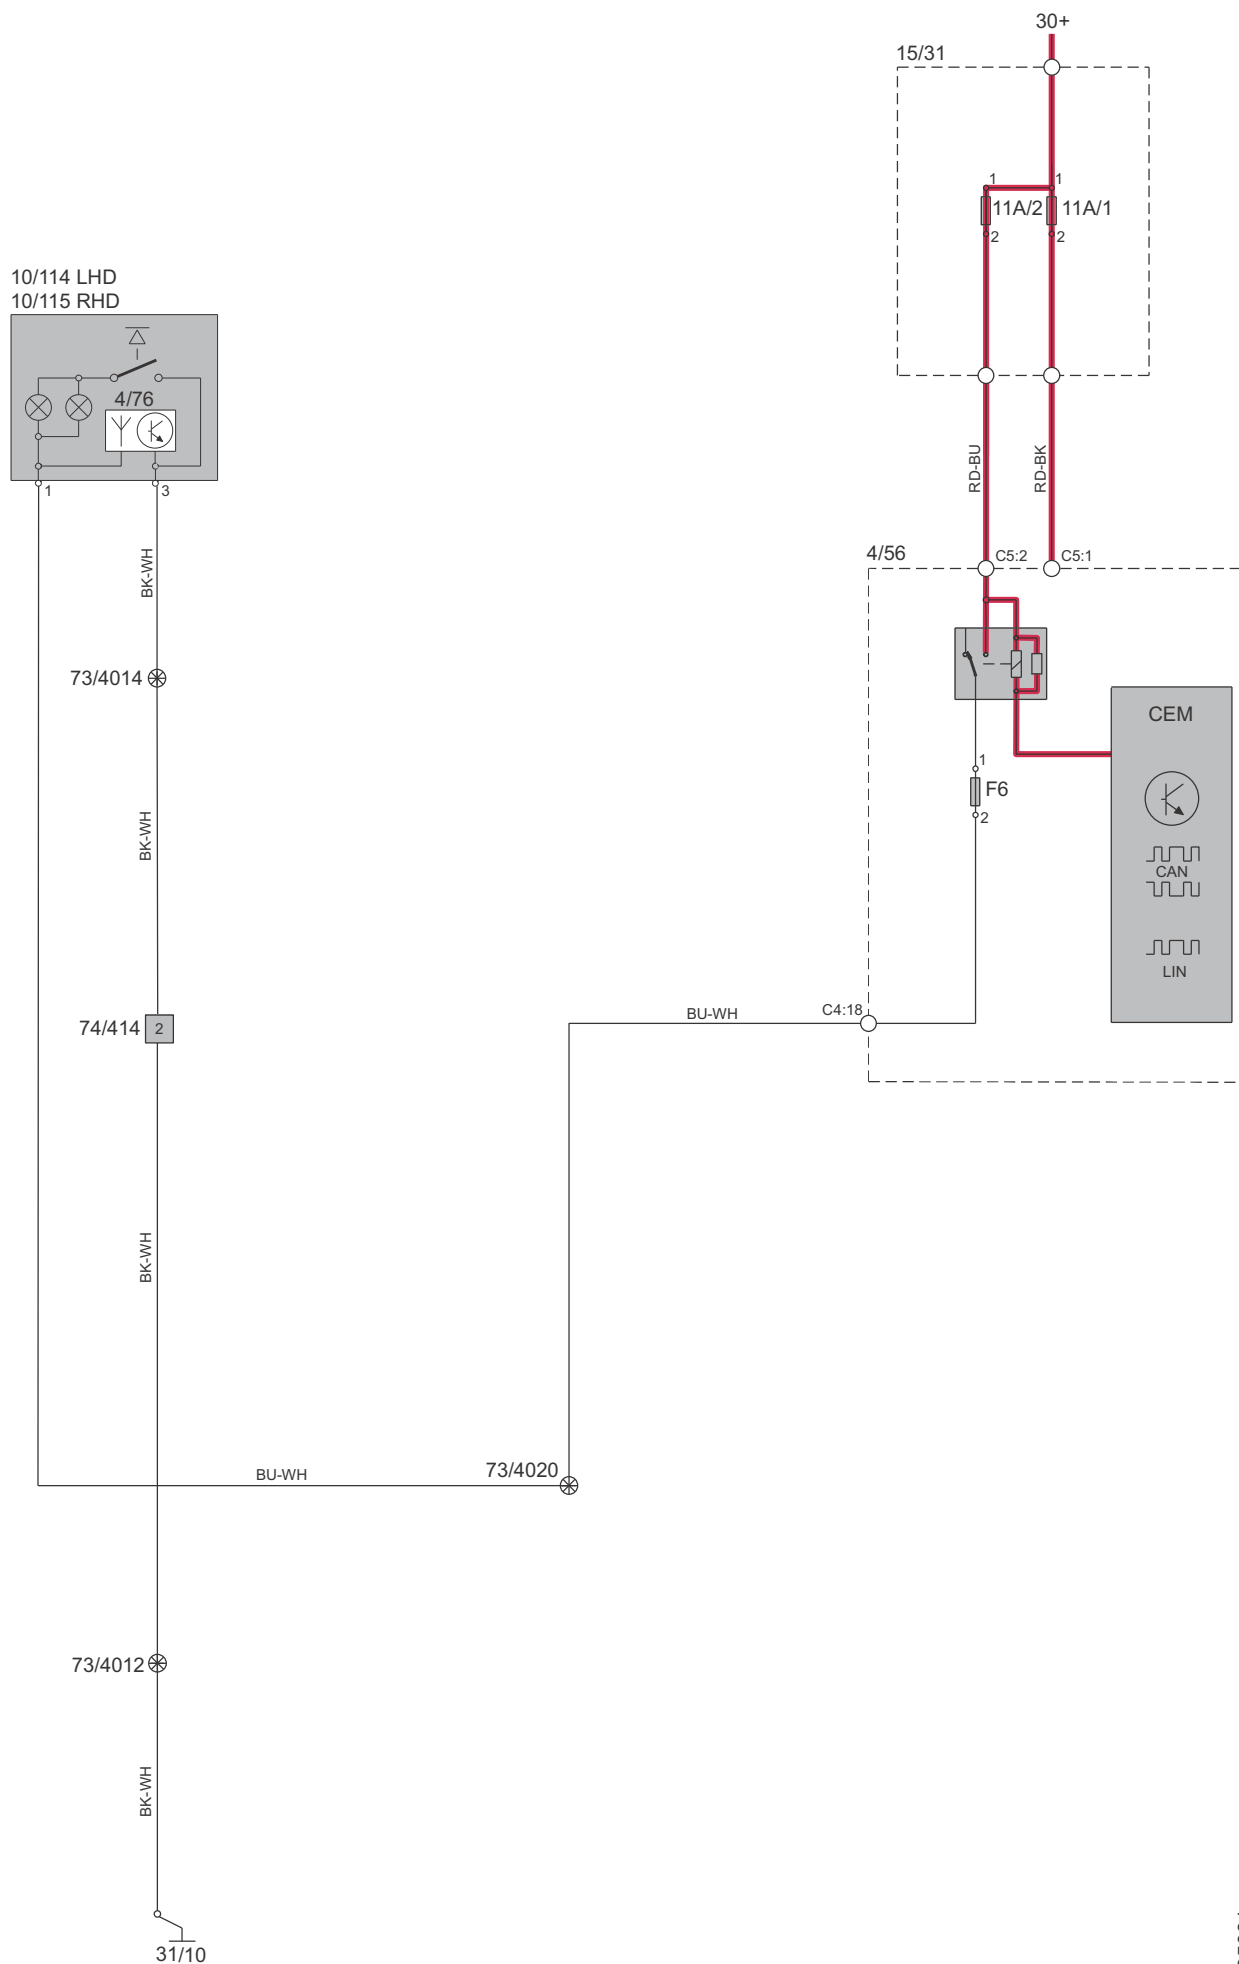

I05081

Group 88 Internal equipment

Rear-view mirror with automatic dimming

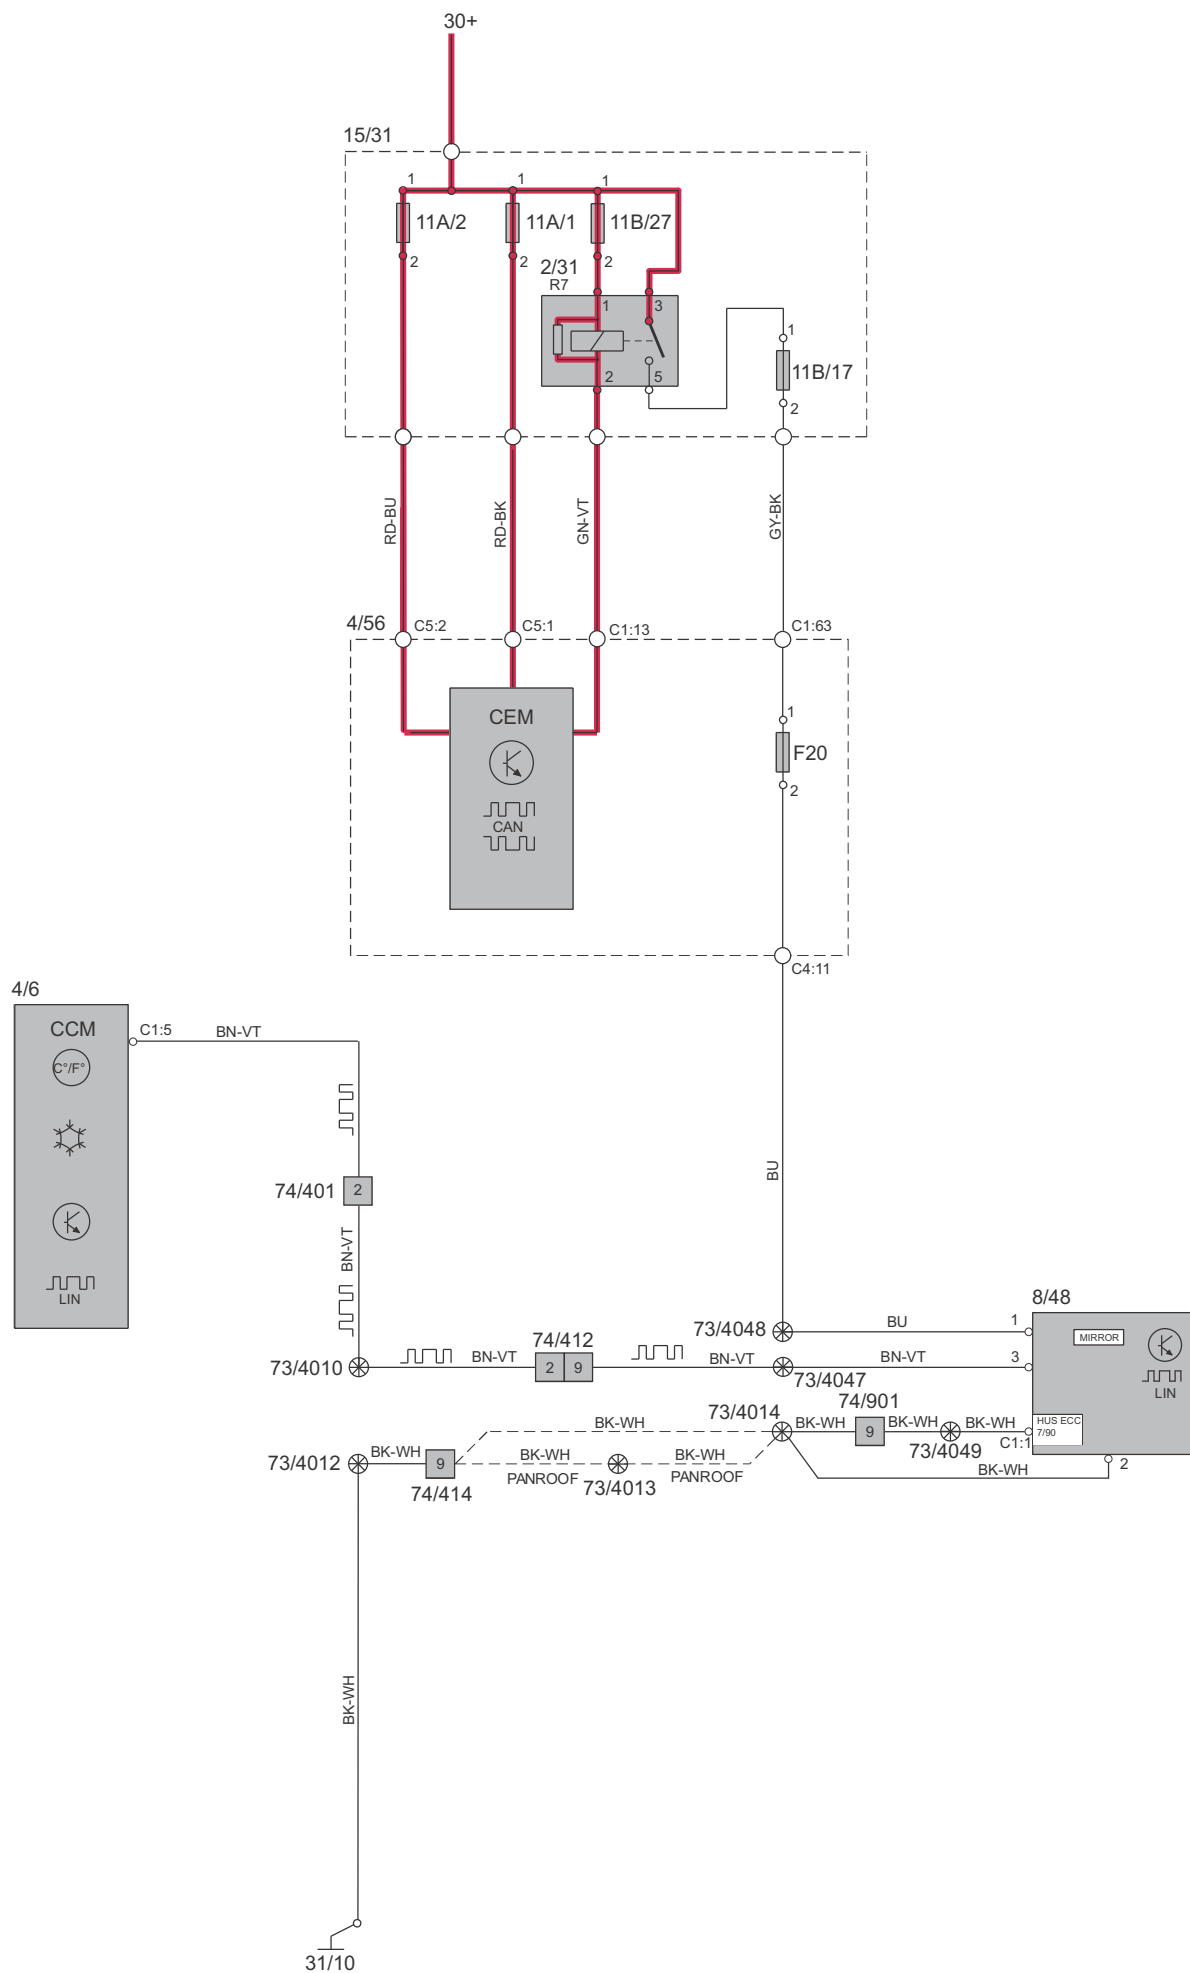

Connectors

74/9 - 74/30:1-7

74/9 12-pin black

No.	Engine compartment harness			Heater harness		
1	-	-	-	-	-	-
2	4/106:C	Control module, remote parking heater start	YE	4/7C1:2	Combustion Preheater Module (CPM)	YE
3	11B/10:2	Fuses in the engine compartment fuse box	YE-VT	4/7C1:3	Combustion Preheater Module (CPM)	RD
4	73/3034	Branching point	BK-RD	4/7C1:4	Combustion Preheater Module (CPM)	BN
5	-	-	-	-	-	-
6	73/3020	Branching point	VT-OG	4/7C1:6	Combustion Preheater Module (CPM)	BK
7	74/504:41	Connector	YE-RD	4/7C1:7	Combustion Preheater Module (CPM)	BU
8	-	-	-	-	-	-
9	6/73:2	Coolant pump	GN-OG	4/7C1:9	Combustion Preheater Module (CPM)	BN
10	6/73:1	Coolant pump	WH-VT	4/7C1:10	Combustion Preheater Module (CPM)	RD
11	73/3019	Branching point	GY-OG	4/7C1:11	Combustion Preheater Module (CPM)	GN
12	-	-	-	-	-	-

74/30 20-pin black

No.	Floor harness			Harness driver's seat		
1	73/5035 73/5023	Branching point, LHD Branching point, RHD	BK-VT BK-GN	9/12A:1	Seat Heating Module (SHM), driver's side	BK
2	11C/27:2	Fuse, distribution box in passenger compartment	GN-BK	9/12A:2	Seat Heating Module (SHM), driver's side	YE-RD
3	-	-	-	-	-	-
4	74/409:15 74/409:16	Connector, LHD Connector, RHD	WH-GN	9/12A:4	Seat Heating Module (SHM), driver's side	WH-GN
5	4/9C1:30	Supplemental restraint system module (SRS)	YE-VT	3/255:1	Position sensor driver's seat USA/CDN	-
6	4/9C1:29	Supplemental restraint system module (SRS)	BU-GY	3/255:2	Position sensor driver's seat USA/CDN	-
7	4/9C1:24 4/9C1:74	Supplemental restraint system module (SRS), LHD Supplemental restraint system module (SRS), RHD	OG	8/51:1	Front left side airbag igniter	OG
continues						

Connectors

74/30:8-20

74/30
20-pin black

No.	Floor harness			Harness driver's seat		
8	4/9C1:23 4/9C1:75	Supplemental restraint system module (SRS), LHD Supplemental restraint system module (SRS), RHD	GN-OG	8/51:2	Front left side airbag igniter	OG-BU
9	4/9C1:17	Supplemental restraint system module (SRS)	OG	8/92:1	Lap belt tensioner, driver	-
10	4/9C1:18	Supplemental restraint system module (SRS)	BN-GN	8/92:2	Lap belt tensioner, driver	-
11	73/5004	Branching point	VT-OG	4/52C2:3	Power Seat Module (PSM)	BU-RD
12	73/5003	Branching point	GY-OG	4/52C2:4	Power Seat Module (PSM)	GY-RD
13	31/7 73/5125 31/84 73/5124	Ground connection, LHD Branching point, LHD Ground connection, RHD Branching point, RHD	BK-OG BK-BU	8/51	Front left side airbag igniter	BK
14	73/5044	Branching point	VT-GN	4/52C2:1 4/52C2:6	Power Seat Module (PSM), LHD Power Seat Module (PSM), RHD	RD-WH
15	11C/13:2	Fuse in distribution box passenger compartment	GY-RD	4/52C1:1 4/52C1:7	Power Seat Module (PSM), LHD Power Seat Module (PSM), RHD	RD
16	73/5035 73/5023	Branching point, LHD Branching point, RHD	BK-VT BK-GN	73/3	Branching point	BK
17	4/9C1:35	Supplemental restraint system module (SRS)	BU	3/93:1	Contact, driver's seat belt buckle	-
18	4/9C1:36	Supplemental restraint system module (SRS)	VT-BN	3/93:2	Contact, driver's seat belt buckle	-
19	-	-	-	-	-	-
20	-	-	-	-	-	-

Connectors

74/31:1-15

74/31

20-pin black

No.	Floor harness			Harness passenger seat		
1	73/5023 73/5035	Branching point, LHD Branching point, RHD	BK-GN BK-VT	9/13A:1	Seat Heating Module (SHM), passenger side	BK
2	11C/26:2	Fuse in distribution box passenger compartment	BU-WH	9/13A:4	Seat Heating Module (SHM), passenger side	YE-RD
3	-		-	-		-
4	74/409:16 74/409:15	Connector, LHD Connector, RHD	BN-VT	9/13A:2	Seat Heating Module (SHM), passenger side	WH-GN
5	4/9C1:31	Supplemental restraint system module (SRS)	OG	3/256:1	Position sensor passenger seat USA/CDN	-
6	4/9C1:32	Supplemental restraint system module (SRS)	BN-YE	3/256:2	Position sensor passenger seat USA/CDN	-
7	4/9C1:74 4/9C1:24	Supplemental restraint system module (SRS), LHD Supplemental restraint system module (SRS), RHD	OG	8/52:1	Igniter side airbag front right	OG
8	4/9C1:75 4/9C1:23	Supplemental restraint system module (SRS), LHD Supplemental restraint system module (SRS), RHD	BU-OG	8/52:2	Igniter side airbag front right	OG-BU
9	-		-	-		-
10	-		-	-		-
11	4/56C2:23 4/56C2:72	Central Electronic Module (CEM) Central Electronic Module (CEM)	BN RD-GN	7/175:1 7/93:2	Occupant weight sensor, seat belt reminder Occupant Weight Sensor (OWS)	RD-GN
12	31/84 73/5124 74/31:13 73/5125	Ground connection, LHD Branching point, LHD Connector, RHD Branching point, RHD	BK-GN BK-OG	7/175:2 7/93:9	Occupant weight sensor, seat belt reminder Occupant Weight Sensor (OWS)	- BK-BU
13	73/5125 74/31:12	Branching point Connector, LHD	BK-OG BK-GN	8/52	Igniter side airbag front right	BK
14	73/5044	Branching point	BU-WH	3/27:7 3/27:11	Switch unit, power passenger seat, LHD Switch unit, power passenger seat, RHD	RD-WH
15	11C/14:2	Fuse in distribution box passenger compartment	BN-RD	3/27:5 3:27:2	Switch unit, power passenger seat, LHD Switch unit, power passenger seat, RHD	RD
continues						

Connectors

74/31:16-20 - 74/301:1-7

74/31

20-pin black

No.	Floor harness			Harness passenger seat		
16	73/5023 73/5035	Branching point, LHD Branching point, RHD	BK-GN BK-VT	3/27:8 3/27:3	Switch unit, power passenger seat Switch unit, power passenger seat	BK
17	4/9C1:34	Supplemental restraint system module (SRS)	GY-VT	3/94:1	Contact, passenger seat belt buckle	-
18	4/9C1:33	Supplemental restraint system module (SRS)	WH-GN	3/94:2	Contact, passenger seat belt buckle	-
19	4/9C1:72	Supplemental restraint system module (SRS)	GY-BU	7/93:1	Occupant Weight Sensor (OWS)	YE-BU
20	4/9C1:73	Supplemental restraint system module (SRS)	GU-OG	7/93:10	Occupant Weight Sensor (OWS)	YE-GN

74/301

34-pin black

No.	Engine harness			Engine compartment harness		
1	4/46B:54 73/3014 73/3139	Engine control module (ECM), 4-Cyl. Turbo 2.0L Branching point Branching point	BU-BK	73/3021	Branching point	BU-BK
2	4/46B:41 73/3015 73/3140	Engine control module (ECM), 4-Cyl. Turbo 2.0L Branching point Branching point	GN-BK	73/3022	Branching point	GN-BK
3	4/46B:25 4/46C:6	Engine control module (ECM) Engine control module (ECM), 1.6L Diesel	BN-WH	4/56C1:3	Central Electronic Module (CEM)	BN-WH
4	-	-	-	-	-	-
5	-	-	-	-	-	-
6	4/46A:23 4/46B:24 4/46B:35	Engine control module (ECM), 1.6L Diesel Engine Control Module (ECM), 5-Cyl. Diesel Engine Control Module (ECM), 4-Cyl. Turbo, 5 & 6-Cyl.	WH	74/504:1	Connector	WH
7	4/46A:44 4/46B:15 4/46B:34 73/3084	Engine control module (ECM), 1.6L Diesel Engine control module (ECM), 5-Cyl. Diesel Engine Control Module (ECM), 4-Cyl. Turbo, 5 & 6-Cyl. Branching point	BK-WH	74/504:2	Connector	BK-WH
continues						

Connectors

74/301:8-17

74/301

34-pin black

No.	Engine harness			Engine compartment harness		
8	-		-	-		-
9	4/28A:13	Transmission Control Module (TCM)	GN-OG	74/411:9	Connector	GN-OG
	4/28A:1	Transmission Control Module (TCM), MPS6				
10	4/46B:14	Engine Control Module (ECM), 4-Cyl. Turbo, 5 & 6-Cyl.	VT-OG	4/56C1:6	Central Electronic Module (CEM)	VT-OG
	4/46B:38	Engine control module (ECM), 1.6L Diesel				
	4/46B:49	Engine Control Module (ECM), 5-Cyl. Diesel				
11	4/28A:7	Transmission Control Module (TCM)	BN-VT	74/411:10	Connector	BN-VT
	4/28A:17	Transmission Control Module (TCM), MPS6				
12	3/10:1	Reversing light contact, Manual	BU	4/56C1:29	Central Electronic Module (CEM)	BU
13	4/46B:23	Engine Control Module (ECM), 5-Cyl. Diesel	GN-BN	7/8:2	Pressure sensor, climate control system	GN-BN
	4/46A:33	Engine control module (ECM), 1.6L Diesel				
	4/46B:49	Engine Control Module (ECM), 5-Cyl. Turbo				
	4/46B:51	Engine Control Module (ECM), 4-Cyl. Turbo, 5 & 6-Cyl.				
14	4/46A:45	Engine control module (ECM), Diesel	BN	7/8:1	Pressure sensor, climate control system	BN
	4/46B:16	Engine Control Module (ECM), 5-Cyl. Diesel				
	4/46B:37	Engine Control Module (ECM), 4-Cyl. Turbo				
	4/46B:53	Engine Control Module (ECM), 5 & 6-Cyl.				
15	4/46A:21	Engine control module (ECM), 1.6L Diesel	GY-BN	7/8:3	Pressure sensor, climate control system	GY-BN
	4/46B:8	Engine Control Module (ECM), 5-Cyl. Diesel				
	4/46B:31	Engine Control Module (ECM), 4-Cyl. Turbo, 5 & 6-Cyl.				
	73/3145	Branching point				
16	-		-	-		-
17	11B/41:2	Fuse, distribution box in engine compartment, Gasoline	BU	74/504:21	Connector	BU
	73/3131	Branching point, Diesel				
continues						

Connectors

74/301:18-30

74/301

34-pin black

No.	Engine harness		Engine compartment harness	
18	4/46B:30 4/46B:38 4/46B:48	Engine Control Module (ECM), 4-Cyl. Turbo, 5 & 6-Cyl. Engine control module (ECM), 5-Cyl. Diesel Engine control module (ECM), 1.6L Diesel	VT-BN 	4/56C1:5 Central Electronic Module (CEM)
19	4/46B:26 4/46B:34 4/46C:42	Engine Control Module (ECM), 4-Cyl. Turbo, 5 & 6-Cyl. Engine Control Module (ECM), 5-Cyl. Diesel Engine control module (ECM), 1.6L Diesel	BU-WH 	74/504:17 Connector
20	4/46B:13 4/46B:25 4/46B:34	Engine Control Module (ECM), 4-Cyl. Turbo, 5 & 6-Cyl. Engine Control Module (ECM), 5-Cyl. Diesel Engine control module (ECM), 1.6L Diesel	GY-BN 	74/504:42 Connector
21	4/28A:16 4/28A:13	Transmission Control Module (TCM) Transmission Control Module (TCM), MPS6	BU-GY 	74/411:11 Connector
22	4/46B:17 4/46B:33 4/46B:53	Engine Control Module (ECM), 4- & 5-Cyl. Turbo, 6-Cyl Engine control module (ECM), 1.6L Diesel Engine Control Module (ECM), 5-Cyl. Diesel	BU-WH 	4/56C1:41 Central Electronic Module (CEM)
23	-	-	-	-
24	4/46B:45	Engine Control Module (ECM), 5 & 6-Cyl.	GN-OG	74/504:38 Connector
25	-	-	-	-
26	-	-	-	-
27	73/3162 74/316:4	Branching point, Auto Connector, Manual	RD	74/504:19 Connector
28	6/164C2:1	Electrical power steering mod- ule (EHPS)	BN-WH	11B/19:2 Fuses in the engine com- partment fuse box
29	4/46B:17 4/46B:21 4/46B:45	Engine Control Module (ECM), 5Cyl. Diesel Engine Control Module (ECM), 5 & 6-Cyl. Engine Control Module (ECM), 4-Cyl. Turbo	YE-OG 	74/504:18 Connector
30	-	-	-	-
continues				

Connectors

74/301:31-34 - 74/307

74/301

34-pin black

No.	Engine harness			Engine compartment harness		
31	4/46B:46	Engine Control Module (ECM), 6-Cyl.	BU-GY	74/504:39	Connector	BU-GY
32	4/46B:15 4/46B:41 4/46B:46 73/3064	Engine Control Module (ECM), 4-Cyl. Turbo, 5 & 6-Cyl. Manual Engine control module (ECM), 1.6L Diesel, Manual Engine Control Module (ECM), 5-Cyl. Diesel, Manual Branching point, Auto	VT-BN	11B/20:2	Fuse, Distribution box in engine compartment	VT-BN
33	4/46B:23	Engine Control Module (ECM), 6-Cyl.	VT-OG	74/504:37	Connector	VT-OG
34	-	-	-	-	-	-

74/302 4-Cyl.

1-pin black

No.	Engine harness			Harness Starter motor		
1	2/35:5	Relay, starter motor	BU-WH	6/25C2:1	starter motor	BU-WH

74/304

2-pin black

No.	Engine compartment harness			Harness washer nozzle		
1	11B/21:2	Fuse, Distribution box in engine compartment	BU-GY	73/3040	Branching point	BU-GY
2	73/3033	Branching point	BK-OG	73/3037	Branching point	BK-OG

74/307 4-Cyl. Diesel

4-pin black

No.	Engine harness			Glow plug		
1	4/109:2	Glow plug control module	GY-VT	20/22:1	Glow plug	GY-VT
2	4/109:7	Glow plug control module	BU-BN	20/23:1	Glow plug	BU-BN
3	4/109:1	Glow plug control module	VT-WH	20/24:1	Glow plug	VT-WH
4	4/109:6	Glow plug control module	YG-BU	20/25:1	Glow plug	YE-BU

Connectors

74/309 - 74/310

74/309 12-pin gray

No.	Engine compartment harness		Harness bumper, front		
1	-	-	-	-	-
2	-	-	-	-	-
3	-	-	-	-	-
4	74/519:12 Connector	VT-GY	73/3046	Branching point	VT-GY
5	74/519:13 Connector	BU-GN	7/204:2	Front parking assistance sensor	BU-GN
6	74/519:14 Connector	YE-OG	73/3047	Branching point	YE-OG
7	-	-	-	-	-
8	-	-	-	-	-
9	-	-	-	-	-
10	74/519:15 Connector	BU-BK	7/205:2	Front parking assistance sensor	BU-BK
11	74/519:16 Connector	BU-GY	7/206:2	Front parking assistance sensor	BU-GY
12	74/519:17 Connector	BU-OG	7/207:2	Front parking assistance sensor	BU-OG

74/310 4-Cyl. 1.6L Turbo 8-pin black

No.	Engine harness			Engine harness		
1	8/6:2	Injection valves	YE-BU	4/46A:3	Engine Control Module (ECM)	YE-BU
2	8/6:1	Injection valves	GN-BU	4/46A:77	Engine Control Module (ECM)	GN-BU
3	8/7:2	Injection valves	BU-OG	4/46A:25	Engine Control Module (ECM)	BU-OG
4	8/7:1	Injection valves	GY-YE	4/46A:52	Engine Control Module (ECM)	GY-YE
5	8/8:2	Injection valves	GN-VT	4/46A:26	Engine Control Module (ECM)	GN-VT
6	8/8:1	Injection valves	VT-GY	4/46A:76	Engine Control Module (ECM)	VT-GY
7	8/9:2	Injection valves	BU	4/46A:27	Engine Control Module (ECM)	BU
8	8/9:1	Injection valves	YE-OG	4/46A:53	Engine Control Module (ECM)	YE-OG

Connectors

74/310 - 74/316

74/310 4-Cyl. 2.0L Turbo 16-pin black

No.	Engine harness			Engine harness		
1	8/6:1	Injection valves	GN-BU	4/46A:77	Engine Control Module (ECM)	GN-BU
2	7/24:1	Front knock sensor	WH-BN	4/46A:84	Engine Control Module (ECM)	WH-BN
3	7/24:2	Front knock sensor	VT-OG	4/46A:60	Engine Control Module (ECM)	VT-OG
4	8/7:1	Injection valves	GY-YE	4/46A:52	Engine Control Module (ECM)	GY-YE
5	8/8:1	Injection valves	VT-GY	4/46A:76	Engine Control Module (ECM)	VT-GY
6	8/9:1	Injection valves	YE-OG	4/46A:53	Engine Control Module (ECM)	YE-OG
7	7/23:1	Rear knock sensor	BN-GN	4/46A:85	Engine Control Module (ECM)	BN-GN
8	7/23:2	Rear knock sensor	BN-BU	4/46A:61	Engine Control Module (ECM)	BN-BU
9	8/6:2	Injection valves	YE-BU	4/46A:3	Engine Control Module (ECM)	YE-BU
10	-	-	-	-	-	-
11	-	-	-	-	-	-
12	8/7:2	Injection valves	BU-OG	4/46A:25	Engine Control Module (ECM)	BU-OG
13	8/8:2	Injection valves	GN-VT	4/46A:26	Engine Control Module (ECM)	GN-VT
14	8/9:2	Injection valves	BU	4/46A:27	Engine Control Module (ECM)	BU
15	-	-	-	-	-	-
16	-	-	-	-	-	-

74/316 6-pin black

No.	Engine harness			Engine compartment harness		
1	2/35:3 11B/34:1	Relay, starter motor Fuses in the engine compartment fuse box, 5-Cyl. Diesel	RD	11A/9:2	Main fuses in the engine compartment fuse box	RD
2	73/3160 11B/33:2	Branching point Fuses in the engine compartment fuse box	RD-BU	73/3157	Branching point	RD-BU
3	4/46A:90 4/46C:3 4/46B:31	Engine Control Module (ECM), 4-Cyl. Turbo Engine Control Module (ECM), 4-Cyl. Diesel Engine Control Module (ECM), 5-Cyl. Diesel	YE-VT	2/246:2	Secondary battery relay	YE-VT
4	4/56C2:17 73/3162 74/301:27	Central Electronic Module (CEM) Branching point Connector	RD	11B/12:2	Fuses in the engine compartment fuse box	RD
5	4/46A:16 4/46B:43	Engine Control Module (ECM), 4-Cyl. Turbo Engine Control Module (ECM), 5-Cyl. Diesel	GY-VT	2/166:5	Battery relay	GY-VT
6	-	-	-	-	-	-

Connectors

74/321 - 74/401:1-15

74/321

8-pin black

No.	Forward-aimed radar harness			Engine compartment harness		
1	-		-	-		-
2	7/203:18	Forward-aimed radar (FLR)	BN-BU	74/411:4	Connector	BN-BU
3	7/203:9	Forward-aimed radar (FLR)	GY-BU	74/411:5	Connector	GY-BU
4	-		-	-		-
5	-		-	-		-
6	7/203:3	Forward-aimed radar (FLR)	BK-RD	73/3155	Branching point	BK-RD
7	7/203:1	Forward-aimed radar (FLR)	GY-VT	74/411:3	Connector	GY-VT
8	7/203:10	Forward-aimed radar (FLR)	GY-OG	4/56C1:74	Central Electronic Module (CEM)	GY-OG

74/401

22-pin gray

No.	Center console harness			Dashboard harness		
1	4/6C1:4	Climate Control Module (CCM)	WH-GN	74/417:3	Connector	WH-GN
2	4/6C1:5	Climate Control Module (CCM)	BN-VT	73/4010	Branching point	BN-VT
3	4/6C1:16	Climate Control Module (CCM)	YE-VT	74/417:6	Connector	YE-VT
4	4/6C1:17	Climate Control Module (CCM)	VT-BN	74/417:5	Connector	BN
5	4/6C1:14	Climate Control Module (CCM)	WH-GN	74/417:7	Connector	BU-GN
6	3/281C1:6	Infotainment Control Module (ICM)	GN-OG	3/130C1:6	Steering Wheel Module (SWM)	GN-OG
7	4/6C1:1	Climate Control Module (CCM)	RD	4/56C3:73	Central Electronic Module (CEM)	RD
8	4/6C1:12	Climate Control Module (CCM)	VT-BK	4/31:2	Passenger compartment fan control module	VT-BK
9	3/281C1:2 4/6C1:2	Infotainment Control Module (ICM) Climate Control Module (CCM)	GY-OG	5/1C1:2 73/4001 73/4034 74/409:19	Driver Information Module (DIM) Branching point Branching point Connector	GY-OG
10	3/281C1:3 4/6C1:3	Infotainment Control Module (ICM) Climate Control Module (CCM)	VT-OG	5/1C1:6 73/4002 73/4035 74/409:20	Driver Information Module (DIM) Branching point Branching point Connector	VT-OG
11	-		-	-		-
12	-		-	-		-
13	-		-	-		-
14	-		-	-		-
15	-		-	-		-
continues						

Connectors

74/401:16-22 - 74/403:1-10

74/401

22-pin gray

No.	Center console harness			Dashboard harness		
16	-	-	-	-	-	-
17	-	-	-	-	-	-
18	-	-	-	-	-	-
19	-	-	-	-	-	-
20	-	-	-	-	-	-
21	3/281C1:1	Infotainment Control Module (ICM)	GY-YE	16/1C2:1	Integrated Audio Module (IAM)	GY-YE
22	3/281C1:10 4/6C1:22	Infotainment Control Module (ICM) Climate Control Module (CCM)	BK	73/4016	Branching point	BK

74/402

2-pin black

No.	Center console harness			Dashboard harness		
1	3/281C2:1	Infotainment Control Module (ICM)	OG	4/124C2:2	Accessory USB unit (AUU)	-
2	3/281C2:2	Infotainment Control Module (ICM)	OG	4/124C2:1	Accessory USB unit (AUU)	-

74/403

22-pin gray

No.	Dashboard harness			Tunnel harness		
1	16/1C1:5	Integrated Audio Module (IAM)	BN	16/123:4	Auxiliary equipment input (AUX)	BN
2	16/1C1:7	Integrated Audio Module (IAM)	GN	16/123:2	Auxiliary equipment input (AUX)	GN
3	16/1C1:6	Integrated Audio Module (IAM)	WH	16/123:1	Auxiliary equipment input (AUX)	WH
4	16/1C1:8	Integrated Audio Module (IAM)	-	-	-	-
5	-	-	-	-	-	-
6	4/56C3:67	Central Electronic Module (CEM)	BU-RD	3/65:1	Switch, heated rear seat	BU-RD
7	4/56C3:69	Central Electronic Module (CEM)	BU-RD	16/181:13 10/72:1 10/161:1 74/1502:1	Rear headphone sockets Front ashtray lighting Cup holder illumination lamp Connector	BU-RD
8	74/411:9	Connector	GN-RD	3/156A:3	Gear Selector Module (GSM)	GN-OG
9	74/411:11	Connector	BU-GY	3/156A:1	Gear Selector Module (GSM)	BU-GY
10	-	-	-	-	-	-
continues						

Connectors

74/403:11-22 - 74/405

74/403 22-pin gray

No.	Dashboard harness			Tunnel harness		
11	-	-	-	-	-	-
12	-	-	-	-	-	-
13	-	-	-	-	-	-
14	-	-	-	-	-	-
15	-	-	-	-	-	-
16	-	-	-	-	-	-
17	-	-	-	-	-	-
18	-	-	-	-	-	-
19	-	-	-	-	-	-
20	4/56C3:38	Central Electronic Module (CEM)	WH-BN	8/134:1	Solenoid, reverse interlock, manual	WH-BN
21	-	-	-	-	-	-
22	74/411:10	Connector	BN-VT	3/156A:2	Gear Selector Module (GSM)	BN-VT

74/404 2-pin black

No.	Dashboard harness			Infotainment harness		
1	16/1C4:1	Integrated Audio Module (IAM)	OG	16/36C1:2	TV receiver	OG
	16/109C1:1	DVD player/control module		16/105C2:2	Audio module (AUD)	
				74/529:2	Connector	
2	3/281C2:2	Infotainment Control Module (ICM)	OG	16/105C4:1	Audio module (AUD)	OG
	16/60C4:2	Phone Module (PHM)		16/108C3:1	Multimedia Module (MMM)	

74/405 4-pin black

No.	Dashboard harness			Floor harness		
1	16/1C3:1	Integrated Audio Module (IAM)	WH	16/16C2:1	Window antenna amplifier	WH
1S	16/1C3:1S	Integrated Audio Module (IAM)	-	16/16C2:1S	Window antenna amplifier	-
2	16/1C3:2	Integrated Audio Module (IAM)	WH	16/71C1:1	Window antenna amplifier	WH
2S	16/1C3:2S	Integrated Audio Module (IAM)	-	16/71C1:1S	Window antenna amplifier	-

Connectors

74/406 - 74/407

74/406

2-pin violet

No.	Dashboard harness			Infotainment harness		
1	16/60C2:1	Phone Module (PHM)	WH	16/47C3:1	Antenna GSM/GPS/RDAR	WH
1S	16/60C2:1S	Phone Module (PHM)	-	16/47C3:1S	Antenna GSM/GPS/RDAR	-

74/407 Alternative 1

16-pin green

No.	Dashboard harness			Floor harness		
1	16/1C2:12	Integrated Audio Module (IAM)	GY-BK	74/507:23	Connector	GY-BK
2	-		-	-		-
3	16/1C2:7	Integrated Audio Module (IAM)	YE-BK	74/508:23	Connector	YE-BK
4	16/1C2:9	Integrated Audio Module (IAM)	GY-RD	74/509:4	Connector	GY-RD
5	16/1C2:10	Integrated Audio Module (IAM)	YE-RD	74/510:4	Connector	YE-RD
6	-		-	-		-
7	-		-	-		-
8	-		-	-		-
9	16/1C2:6	Integrated Audio Module (IAM)	GN-BK	74/507:22	Connector	GN-BK
10	-		-	-		-
11	16/1C2:1	Integrated Audio Module (IAM)	VT-BK	74/508:22	Connector	VT-BK
12	16/1C2:3	Integrated Audio Module (IAM)	GN-RD	74/509:3	Connector	GN-RD
13	16/1C2:4	Integrated Audio Module (IAM)	VT-RD	74/510:3	Connector	VT-RD
14	-		-	-		-
15	-		-	-		-
16	-		-	-		-

Connectors

74/407 - 74/407B

74/407 Alternative 2

16-pin green

No.	Infotainment harness			Floor harness		
1	74/407B:1	Connector	GY-BK	74/507:23	Connector	GY-BK
2	74/407B:2	Connector	GY	74/409:10	Connector	GY
3	74/407B:3	Connector	YE-BK	74/508:23	Connector	YE-BK
4	74/407B:4	Connector	GY-RD	74/509:4	Connector	GY-RD
5	74/407B:5	Connector	YE-RD	74/510:4	Connector	YE-RD
6	-		-	-		-
7	-		-	-		-
8	-		-	-		-
9	74/407B:9	Connector	GN-BK	74/507:22	Connector	GN-BK
10	74/407B:10	Connector	GN	74/409:9	Connector	GN
11	74/407B:11	Connector	VT-BK	74/508:22	Connector	VT-BK
12	74/407B:12	Connector	GN-RD	74/509:3	Connector	GN-RD
13	74/407B:13	Connector	VT-RD	74/510:3	Connector	VT-RD
14	-		-	-		-
15	-		-	-		-
16	-		-	-		-

74/407B

16-pin green

No.	Infotainment harness			Floor harness		
1	16/105C3:1	Audio module (AUD)	GY-BK	74/407:1	Connector	GY-BK
2	16/105C3:2	Audio module (AUD)	GY	74/407:2	Connector	GY
3	16/105C3:3	Audio module (AUD)	YE-BK	74/407:3	Connector	YE-BK
4	16/105C3:4	Audio module (AUD)	GY-RD	74/407:4	Connector	GY-RD
5	16/105C3:5	Audio module (AUD)	YE-RD	74/407:5	Connector	YE-RD
6	-		-	-		-
7	-		-	-		-
8	-		-	-		-
9	16/105C3:9	Audio module (AUD)	GN-BK	74/407:9	Connector	GN-BK
10	16/105C3:10	Audio module (AUD)	GN	74/407:10	Connector	GN
11	16/105C3:11	Audio module (AUD)	VT-BK	74/407:11	Connector	VT-BK
12	16/105C3:12	Audio module (AUD)	GN-RD	74/407:12	Connector	GN-RD
13	16/105C3:13	Audio module (AUD)	VT-RD	74/407:13	Connector	VT-RD
14	-		-	-		-
15	-		-	-		-
16	-		-	-		-

Connector 74/409

74/409
26-pin green

No.	Dashboard harness			Floor harness		
1	-		-	-		-
2	3/272:3	Switch, parking brake	BU	4/115C1:20	Park Brake Module (PBM)	BU
3	3/272:8	Switch, parking brake	GN-WH	4/115C1:11	Park Brake Module (PBM)	GN-WH
4	3/272:7	Switch, parking brake	WH-BN	4/115C1:18	Park Brake Module (PBM)	WH-BN
5	3/272:4	Switch, parking brake	VT-GN	4/115C1:9	Park Brake Module (PBM)	VT-GN
6	3/272:6	Switch, parking brake	WH-OG	4/115C1:19	Park Brake Module (PBM)	WH-OG
7	3/272:5	Switch, parking brake	BN	4/115C1:10	Park Brake Module (PBM)	BN
8	-		-	-		-
9	16/26:1	Center dashboard speaker	GN	74/407:10	Connector	GN
10	16/26:2	Center dashboard speaker	GY	74/407:2	Connector	GY
11	-		-			-
12	-		-			-
13	16/1C1:2	Integrated Audio Module (IAM)	GN-VT	16/16C1:1	Window antenna amplifier	GN-VT
14	-		-	-		-
15	74/417:3	Connector	WH-GN	73/5021 74/30:4 74/31:4	Branching point Connector, LHD Connector, RHD	WH-GN BN-VT
16	73/4010	Branching point	BN-VT	74/30:4 9/15A:2 74/31:4	Connector, RHD Control module, RH rear seat heater Connector, LHD	WH-GN BN-VT
17	11C/19:2	Fuse in distribution box passenger compartment	BU-RD	16/60C1:5 16/147C1:32	Phone Module (PHM) Bluetooth Phone Module (BPM)	BU-RD
18	11C/21:2	Fuse in distribution box passenger compartment	BU-GY	74/414:1 74/417:1	Connector Connector	BU-GY
19	73/4034 74/401:9	Branching point Connector	GY-OG	73/5005 73/5009	Branching point, RHD Branching point, LHD	GY-OG
20	73/4035 74/401:10	Branching point Connector	VT-OG	73/5006 73/5010	Branching point, RHD Branching point, LHD	VT-OG
21	11C/16:2	Fuses in distribution box pas- senger compartment	VT-RD	3/281C1:8	Infotainment Control Module (ICM)	VT-RD
22	73/4038	Branching point	GN-BK	74/518:2 73/5012	Connector Branching point	GN-BK
23	73/4037	Branching point	BU-BK	74/518:1 73/5011	Connector Branching point	BU-BK
24	73/4046	Branching point	BK-GY	73/5132	Branching point	BK-GY
25	11C/20:2	Fuse in distribution box passenger compartment	GN-RD	16/109C1:7	DVD player/control module	GN-RD
26	11C/18:2	Fuse in distribution box passenger compartment	YE-RD	16/1C2:1	Integrated Audio Module (IAM)	YE-RD

Connector

74/411

74/411
26-pin gray

No.	Engine compartment harness			Dashboard harness		
1	11A/6 11B/11:2	Main fuses in the engine compartment fuse box Fuse, Distribution box in engine compartment	YE-RD	73/4028	Branching point	YE-RD
2	-		-	-		-
3	4/56C3:63	Central Electronic Module (CEM)	GY-VT	74/321:7	Connector	GY-VT
4	74/321:2	Connector	BN-BU	74/412:18	Connector	BN-BU
5	74/321:3	Connector	GY-BU	74/412:17	Connector	GY-BU
6	10/1:8 10/2:8	Lamp housing, front left Lamp housing, front right	BK	73/4017 73/4016	Branching point, LHD Branching point	BK
7	-		-	-		-
8	-		-	-		-
9	74/301:9	Connector	GN-OG	74/403:8	Connector	GN-RD
10	74/301:11	Connector	BN-VT	74/403:22	Connector	BN-VT
11	74/301:21	Connector	BU-GY	74/403:9	Connector	BU-GY
12	11B/23:2	Fuse, Distribution box in engine compartment	RD-BK	3/111:1	Light Switch Module (LSM)	RD-BK
13	10/1:12 10/2:12	Lamp housing, front left Lamp housing, front right	VT-GN	3/111:4	Light Switch Module (LSM)	VT-GN
14	-		-	-		-
15	-		-	-		-
16	-		-	-		-
17	-		-	-		-
18	-		-	-		-
19	-		-	-		-
20	-		-	-		-
21	7/178:1	Front impact sensor, right	WH-GN	4/9C2:25	Supplemental restraint system module (SRS)	WH-GN
22	7/178:2	Front impact sensor, right	YE-RD	4/9C2:24	Supplemental restraint system module (SRS)	YE-RD
23	7/179:1	Front impact sensor, left	WH-BU	4/9C2:50	Supplemental restraint system module (SRS)	WH-BU
24	7/179:2	Front impact sensor, left	GY-BN	4/9C2:49	Supplemental restraint system module (SRS)	GY-BN
25	11B/20:2	Fuse, Distribution box in engine compartment	VT-BN	4/9C2:42	Supplemental restraint system module (SRS)	VT-BN
26	-		-	-		-

Connector

74/412A

74/412A
22-pin green

No.	Dashboard harness			Roof harness		
1	16/1C2:4	Integrated Audio Module (IAM)	WH	74/412B:10	Connector	-
2	73/4010	Branching point	BN-VT	74/412B:9	Connector	-
3	4/56C4:19	Central Electronic Module (CEM)	RD-BN	74/412B:8	Connector	-
4	16/60C1:14	Phone Module (PHM)	-	74/412B:4	Connector	-
5	16/60C1:3	Phone Module (PHM)	BU-GY	74/412B:5	Connector	-
6	4/9C2:45	Supplemental restraint system module (SRS)	GN-WH	74/412B:5	Connector	-
7	-		-	-		-
8	16/1C2:5	Integrated Audio Module (IAM)	-	74/412B:3	Connector	-
9	-		-	-		-
10	4/9C2:22	Supplemental restraint system module (SRS)	GY-BU	74/412B:1	Connector	-
11	16/60C1:15	Phone Module (PHM)	WH	74/412B:11	Connector	-
12	-		-	-		-
13	16/60C1:2	Phone Module (PHM)	GY-VT	74/412B:13	Connector	-
14	16/60C1:1	Phone Module (PHM)	BN-GN	74/412B:14	Connector	-
15	16/60C1:4	Phone Module (PHM)	YE-VT	74/412B:15	Connector	-
16	16/60C1:13	Phone Module (PHM)	VT	74/412B:16	Connector	-
17	74/411:5	Connector	GY-BU	74/412B:16 74/412B:17	Connector Connector	-
18	74/411:4	Connector	BN-BU	74/412B:15 74/412B:18	Connector Connector	-
19	4/56C3:6	Central Electronic Module (CEM)	BU-BK	74/412B:14	Connector	-
20	4/56C3:7	Central Electronic Module (CEM)	GN-BK	74/412B:13	Connector	-
21	73/4005	Branching point	BU-BK	74/412B:12	Connector	-
22	73/4006	Branching point	GN-BK	74/412B:11	Connector	-

Connector 74/412B

74/412B
22-pin green

No.	Dashboard harness		Roof harness		
1	74/412A:10 Connector	-	3/117C1:2 16/98C1:2	Switch unit, ceiling light Microphone	GY-BU WH
2	-	-	-	-	-
3	74/412A:8 Connector	-	16/98:2	Microphone	-
4	74/412A:4 Connector	-	3/267:2	Switch unit, telematics	-
5	74/412A:5 Connector 74/412A:6 Connector	-	3/117C1:3 3/267:3	Switch unit, ceiling light Switch unit, telematics	GN-WH BU-GY
6	-	-	-	-	-
7	-	-	-	-	-
8	74/412A:3 Connector	-	4/119.2:1 16/98:2	Remote Keyless Entry (TRX) Microphone	RD-BN SCREN
9	74/412A:2 Connector	-	73/4047	Branching point	BN-VT
10	74/412A:1 Connector	-	16/98:1	Microphone	WH
11	74/412A:11 Connector 74/412A:22 Connector	-	3/267:1 73/5098 73/5155	Switch unit, telematics Branching point Branching point	WH BU-BK GN-BK
12	74/412A:21 Connector	-	73/5097 73/5154	Branching point Branching point	GN-BK BU-BK
13	74/412A:13 Connector 74/412A:20 Connector	-	3/267:6 73/5098	Switch unit, telematics Branching point	GY-VT GN-BK
14	74/412A:14 Connector 74/412A:19 Connector	-	3/267:5 73/5097	Switch unit, telematics Branching point	BN-GN BU-BK
15	74/412A:15 Connector 74/412A:18 Connector	-	3/267:4 4/80C1:10	Switch unit, telematics Forward Sensing Module (FSM)	YE-VT BN-BU
16	74/412A:16 Connector 74/412A:17 Connector	-	3/267:7 4/80C3:9	Switch unit, telematics Forward Sensing Module (FSM)	VT GY-BN
17	74/412A:17 Connector	-	4/80C1:9	Forward Sensing Module (FSM)	GY-BU
18	74/412A:18 Connector	-	4/80C1:10	Forward Sensing Module (FSM)	BN-BU
19	-	-	-	-	-
20	-	-	-	-	-
21	-	-	-	-	-
22	-	-	-	-	-

Connector 74/413 - 74/417

74/413 6-pin green

No.	Dashboard harness			Harness Start Control Module (SCU)		
1	4/56C3:74	Central Electronic Module (CEM)	RD-VT	3/132:1	Start Control Module (SCU)	RD-VT
2	73/4016	Branching point	BK	3/132:2	Start Control Module (SCU)	BK
3	4/56C3:47	Central Electronic Module (CEM)	GY	3/132:3	Start Control Module (SCU)	GY
4	-		-	-		-
5	4/56C3:3	Central Electronic Module (CEM)	BU	3/132:5	Start Control Module (SCU)	BU-WH
6	-		-	-		-

74/414 10-pin black

No.	Dashboard harness			Roof harness		
1	74/409:18	Connector	BU-GY	4/33:7 10/22C1:5 73/4031	Sunroof control module Ceiling light Branching point	BU-GY
2	4/56C3:75 73/4012	Central Electronic Module (CEM) Branching point	RD-BN BK-WH	4/33:1 73/4014	Sunroof control module Branching point	RD-BN BK-WH
3	-		-	-		-
4	73/4059	Branching point	BU-BK	4/80C1:7	Forward Sensing Module (FSM)	BU-BK
5	4/56C3:5	Central Electronic Module (CEM)	GY-OG	73/5189 74/901:5	Branching point Connector	GY-OG
6	27/2:2	Indicator, visual collision warning	GN-BN	4/80C1:6	Forward Sensing Module (FSM)	GN-BN
7	4/56C3:63	Central Electronic Module (CEM)	GY-VT	4/80C1:8	Forward Sensing Module (FSM)	GY-VT
8	27/2:4	Indicator, visual collision warning	VT	4/80C1:13	Forward Sensing Module (FSM)	VT
9	73/4012	Branching point	BK-WH	73/4013 73/4014	Branching point Branching point	BK-WH
10	-		-	-		-

74/417 7-pin green

No.	Dashboard harness			Climate control system harness		
1	74/409:18	Connector	BU-GY	3/112	Climate control system	RD
2	73/4010	Branching point	BN-VT	3/112	Climate control system	YE
3	74/401:1 74/409:15	Connector Connector	WH-GN	3/112	Climate control system	GN
4	73/4012	Branching point	BK-WH	3/112	Climate control system	BU
5	74/401:4	Connector	BN	3/112	Climate control system	PK
6	74/401:3	Connector	YE-VT	3/112	Climate control system	BN
7	74/401:5	Connector	BU-GN	3/112	Climate control system	GN

Connector 74/418 - 74/421

74/418 6-pin gray

No.	Harness FLC			FLC Adapter harness		
1	27/5C1:1	Forward looking camera	WH	4/80C2:1	Forward Sensing Module (FSM)	WH
2	27/5C1:2	Forward looking camera	BN	4/80C2:2	Forward Sensing Module (FSM)	BN
3	27/5C1:3	Forward looking camera	GN	4/80C2:3	Forward Sensing Module (FSM)	GN
4	27/5C1:4	Forward looking camera	VT	4/80C2:4	Forward Sensing Module (FSM)	VT
5	27/5C1:5	Forward looking camera	GY	4/80C2:5	Forward Sensing Module (FSM)	GY
6	27/5C1:6	Forward looking camera	YE	4/80C2:6	Forward Sensing Module (FSM)	YE
S	27/5C1:7S	Forward looking camera	-	4/80C2:7S	Forward Sensing Module (FSM)	-

74/419 2-pin blue

No.	Dashboard harness			Infotainment harness		
1	16/1C8:1	Integrated Audio Module (IAM)	WH	16/47C1:1	Antenna GSM/GPS/RDAR	WH
1S	16/1C8:1	Integrated Audio Module (IAM)	-	16/47C1:1S	Antenna GSM/GPS/RDAR	-

74/420 5-pin gray

No.	Dashboard harness			Tunnel harness		
1	16/1C5:1	Integrated Audio Module (IAM)	RD	17/42C1:1	USB-port	RD
2	16/1C5:2	Integrated Audio Module (IAM)	BN	17/42C1:2	USB-port	BN
3	16/1C5:3	Integrated Audio Module (IAM)	VT	17/42C1:3	USB-port	VT
4	16/1C5:4	Integrated Audio Module (IAM)	BK	17/42C1:4	USB-port	BK
5	16/1C5:S	Integrated Audio Module (IAM)	-	17/42C1:5S	USB-port	-

74/421 2-pin gray

No.	Dashboard harness			Infotainment harness		
1	3/281C4:1	Infotainment Control Module (ICM)	BK	16/36C2:4	TV receiver	BK
1S	3/281C4:1S	Infotainment Control Module (ICM)	-	16/36C2:5	TV receiver	-

Connector

74/428 - 74/501:1-10

74/428

3-pin blue

No.	Dashboard harness		Harness passenger seat	
1	16/109C6:1 DVD player/control module	BN	16/164C1:1 Screen, LH head restraint	WH
2	16/109C6:2 DVD player/control module	VT	16/164C1:2 Screen, LH head restraint	BU
3S	16/109C6:S DVD player/control module	-	16/164C1:S Screen, LH head restraint	-

74/429

3-pin blue

No.	Dashboard harness		Harness drivers seat	
1	16/109C7:1 DVD player/control module	BN	16/165C2:1 Screen, RH head restraint	WH
2	16/109C7:2 DVD player/control module	VT	16/165C2:2 Screen, RH head restraint	BU
3S	16/109C7:S DVD player/control module	-	16/165C2:S Screen, RH head restraint	-

74/430

3-pin blue

No.	Dashboard harness		Infotainment harness	
1	16/109C5:1 DVD player/control module	BN	16/36C5:1 Screen, RH head restraint	BN
2	16/109C5:2 DVD player/control module	VT	16/36C5:2 Screen, RH head restraint	VT
3S	16/109C5:3S DVD player/control module	-	16/36C5:3S Screen, RH head restraint	-

74/501

22-pin gray

No.	Floor harness		Tunnel harness	
1	-	-	-	-
2	-	-	-	-
3	-	-	-	-
4	-	-	-	-
5	-	-	-	-
6	-	-	-	-
7	-	-	-	-
8	-	-	-	-
9	16/135:2 Antenna, door lock, passenger compartment 3	BU-WH	4/93C2:17 Keyless vehicle module (KVM)	BU-WH
10	16/134:1 Antenna, door lock, passenger compartment 2	YE-OG	4/93C1:16 Keyless vehicle module (KVM)	YE-OG
continues				

Connector

74/501:11-22 - 74/502

74/501 22-pin gray

No.	Floor harness			Tunnel harness		
11	-	-	-	-	-	-
12	-	-	-	-	-	-
13	-	-	-	-	-	-
14	-	-	-	-	-	-
15	-	-	-	-	-	-
16	-	-	-	-	-	-
17	-	-	-	-	-	-
18	3/65:2	Switch, heated rear seat	BN-VT	73/5021	Branching point	BN-VT
19	16/135:1	Antenna, door lock, passenger compartment 3	GY-VT	4/93C2:14	Keyless vehicle module (KVM)	GY-VT
20	16/134:2	Antenna, door lock, passenger compartment 2	GN-RD	4/93C1:4	Keyless vehicle module (KVM)	GN-RD
21	9/1:2	Outlet 12V front	GN-OG	11C/22:2	Fuse in distribution box passenger compartment	GN-OG
22	73/5023	Branching point	BK-GN	73/5026	Branching point	BK-VT

74/502 2-pin gray

No.	Floor harness			Tunnel harness		
1	11C/22:2	Fuse in distribution box passenger compartment	GN-OG	9/1:2	Outlet 12V front	GN-OG
2	73/5035	Branching point, LHD	BK-VT	73/5026	Branching point	BK-VT
	73/5023	Branching point, RHD	BK-GN			

Connector

74/503

74/503
22-pin gray

No.	Infotainment harness		Tunnel harness		
1	16/105C5:16 Audio module (AUD)	WH-OG	16/181:1	Rear headphone sockets	WH-OG
2	16/105C5:15 Audio module (AUD)	WH	16/181:2	Rear headphone sockets	WH
3	16/105C5:17 Audio module (AUD)	GN-VT	16/181:3	Rear headphone sockets	GN-VT
4	-	-	-	-	-
5	16/105C5:1 Audio module (AUD)	BU-OG	16/181:5	Rear headphone sockets	BU-OG
6	16/105C5:13 Audio module (AUD)	GY-BN	16/181:6	Rear headphone sockets	GY-BN
7	16/105C5:2 Audio module (AUD)	YE-GN	16/181:7	Rear headphone sockets	YE-GN
8	16/105C5:3 Audio module (AUD)	BU	16/181:9	Rear headphone sockets	BU
9	16/105C5:14 Audio module (AUD)	YE-VT	16/181:10	Rear headphone sockets	YE-VT
10	16/105C5:4 Audio module (AUD)	YE	16/181:11	Rear headphone sockets	YE
11	-	-	-	-	-
12	73/5086 Branching point	BK	74/403:10	Connector	BK
13	-	-	-	-	-
14	-	-	-	-	-
15	4/84C1:3 Suspension Module (SUM)	YE-BK	3/225:5	Switch unit, Continuously Controlled Damping (CCD)	YE-BK
16	4/84C1:21 Suspension Module (SUM)	VT-OG	3/225:6	Switch unit, Continuously Controlled Damping (CCD)	VT-OG
17	4/84C1:24 Suspension Module (SUM)	YE-RD	3/225:1	Switch unit, Continuously Controlled Damping (CCD)	YE-RD
18	4/84C1:26 Suspension Module (SUM)	BU	3/225:2	Switch unit, Continuously Controlled Damping (CCD)	BU
19	4/84C1:11 Suspension Module (SUM)	GN-BK	3/225:3	Switch unit, Continuously Controlled Damping (CCD)	GN-BK
20	4/84C1:29 Suspension Module (SUM)	GY-OG	3/225:4	Switch unit, Continuously Controlled Damping (CCD)	GY-OG
21	-	-	-	-	-
22	-	-	-	-	-

Connector

74/504:1-25

74/504
57-pin natural

No.	Engine compartment harness			Floor harness		
1	74/301:6	Connector	WH	74/507:17	Connector	WH
2	74/301:7	Connector	BK-WH	74/507:18	Connector	BK-WH
3	-		-	-		-
4	-		-	-		-
5	4/16C1:43	Brake Control Module (BCM)	YE-BK	74/512:5	Connector	YE-BK
6	4/16C1:42	Brake Control Module (BCM)	BU-RD	74/512:6	Connector	BU-RD
7	4/16C1:19	Brake Control Module (BCM)	GN-OG	7/164:2	Body Sensor Cluster Stability Sensor (BSC)	GN-OG
8	4/16C1:18	Brake Control Module (BCM)	BU-WH	7/164:3	Body Sensor Cluster Stability Sensor (BSC)	BU-WH
9	-		-	-		-
10	-		-	-		-
11	4/16C1:36	Brake Control Module (BCM)	BU-OG	74/511:7	Connector	BU-OG
12	4/16C1:37	Brake Control Module (BCM)	GN-RD	74/511:6	Connector	GN-RD
13	-		-	-		-
14	2/193:1	Relay, comfort functions	VT-GN	4/56C1:9	Central Electronic Module (CEM)	VT-GN
15	-		-	-		-
16	-		-	-		-
17	74/301:19	Connector	BU-WH	7/51:5	Accelerator pedal sensor	BU-WH
18	74/301:29	Connector	YE-OG	74/511:17	Connector	YE-OG
19	74/301:27	Connector	RD	4/56C2:17	Central Electronic Module (CEM)	RD
20	-		-	-		-
21	74/301:17	Connector	BU	74/512:7	Connector	BU
21	-		-	-		-
22	-		-	-		-
23	-		-	-		-
24	-		-	-		-
25	-		-	-		-
continues						

Connector

74/504:26-48

74/504
57-pin natural

No.	Engine compartment harness		Floor harness	
26	-	-	-	-
27	-	-	-	-
28	-	-	-	-
29	-	-	-	-
30	-	-	-	-
31	-	-	-	-
32	-	-	-	-
33	-	-	-	-
34	-	-	-	-
35	-	-	-	-
36	-	-	-	-
37	74/301:33 Connector	VT-OG	74/512:2 Connector	VT-OG
38	74/512:3 Connector	GN-OG	74/301:24 Connector	GN-OG
39	74/301:31 Connector	BU-GY	74/512:4 Connector	BU-GY
40	-	-	-	-
41	9/30:7 Auxiliary heater	YE-RD	74/512:14 Connector	YE-RD
42	74/301:20 Connector, Manual	GY-BN	4/56C2:41 Central Electronic Module (CEM) 4/93C5:3 Keyless Vehicle Module (KVM)	GY-BN
43	-	-	-	-
44	73/3021 Branching point	BU-BK	73/5015 Branching point 74/511:3 Connector	BU-BK
45	73/3022 Branching point	GN-BK	73/5016 Branching point 74/511:4 Connector	GN-BK
46	-	-	-	-
47	-	-	-	-
48	-	-	-	-
continues				

Connector

74/504:49-57 - 74/504B

74/504

57-pin natural

No.	Engine compartment harness		Floor harness		
49	-		-	-	
50	4/16C1:22	Brake Control Module (BCM)	VT-BN	7/164:4	Body Sensor Cluster Stability Sensor (BSC)
51	4/16C1:29	Brake Control Module (BCM)	GN-BU	7/164:1	Body Sensor Cluster Stability Sensor (BSC)
52	-		-	-	
53	-		-	-	
54	-		-	-	
55	-		-	-	
56	73/3019 4/56C1:30	Branching point Central Electronic Module (CEM)	GY-OG	73/5005 73/5009	Branching point Branching point
57	73/3020 4/56C1:31	Branching point Central Electronic Module (CEM)	VT-OG	73/5006 73/5010	Branching point Branching point

74/504B

2-pin red

No.	Engine compartment harness			Floor harness		
1	-		-	-		-
2	11A/3:2	Fuse, Distribution box in engine compartment, without Start/Stop	RD-GN	73/5075	Branching point	RD-GN

Connector

74/507:1-21

74/507
26-pin black

No.	Harness front door, left			Floor harness		
1	3/126C2:3 3/127C2:3	Driver Door Module (DDM) Passenger Door Module (PDM)	GY-OG	73/5005	Branching point	GY-OG
2	3/126C2:15 3/127C2:15	Driver Door Module (DDM) Passenger Door Module (PDM)	VT-OG	73/5006	Branching point	VT-OG
3	6/36:4	Lock motor, central locking, LH front door	GN-VT	4/56C2:11	Central Electronic Module (CEM)	GN-VT
4	3/127C1:20 73/5019	Passenger Door Module (PDM), RHD Branching point, LHD	GN-WH	74/509:7	Connector	GN-WH
5	-		-	-		-
6	-		-	-		-
7	3/176:1	Switch, driver's door power window, LHD	BU-WH	73/5044	Branching point, LHD	BU-WH
8	-		-	-		-
9	-		-	-		-
10	-		-	-		-
11	3/273:1	Lock contact, LH front door	BU-GN	4/93C5:19	Keyless Vehicle Module (KVM)	BU-GN
12	3/273:3	Lock contact, LH front door	YE-VT	4/93C5:21	Keyless Vehicle Module (KVM)	YE-VT
13	3/74:4 6/36:4	Left-hand front door lock unit, LHD Lock motor, central locking, LH front door, RHD	GN-OG	4/93C4:9	Keyless Vehicle Module (KVM)	GN-OG
14	3/74:1 6/36:1	Left-hand front door lock unit, LHD Lock motor, central locking, LH front door, RHD	GY	4/93C2:4	Keyless Vehicle Module (KVM)	GY
15	3/74:2 6/36:2	Left-hand front door lock unit, LHD Lock motor, central locking, LH front door, RHD	VT-BK	4/93C4:1	Keyless Vehicle Module (KVM)	VT-BK
16	-		-	-		-
17	6/62:2	Power door mirror, left	WH	74/504:1	Connector	WH
18	6/62:3	Power door mirror, left	BK-WH	74/504:2	Connector	BK-WH
19	-		-	-		-
20	3/127C1:13 73/5037 73/5024	Passenger Door Module (PDM), RHD Branching point, LHD Branching point, RHD	BK-VT	73/5035	Branching point	BK-VT
21	3/126C1:2 3/127C1:2	Driver Door Module (DDM), LHD Passenger Door Module (PDM), RHD	VT-RD RD	11C/8:2 11C/9:2	Fuses in distribution box passenger compartment, LHD Fuses in distribution box passenger compartment, RHD	VT-RD RD
continues						

Connectors

74/507:22-26 - 74/508:1-19

74/507

26-pin black

No.	Harness front door, left			Floor harness		
22	16/4.2:1 73/5078	Left-hand front door speaker Branching point	GN-BK	74/407:9	Connector	GN-BK
23	16/4.2:2 73/5079	Left-hand front door speaker Branching point	GY-BK	74/407:1	Connector	GY-BK
24	-	-	-	-	-	-
25	7/208:2	Pressure sensor front door left	VT-OG	4/9C1:58	Supplemental restraint system module (SRS)	VT-OG
26	7/208:1	Pressure sensor front door left	YE-RD	4/9C1:57	Supplemental restraint system module (SRS)	YE-RD

74/508

26-pin black

No.	Harness front door, right			Floor harness		
1	3/126C2:3 3/127C2:3	Driver Door Module (DDM) Passenger Door Module (PDM)	GY-OG	73/5009	Branching point	GY-OG
2	3/126C2:15 3/127C2:15	Driver Door Module (DDM) Passenger Door Module (PDM)	VT-OG	73/5010	Branching point	VT-OG
3	6/55:4	Lock motor, central locking, RH front door	BK-GN	4/56C2:29	Central Electronic Module (CEM)	BK-GN
4	3/127C1:20 73/5019	Passenger Door Module (PDM), LHD Branching point, RHD	GN-WH	74/510:7	Connector	GN-WH
5	-	-	-	-	-	-
6	-	-	-	-	-	-
7	3/176:1	Switch, driver's door power win- dow, RHD	BU-WH	73/5044	Branching point, RHD	BU-WH
8	-	-	-	-	-	-
9	-	-	-	-	-	-
10	-	-	-	-	-	-
11	3/274:1	Lock contact, RH front door	GN-RD	4/93C5:2	Keyless Vehicle Module (KVM)	GN-RD
12	3/274:3	Lock contact, RH front door	BU-GY	4/93C5:22	Keyless Vehicle Module (KVM)	BU-GY
13	3/75:2	Right-hand front door lock unit	GY-BN	4/93C4:22	Keyless Vehicle Module (KVM)	GY-BN
14	3/75:4	Right-hand front door lock unit	BU-RD	4/93C2:5	Keyless Vehicle Module (KVM)	BU-RD
15	3/75:3	Right-hand front door lock unit	GN-VT	4/93C4:2	Keyless Vehicle Module (KVM)	GN-VT
16	-	-	-	-	-	-
17	-	-	-	-	-	-
18	-	-	-	-	-	-
19	-	-	-	-	-	-
continues						

Connectors

74/508:20-26 - 74/509

74/508

26-pin black

No.	Harness front door, right			Floor harness		
20	3/127C1:13 73/5024 73/5037	Passenger Door Module (PDM), LHD Branching point, LHD Branching point, RHD	BK-GN	73/5023	Branching point	BK-GN
21	3/126C1:2 3/127C1:2	Driver Door Module (DDM), RHD Passenger Door Module (PDM), LHD	VT-RD RD	11C/8:2 11C/9:2	Fuses in distribution box passenger compartment Fuses in distribution box passenger compartment	VT-RD RD
22	16/3.2:1 73/5076	Right-hand front door speaker Branching point	VT-BK	74/407:11	Connector	VT-BK
23	16/3.2:2 73/5077	Right-hand front door speaker Branching point	YE-BK	74/407:3	Connector	YE-BK
24	-		-	-		-
25	7/209:1	Pressure sensor front door right	YE-RD	4/9C1:56	Supplemental restraint system module (SRS)	YE-RD
26	7/209:2	Pressure sensor front door right	VT-OG	4/9C1:55	Supplemental restraint system module (SRS)	VT-OG

74/509

16-pin black

No.	Harness rear door left			Floor harness		
1	3/128:2	Left rear door module (LDM)	BU-RD	11C/11:2	Fuse in distribution box passenger compartment	BU-RD
2	3/128:13 73/5036	Left rear door module (LDM) Branching point	BK-VT	73/5035	Branching point	BK-VT
3	16/6:1	Left-hand rear door speaker	GN-RD	74/407:12	Connector	GN-RD
4	16/6:2	Left-hand rear door speaker	GY-RD	74/407:4	Connector	GY-RD
5	6/57:4	Lock motor, central locking, LH rear door	GN	4/56C2:10	Central Electronic Module (CEM)	GN
6	-		-	-		-
7	3/128:20	Left rear door module (LDM)	GN-WH	74/507:4	Connector	GN-WH
8	3/275:5	Lock contact, LH rear door	YE	4/93C1:15	Keyless Vehicle Module (KVM)	YE
9	3/275:4	Lock contact, LH rear door	GN-BN	4/93C1:3	Keyless Vehicle Module (KVM)	GN-BN
10	3/76:2	Lock unit, rear left door	BU-BN	4/93C3:2	Keyless Vehicle Module (KVM)	BU-BN
11	3/76:1	Lock unit, rear left door	YE-BU	4/93C3:2	Keyless Vehicle Module (KVM)	YE-BU
12	3/76:4	Lock unit, rear left door	VT-OG	4/93C5:15	Keyless Vehicle Module (KVM)	VT-OG
13	3/275:1	Lock contact, LH rear door	GY-OG	4/93C5:17	Keyless Vehicle Module (KVM)	GY-OG
14	3/275:3	Lock contact, LH rear door	GN-OG	4/93C5:4	Keyless Vehicle Module (KVM)	GN-OG
15	-		-	-		-
16	-		-	-		-

Connectors

74/510 - 74/511:1-11

74/510

16-pin black

No.	Harness rear door right			Floor harness		
1	3/129:2	Right rear door module (RDM)	YE-RD	11C/10:2	Fuse in distribution box passenger compartment	YE-RD
2	3/129:13 73/5025	Right rear door module (RDM) Branching point	BK-GN	73/5023	Branching point	BK-GN
3	16/5:1	Right-hand rear door speaker	VT-RD	74/407:13	Connector	VT-RD
4	16/5:2	Right-hand rear door speaker	YE-RD	74/407:5	Connector	YE-RD
5	6/56:4	Lock motor, central locking, RH rear door	YE	4/56C2:28	Central Electronic Module (CEM)	YE
6	-		-	-		-
7	3/129:20	Right rear door module (RDM)	GN-WH	74/508:4	Connector	GN-WH
8	3/276:5	Lock contact, RH rear door	BU-OG	4/93C1:14	Keyless Vehicle Module (KVM)	BU-OG
9	3/276:4	Lock contact, RH rear door	VT-GY	4/93C1:23	Keyless Vehicle Module (KVM)	VT-GY
10	3/77:3	Lock unit, rear right door	GY-BK	4/93C3:1	Keyless Vehicle Module (KVM)	GY-BK
11	3/77:4	Lock unit, rear right door	GN	4/93C2:3	Keyless Vehicle Module (KVM)	GN
12	3/77:2	Lock unit, rear right door	YE-RD	4/93C4:21	Keyless Vehicle Module (KVM)	YE-RD
13	3/276:1	Lock contact, RH rear door	VT-RD	4/93C5:5	Keyless Vehicle Module (KVM)	VT-RD
14	3/276:3	Lock contact, RH rear door	GY-RD	4/93C5:20	Keyless Vehicle Module (KVM)	GY-RD
15	-		-	-		-
16	-		-	-		-

74/511

22-pin gray

No.	Floor harness			Left rear axle harness		
1	11C/29:2	Fuse in distribution box passenger compartment	WH-VT	74/520:6	Connector	GN-RD
2	-		-	-		-
3	73/5015 74/504:44	Branching point Connector	BU-BK	74/520:1	Connector	BU-BK
4	73/5016 74/504:45	Branching point Connector	GN-BK	74/520:2	Connector	GN-BK
5	-		-	-		-
6	74/504:12	Connector	GN-RD	7/56:2	Sensor ABS, rear left	BN
7	74/504:11	Connector	BU-OG	7/56:1	Sensor ABS, rear left	WH
8	-		-	-		-
9	-		-	-		-
10	-		-	-		-
11	-		-	-		-
continues						

Connectors

74/511:12-22 - 74/512

74/511 22-pin gray

No.	Floor harness			Left rear axle harness		
12	74/518:6	Connector	GN-BU	8/22:1	Shock absorber, Four-C, rear left	GN-BU
13	74/518:7	Connector	YE-BU	8/22:2	Shock absorber, Four-C, rear left	YE-BU
14	74/518:3	Connector	YE-GN	7/120:5	Height sensor, suspension, rear left	YE-GN
15	74/518:4	Connector	GN-BN	7/120:1	Height sensor, suspension, rear left	GN-BN
16	74/518:5	Connector	VT-WH	7/120:4	Height sensor, suspension, rear left	VT-WH
17	74/504:18	Connector	YE-OG	4/83:5	Fuel pump control module	YE-OG
18	4/56C2:51	Central Electronic Module (CEM)	GN-BU	6/33:1	Fuel pump	GN-BU
19	4/56C2:33	Central Electronic Module (CEM)	YE-VT	6/33:2	Fuel pump	YE-VT
20	4/56C2:15	Central Electronic Module (CEM)	GN-OG	6/33:6	Fuel pump	GN-OG
21	-		-	-		-
22	-		-	-		-

74/512 14-pin gray

No.	Floor harness			Harness rear axle right		
1	-		-	-		-
2	74/504:37	Connector	VT-OG	6/67:1	Pump, fuel leakage control	VT-OG
3	74/504:38	Connector	GN-OG	6/67:2	Pump, fuel leakage control	GN-OG
4	74/504:39	Connector	BU-GY	6/67:3	Pump, fuel leakage control	BU-GY
5	74/504:5	Connector	YE-BK	7/57:1	Right-hand rear ABS sensor	WH
6	74/504:6	Connector	BU-RD	7/57:2	Right-hand rear ABS sensor	BN
7	74/504:21	Connector	BU	6/67:4 9/38:1	Pump, fuel leakage control Electrically heated fuel filter	BU
8	31/68	Ground connection	BK-OG	6/35:2 9/38:2	Fuel pump, auxiliary heater Electrically heated fuel filter	BK-OG
9	4/56:36	Central Electronic Module (CEM)	YE-GN	7/121:5	Height sensor, suspension, rear right	YE-GN
10	4/56:53	Central Electronic Module (CEM)	GN-BN	7/121:1	Height sensor, suspension, rear right	GN-BN
11	4/56:35	Central Electronic Module (CEM)	GN-VT	7/121:4	Height sensor, suspension, rear right	GN-VT
12	-		-	-		-
13	-		-	-		-
14	74/504:41	Connector	YE-RD	6/35:1	Fuel pump, auxiliary heater	YE-RD

Connectors

74/513 - 74/515

74/513 5-pin green

No.	Infotainment harness			Harness rear axle right		
1	4/84C1:5	Suspension Module (SUM)	VT-GY	8/23:1	Shock absorber, Four-C, rear right	VT-GY
2	4/84C1:4	Suspension Module (SUM)	BU-BN	8/23:2	Shock absorber, Four-C, rear right	BU-BN
3	73/5066	Branching point	YE-GN	7/121:5	Shock absorber, Four-C, rear right	YE-GN
4	73/5053	Branching point	YE-GN	7/121:1	Shock absorber, Four-C, rear right	GN-BN
5	4/84C1:14	Suspension Module (SUM)	GN-VT	7/121:4	Shock absorber, Four-C, rear right	GN-VT

74/514 4-pin gray

No.	Floor harness			Left rear axle harness		
1	4/115C1:29	Park Brake Module (PBM)	BU-GN	6/146:2	Lock motor, rear left brake disc	BU-GN
2	4/115C1:14	Park Brake Module (PBM)	VT-BK	6/146:1	Lock motor, rear left brake disc	VT-BK
3	4/56C2:76	Central Electronic Module (CEM)	YE-OG	4/83:4 6/33:4	Fuel pump control module Fuel pump	YE-OG
4	31/65	Ground connection	BK-YE	74/520:5	Connector	BK-YE

74/515 7-pin gray

No.	Dashboard harness			Tunnel harness		
1	16/109C2:14	DVD player/control module	GN	16/123C1:3	Auxiliary equipment input (AUX)	GN
2	-		-	-		-
3	-		-	-		-
4	16/109C2:1	DVD player/control module	WH	16/123C1:4	Auxiliary equipment input (AUX)	WH
5	16/109C2:2	DVD player/control module	BN	16/123C1:6	Auxiliary equipment input (AUX)	BN
6	16/109C2:3	DVD player/control module	YE	16/123C1:5	Auxiliary equipment input (AUX)	YE
7	16/109C2:13	DVD player/control module	-	16/123C1:1	Auxiliary equipment input (AUX)	-

Connectors

74/518 - 74/519:1-14

74/518

2-pin gray

No.	Infotainment harness			Floor harness		
1	4/84C1:16	Suspension Module (SUM)	BU-BK	73/5015 74/409:23	Branching point Connector	BU-BK
2	4/84C1:15	Suspension Module (SUM)	GN-BK	73/5016 74/409:22	Branching point Connector	GN-BK
3	73/5052	Branching point	YE-GN	74/511:14	Connector	YE-GN
4	73/5053	Branching point	GN-BN	74/511:15	Connector	GN-BN
5	4/84C1:28	Suspension Module (SUM)	VT-WH	74/511:16	Connector	VT-WH
6	4/84C1:2	Suspension Module (SUM)	GN-BU	74/511:12	Connector	GN-BU
7	4/84C1:1	Suspension Module (SUM)	YE-BU	74/511:13	Connector	YE-BU

74/519

22-pin gray

No.	Infotainment harness			Engine compartment harness		
1	4/84C1:6	Suspension Module (SUM)	BU-BK	8/20:1	Shock absorber, Four-C, front left	BU-BK
2	4/84C1:7	Suspension Module (SUM)	VT-BN	8/20:2	Shock absorber, Four-C, front left	VT-BN
3	4/84C1:9	Suspension Module (SUM)	GY-YE	8/21:1	Shock absorber, Four-C, front right	GY-YE
4	4/84C1:8	Suspension Module (SUM)	BU-OG	8/21:2	Shock absorber, Four-C, front right	BU-OG
5	73/5052	Branching point	YE-GN	7/118:5	Height sensor, suspension, front left	YE-GN
6	4/84C1:12	Suspension Module (SUM)	BU-RD	7/118:4	Height sensor, suspension, front left	BU-RD
7	73/5066	Branching point	YE-GN	73/3077	Branching point	YE-GN
8	4/84C1:27	Suspension Module (SUM)	GY-VT	7/119:4	Height sensor, suspension, front right	GY-VT
9	4/84C1:22	Suspension Module (SUM)	BU-GY	7/88:1	Acceleration sensor, Four-C, front right	BU-GY
10	4/84C1:10	Suspension Module (SUM)	VT-RD	7/87:1	Acceleration sensor, Four-C, front left	VT-RD
11	4/84C1:19	Suspension Module (SUM)	GN-BN	73/3078	Branching point	GN-BN
12	4/86C2:2	Parking Assistance Module (PAM)	VT-GY	74/309:4	Connector	VT-GY
13	4/86C2:5	Parking Assistance Module (PAM)	BU-GN	74/309:5	Connector	BU-GN
14	4/86C2:1	Parking Assistance Module (PAM)	YE-OG	74/309:6	Connector	YE-OG
continues						

Connectors

74/519:15-22 - 74/523

74/519 22-pin gray

No.	Infotainment harness			Engine compartment harness		
15	4/86C2:6	Parking Assistance Module (PAM)	BU-BK	74/309:10	Connector	BU-BK
16	4/86C2:7	Parking Assistance Module (PAM)	BU-GY	74/309:11	Connector	BU-GY
17	4/86C2:8	Parking Assistance Module (PAM)	BU-OG	74/309:12	Connector	BU-OG
18	-		-	-		-
19	-		-	-		-
20	-		-	-		-
21	-		-	-		-
22	-		-	-		-

74/520 6-pin gray

No.	Left rear axle harness			All wheel drive harness		
1	74/511:3	Connector	BU-BK	4/82C1:4	Differential Electronic Module (DEM)	BU-BK
2	74/511:4	Connector	GN-BK	4/82C1:2	Differential Electronic Module (DEM)	GN-BK
3	-		-	-		-
4	-		-	-		-
5	74/514:4	Connector	BK-YE	4/82C1:7	Differential Electronic Module (DEM)	BK-YE
6	74/511:1	Connector	GN-RD	4/82C1:3	Differential Electronic Module (DEM)	GN-RD

74/523 6-pin gray

No.	Harness parking assistance adp.			Harness bumper rear		
1	4/86C3:11	Parking Assistance Module (PAM)	BU-WH	73/5064	Branching point	BU-WH
2	4/86C3:2	Parking Assistance Module (PAM)	YE-GY	7/133:2	Rear parking assistance sensor	YE-GY
3	4/86C3:3	Parking Assistance Module (PAM)	YE-BK	7/132:2	Rear parking assistance sensor	YE-BK
4	4/86C3:4	Parking Assistance Module (PAM)	YE-OG	7/134:2	Rear parking assistance sensor	YE-OG
5	4/86C3:5	Parking Assistance Module (PAM)	YE-GN	7/131:2	Rear parking assistance sensor	YE-GN
6	4/86C3:8	Parking Assistance Module (PAM)	GN-WH	73/5067	Branching point	GN-WH

Connectors

74/524 - 74/532

74/524

2-pin gray

No.	Harness rear axle right			Floor harness		
1	4/115C1:12	Park Brake Module (PBM)	YE-GY	6/147:1	Lock motor, rear right brake disc	YE-GY
2	4/115C1:27	Park Brake Module (PBM)	GN-BN	6/147:2	Lock motor, rear right brake disc	GN-BN

74/529

2-pin black

No.	Infotainment harness			Harness digital radio/SUB		
1	16/105C4:2	Audio module (AUD), LHD	OG	16/145C3:1	Remote Digital Audio Receiver (RDAR)	OG
	16/108C3:2	Multimedia Module (MMM)		16/162C3:1	Digital Audio Broadcast Module (DABM)	
				16/79C2:1	Subwoofer Module (SUB)	
2	74/404:1	Connector	OG	16/79C2:2	Subwoofer Module (SUB)	OG
				16/145C3:2	Remote Digital Audio Receiver (RDAR)	
				16/162C3:2	Digital Audio Broadcast Module (DABM)	

74/531

2-pin gray

No.	Infotainment harness			DAB Adapter harness		
1	16/47C2:1	Antenna GSM/GPS/RDAR	WH	16/162C2:1	Digital Audio Broadcast Module (DABM)	WH
1S	16/47C2:1S	Antenna GSM/GPS/RDAR	-	16/162C2:1S	Digital Audio Broadcast Module (DABM)	-

74/532

2-pin gray

No.	Floor harness			DAB Adapter harness		
1	16/162C2:2	Digital Audio Broadcast Module (DABM)	WH	16/162C2:2	Digital Audio Broadcast Module (DABM)	WH
1S	16/162C2:2S	Digital Audio Broadcast Module (DABM)	-	16/162C2:2S	Digital Audio Broadcast Module (DABM)	-

Connectors

74/534 - 74/543

74/534 4-pin gray

No.	Floor harness			Infotainment harness		
1	73/5117	Branching point	RD	16/105C1:1 Audio module (AUD) 73/5116 Branching point		RD
2	11C/17:2	Fuse in distribution box passenger compartment	RD	16/105C3:16 Audio module (AUD) 73/5031 Branching point 73/5051 Branching point		RD
3	-		-	-		-
4	73/5132	Branching point	BK-GY	16/36C2:2 TV receiver 73/5132 Branching point		BK-GY

74/543 16-pin green

No.	Dashboard harness			Harness drivers seat		
1	16/109C2:17	DVD player/control module	GY	16/164C3:1	Screen, LH head restraint	BU-GY
2	16/109C2:18	DVD player/control module	WH	16/164C3:4	Screen, LH head restraint	BU-GY
3	16/109C2:22	DVD player/control module	BK-WH	16/164C3:2	Screen, LH head restraint	BU-GY
4	-		-	-		-
5	-		-	-		-
6	-		-	-		-
7	73/5126	Branching point	GY-OG	16/164C2:7	Screen, LH head restraint	GY-OG
8	73/5127	Branching point	VT-OG	16/164C2:8	Screen, LH head restraint	VT-OG
9	16/109C1:5	DVD player/control module	BN-YE	16/164C2:9	Screen, LH head restraint	BN
10	-		-	-		-
11	16/109C1:8	DVD player/control module	BK	16/164C2:11	Screen, LH head restraint	BN-BU
12	16/109C1:1	DVD player/control module	RD	16/164C2:12	Screen, LH head restraint	WH-GN
13	-		-	-		-
14	-		-	-		-
15	-		-	-		-
16	-		-	-		-

Connectors

74/545 - 74/601

74/545 16-pin green

No.	Dashboard harness			Harness drivers seat		
1	16/109C2:5	DVD player/control module	YE	16/165C3:4	Screen, RH head restraint	BU-GY
2	16/109C2:6	DVD player/control module	GN	16/165C3:1	Screen, RH head restraint	BU-GY
3	16/109C2:7	DVD player/control module	BK-WH	16/165C3:2	Screen, RH head restraint	BU-GY
4	-		-	-		-
5	-		-	-		-
6	-		-	-		-
7	73/5126	Branching point	GY-OG	16/165C1:7	Screen, RH head restraint	GY-OG
8	73/5127	Branching point	VT-OG	16/165C1:8	Screen, RH head restraint	VT-OG
9	16/109C1:6	DVD player/control module	GN-VT	16/165C1:9	Screen, RH head restraint	BN
10	-		-	-		-
11	16/109C1:8	DVD player/control module	BK	16/165C1:11	Screen, RH head restraint	BN-BU
12	16/109C1:1	DVD player/control module	RD	16/165C1:12	Screen, RH head restraint	WH-GN
13	-		-	-		-
14	-		-	-		-
15	-		-	-		-
16	-		-	-		-

74/601 S80 10-pin gray

No.	Trunk lid harness			Floor harness		
1	10/3:2	License plate lighting	BK	4/56C2:48	Central Electronic Module (CEM)	YE-VT
2	6/8:3	Central locking motor, trunk lid	BK	4/56C2:30	Central Electronic Module (CEM)	YE-OG
3	10/3:3	License plate lighting	BK	4/56C2:24	Central Electronic Module (CEM)	BU-RD
				4/93C5:18	Keyless Vehicle Module (KVM)	
4	73/5038	Branching point	BK	31/65 73/5131	Ground connection Branching point	BK-OG
5	6/8:1	Central locking motor, trunk lid	BK	4/56C2:63	Central Electronic Module (CEM)	YE-VT
6	6/8:4	Central locking motor, trunk lid	BK	10/127:4 10/128:4	Lighting, cargo compartment, left-hand side Lighting, cargo compartment, right-hand side	BK-BU
7	-		-	-		
8	-		-	-		-
9	-		-	-		-
10	-		-	-		-

Connectors

74/602

74/602 V70

14-pin gray

No.	Floor harness			Trunk lid harness		
1	2/82:5	Relay, heated rear window	GY-RD	9/2A:1	Heated rear window	GY-RD
2	4/56C2:9 4/110C2:3	Central Electronic Module (CEM) Trailer Module (TRM)	YE-GY	10/19:2	Auxiliary brake light	BK
3	4/56C2:59	Central Electronic Module (CEM)	GY-BN	73/6002	Branching point	BK
4	4/56C2:73	Central Electronic Module (CEM)	GN-BN	73/6003	Branching point	BK
5	4/56C2:54	Central Electronic Module (CEM)	BN-GN	73/6004	Branching point	BK
6	4/116C2:13 10/25:2	Power Operated Tailgate Module (POT) Ceiling light, cargo compartment	BU-BK	3/78:4 3/291:1 6/8:4	Lock unit, tailgate Tailgate closing switch Central locking motor, trunk lid	BU-BK BK
7	73/5105	Branching point	BK-OG	73/6001	Branching point	BK-OG
8	2/16:3	Relay, rear window wiper	GY-BU	6/32:1	Rear window wiper motor	BK
9	4/56C2:48	Central Electronic Module (CEM)	YE-VT	10/3:1	License plate lighting	YE-VT
10	-	-	-	-	-	-
11	4/56C2:63	Central Electronic Module (CEM)	GY-BN	6/8:6	Central locking motor, trunk lid	BK
12	4/93C5:18 73/5032	Keyless Vehicle Module (KVM) Branching point	GY-YE	3/35:3	Switch, handle, trunk lid/tailgate	GN-YE
13	4/56C2:30 4/116C2:5	Central Electronic Module (CEM) Power Operated Tailgate Module (POT)	YE-OG	3/78:5 6/8:1	Lock unit, tailgate Central locking motor, trunk lid	YE-OG
14	2/16:1	Relay, rear window wiper	VT-GN	6/32:2	Rear window wiper motor	BK

Connectors

74/603

74/603 V70

22-pin gray

No.	Floor harness		Trunk lid harness			
1	-		-	-		
2	-		-	-		
3	-		-	-		
4	4/116C2:11	Power Operated Tailgate Module (POT)	YE-OG	6/8:3	Lock unit, tailgate V70	YE-OG
5	4/116C2:14	Power Operated Tailgate Module (POT)	GN-OG	6/149:1	Tailgate closing motor	GN-OG
6	4/116C2:7	Power Operated Tailgate Module (POT)	GN-BU	6/149:2	Tailgate closing motor	GN-BU
7	4/116C2:12	Power Operated Tailgate Module (POT)	GN	6/149:3	Tailgate closing motor	GN
8	-		-	-		
9	4/116C2:4	Power Operated Tailgate Mod- ule (POT)	GY-BN	3/291:1	Tailgate closing switch	GY-BN
10	73/5044	Branching point	BU-WH	3/291:5	Tailgate closing switch	BU-WH
11	-		-	-		
12	-		-	-		
13	-		-	-		
14	-		-	-		
15	4/93C1:22	Keyless Vehicle Module (KVM)	VT	16/132:2	Antenna door lock trunk lid/tailgate	VT
16	4/93C1:21	Keyless Vehicle Module (KVM)	GN-OG	16/132:1	Antenna door lock trunk lid/tailgate	GN-OG
17	-		-	-		
18	-		-	-		
19	-		-	-		
20	-		-	-		
21	-		-	-		
22	-		-	-		

Connectors

74/901 - 74/1500

74/901 12-pin black

No.	Roof harness			Harness windshield module		
1	4/56C4:10	Central Electronic Module (CEM)	GY-RD	7/149:3	Rain Sensor Module (RSM)	GY-RD
2	-		-	-		-
3	73/5097	Branching point	BU-BK	4/125C1:4	Closing velocity module (CVM)	BU-BK
4	73/5098	Branching point	GN-BK	4/125C1:3	Closing velocity module (CVM)	GN-BK
5	73/5189 74/414:5	Branching point Connector	GY-OG	4/125C1:5	Closing velocity module (CVM)	GY-OG
6	-		-	-		-
7	-		-	-		-
8	4/80C1:15	Forward Sensing Module (FSM)	GY-BK	9/39:1	Heating element camera	GY-BK
9	73/4014	Branching point	BK-WH	4/125C1:7 73/4049	Closing velocity module (CVM) Branching point	BK-WH
10	4/80C1:14	Forward Sensing Module (FSM)	BK	9/39:2	Heating element camera	BK
11	73/4047	Branching point	BN-VT	7/90:2	Moisture sensor	BN-VT
12	-		-	-		-

74/1500 2-pin gray

No.	Harness massage seats			Harness supply refrigeration box		
1	11C/25:2	Fuses in distribution box passenger compartment	RD	2/141:1 74/5000:3	Refrigeration box relay Connector	PK
2	31/TRM	Ground connection, Accessories	BK	2/141:2 17/19:2 31/48 74/5000:2	Refrigeration box relay 12 V outlet, cargo compartment Ground connection Connector	BK-GN

Connectors

74/1501 - 74/1503

74/1501

3-pin gray

No.	Harness supply refrigeration box			Harness refrigeration box		
1	2/141:5	Refrigeration box relay	RD	9/24:1	Refrigeration box	RD
2	9/24:2	Refrigeration box	BK	17/19:2	12 V outlet, cargo compartment	BK-GN
	10/276:2	Lighting center armrest rear 1		2/141:2	Refrigeration box relay	
	10/277:2	Lighting center armrest rear 2		74/1500:2	Connector	
	10/280:2	Lighting cooler compartment left				
	10/281:2	Lighting cooler compartment right				
3	74/1500:1	Connector	PK	10/276:1	Lighting center armrest rear 1	PK
	2/141:1	Refrigeration box relay		10/277:1	Lighting center armrest rear 2	
				10/280:1	Lighting cooler compartment left	
				10/281:1	Lighting cooler compartment right	

74/1502

2-pin green

No.	Harness lighting mug holder			Harness lighting floor		
1	74/403:7	Connector	BU-RD	74/1503:1	Connector	BU-RD
	10/72:1	Front ashtray lighting		10/286:1	Lighting floor driver's side	
	10/161:1	Lighting mug holder		10/287:1	Lighting floor passenger side	
2	73/5026	Branching point	BK-VT	74/1503:2	Connector	BK-VT
	10/72:2	Front ashtray lighting		10/286:2	Lighting floor driver's side	
	10/161:2	Lighting mug holder		10/287:2	Lighting floor passenger side	


74/1503

2-pin green


No.	Harness analog clock			Harness lighting floor		
1	19/4:1	Analog clock	BU-RD	74/1502:1	Connector	BU-RD
				10/286:1	Lighting floor driver's side	
				10/287:1	Lighting floor passenger side	
2	19/4:2	Analog clock	BK-VT	74/1502:2	Connector	BK-VT
	19/4:3	Analog clock		10/286:2	Lighting floor driver's side	
			BK	10/287:2	Lighting floor passenger side	

Branching points 73/1 - 73/3006


73/1

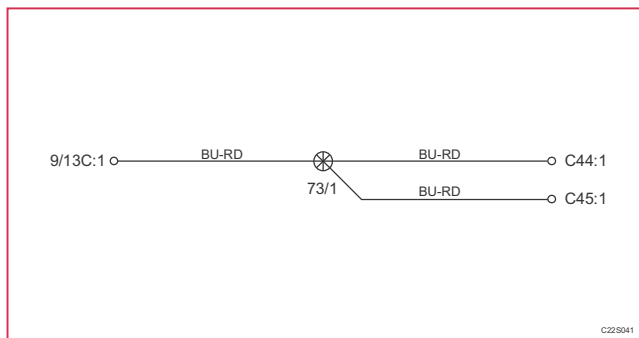


73/3004 5-Cyl. Turbo

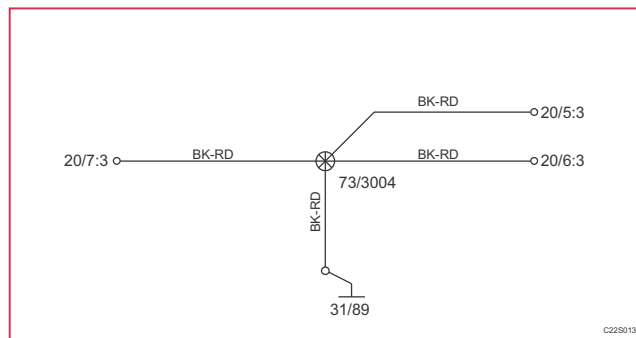


73/2

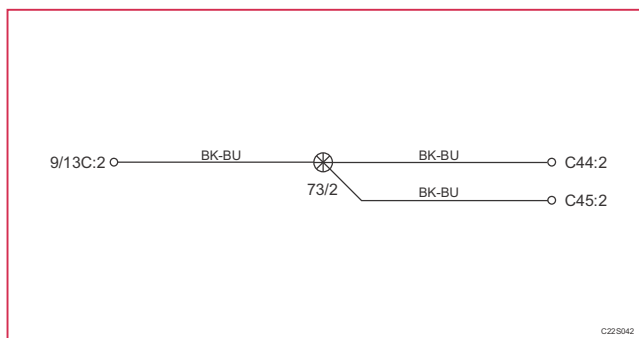


73/3004 6-Cyl. Turbo

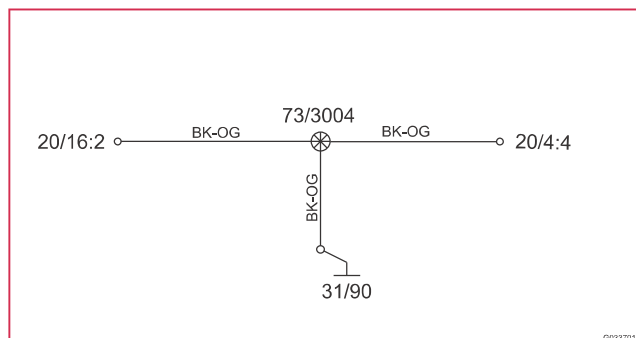


73/3

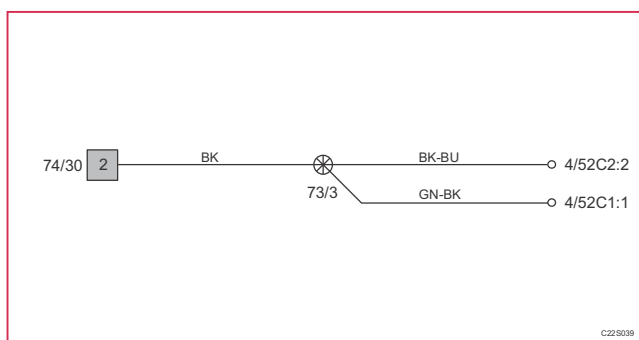


73/3005 4-Cyl. Turbo 1,6L

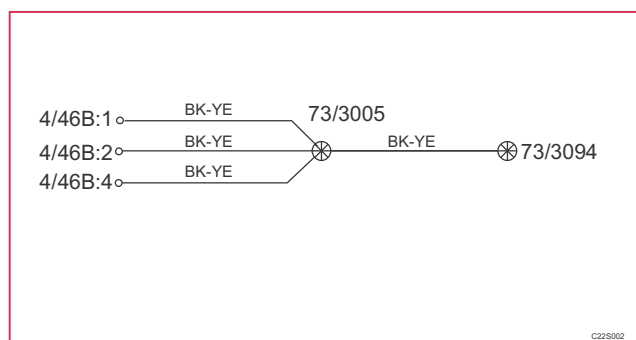


73/6

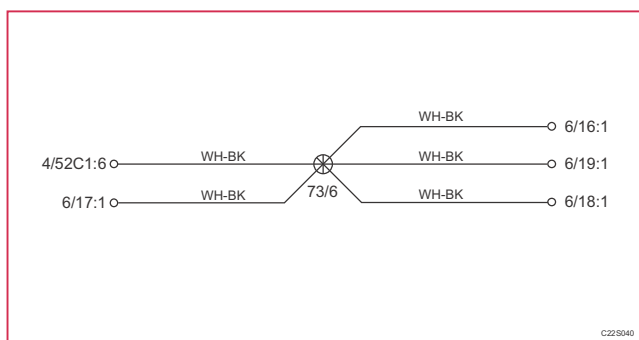


73/3005 4-Cyl. Turbo 2,0L

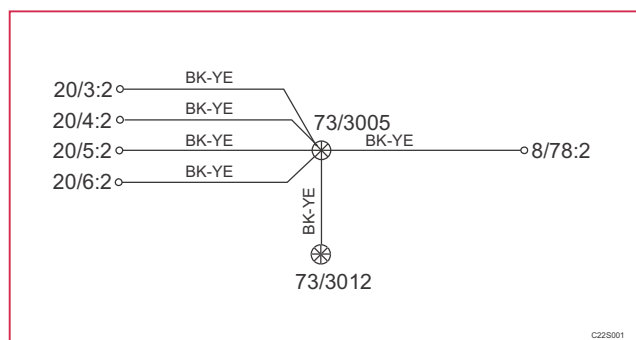

73/3004

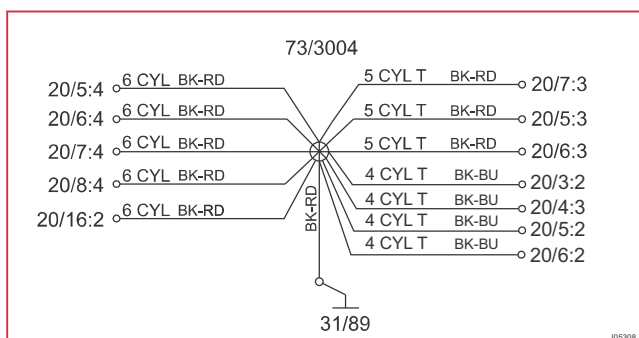


73/3006

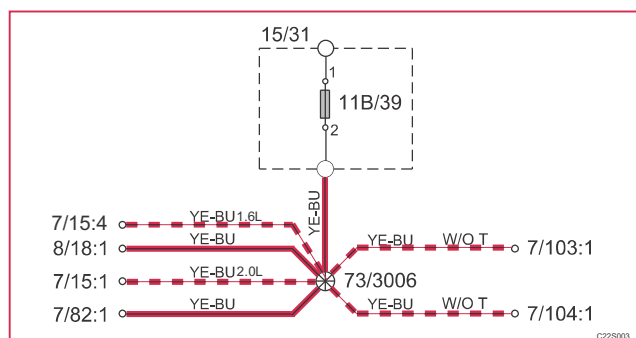


Branching points 73/3009 - 73/3019


73/3009

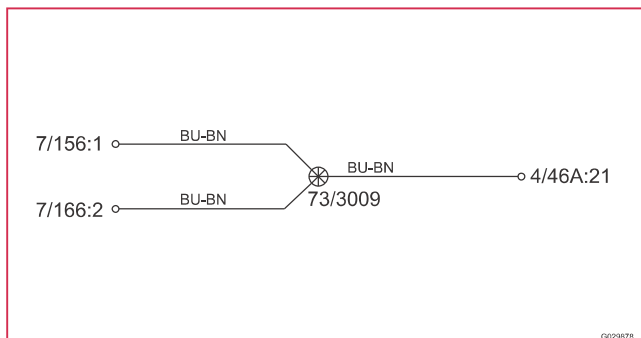


73/3012 5-Cyl. Diesel

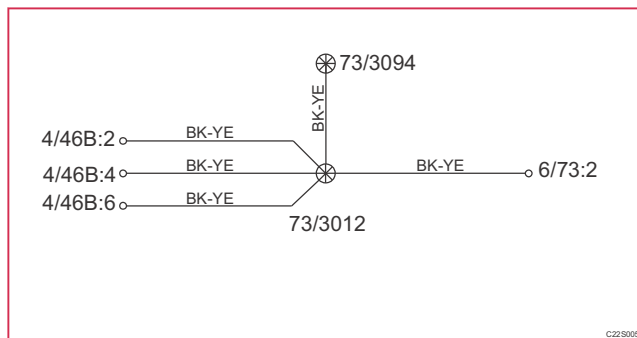


73/3010

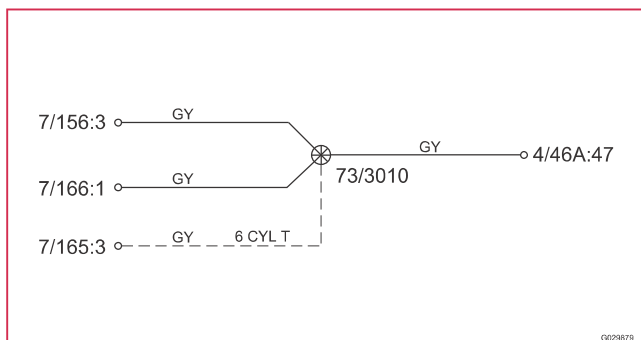


73/3012 6-Cyl.

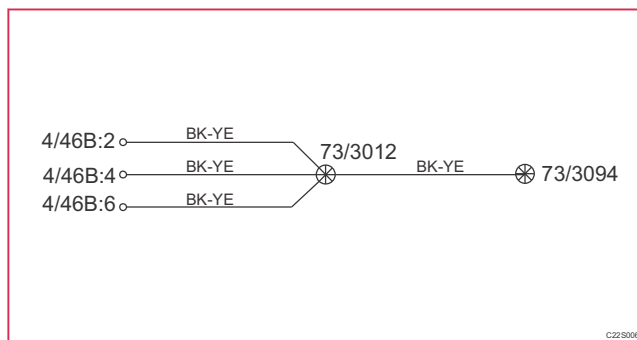


73/3012 4-Cyl. Turbo

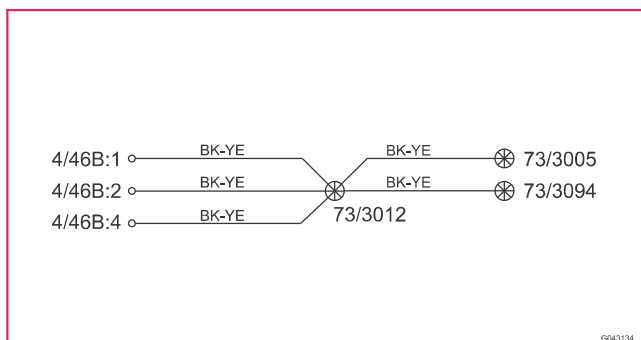


73/3014

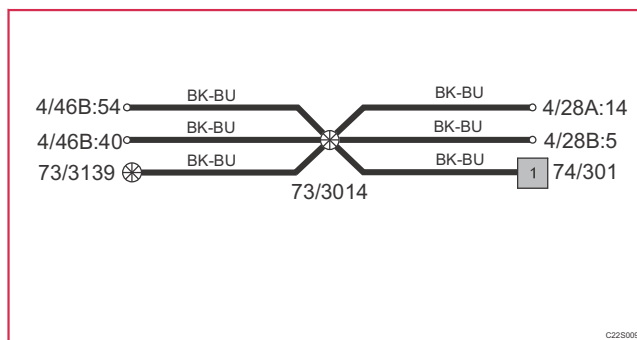


73/3012 4-Cyl. Diesel

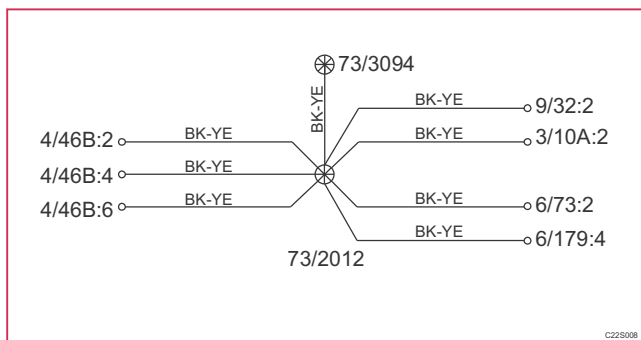


73/3015

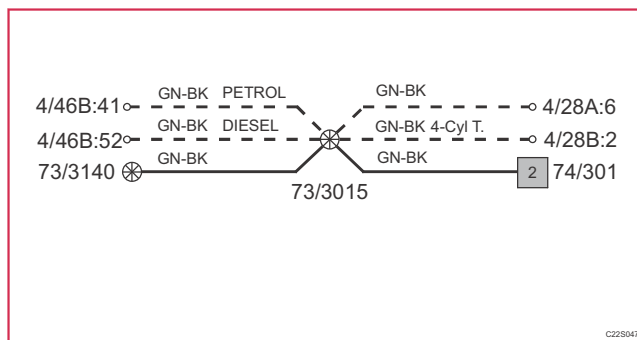

73/3012 5-Cyl. Turbo

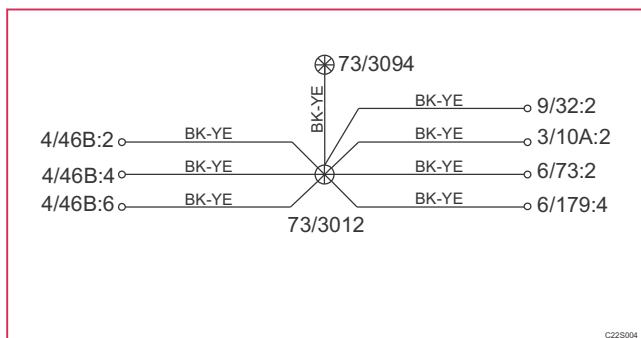


73/3019

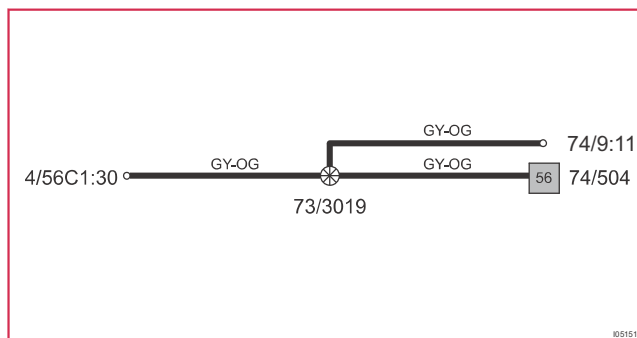


Branching points 73/3020 - 73/3039


73/3020

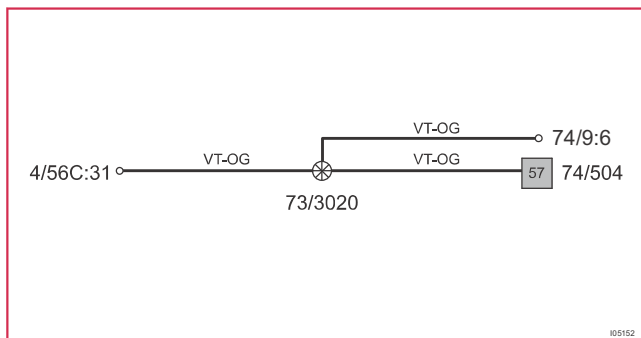


73/3021

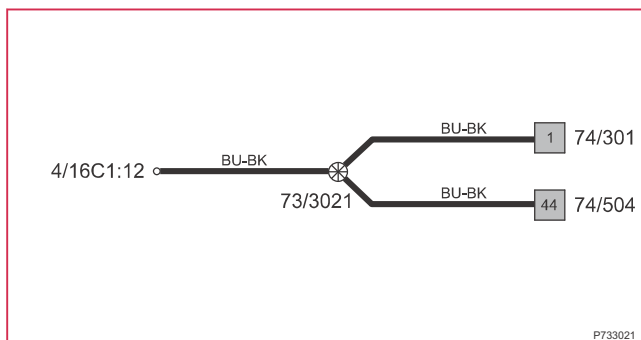


73/3022

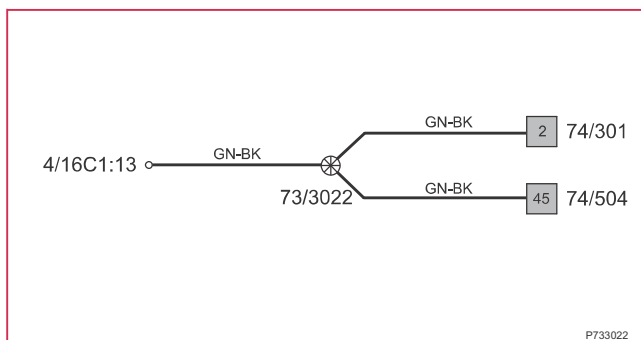


73/3030

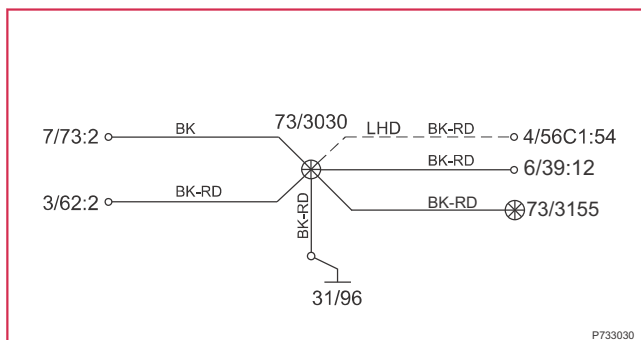


73/3033

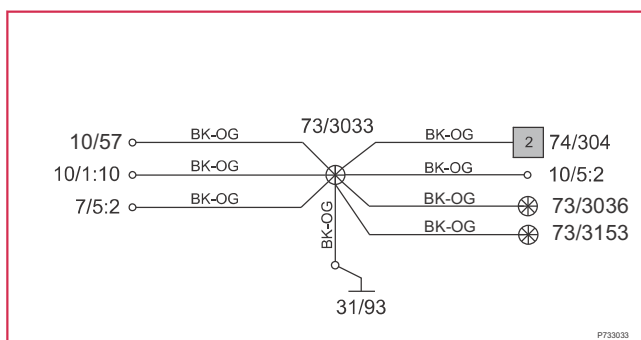


73/3034

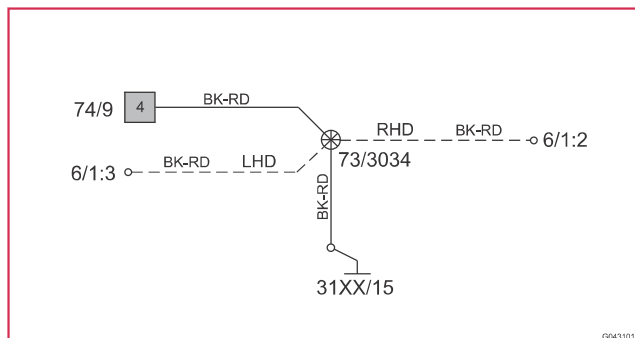


73/3035

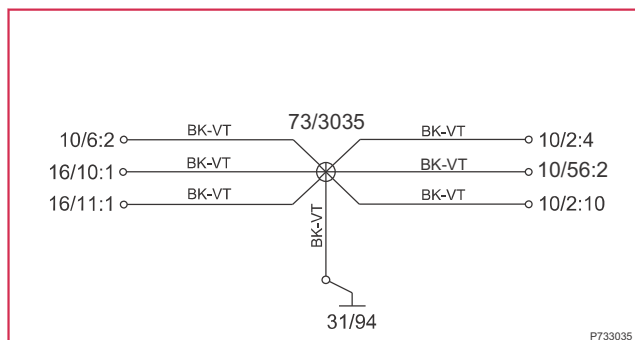


73/3036

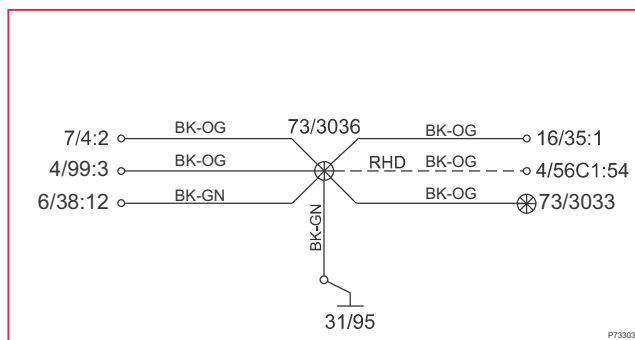

73/3037

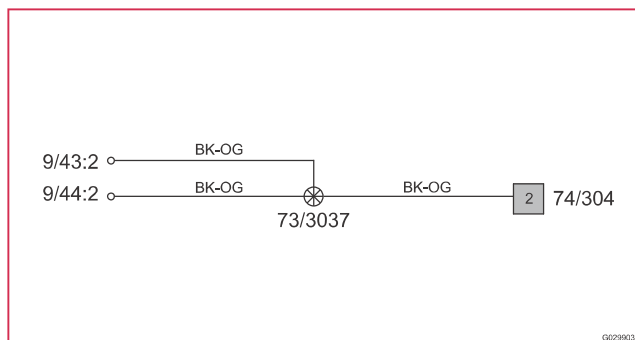


73/3039 4-Cyl. Turbo

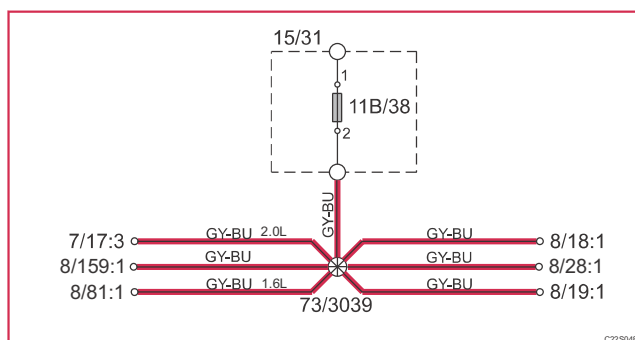


Branching points 73/3039 - 73/3053


73/3039 5-Cyl. Diesel

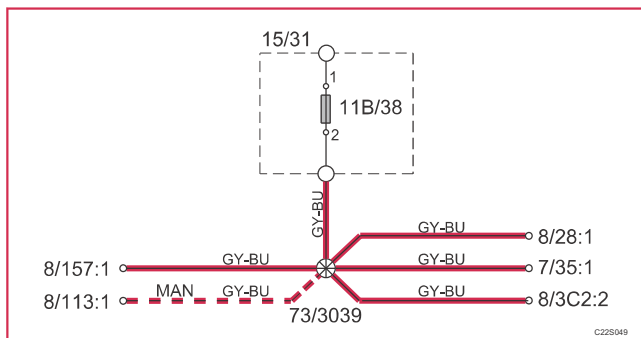


73/3039 5-Cyl. Turbo

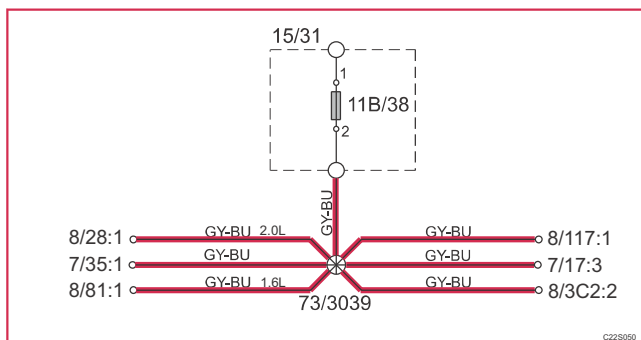


73/3039 6-Cyl.

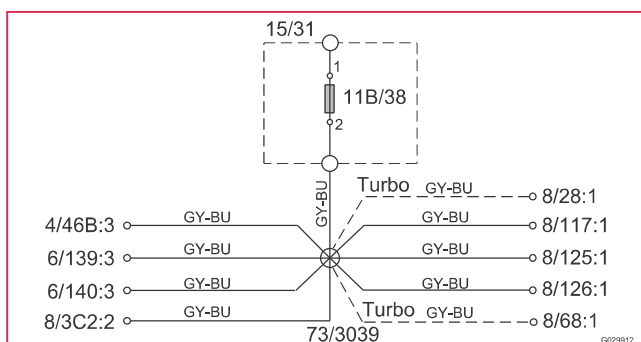


73/3040

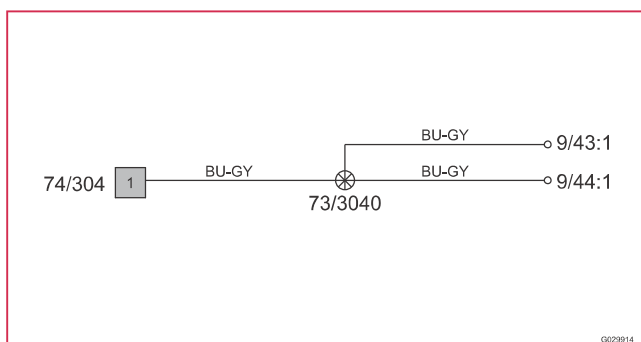


73/3042

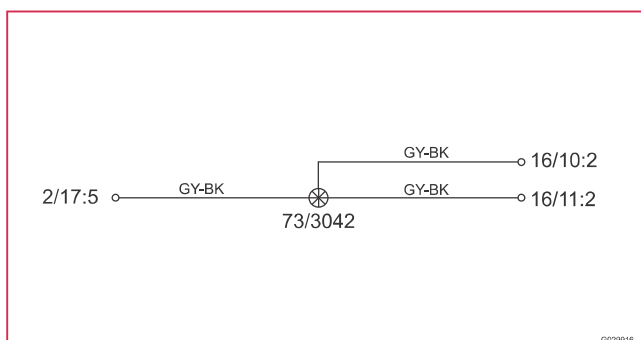


73/3046

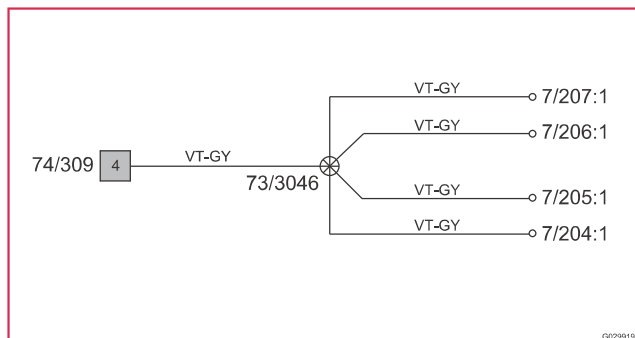


73/3047

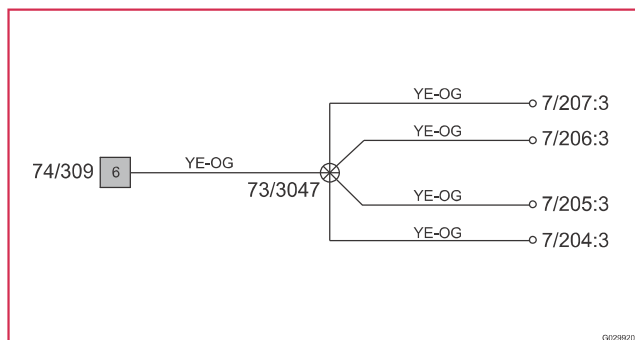


73/3050 5-Cyl. Diesel

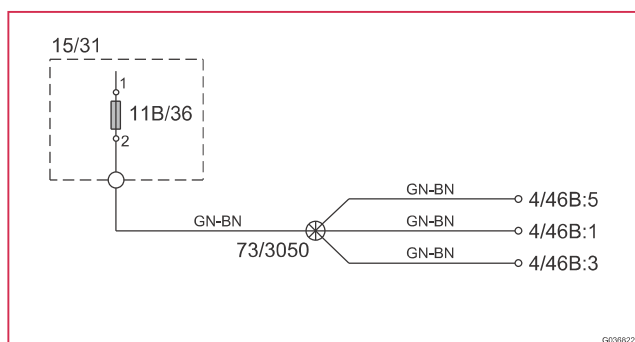

73/3051

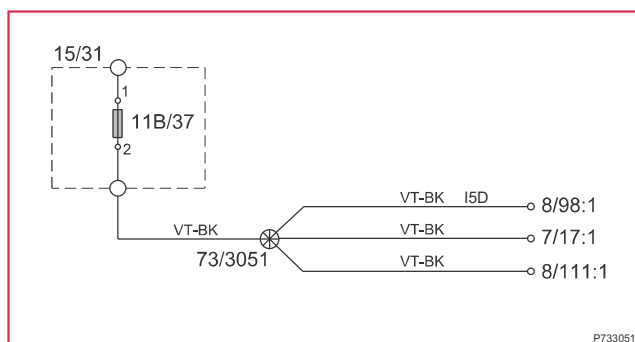


73/3053

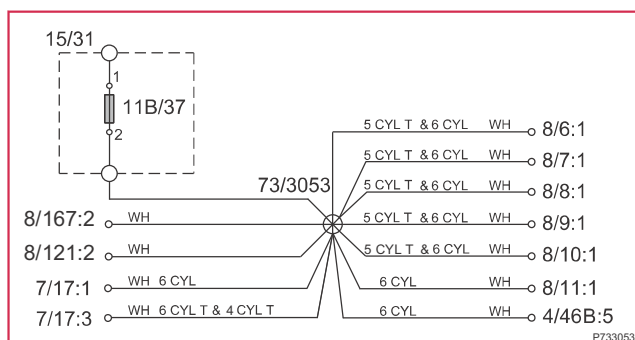


Branching points

73/3058 - 73/3076


73/3058 4-Cyl.

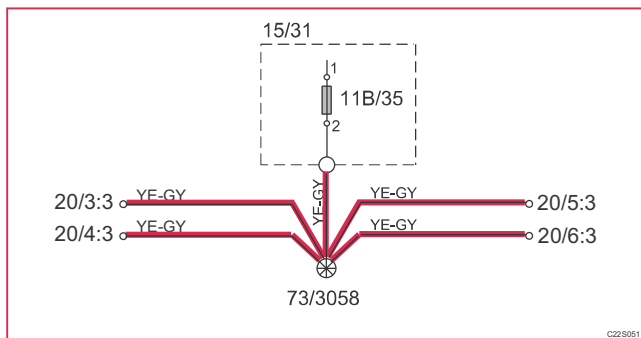


73/3058

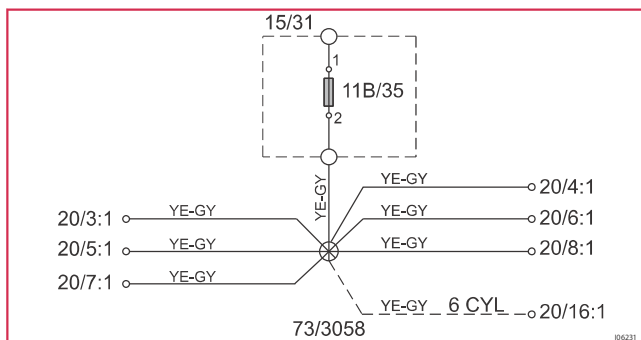


73/3058 5-Cyl.

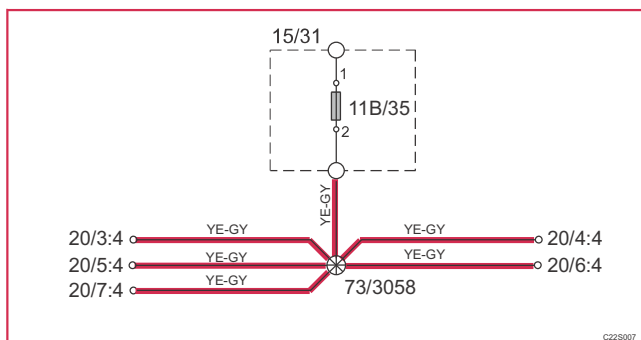


73/3064

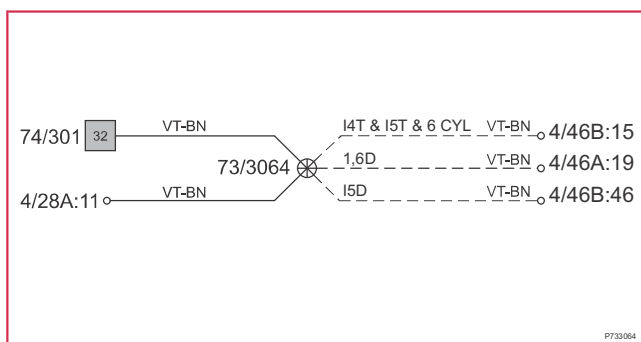


73/3068

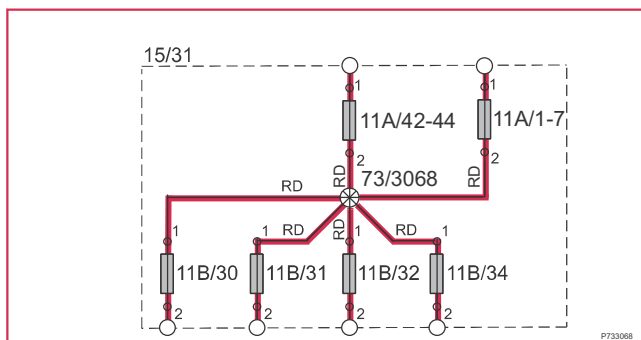


73/3070

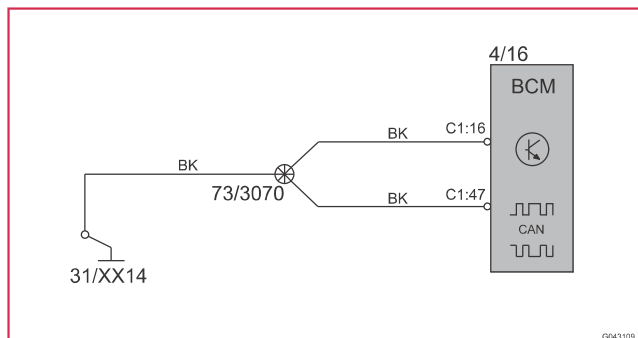


73/3072

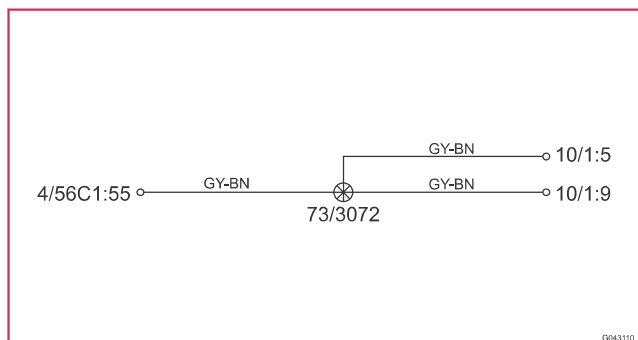


73/3073

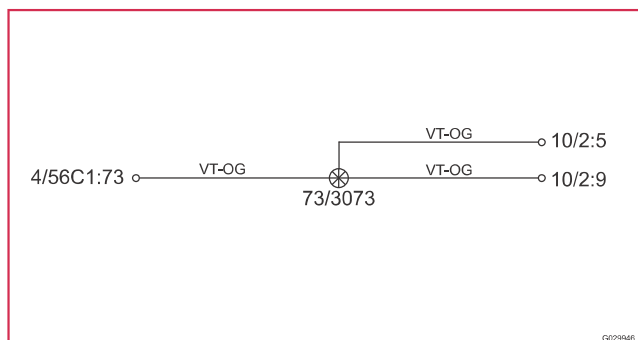

73/3074

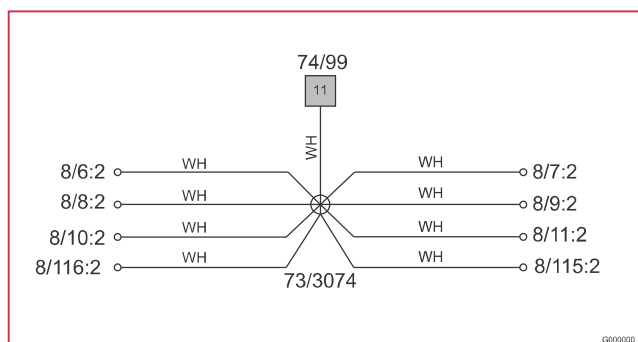


73/3076

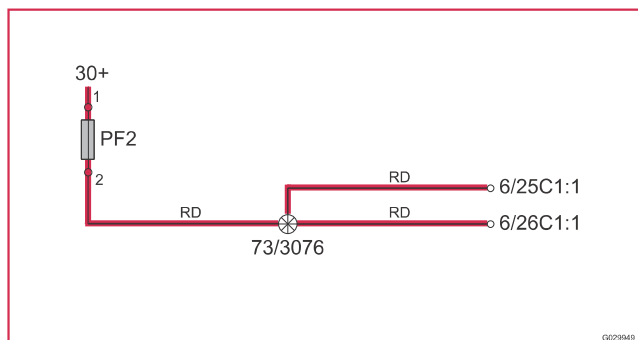


Branching points 73/3077 - 73/3094


73/3077

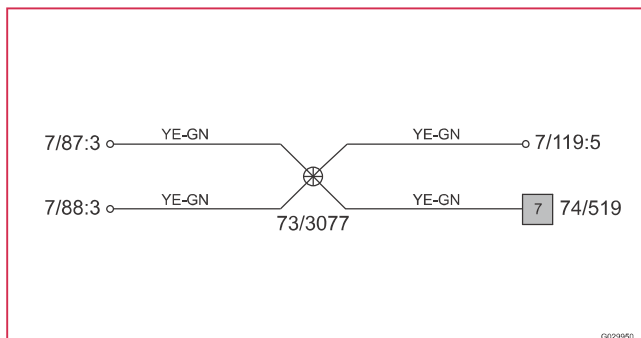


73/3094 VED5

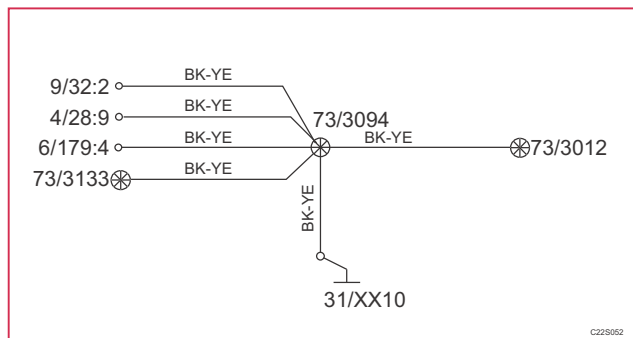


73/3078

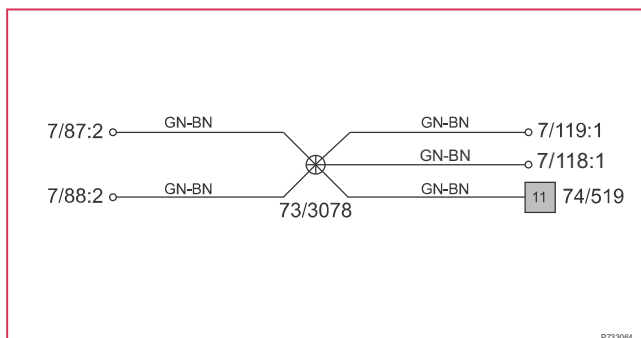


73/3094 4-Cyl. Turbo 1,6L

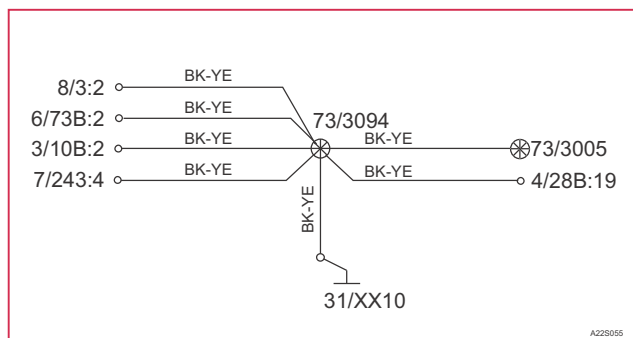


73/3085

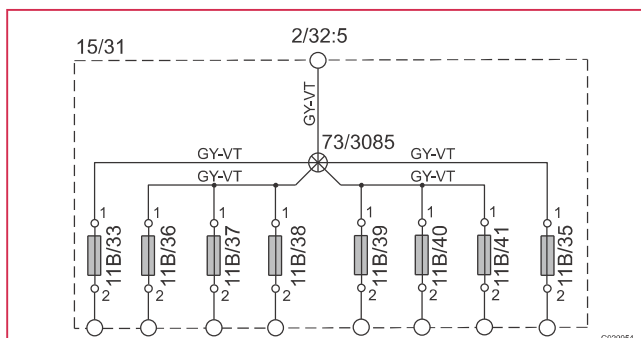


73/3094 4-Cyl. Turbo 2,0L

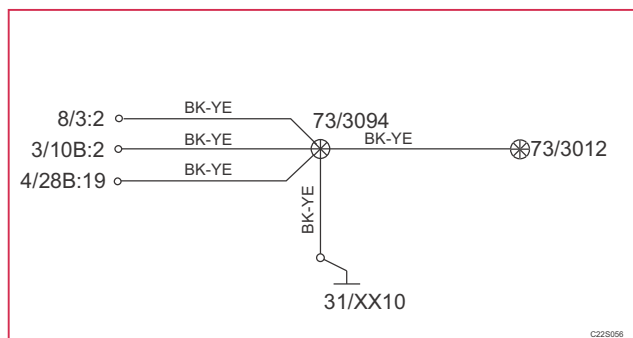


73/3087

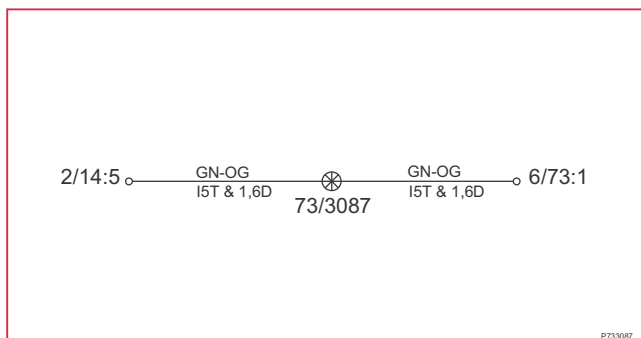


73/3094 5-Cyl. Turbo

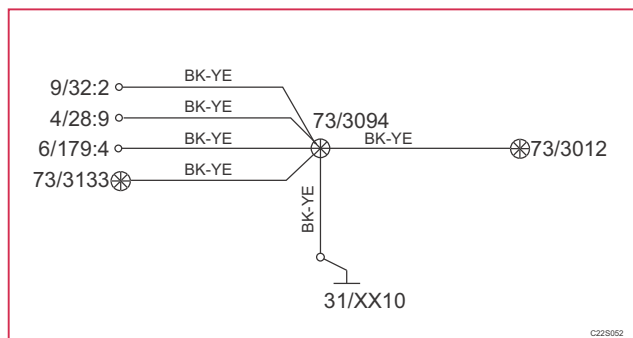

73/3091

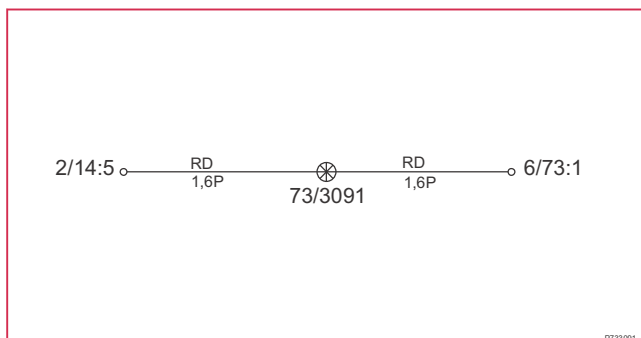


73/3094 6-Cyl.

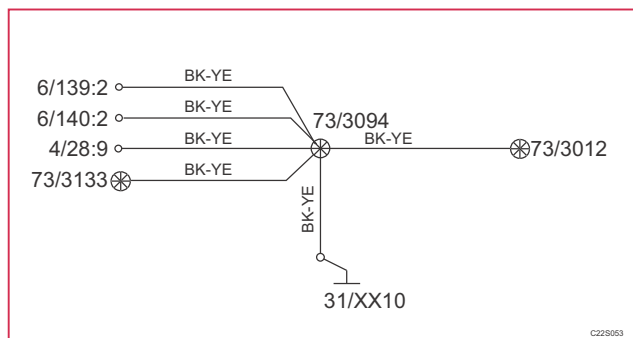


Branching points 73/3094 - 73/3133


73/3094 DV6C

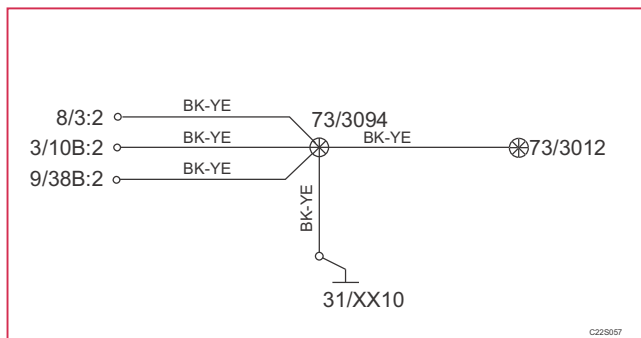


73/3103

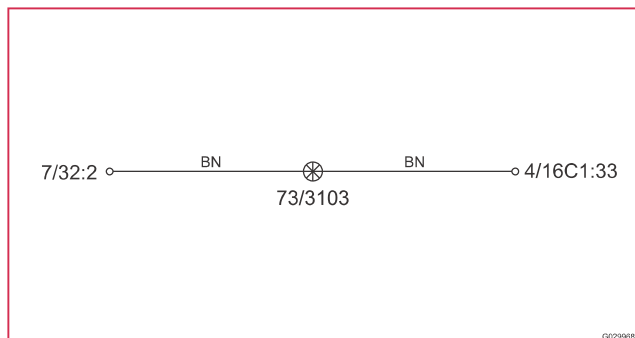


73/3095

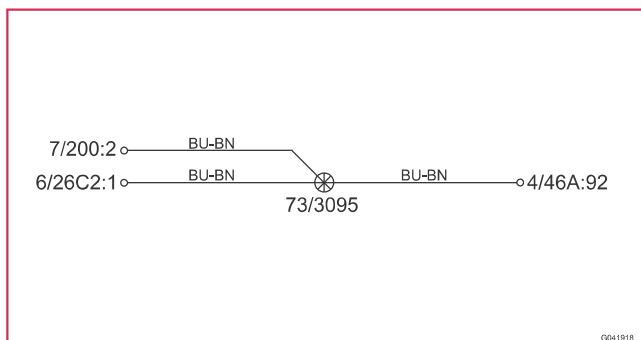


73/3108

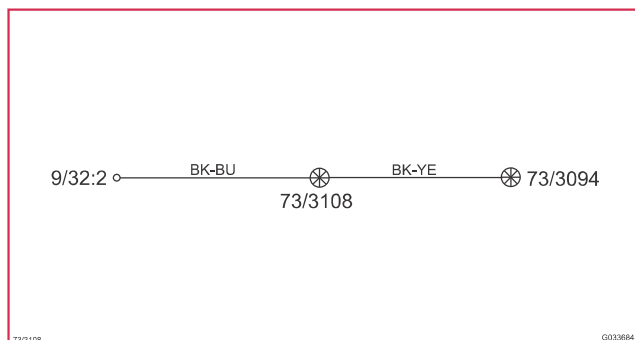


73/3100

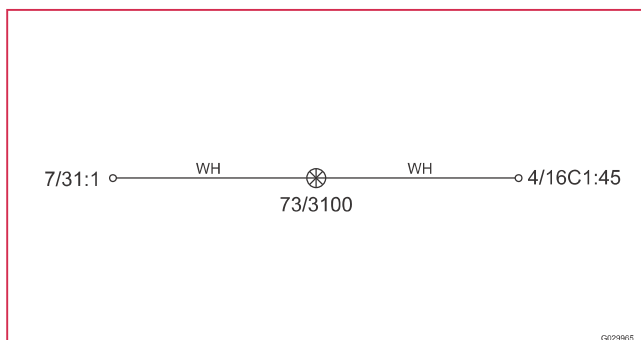


73/3125

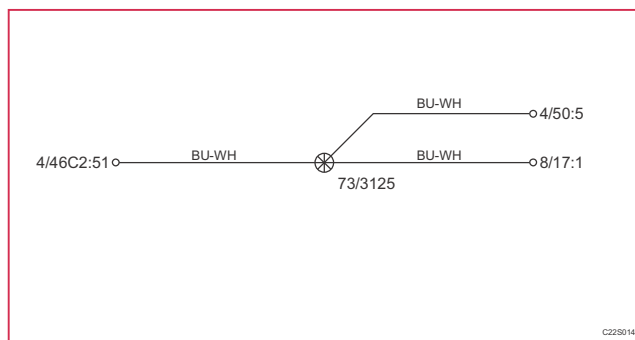


73/3101

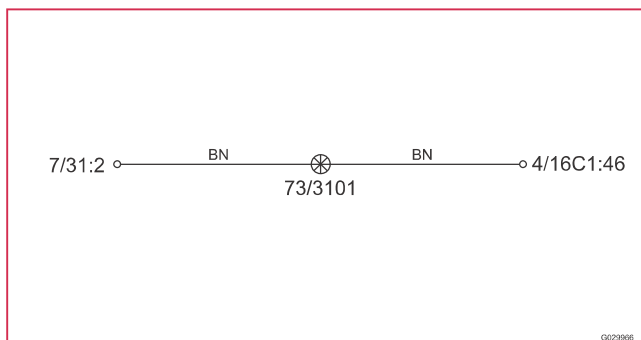


73/3131

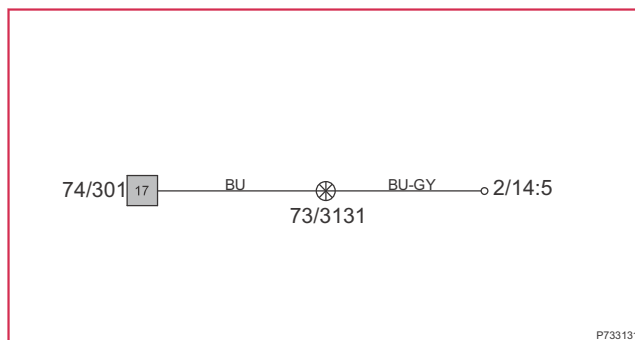

73/3102

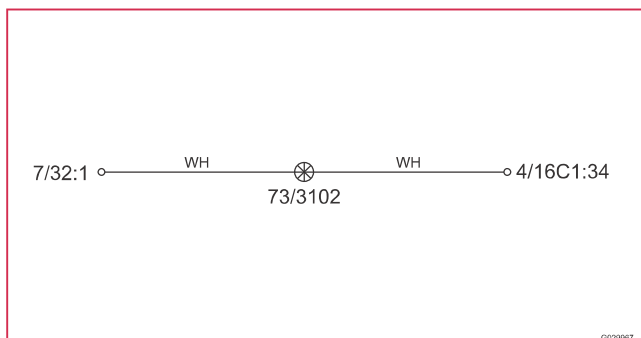


73/3133

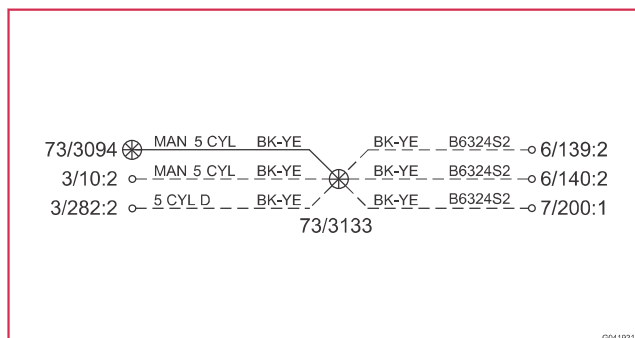


Branching points 73/3136 - 73/3154


73/3136

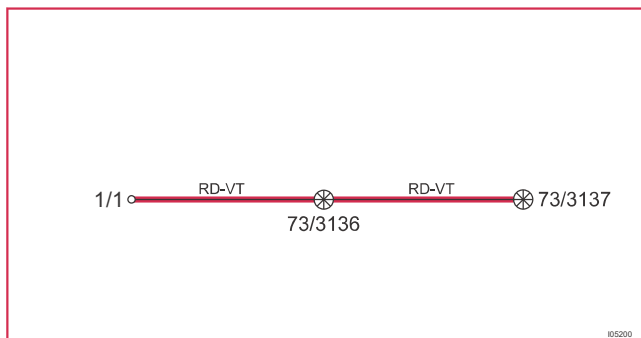


73/3149

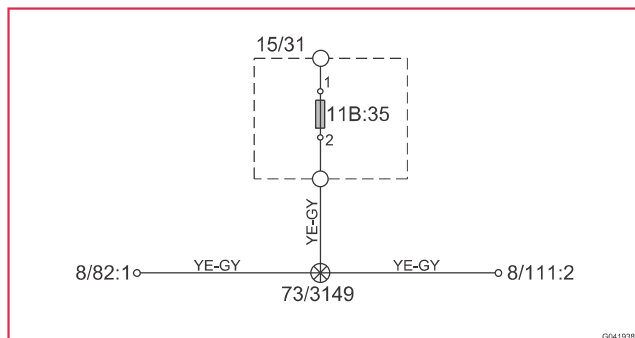


73/3137

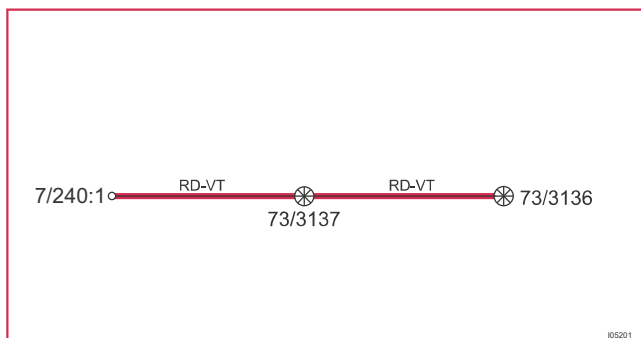


73/3150

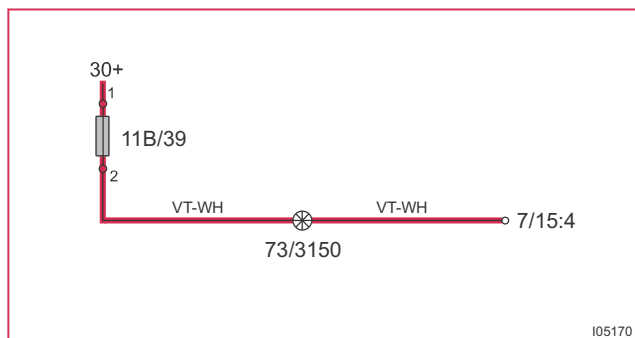


73/3139

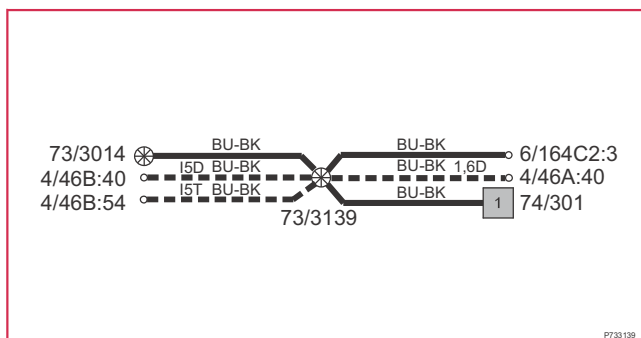


73/3152 4-Cyl. Diesel

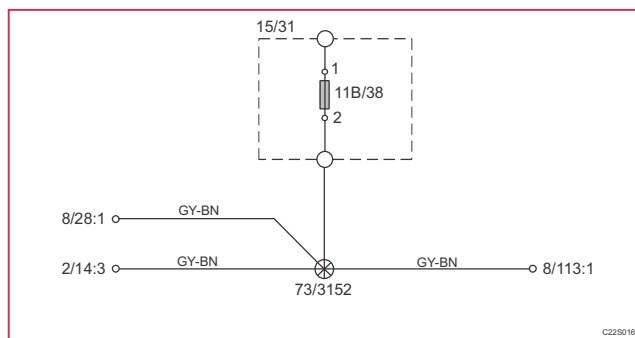


73/3140

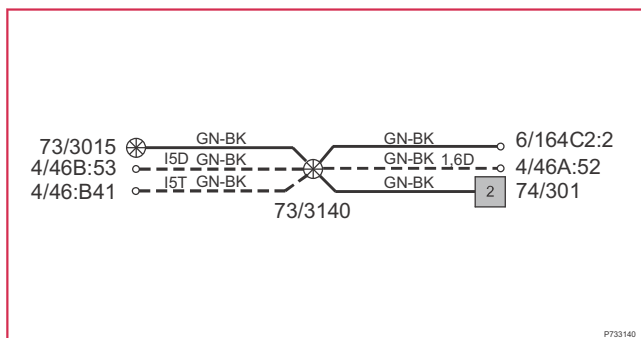


73/3153

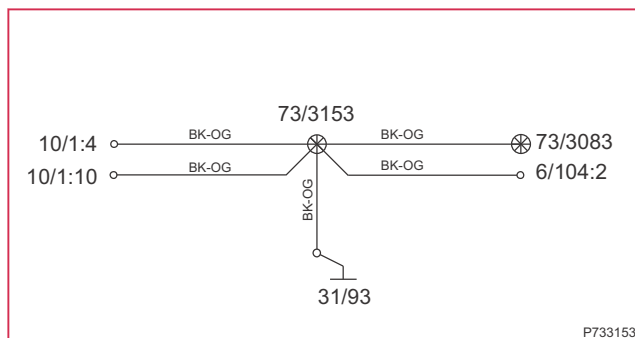

73/3145

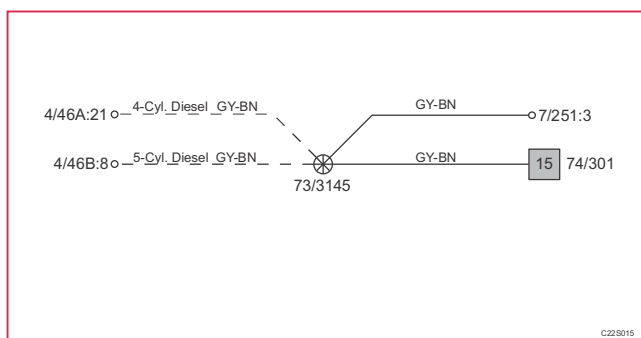


73/3154

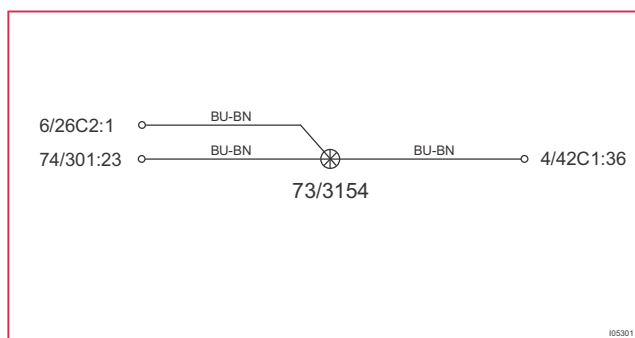


Branching points 73/3156 - 73/3166


73/3156 5-Cyl. Turbo

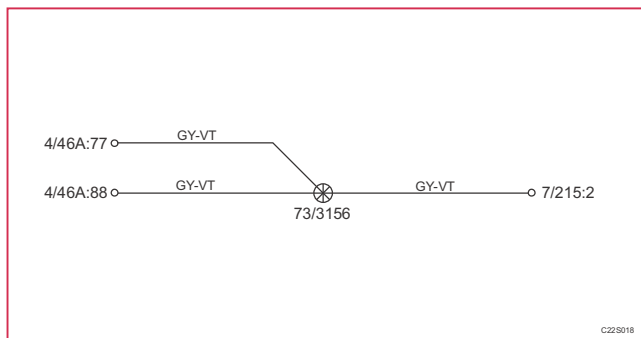


73/3162

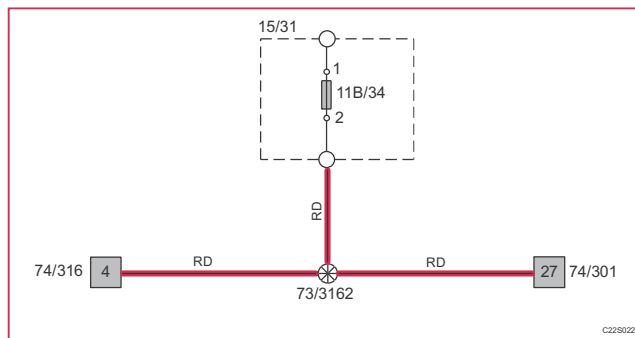


73/3156 6-Cyl.

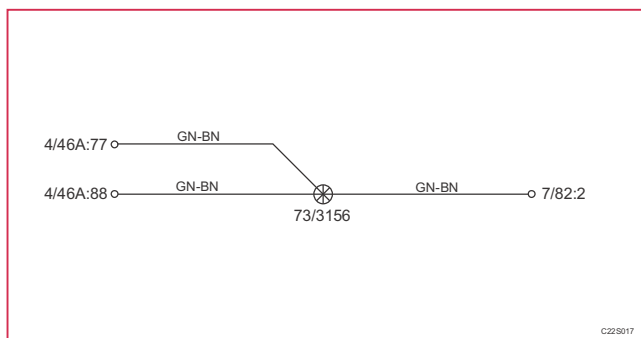


73/3163

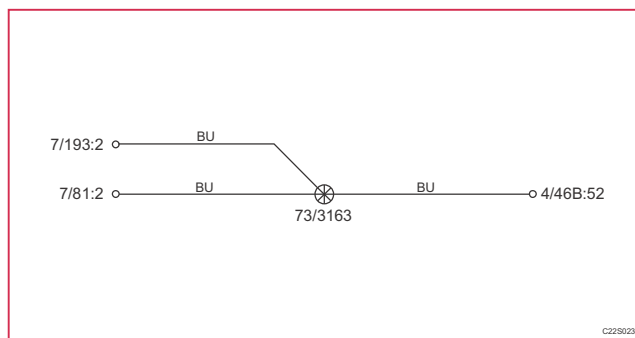


73/3157

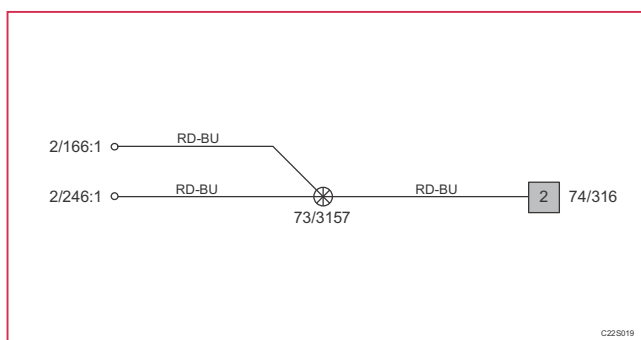


73/3164

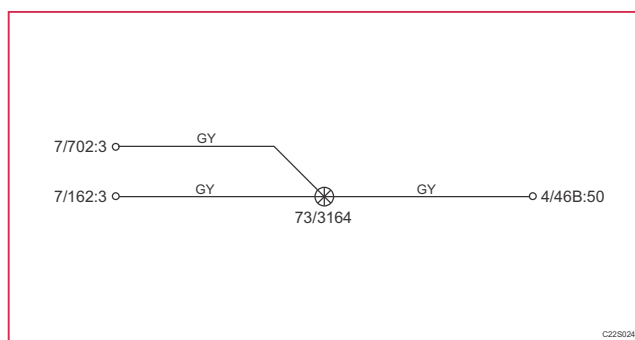


73/3160 4-Cyl. & 5-Cyl. Turbo

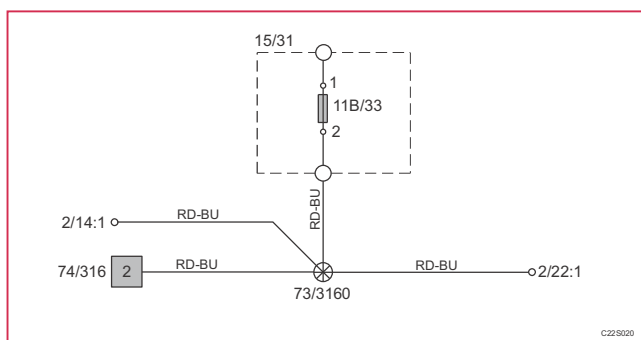


73/3165

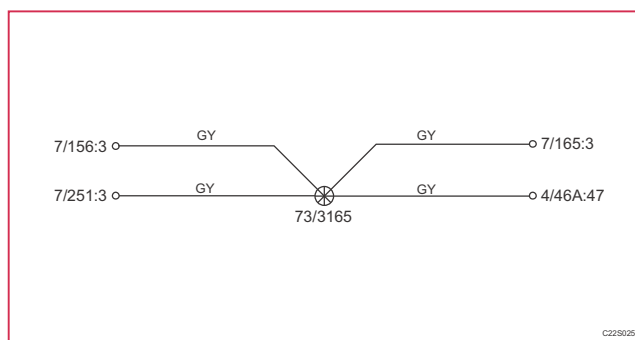

73/3161

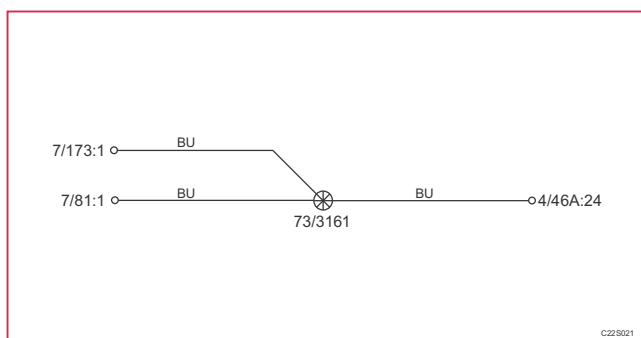


73/3166

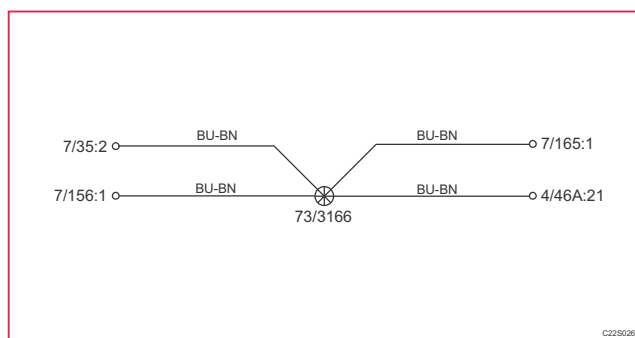


Branching points 73/3172 - 73/4016


73/3172

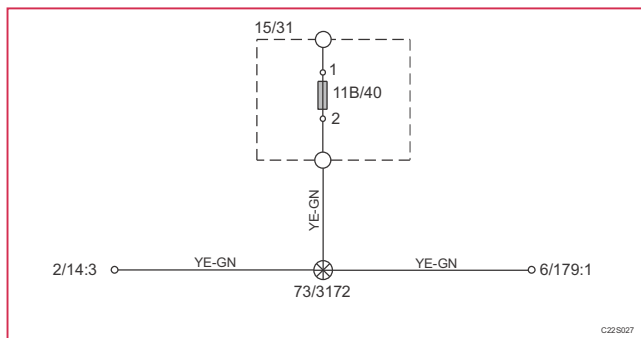


73/4001

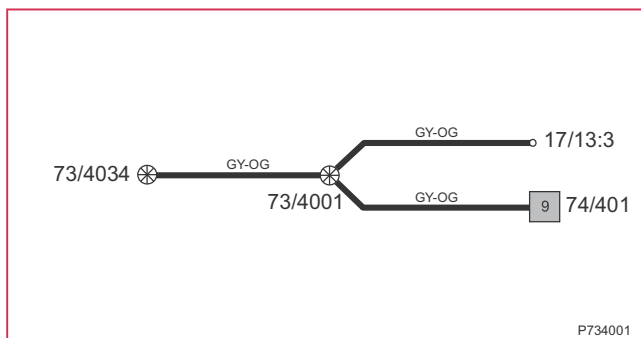


73/4002

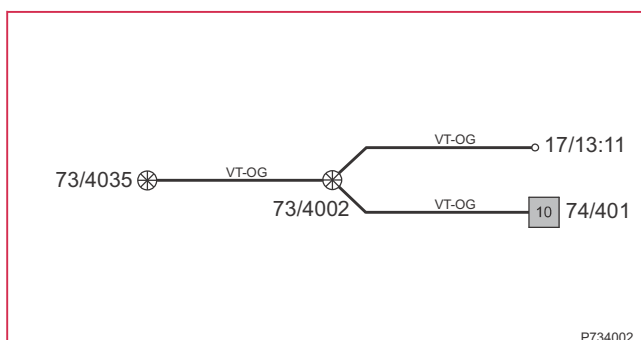


73/4005

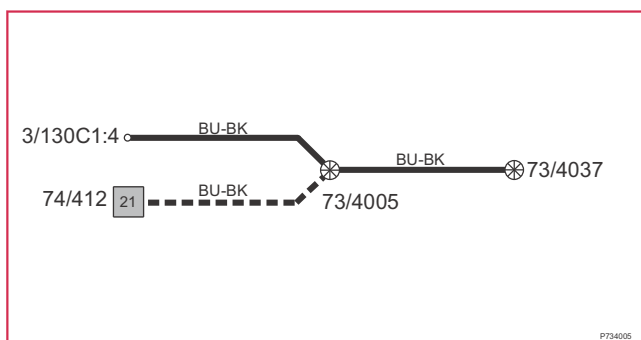


73/4006

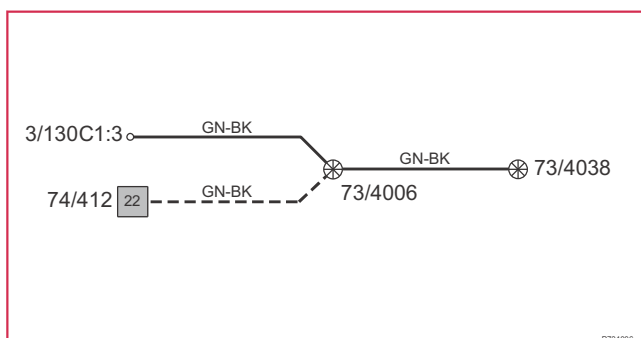


73/4010

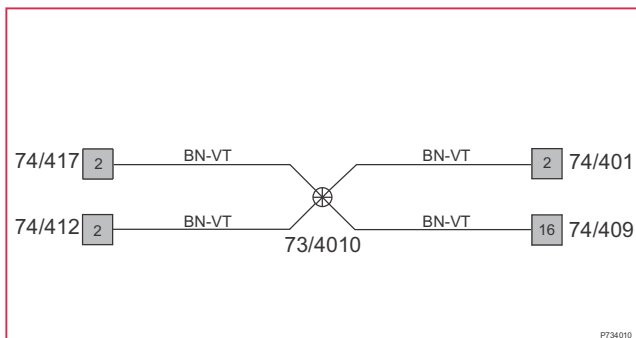


73/4012

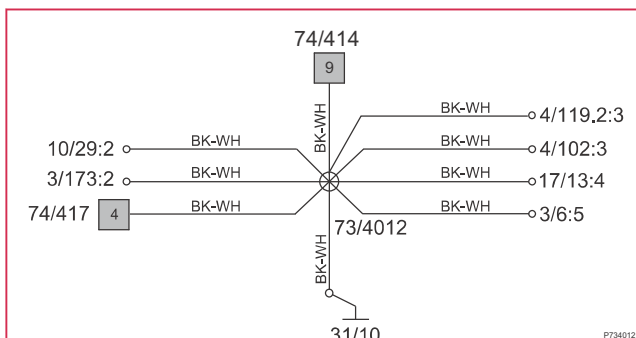


73/4013

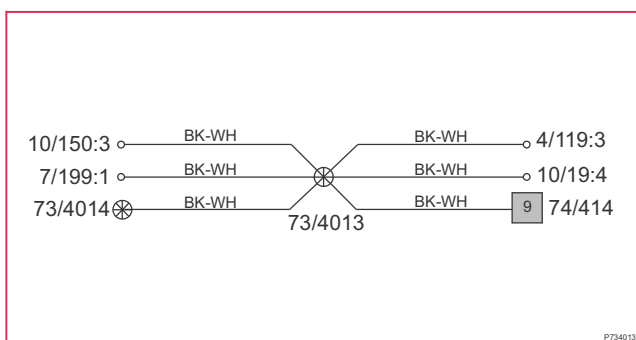

73/4014

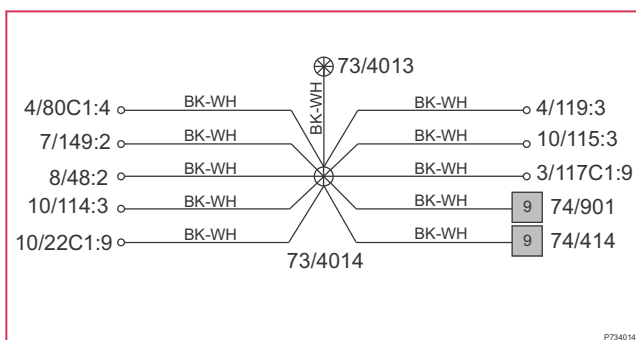


73/4016 LHD

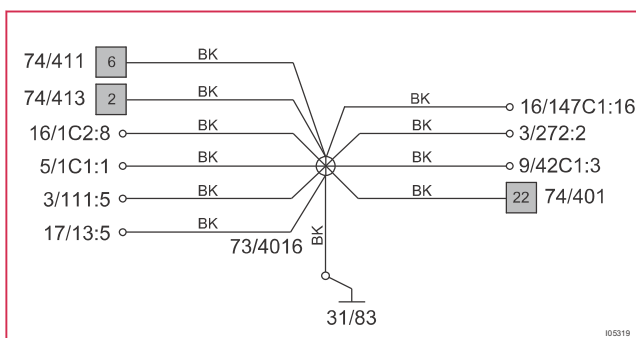


Branching points 73/4016 - 73/4035

73/4016 RHD

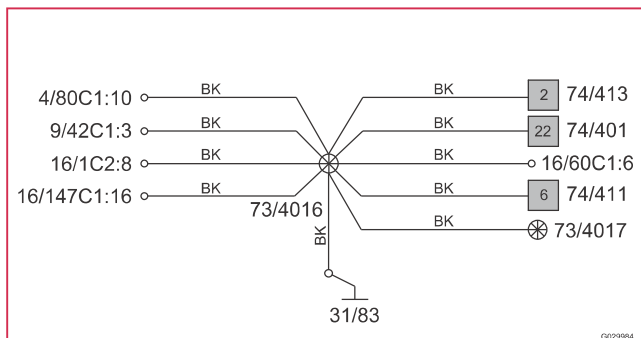


G029084

73/4028

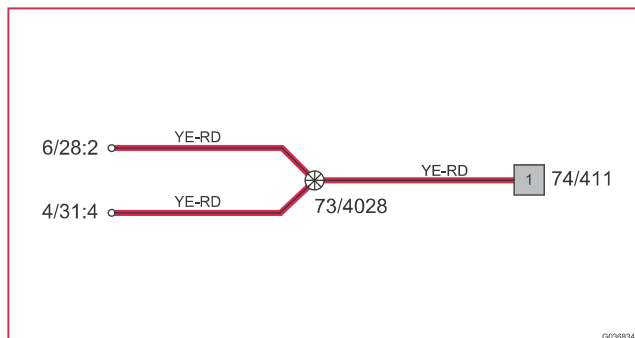


G038834

73/4017 LHD

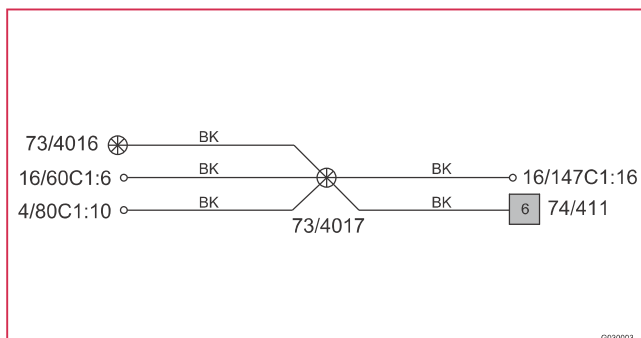


G030003

73/4029

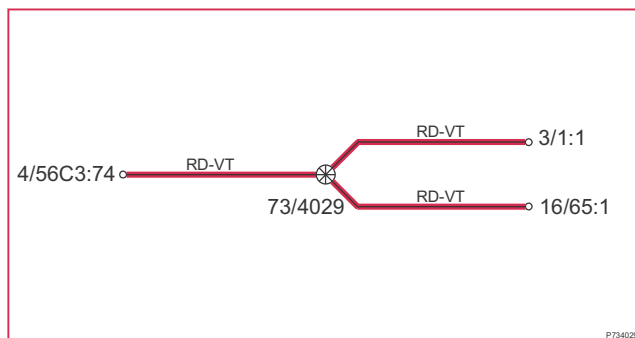


P734029

73/4017 RHD

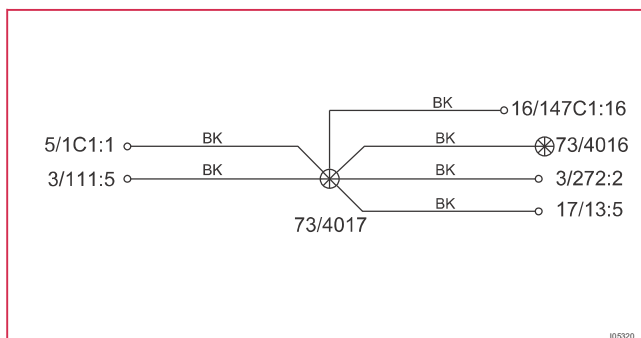


I05320

73/4031

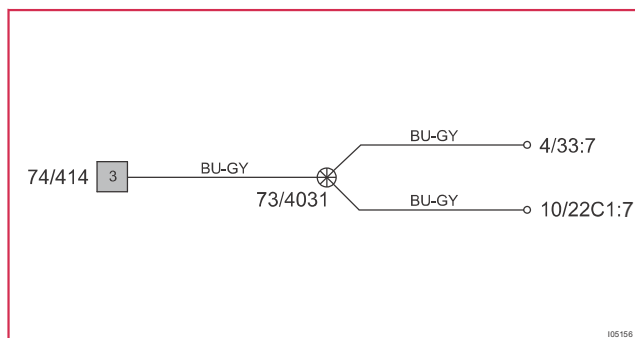


I05156

73/4019

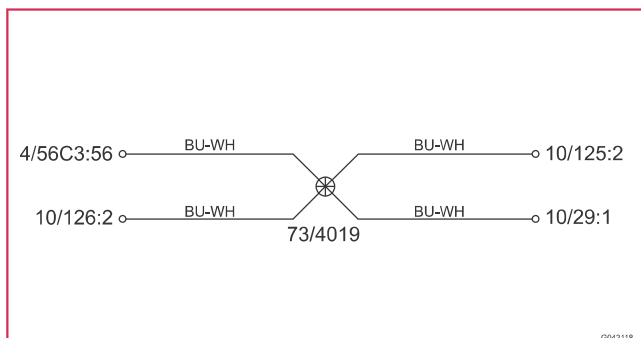


G043118

73/4034

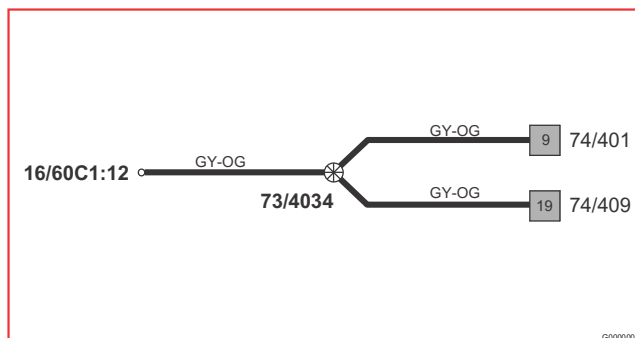


G000000

73/4020

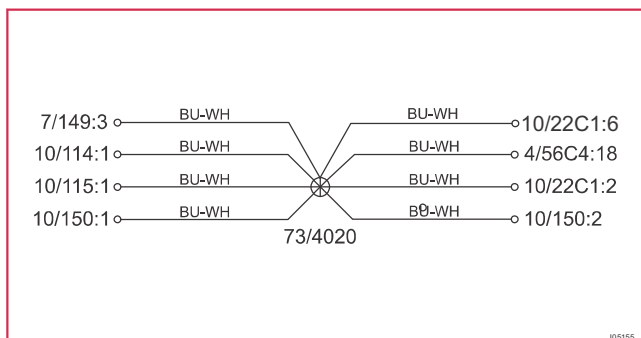

I05155


73/4035

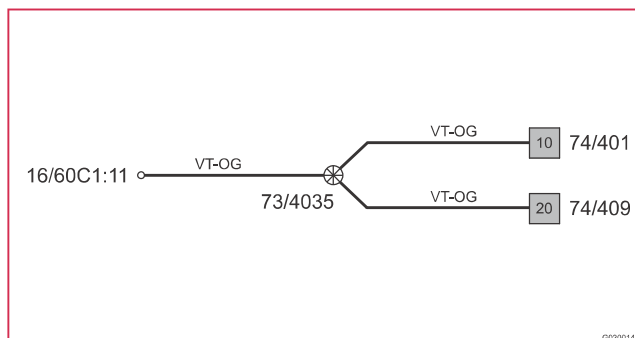


G039014

Branching points 73/4037 - 73/5002


73/4037

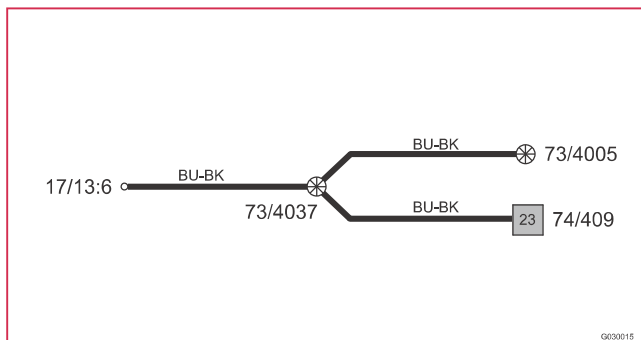


73/4049

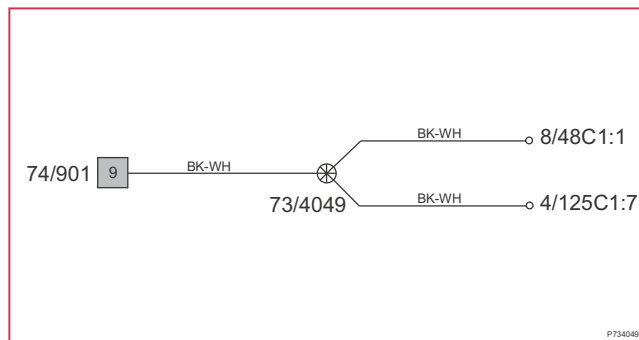


73/4038

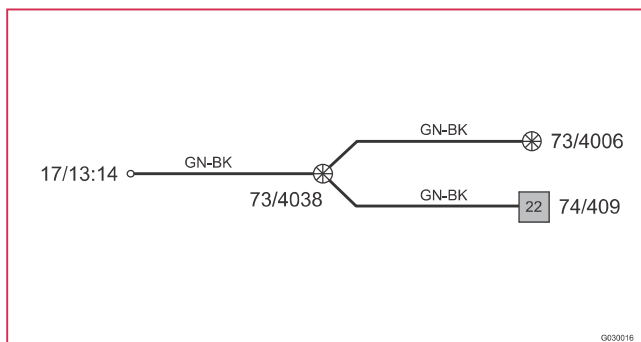


73/4059

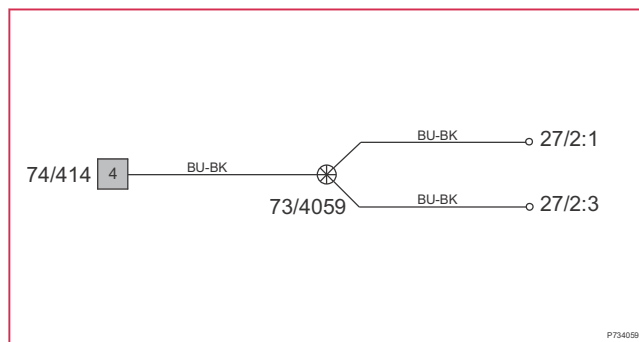


73/4046

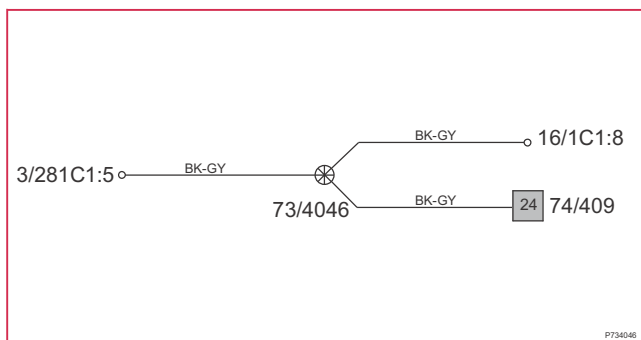


73/5001 LHD

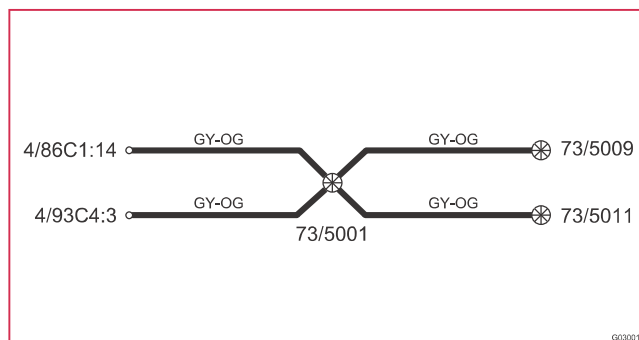


73/4047

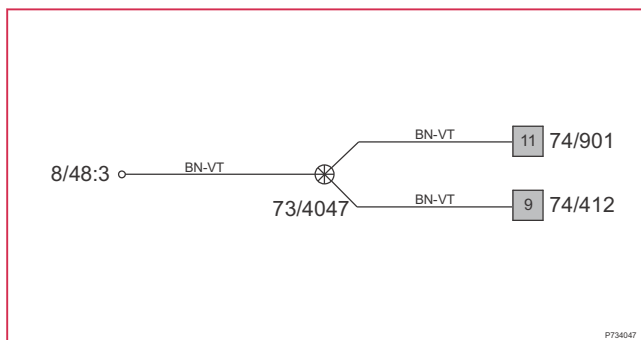


73/5001 RHD

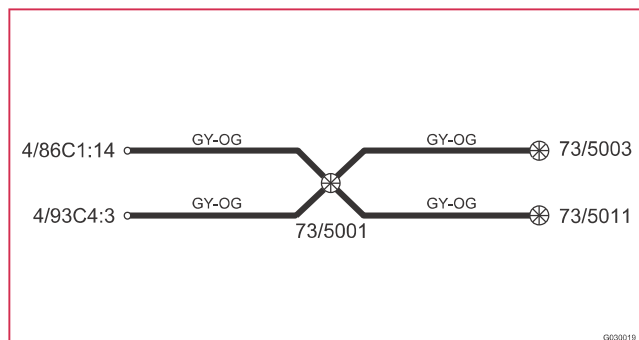

73/4048

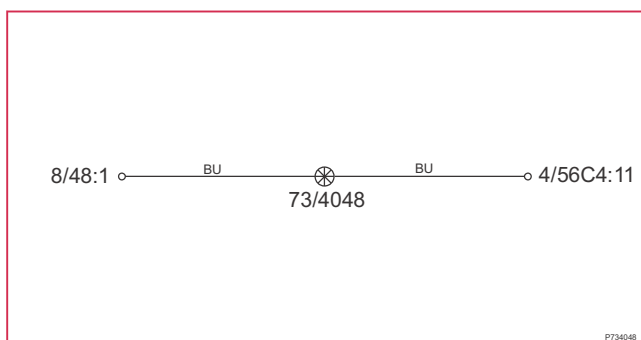


73/5002 LHD

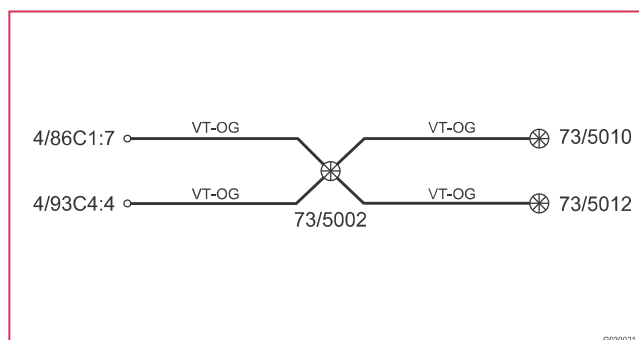


Branching points 73/5002 - 73/5009


73/5002 RHD

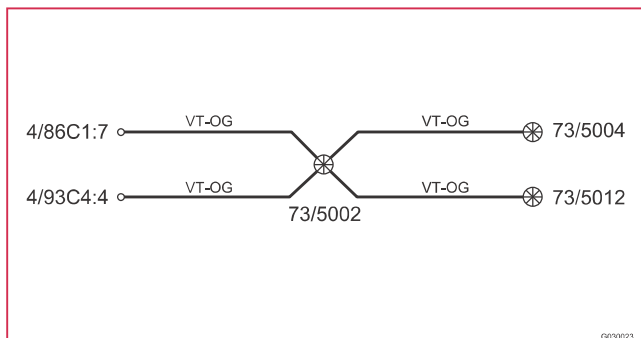


73/5005 LHD

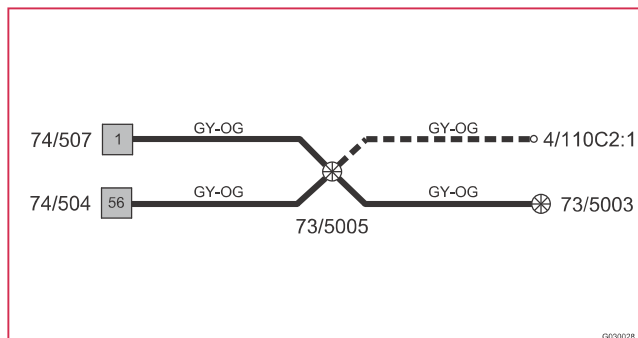


73/5003 LHD

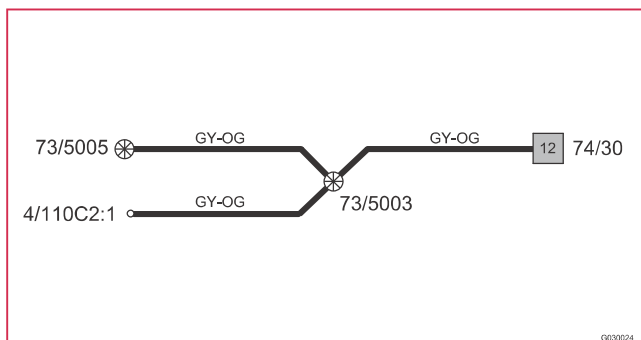


73/5005 RHD

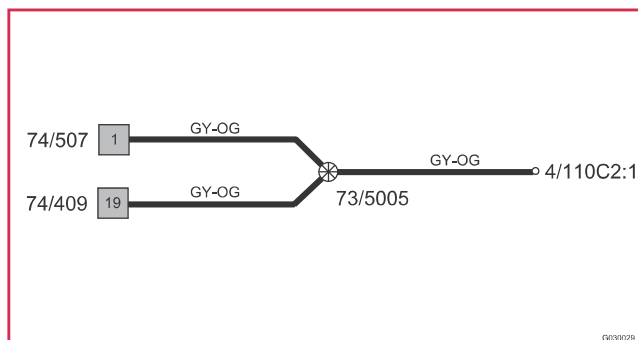


73/5003 RHD

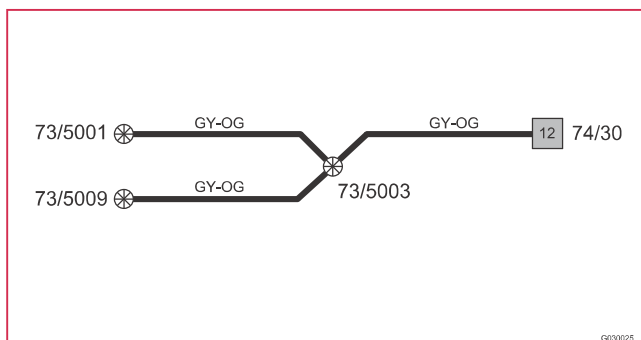


73/5006 LHD

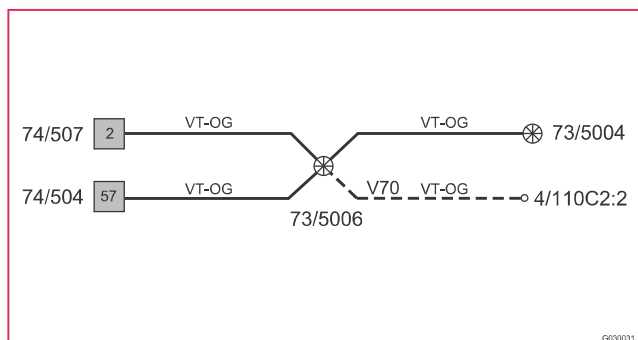


73/5004 LHD

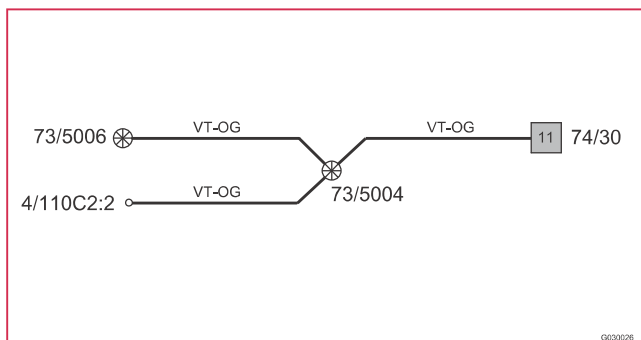


73/5006 RHD

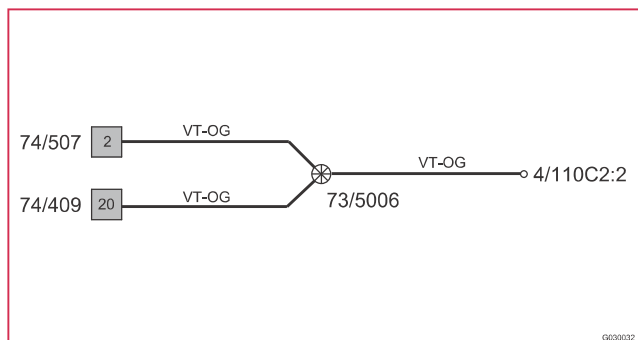

73/5004 RHD

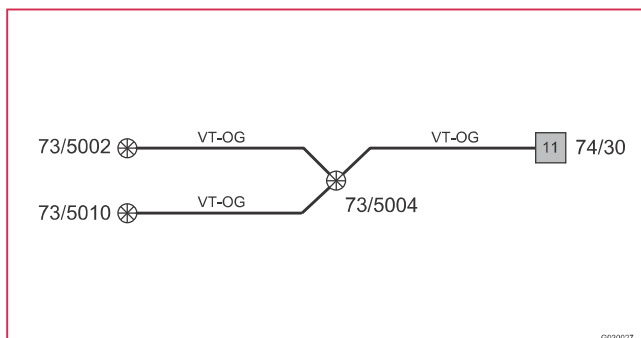


73/5009 LHD

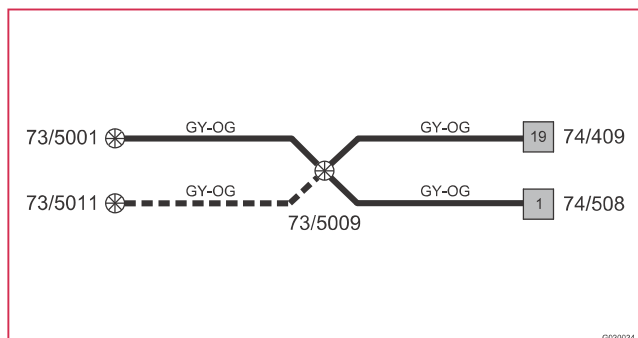


Branching points 73/5009 - 73/5023


73/5009 RHD

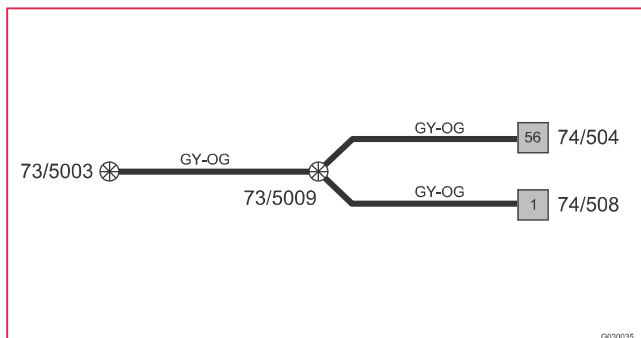


73/5015

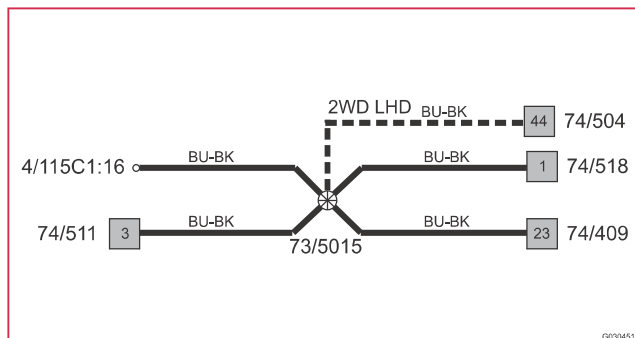


73/5010 LHD

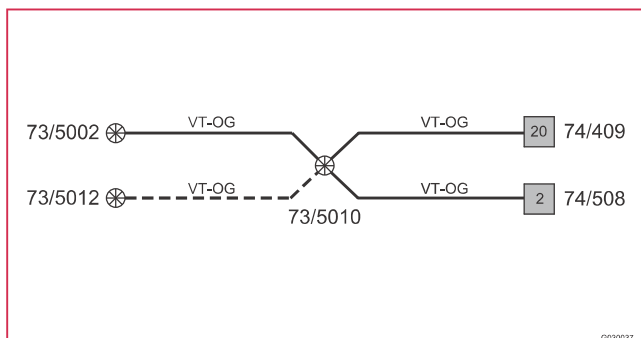


73/5016

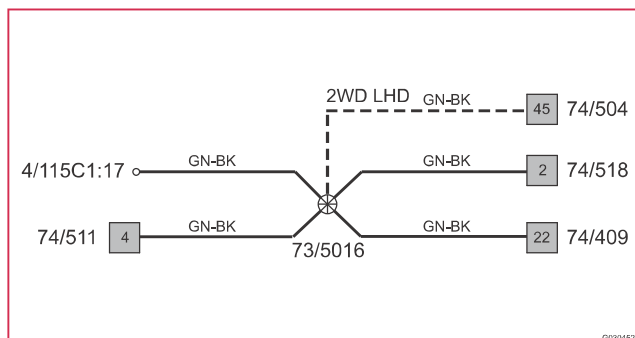


73/5010 RHD

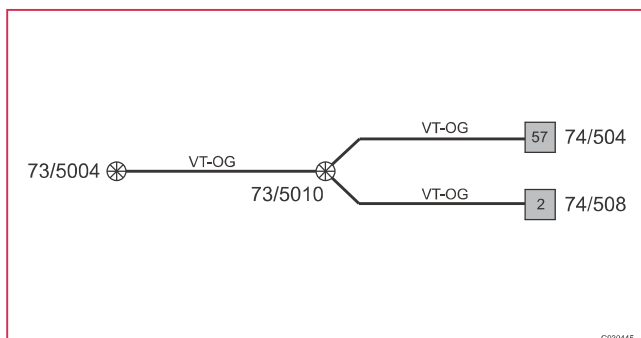


73/5019

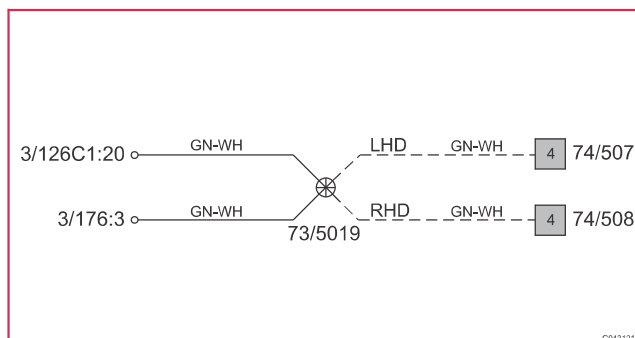


73/5011

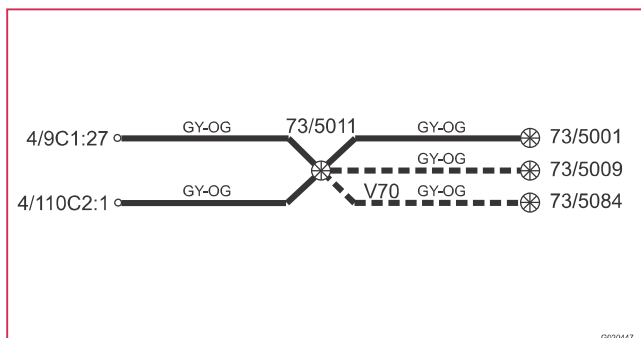


73/5021

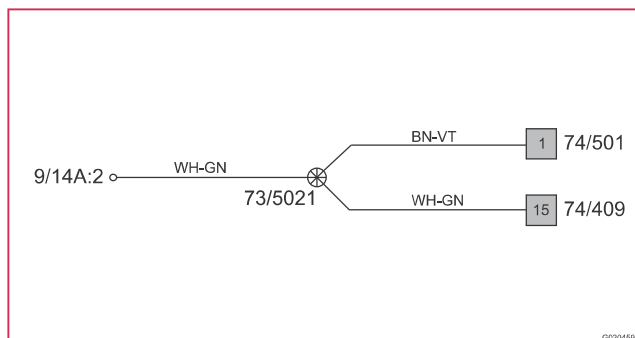

73/5012

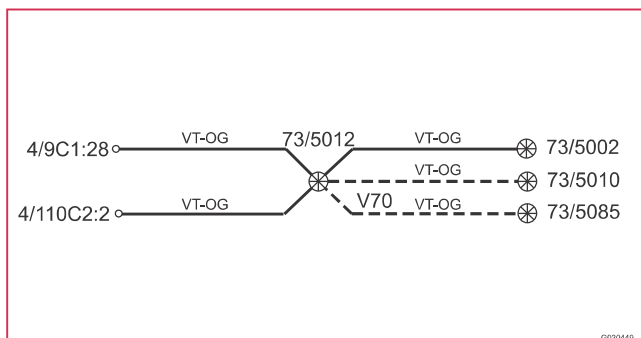


73/5023

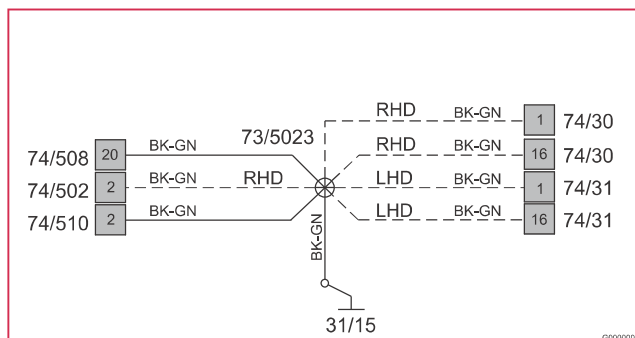


Branching points 73/5024 - 73/5035


73/5024 LHD

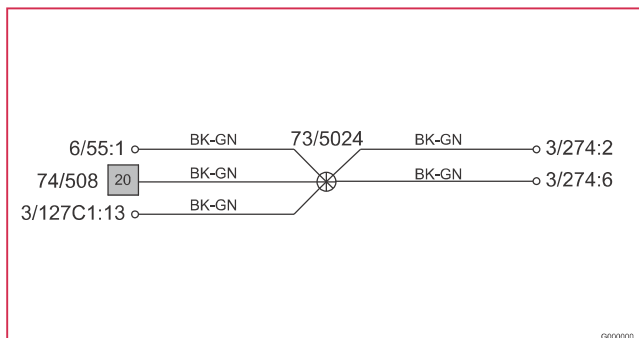


73/5029

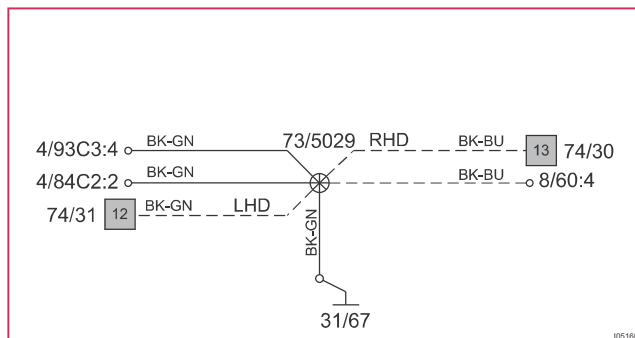


73/5024 RHD

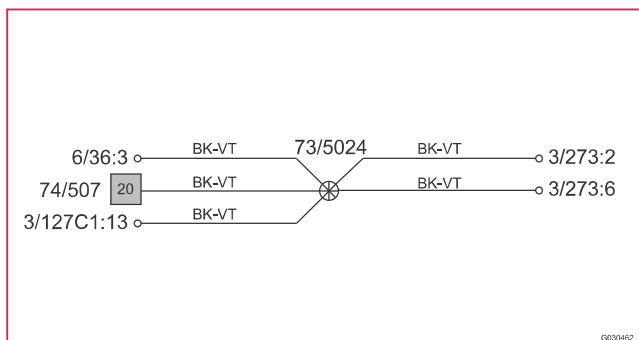


73/5031

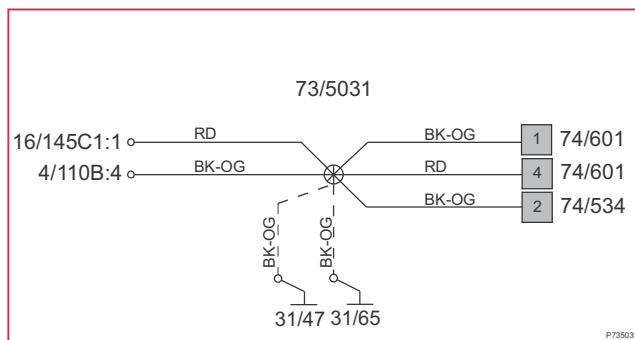


73/5025

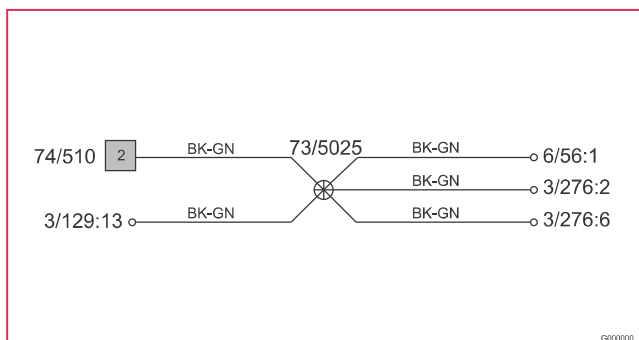


73/5032 V70

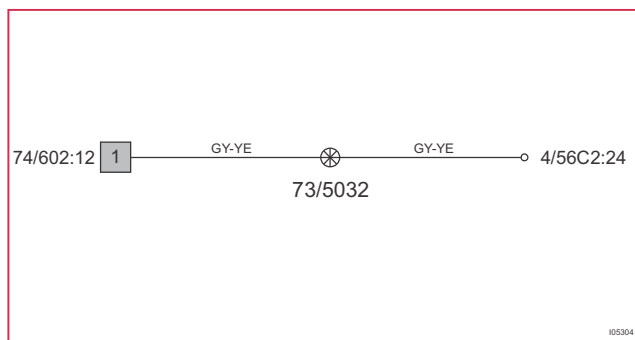


73/5026

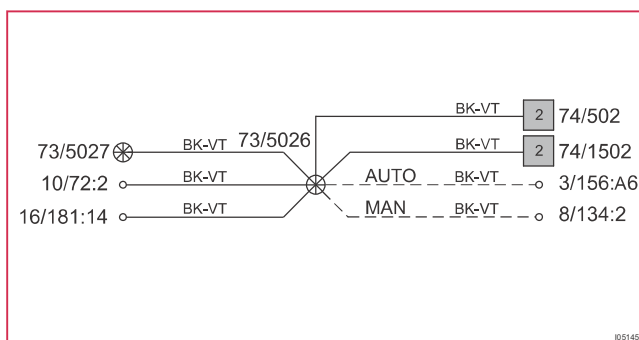


73/5033

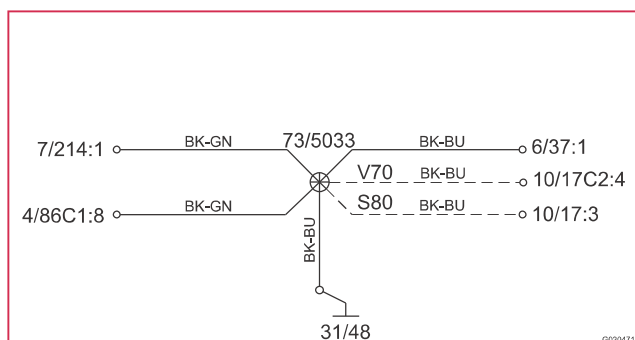

73/5027

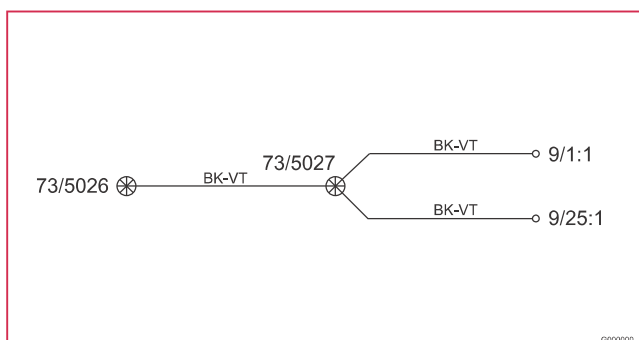


73/5035 LHD

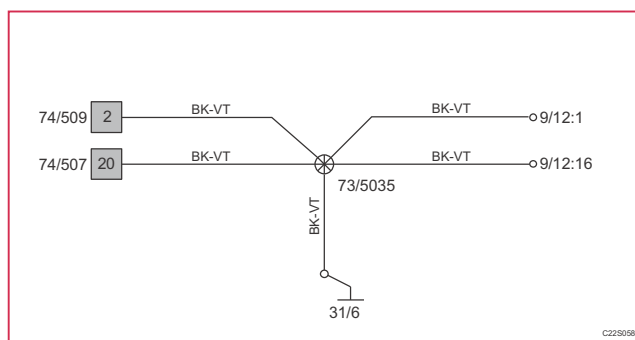


Branching points 73/5035 - 73/5050

73/5035 RHD

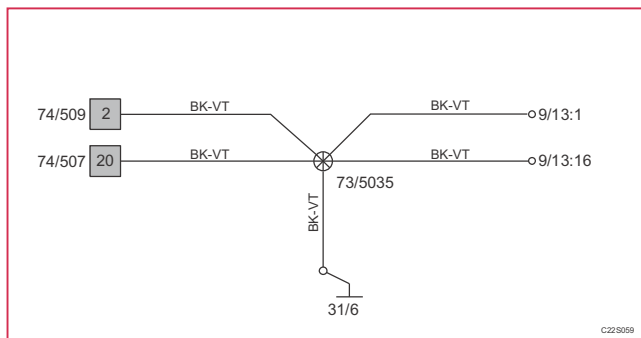


C225059

73/5044 V70 LHD

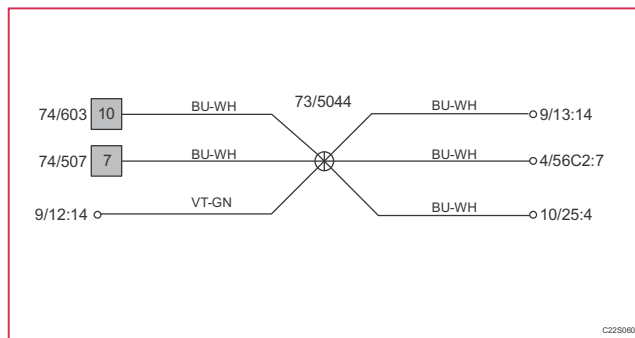


C225060

73/5036

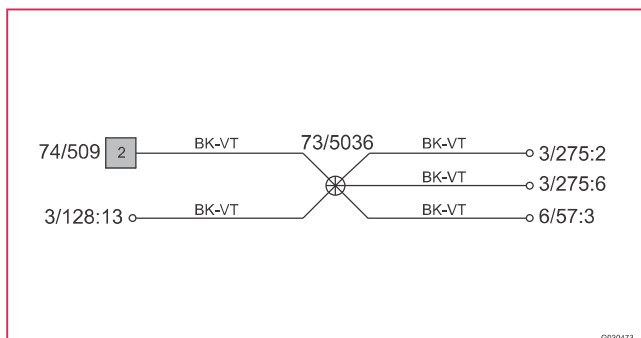


G030473

73/5044 S80 LHD

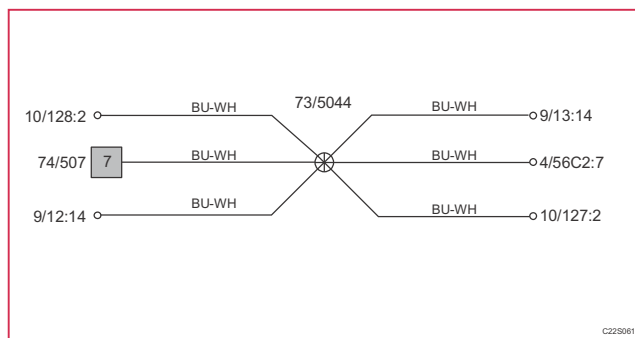


C225061

73/5037 LHD

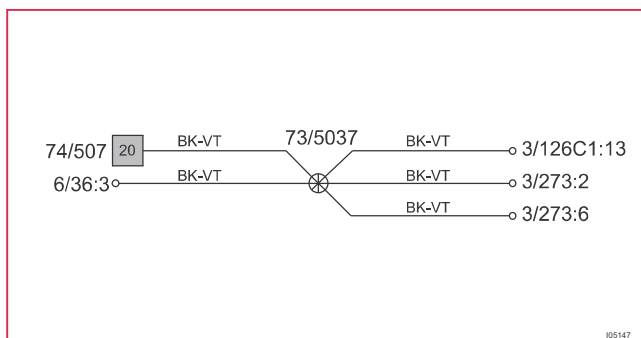


I05147

73/5044 V70 RHD

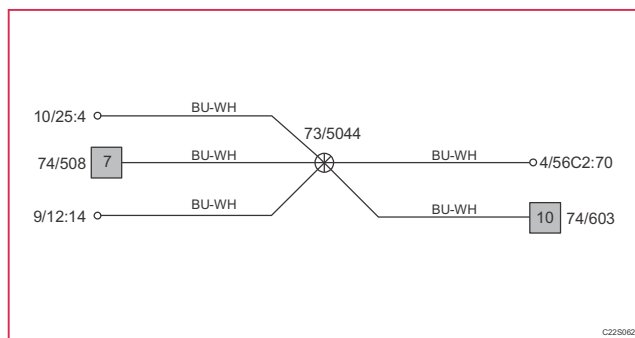


C225062

73/5037 RHD

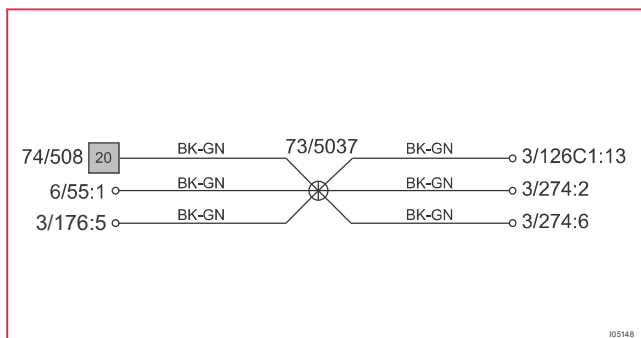


I05148

73/5044 S80 RHD

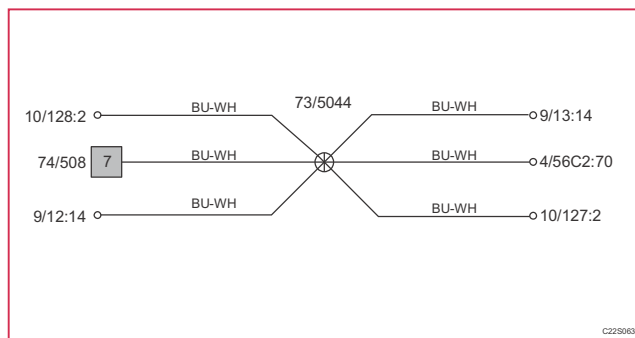


C225063

73/5038 S80

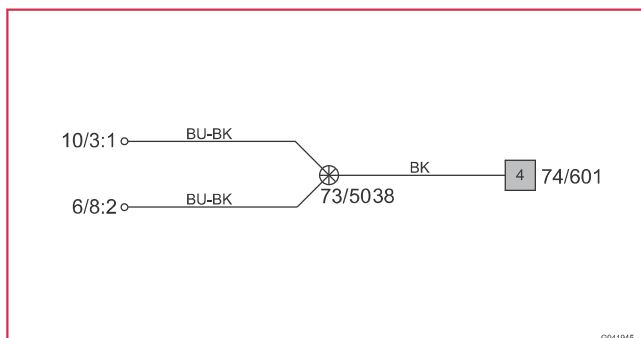

G041945


73/5050

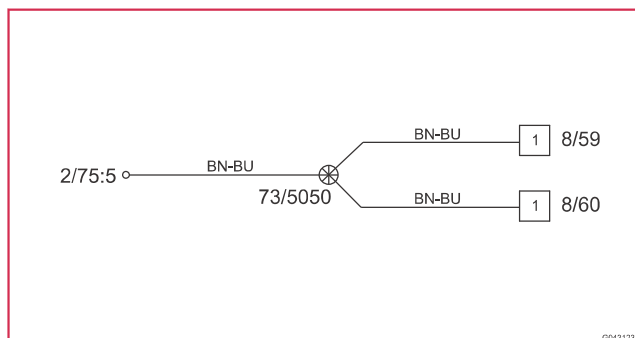


G043123

Branching points 73/5052 - 73/5075


73/5052

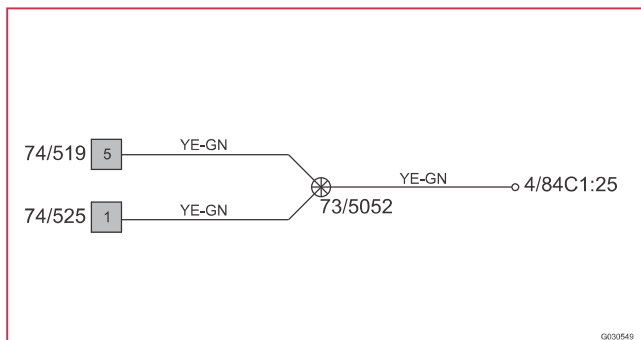


73/5070

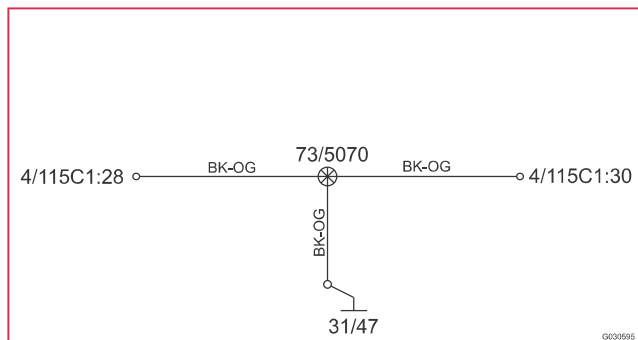


73/5053

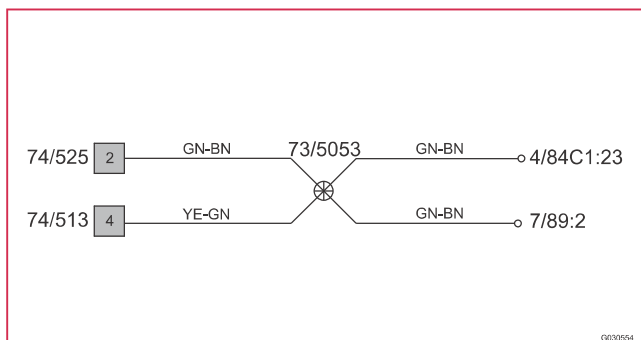


73/5071 LHD

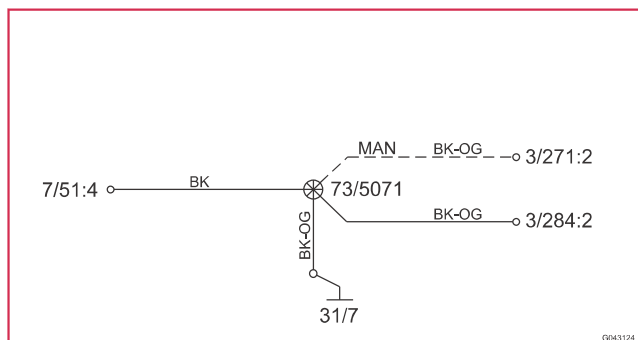


73/5064

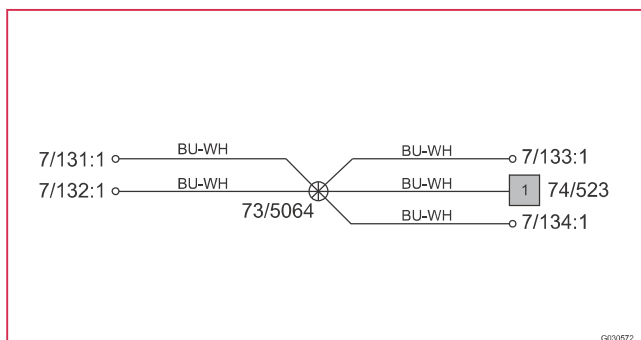


73/5071 5-Cyl. Diesel

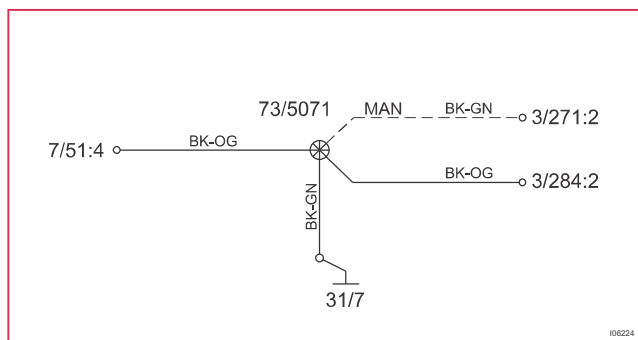


73/5066

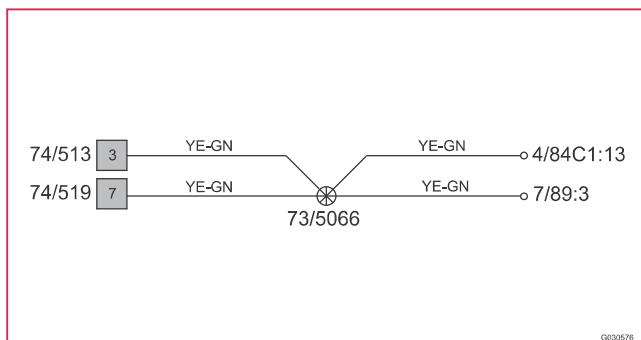


73/5072 RHD

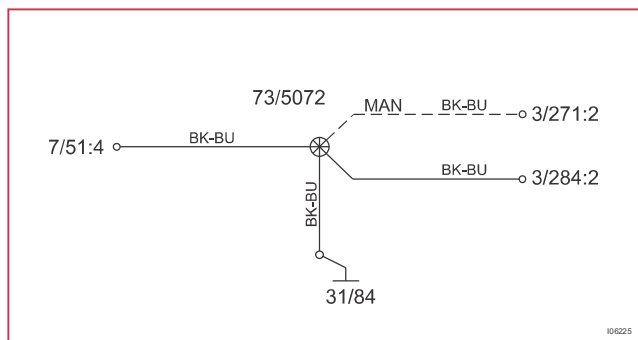

73/5067

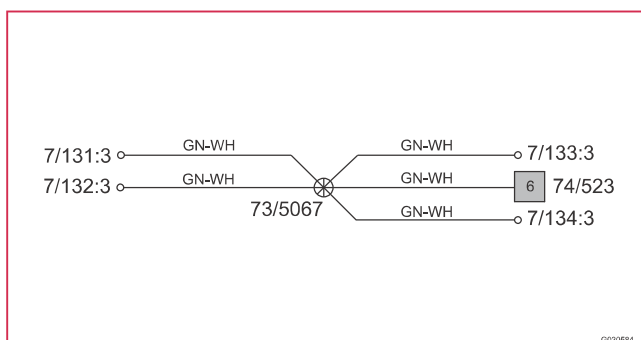


73/5075

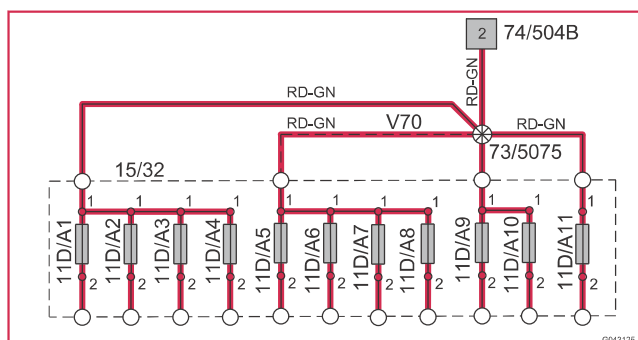


Branching points 73/5076 - 73/5117


73/5076

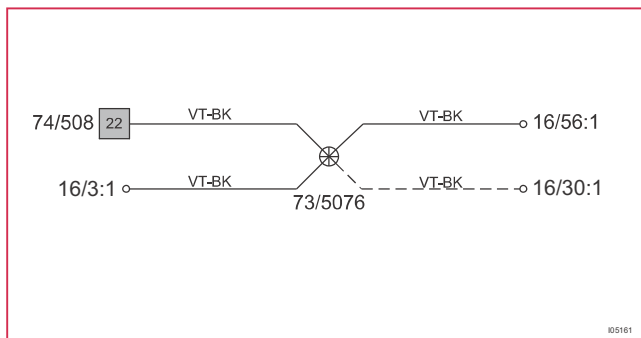


73/5085 V70

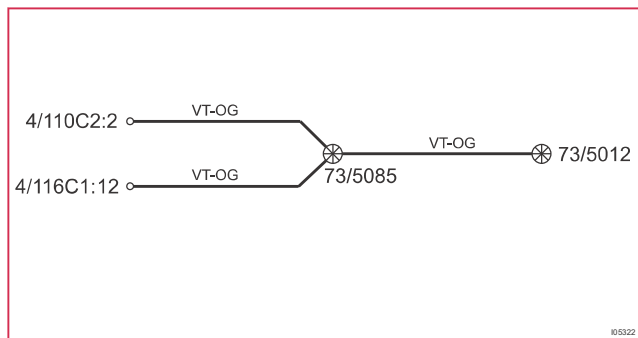


73/5077

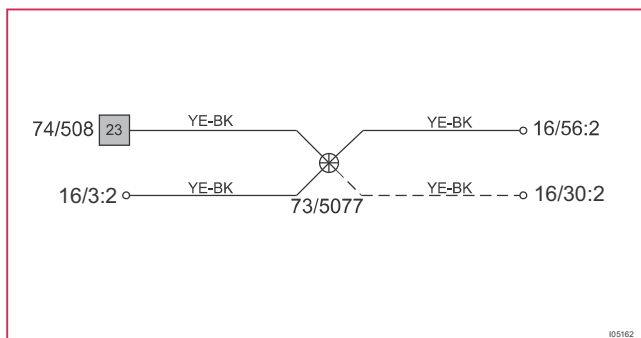


73/5089 V70

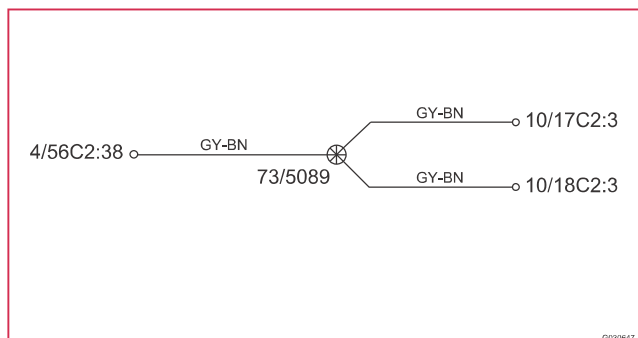


73/5078

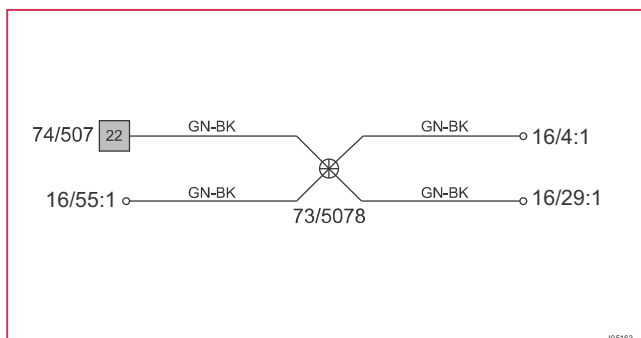


73/5091

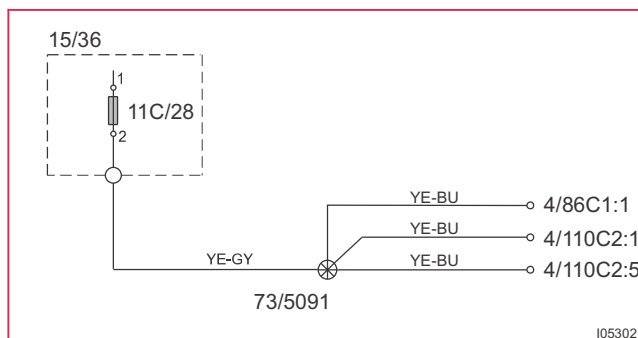


73/5079

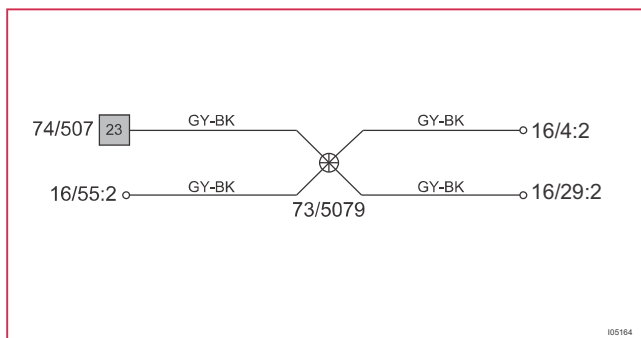


73/5105

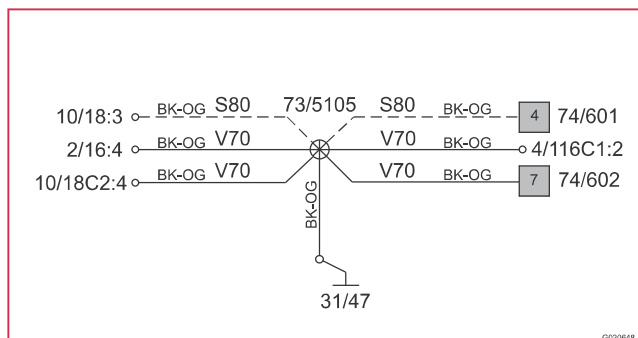

73/5084 V70

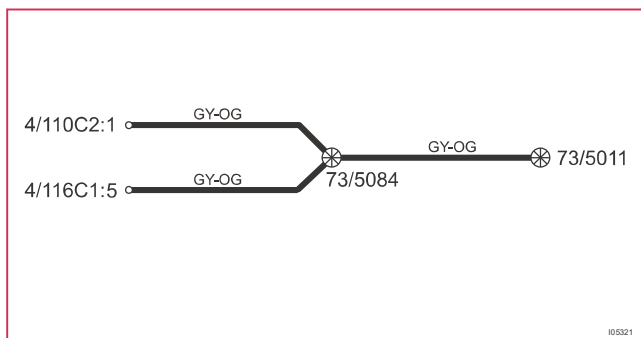


73/5117

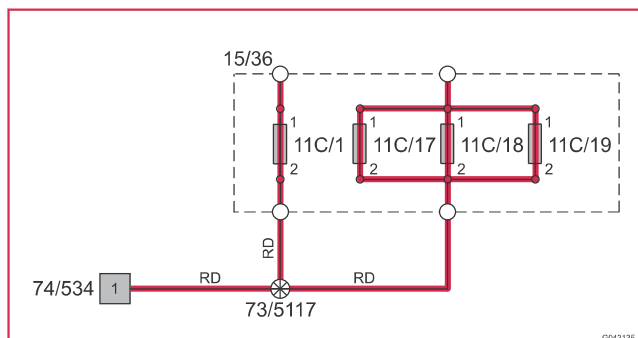


Branching points 73/5123 - 73/5155


73/5123

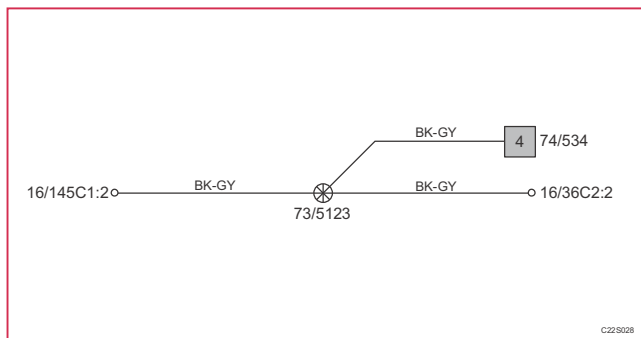


73/5131

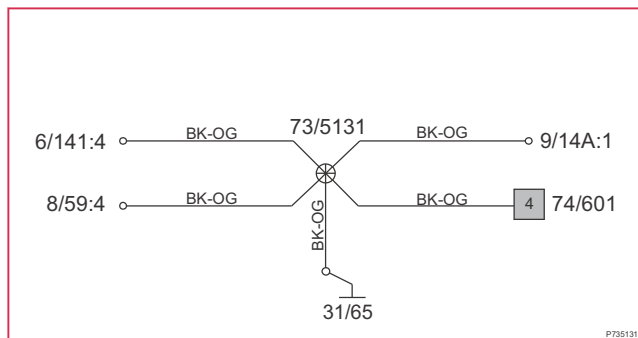


73/5124

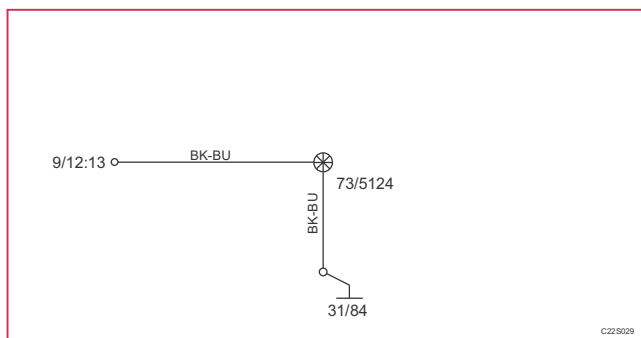


73/5132 LHD

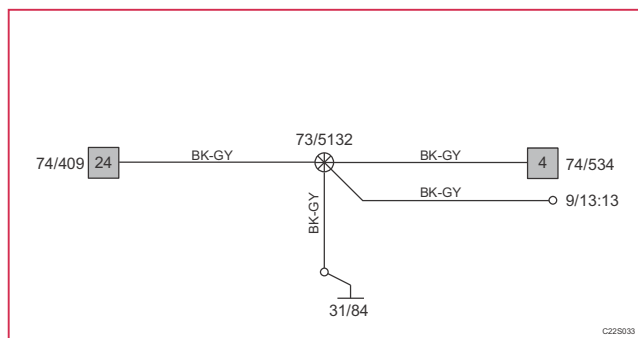


73/5125

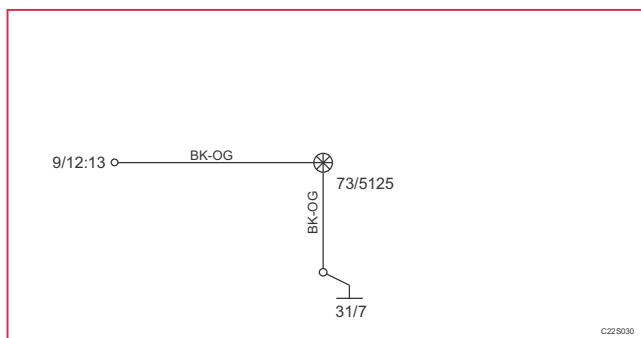


73/5132 RHD

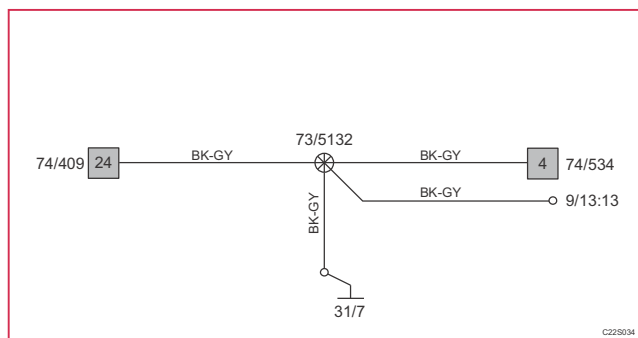


73/5126

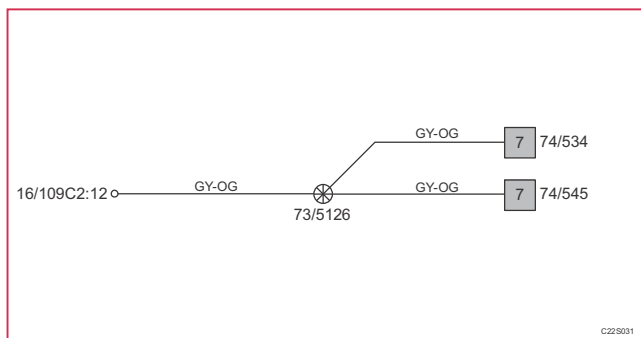


73/5154

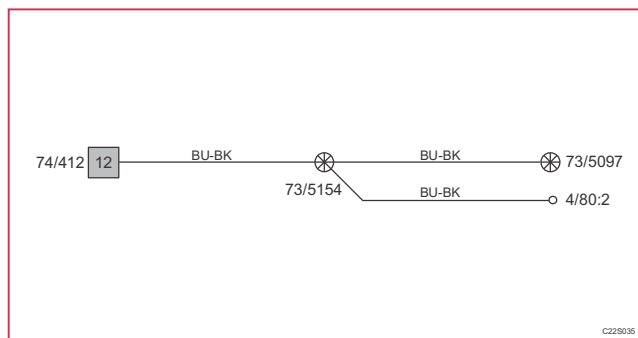

73/5127

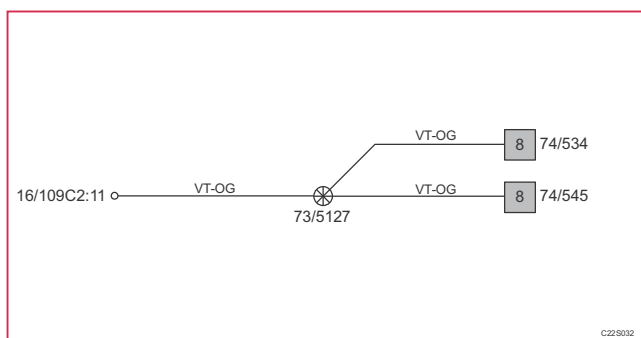


73/5155

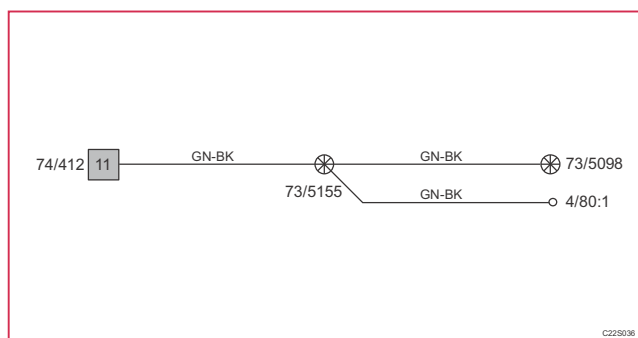


Branching points 73/5166 - 73/6004


73/5166

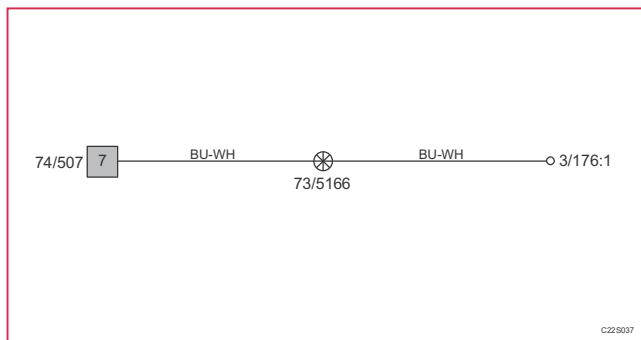


73/6004 V70

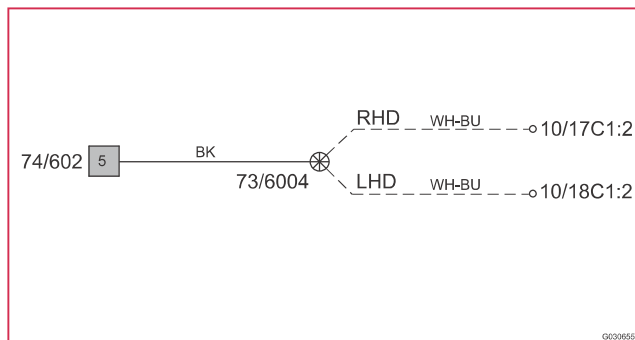


73/5189

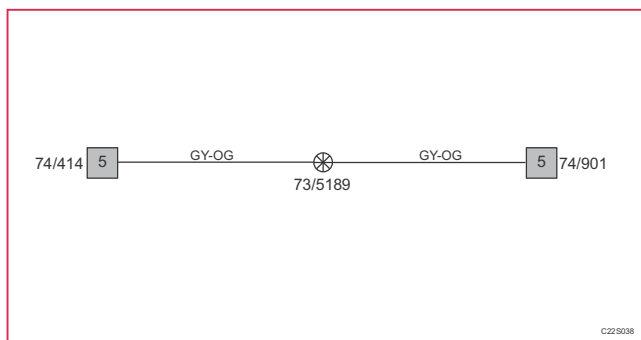


73/6001 V70

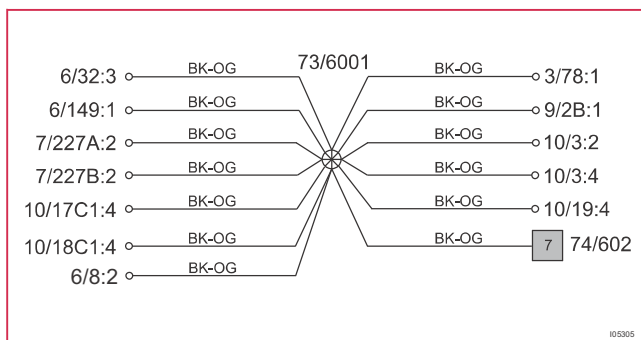

73/6002 V70

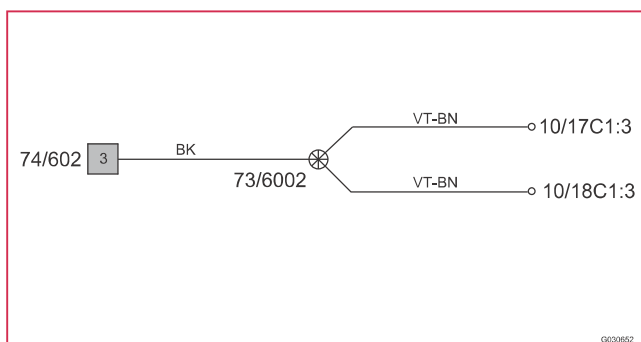

73/6003 V70

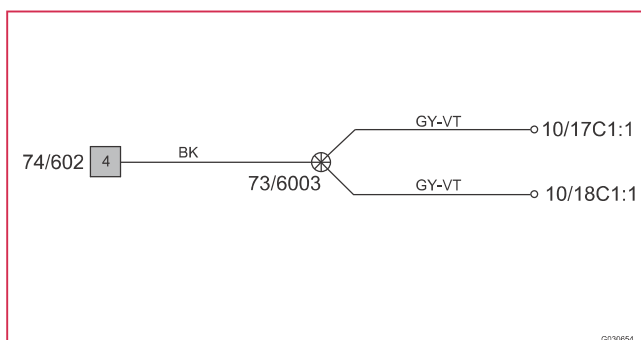


Cable harness routing in vehicle Harness engine 4-Cyl. Turbo




105127

Cable harness routing in vehicle Engine harness, 5-Cyl. Turbo

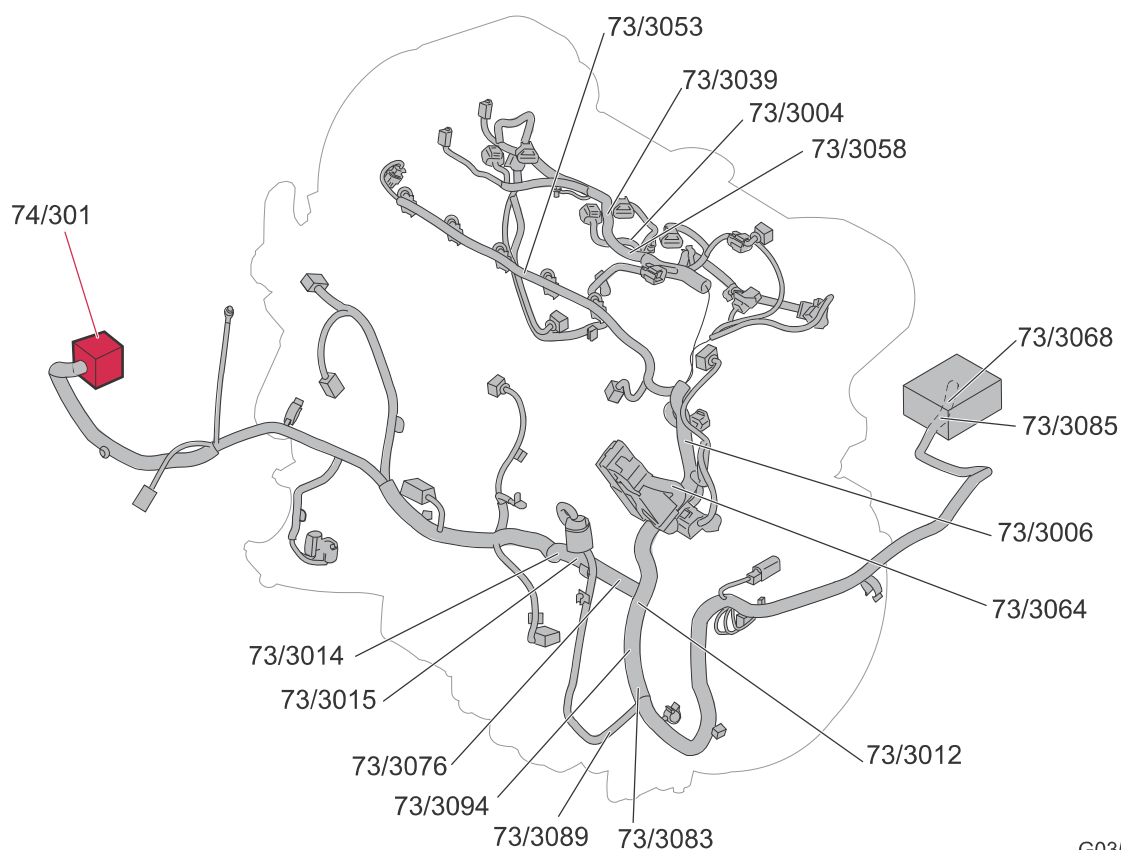


G035645

Cable harness routing in vehicle Engine harness, 6-Cyl.

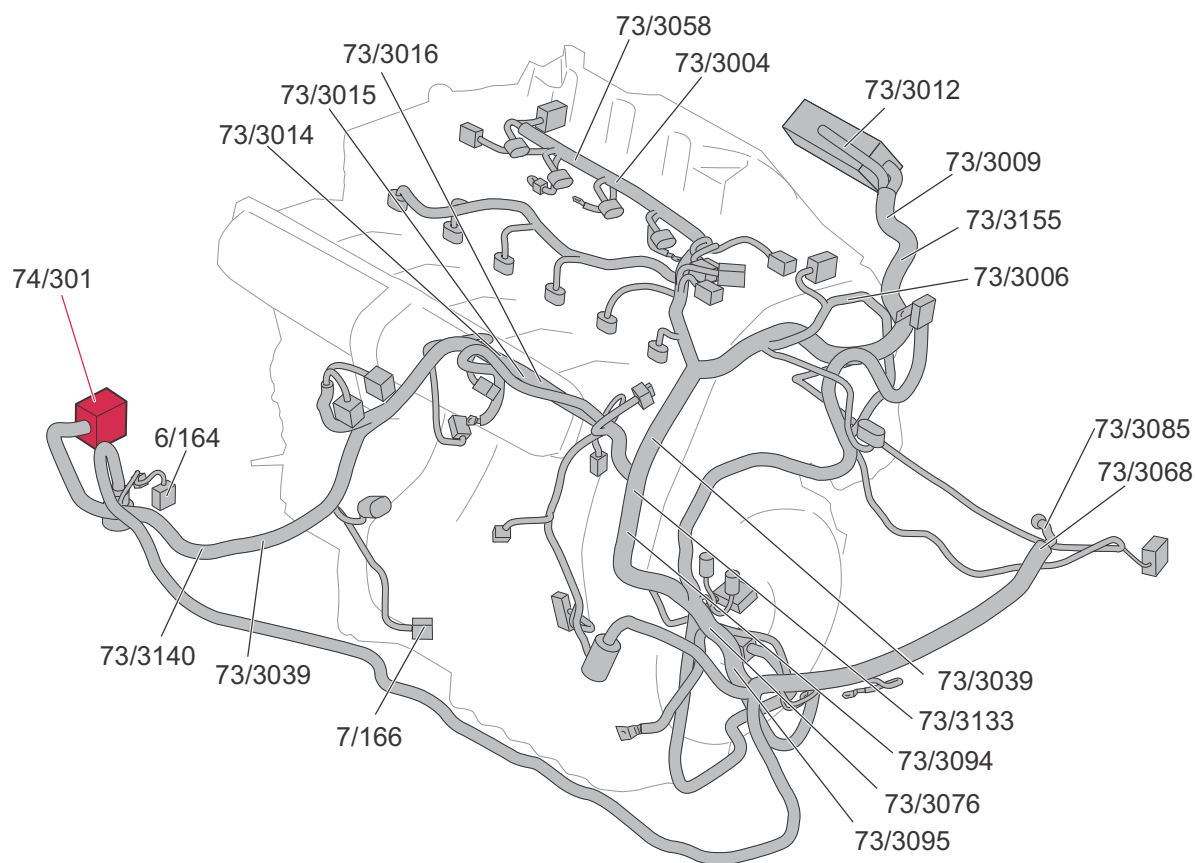


105129

Cable harness routing in vehicle Harness engine, 6-Cyl. Turbo

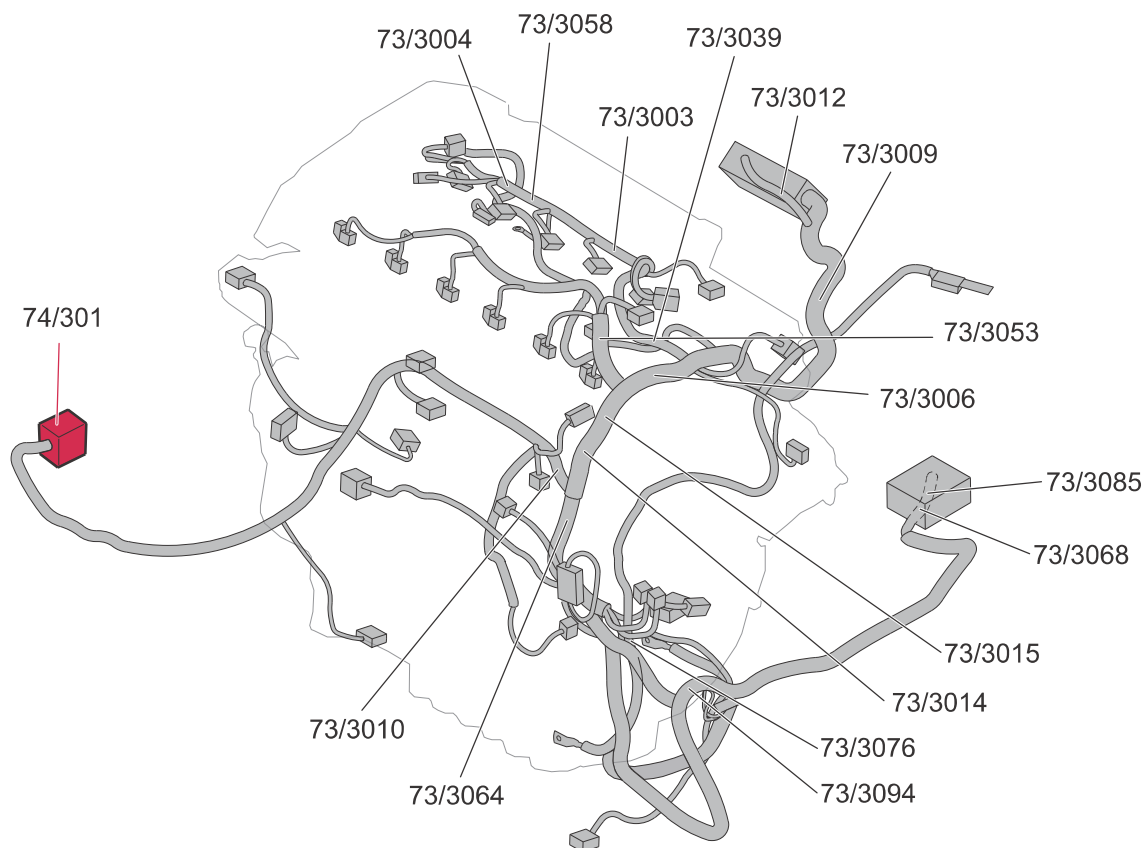

G025282

Cable harness routing in vehicle Harness engine, 2.0l Diesel

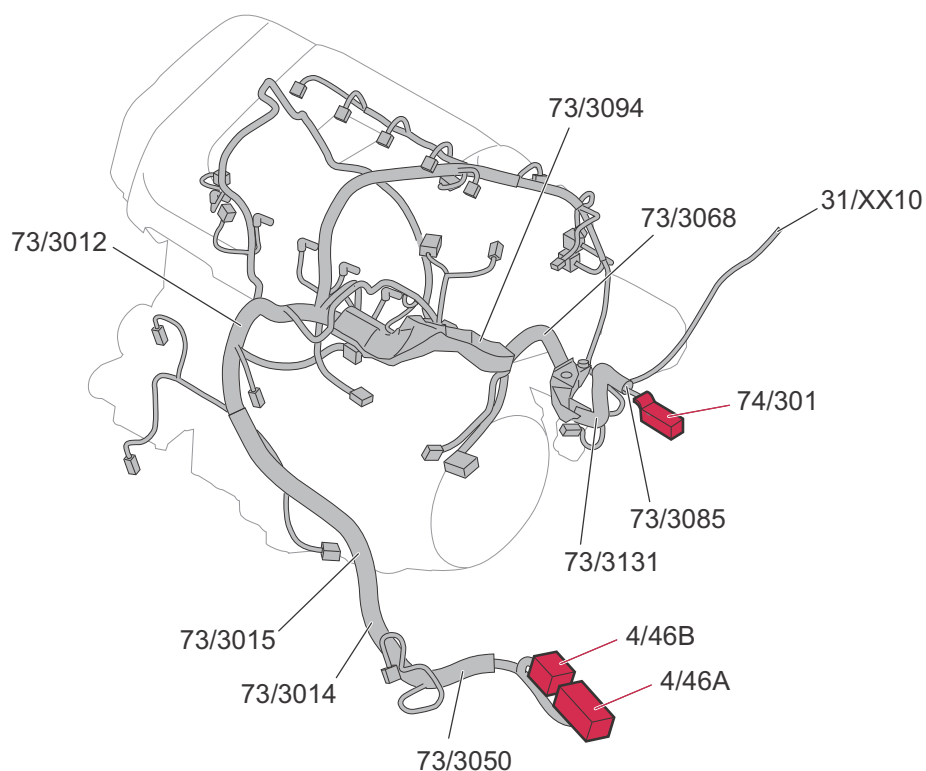


105209

Cable harness routing in vehicle Harness engine, 2.4l Diesel




G041947

Cable harness routing in vehicle
Engine compartment harness LHD

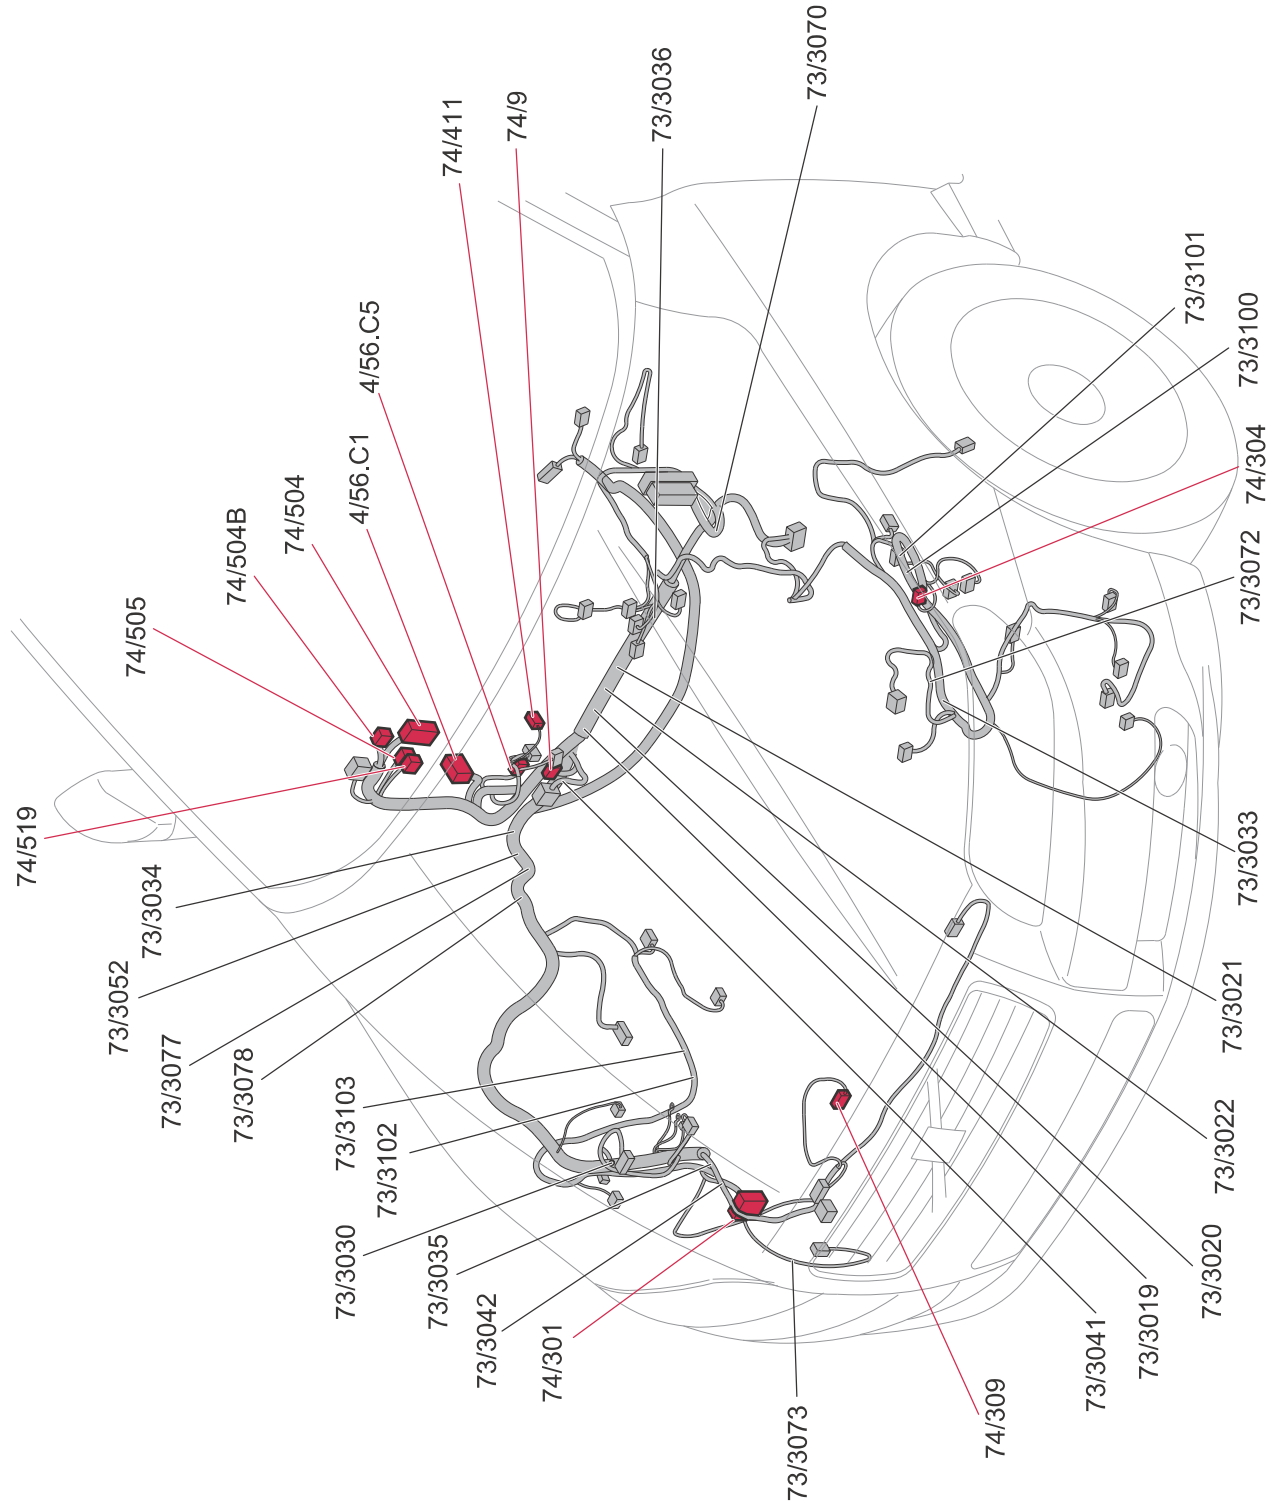


G036198

Cable harness routing in vehicle
Engine compartment harness RHD

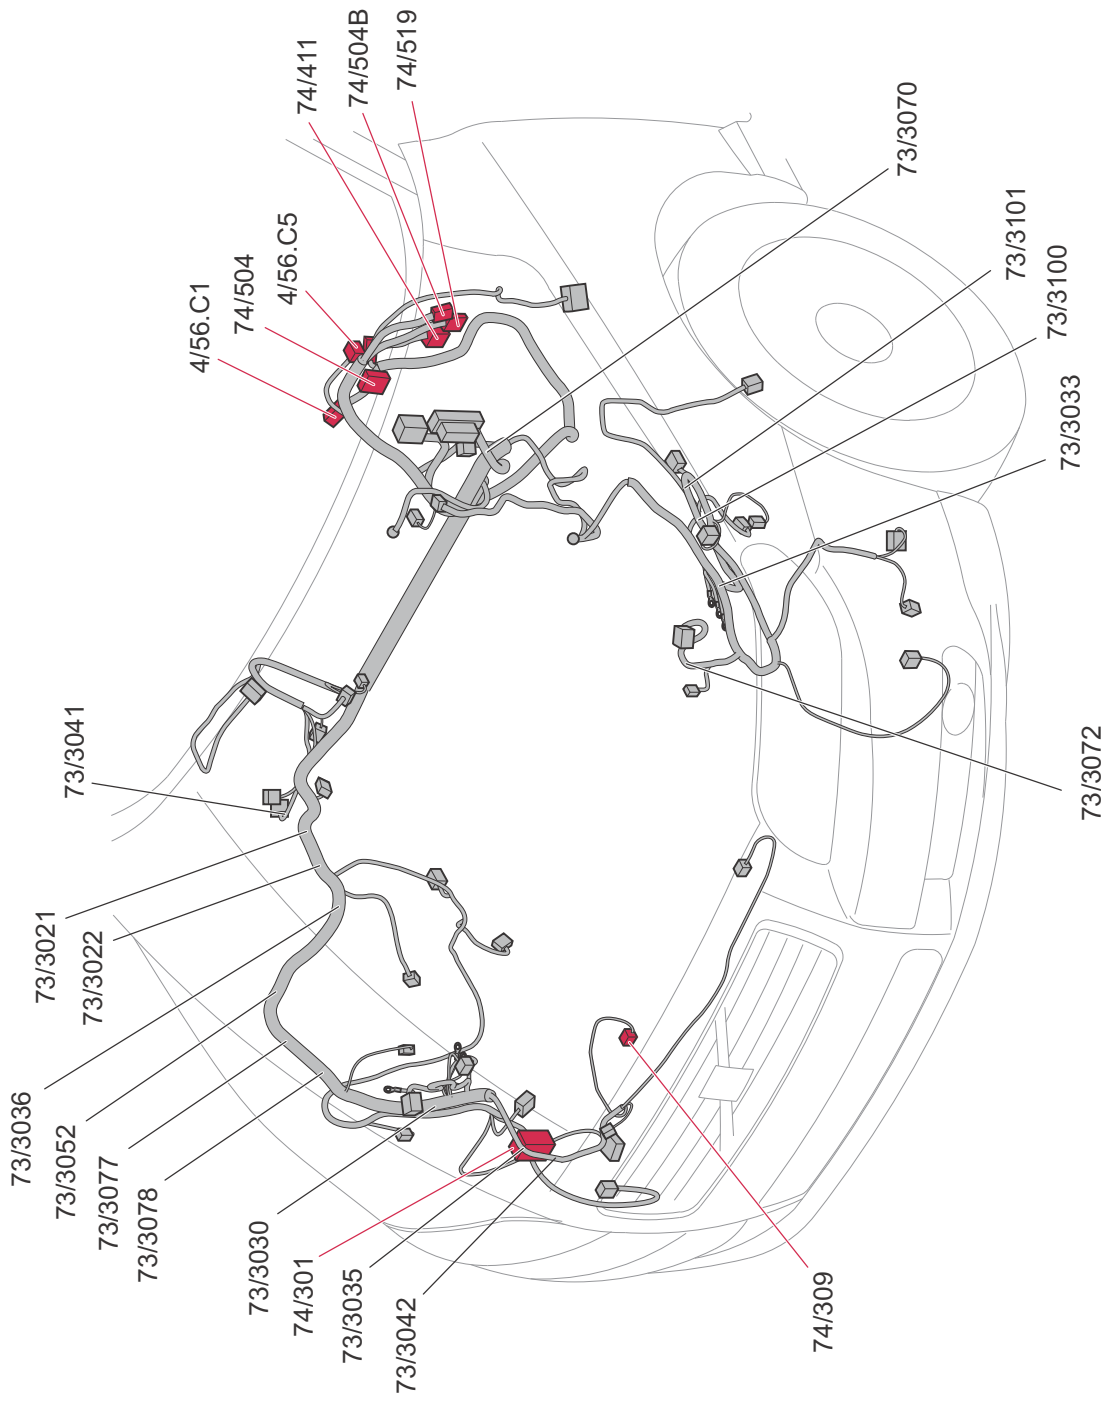


Cable harness routing in vehicle
Harness dashboard, LHD

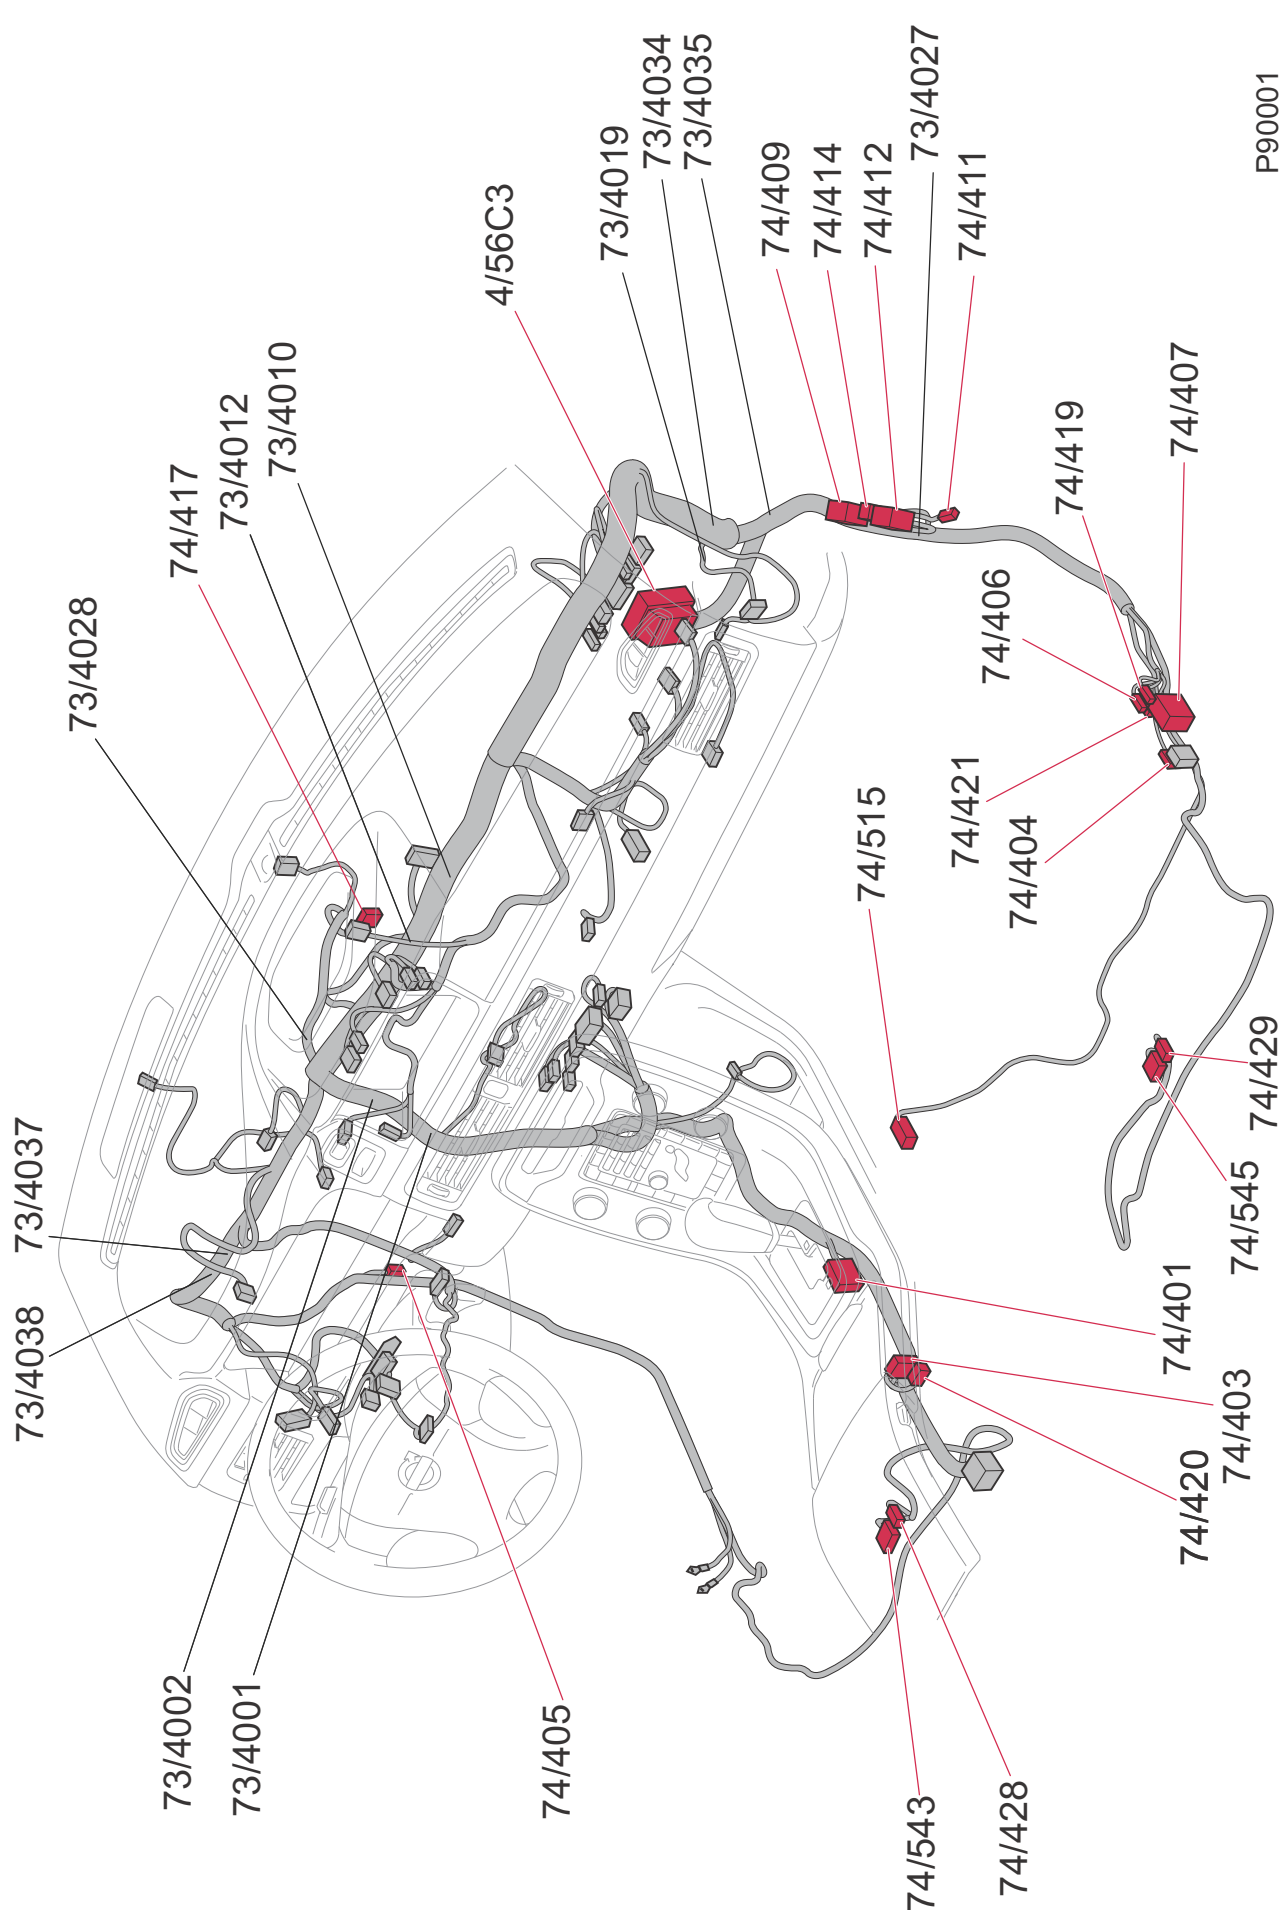


P90001

Cable harness routing in vehicle
Harness Dashboard, RHD

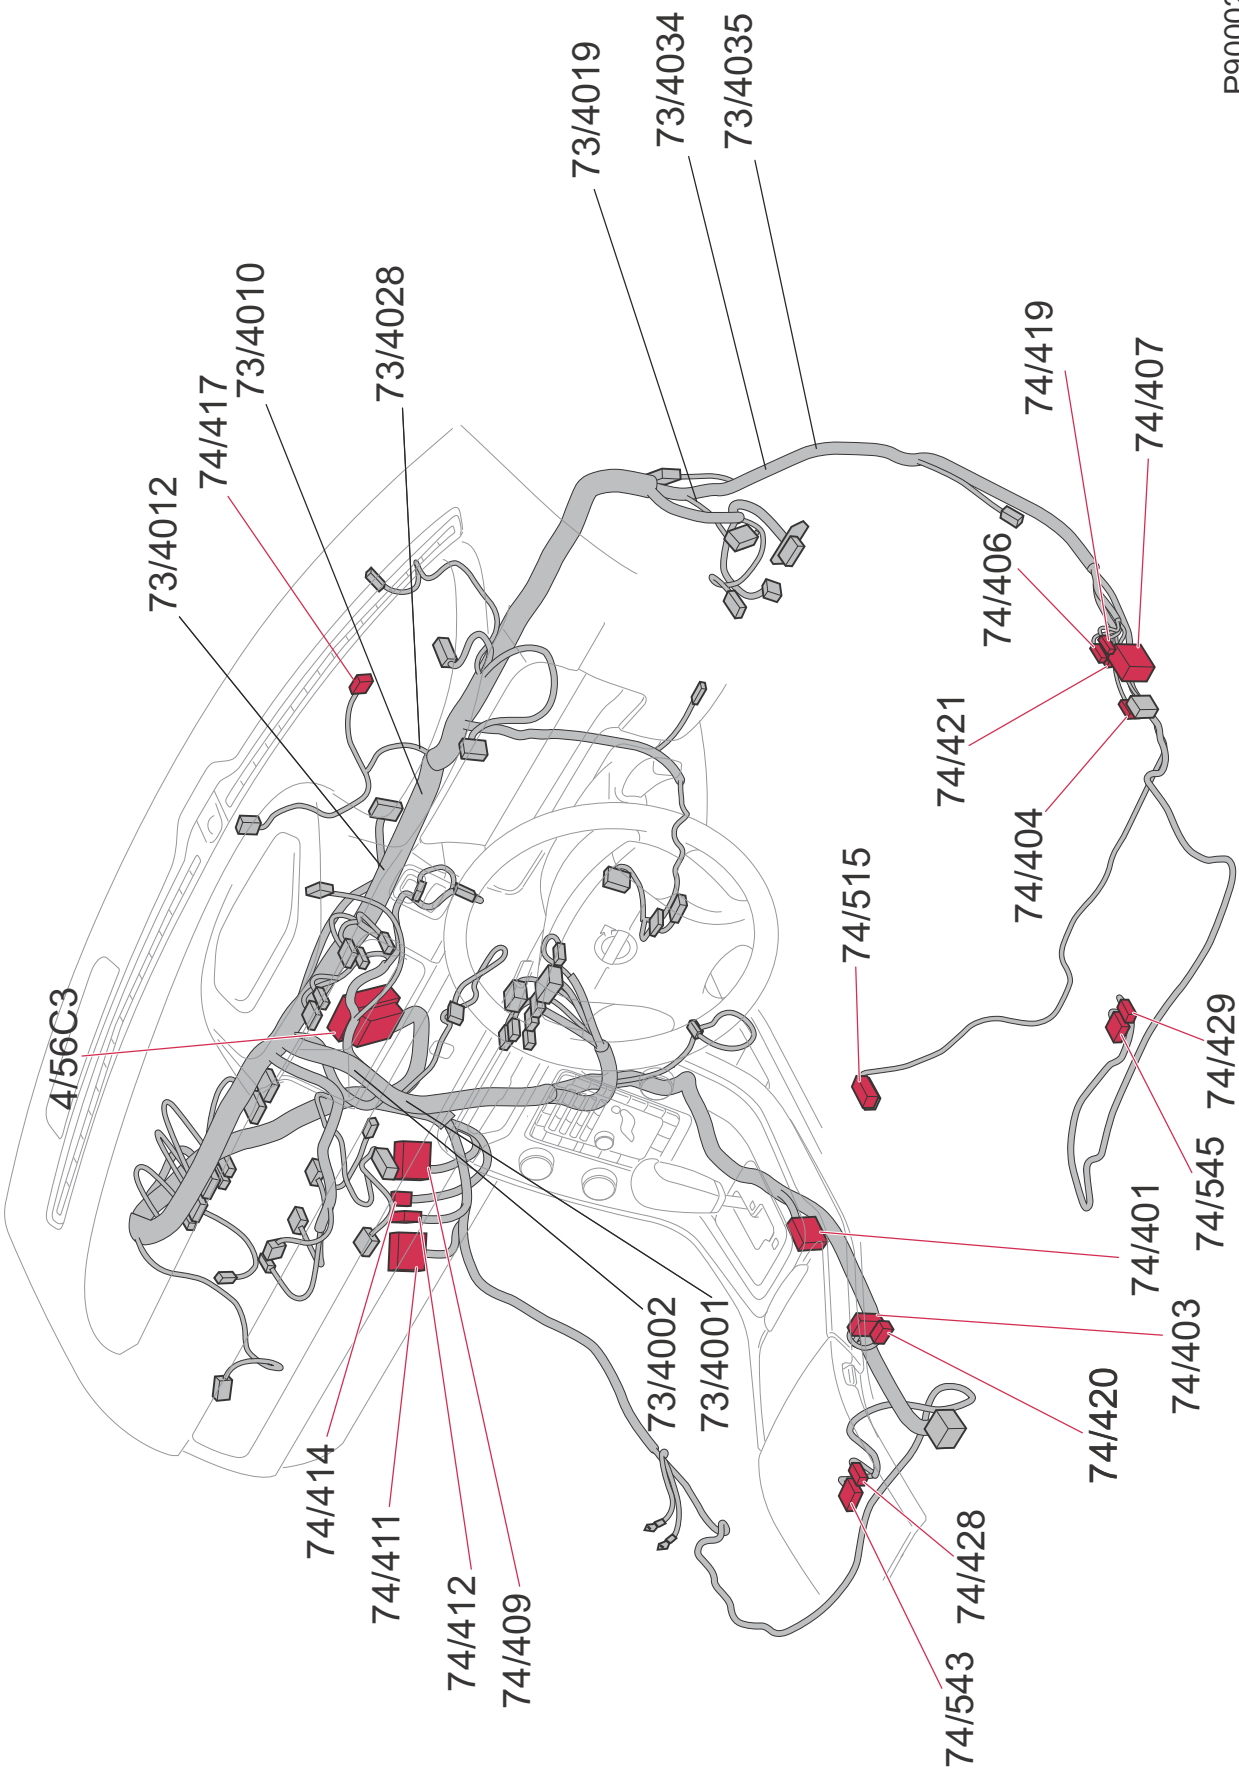


P90002


Cable harness routing in vehicle Harness Floor, LHD S80

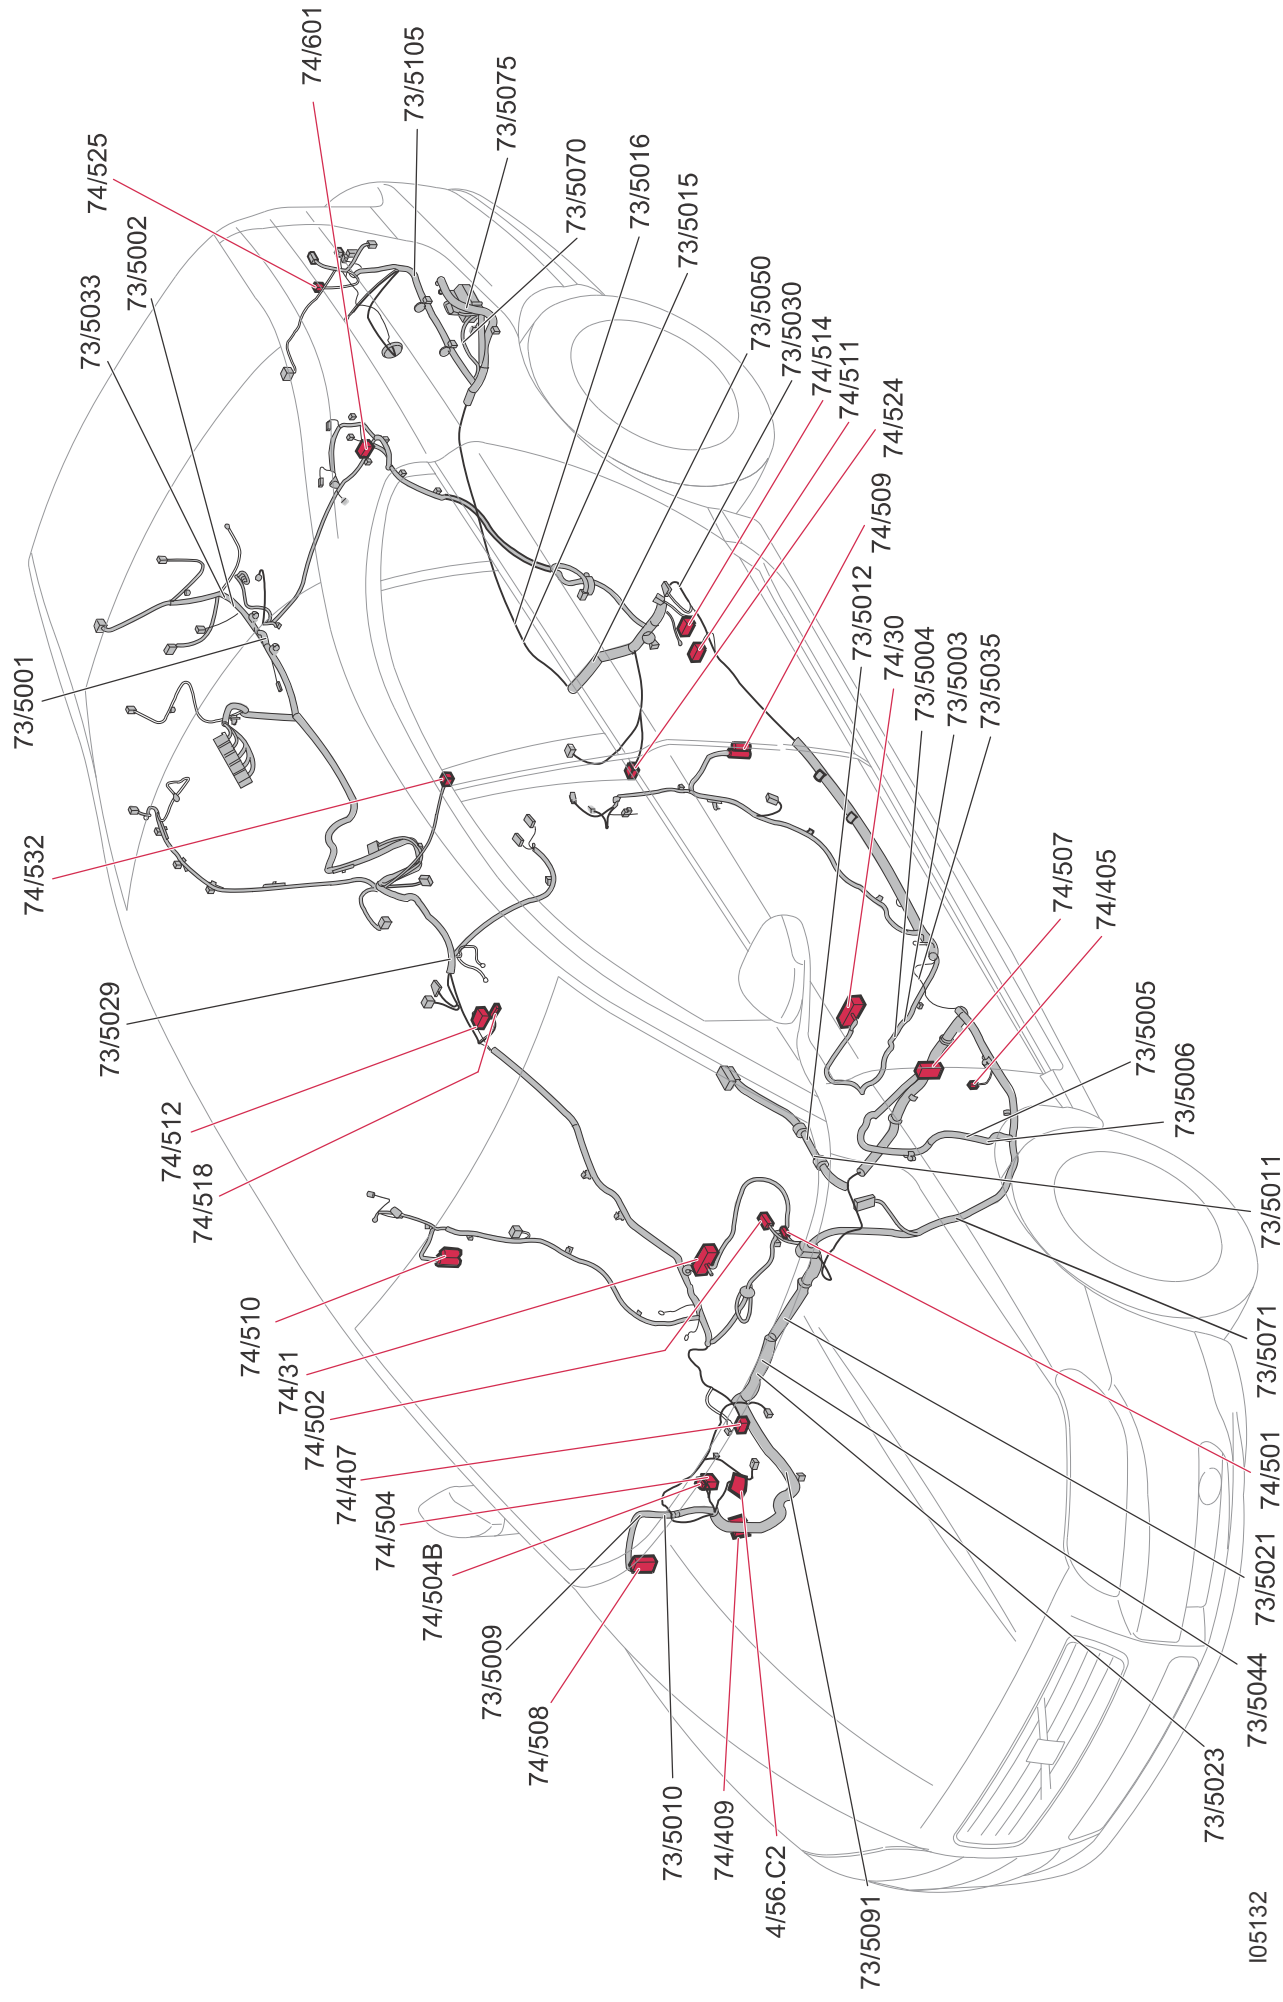

Cable harness routing in vehicle Harness Floor, RHD S80

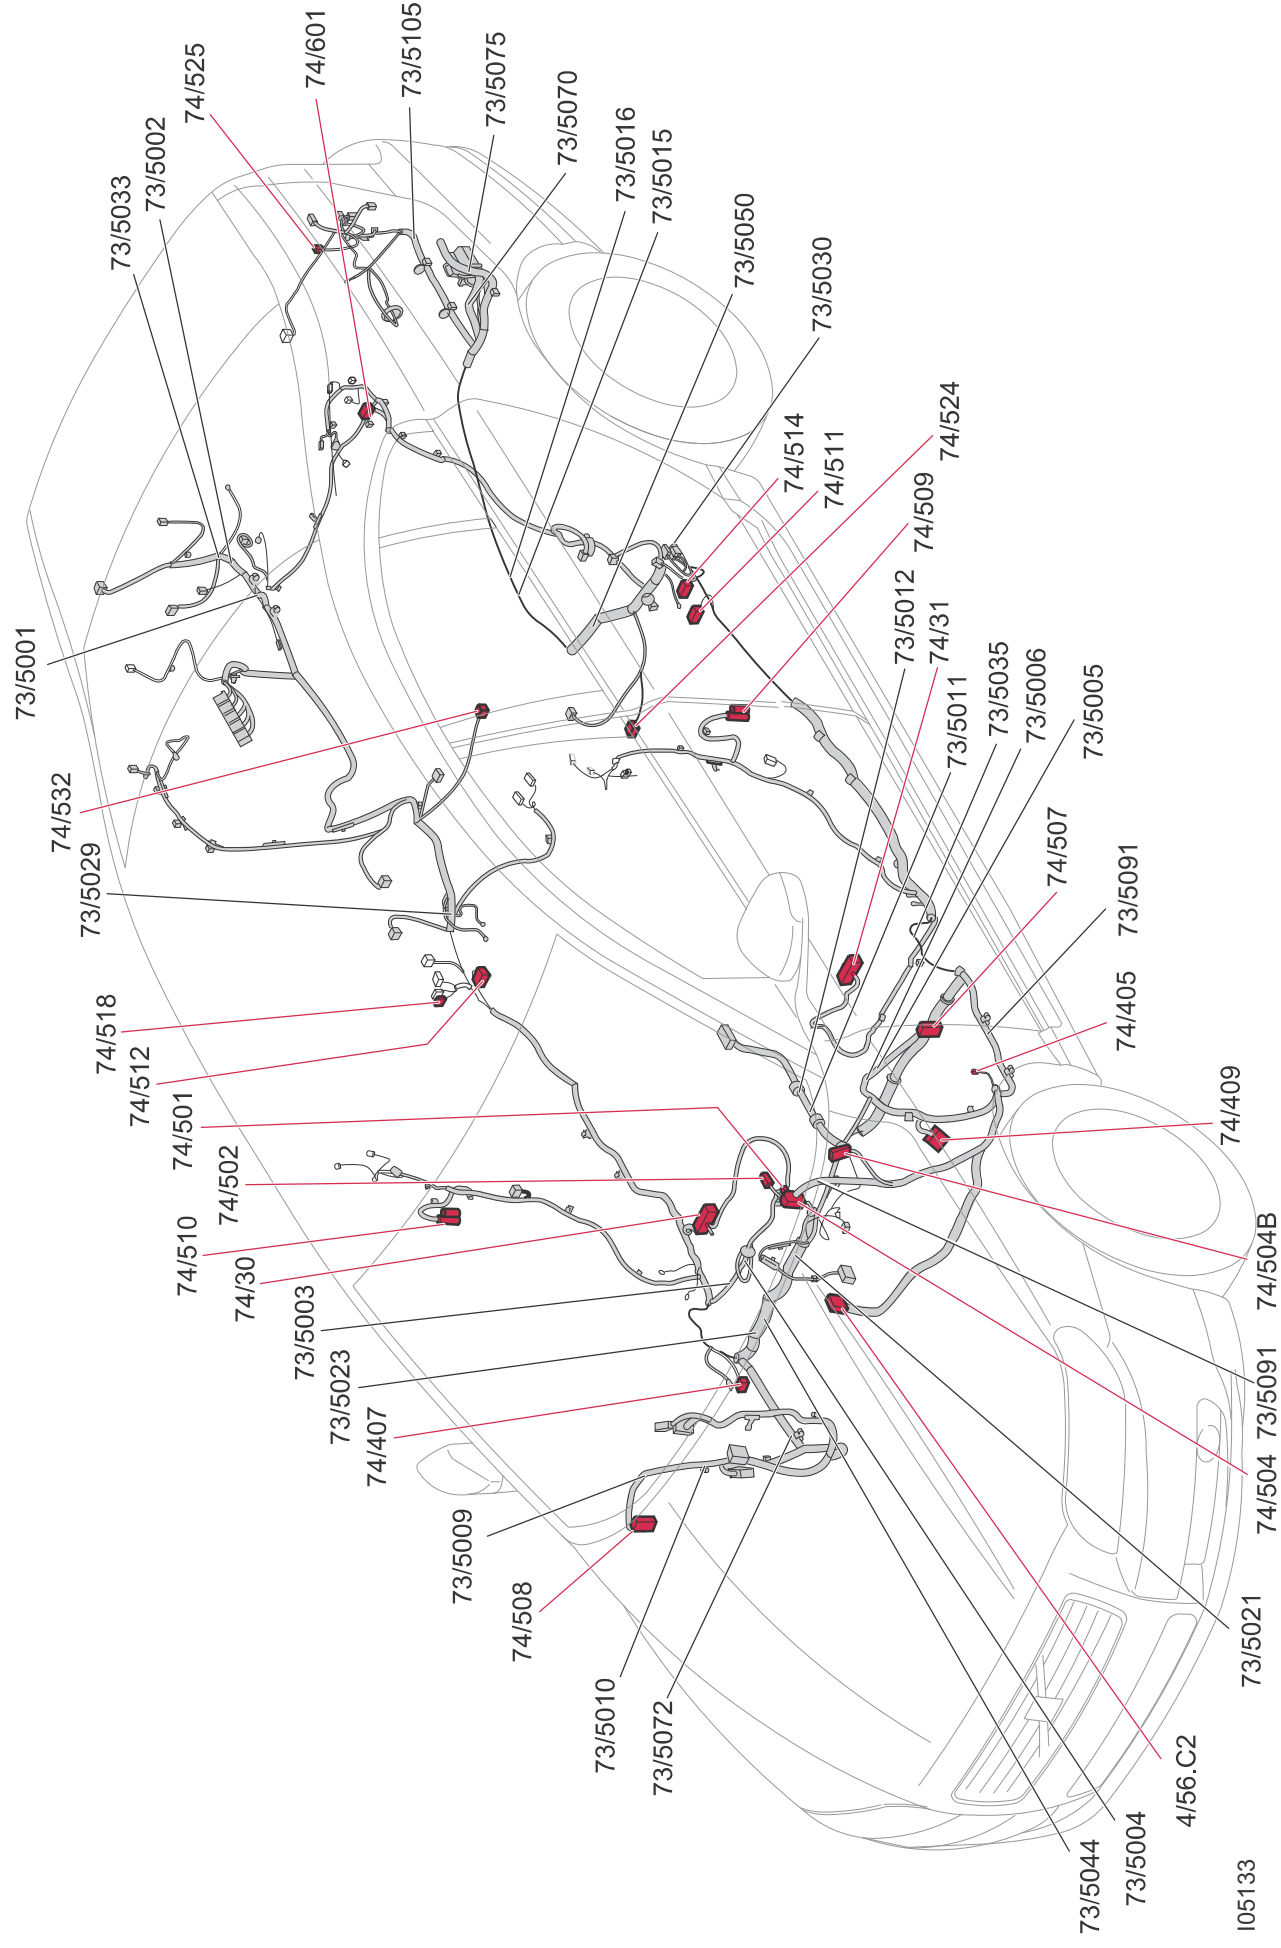

Cable harness routing in vehicle Harness Floor, LHD V70

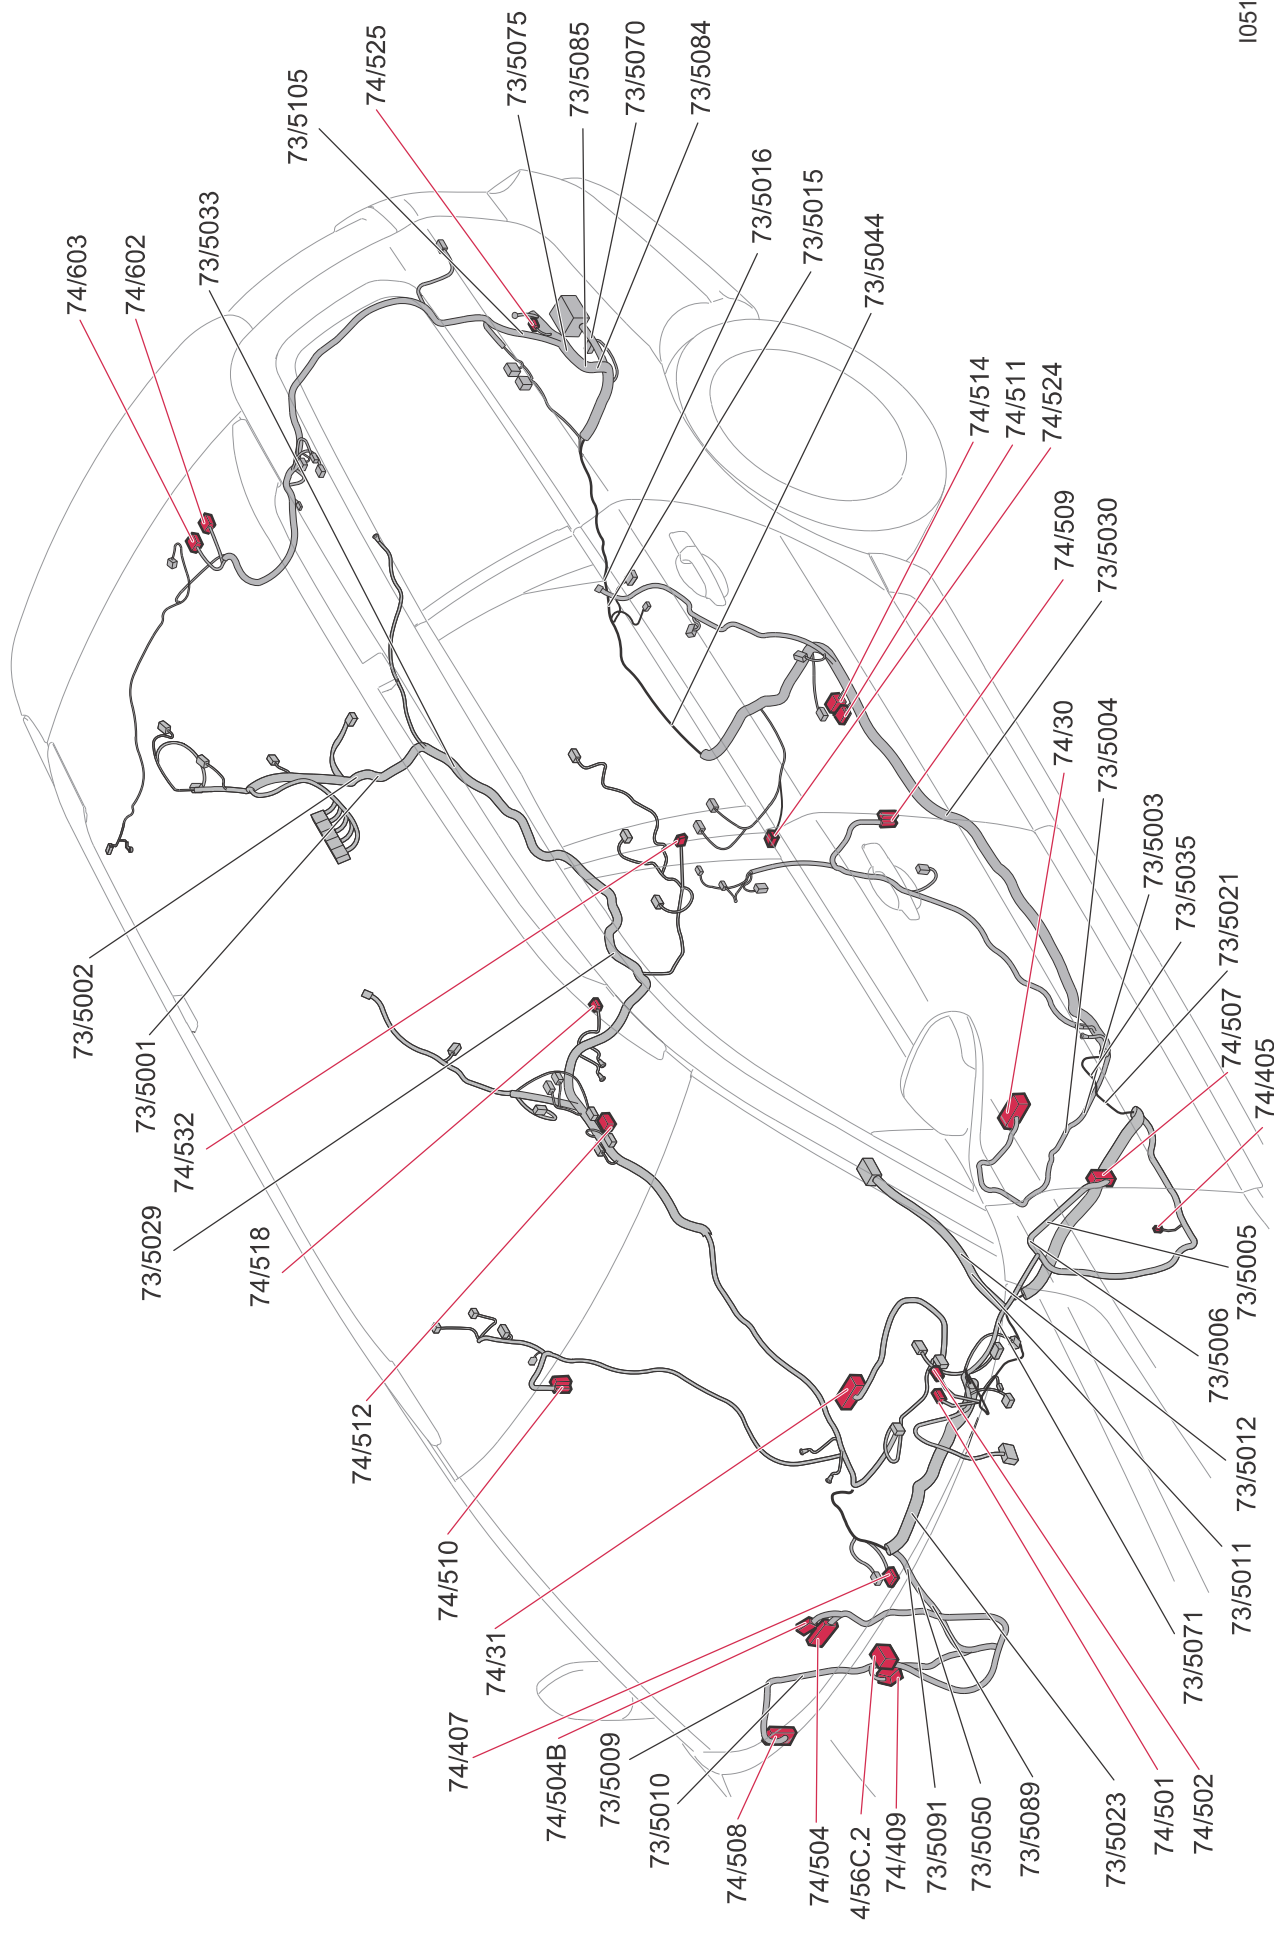


TP 39256202 XC70(08-) & S80(07-) 2013

281


105134

Cable harness routing in vehicle
Harness Floor, RHD V70

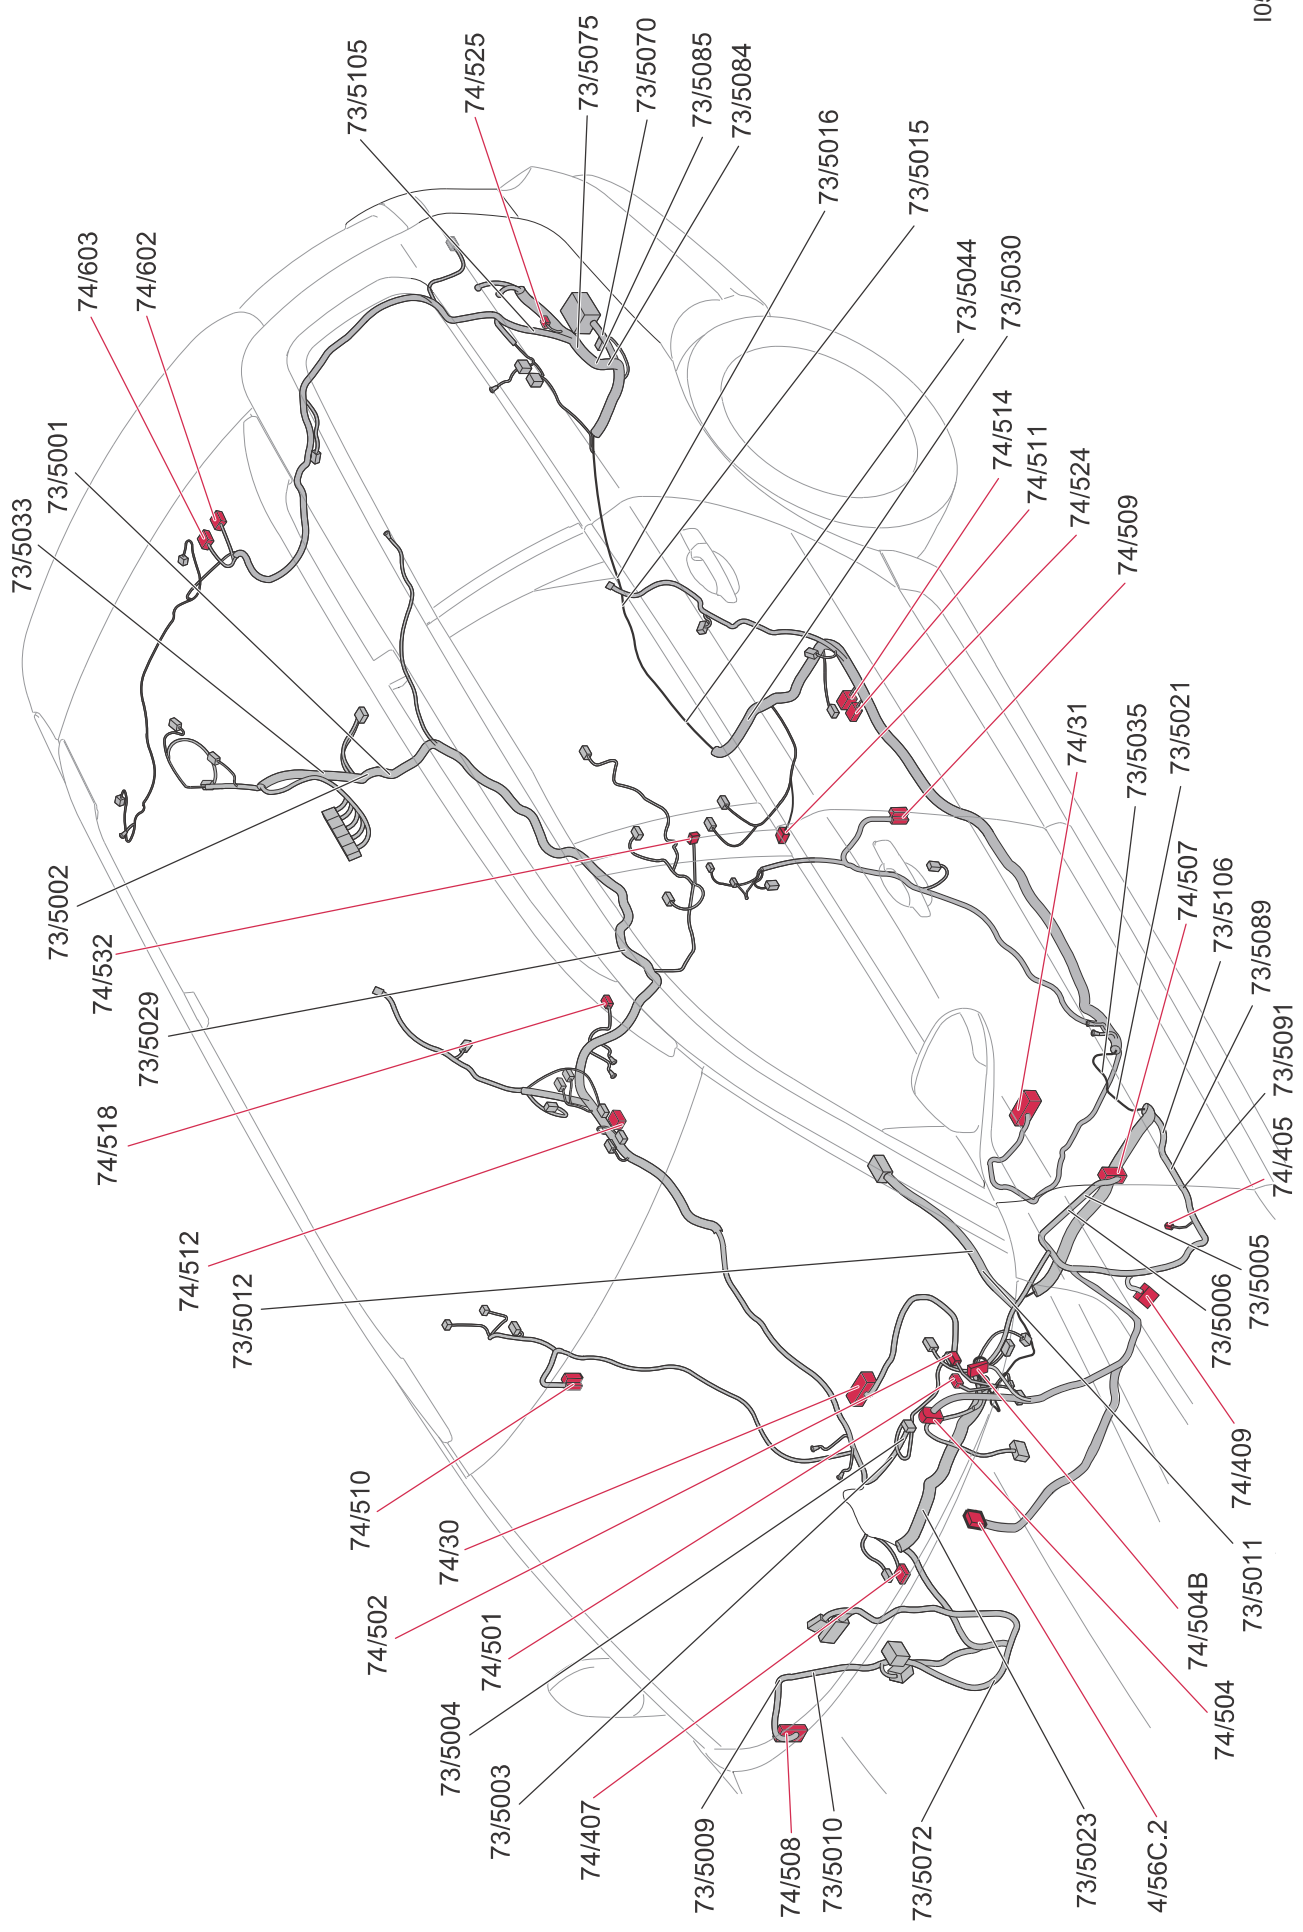


105135

Cable harness routing in vehicle
Harness infotainment, LHD S80

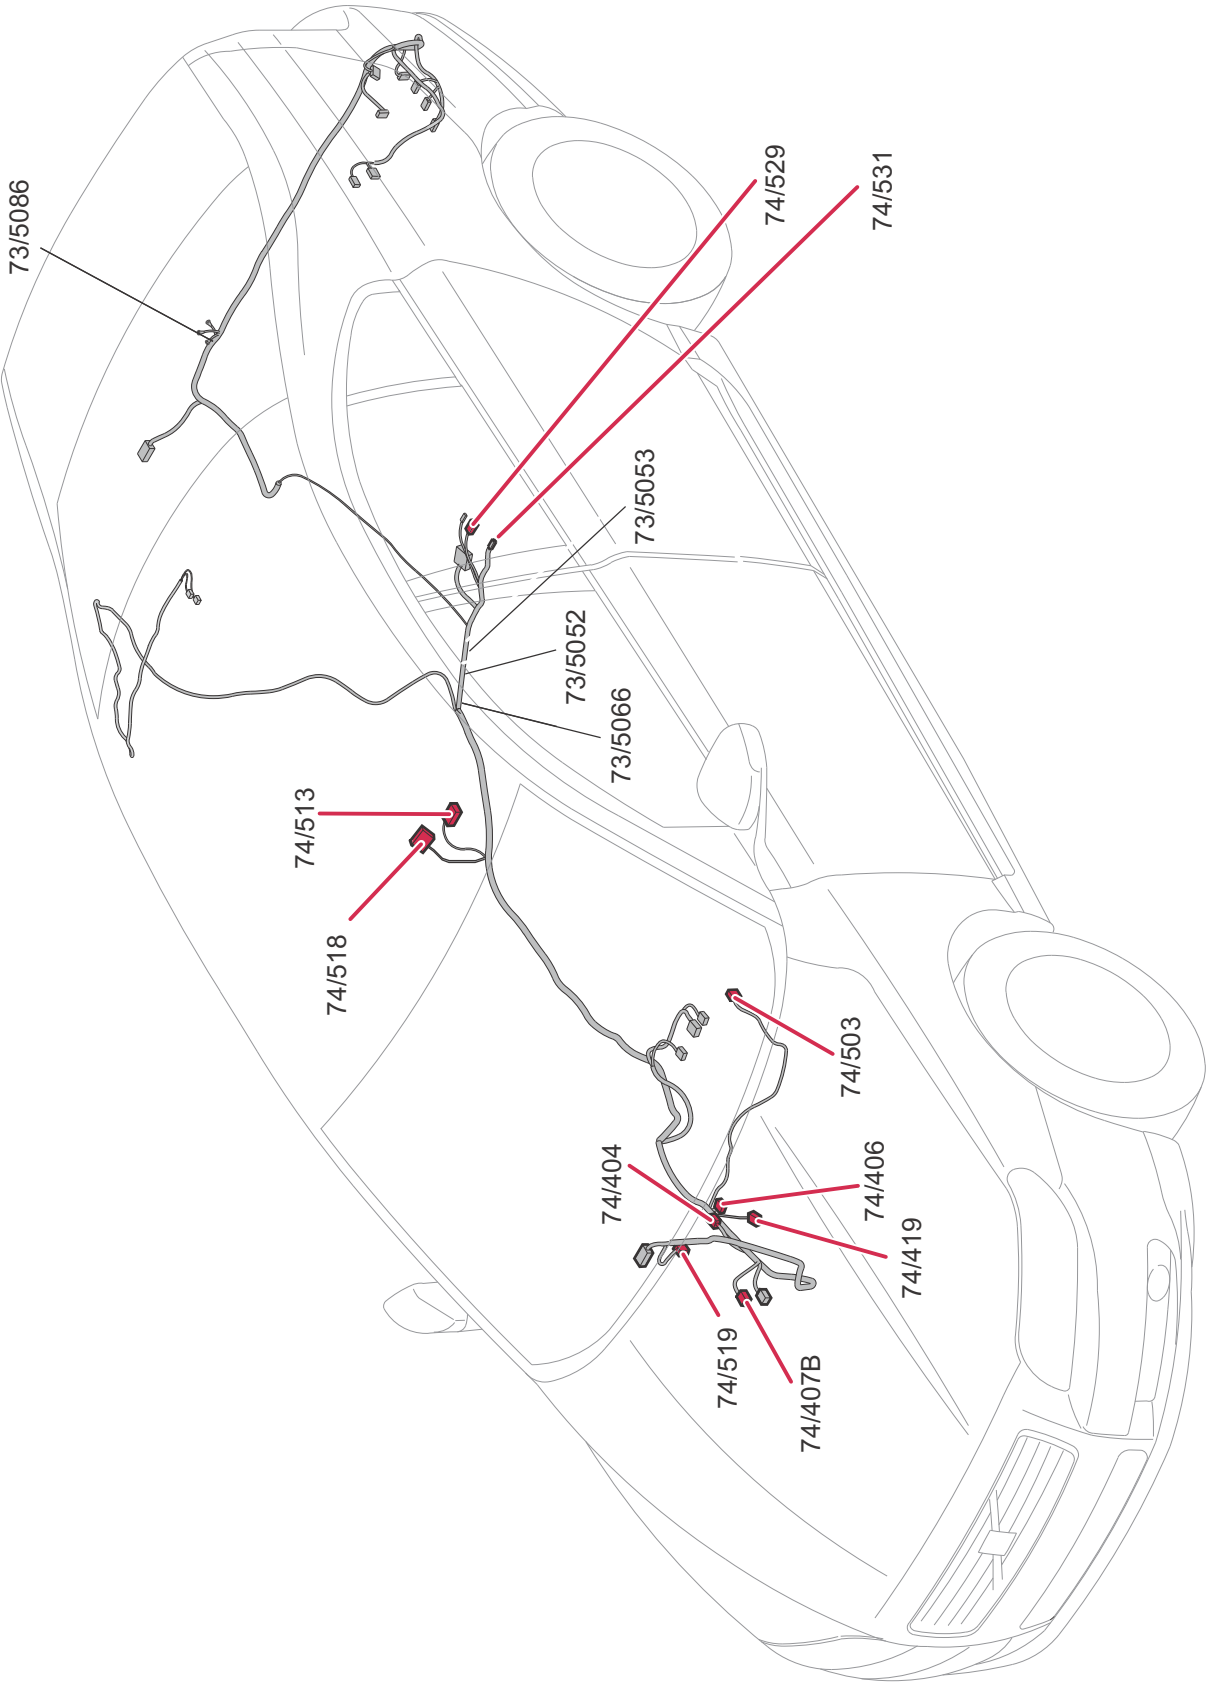


105203

Cable harness routing in vehicle
Harness infotainment, RHD S80

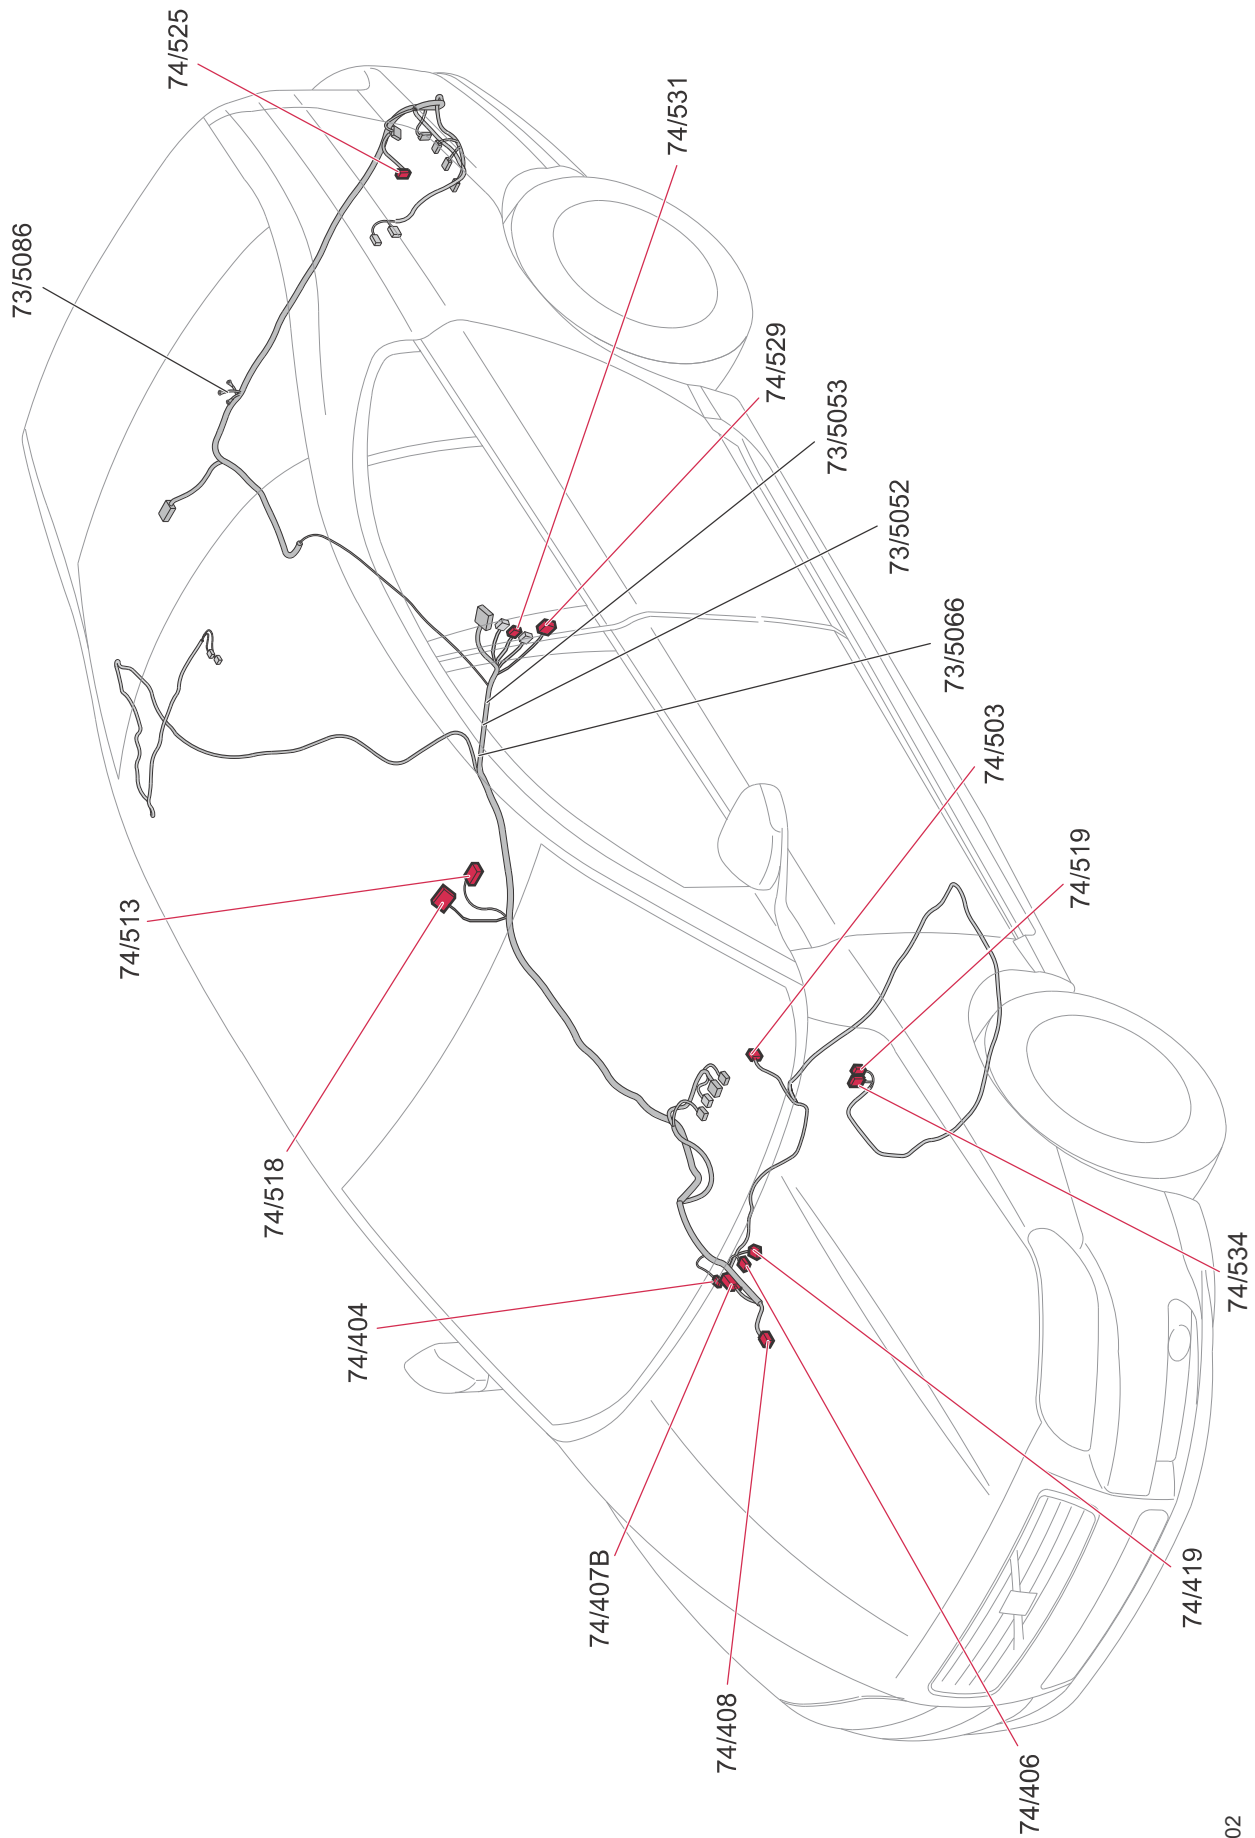


105202

Cable harness routing in vehicle
Harness infotainment, LHD V70

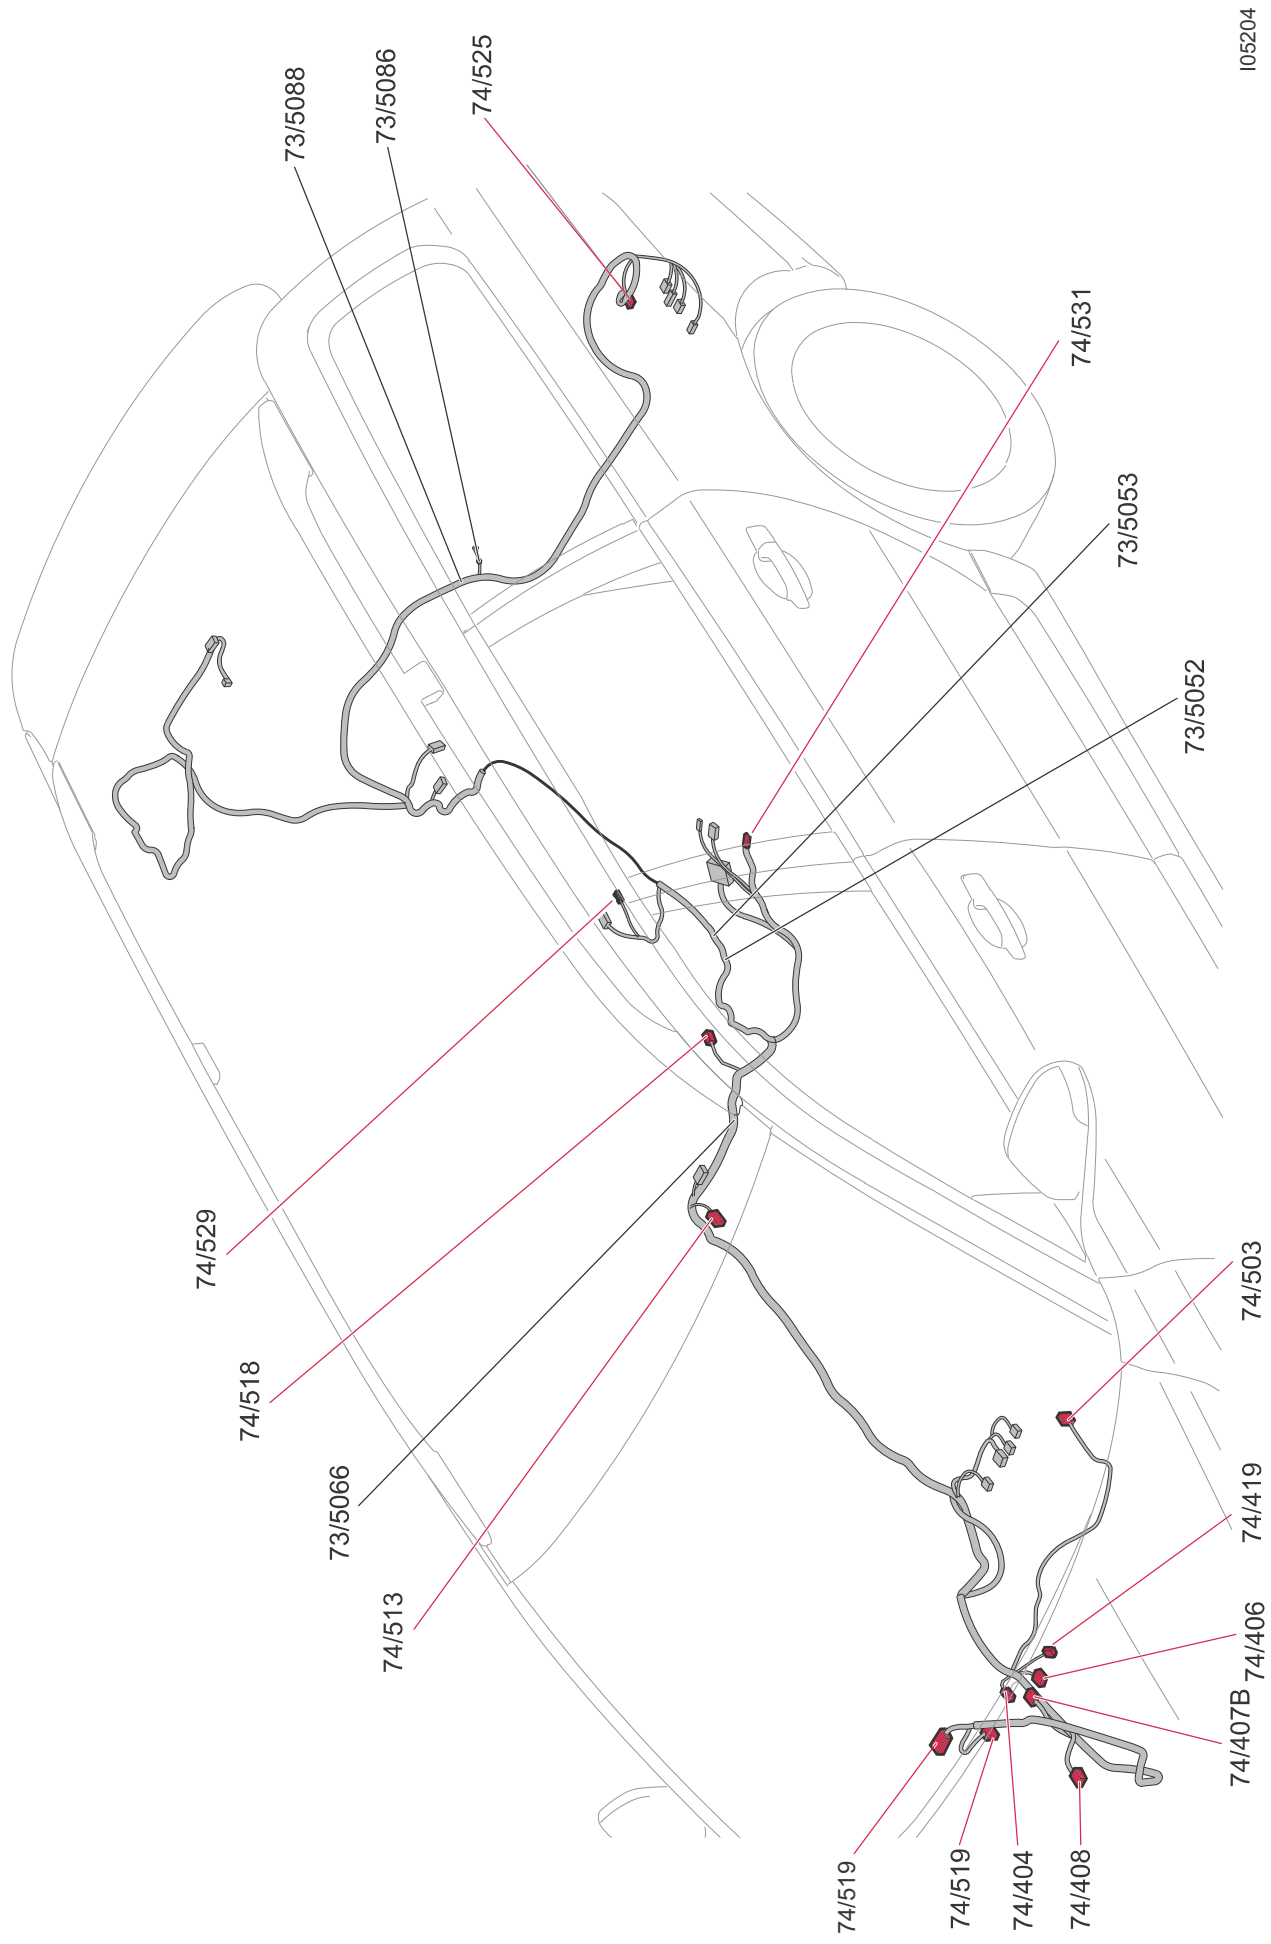


Cable harness routing in vehicle
Harness infotainment, RHD V70

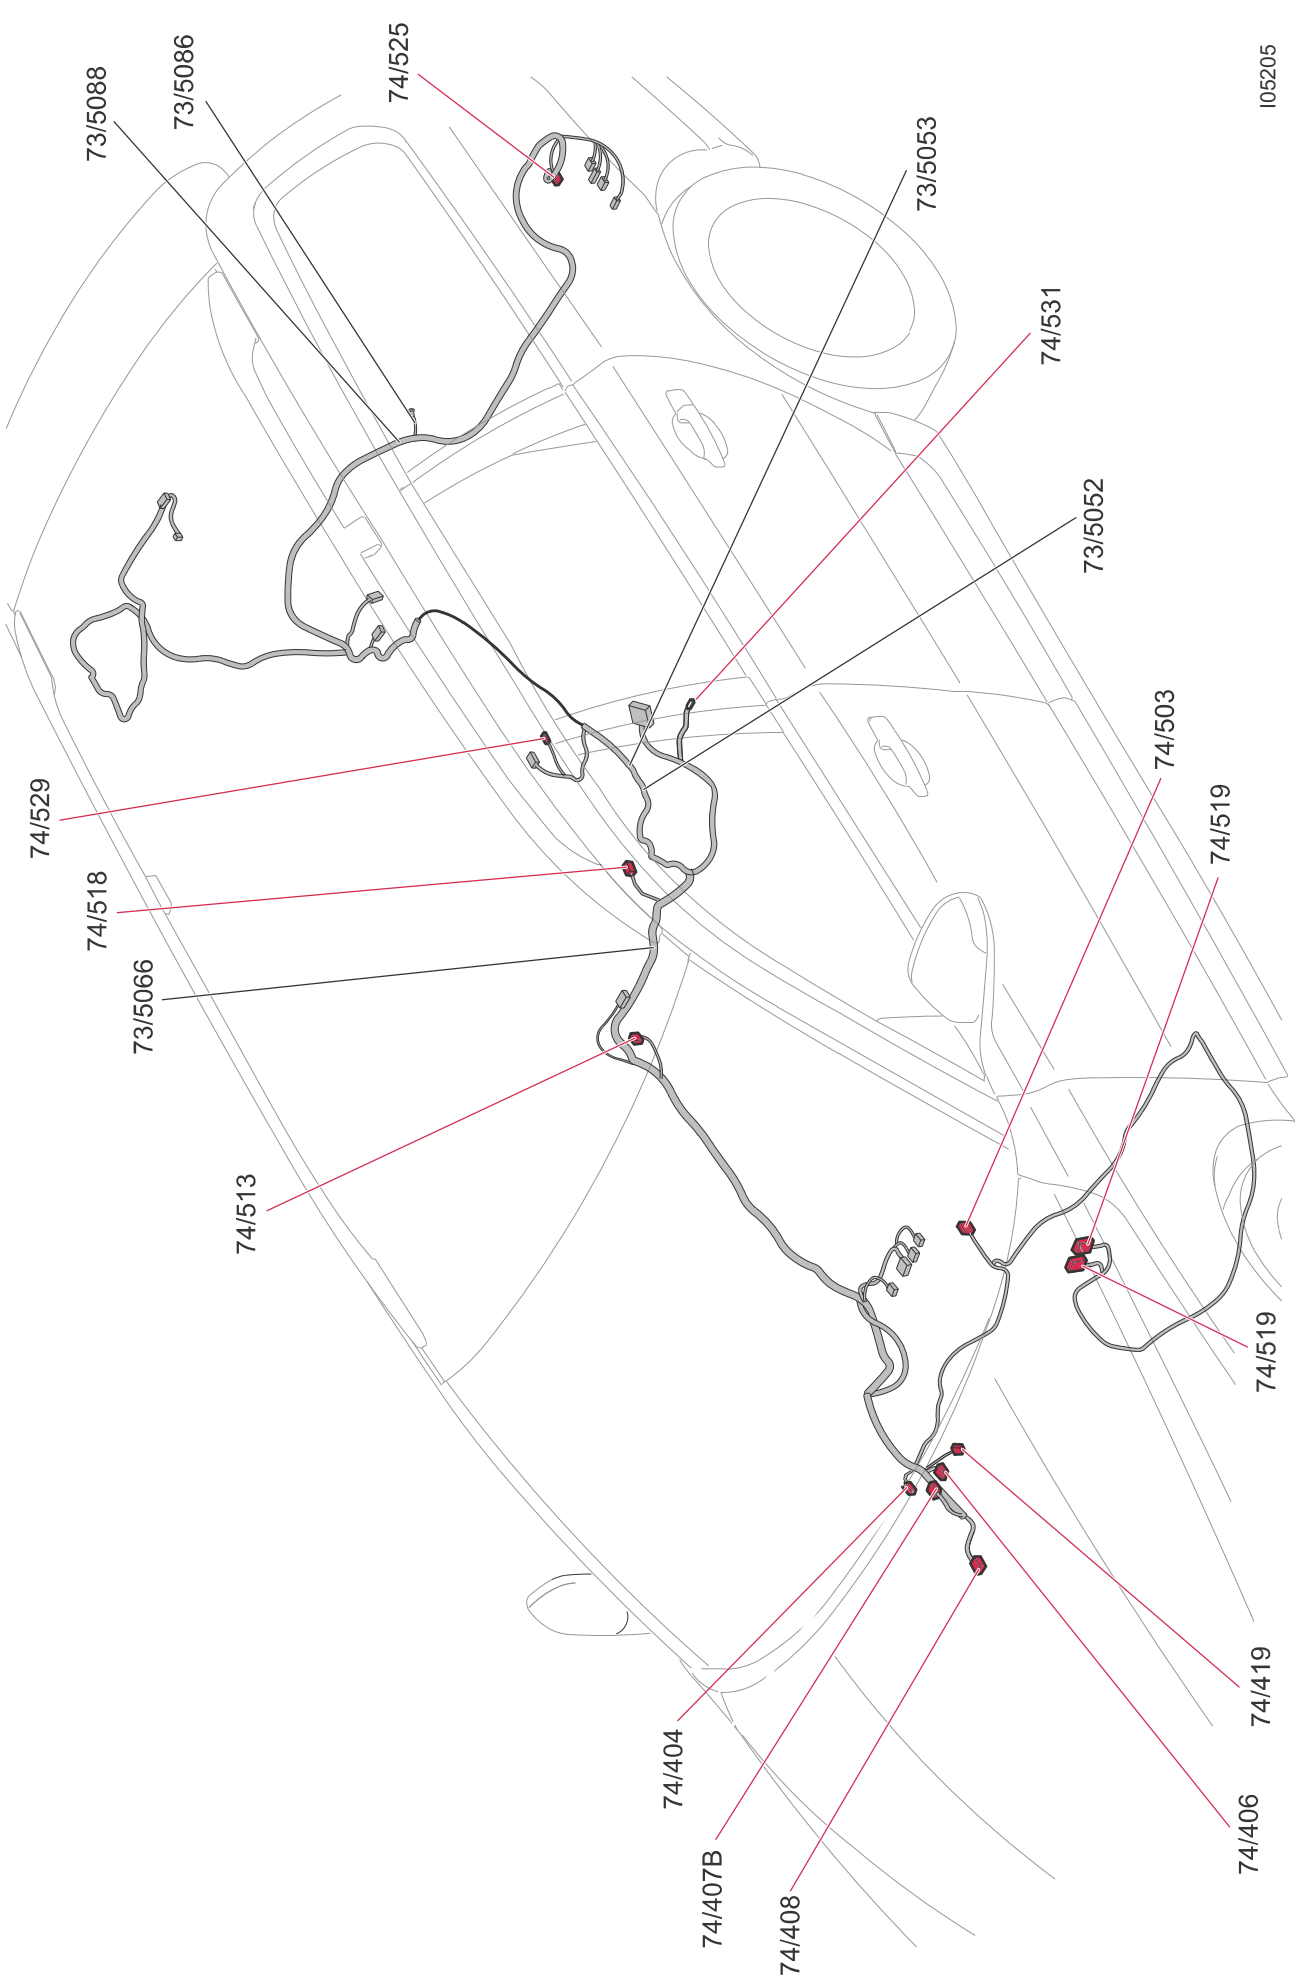

105205

Cable harness routing in vehicle

Roof harness, S80

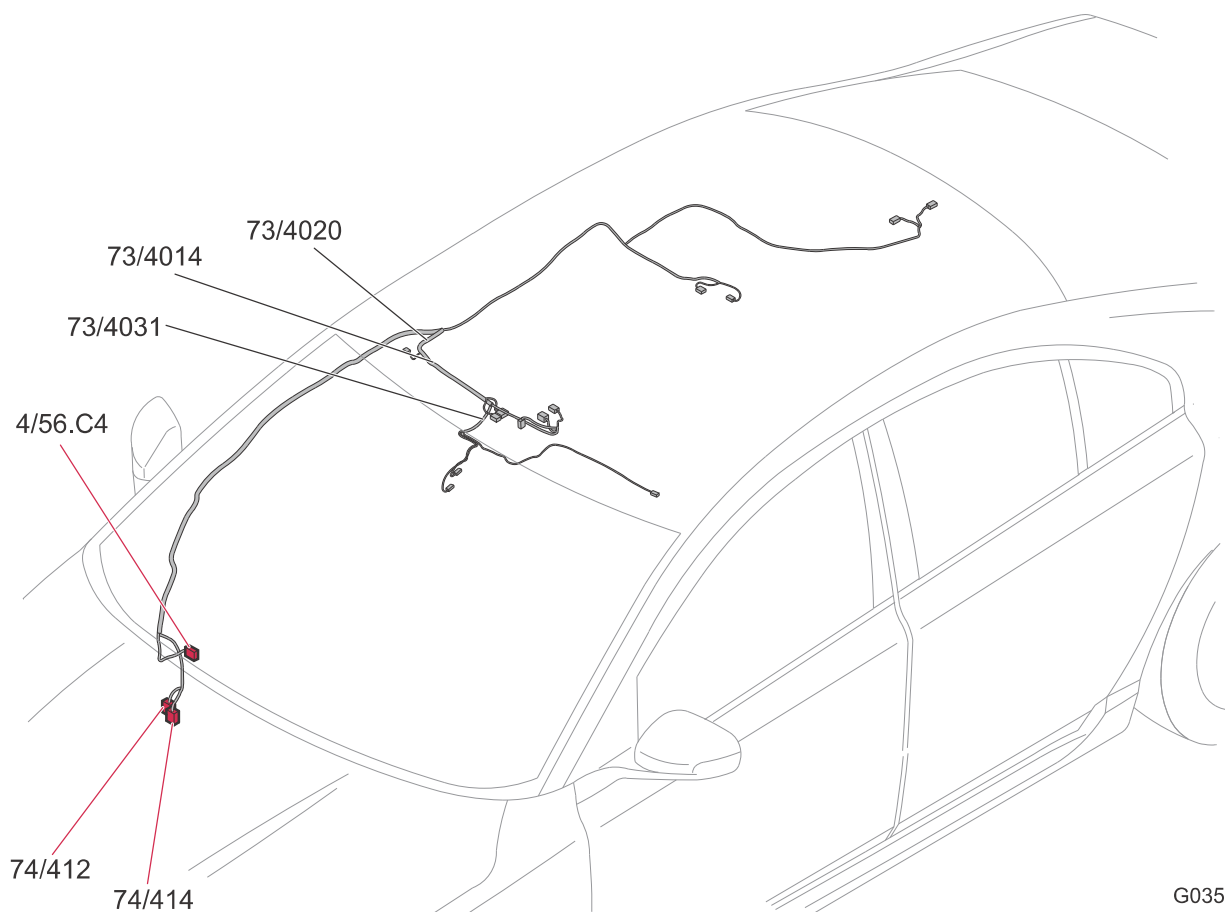


Cable harness routing in vehicle

Roof harness, V70




Cable harness routing in vehicle Center console harness

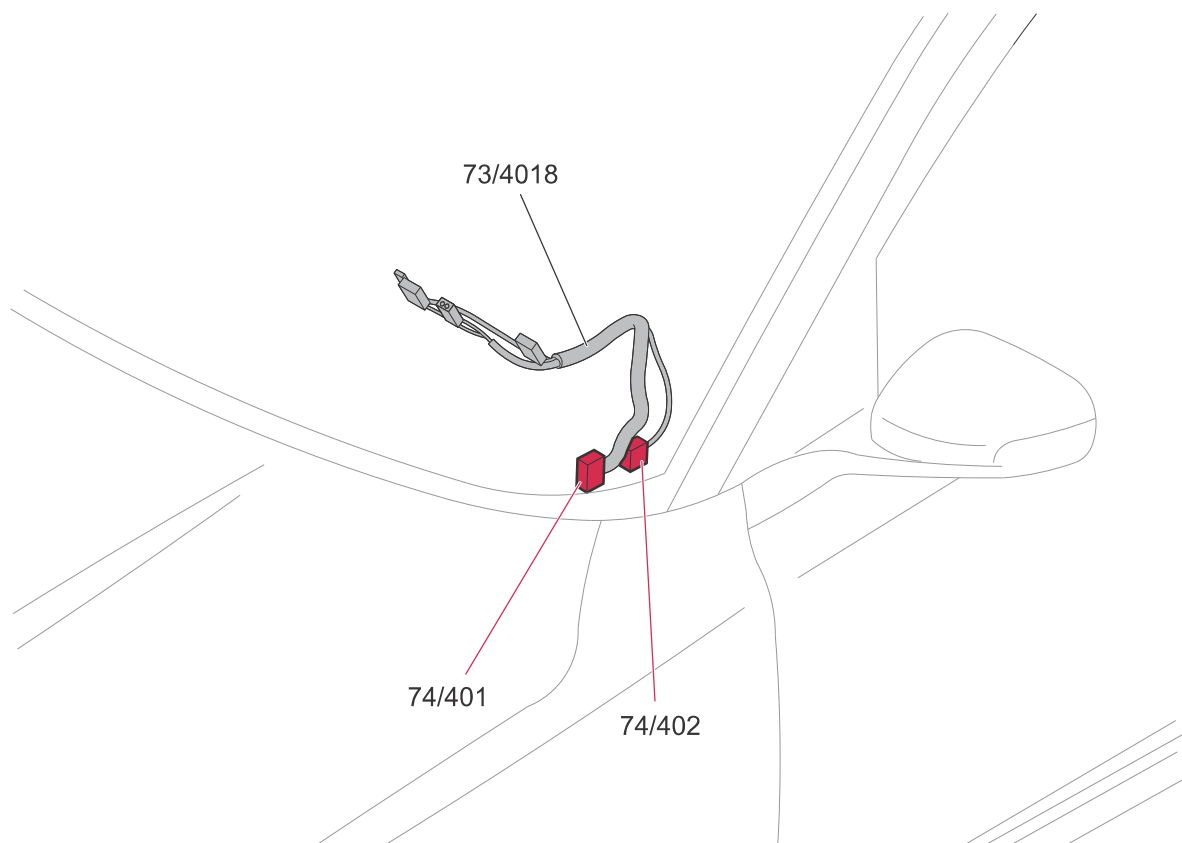

G035657


Cable harness routing in vehicle Tunnel harness

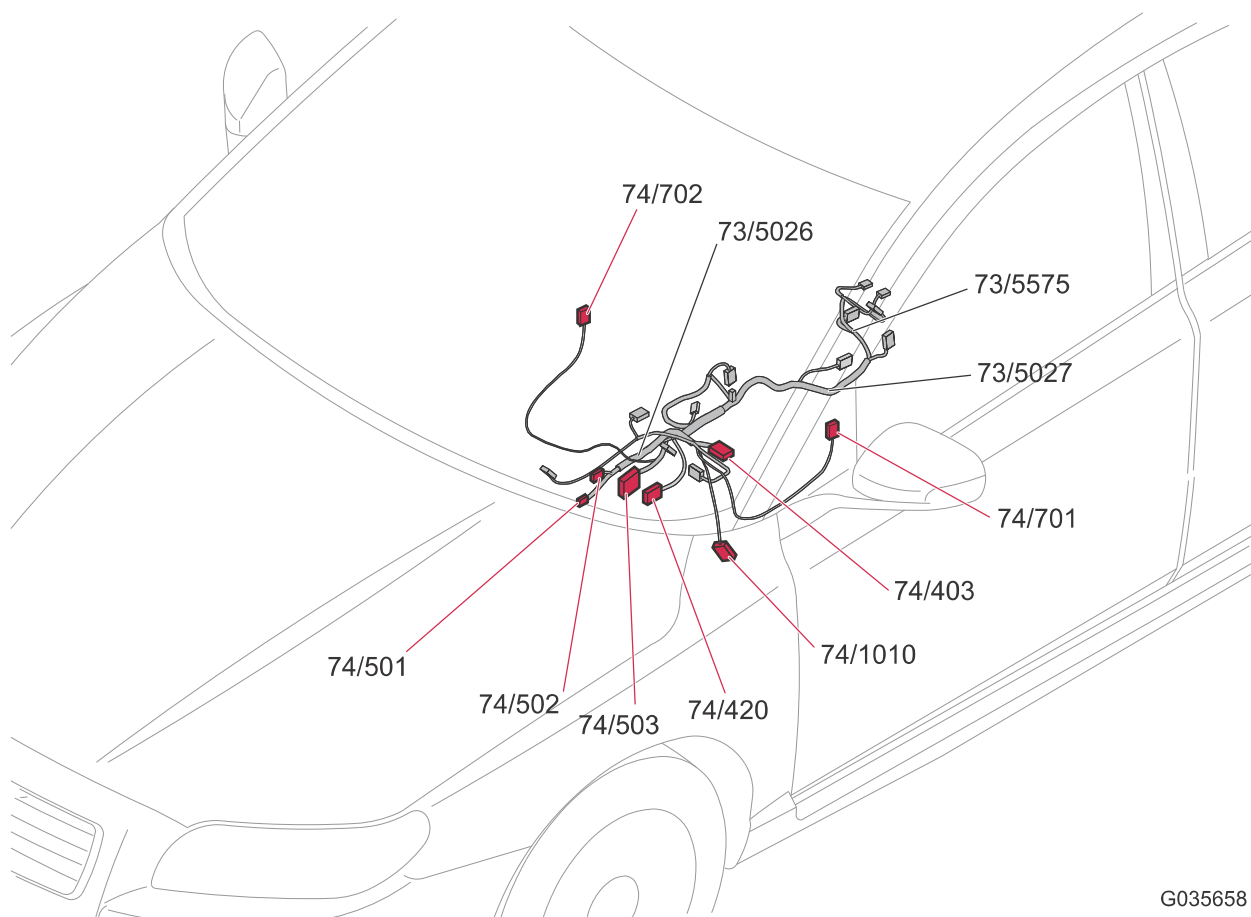

G035658

Cable harness routing in vehicle


Harness front door, left

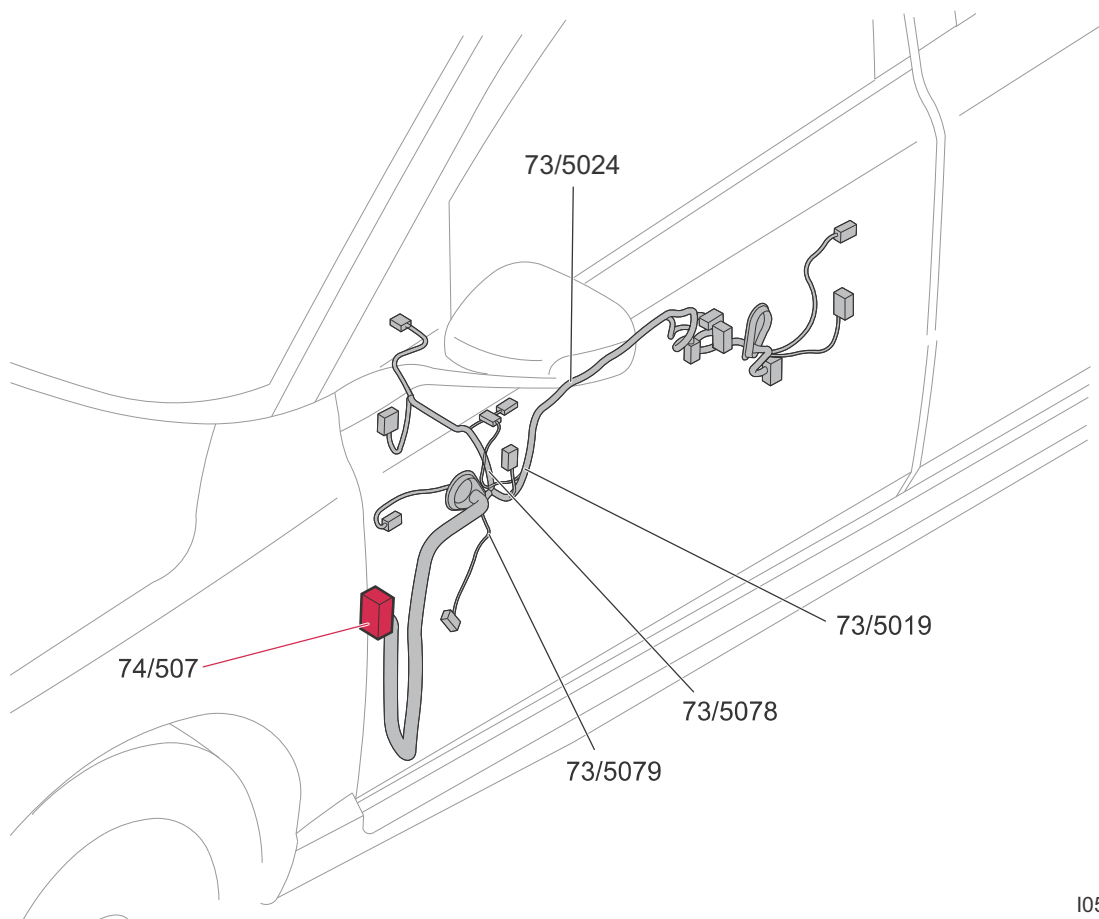

I05206

Cable harness routing in vehicle


Harness front door, right

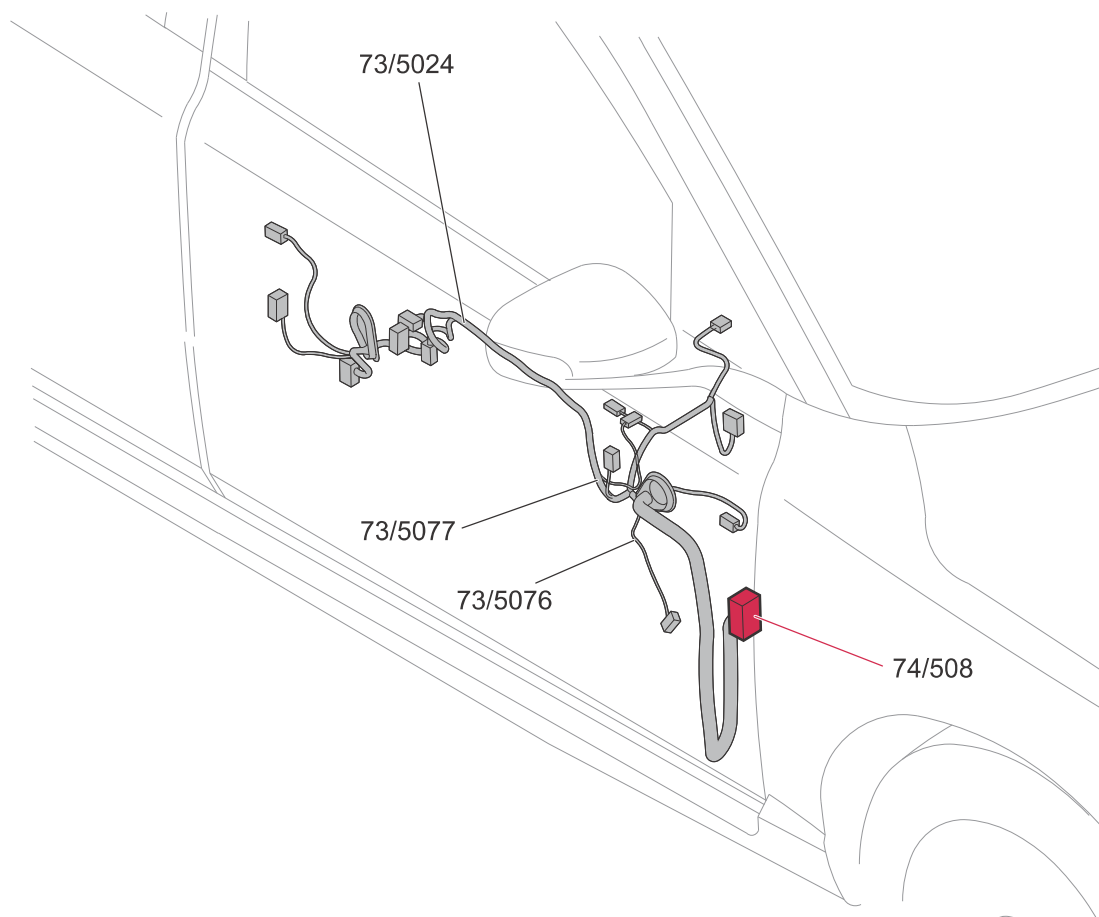

G035673


Cable harness routing in vehicle

Harness rear door, left

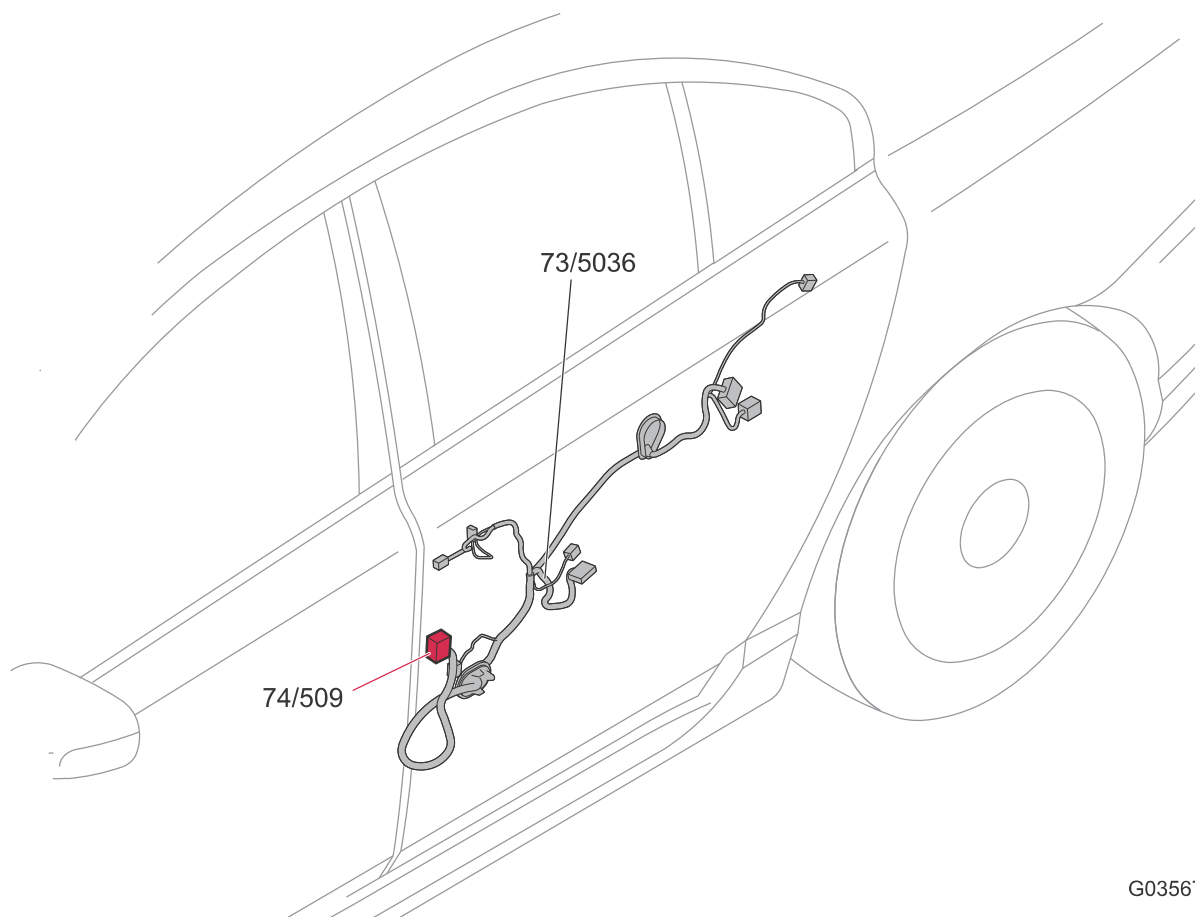


Cable harness routing in vehicle

Harness rear door, right

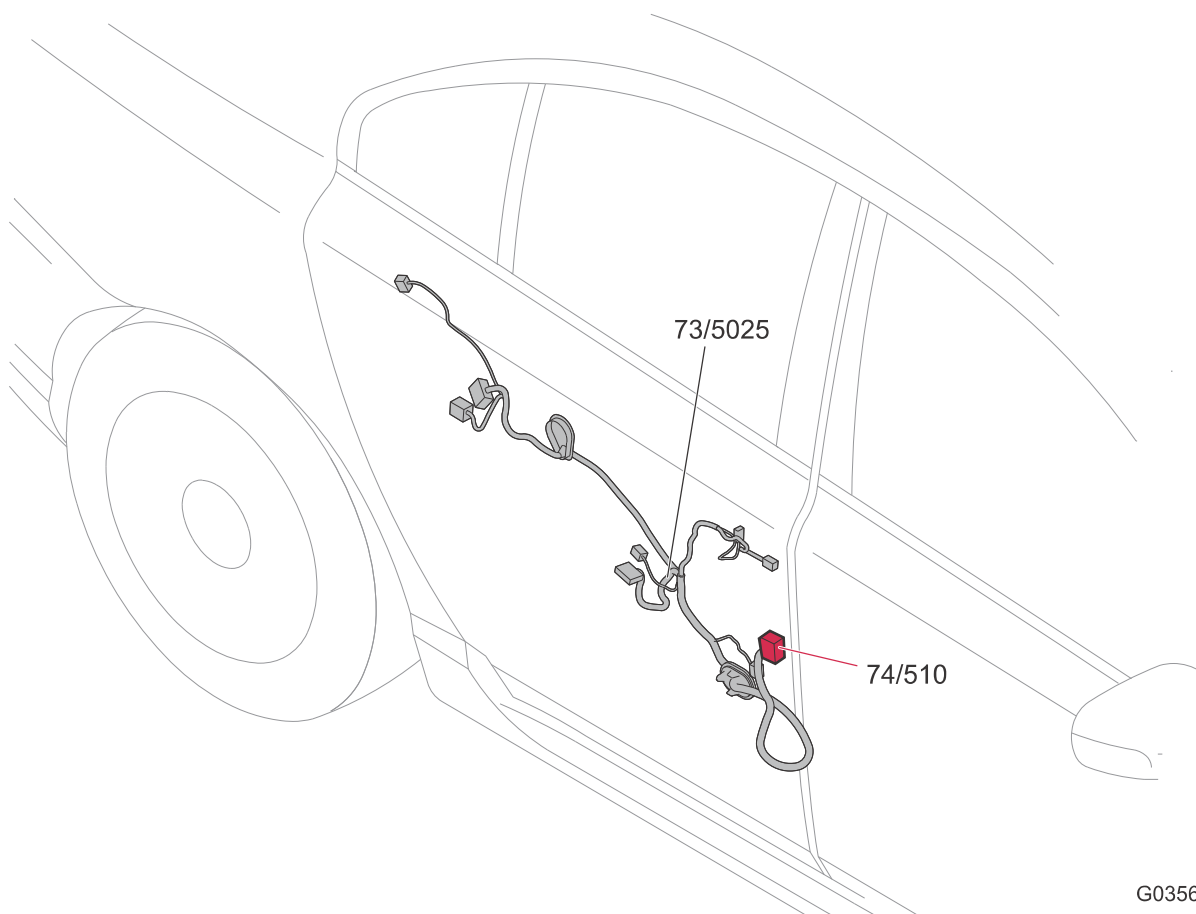


Cable harness routing in vehicle

Trunk lid/tailgate harness, S80

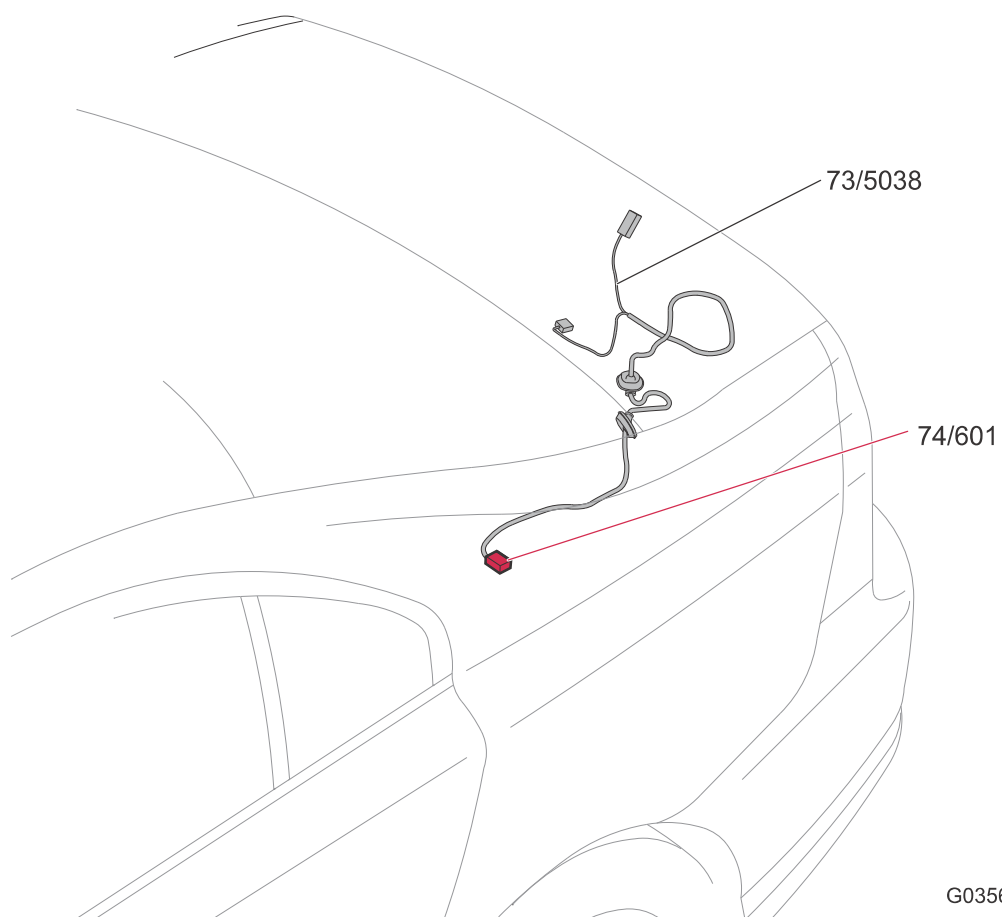


Cable harness routing in vehicle

Trunk lid/tailgate harness, V70

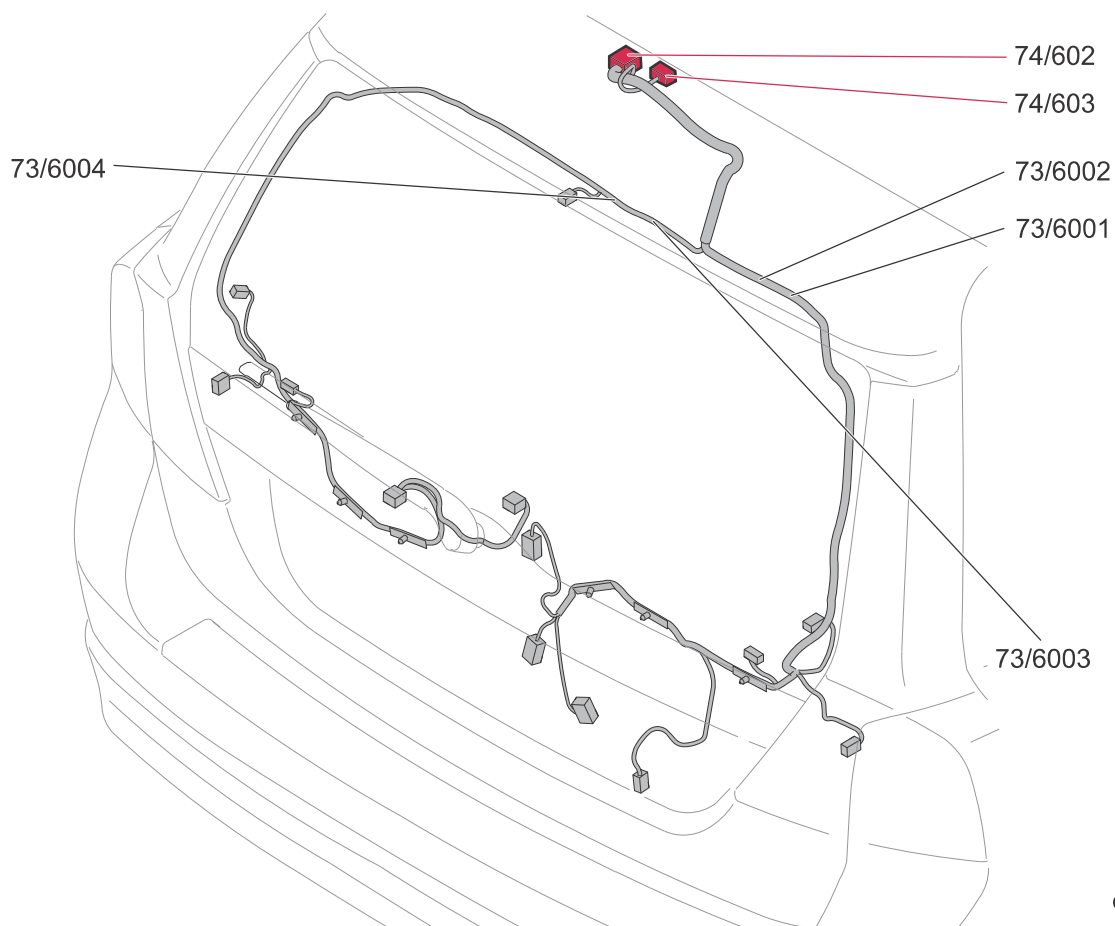


Cable harness routing in vehicle

Harnesses rear axle

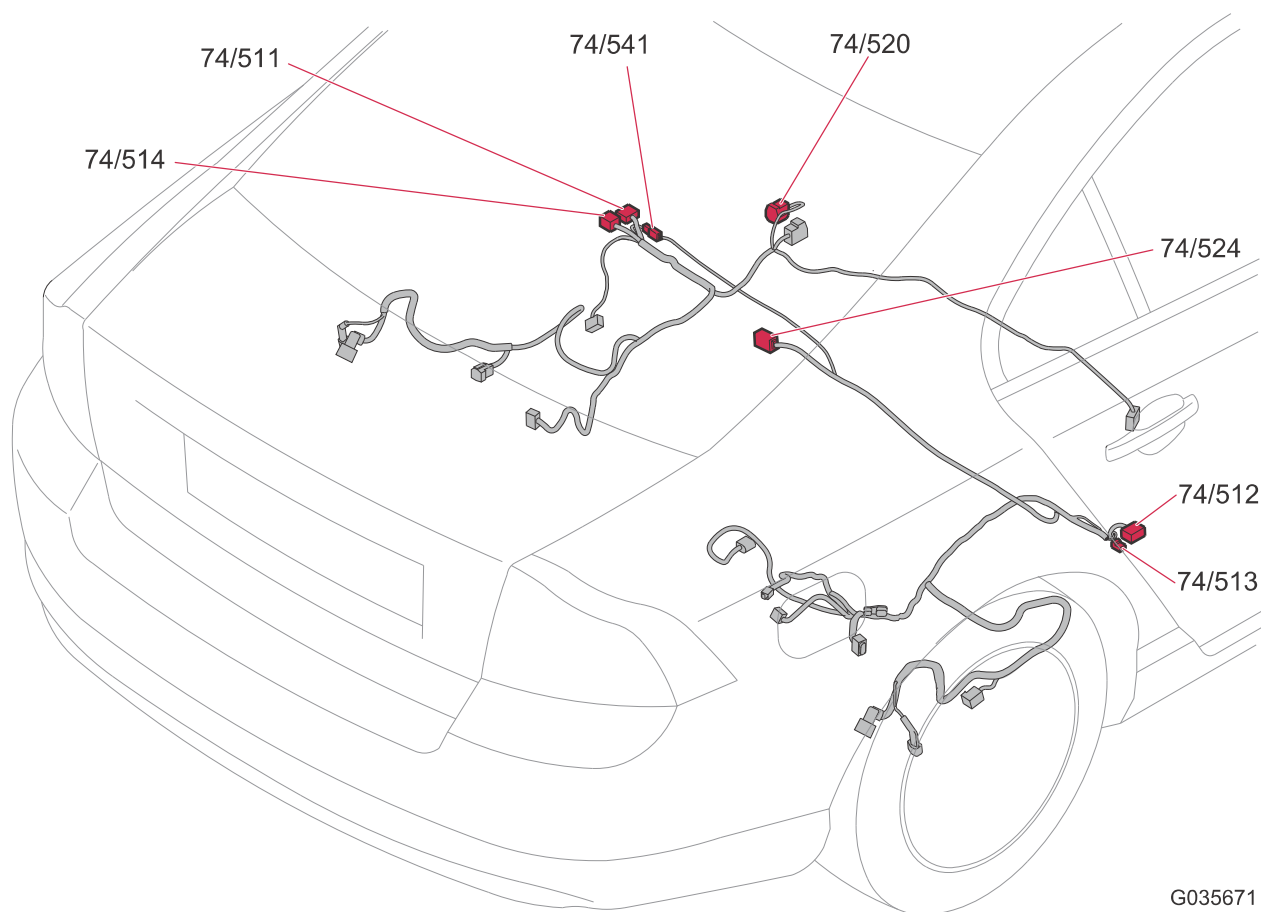

Cable harness routing in vehicle

Executive harnesses

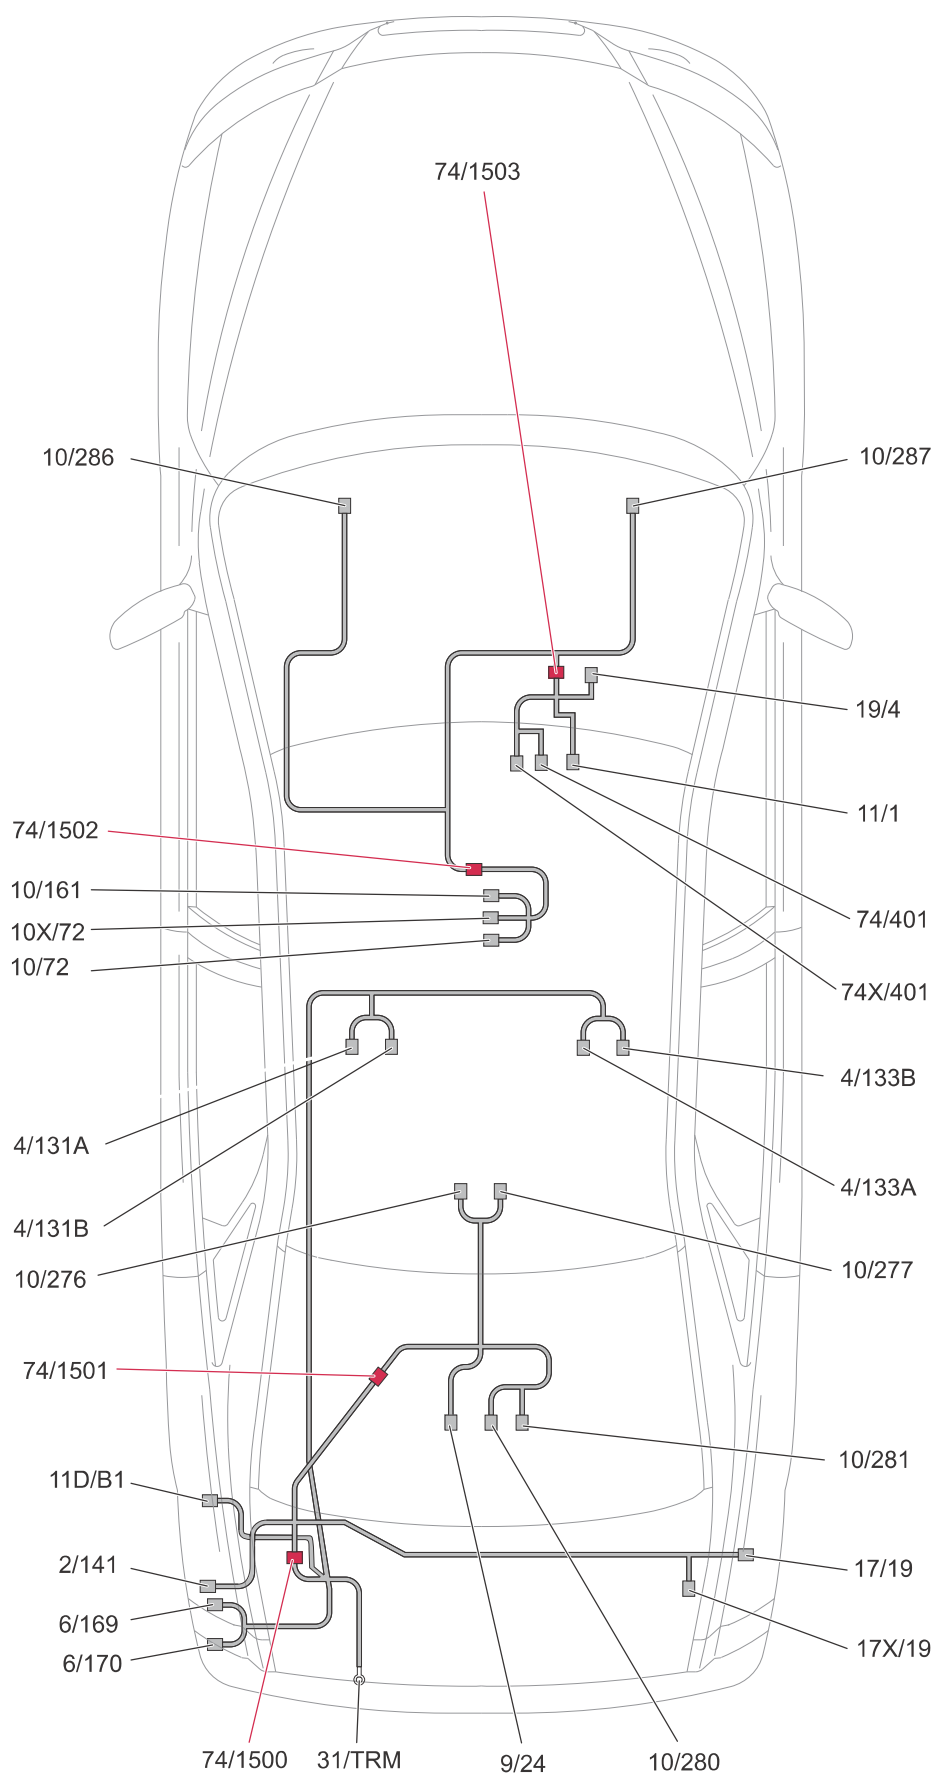


G035682


Component illustrations

1/1 - 2/64


1/1 Battery

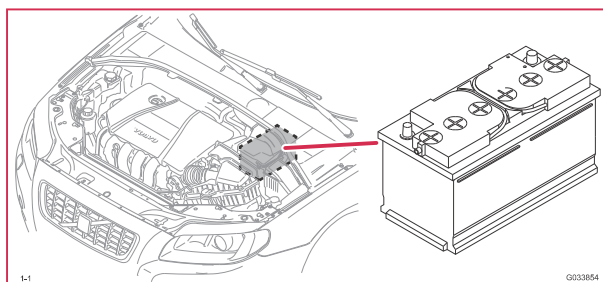


2/22 Relay, climate control system

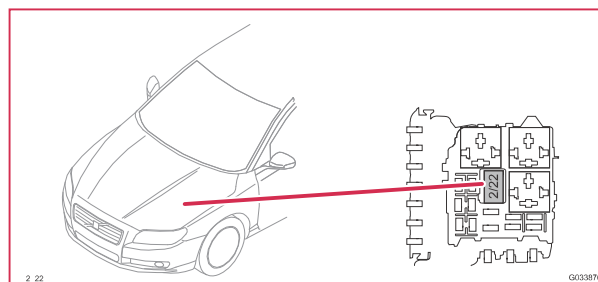


1/2 Secondary battery

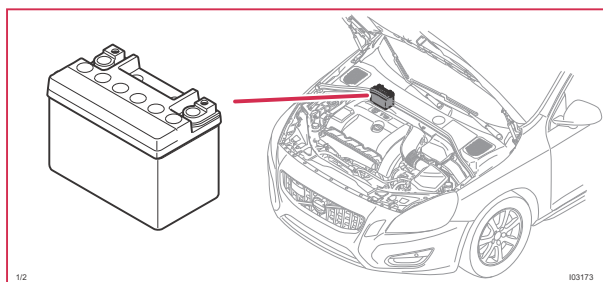


2/31 Relay, 15-feed

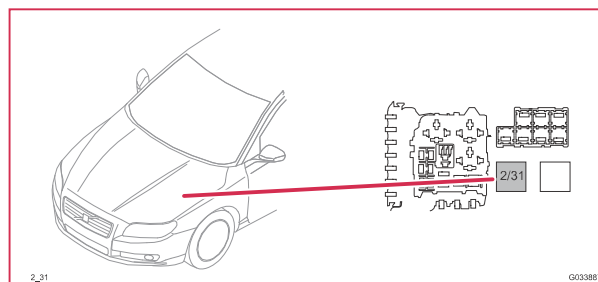


2/14 Relay, glow plug system

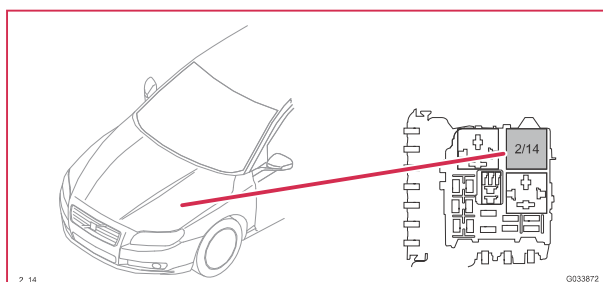


2/32 Main relay, engine management system

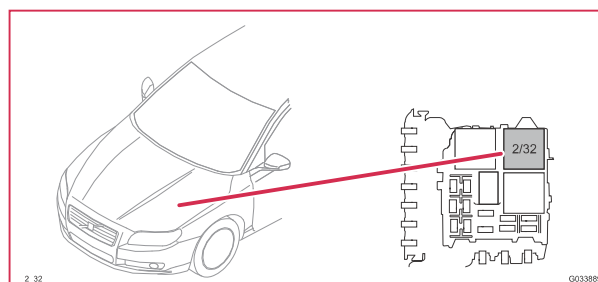


2/16 Rear window wiper relay, V70

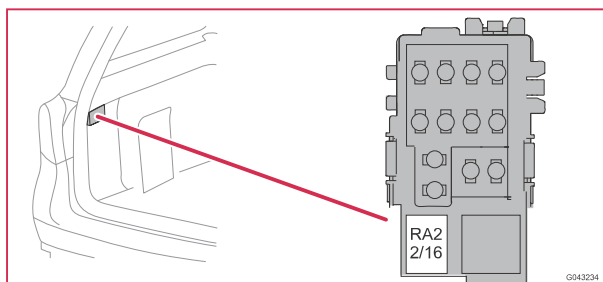


2/35 Relay, starter motor

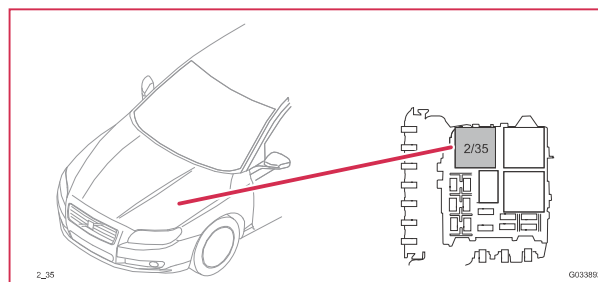

2/17 Relay, horn

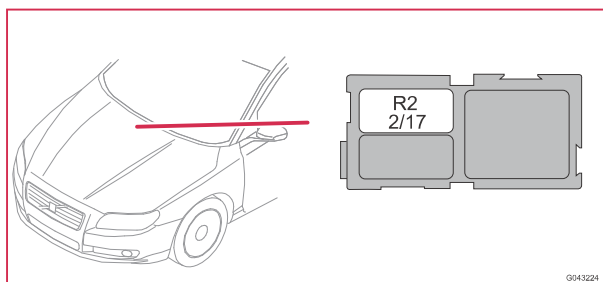


2/64 Auxiliary light relay, accessory

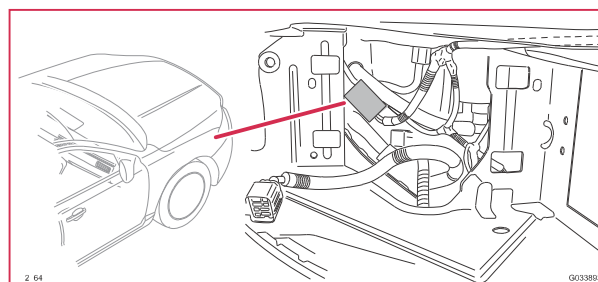


Component illustrations

2/82 - 3/1


2/82 Relay, rear window defroster, V70

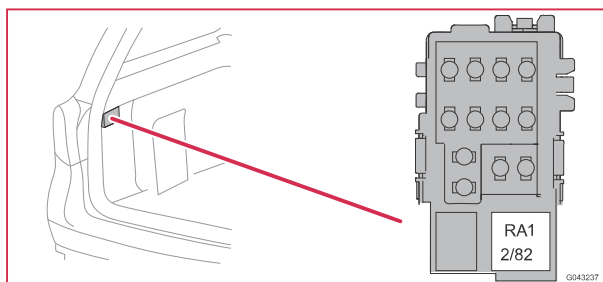


2/166 Battery relay

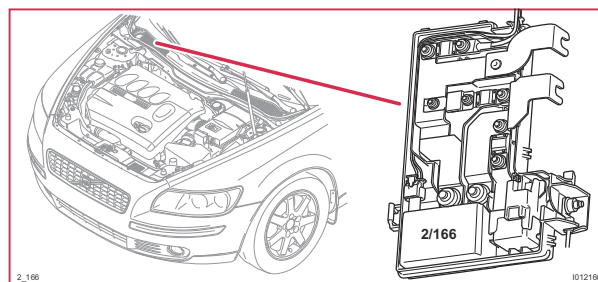


2/82 Relay, rear window defroster, S80

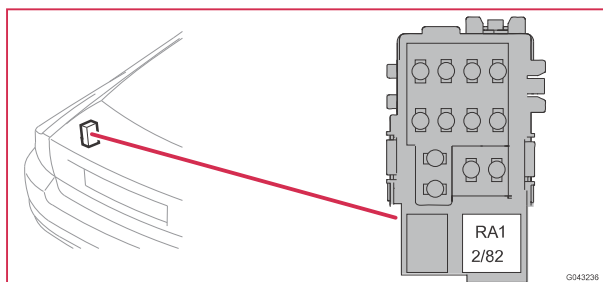


2/182 Relay, headlight washer motor

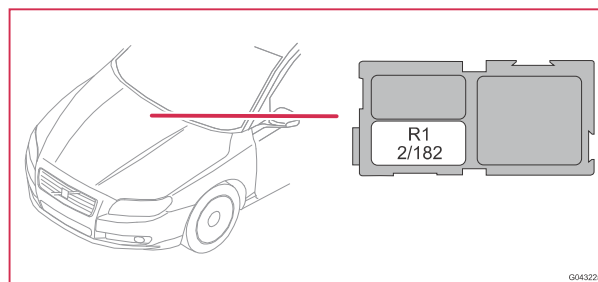


2/83 Relay, rear window defroster, S80

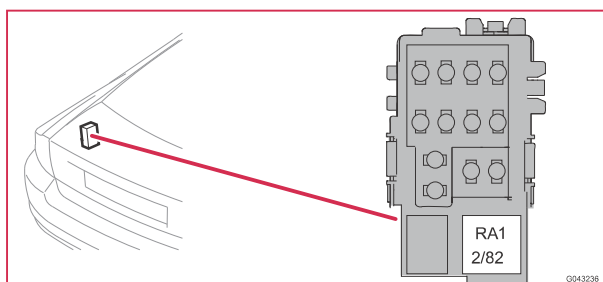


2/193 Relay, comfort functions

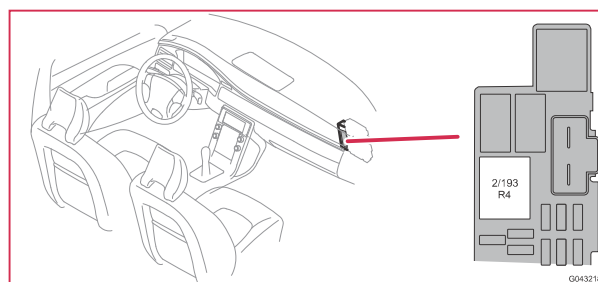


2/88 Relay, 15-feed rear

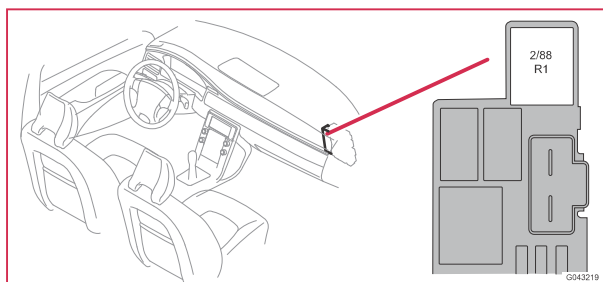


2/246 Secondary battery relay

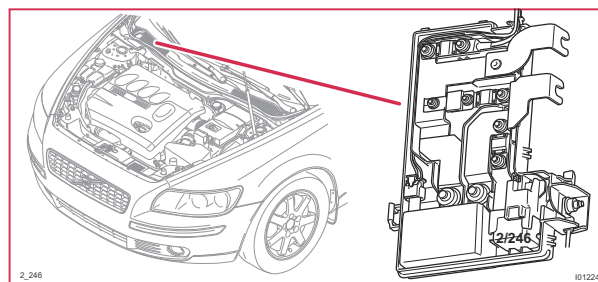

2/141 Refrigeration box relay

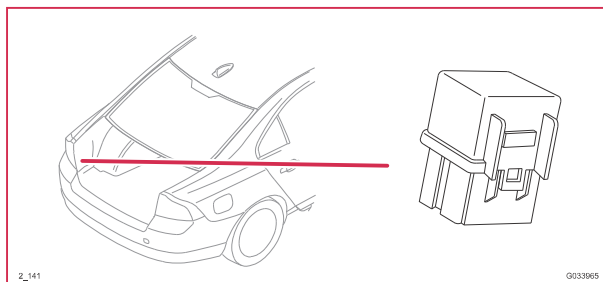


3/1 Ignition switch

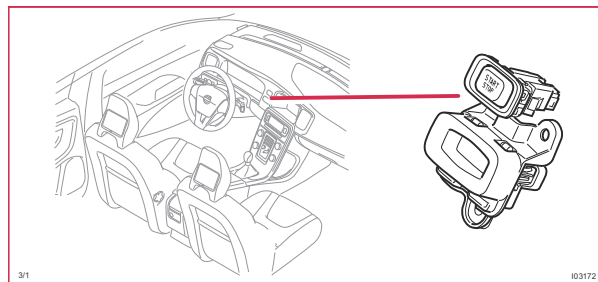


Component illustrations

3/4 - 3/37


3/4 Steering wheel switch left (SWSL)

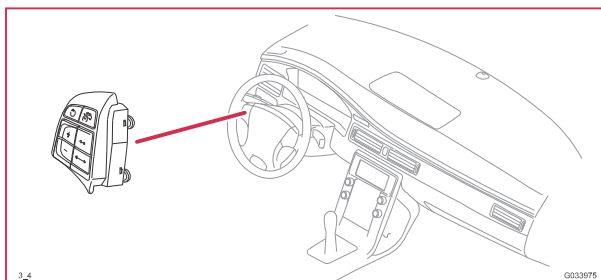


3/26 Switch unit, power driver's seat

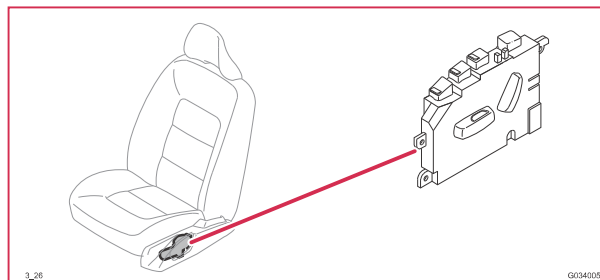


3/6 Switch, hazard warning flashers

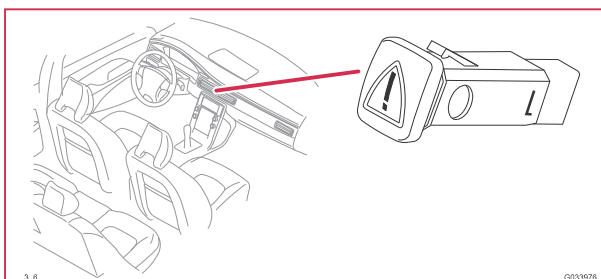


3/27 Switch unit, power passenger seat

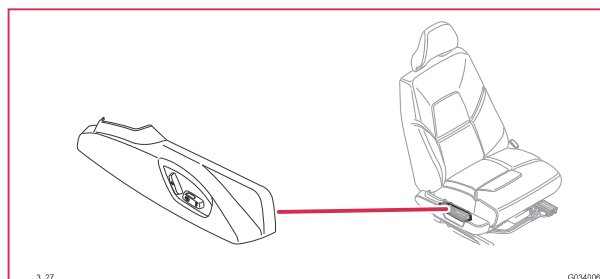


3/8 Switch, heated rear window/rearview mirrors

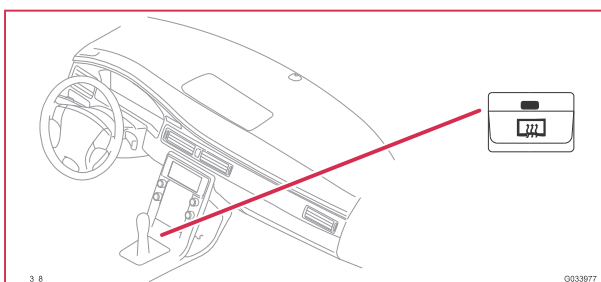


3/35 Trunk handle switch, V70

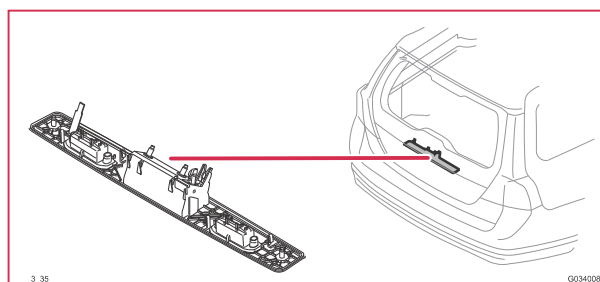


3/9 Contact brake light

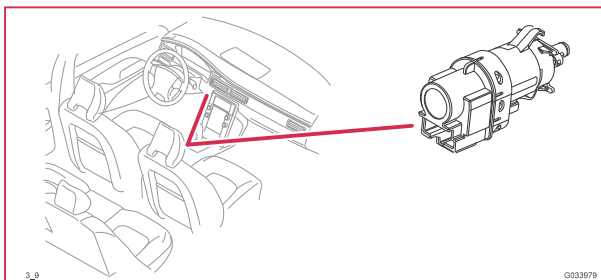


3/35 Trunk handle switch, S80

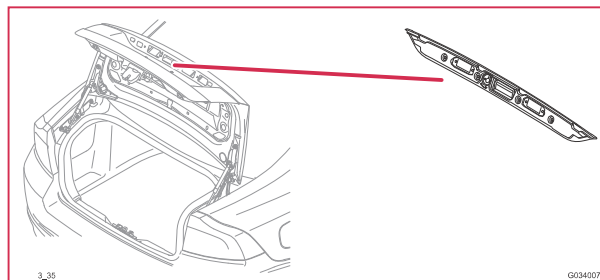

3/10 Reversing light contact

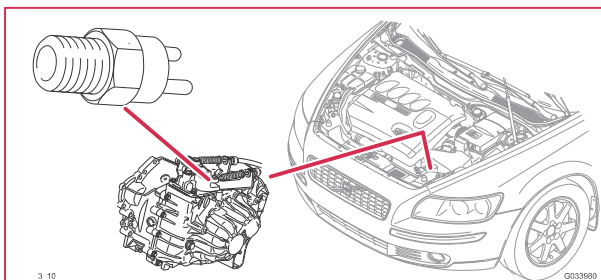


3/37 Contact horn

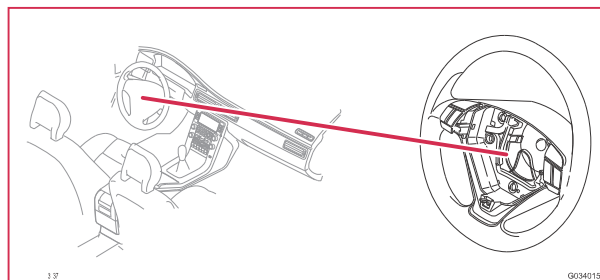


Component illustrations

3/60 - 3/81


3/60 Switch, auxiliary lights

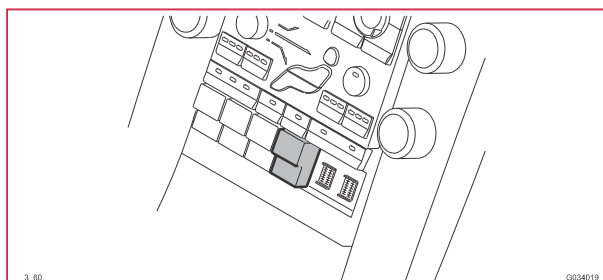


3/76 Lock unit, rear left door

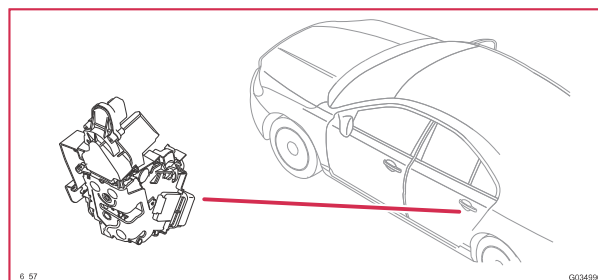


3/62 Hood alarm contact

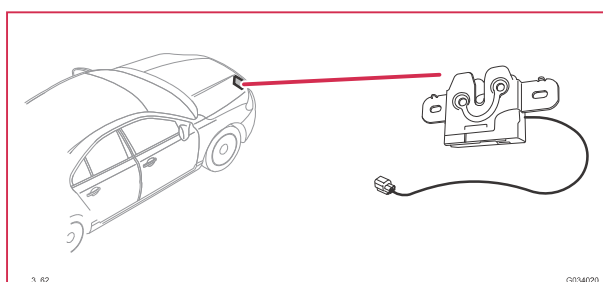


3/77 Lock unit, rear right door

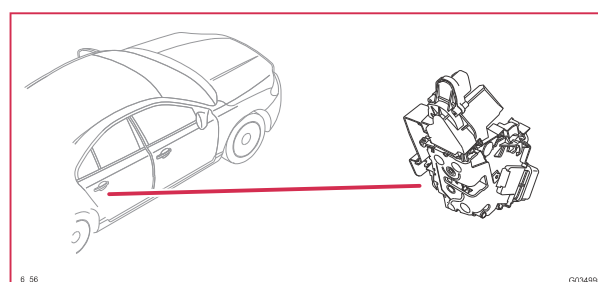


3/65 Switch, heated rear seat

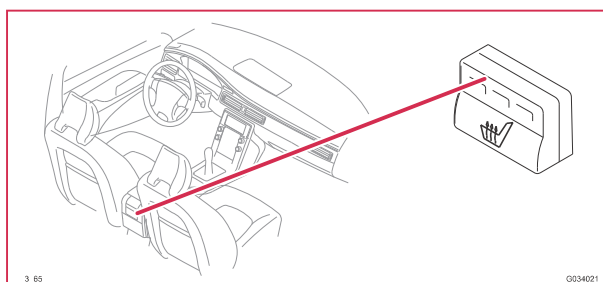


3/78 Lock unit, tailgate V70

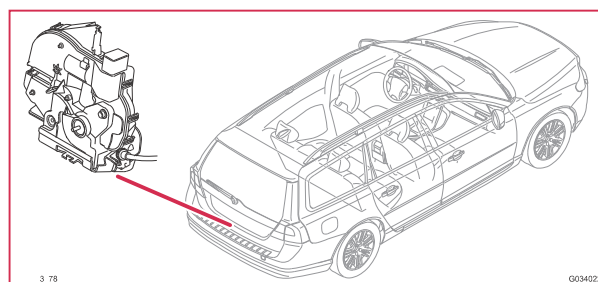


3/74 Left-hand front door lock unit

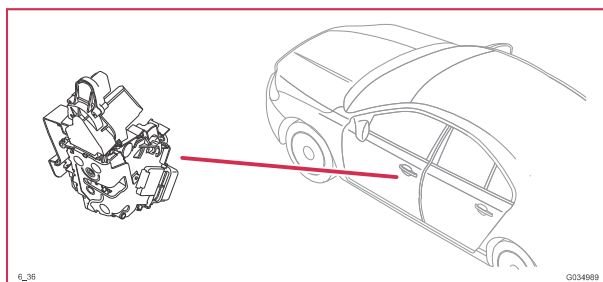


3/80 Switch, central locking system, driver's door

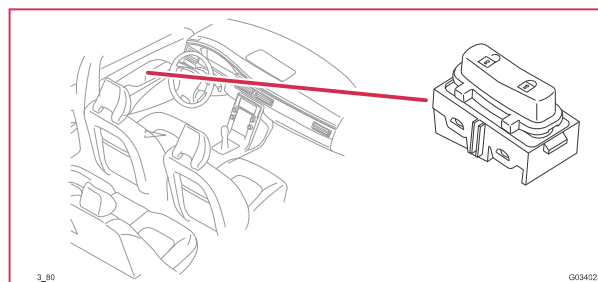

3/75 Right-hand front door lock unit

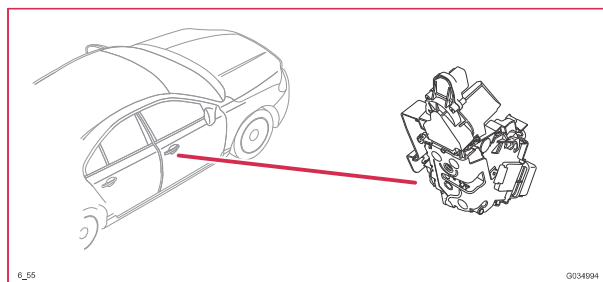


3/81 Power window switches, driver's door

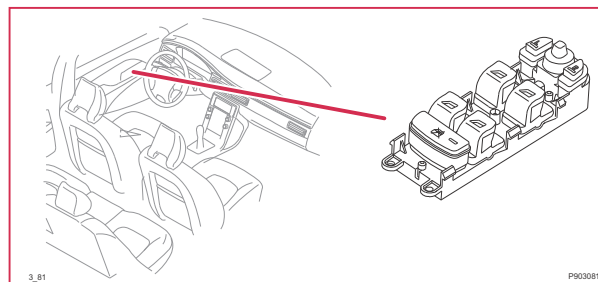


Component illustrations

3/82 - 3/126


3/82 Switch, central locking system, passenger door

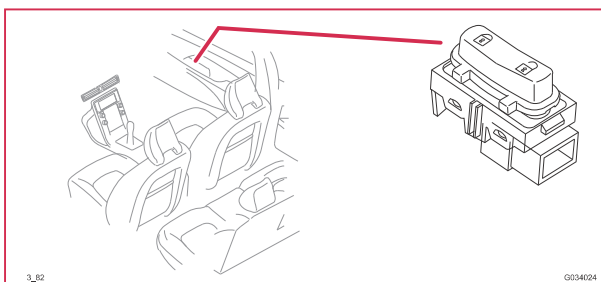


3/94 Contact, passenger seat belt buckle

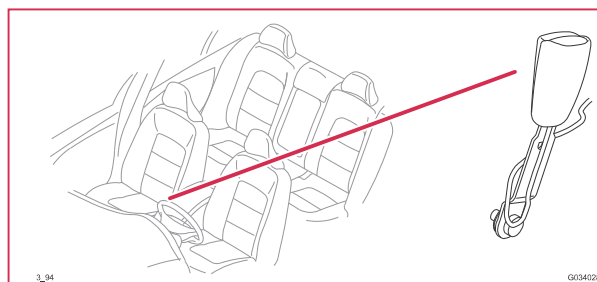


3/83 Switch, passenger door power window

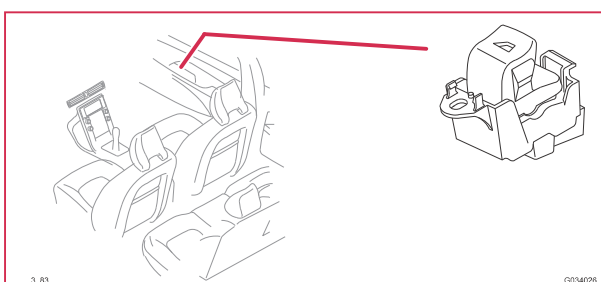


3/111 Light Switch Module (LSM)

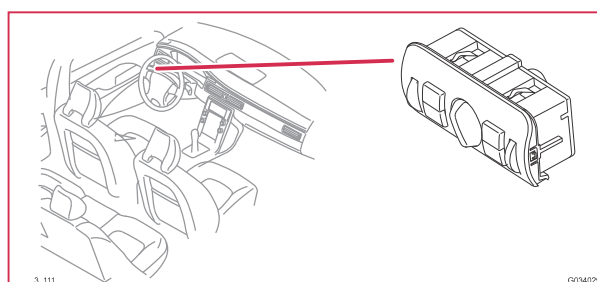


3/85 Power window switch, rear left door

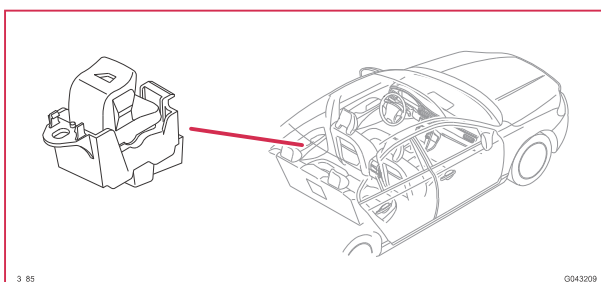


3/112 Climate control system

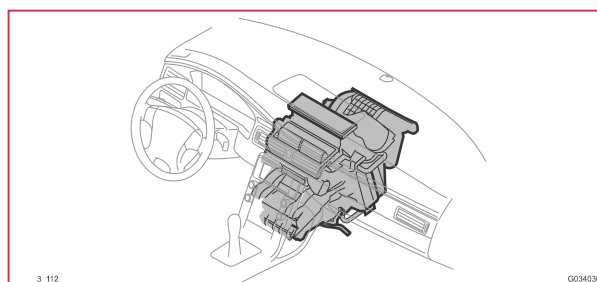


3/86 Power window switch, right rear door

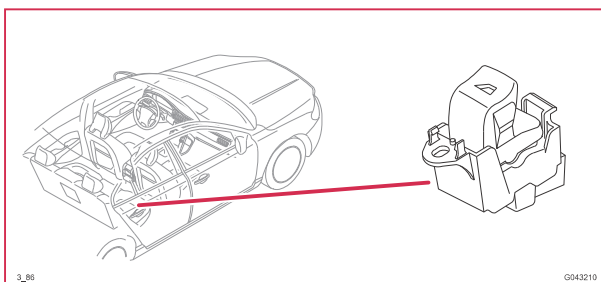


3/117 Switch unit, ceiling light

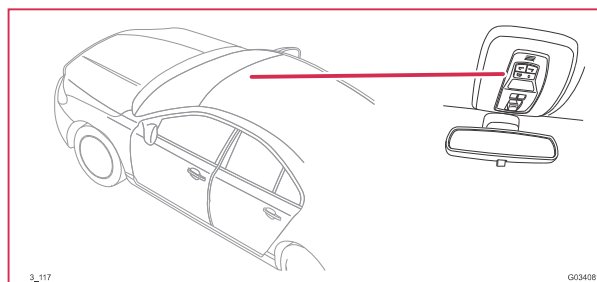

3/93 Contact, driver's seat belt buckle

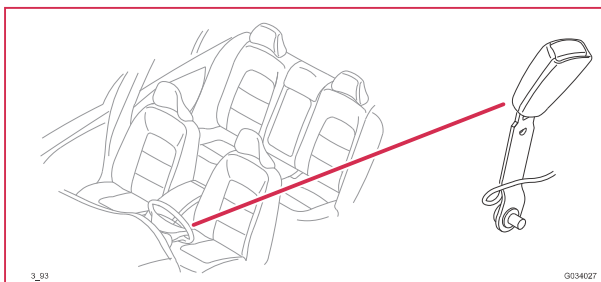


3/126 Driver Door Module (DDM)

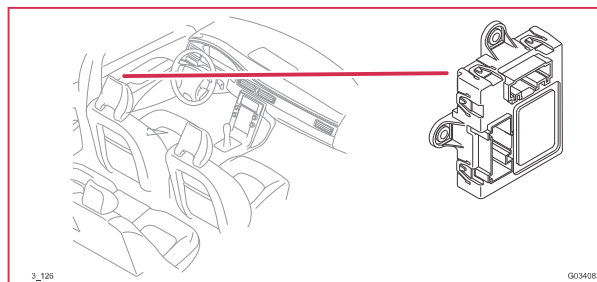


Component illustrations

3/127 - 3/173


3/127 Passenger Door Module (PDM)

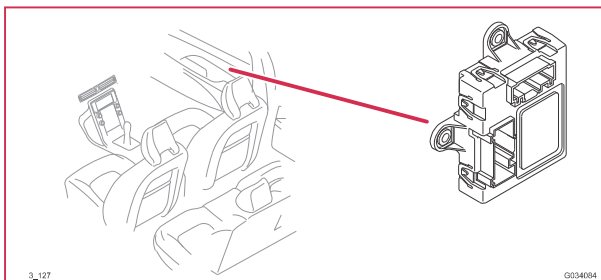


3/132 Start Control Module (SCU)

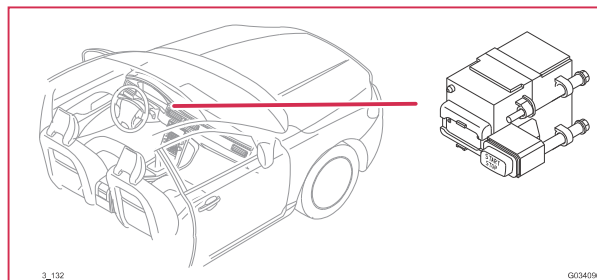


3/128 Left rear door module (LDM)

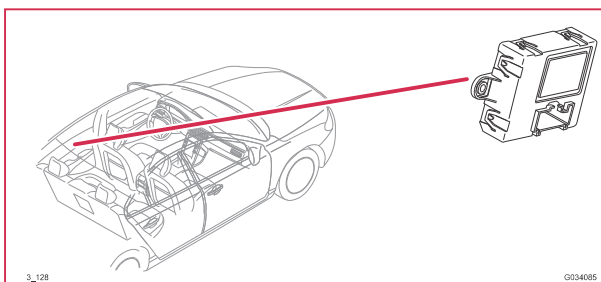


3/135 RTI switch

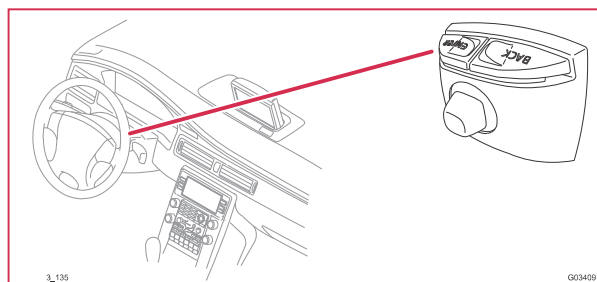


3/129 Right rear door module (RDM)

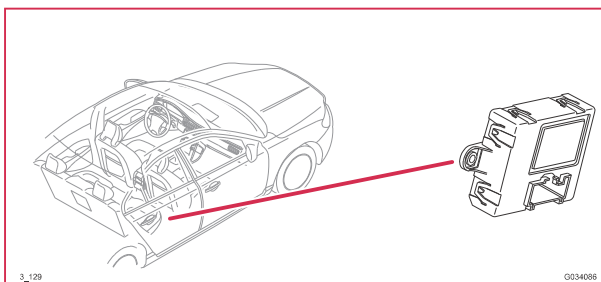


3/156 Gear Selector Module (GSM)

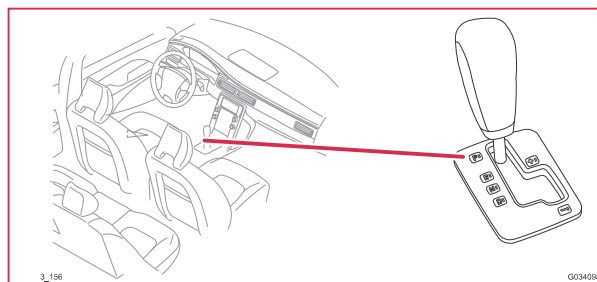


3/130 Steering Wheel Module (SWM)

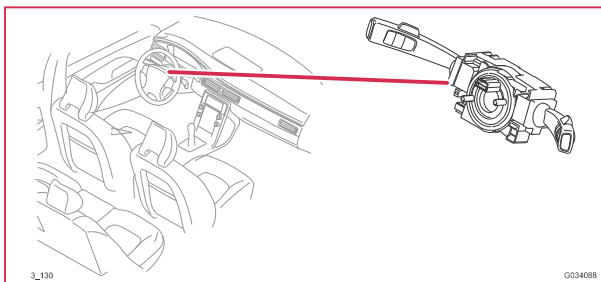


3/157 Switch, passenger side airbag

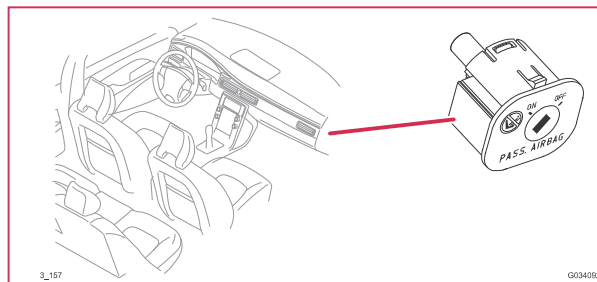

3/131 Steering wheel switch right (SWSR)

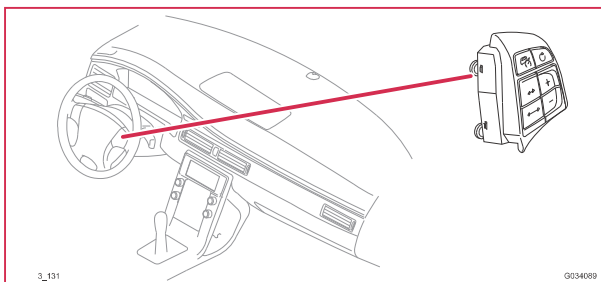


3/173 Switch, trunk lid/tailgate private lock

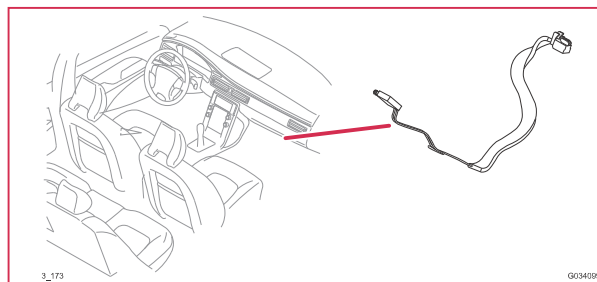


Component illustrations

3/176 - 3/272


3/176 Power window switches, driver's door

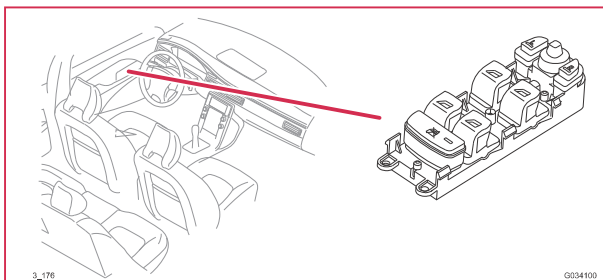


3/255 Position sensor, driver's seat

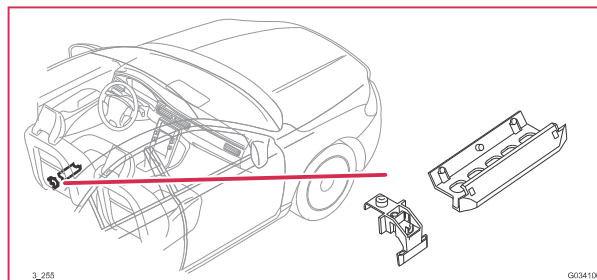


3/217 Contact, LH rear belt buckle

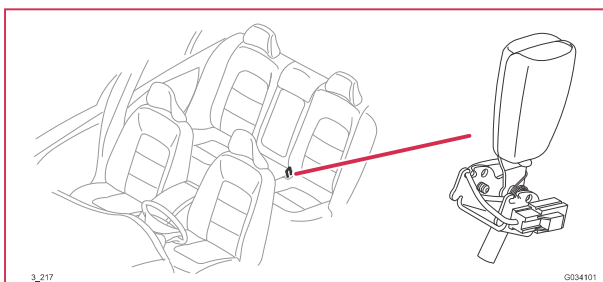


3/256 Position sensor, passenger seat

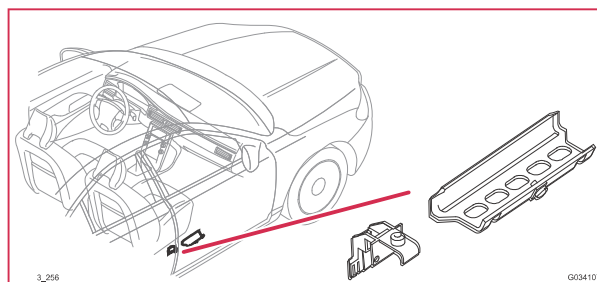


3/218 Contact, center rear belt buckle

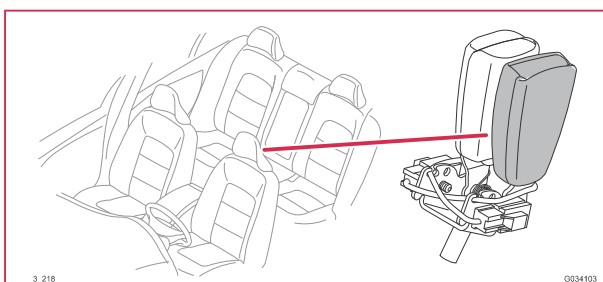


3/267 Switch unit, telematics

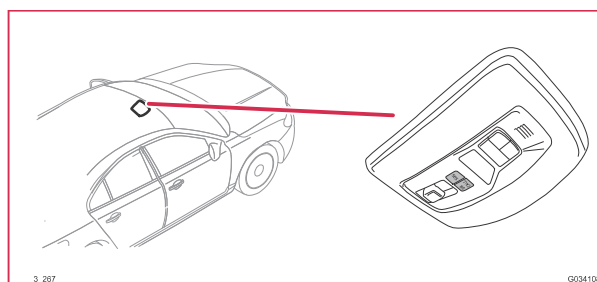


3/219 Contact, RH rear belt buckle

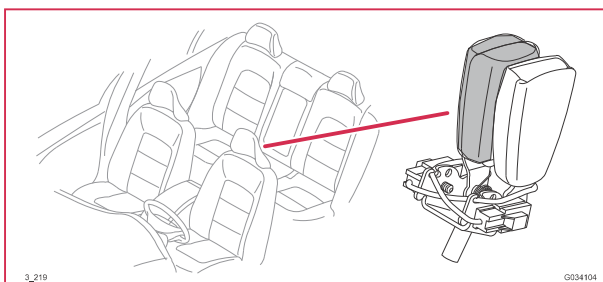


3/271 Contact, immobilizer, clutch pedal

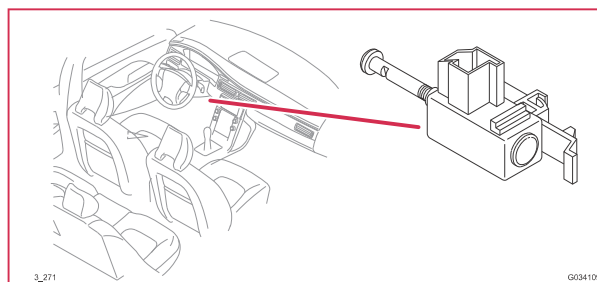

3/225 Switch unit, Continuously Controlled Damping (CCD)

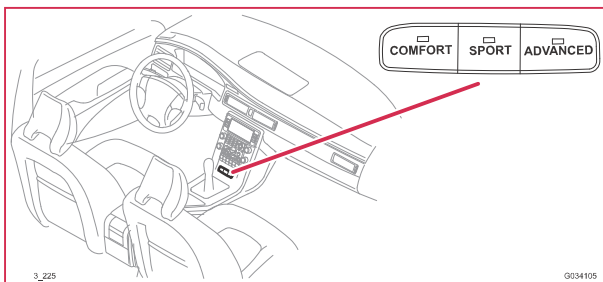


3/272 Switch, parking brake

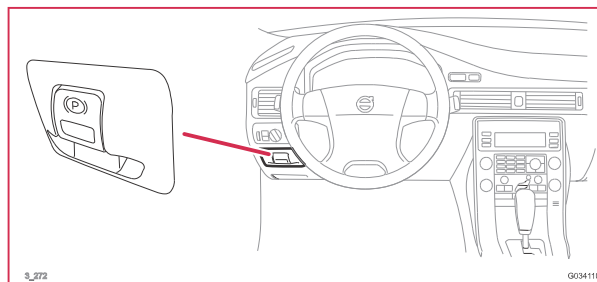


Component illustrations

3/273 - 4/6


3/273 Lock contact, LH front door

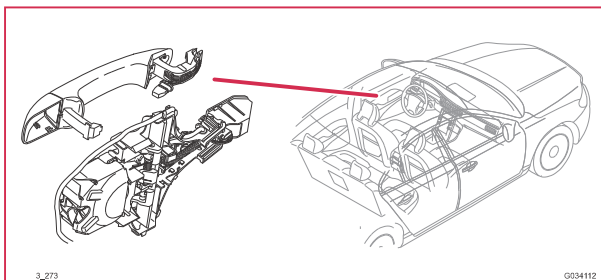


3/282 Switch indicator 1st gear

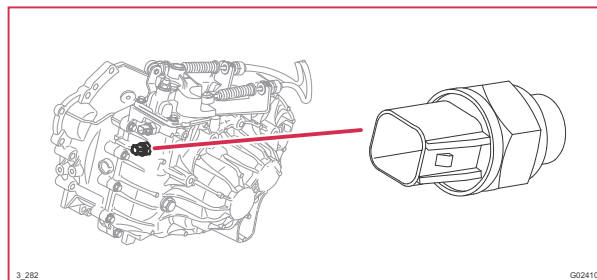


3/274 Lock contact, RH front door

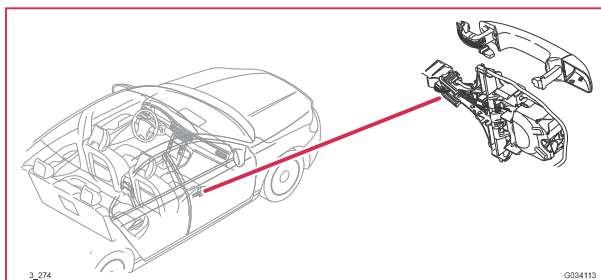


3/284 Diagnostic contact, brake light

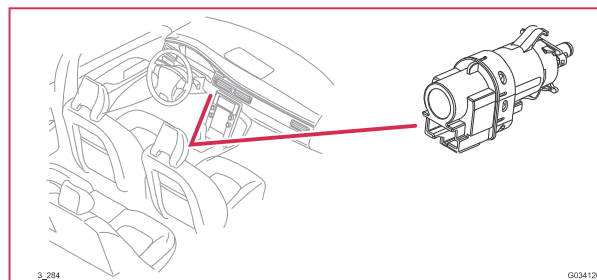


3/275 Lock contact, LH rear door

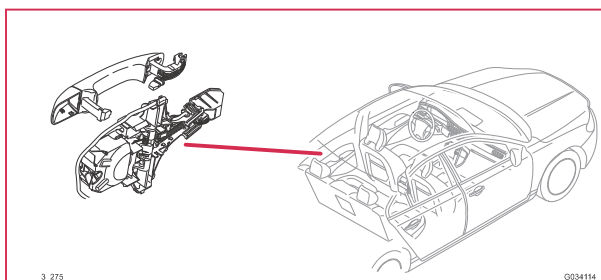


3/291 Tailgate closing switch, V70

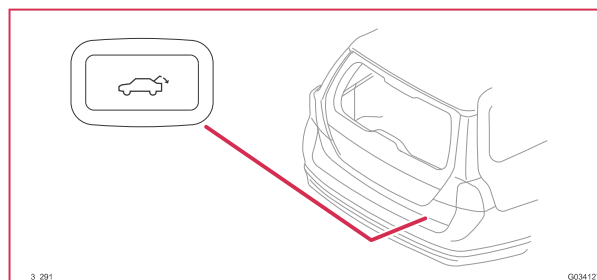


3/276 Lock contact, RH rear door

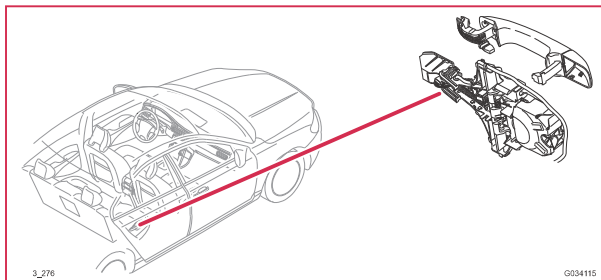


3/293 Handsfree control panel cellular phone

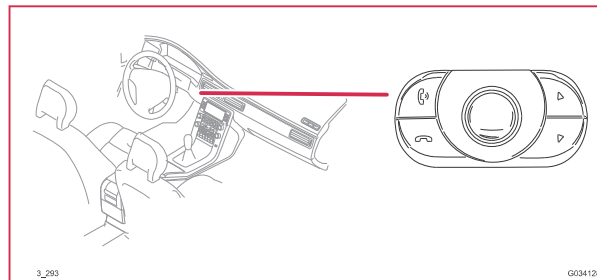

3/281 Infotainment Control Module (ICM)

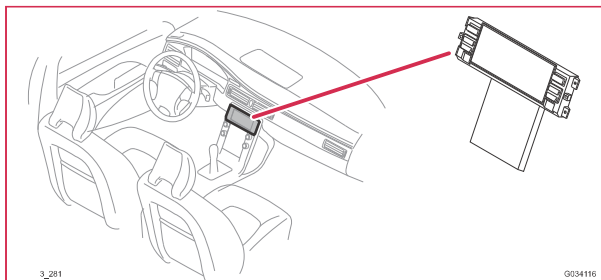


4/6 Climate Control Module (CCM)

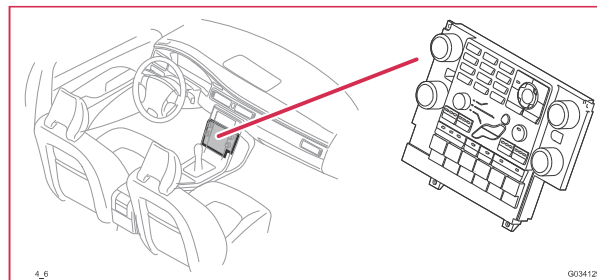


Component illustrations

4/7 - 4/46


4/7 Combustion Preheater Module (CPM)

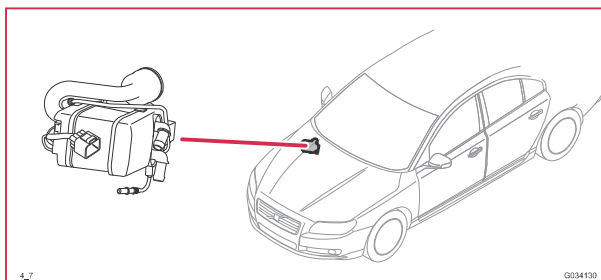


4/9 Supplemental restraint system module (SRS)

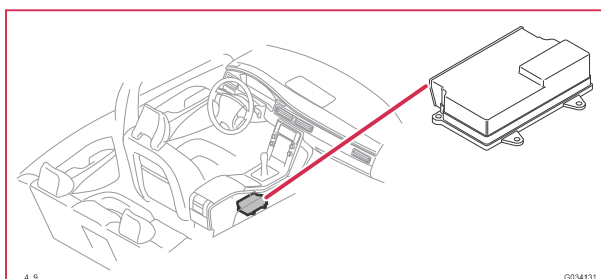


4/16 Brake Control Module (BCM)

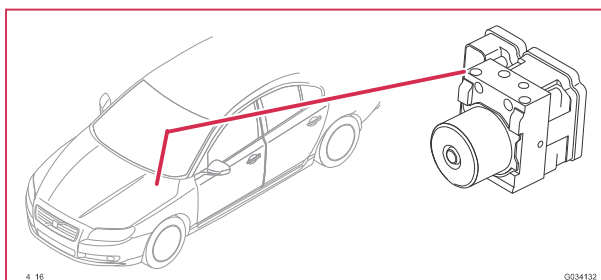


4/28 Transmission Control Module (TCM), TF-80SC

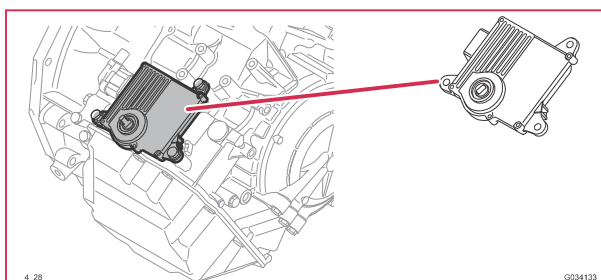


4/28 Transmission Control Module (TCM), MPS6

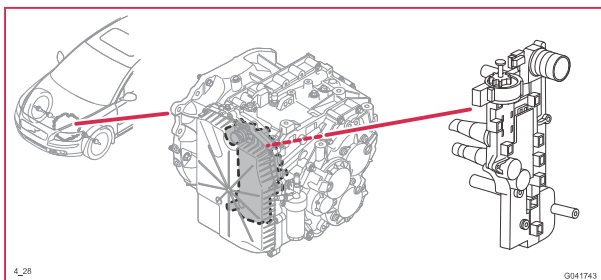


4/31 Passenger compartment fan control module

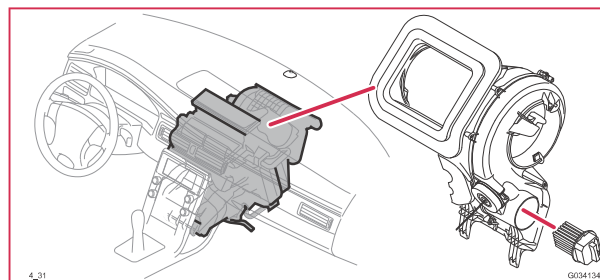


4/33 Sunroof control module

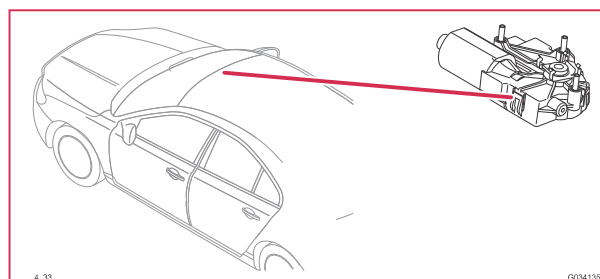


4/46 Engine Control Module (ECM), 4-Cyl. Turbo

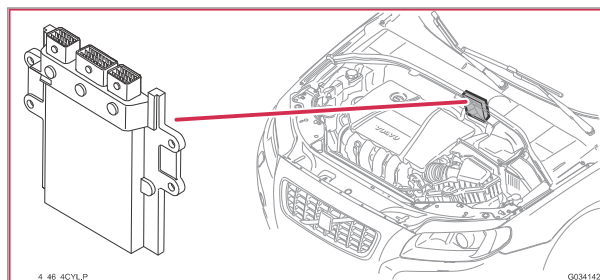

4/46 Engine Control Module (ECM), 4-Cyl. Diesel

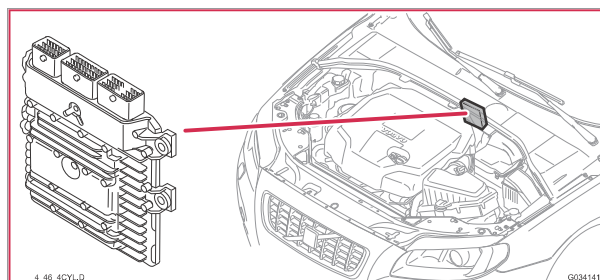


4/46 Engine Control Module (ECM), 5-Cyl.

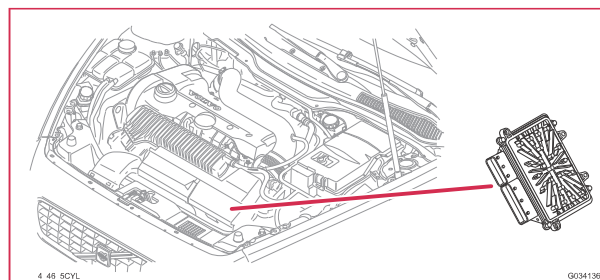


Component illustrations

4/46 - 4/56


4/46 Engine Control Module (ECM), 5-Cyl. Diesel

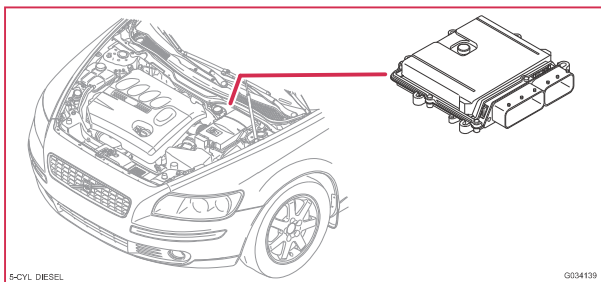


4/46 Engine Control Module (ECM), 5-Cyl. 2.0L Diesel

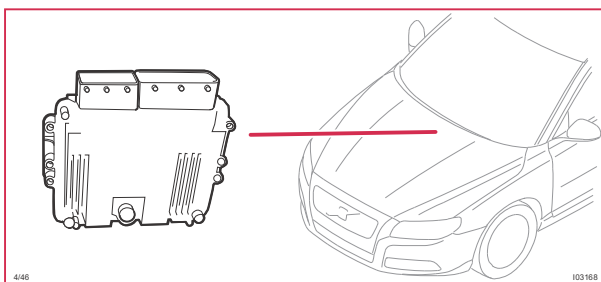


4/46 Engine Control Module (ECM), 6-Cyl.

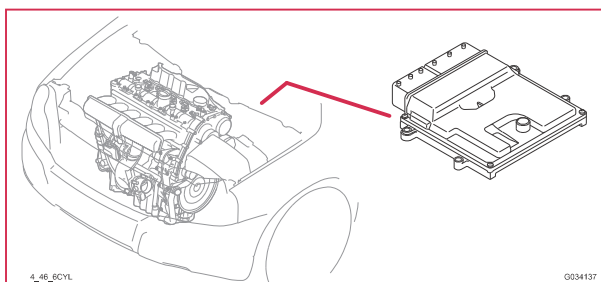


4/52 Power Seat Module (PSM)

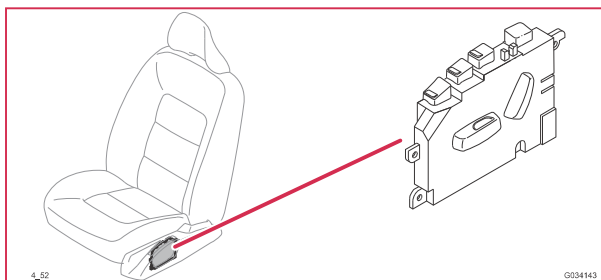


4/56 Central Electronic Module (CEM)

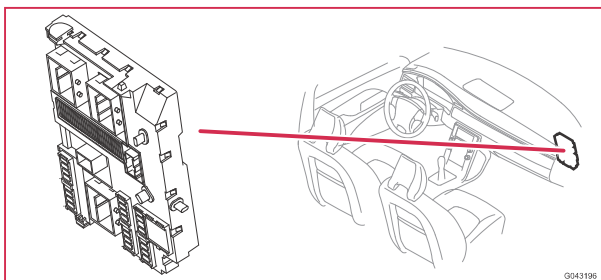


4/56:C1 Central Electronic Module (CEM)

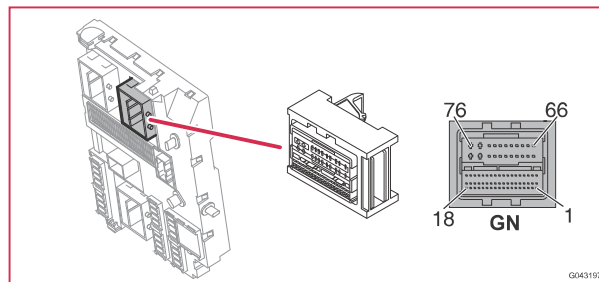


4/56:C2 Central Electronic Module (CEM)

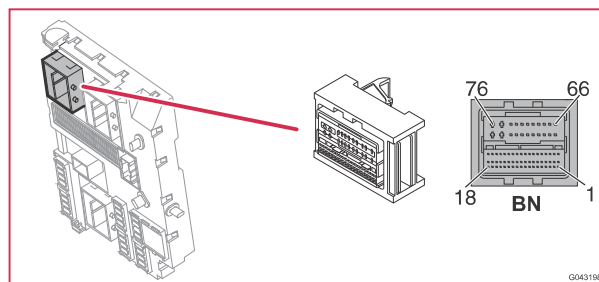


4/56:C3 Central Electronic Module (CEM)

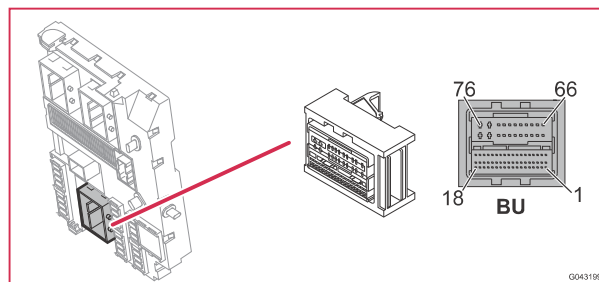

4/56:C4 Central Electronic Module (CEM)

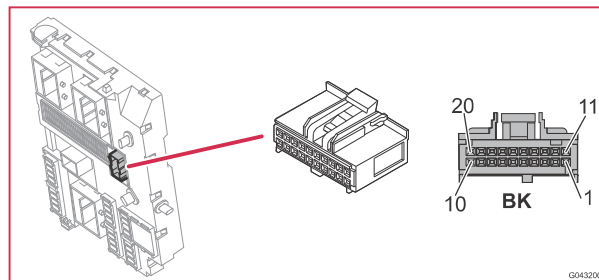


4/56:C5 Central Electronic Module (CEM)

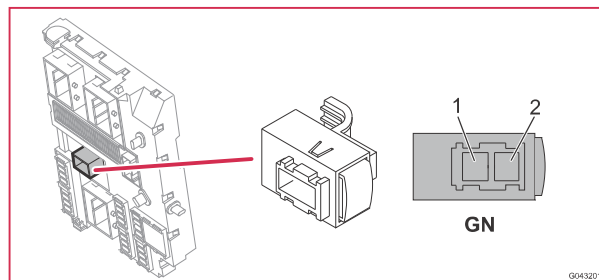


Component illustrations

4/68 - 4/99


4/68 Steering Wheel Angle Sensor Module (SAS)

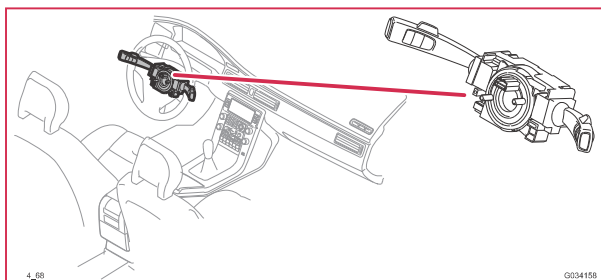


4/83 Fuel pump control module

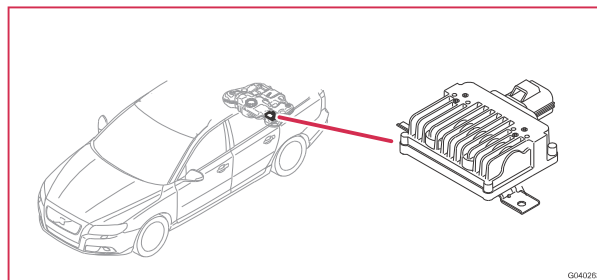


4/71 Cooling fan control module

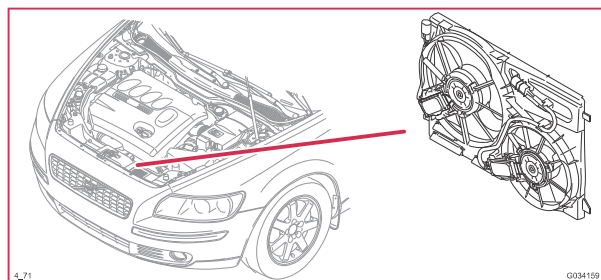


4/84 Suspension Module (SUM)

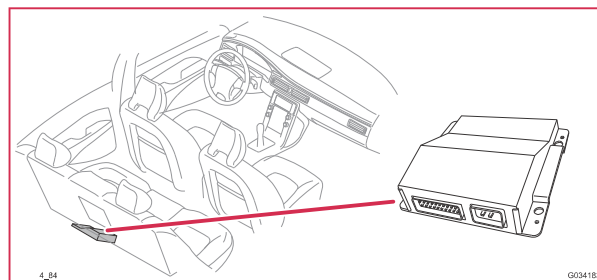


4/76 Remote control unit for garage door opener

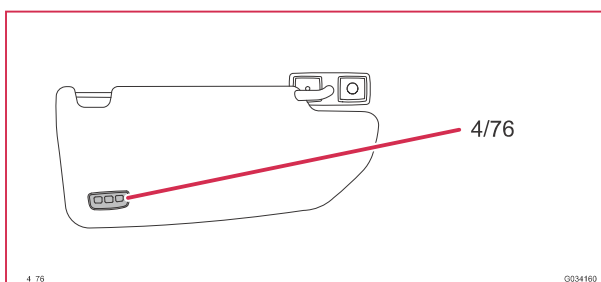


4/86 Parking Assistance Module (PAM)

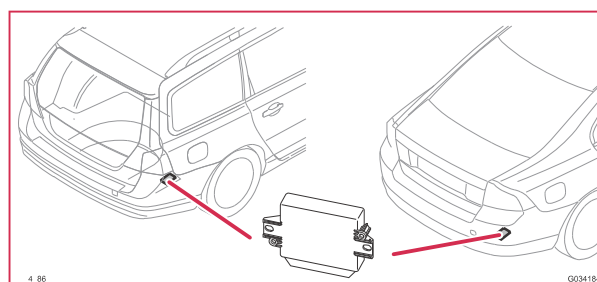


4/80 Forward Sensing Module (FSM)

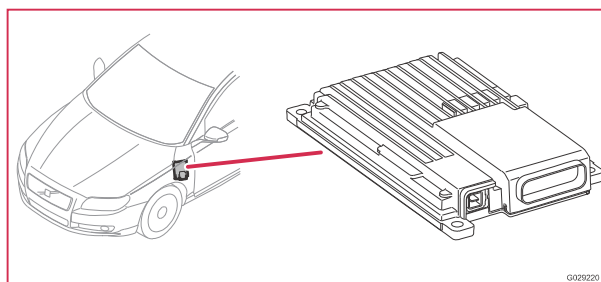


4/93 Keyless Vehicle Module (KVM)

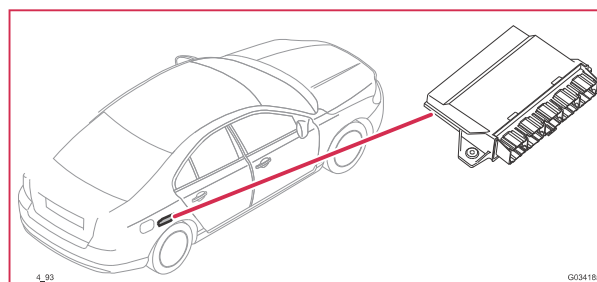

4/82 Differential Electronic Module (DEM)

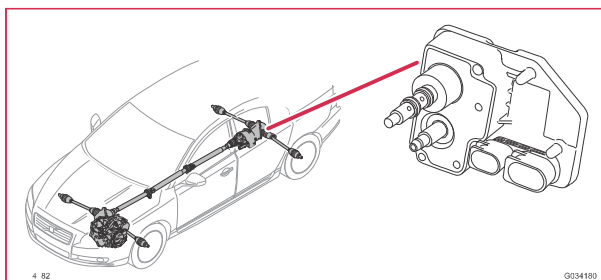


4/99 Electronic power steering control module

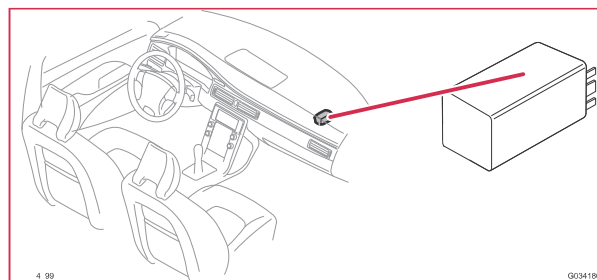


Component illustrations

4/102 - 4/124


4/102 Steering Column Lock Module (SCL)

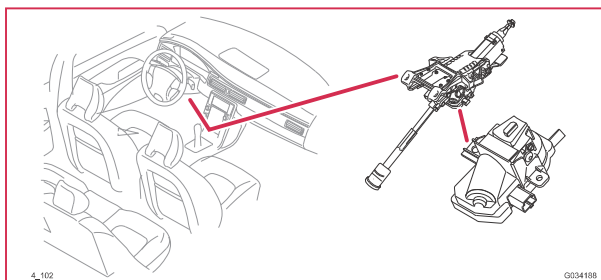


4/116 Power Operated Tailgate Module (POT), V70

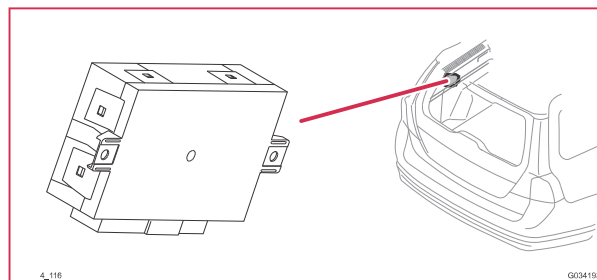


4/106 Control module, remote parking heater start

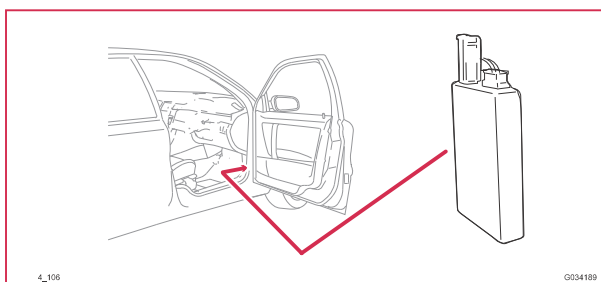


4/119 Remote Keyless Entry (TRX)

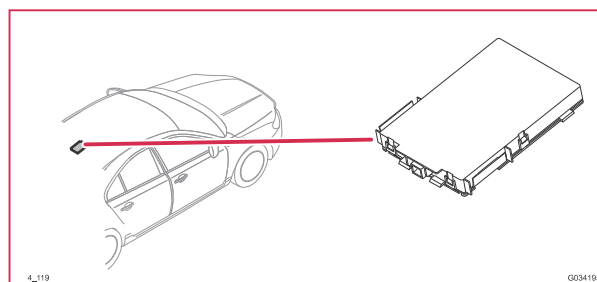


4/109 Glow plug control module

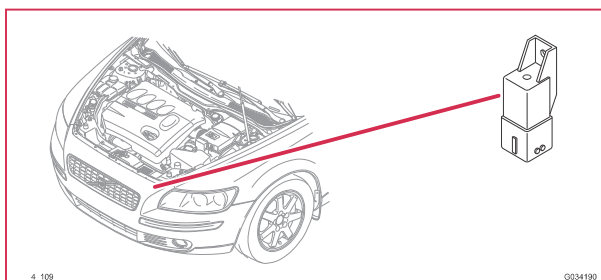


4/119.2 Signal receiver (LRX)

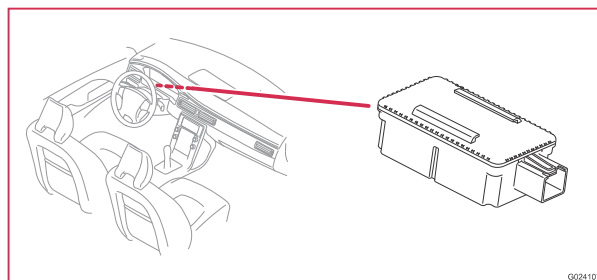


4/110 Trailer Module (TRM)

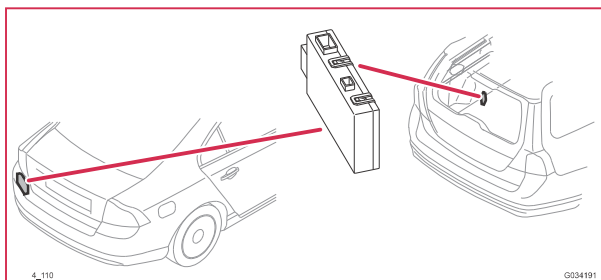


4/120 Parking Assistance Camera module (PAC)

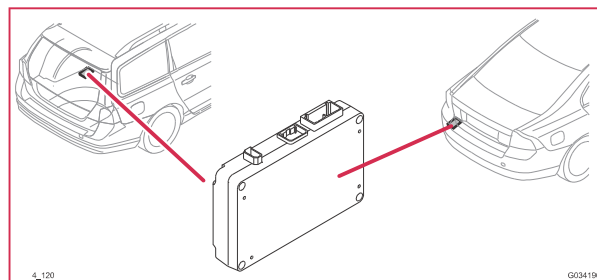

4/115 Park Brake Module (PBM)

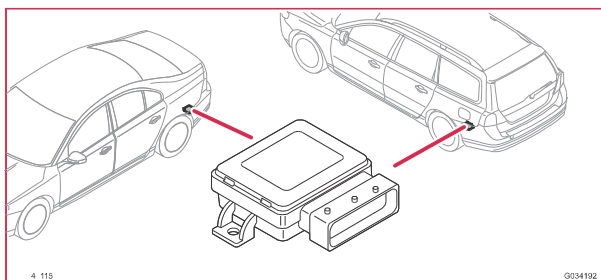


4/124 Accessory USB unit (AUU)

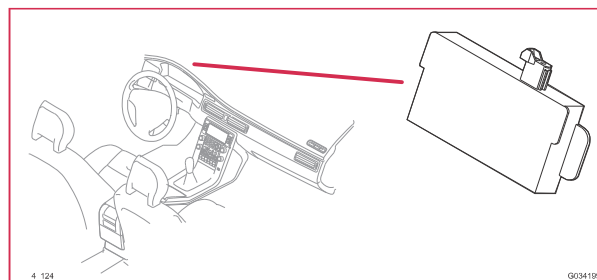


Component illustrations

4/125 - 6/19


4/125 Closing velocity module (CVM)

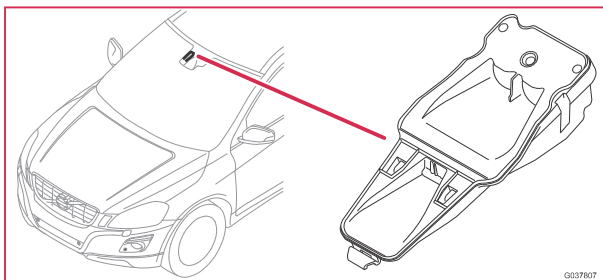


6/8 Central locking motor, trunk lid

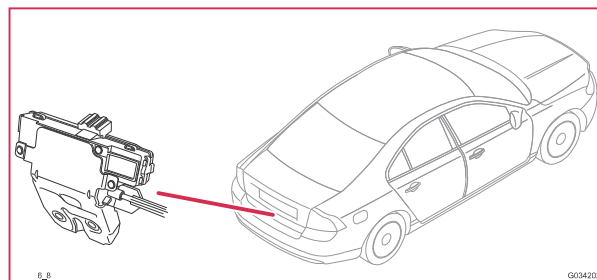


4/131 Control module back massage left

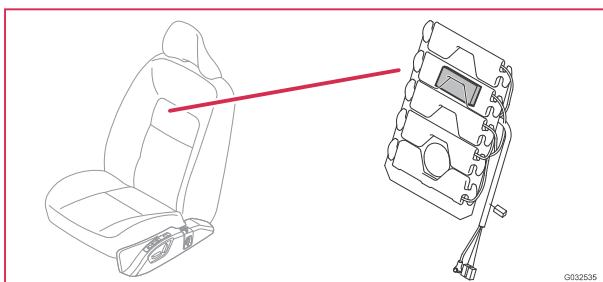


6/16 Driver seat motor, backrest angle

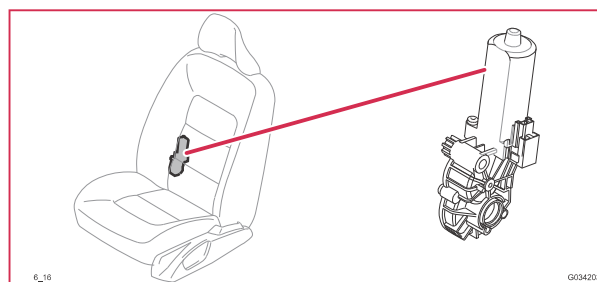


4/133 Control module back massage right

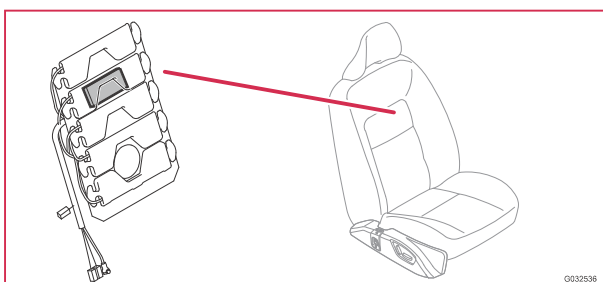


6/17 Driver seat motor, up/down front edge

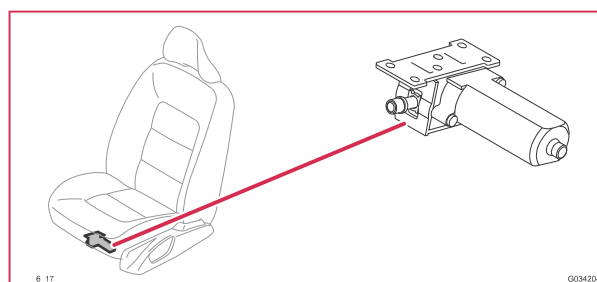


5/1 Driver Information Module (DIM)

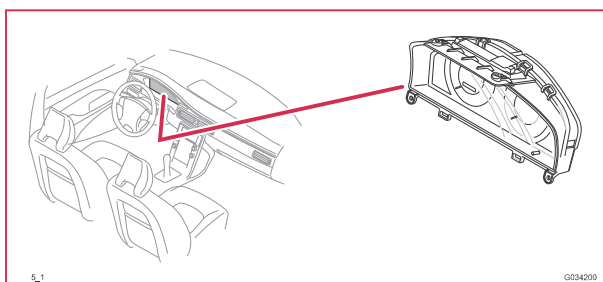


6/18 Driver seat motor, up/down rear edge

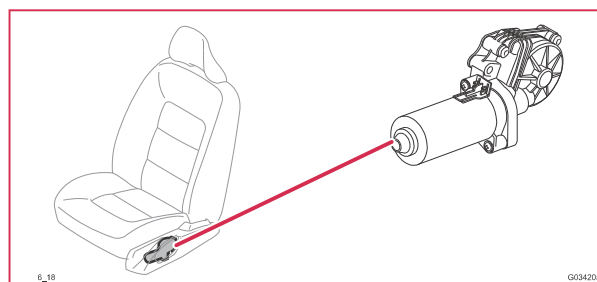

6/1 Wiper Motor Module (WMM)

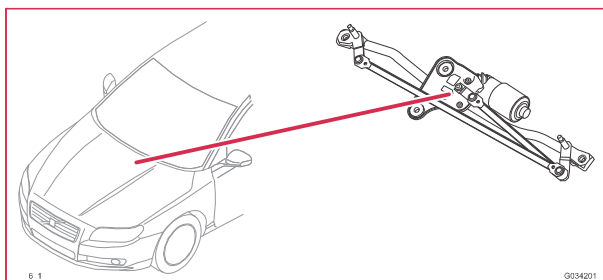


6/19 Driver seat motor, forward/backward

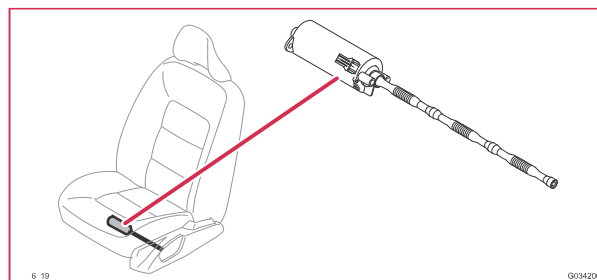


Component illustrations

6/20 - 6/35


6/20 Passenger seat motor, forward/backward

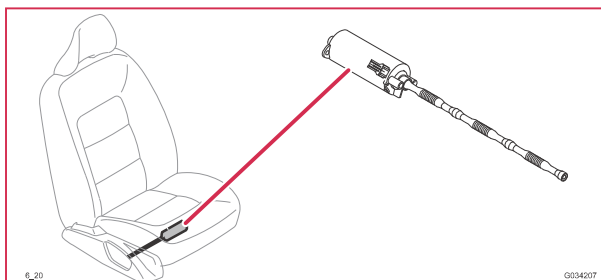


6/26 Alternator Control Module (ACM)

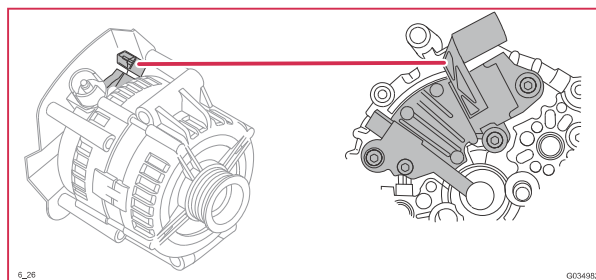


6/21 Passenger seat motor, up/down front edge

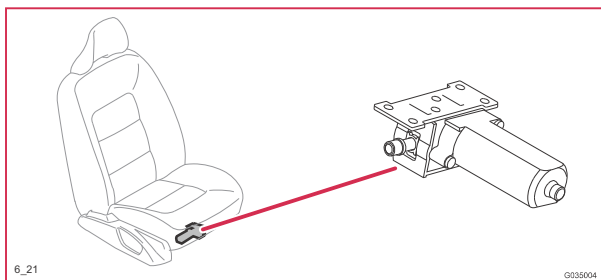


6/28 Motor, passenger compartment fan

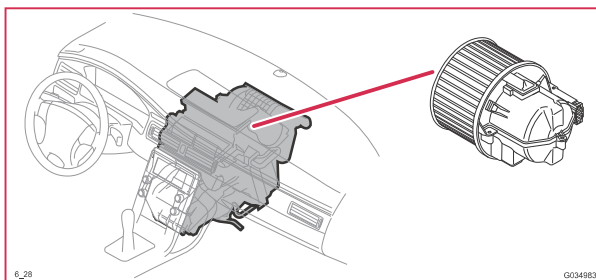


6/22 Passenger seat motor, up/down rear edge

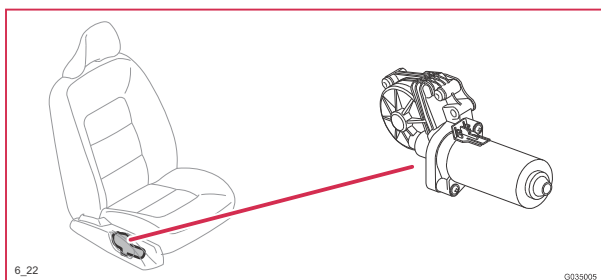


6/32 Rear window wiper motor, V70

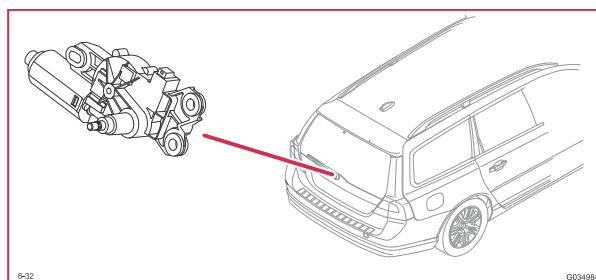


6/23 Passenger seat motor, backrest angle

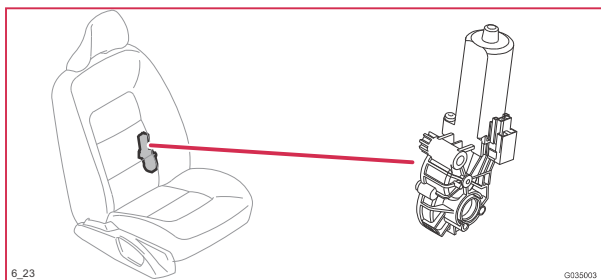


6/33 Fuel pump

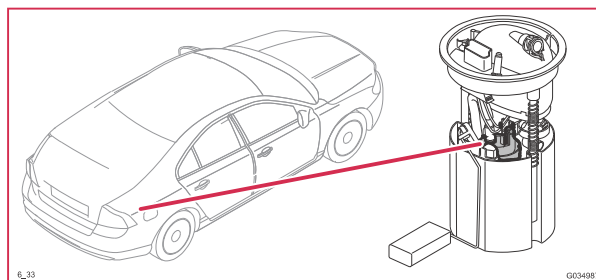

6/25 Starter motor

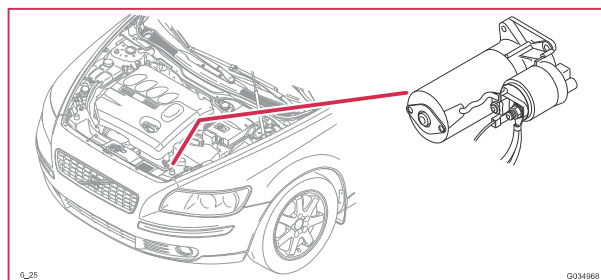


6/35 Fuel pump, auxiliary heater

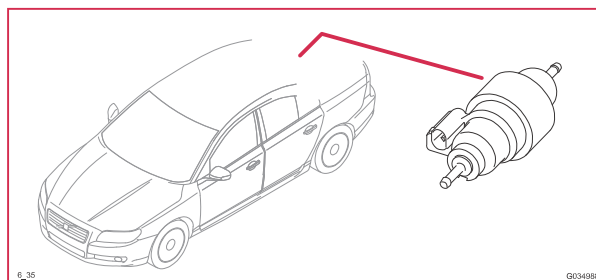

Component illustrations

6/36 - 6/59


6/36 Lock motor, central locking, LH front door

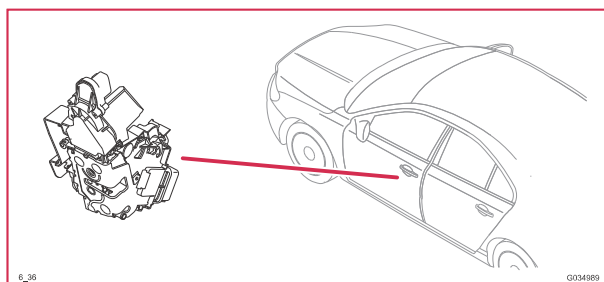

6_36

Q034989


6/55 Lock motor, central locking, RH front door

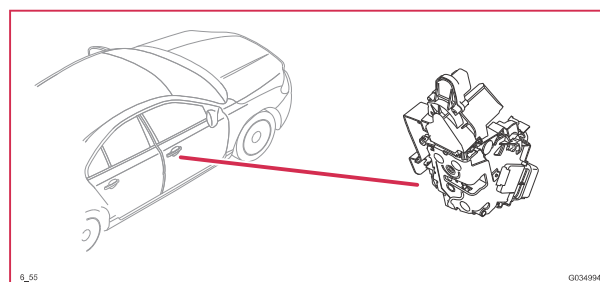

6_55

Q034994


6/37 Lock motor, fuel filler cover

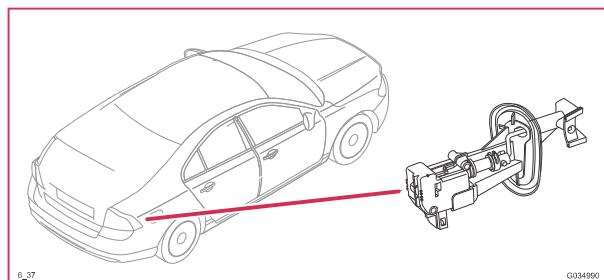

6_37

Q034990


6/56 Lock motor, central locking, RH rear door

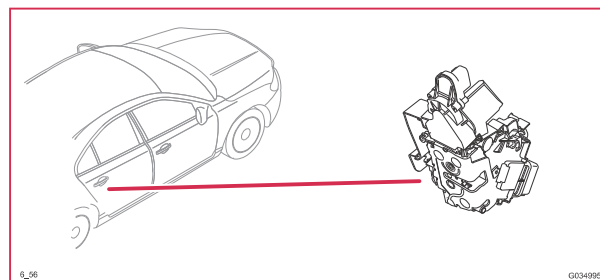

6_56

Q034995


6/38 Left-hand headlight level adjustment motor

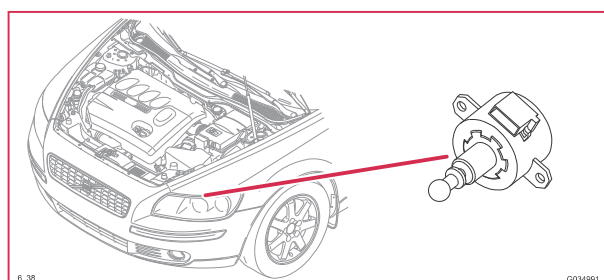

6_38

Q034991


6/57 Lock motor, central locking, LH rear door

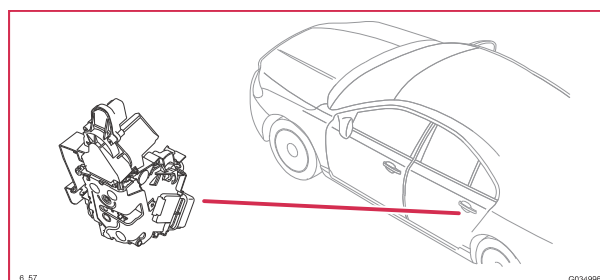

6_57

Q034996


6/39 Right-hand headlight level adjustment motor

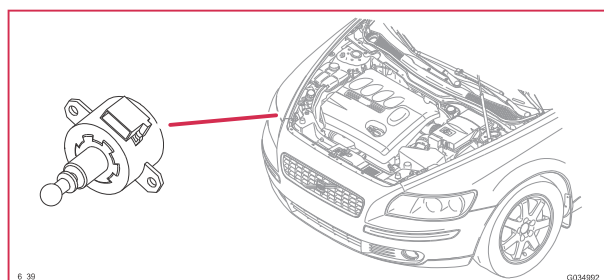

6_39

Q034992


6/58 Motor, front driver's door power window

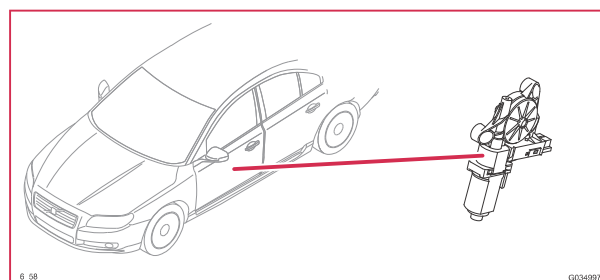

6_58

Q034997


6/48 Damper Motor Module (DMM), recirculation

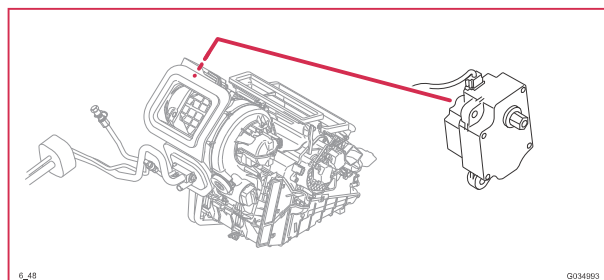

6_48

Q034993

6/59 Motor, rear left power window

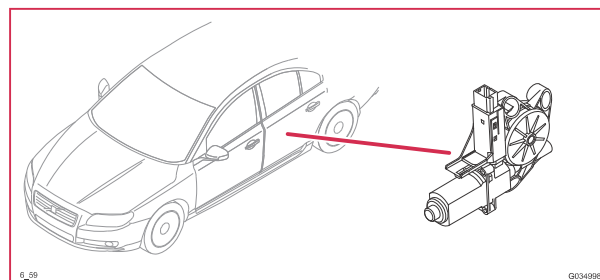


6_59

Q034998


Component illustrations

6/60 - 6/102


6/60 Motor, front passenger door power window

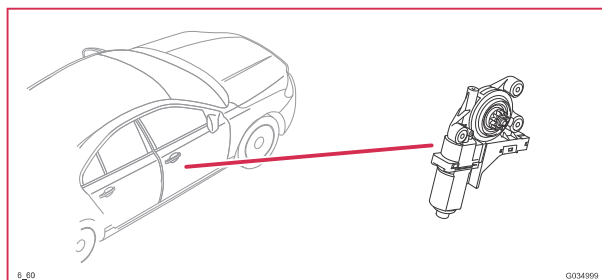


6/71 Valve, speed-dependent power steering

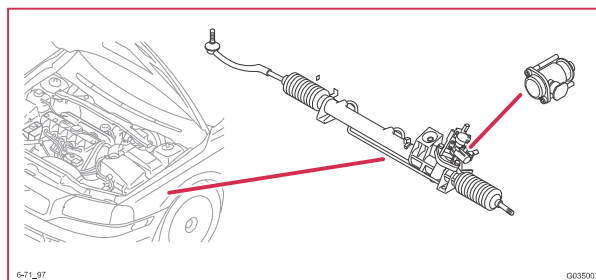


6/61 Motor, rear right power window

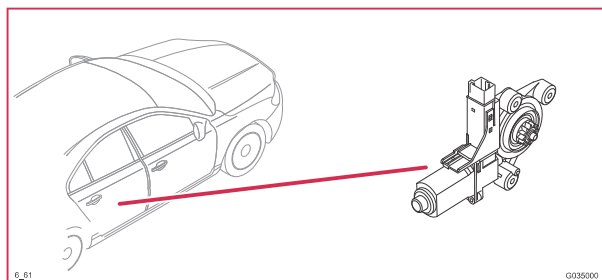


6/73 Coolant pump

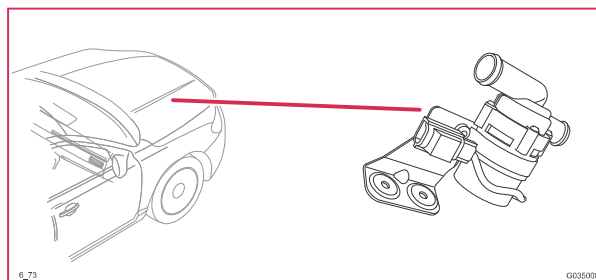


6/62 Power door mirror, left

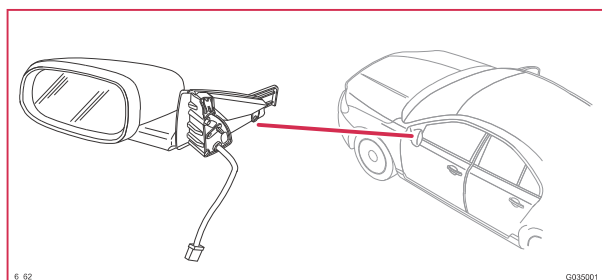


6/95 Damper Motor Module (DMM), temperature, left side

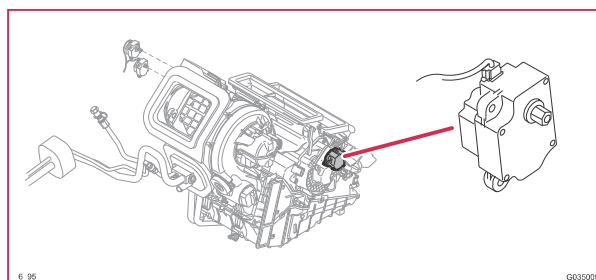


6/63 Power door mirror, right

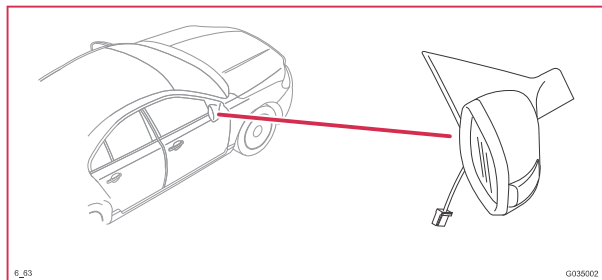


6/96 Damper Motor Module (DMM), temperature, right side

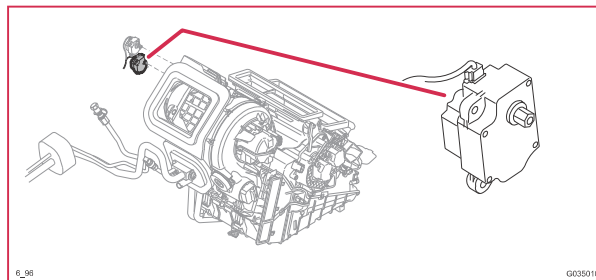

6/67 Pump, fuel leakage control

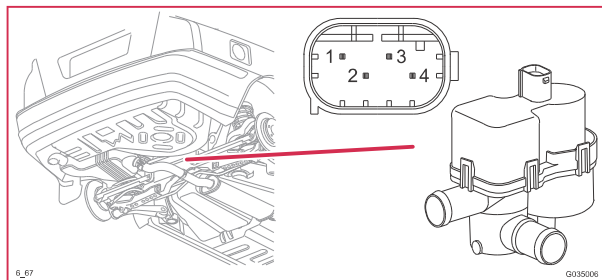


6/102 Damper Motor Module (DMM), defroster

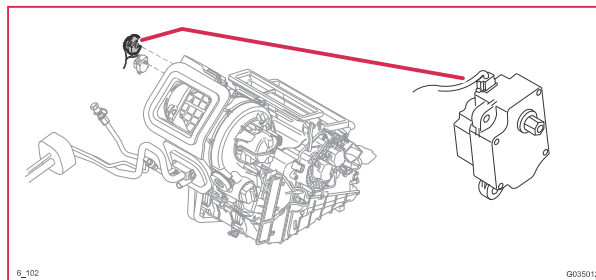


Component illustrations

6/103 - 6/141


6/103 Damper Motor Module (DMM), floor/ventilation

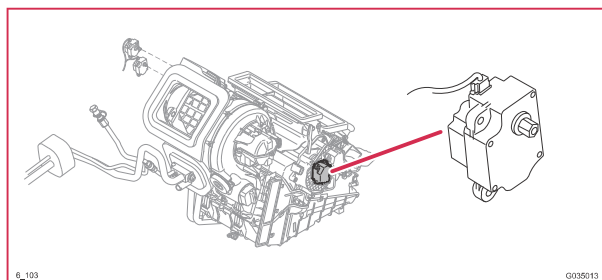


6/120 Throttle unit, Diesel

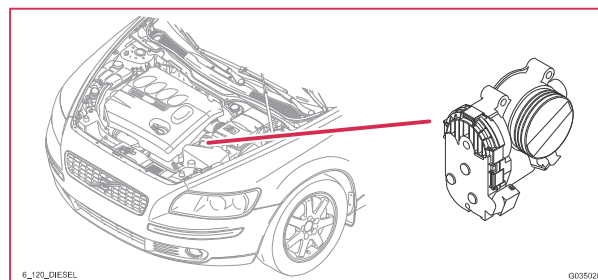


6/104 High pressure headlight washer motor

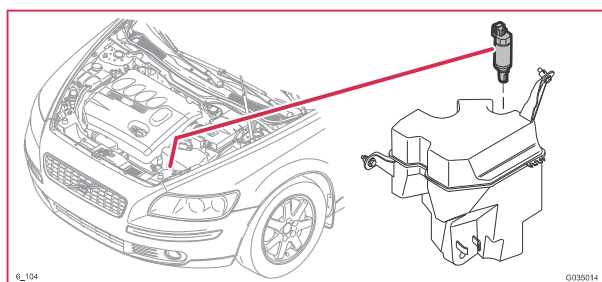


6/127 Washer motor

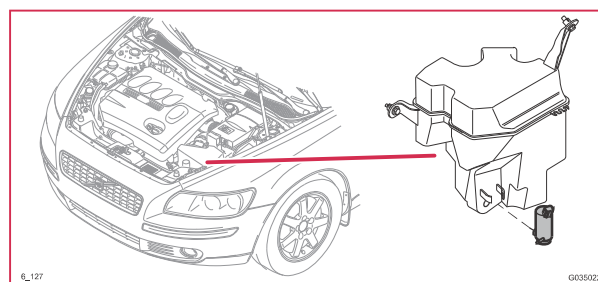


6/120 Throttle unit, 4-Cyl.

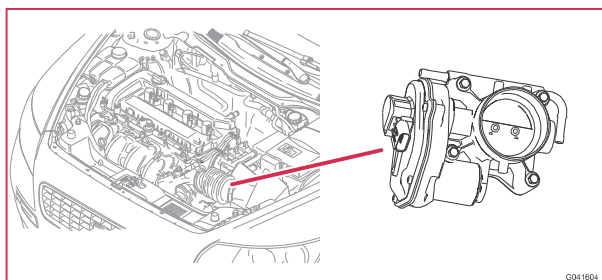


6/139 Upper actuating motor, intake manifold

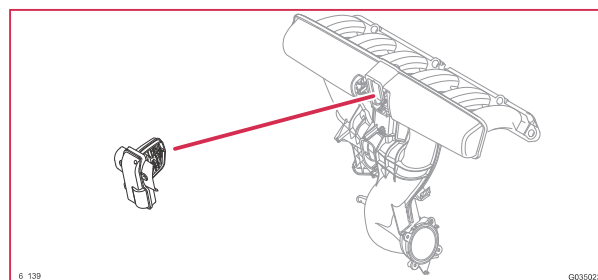


6/120 Throttle unit, 5-Cyl.

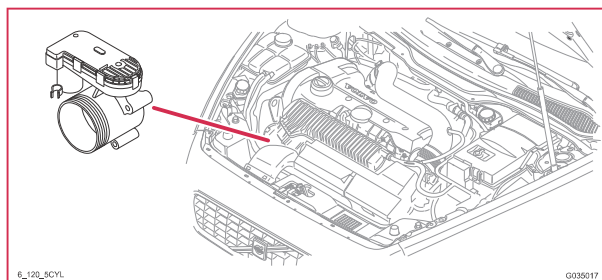


6/140 Lower actuating motor, intake manifold

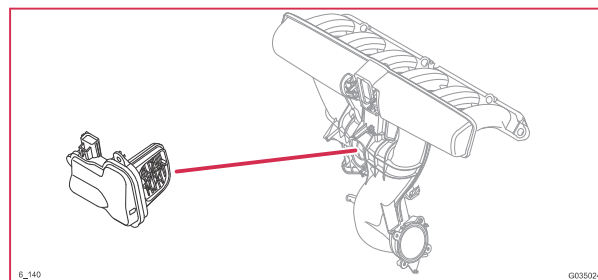

6/120 Throttle unit, 6-Cyl.

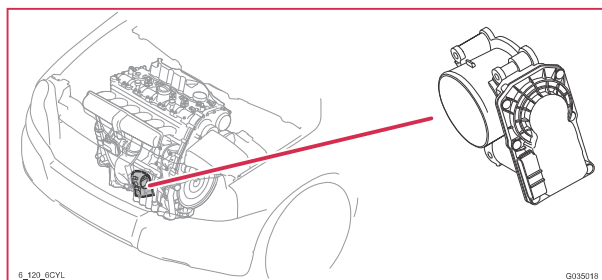


6/141 Motor folding head restraint left

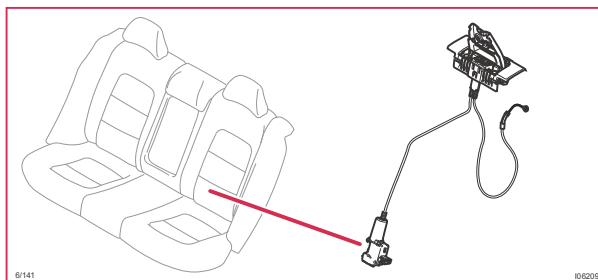


Component illustrations

6/142 - 7/4


6/142 Motor folding head restraint right

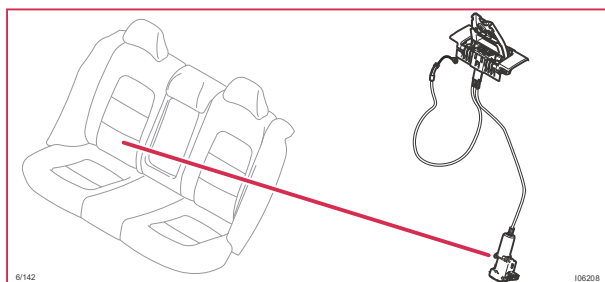


6/165 Motor tailgate opening left

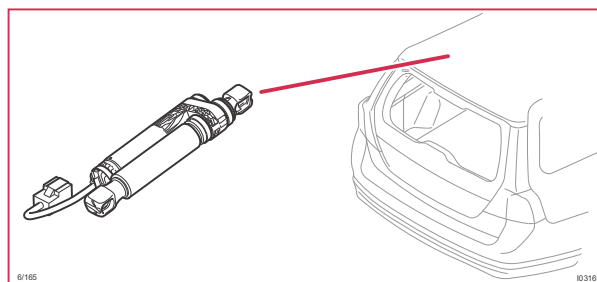


6/146 Lock motor, rear left brake disc

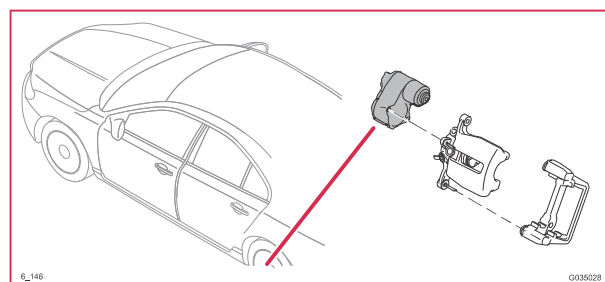


6/169 Left pump back massage

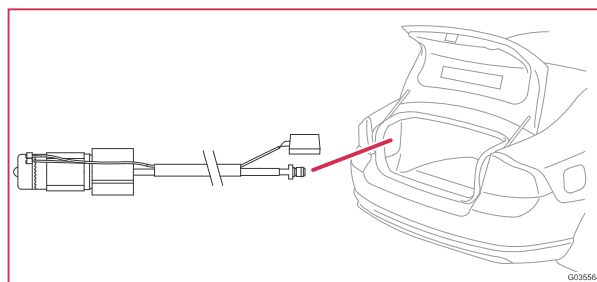


6/147 Lock motor, rear right brake disc

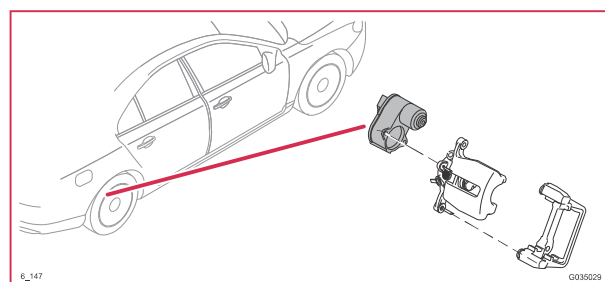


6/170 Right pump back massage

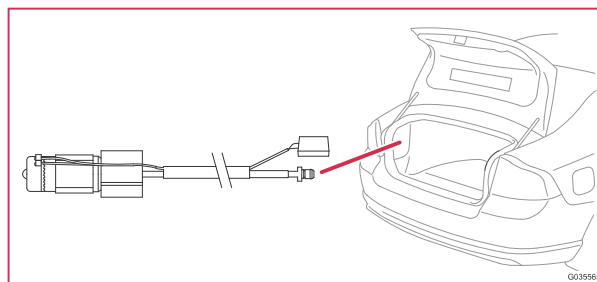


6/149 Tailgate closing motor, V70

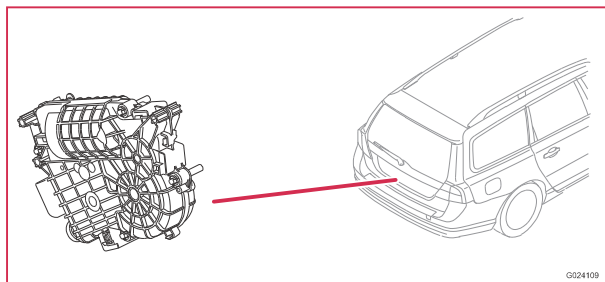


6/179 Electric oil pump

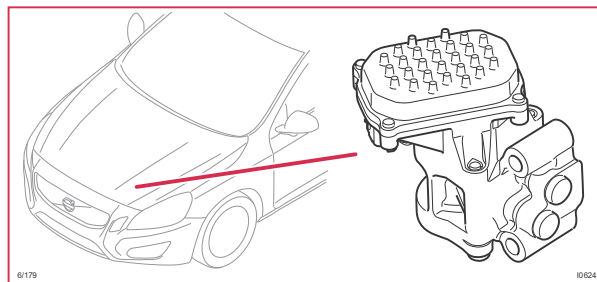

6/164 Electrical power steering module (EHPS)

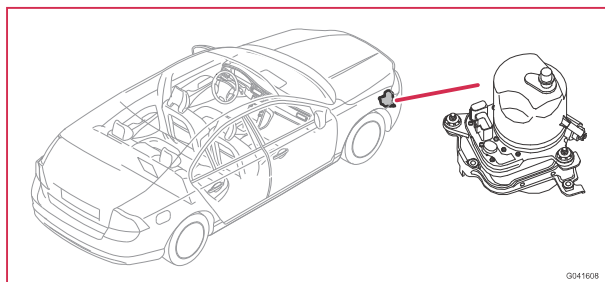


7/4 Brake fluid level sensor

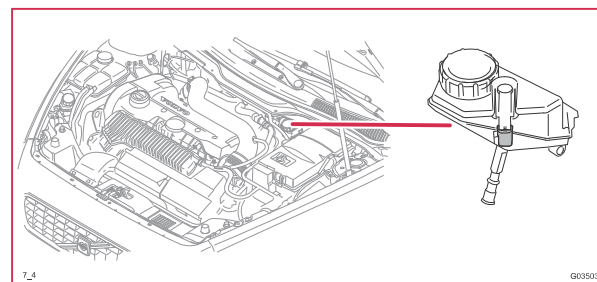


Component illustrations

7/5 - 7/17


7/5 Washer fluid level sensor

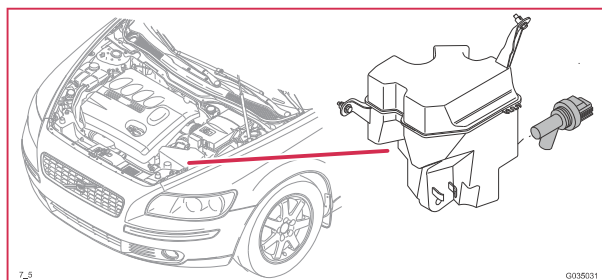


7/15 Front heated oxygen sensor, 5-Cyl.

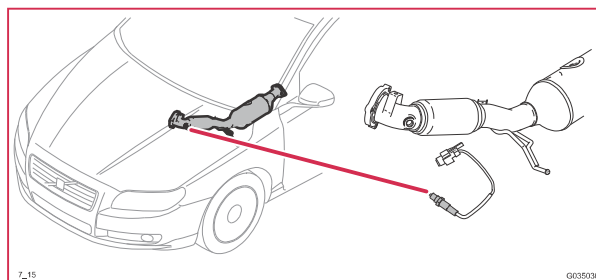


7/6 Oil pressure monitor

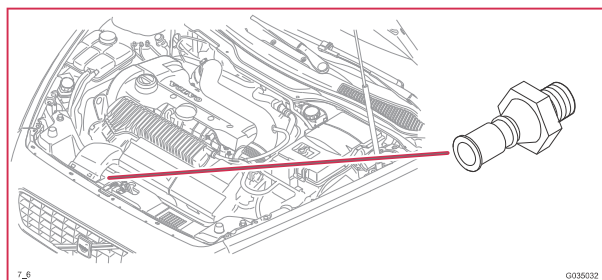


7/15 Front oxygen sensor, bank 1, 6-Cyl.

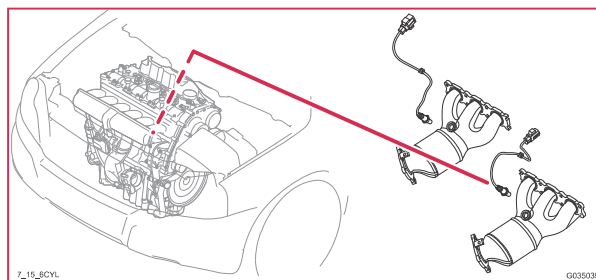


7/8 Pressure sensor, climate control system

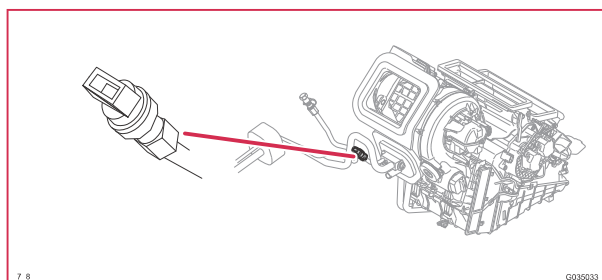


7/15 Front heated oxygen sensor, Diesel

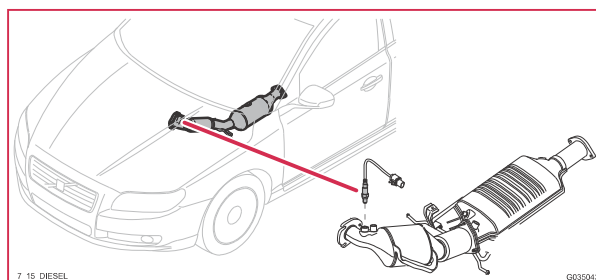


7/12 Solar sensor, twilight sensor and indicator alarm

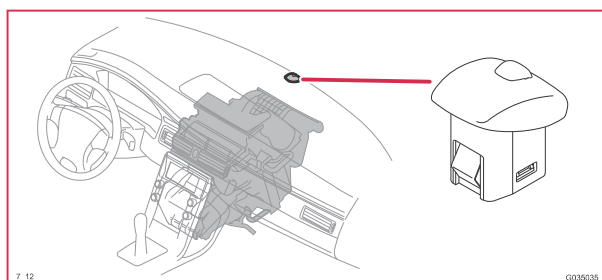


7/16 Sensor, coolant temperature

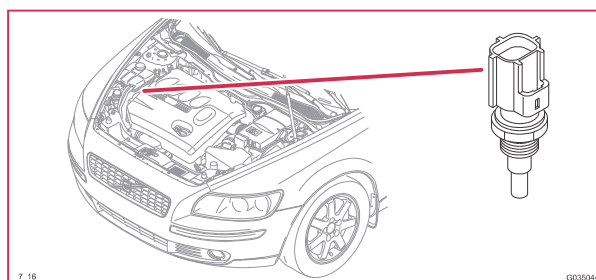

7/15 Front heated oxygen sensor, 4-Cyl.

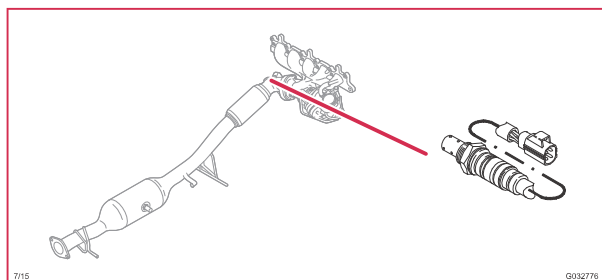


7/17 Mass airflow sensor (MAF)

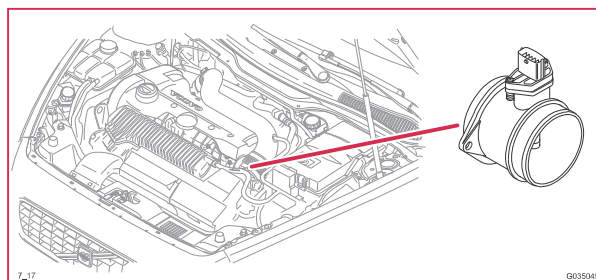


Component illustrations

7/23 - 7/51


7/23 Rear knock sensor

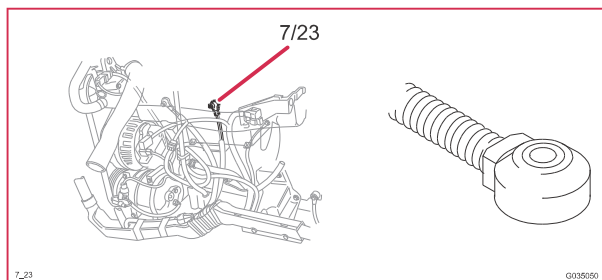


7/31 Sensor ABS, front left

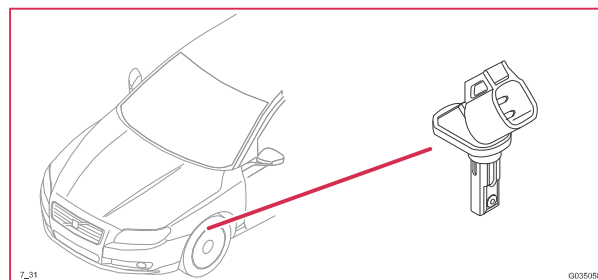


7/24 Front knock sensor

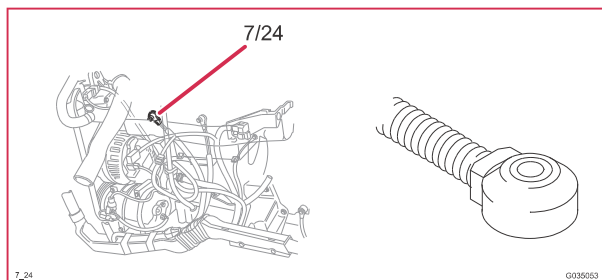


7/32 Sensor ABS, front right

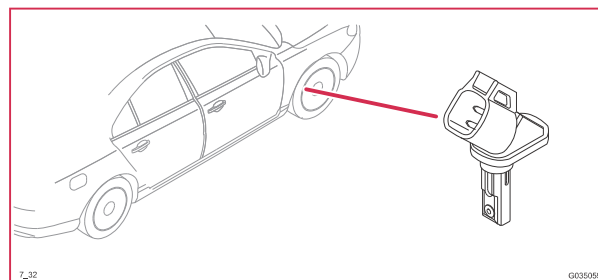


7/25 Impulse sensor, 4-Cyl.

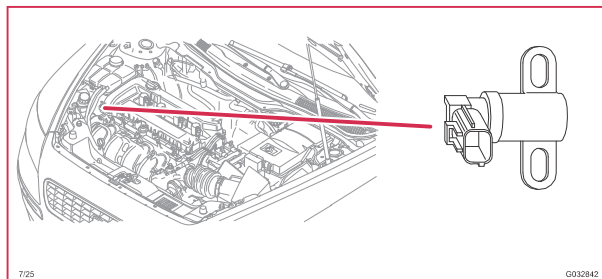


7/35 Oil level sensor

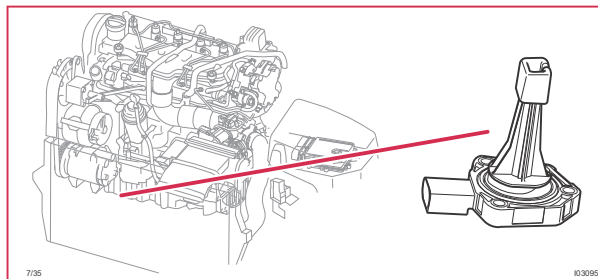


7/25 Impulse sensor, 5-Cyl. & Diesel

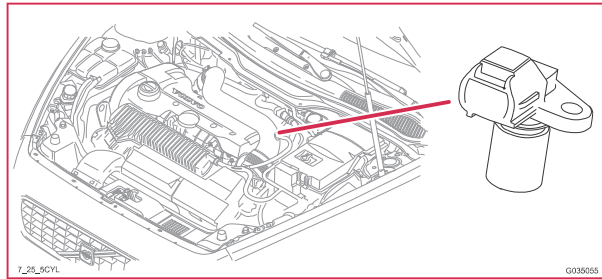


7/41 Temperature sensor evaporator

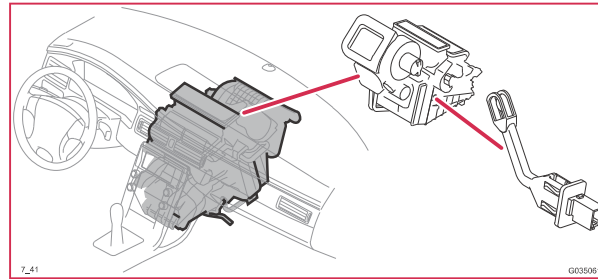

7/25 Impulse sensor, 6-Cyl.

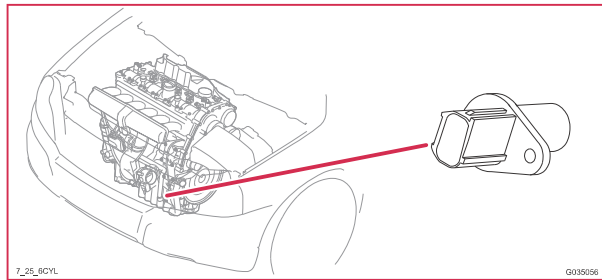


7/51 Accelerator pedal sensor

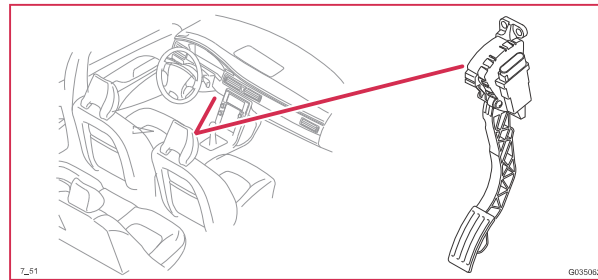


Component illustrations

7/56 - 7/87


7/56 Sensor ABS, rear left

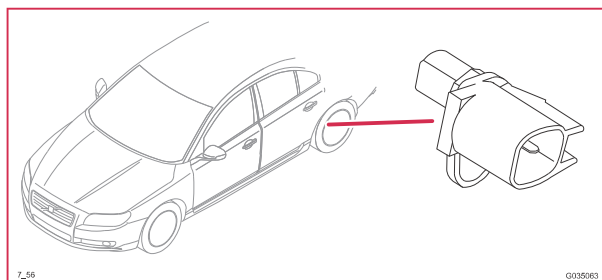


7/81 Pressure sensor intake manifold, 5-Cyl. Diesel

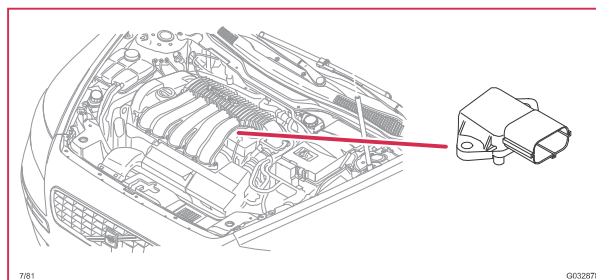


7/57 Right-hand rear ABS sensor

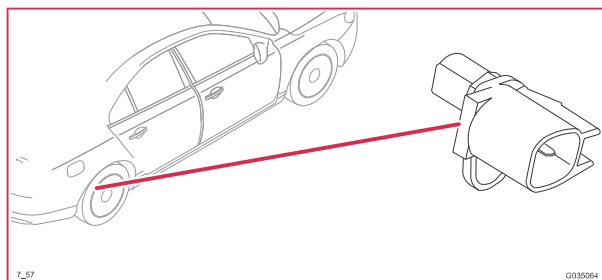


7/81 Pressure sensor, intake manifold, 6-Cyl.

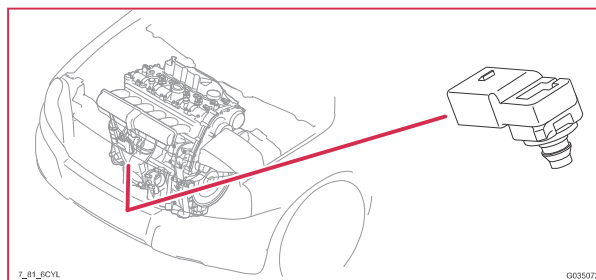


7/69 Sensor outdoor temperature

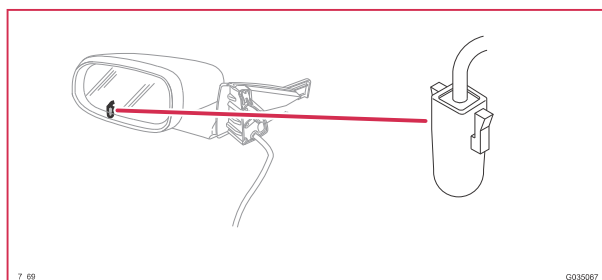


7/82 Rear oxygen sensor, bank 1, 4-Cyl. Turbo

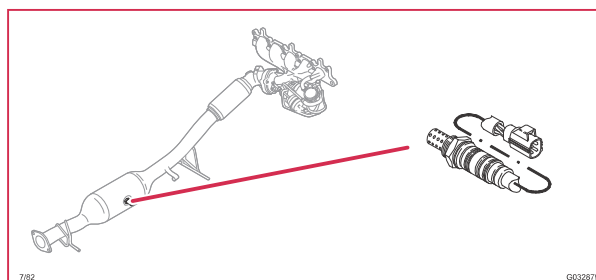


7/73 Coolant level sensor

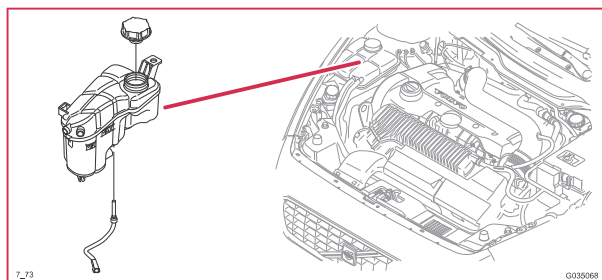


7/82 Rear oxygen sensor, bank 1, 6-Cyl.

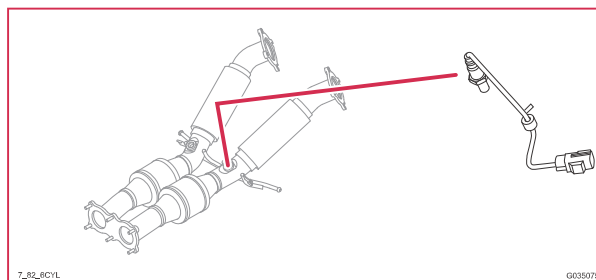

7/81 Pressure sensor intake manifold, 4-Cyl.

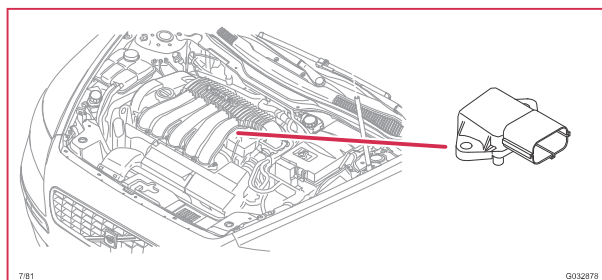


7/87 Acceleration sensor, Four-C, front left

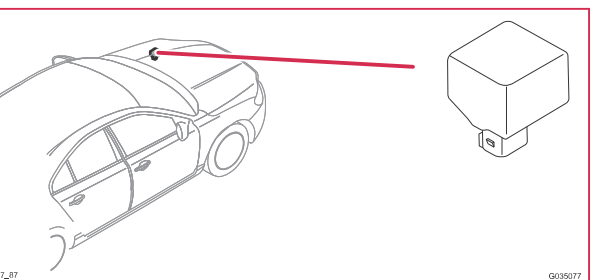


Component illustrations

7/88 - 7/110


7/88 Acceleration sensor, Four-C, front right

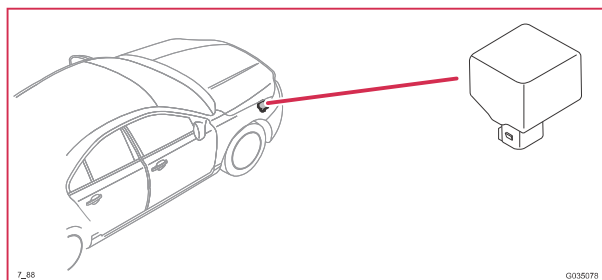


7/103 Front oxygen sensor, bank 2, 6-Cyl.

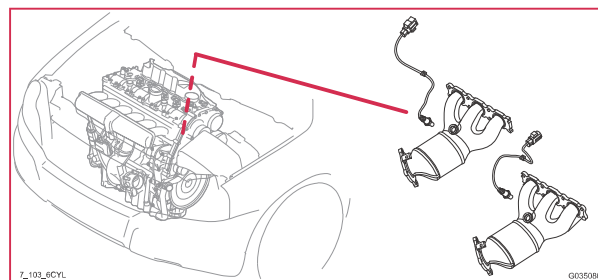


7/89 Acceleration sensor, Four-C, rear left

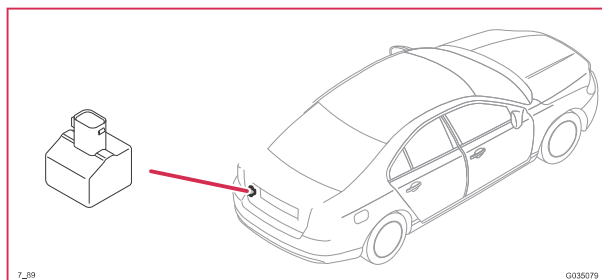


7/104 Rear oxygen sensor, bank 2, 6-Cyl.

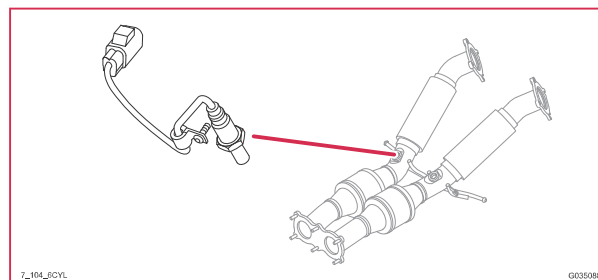


7/90 Moisture sensor

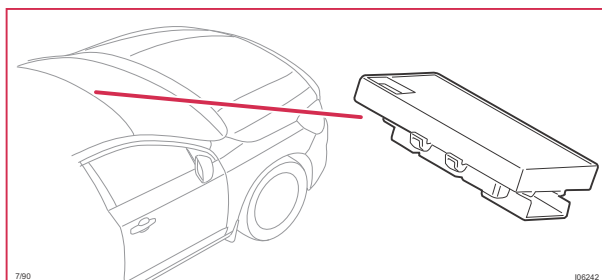


7/108 Left-hand rear side impact sensor

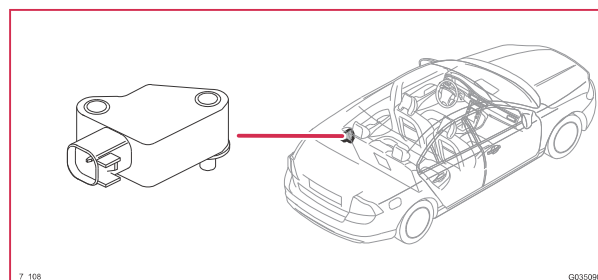


7/91 Steering angle sensor

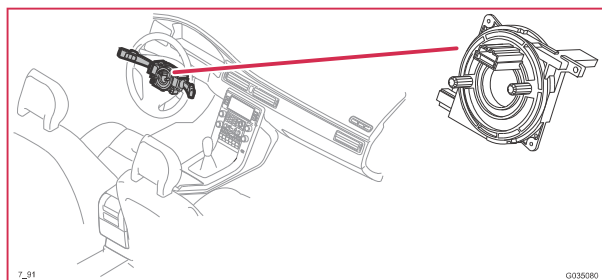


7/109 Right-hand rear side impact sensor

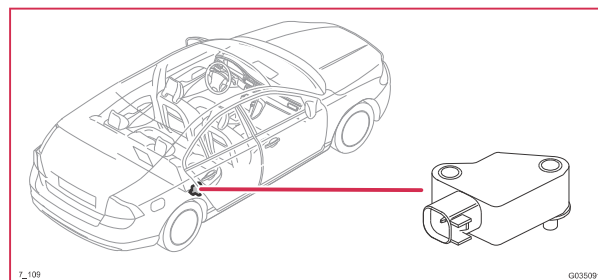

7/93 Occupant Weight Sensor (OWS)

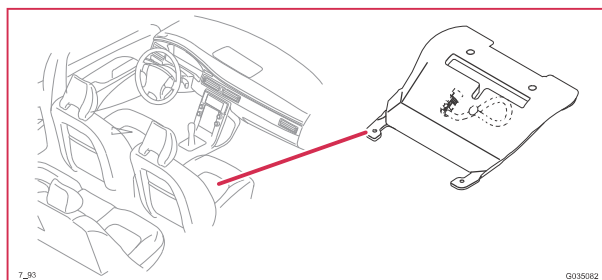


7/110 Temperature sensor, driver's seat

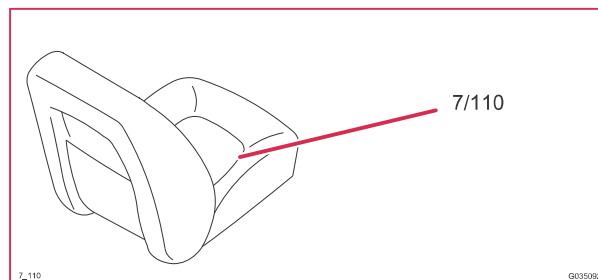


Component illustrations

7/111 - 7/123


7/111 Temperature sensor, passenger seat

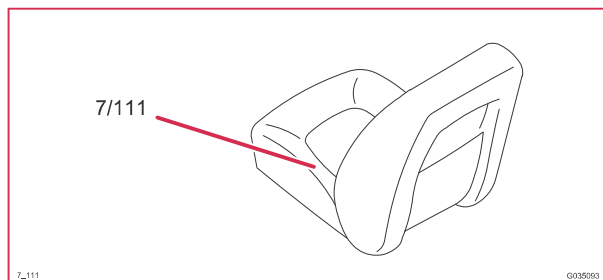


7/118 Height sensor, suspension, front left

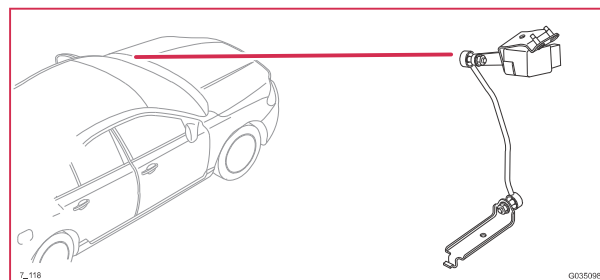


7/112 Seat temperature sensor, LH rear

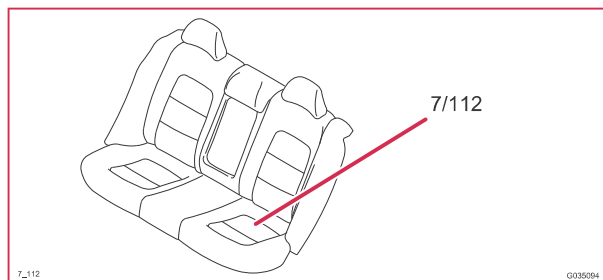


7/119 Height sensor, suspension, front right

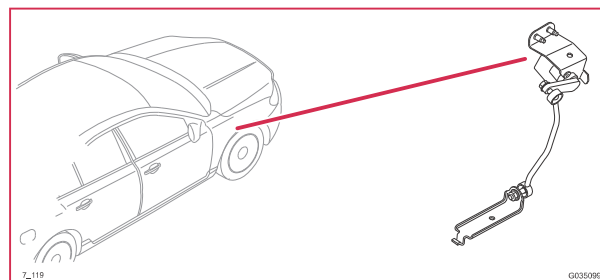


7/113 Seat temperature sensor, RH rear

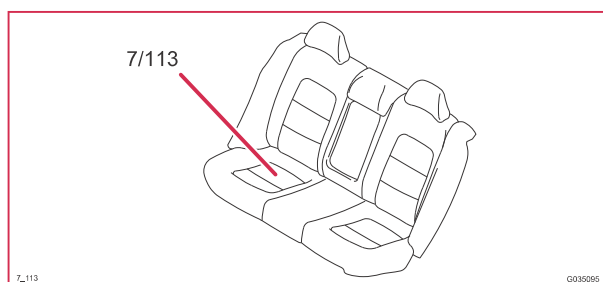


7/120 Height sensor, suspension, rear left

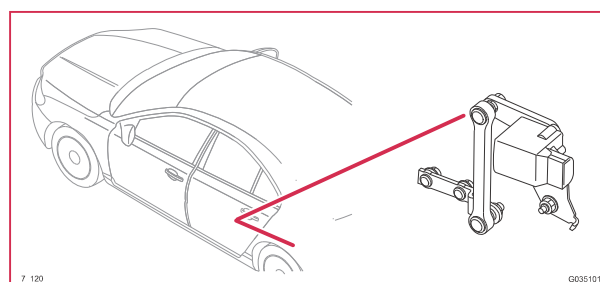


7/115 Side impact sensor, left B-post

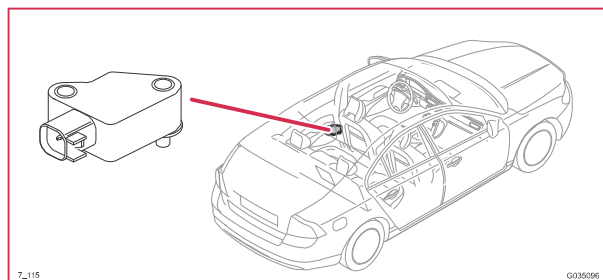


7/121 Height sensor, suspension, rear right

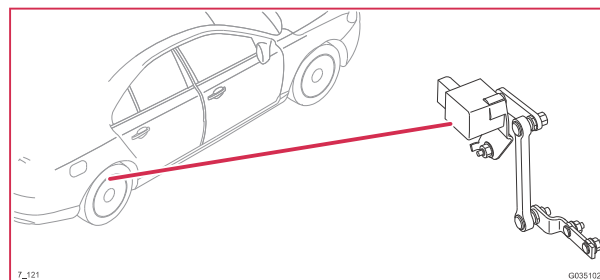

7/116 Side impact sensor, right B-post

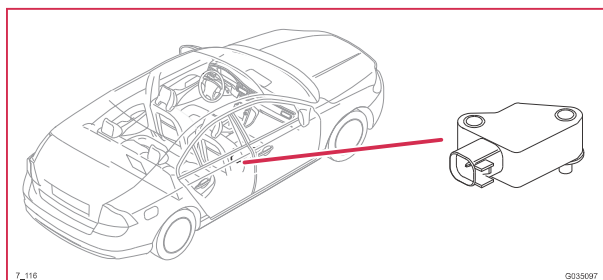


7/123 Clutch pedal sensor

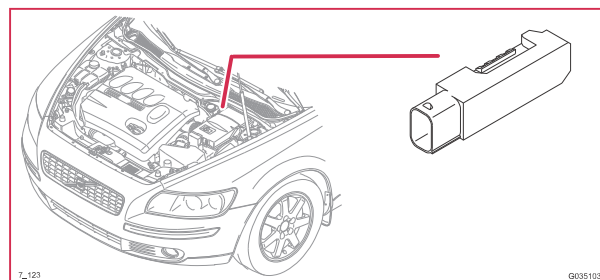


Component illustrations

7/124 - 7/164


7/124 Sensor brake pedal

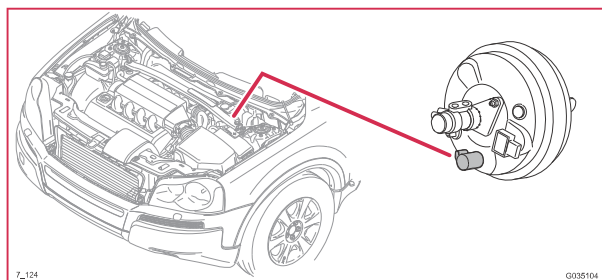


7/154 Sensor fuel temperature

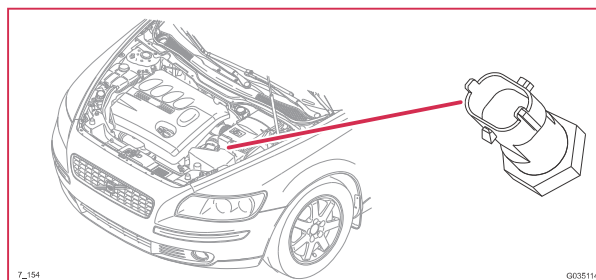


7/130 Fuel level sensor, ejector side

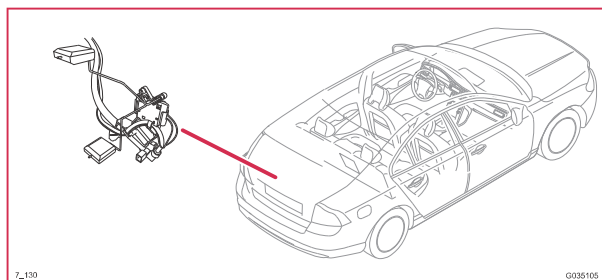


7/156 Pressure and temperature sensor, fuel

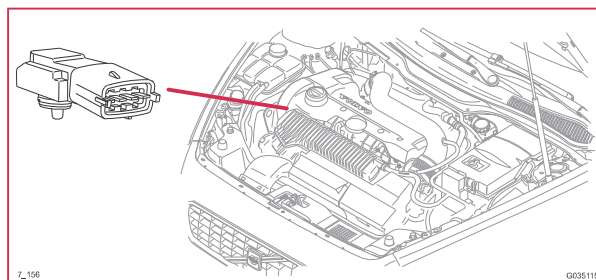


7/131-7/134 Rear parking assistance sensor

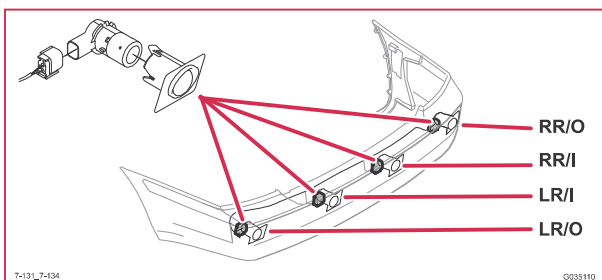


7/159 Air Quality Sensor (AQS)

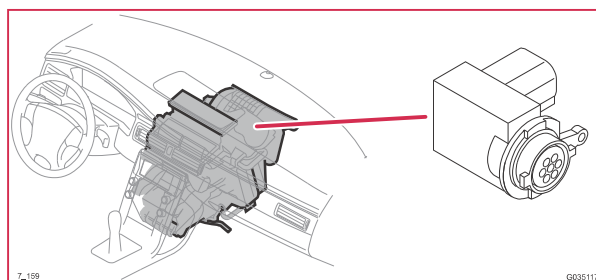


7/143 Sensor fuel level, pump side

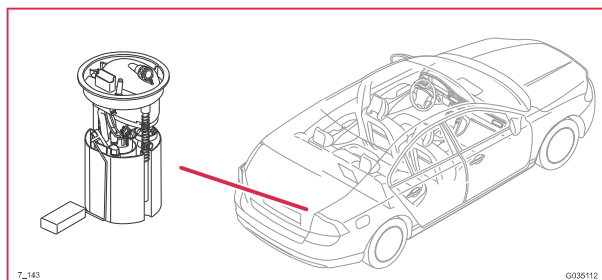


7/162 Pressure sensor, fuel line

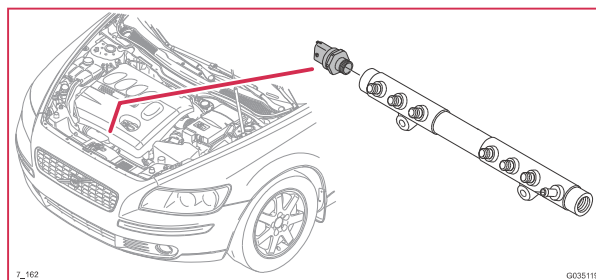

7/149 Rain Sensor Module (RSM)

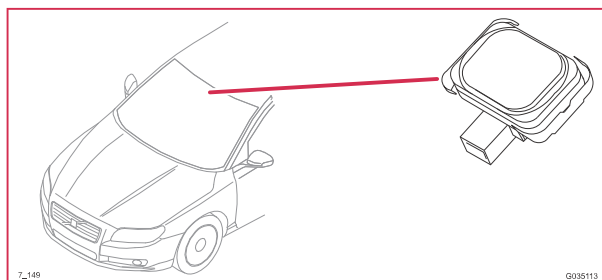


7/164 Body Sensor Cluster Stability Sensor (BSC)

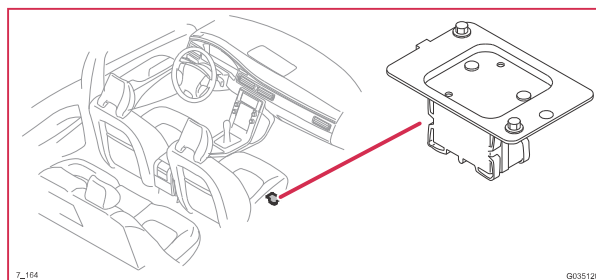


Component illustrations

7/165 - 7/173


7/165 Pressure and temperature sensor, intake manifold, 4-Cyl.

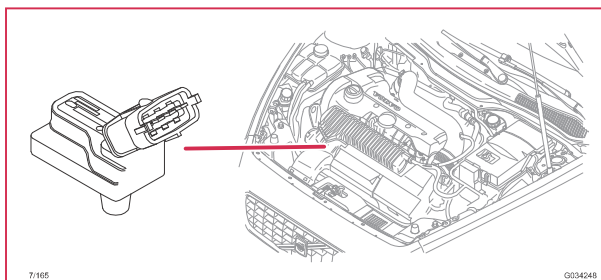


7/165 Pressure and temperature sensor, intake manifold, 5-Cyl.

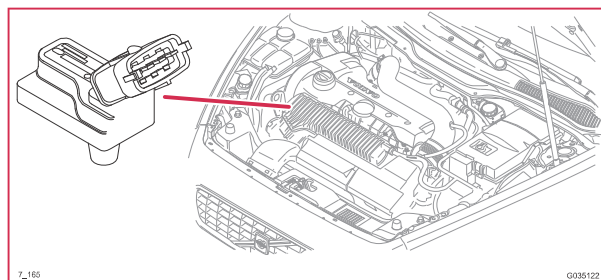


7/165 Pressure and temperature sensor, intake manifold, Diesel

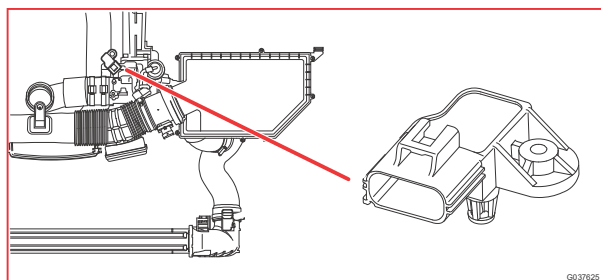


7/165 Pressure and temperature sensor, intake manifold, 6-Cyl.

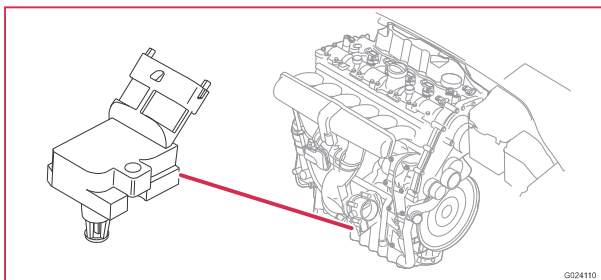


7/166 Oil level sensor, 6-Cyl.

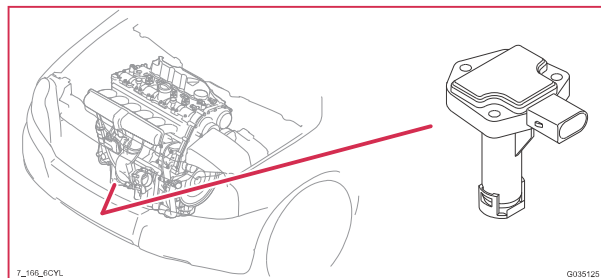


7/168 Fuel pressure sensor, low

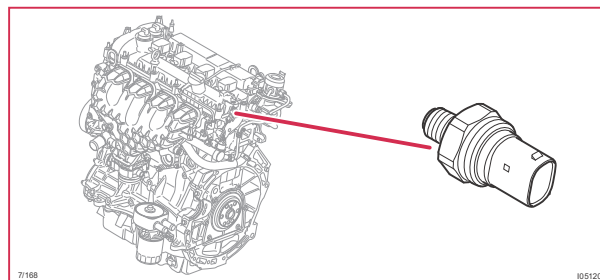


7/172 Camshaft position sensor, intake side, 5-Cyl.

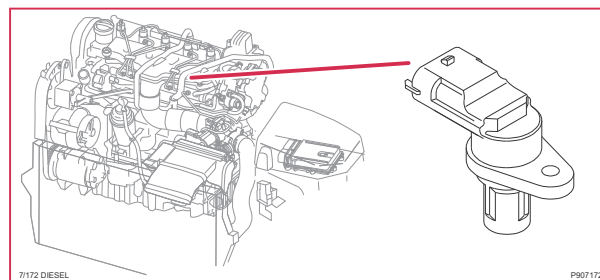


7/172 Camshaft position sensor, intake side, 6-Cyl.

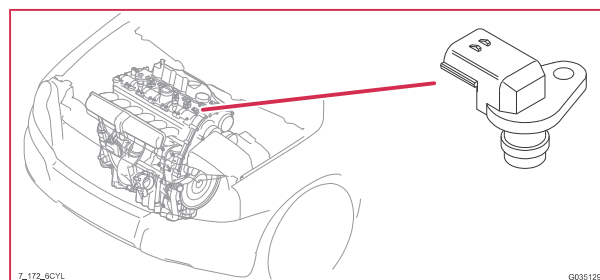

7/172 Position sensor camshaft, intake side, Diesel

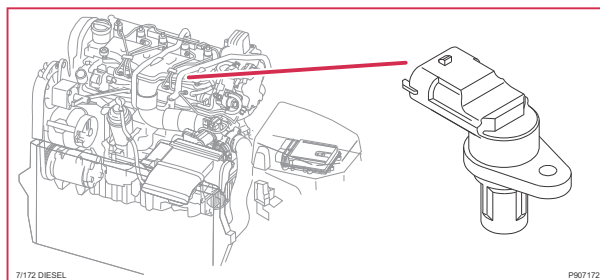


7/173 Position sensor camshaft, outlet side, 4-Cyl.

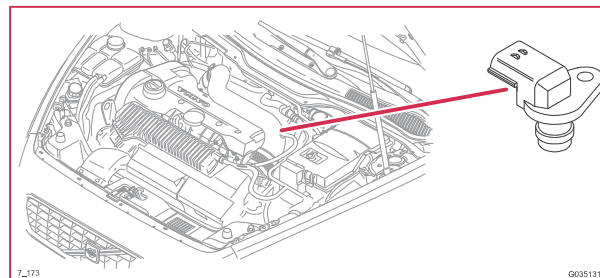


Component illustrations

7/173 - 7/193


7/173 Camshaft position sensor, exhaust side, 5-Cyl.

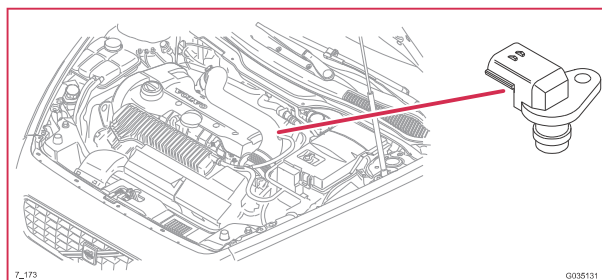


7/178 Front impact sensor, right

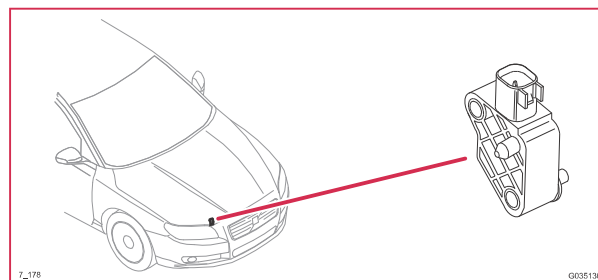


7/173 Camshaft position sensor, exhaust side, 6-Cyl.

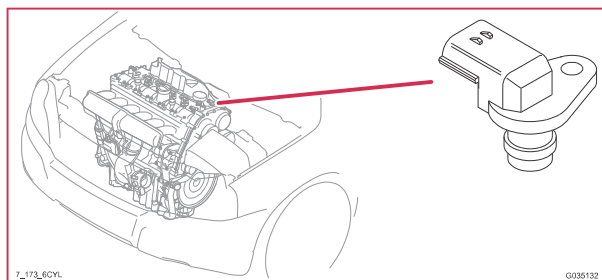


7/179 Front impact sensor, left

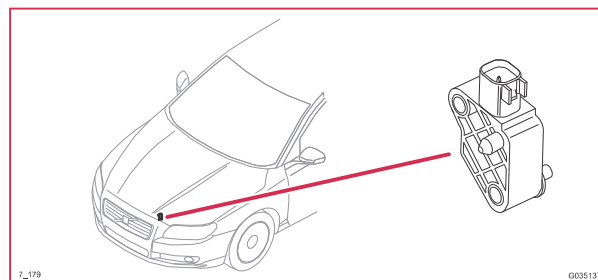


7/173 Camshaft position sensor, exhaust side, Diesel

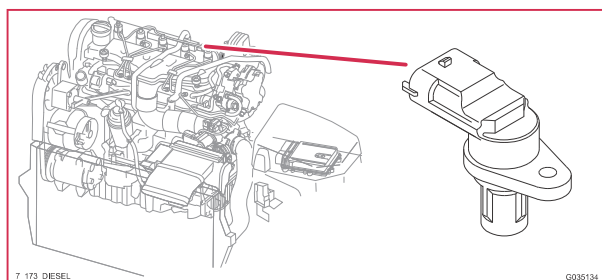


7/190 Temperature sensor, catalytic converter

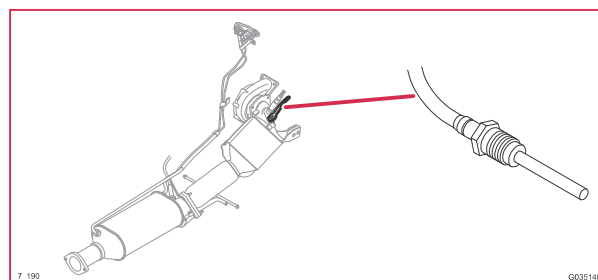


7/174 Differential pressure sensor, particle filter

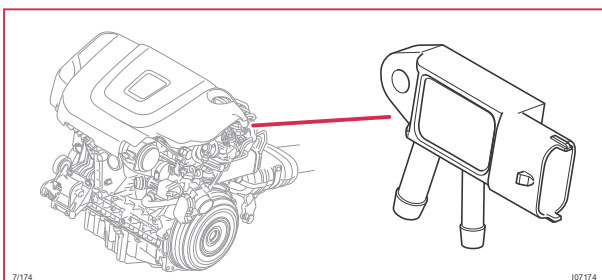


7/191 Temperature sensor, particle filter

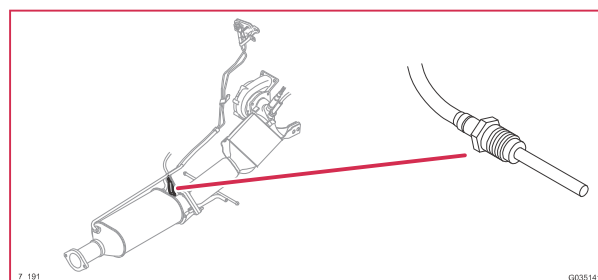

7/175 Occupant weight sensor, seat belt reminder

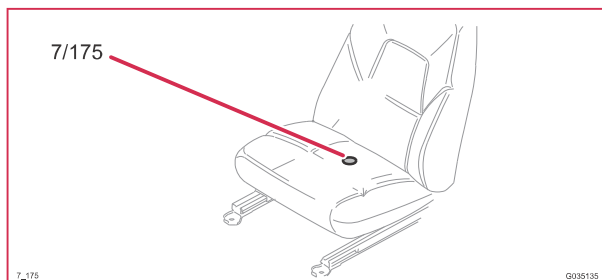


7/193 Position sensor turbo

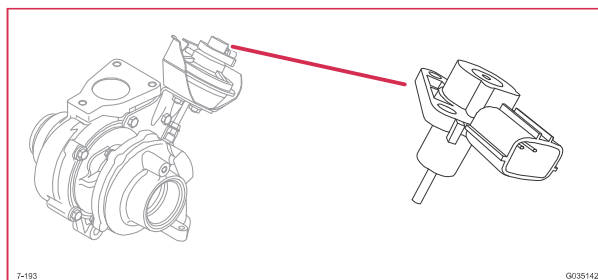


Component illustrations

7/199 - 7/238


7/199 Ultrasonic sensor (IMS)

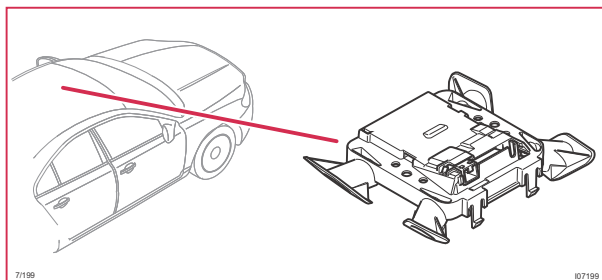


7/208 Side impact sensor, left front door

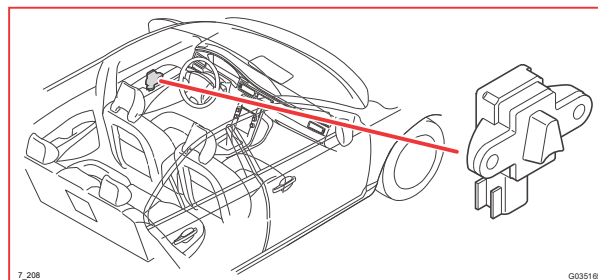


7/200 Sensor, coolant temperature

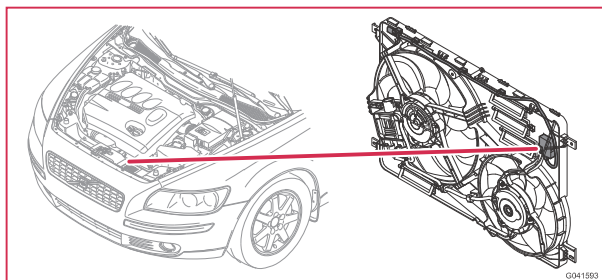


7/209 Side impact sensor, right front door

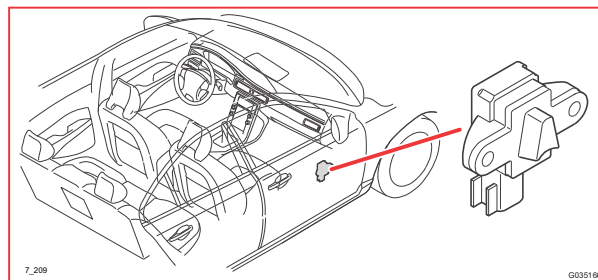


7/202 EGR Bypass position sensor

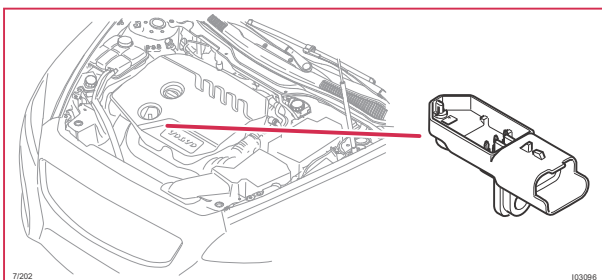


**7/210-
7/213 Tire pressure sensor**

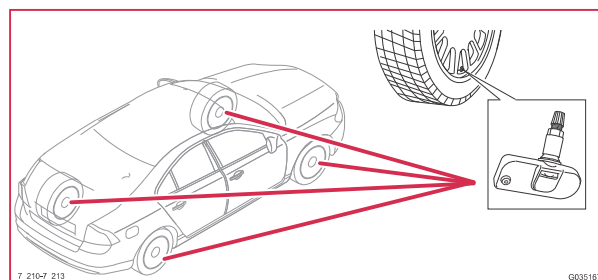


7/203 Forward-aimed radar (FLR)

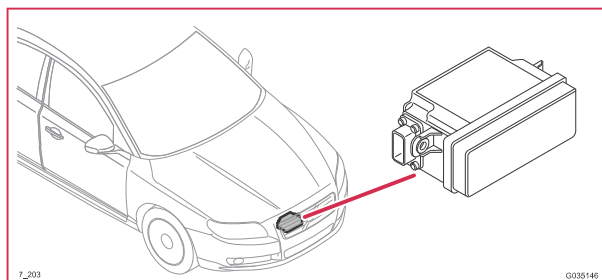


7/215 Rear heated oxygen sensor, 5-Cyl. Diesel

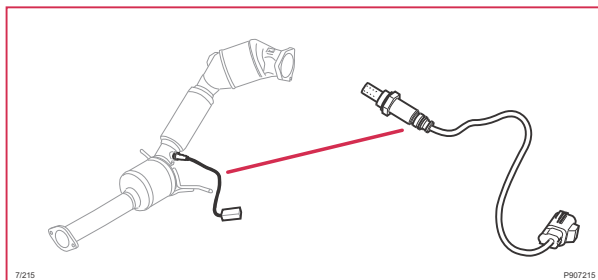

**7/204-
7/207 Front parking assistance sensor**

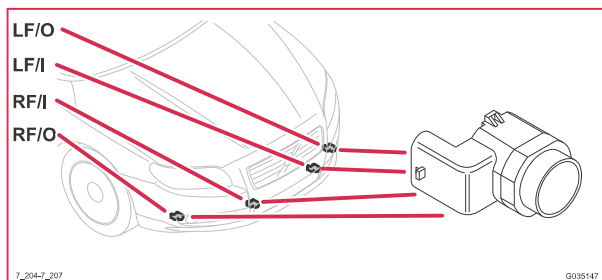


7/238 Alcolock sensor

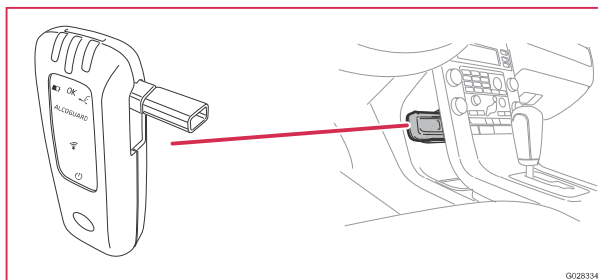


Component illustrations

7/240 - 8/19


7/240 Battery monitoring sensor (BMS)

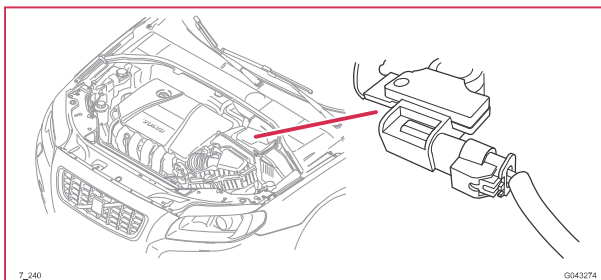


8/6-11 Injection valves

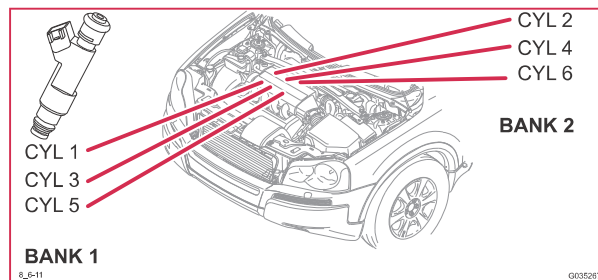


7/243 Gear position sensor neutral position

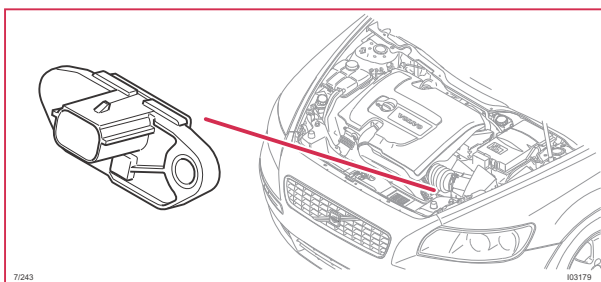


8/18 EVAP valve, 4-Cyl.

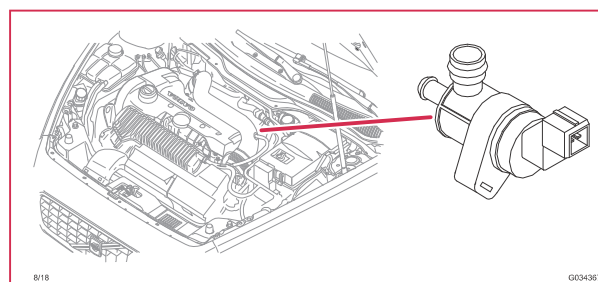


7/248 Oil pressure and temperature sensor

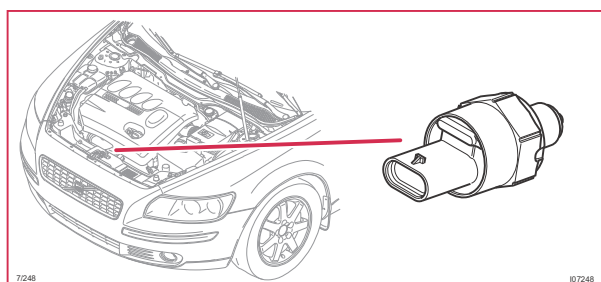


8/18 EVAP valve, 5-Cyl.

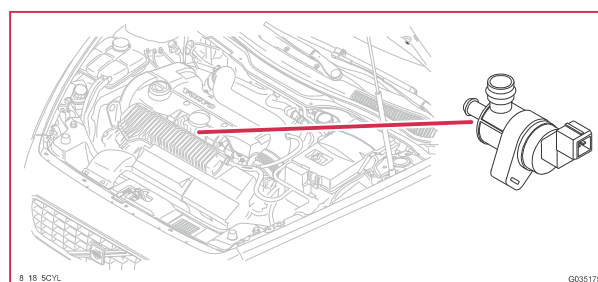


7/251 Brake vacuum sensor

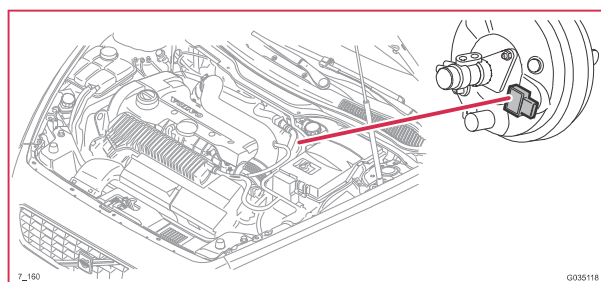


8/18 EVAP valve, 6-Cyl.

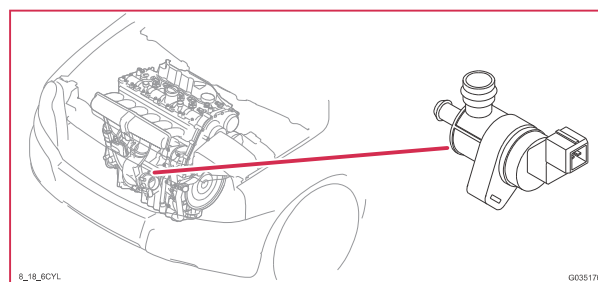

8/3 Electromagnetic clutch, climate control system

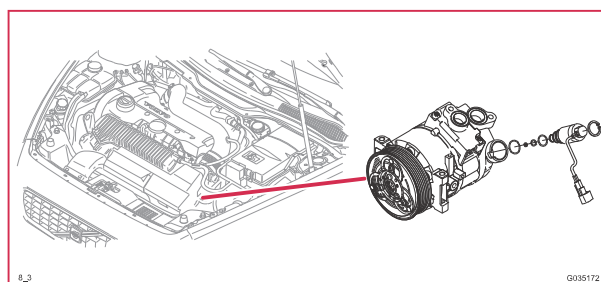


8/19 Reset valve, camshaft intake

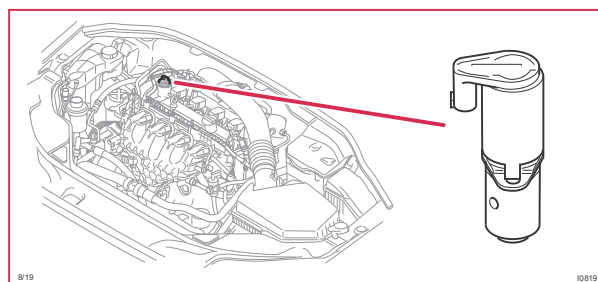


Component illustrations

8/20 - 8/34


8/20 Shock absorber, Four-C, front left

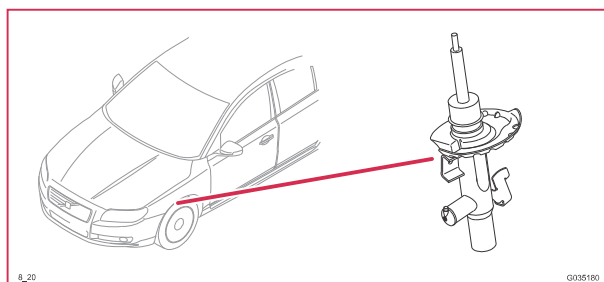


8/30 Driver's side airbag igniter, stage 1

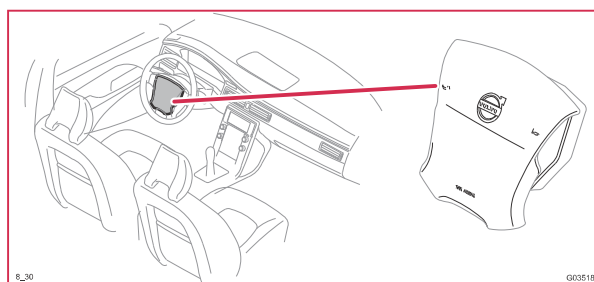


8/21 Shock absorber, Four-C, front right

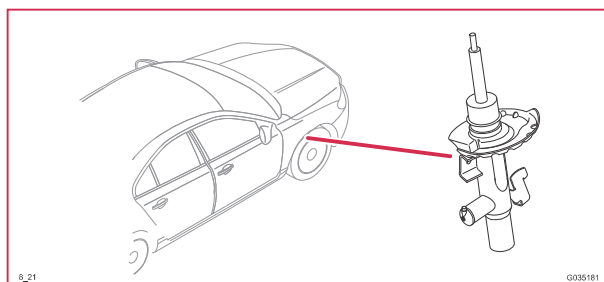


8/31 Passenger side airbag igniter, stage 1

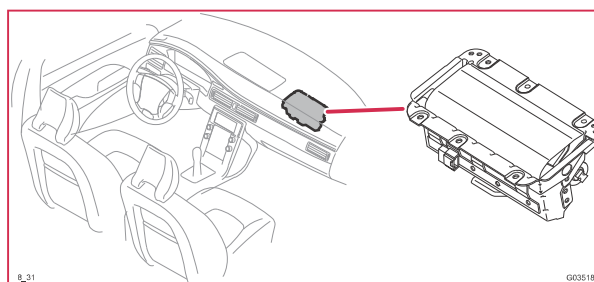


8/22 Shock absorber, Four-C, rear left

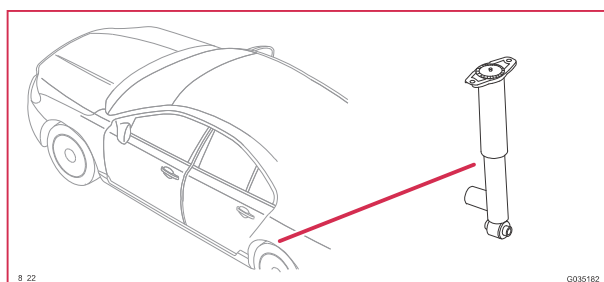


8/32 Passenger side airbag igniter, stage 2

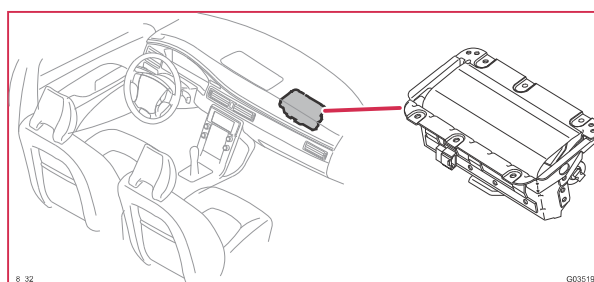


8/23 Shock absorber, Four-C, rear right

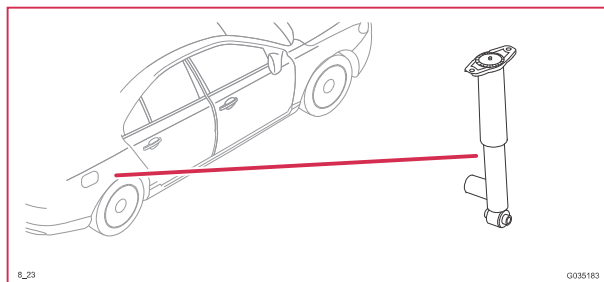


8/33 Igniter, belt tensioner, driver's side

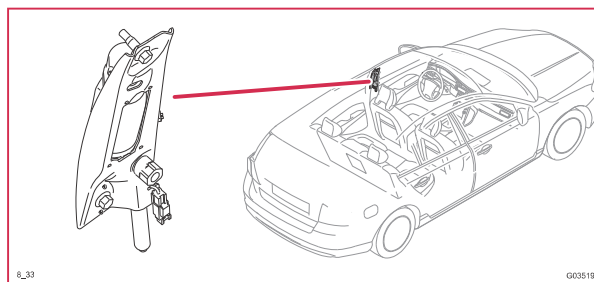

8/28 Turbo control valve

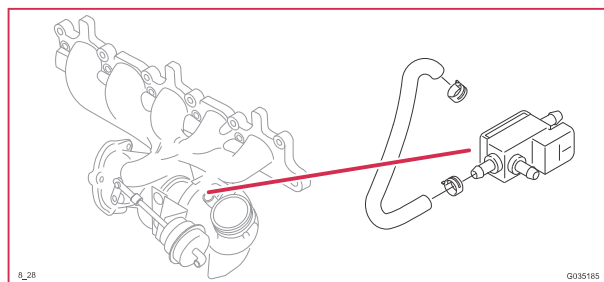


8/34 Igniter, belt tensioner, passenger side

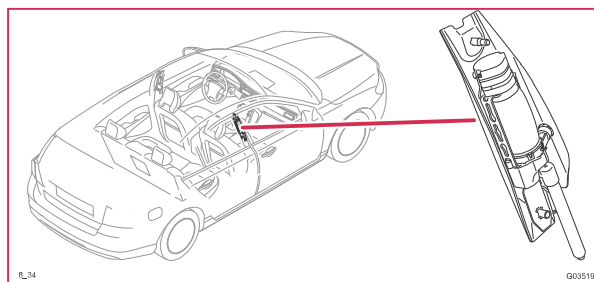


Component illustrations

8/36 - 8/60


8/36 Solenoid shift lock

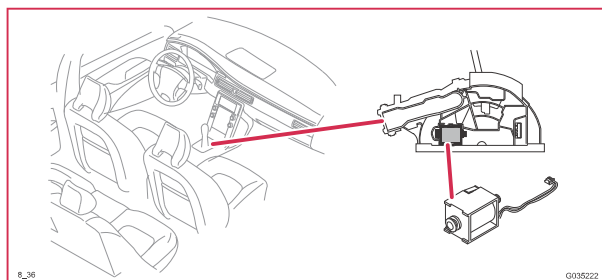


8/52 Igniter side airbag front passenger seat

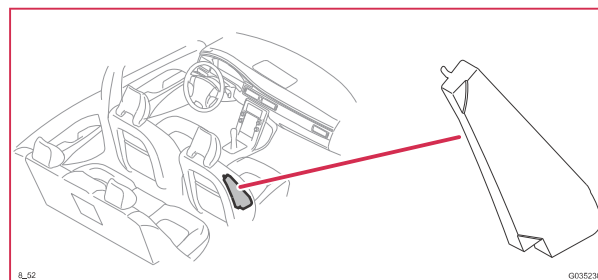


8/37 Automatic transmission

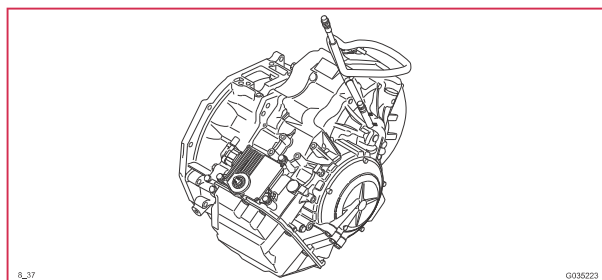


8/55 Igniter, rear left belt tensioner

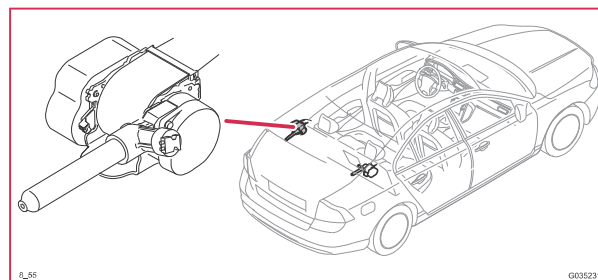


8/46 Archive unit, DSTC

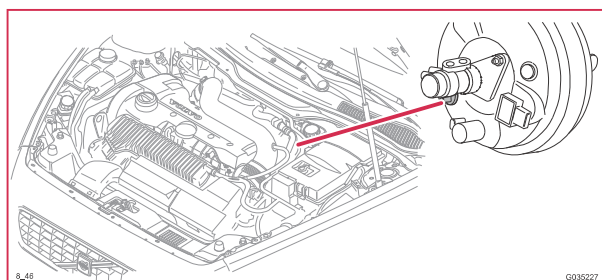


8/56 Igniter, rear right belt tensioner

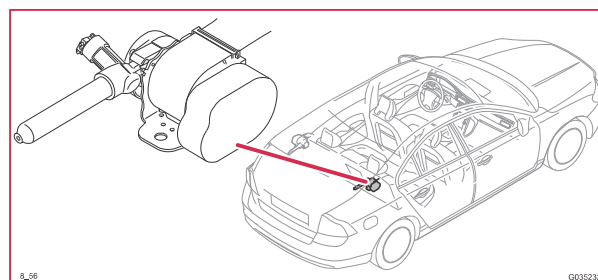


8/48 Auto-dimming rearview mirror

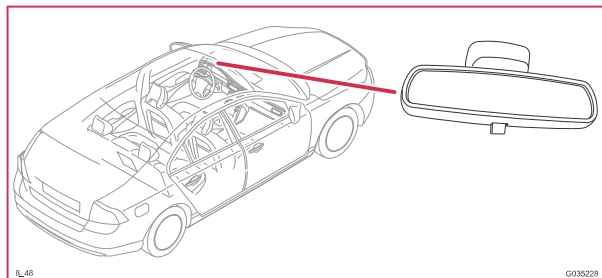


8/59 Rear left head restraint solenoid

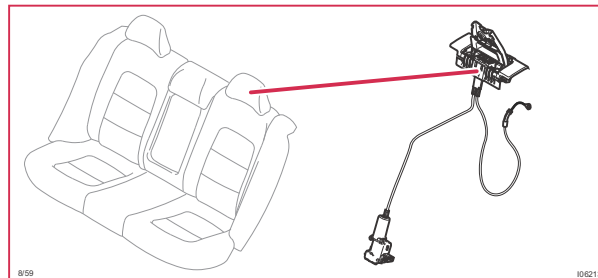

8/51 Igniter side airbag front driver's seat

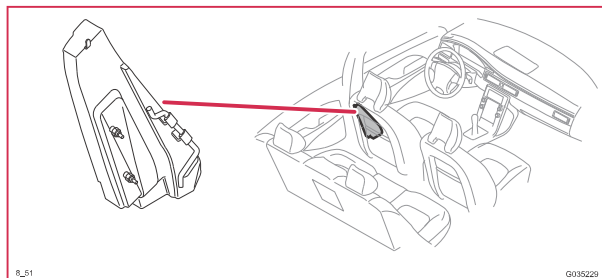


8/60 Rear right head restraint solenoid

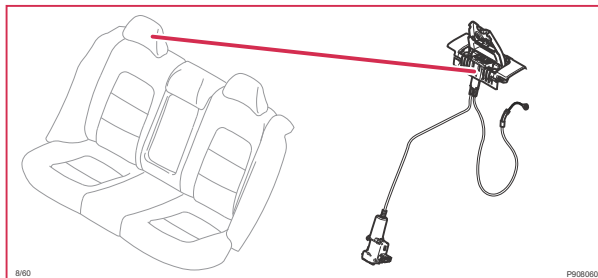


Component illustrations

8/61 - 8/92


8/61 Driver's side airbag igniter, stage 2

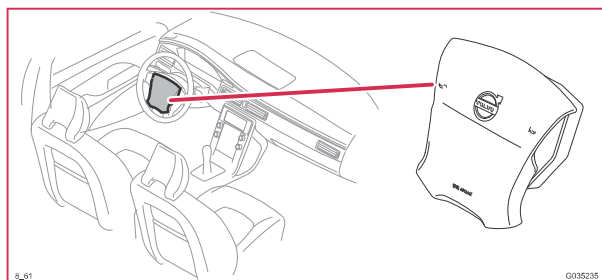


8/77 Control valve, fuel volume

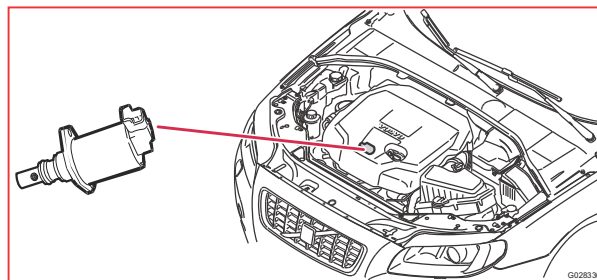


8/62 Belt tensioner igniter, center rear seat

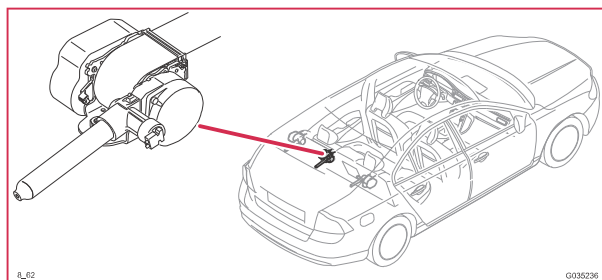


8/78 Power steering pressure monitor

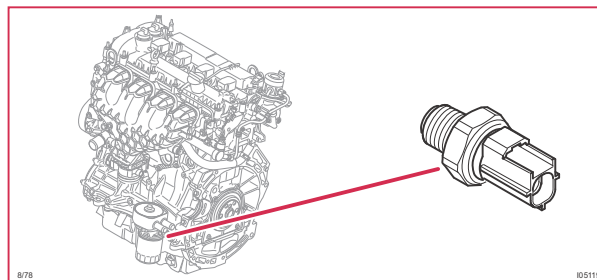


8/66 Igniter, left inflatable curtain

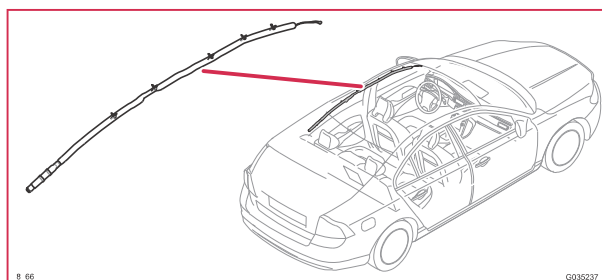


8/81 Reset valve, camshaft exhaust, 4-Cyl.

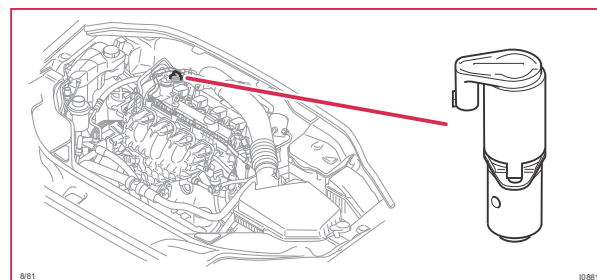


8/67 Igniter, right inflatable curtain

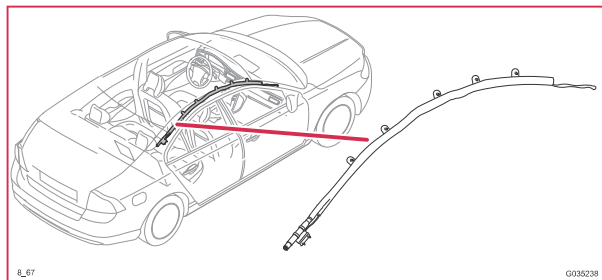


8/81 Reset valve, camshaft exhaust, 5-Cyl.

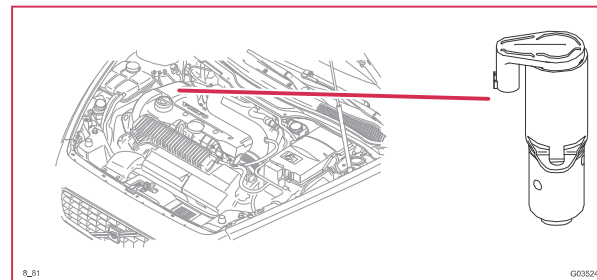

8/68 Relief valve

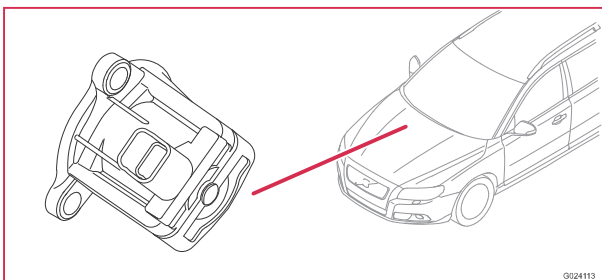


8/92 Lap belt tensioner, driver

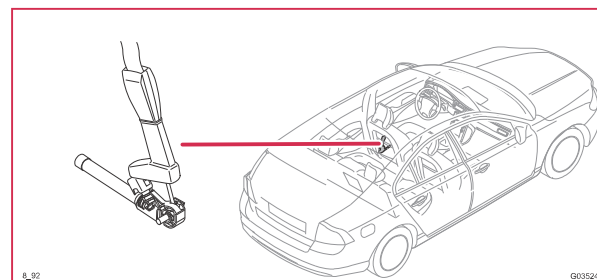


Component illustrations

8/98 - 8/121


8/98 Control valve fuel pressure

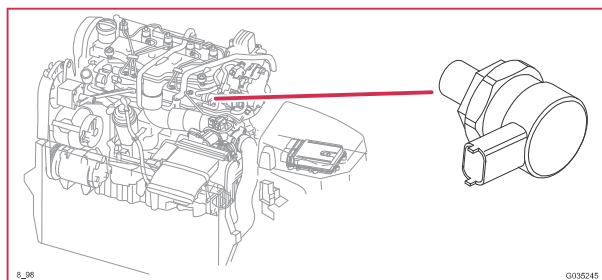


8/117 Solenoid, variable valve timing, intake, 5-Cyl.

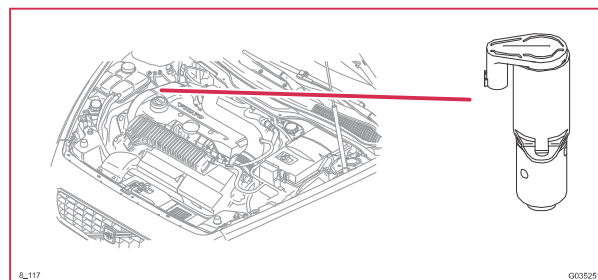


8/99 Steering column igniter

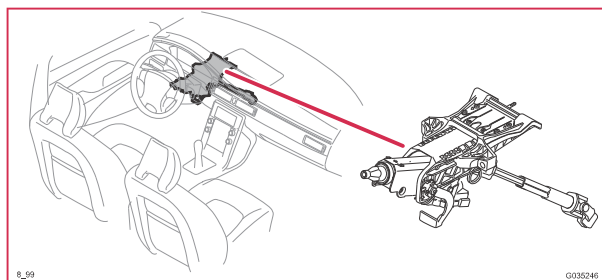


8/117 Solenoid, variable valve timing, intake, 6-Cyl.

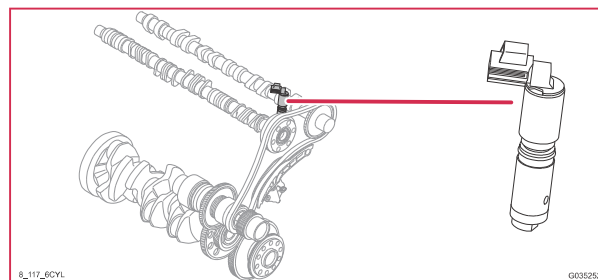


8/111 Control valve fuel flow

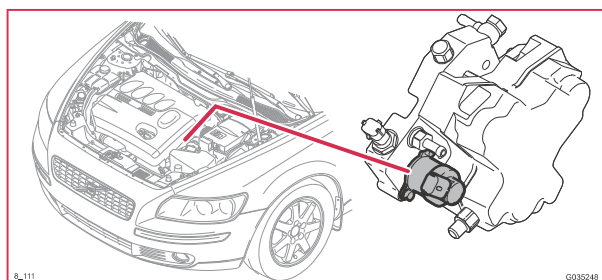


8/120 EGR valve, 4-Cyl. Diesel

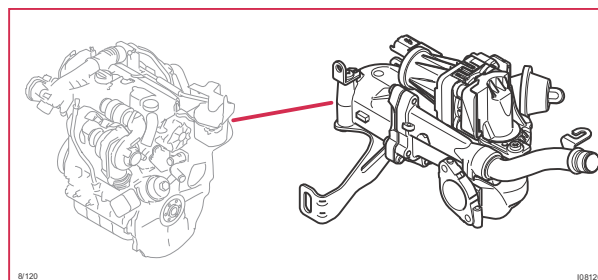


8/113 Bypass valve, EGR cooling, 4 Cyl.

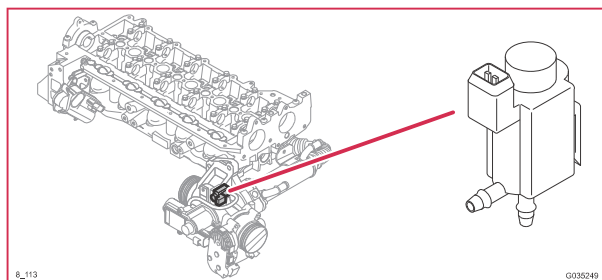


8/120 EGR valve, 5-Cyl. Diesel

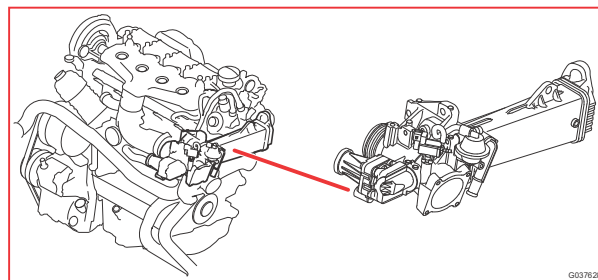

8/113 Bypass valve, EGR cooling, 5 Cyl.

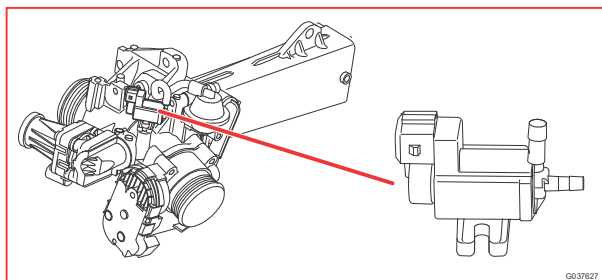


8/121 Radiator valve

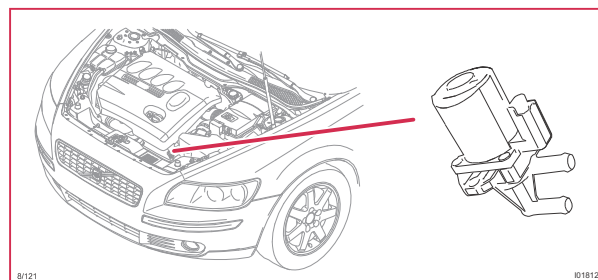


Component illustrations

8/124 - 8/167


8/124 Passenger side airbag igniter, stage 3

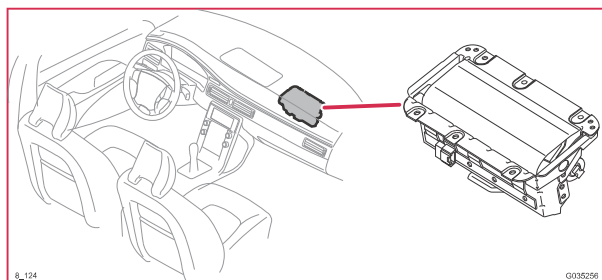


8/134 Solenoid, reverse interlock, manual

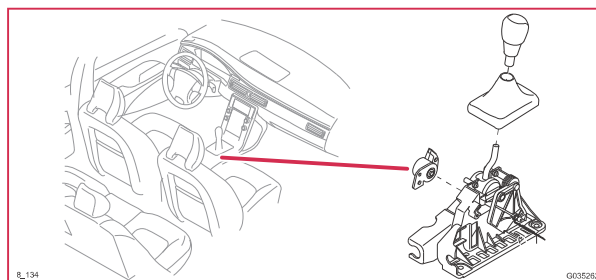


8/125 Solenoid front cam profile

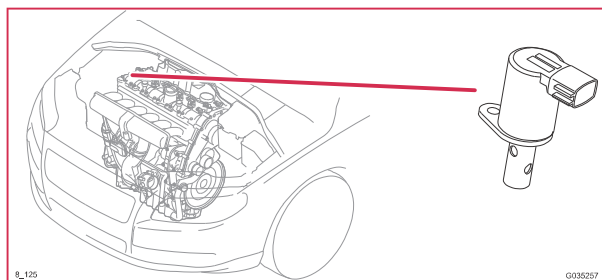


8/157 Turbocharger control valve, 5-Cyl. Diesel

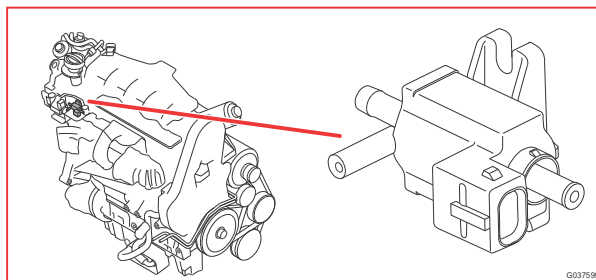


8/126 Solenoid rear cam profile

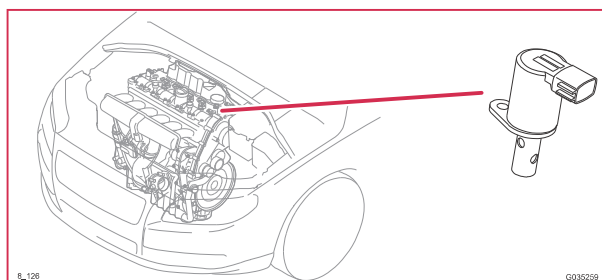


8/159 Bypass valve

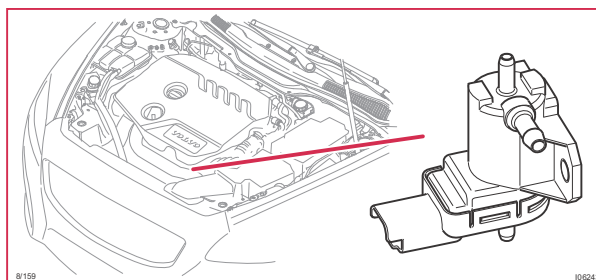


8/128 Driver's belt force limiter

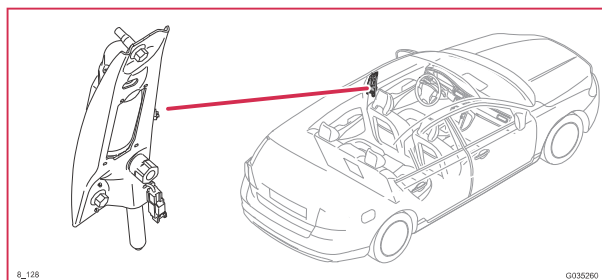


8/164 Electric piston cooling valve

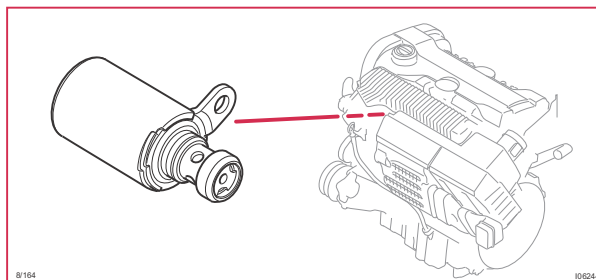

8/129 Passenger belt force limiter

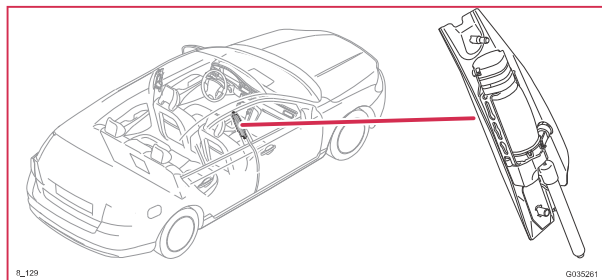


8/167 Bypass solenoid

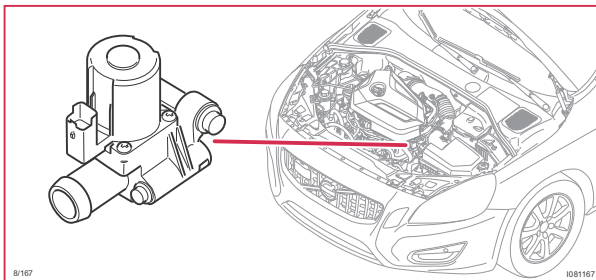


Component illustrations

9/1 - 9/15


9/1 Front 12V outlet

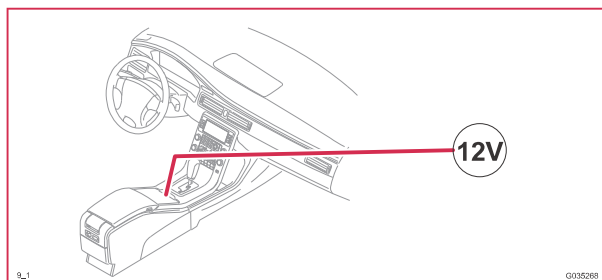


9/11 Heating element, RH rear seat backrest

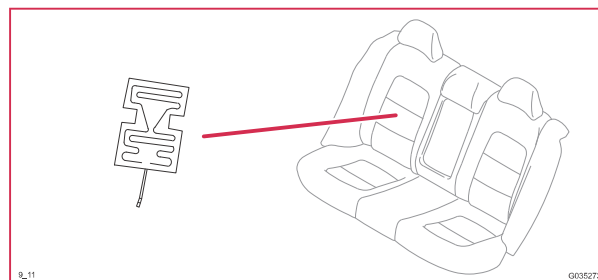


9/2 Heated rear window

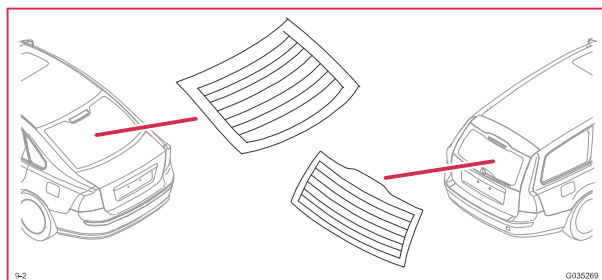


9/12 Seat Heating Module (SHM), driver's side

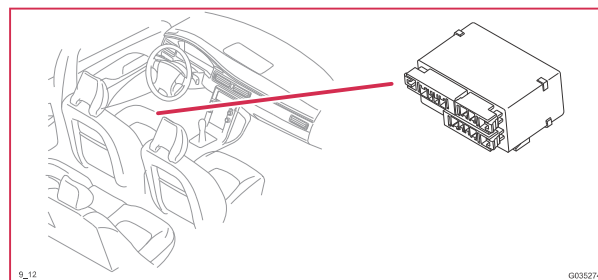


9/8 Heating element, LH rear seat cushion

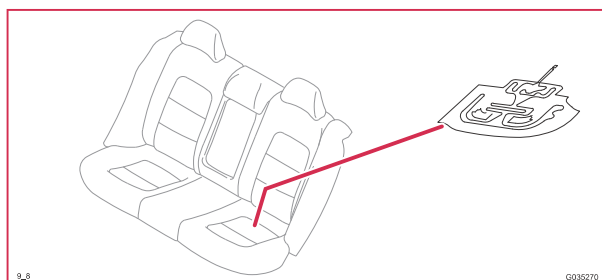


9/13 Seat Heating Module (SHM), passenger side

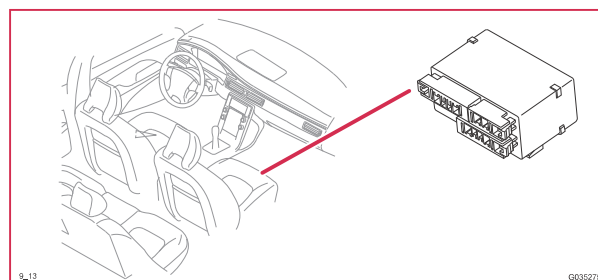


9/9 Heating element, LH rear seat backrest

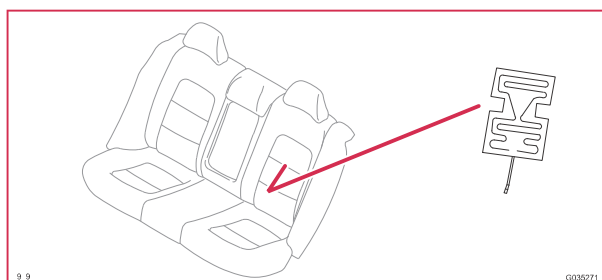


9/14 Control module, rear left seat heater

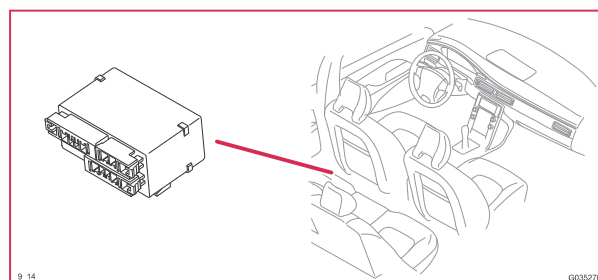

9/10 Heating element, RH rear seat cushion

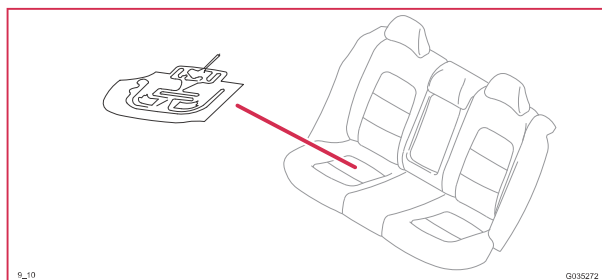


9/15 Control module, RH rear seat heater

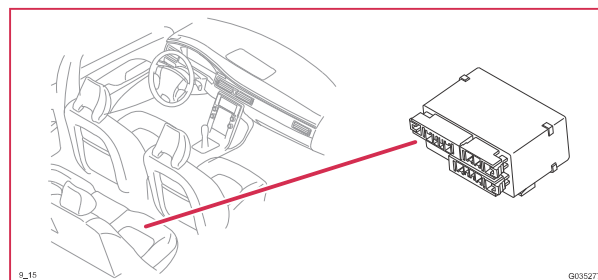


Component illustrations

9/16 - 9/39


9/16 Heating element, driver's seat backrest

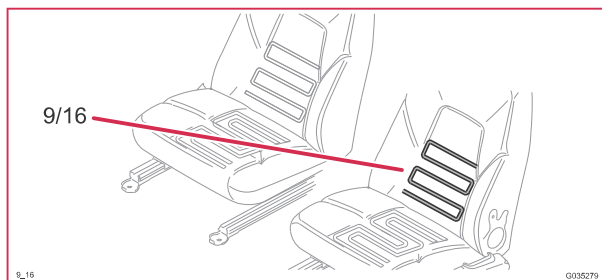


9/25 Rear 12V outlet

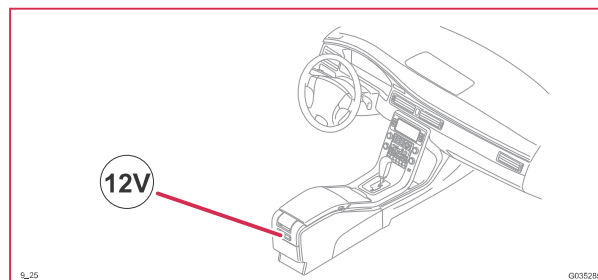


9/17 Heating element, passenger seat backrest

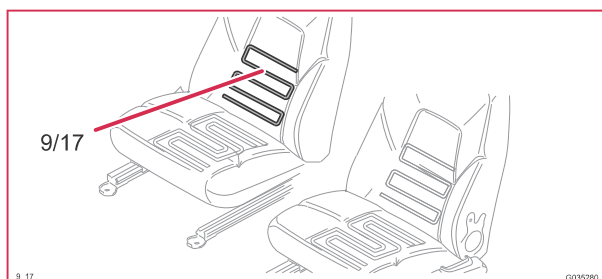


9/30 Auxiliary heater

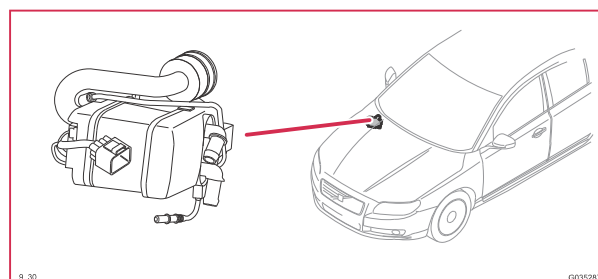


9/18 Heating element, driver's seat cushion

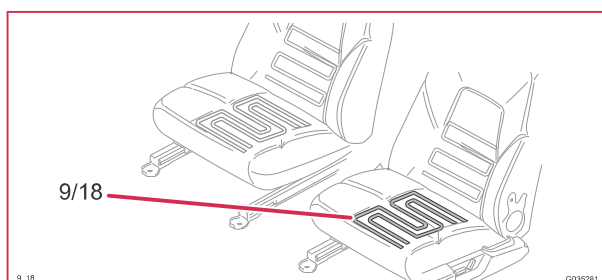


9/32 PTC resistor, crankcase ventilation

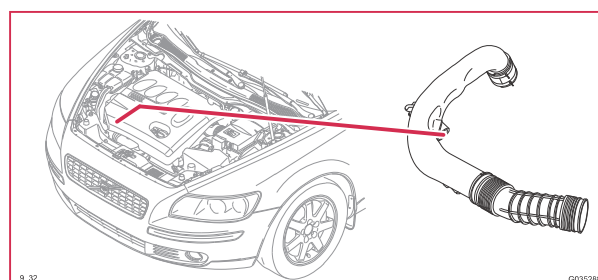


9/19 Heating element, passenger seat cushion

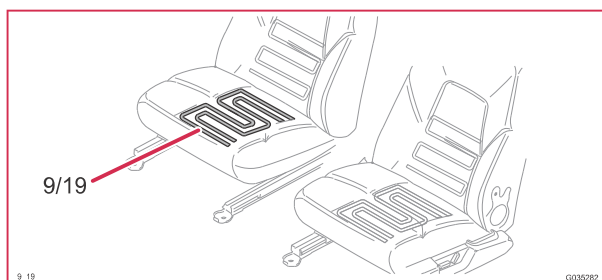


9/38 Electrically heated fuel filter

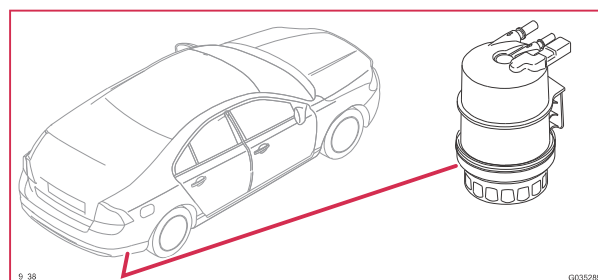

9/24 Refrigeration box

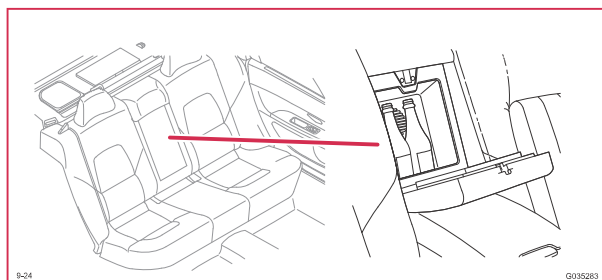


9/39 Heating element camera

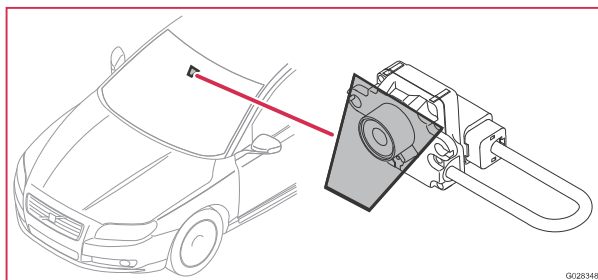


Component illustrations

9/42 - 10/11


9/42 PTC-element

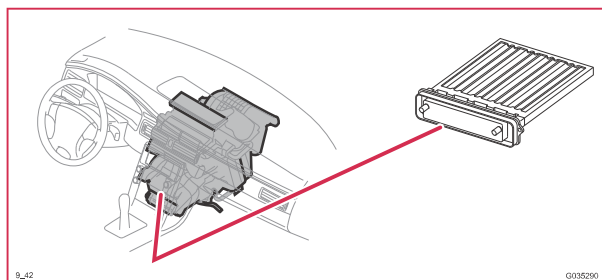


10/3 License plate lighting, V70

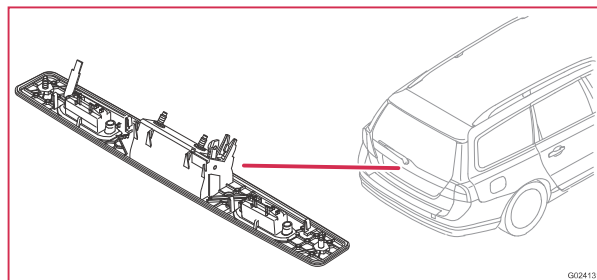


9/43 Heated windshield washer nozzle, left

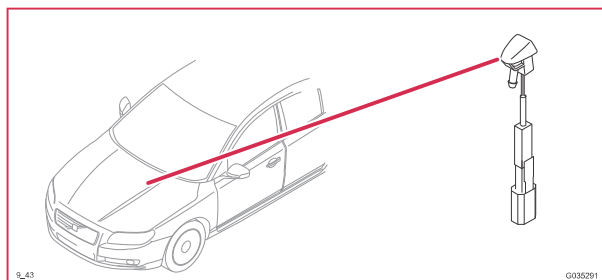


10/3 License plate lighting, S80

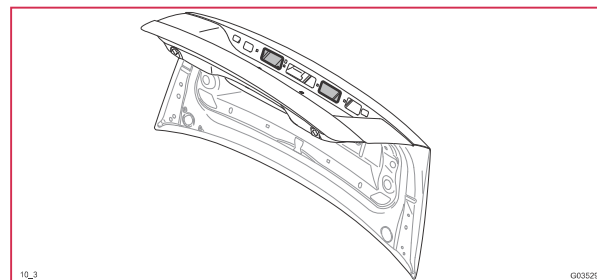


9/44 Heated windshield washer nozzle, right

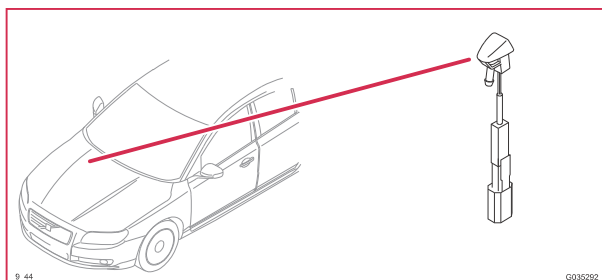


10/5 Fog light, front left

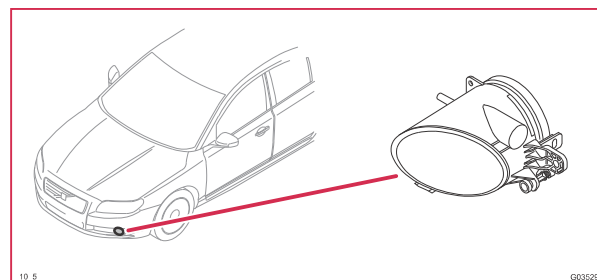


10/1 Lamp housing, front left

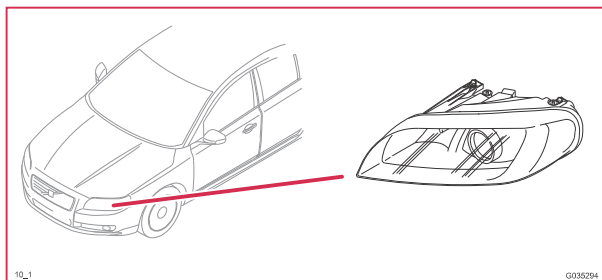


10/6 Fog light, front right

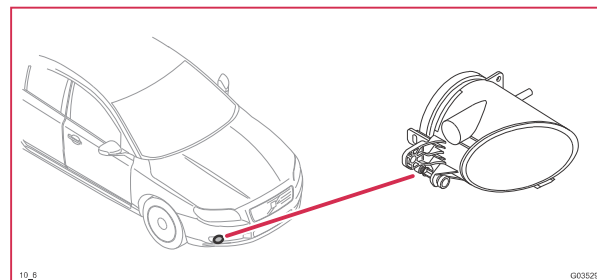

10/2 Lamp housing, front right

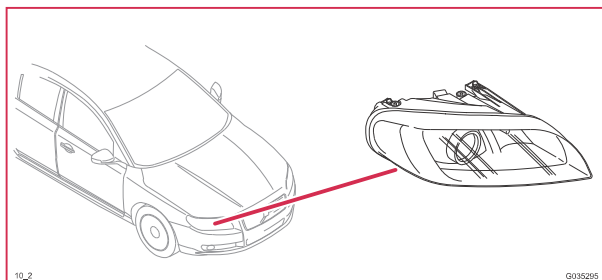


10/11 Front left running/parking light

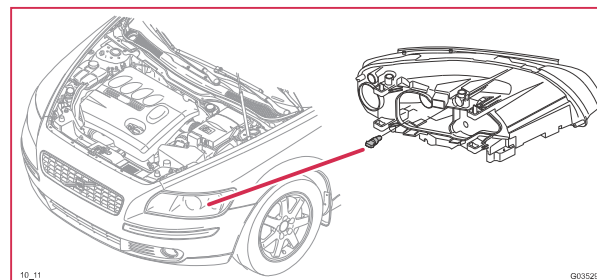


Component illustrations

10/12 - 10/19


10/12 Front right running/parking light

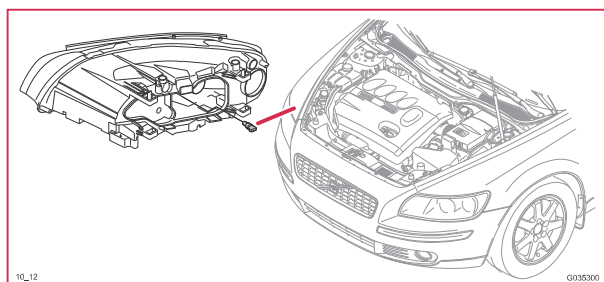


10/17 Lamp housing, rear right V70

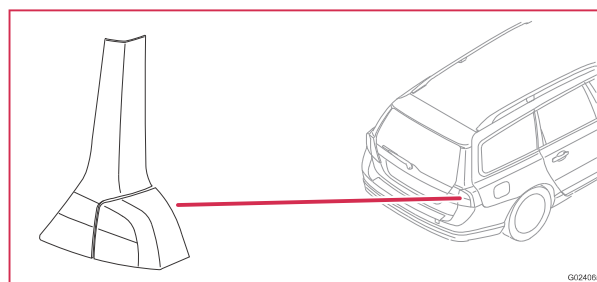


10/13 Front left direction indicator

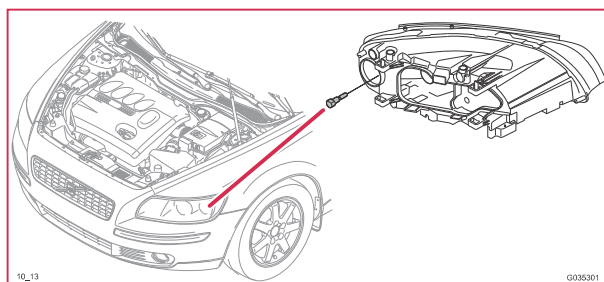


10/17 Lamp housing, rear right, S80

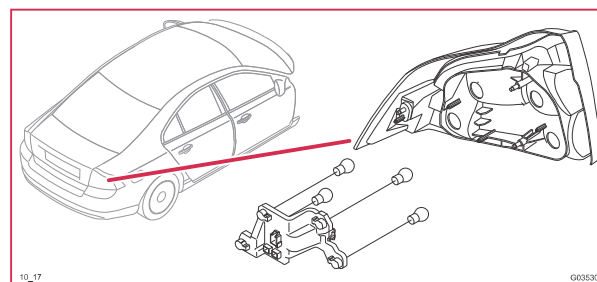


10/14 Front right direction indicator

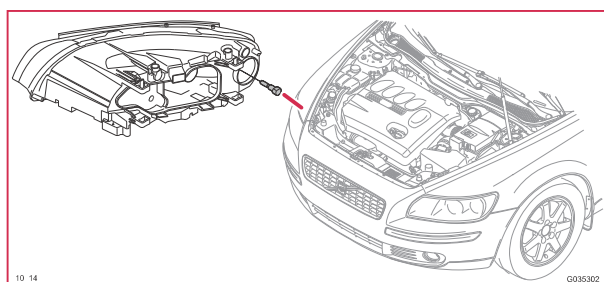


10/18 Lamp housing, rear left, V70

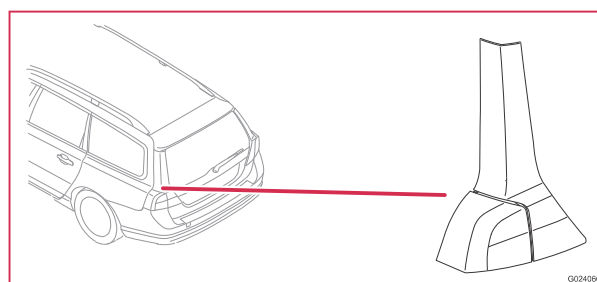


10/15 Direction indicator rear-view mirror left

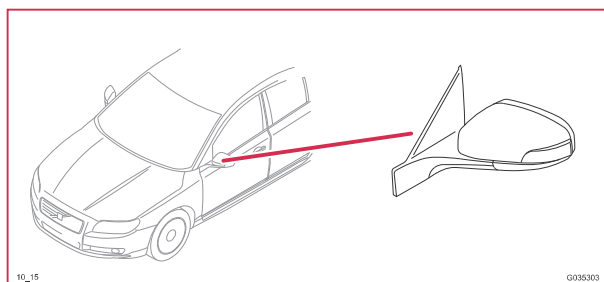


10/18 Lamp housing, rear left, S80

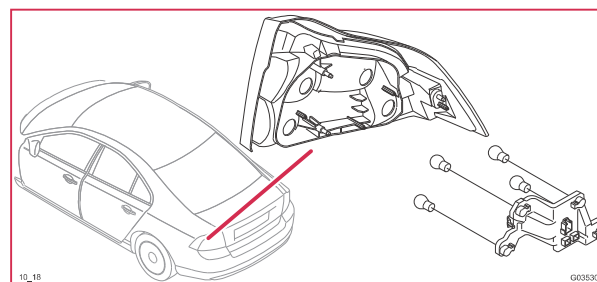

10/16 Direction indicator, right door mirror

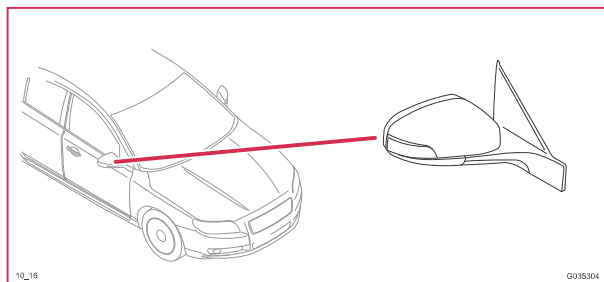


10/19 Auxiliary brake light V70

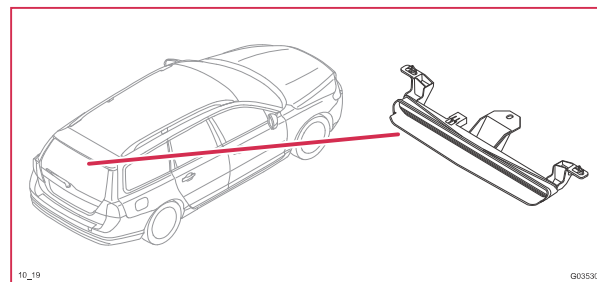


Component illustrations

10/19 - 10/44


10/19 Auxiliary brake light, S80

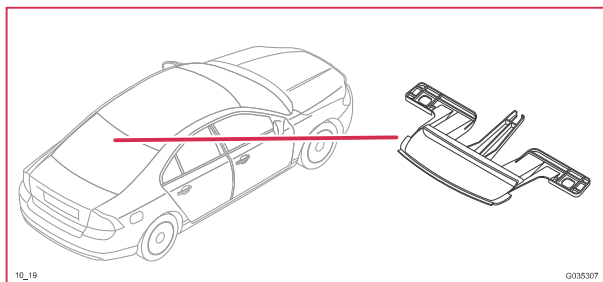


10/42 Rear side marker lamp, right S80

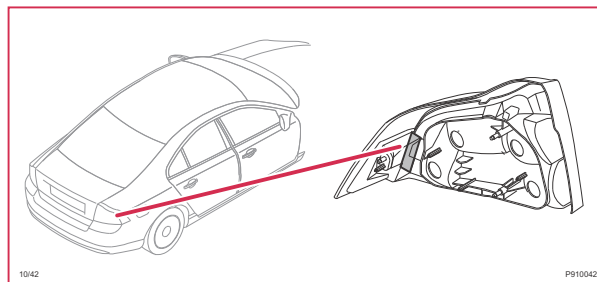


10/22 Ceiling light

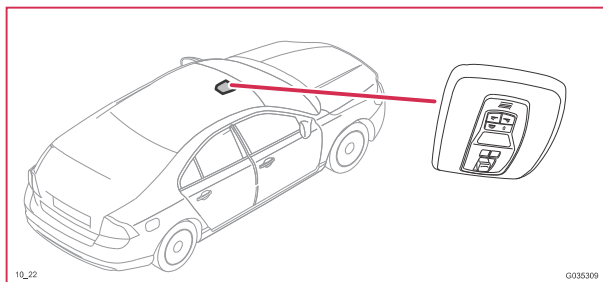


10/43 Brake light right, V70

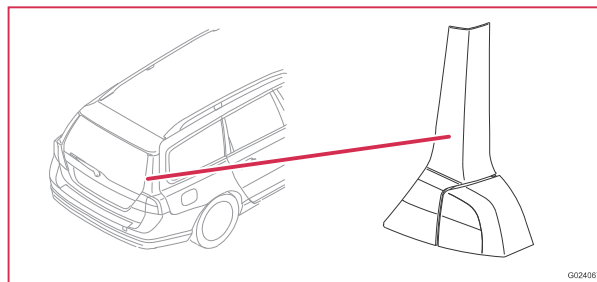


10/25 Ceiling light, cargo compartment, V70

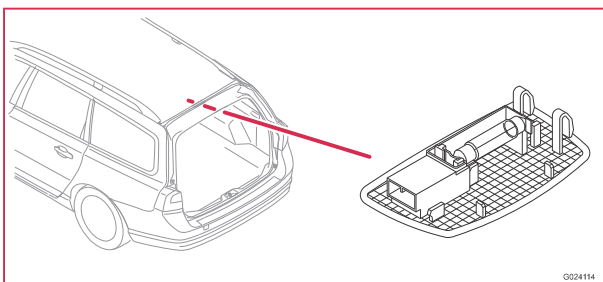


10/43 Brake light right, S80

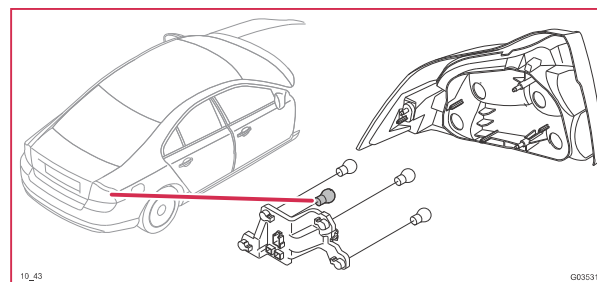


10/29 Glove compartment lighting

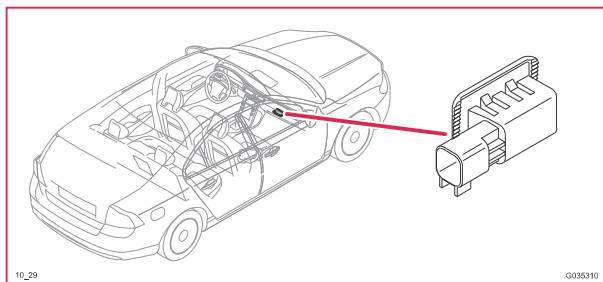


10/44 Tail lamp 1 right, V70

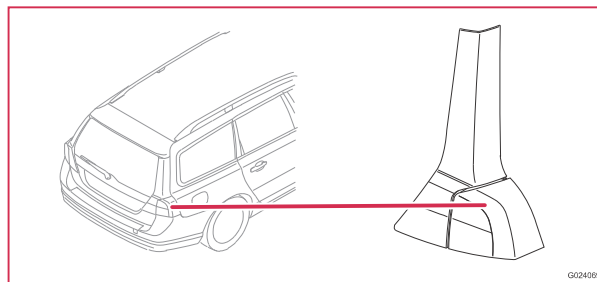

10/42 Rear side marker lamp, right V70

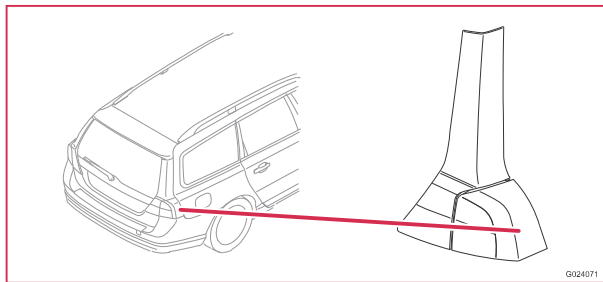


10/44 Tail lamp 1 right, S80

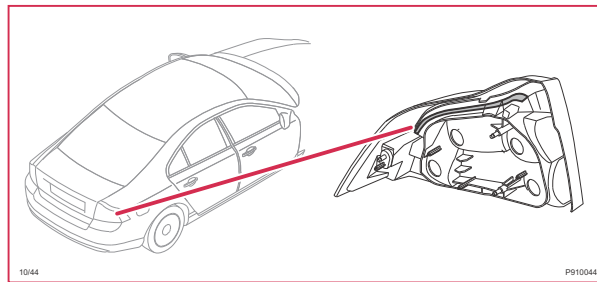


Component illustrations

10/46 - 10/50


10/46 Fog light, rear right, V70

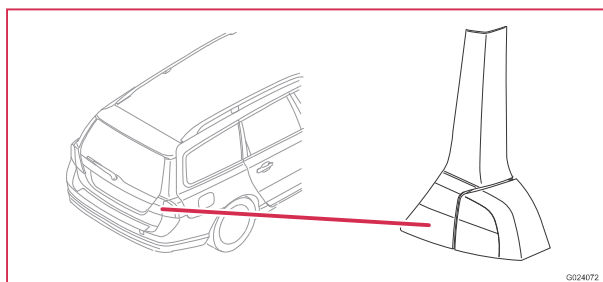


10/48 Reversing light right, S80

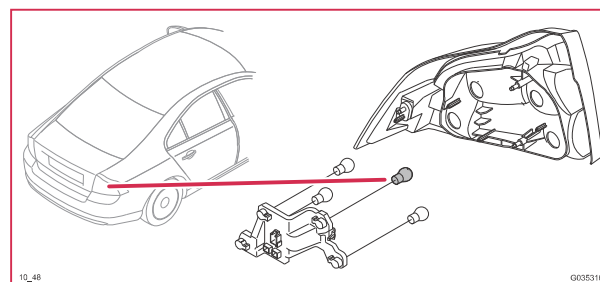


10/46 Fog light, right rear, S80

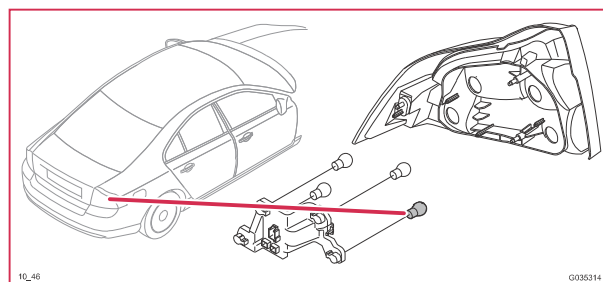


10/49 Rear side marker lamp, left V70

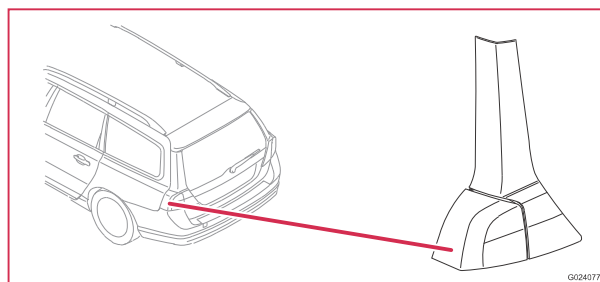


10/47 Direction indicator, rear right, V70

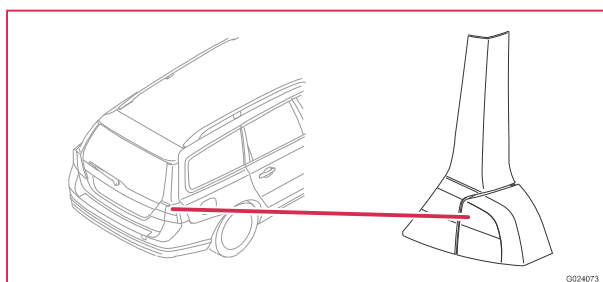


10/49 Rear side marker lamp, left S80

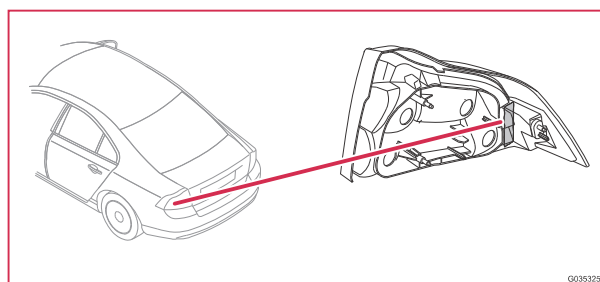


10/47 Direction indicator, right rear, S80

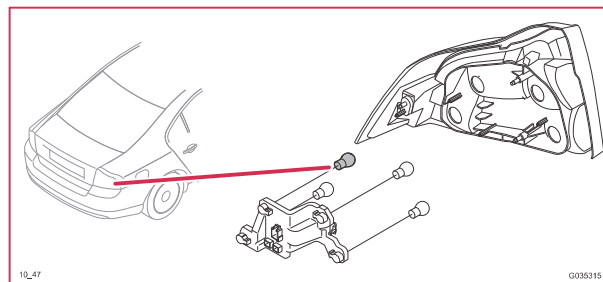


10/50 Brake light, left, V70

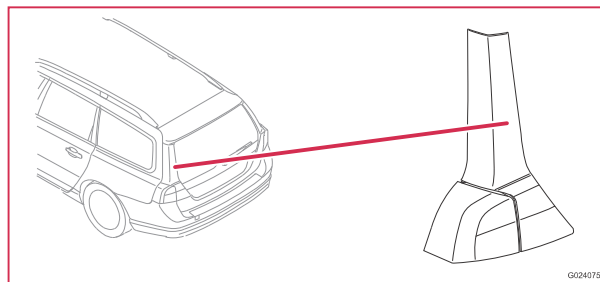

10/48 Reversing light, right, V70

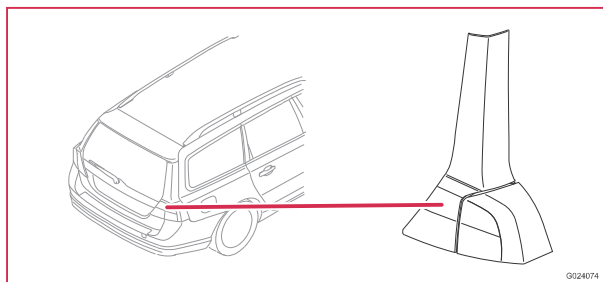


10/50 Brake light left, S80

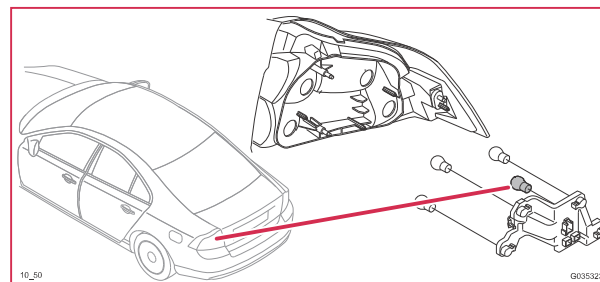


Component illustrations

10/51 - 10/65


10/51 Tail lamp 1 left, V70

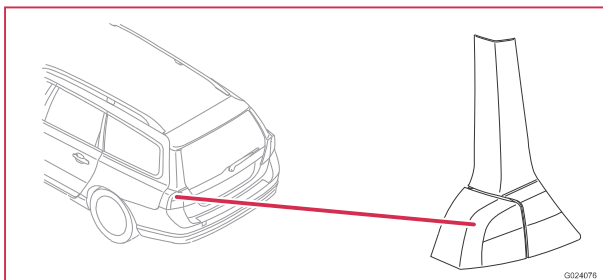


10/54 Direction indicator, rear left, S80

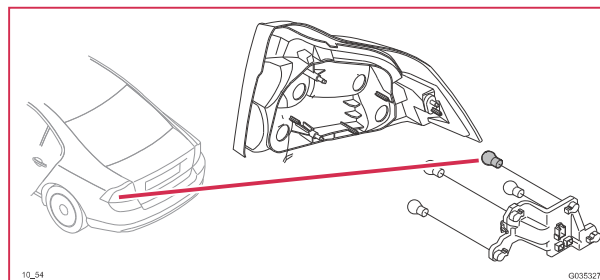


10/51 Tail lamp 1 left, S80

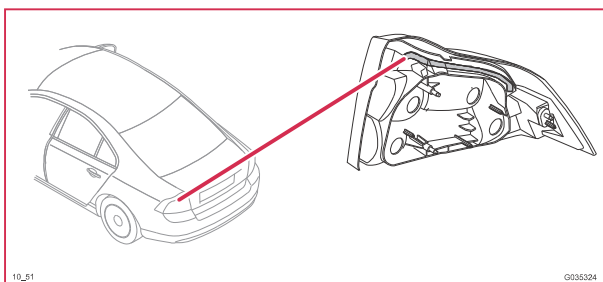


10/55 Reversing light left, V70

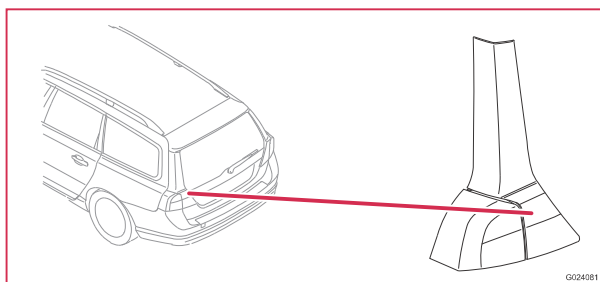


10/53 Fog light, left rear, V70

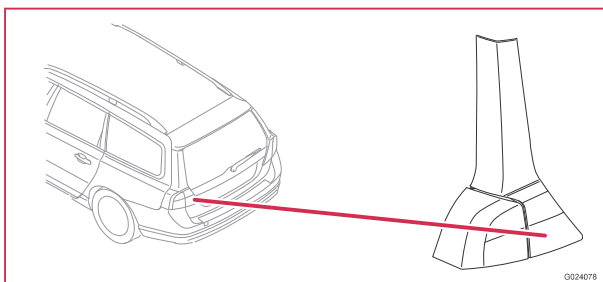


10/55 Reversing light left, S80

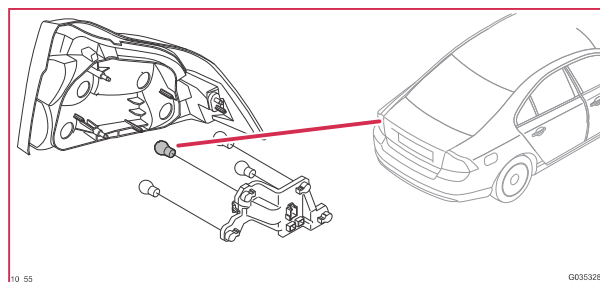


10/53 Fog light, rear left, S80

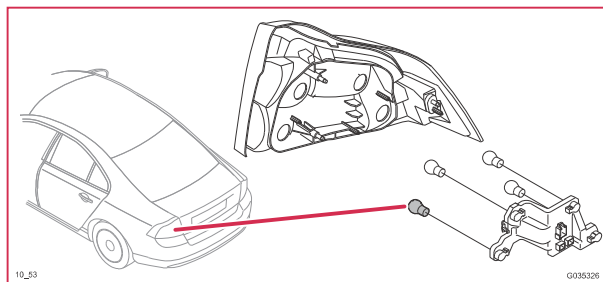


10/64 Right-hand high beam

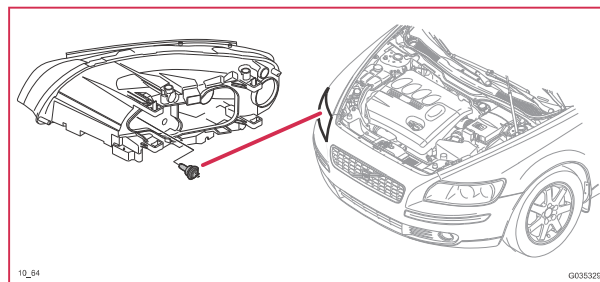

10/54 Direction indicator, left rear, V70

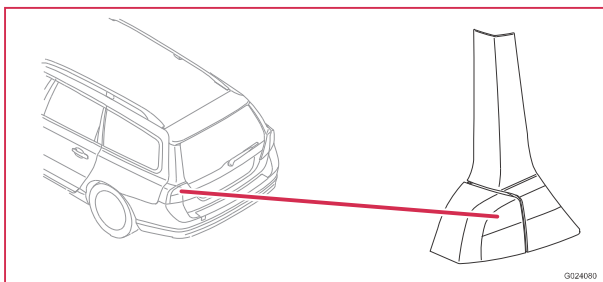


10/65 Auxiliary light, front right

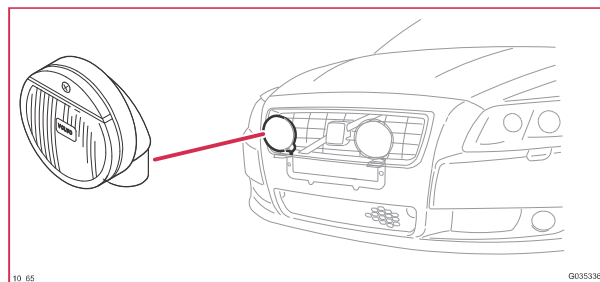


Component illustrations

10/66 - 10/125


10/66 Right-hand low beam

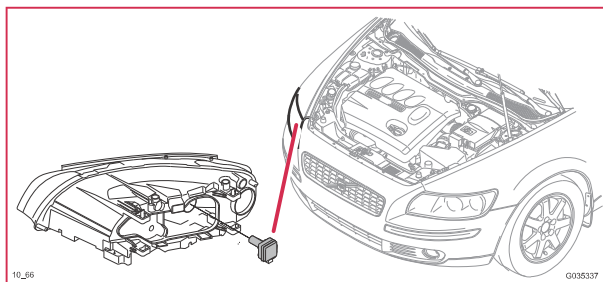


10/97 Left-hand front courtesy lighting

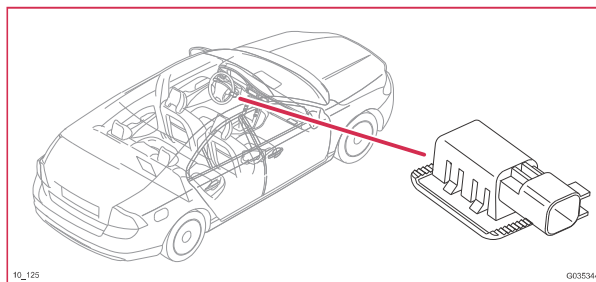


10/68 Left-hand high beam

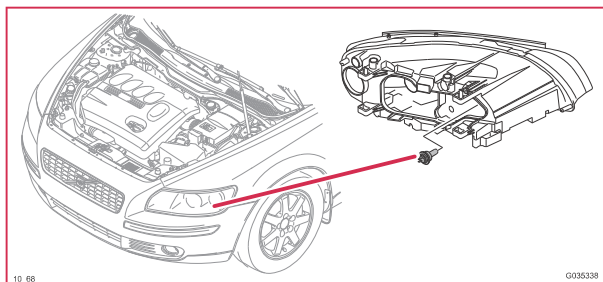


10/102 Right-hand front courtesy lighting

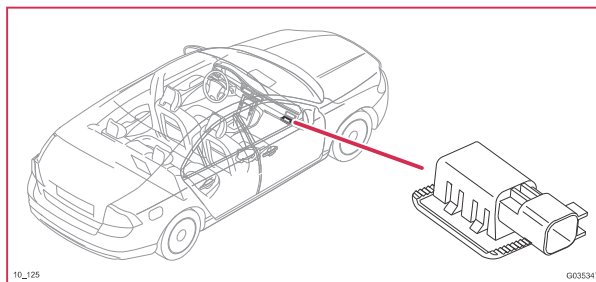


10/69 Auxiliary light, front left

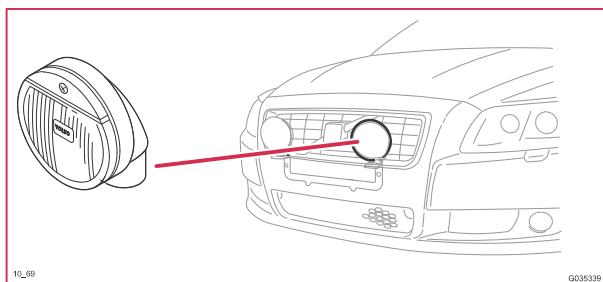


10/114 Left-hand vanity mirror lighting

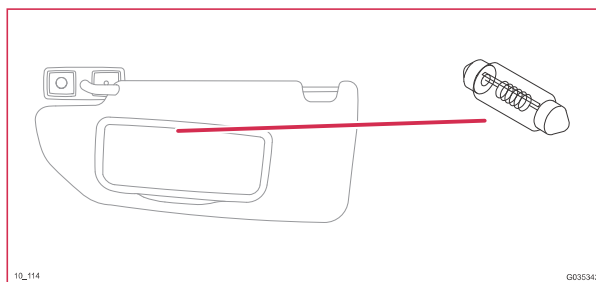


10/70 Left-hand low beam

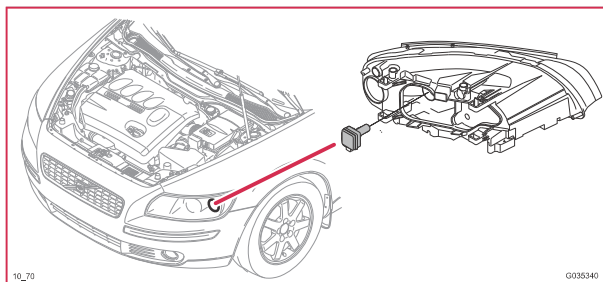


10/115 Right-hand vanity mirror lighting

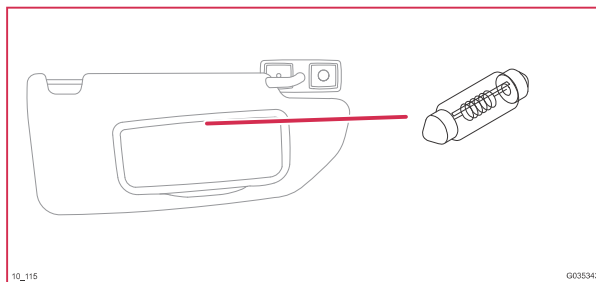

10/72 Front ashtray lighting

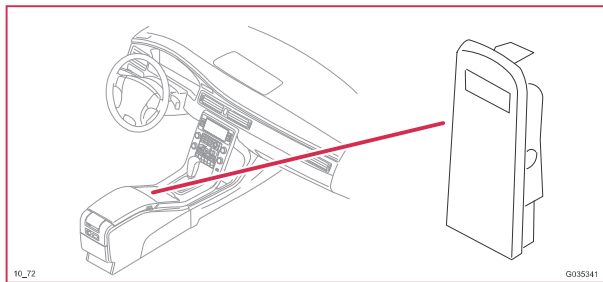


10/125 Left-hand front courtesy lighting

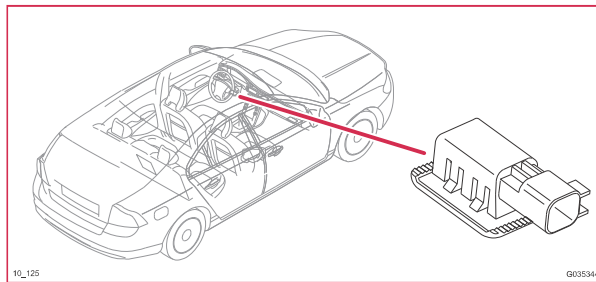


Component illustrations 10/126 - 10/251


10/126 Right-hand front courtesy lighting

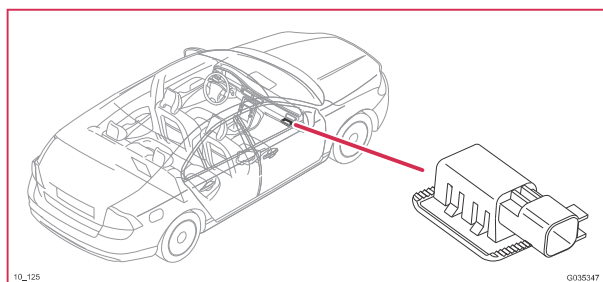


10/150 Rear reading light

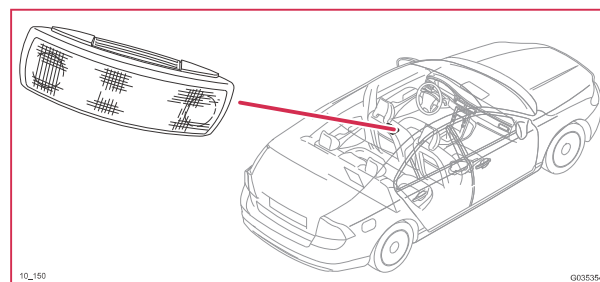


10/127 Lighting, cargo compartment, left-hand side, S80

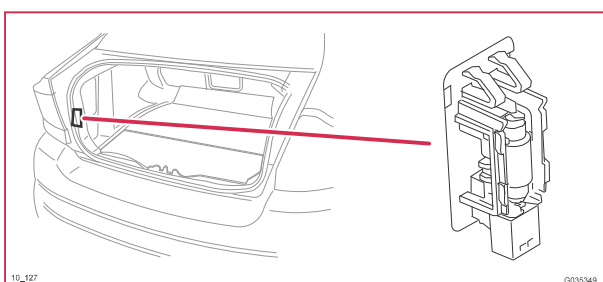


10/161 Cup holder illumination lamp

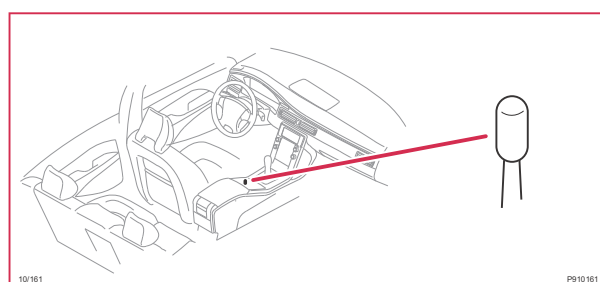


10/128 Lighting, cargo compartment, right-hand side, S80

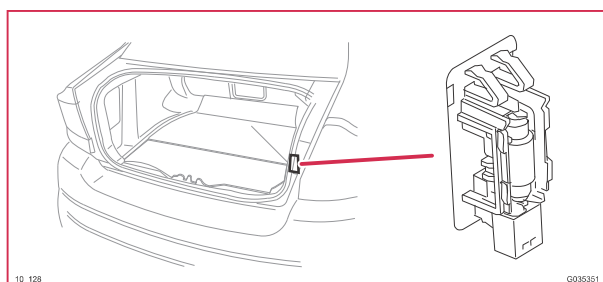


10/249 Sill lighting, front driver's side

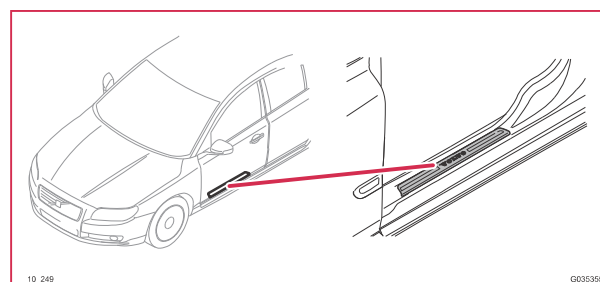


10/148 Lighting, left front door mirror

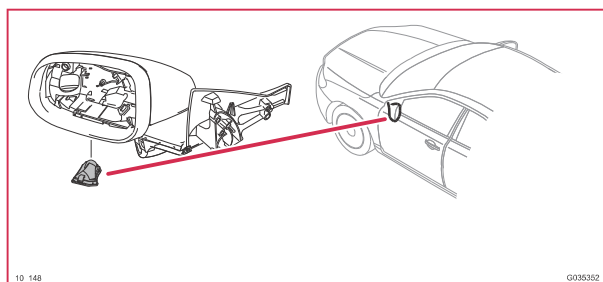


10/250 Sill lighting, front passenger side

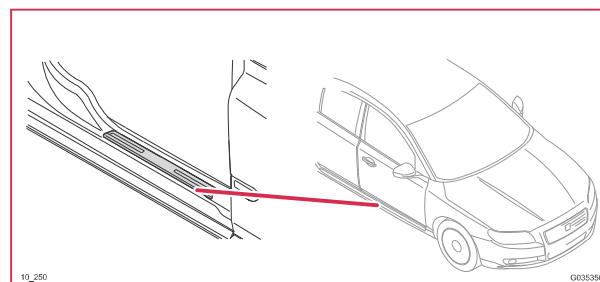

10/149 Lighting, right front door mirror

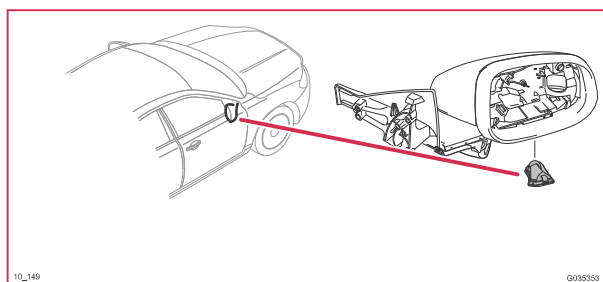


10/251 Sill lighting, rear driver's side, S80

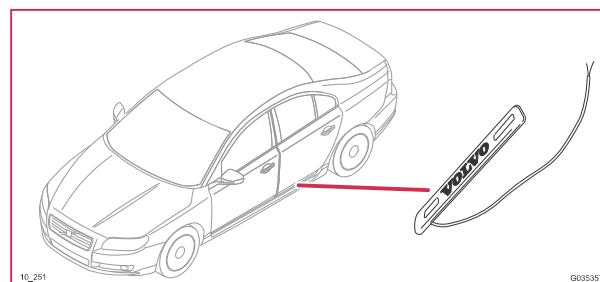


Component illustrations

10/252 - 10/286


10/252 Sill lighting, rear passenger side, S80

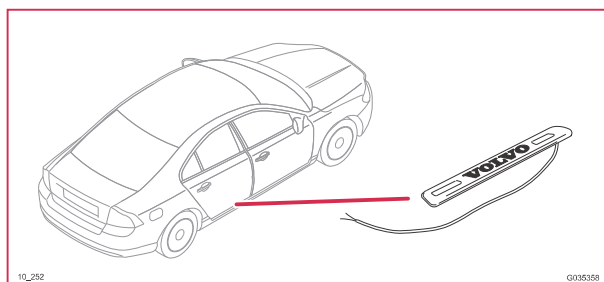


10/282 Lighting door compartment front left

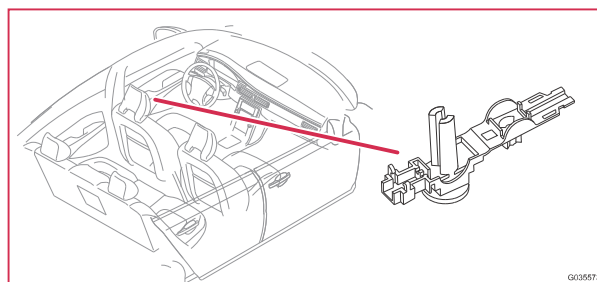


10/276 Lighting center armrest rear 1

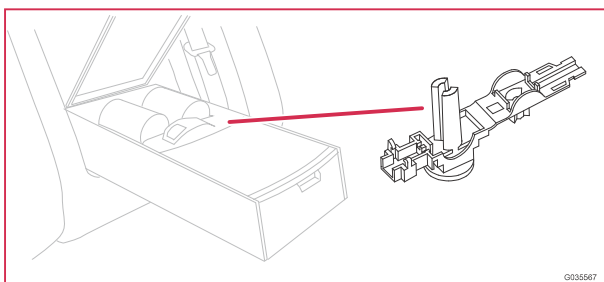


10/283 Lighting door compartment front right

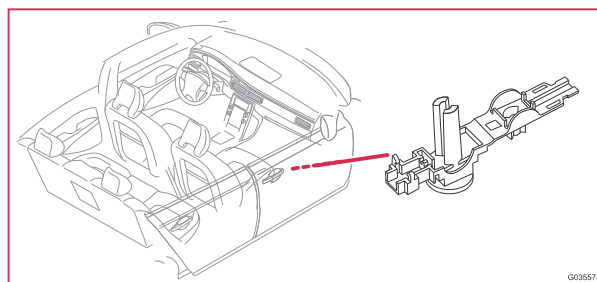


10/277 Lighting center armrest rear 2

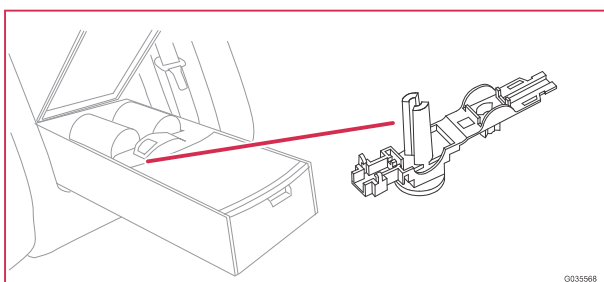


10/284 Lighting door compartment rear left

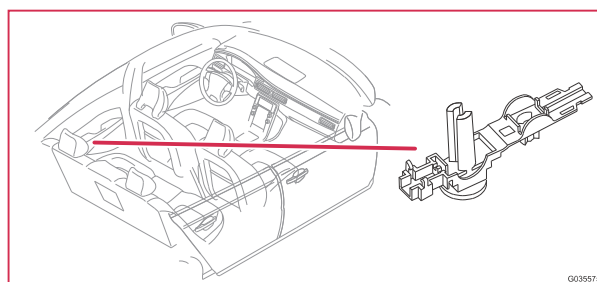


10/280 Lighting cooler compartment left

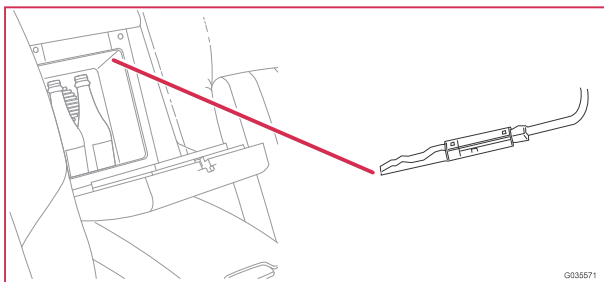


10/285 Lighting door compartment rear right

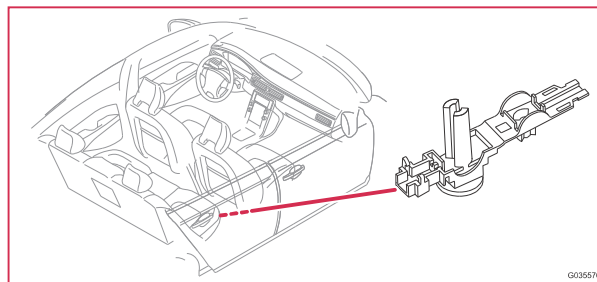

10/281 Lighting cooler compartment right

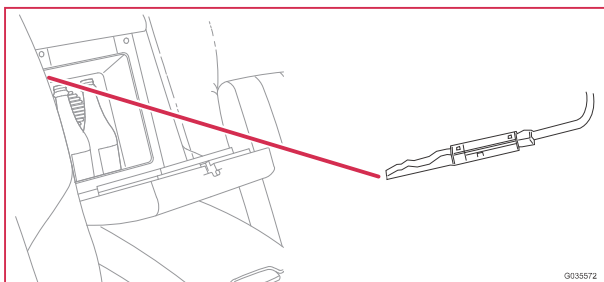


10/286 Lighting floor driver's side

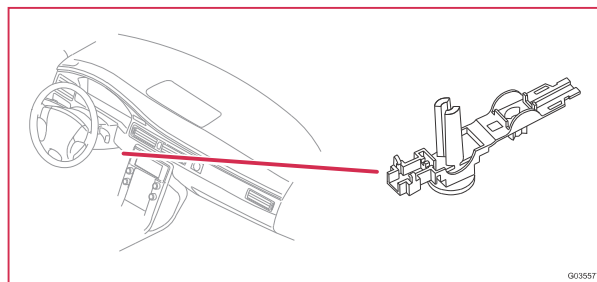


Component illustrations

10/287 - 15/37


10/287 Lighting floor passenger side

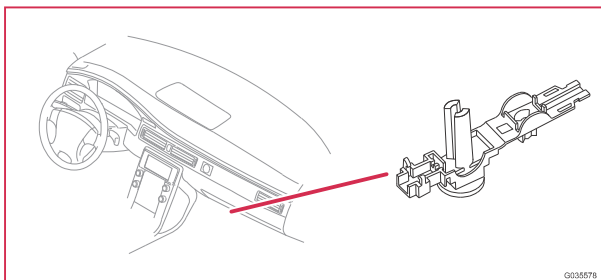


11A/no. Main fuses in the engine compartment fuse box

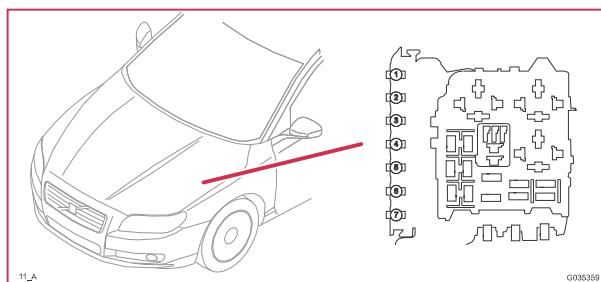


11B/no. Fuses in the engine compartment fuse box

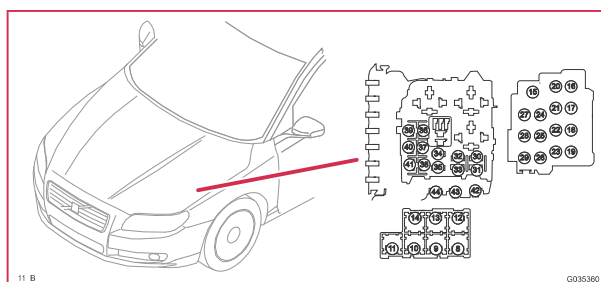


11C/no. Fuses in distribution box passenger compartment

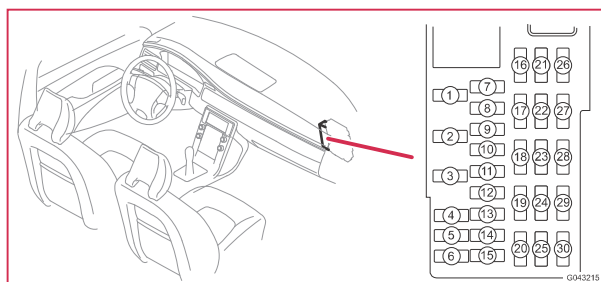


11D/A Fuses in cargo compartment fuse box

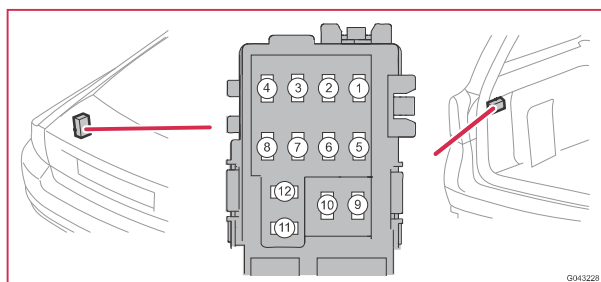


11/no. Fuse in extra fuse holder, passenger compartment

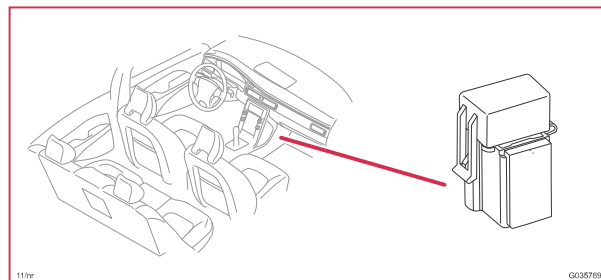


15/31 Distribution box in engine compartment

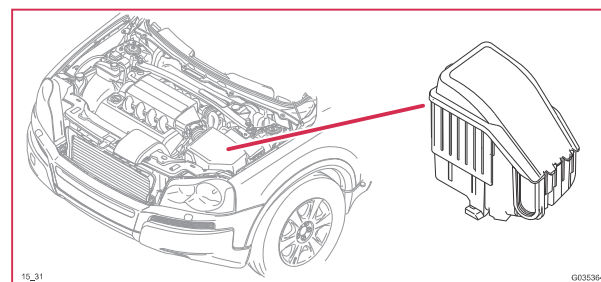


15/32 Distribution box in cargo compartment

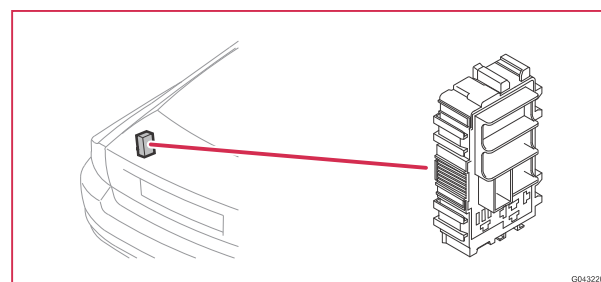

15/36 Distribution box in passenger compartment

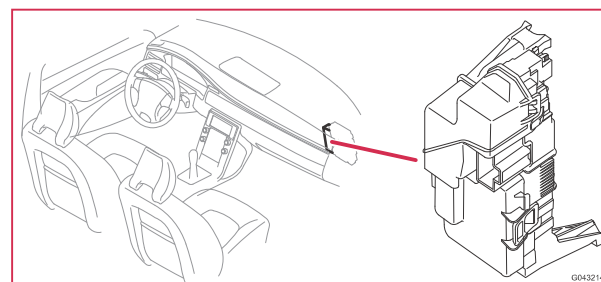


15/37 Distribution box cold zone in engine compartment

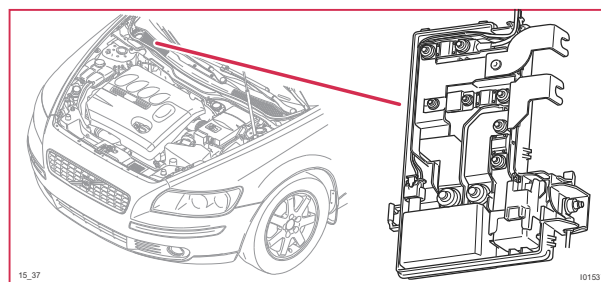


Component illustrations

16/1 - 16/29


16/1 Integrated Audio Module (IAM)

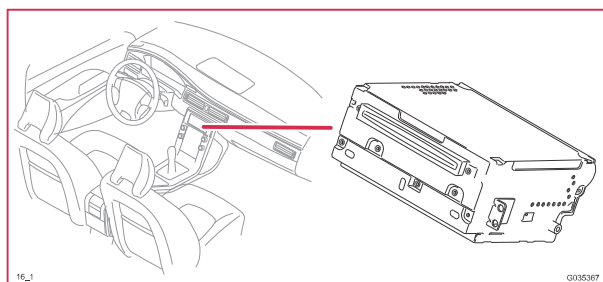


16/10 Horn 1

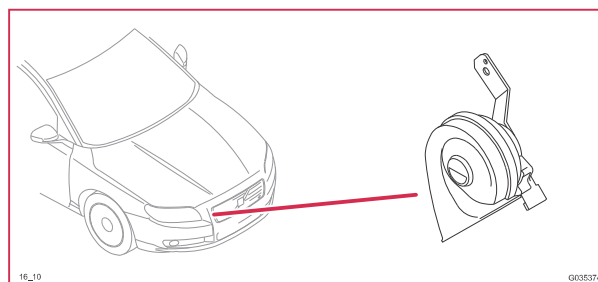


16/3 Right-hand front door speaker

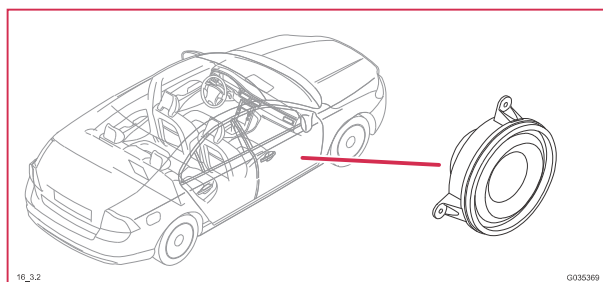


16/11 Horn 2

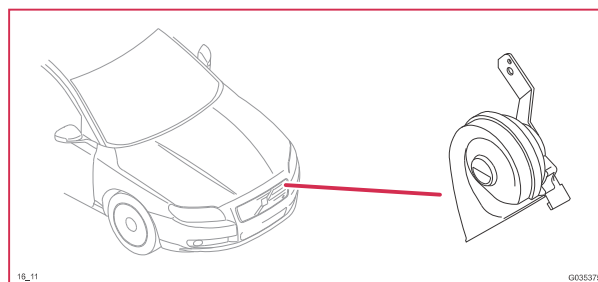


16/4 Left-hand front door speaker

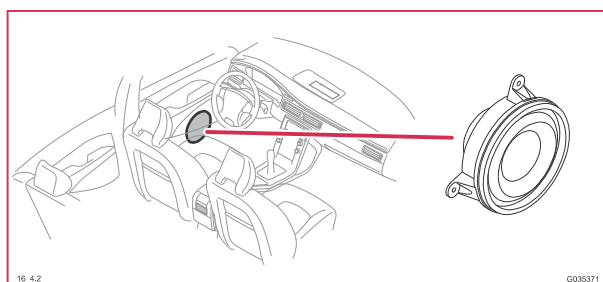


16/16 Window antenna amplifier

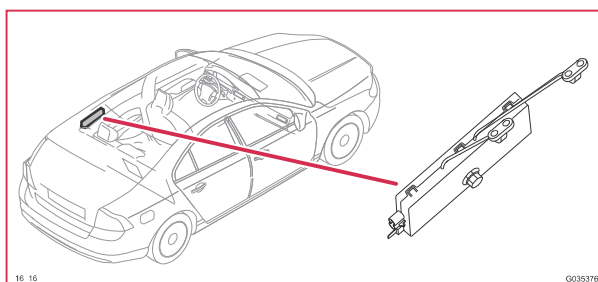


16/5 Right-hand rear door speaker

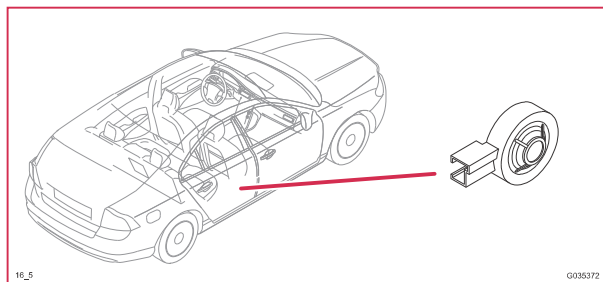


16/26 Center dashboard speaker

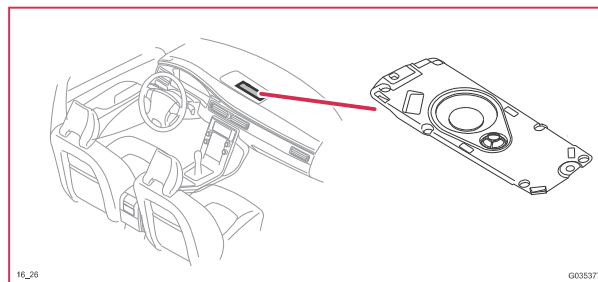

16/6 Left-hand rear door speaker

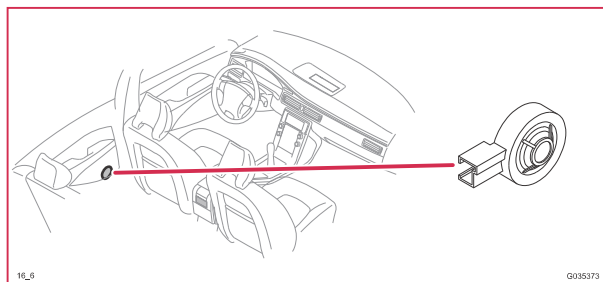


16/29 Loudspeaker mid-range left front

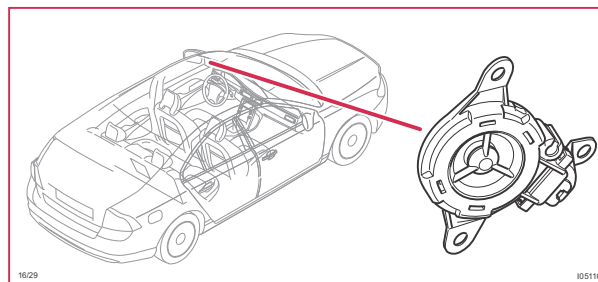


Component illustrations

16/30 - 16/65


16/30 Loudspeaker mid-range right front

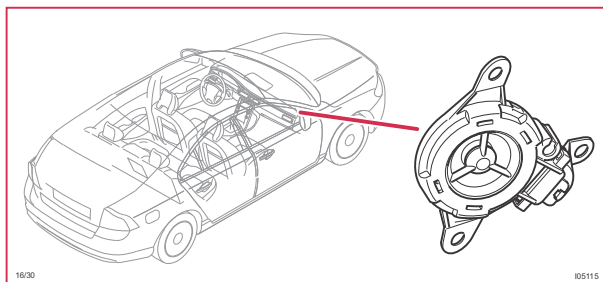


16/49 Traffic Message Channel module (TMC)

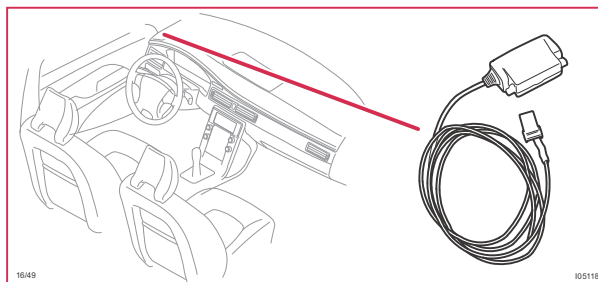


16/35 Siren Control Module (SCM)

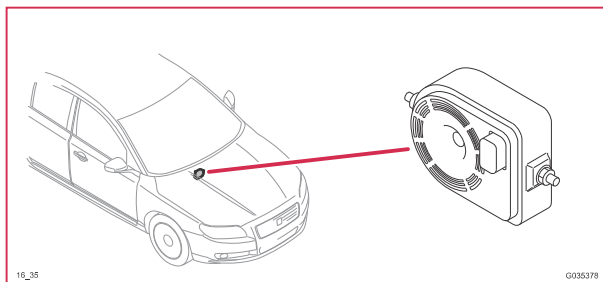


16/55 Left-hand front tweeter

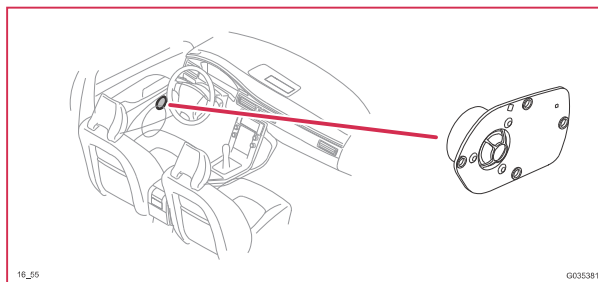


16/36 TV receiver

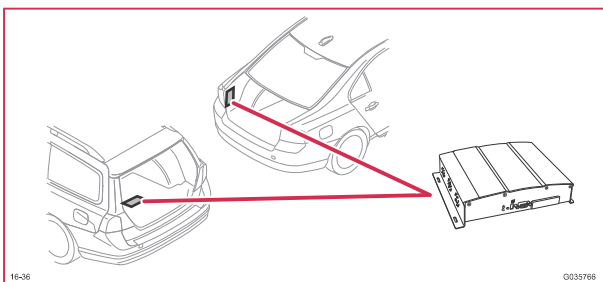


16/56 Right-hand front tweeter

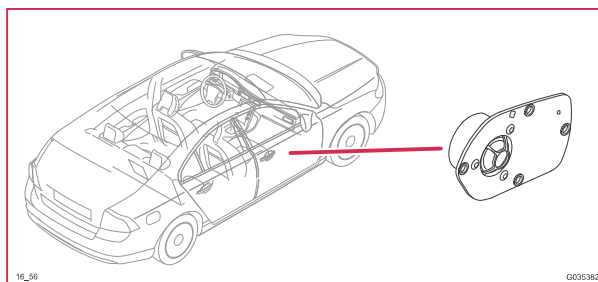


16/45 Portable navigation system

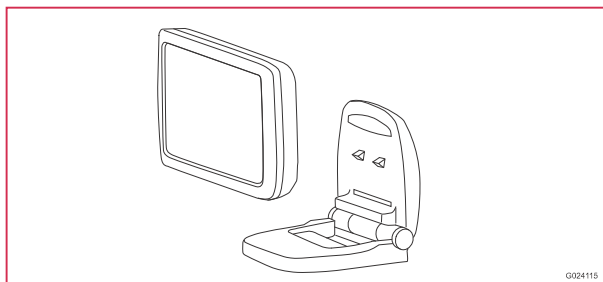


16/60 Phone Module (PHM)

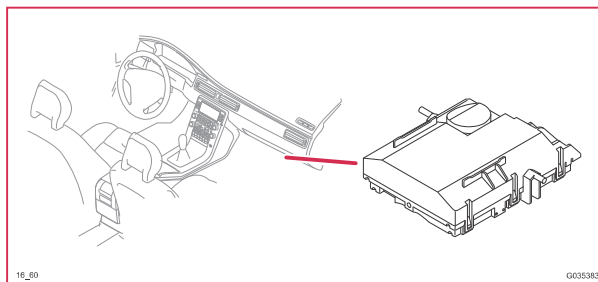

16/47 Antenna GSM/GPS/RDAR

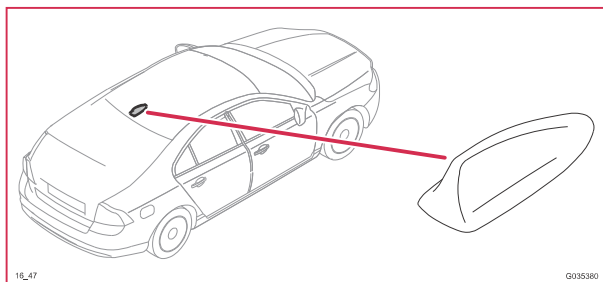


16/65 Immobilizer Antenna Unit (IAU)

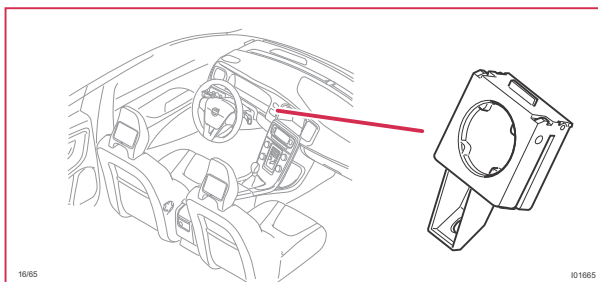


Component illustrations

16/71 - 16/127


16/71 Window antenna amplifier

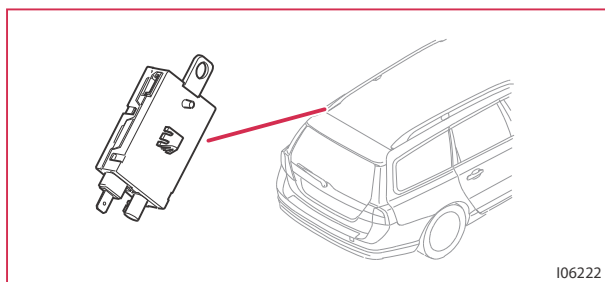


16/121 VICS-antenna

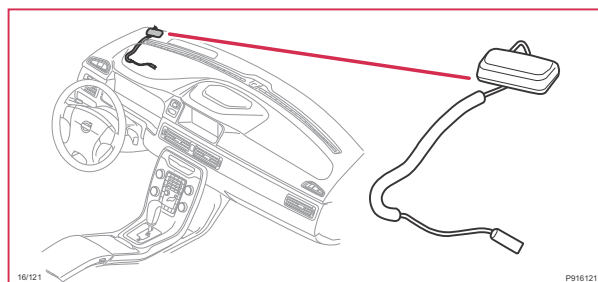


16/79 Subwoofer Module (SUB), V70

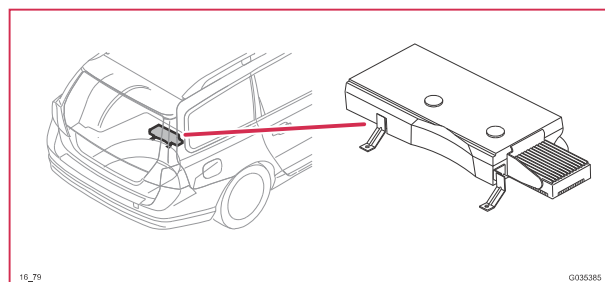


16/123 Auxiliary equipment input (AUX)

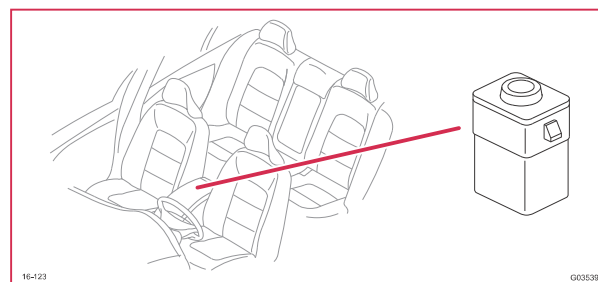


16/98 Microphone

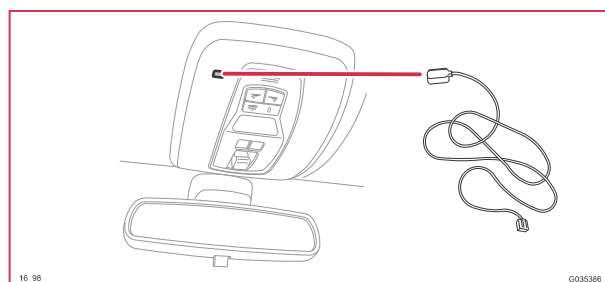


16/123.2 Auxiliary equipment input (AUX)

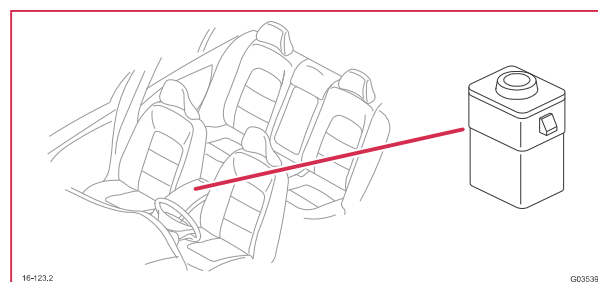


16/105 Audio module (AUD)

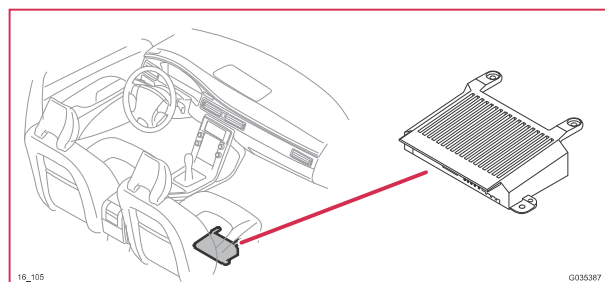


16/123.3 RSE-AUX input

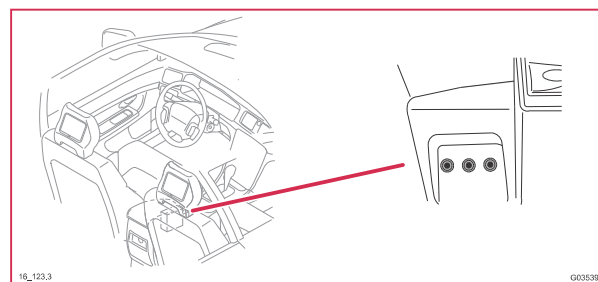

16/109 DVD player/control module

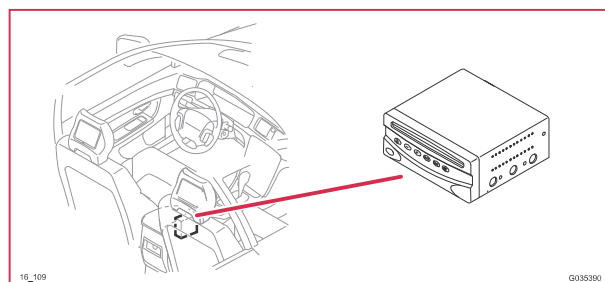


16/127 Microphone, mobile phone handsfree

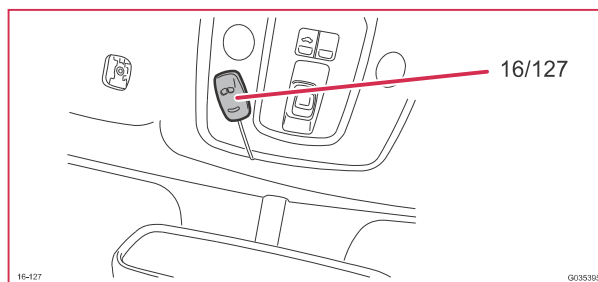


Component illustrations

16/132 - 16/145


16/132 Antenna door lock trunk lid/tailgate, V70

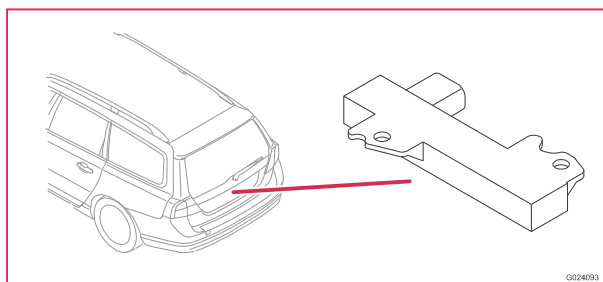


16/136 LH rear door tweeter

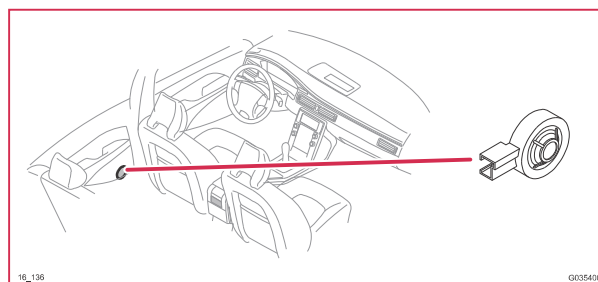


16/132 Antenna, door lock, bumper, S80

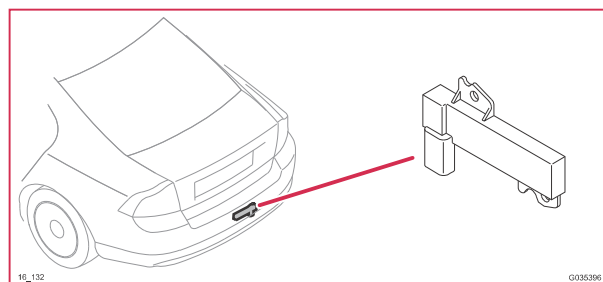


16/137 RH rear door tweeter

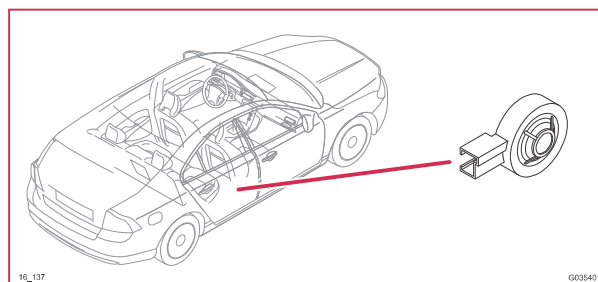


16/133 Antenna, door lock, cargo compartment

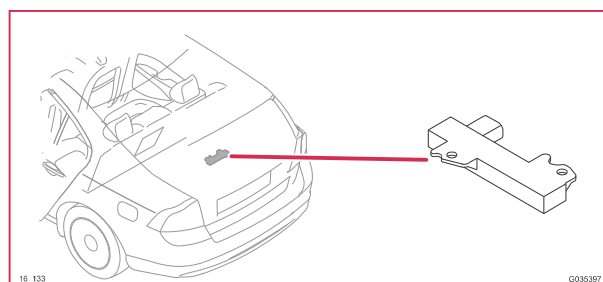


16/140 SIM card reader

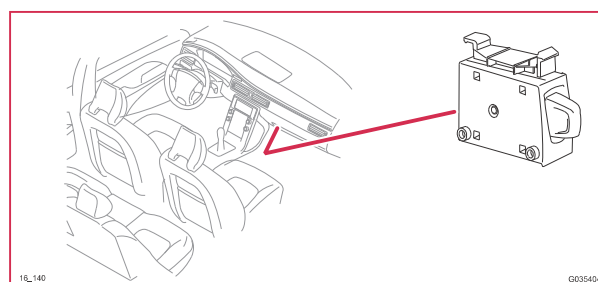


16/134 Antenna, door lock, passenger compartment 2

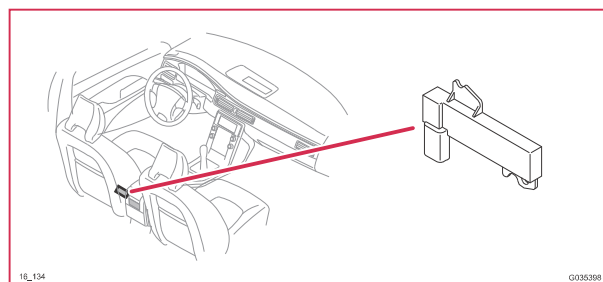


16/141 Interference filter, rear window, left

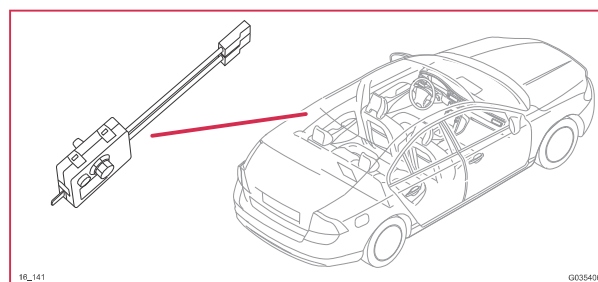

16/135 Antenna, door lock, passenger compartment 3

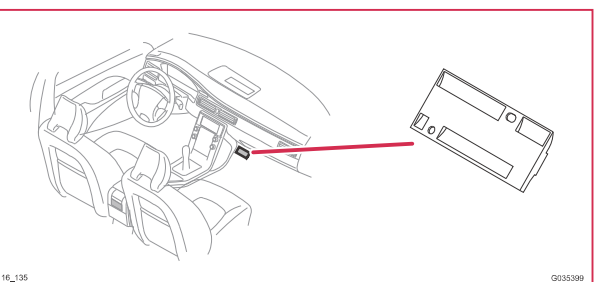


16/145 Remote Digital Audio Receiver (RDAR)

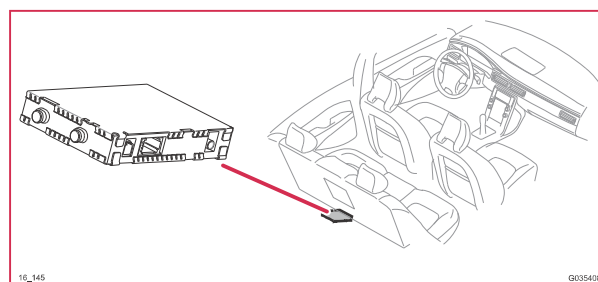


Component illustrations

16/159 - 17/13


16/159 Control module, cellular phone handsfree

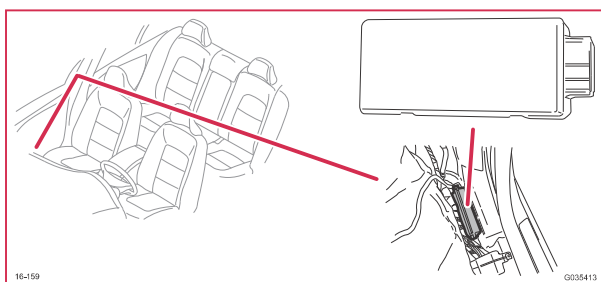


16/185 TV Antenna

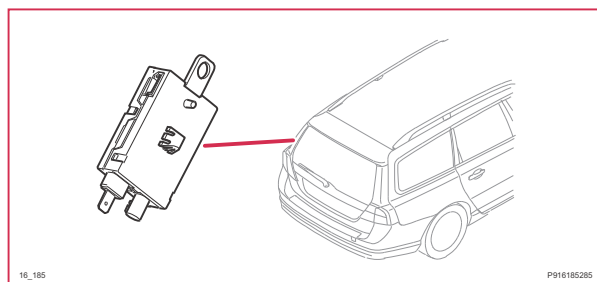


16/162 Digital Audio Broadcast Module (DABM)

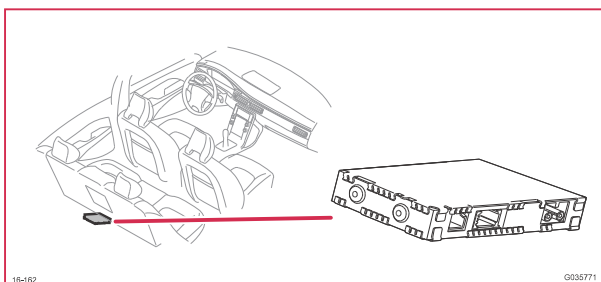


16/186 TV Antenna

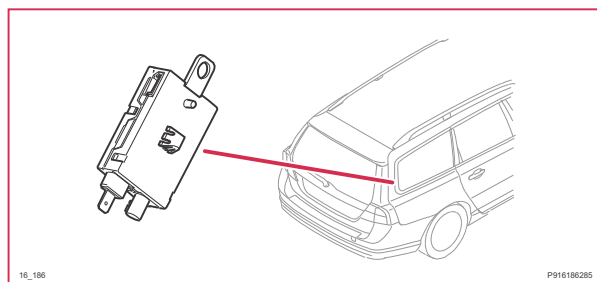


16/164 Screen, LH head restraint

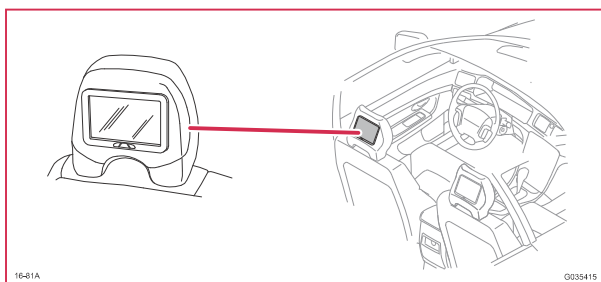


16/187 TV Antenna

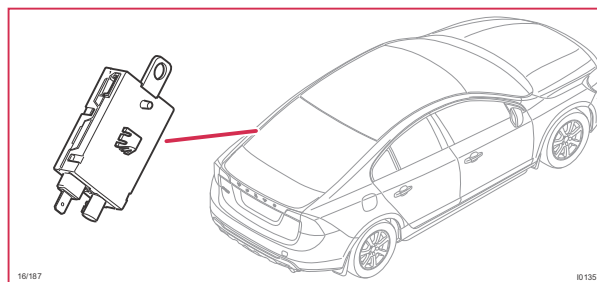


16/165 Screen, RH head restraint

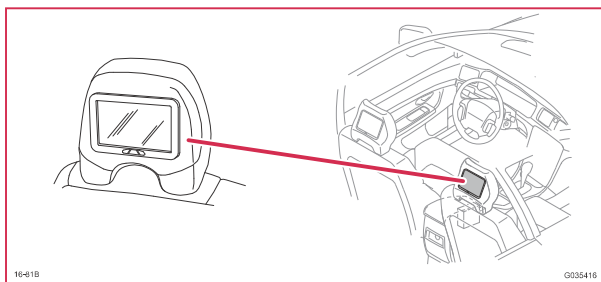


16/188 TV Antenna

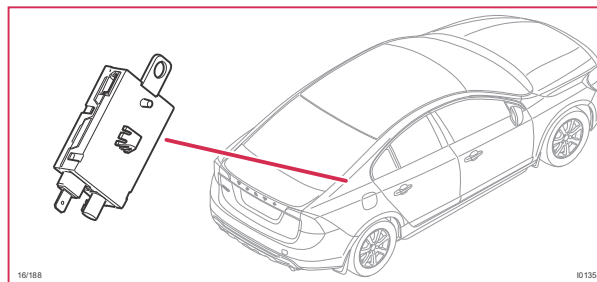

16/181 Rear headphone sockets

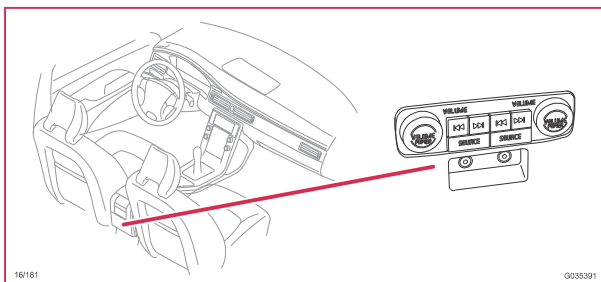


17/13 Data link connector

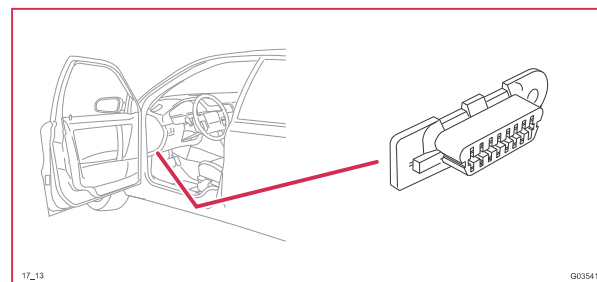


Component illustrations

17/19 - 20/8


17/19 12 V outlet, cargo compartment, V70

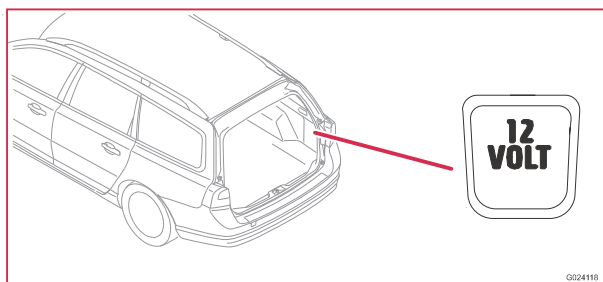


17/42 USB-port

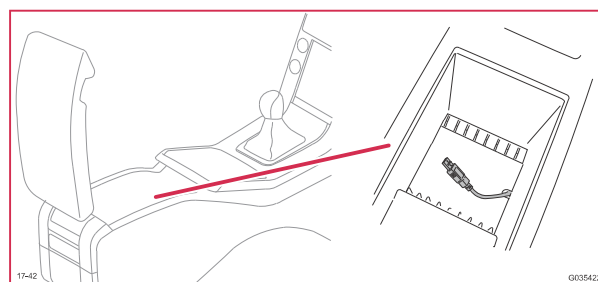


17/19 12 V outlet, cargo compartment, S80

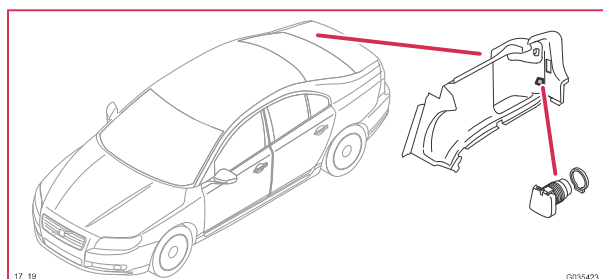


17/45 Alcolock outlet

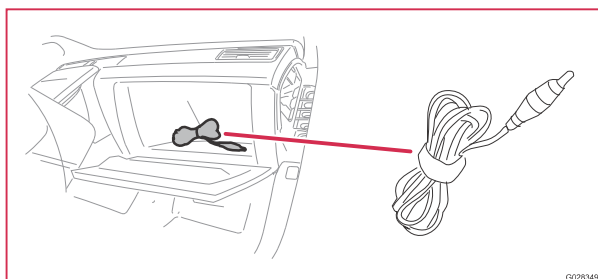


17/37 4-pin outlet, tow hitch cable harness

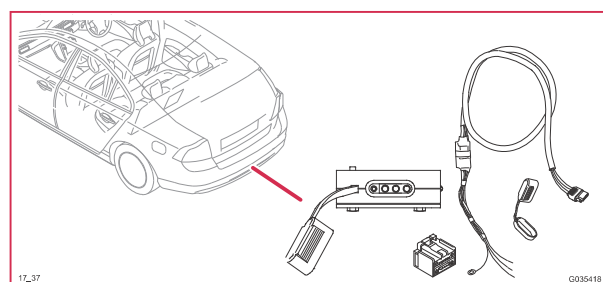


18/4 Contact reel

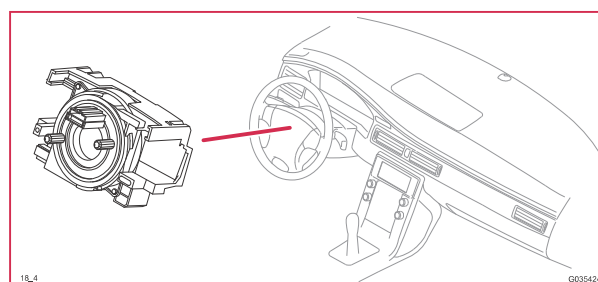


17/38 7-pin outlet, tow hitch cable harness

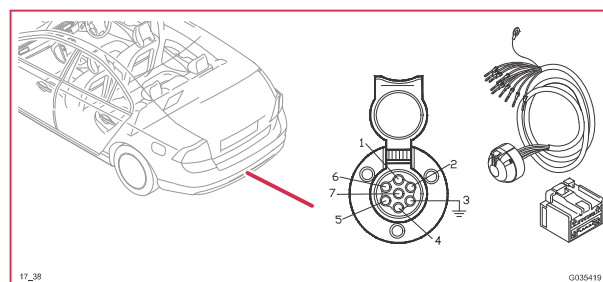


19/4 Analog clock

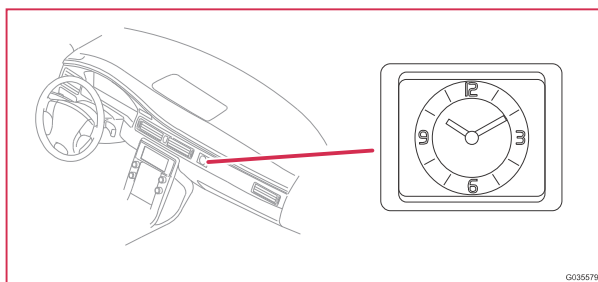

17/39 13-pin outlet, tow hitch cable harness

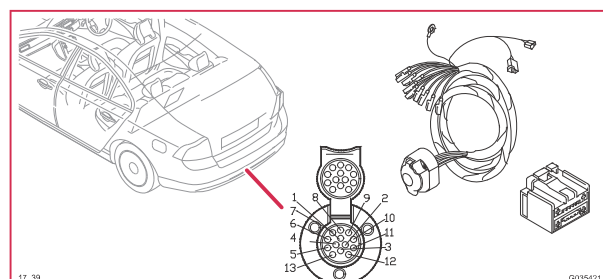


20/3-8 Spark plug and ignition coil

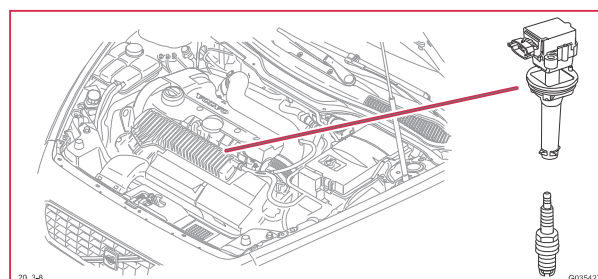


Component illustrations 20/16 - 27/6


20/16 Capacitor

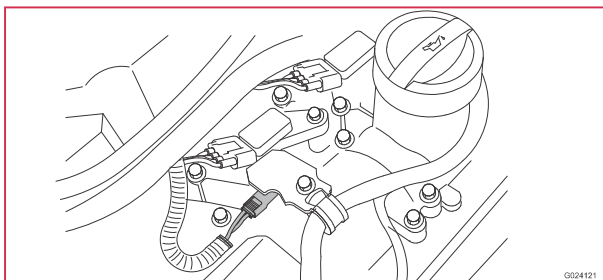


27/2 Indicator, visual collision warning

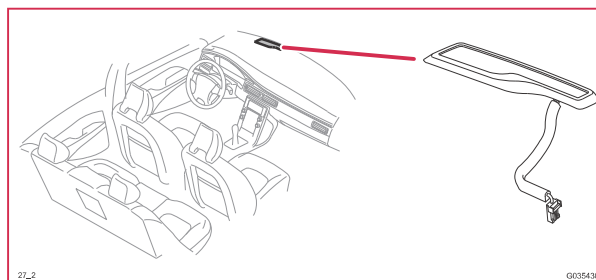


20/22-26 Glow plug

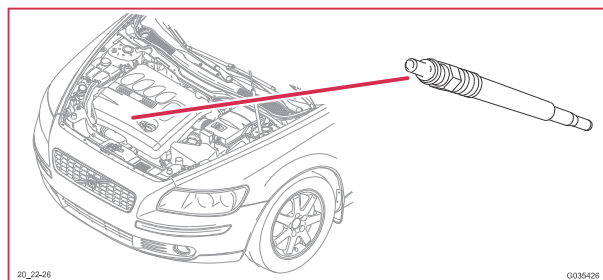


27/3 Left Camera Module (LCM)

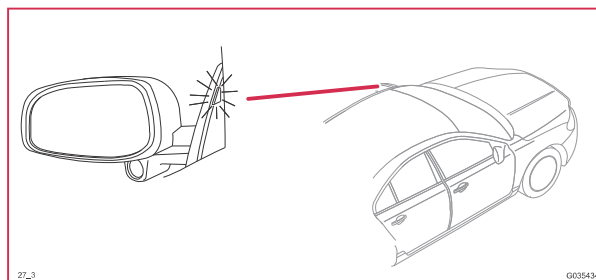


26/6 Converter/control module, sill moldings, driver's side

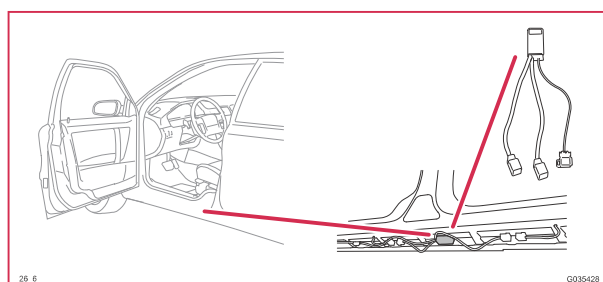


27/4 Right Camera Module (RCM)

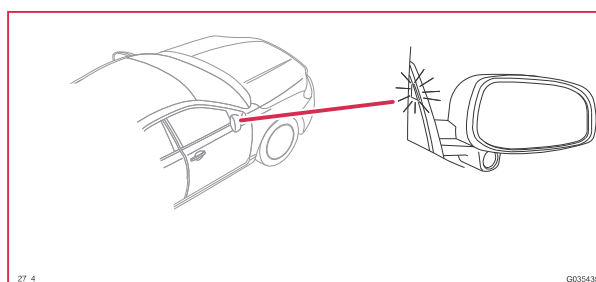


26/7 Converter/control module, sill moldings, passenger side

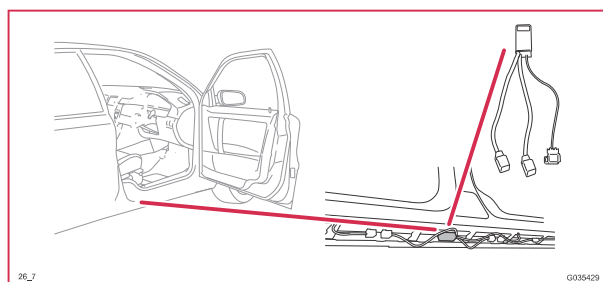


27/5 Forward looking camera

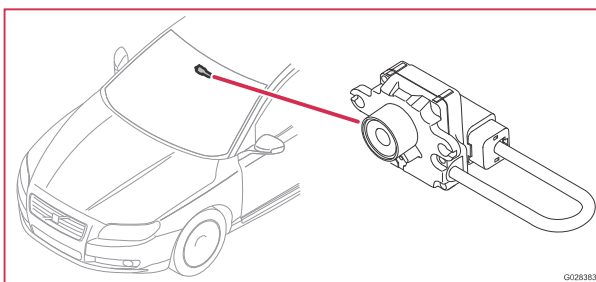

26/8 Alcolock charging cradle

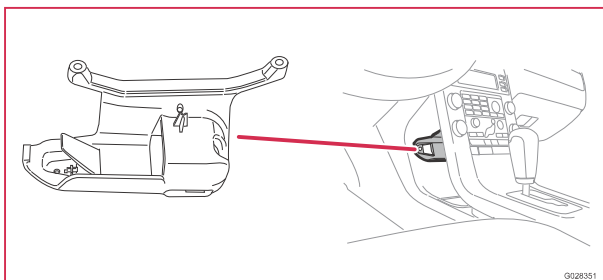


27/6 Camera

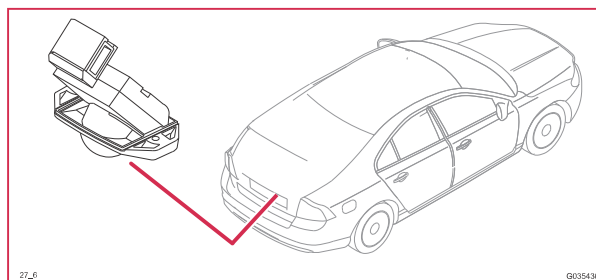


Component illustrations

27/8 - 31/47


27/8 Camera, wide angle front

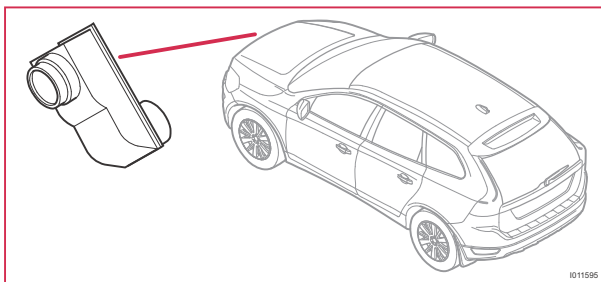


31/6 Ground connection, Left bottom rail

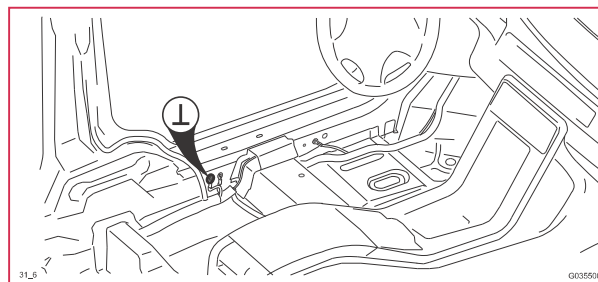


31/1 Ground connection, PTC

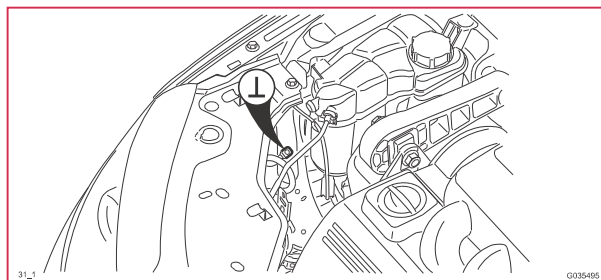


31/7 Ground connection, Left bottom rail

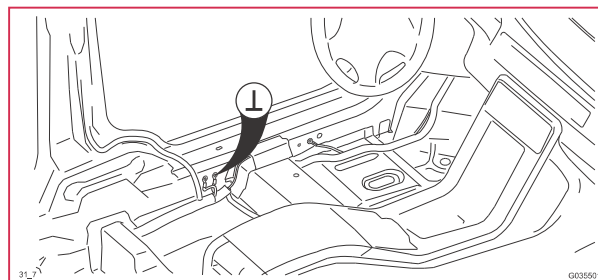


31/2 Ground connection, Left wheel housing

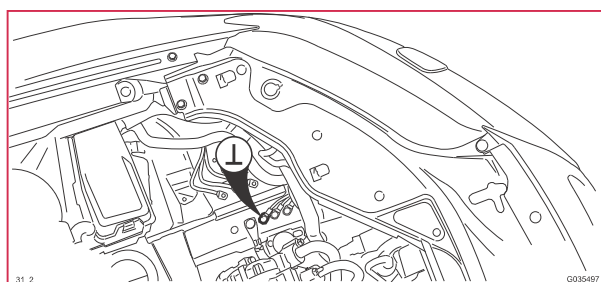


31/10 Ground connection, Left bottom rail

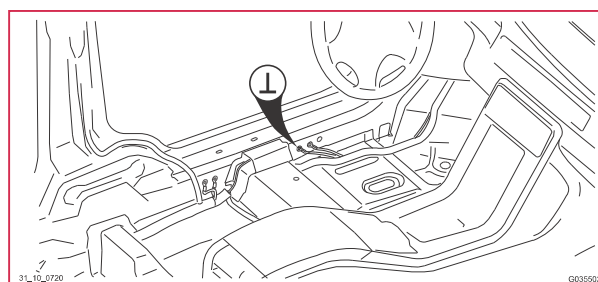


31/3 Ground connection, Body battery

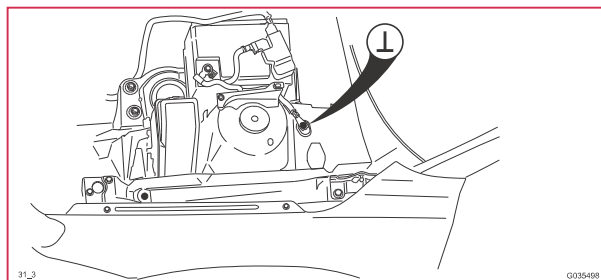


31/15 Ground connection, Right bottom rail

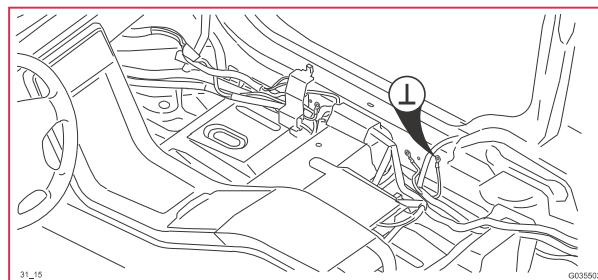

31/4 Ground connection, engine

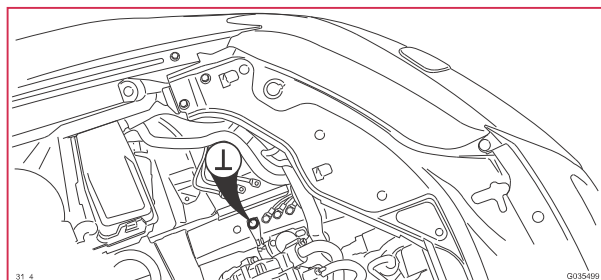


31/47 Ground connection, Left rear bumper abutment

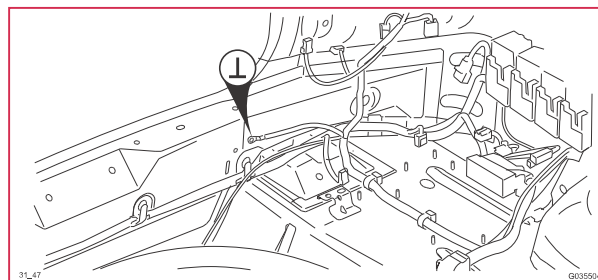


Component illustrations

31/48 - 31/88


31/48 Ground connection, Right rear bumper abutment

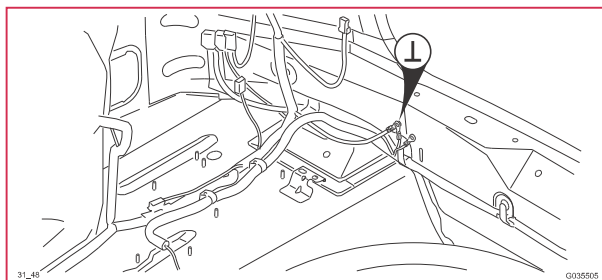


31/83 Ground connection, Left bottom rail

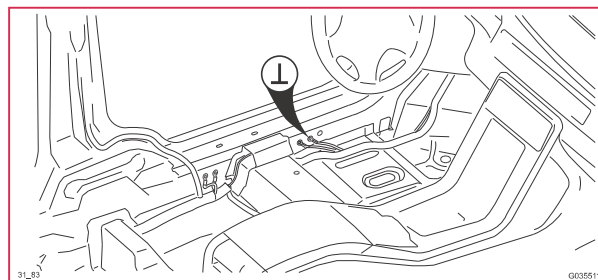


31/65 Ground connection, Rear seat riser, left side 1

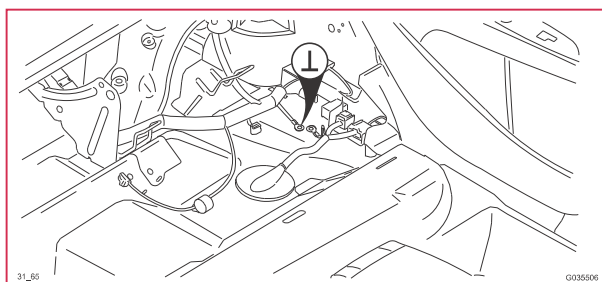


31/84 Ground connection, Right bottom rail

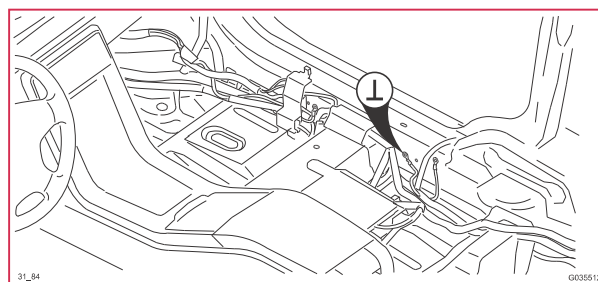


31/66 Ground connection, Rear seat riser, left side 2

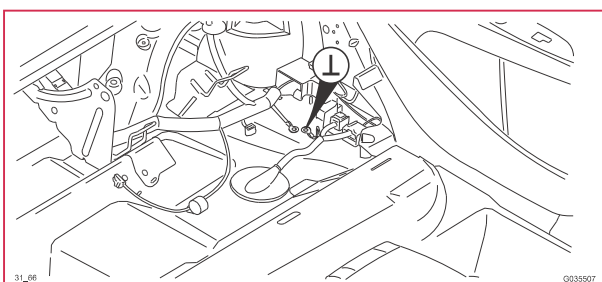


31/88 Ground connection, Engine ignition coils, 4-Cyl.

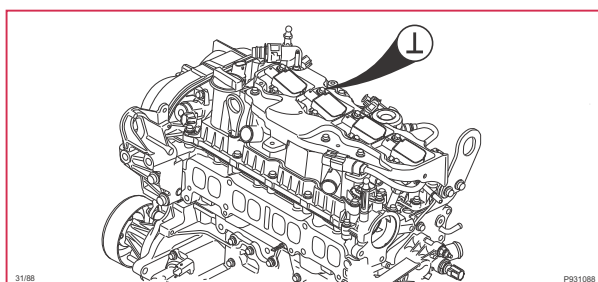


31/67 Ground connection, Rear seat riser, right side 1

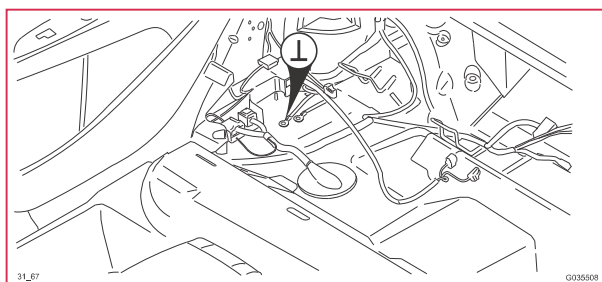


31/88 Ground connection, Engine ignition coils, 5-Cyl.

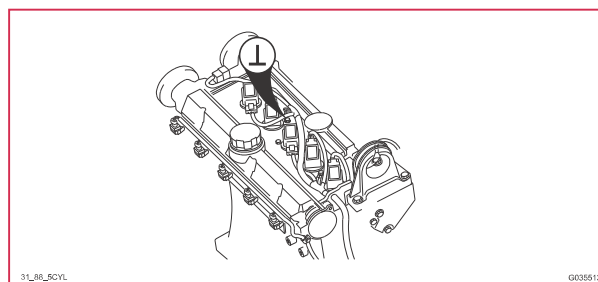

31/68 Ground connection, Rear seat riser, right side 2

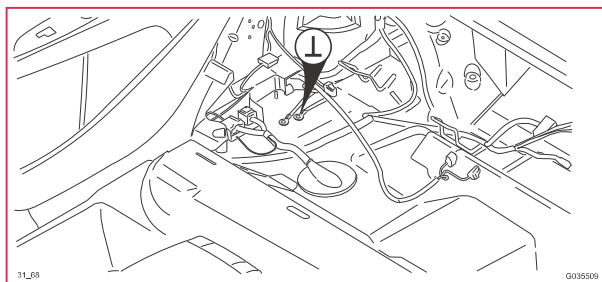


31/88 Ground connection, Engine ignition coils, 6-Cyl.

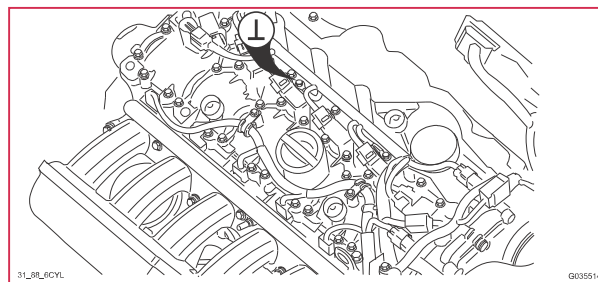


Component illustrations

31/89 - 31/131


31/89 Ground connection, Engine ignition coils, 4-Cyl.

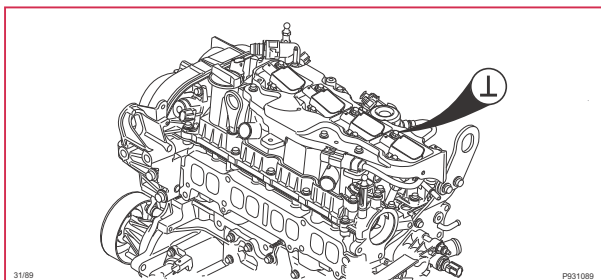


31/89 Ground connection, Engine ignition coils, 5-Cyl.

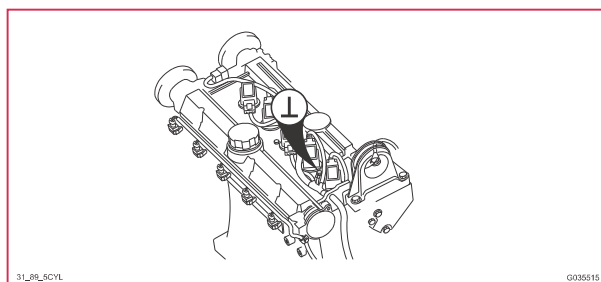


31/89 Ground connection, Engine ignition coils, 6-Cyl.

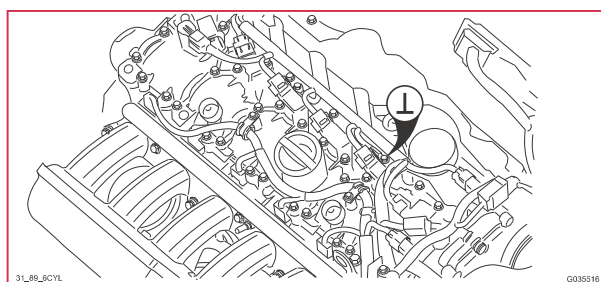


31/90 Ground connection, Engine ignition coils, 6-Cyl. Turbo

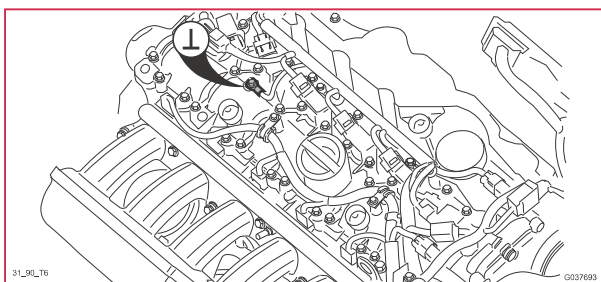


31/93 Ground connection, Left wheel housing 2

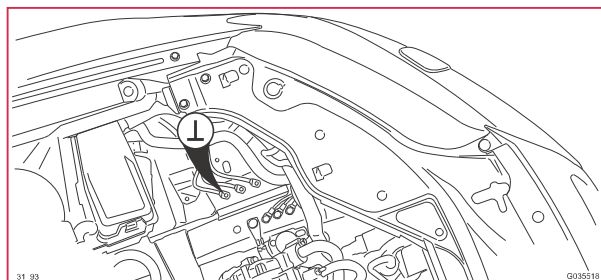


31/94 Ground connection, Right wheel housing 2

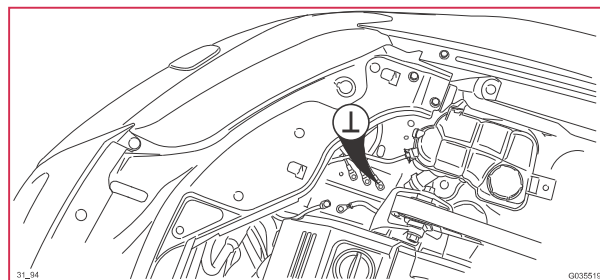


31/95 Ground connection, Left wheel housing 3

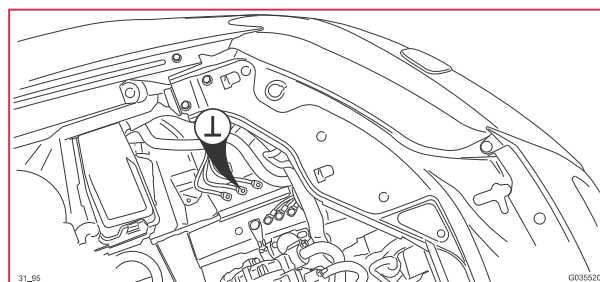


31/96 Ground connection, Right wheel housing 3

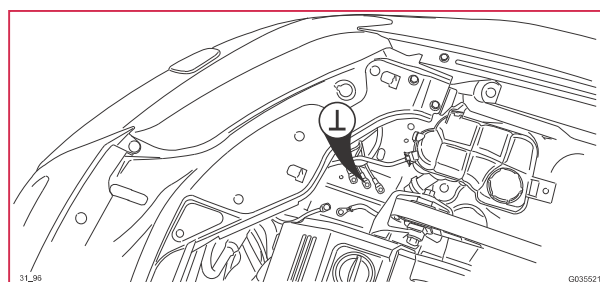

31/107 Ground connection, Roof rear

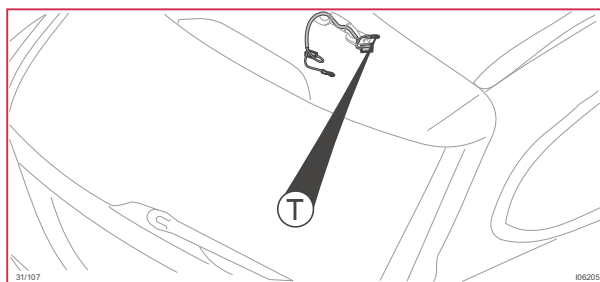


31/131 Ground connection, support battery

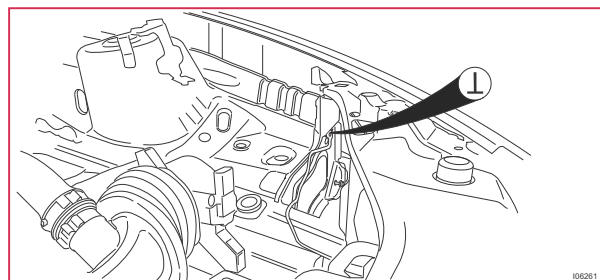


Component illustrations

31/XX4 - 74/31


31/XX4 Ground connection, Engine-Body

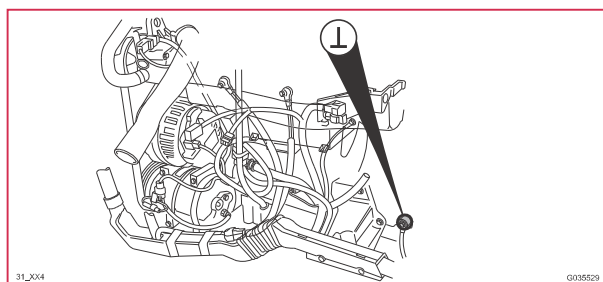


31/INFOT Ground connection, Infotainment

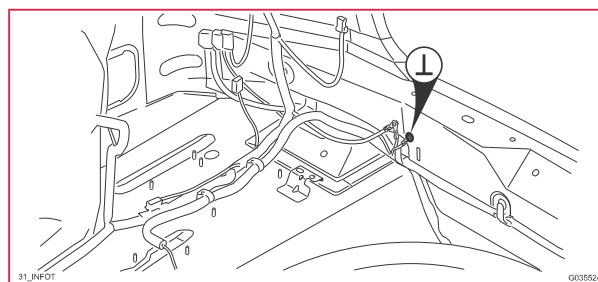


31/XX10 Ground connection, Left wheel housing 1

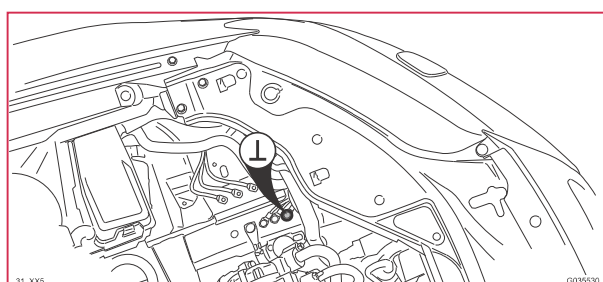


31/TRM Ground connection, Accessories

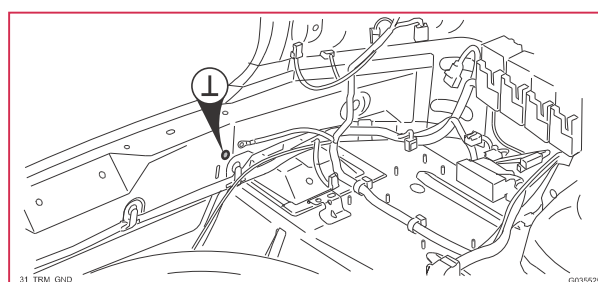


31/XX14 Ground connection, Left wheel housing 3 (ABS)

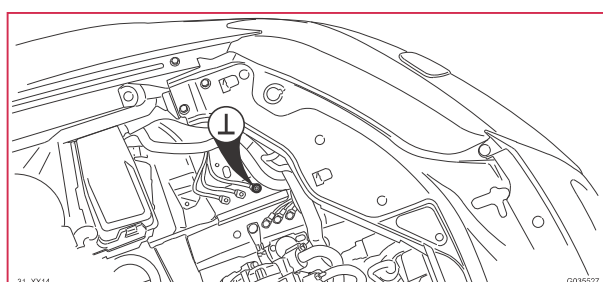


74/9 Connector

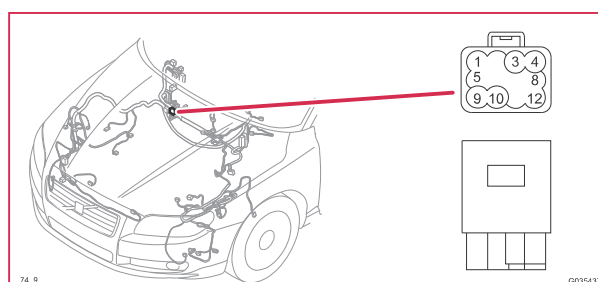


31/XX15 Ground connection, Right wheel housing

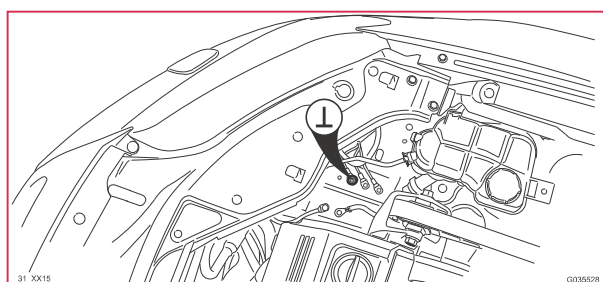


74/30 Connector

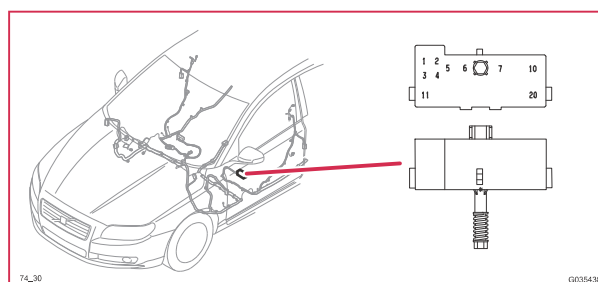

31/AL Ground connection, Auxiliary lights

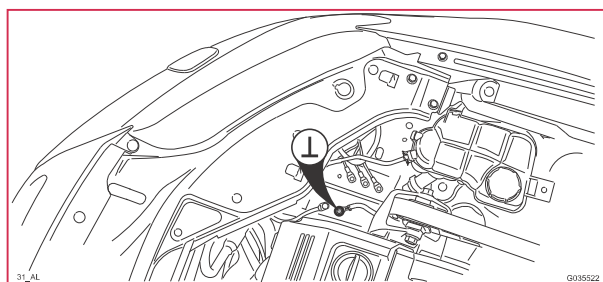


74/31 Connector

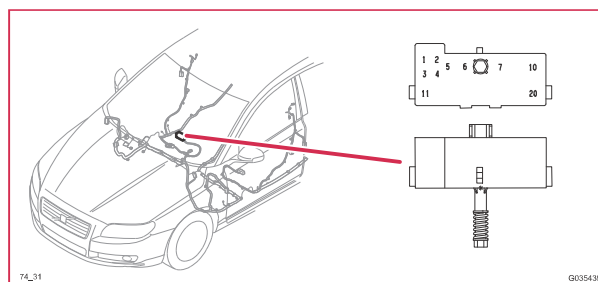


Component illustrations

74/301 - 74/402


74/301 Connector

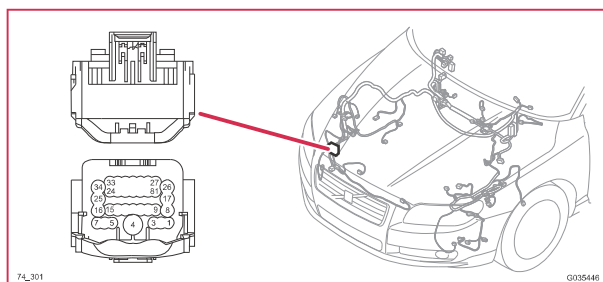


74/310 Connector

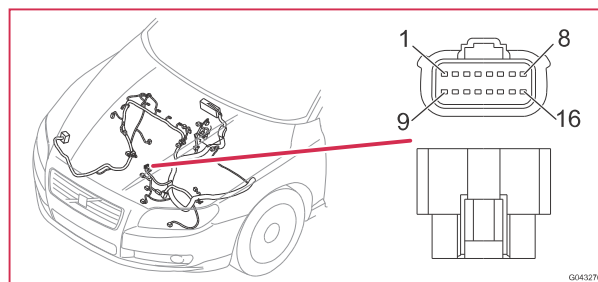


74/302 Connector

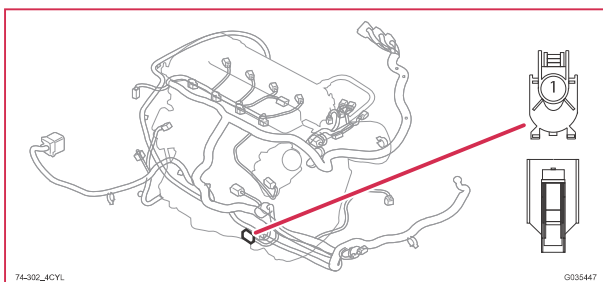


74/316 Connector

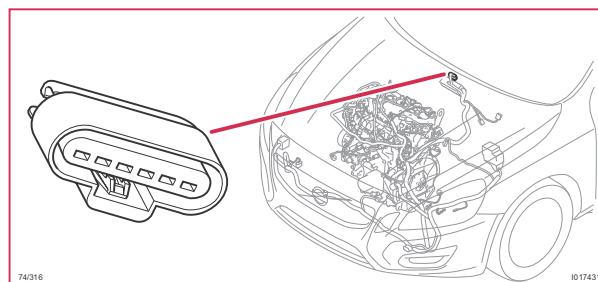


74/304 Connector

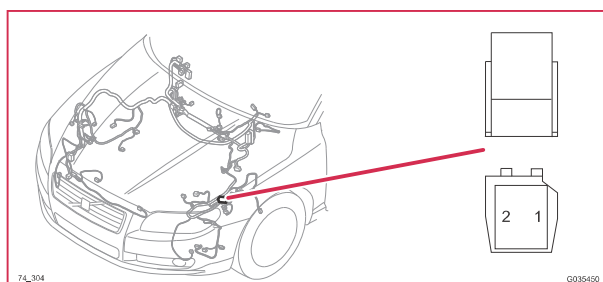


74/321 Connector

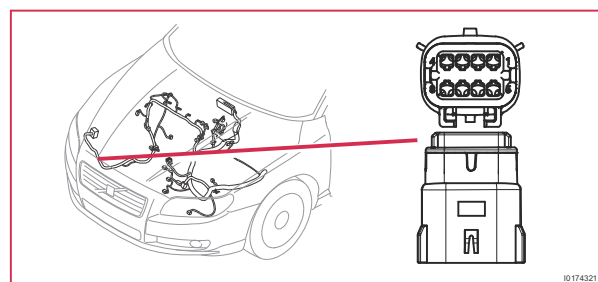


74/307 Connector

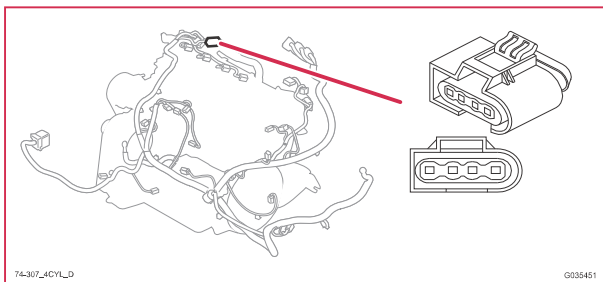


74/401 Connector

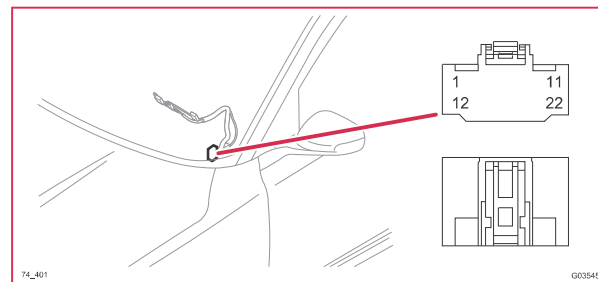

74/309 Connector

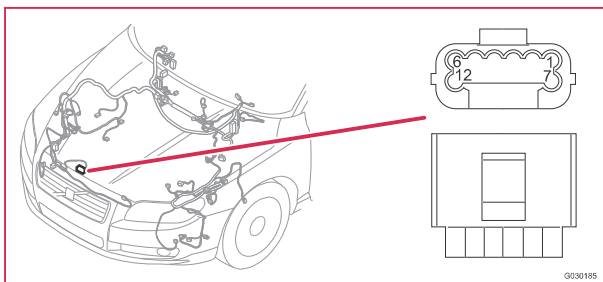


74/402 Connector

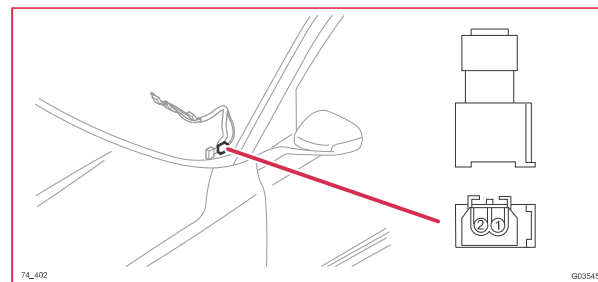


Component illustrations

74/403 - 74/413


74/403 Connector

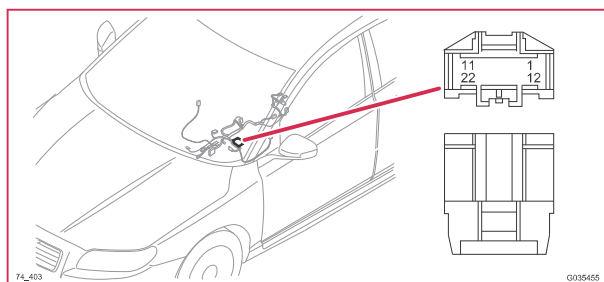


74/407B Connector

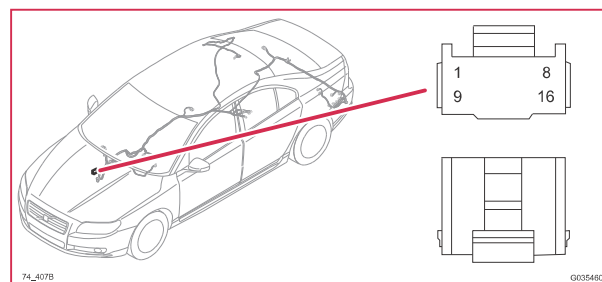


74/404 Connector

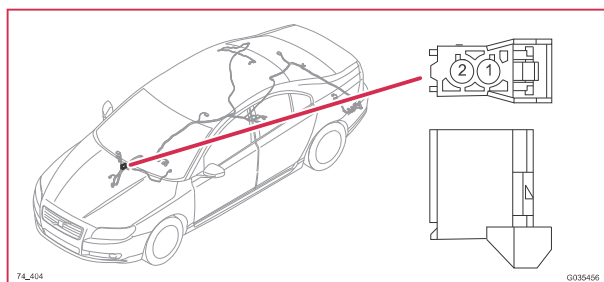


74/409 Connector

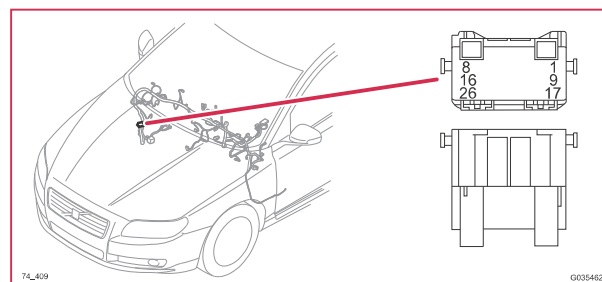


74/405 Connector

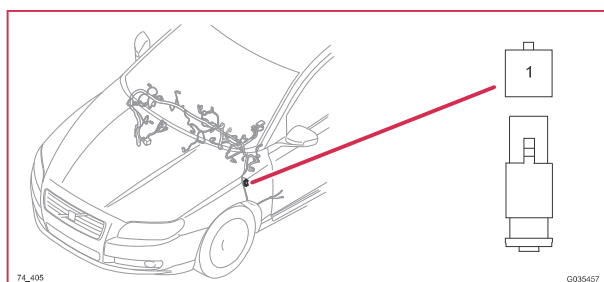


74/411 Connector

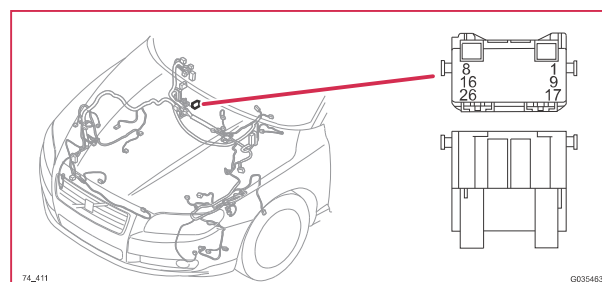


74/406 Connector

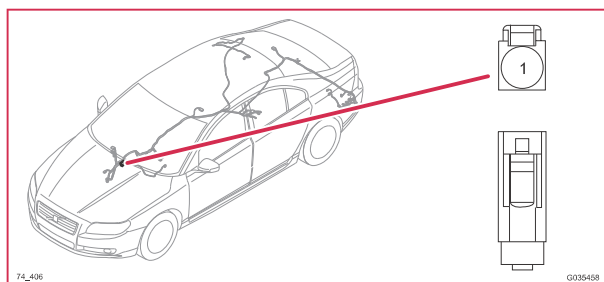


74/412 Connector

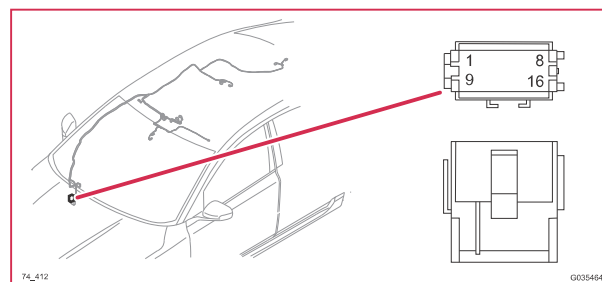

74/407 Connector

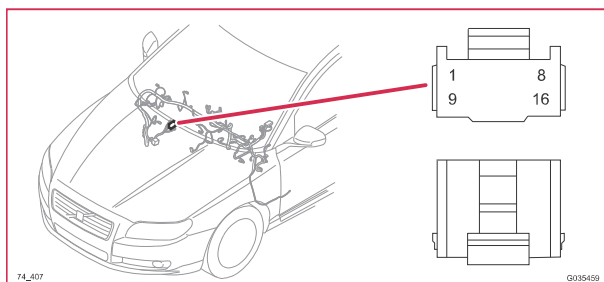


74/413 Connector

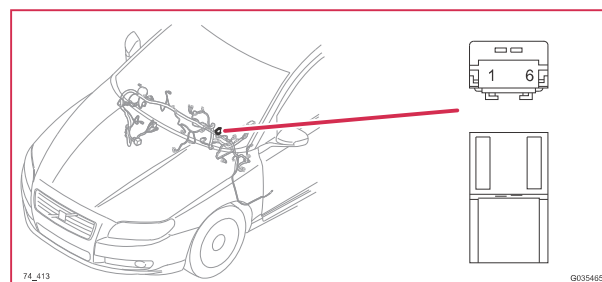


Component illustrations

74/414 - 74/501


74/414 Connector

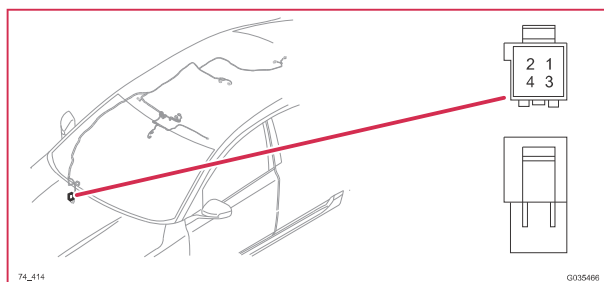


74/421 Connector

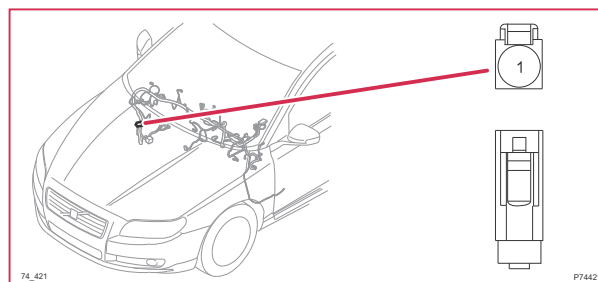


74/417 Connector

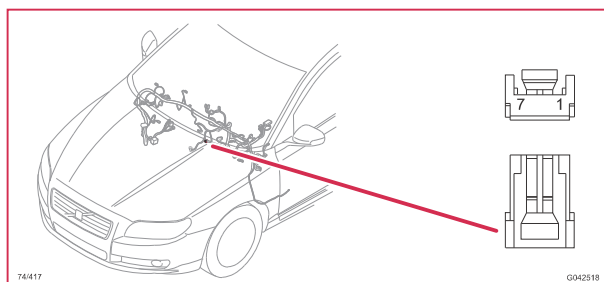


74/428 Connector

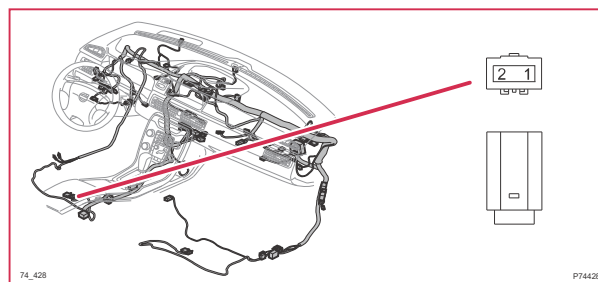


74/418 Connector

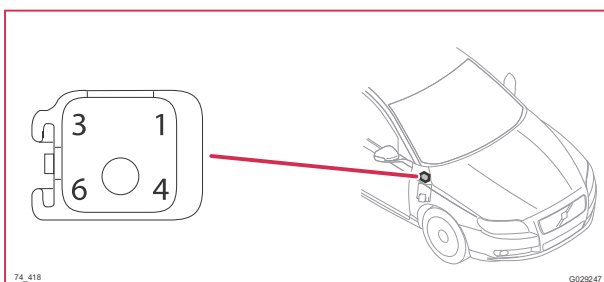


74/429 Connector

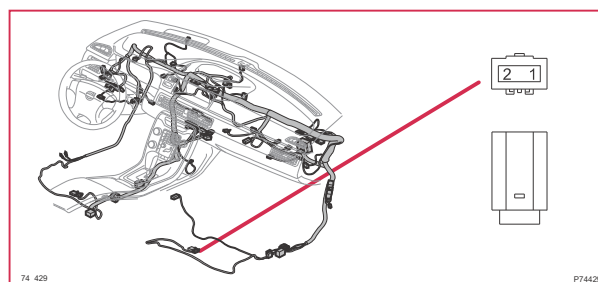


74/419 Connector

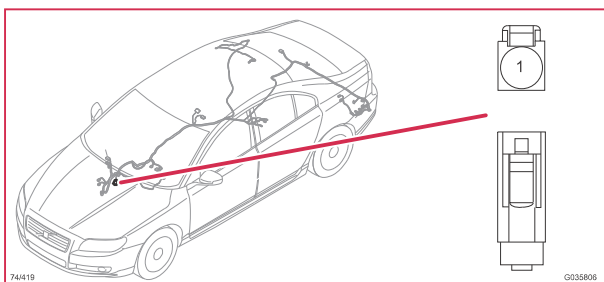


74/430 Connector

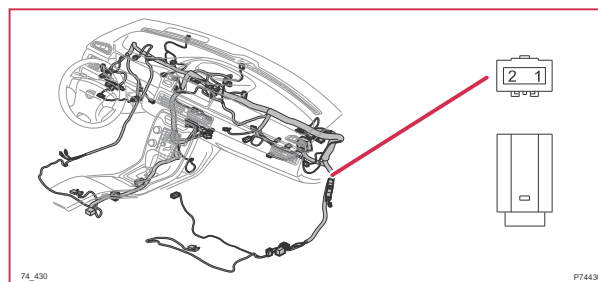

74/420 Connector

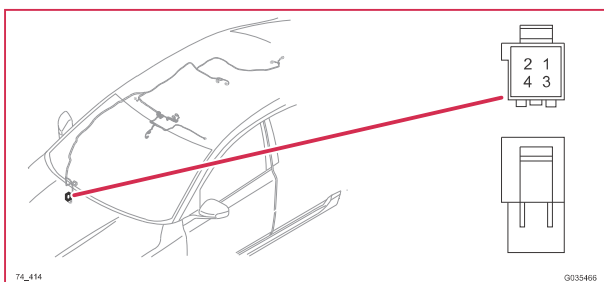


74/501 Connector

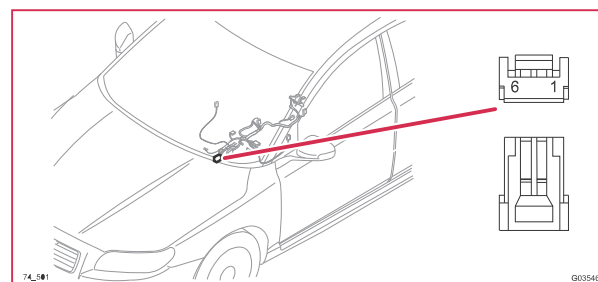


Component illustrations

74/502 - 74/512


74/502 Connector

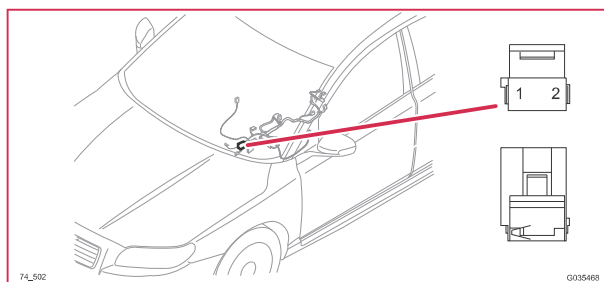


74/508 Connector

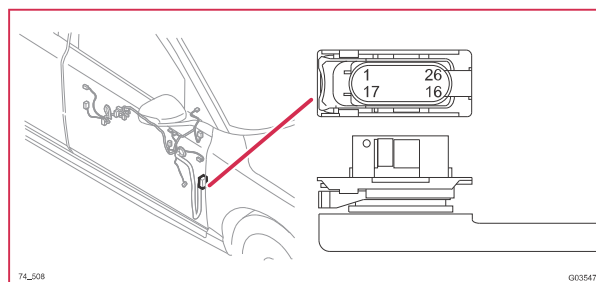


74/503 Connector

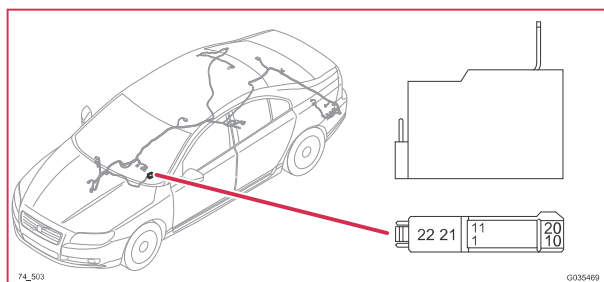


74/509 Connector

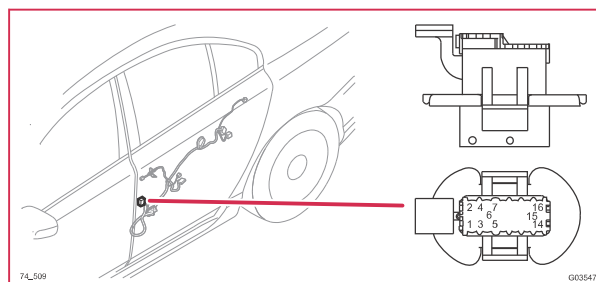


74/504 Connector

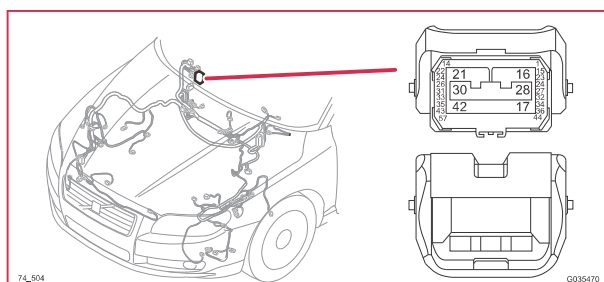


74/510 Connector

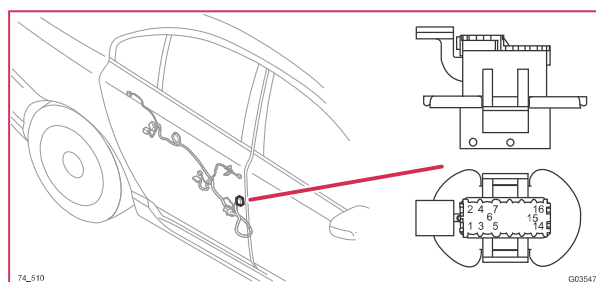


74/504B Connector

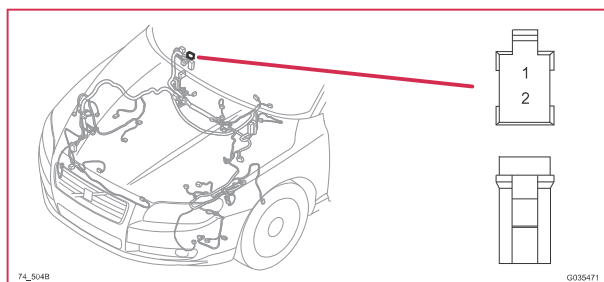


74/511 Connector

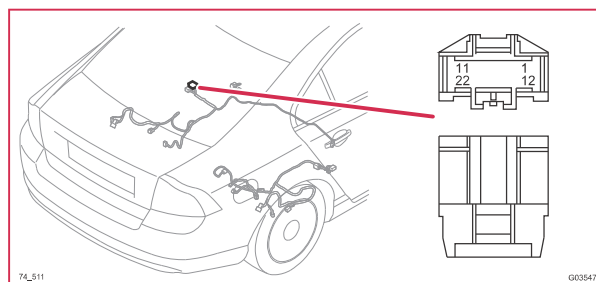

74/507 Connector

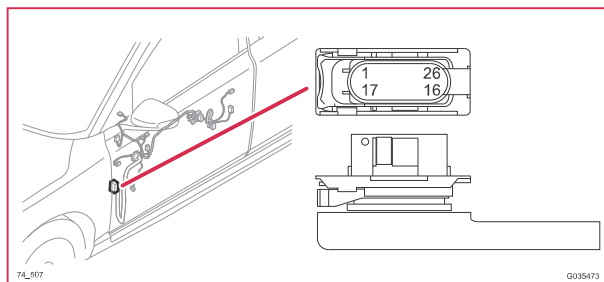


74/512 Connector

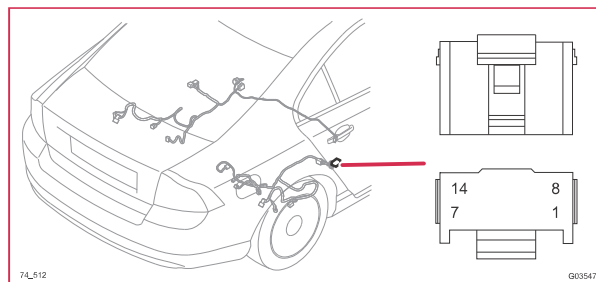


Component illustrations

74/513 - 74/531


74/513 Connector

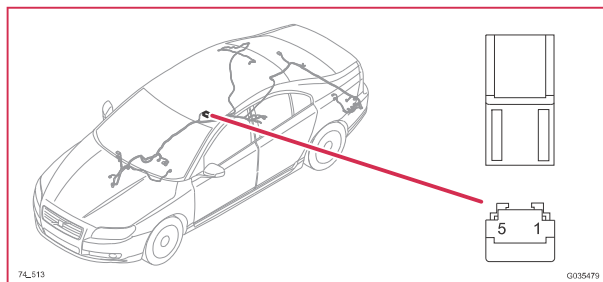


74/520 Connector

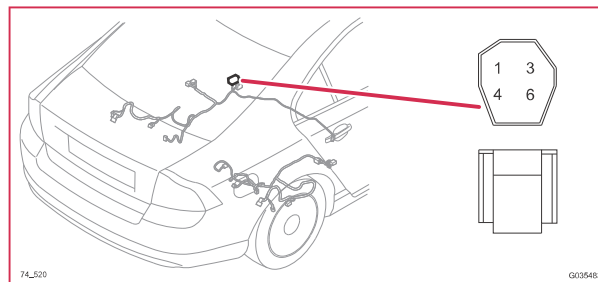


74/514 Connector

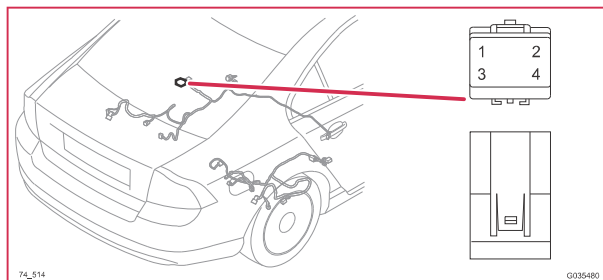


74/523 Connector

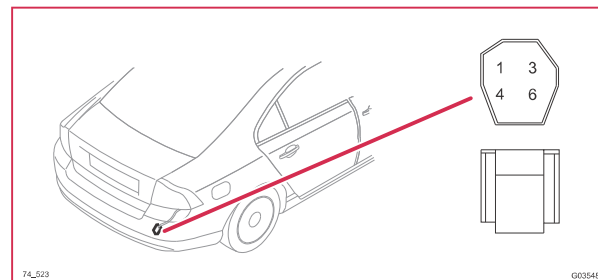


74/515 Connector

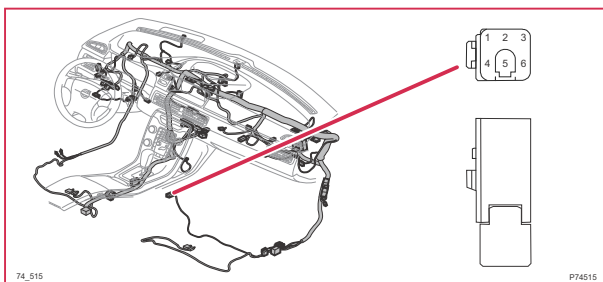


74/524 Connector

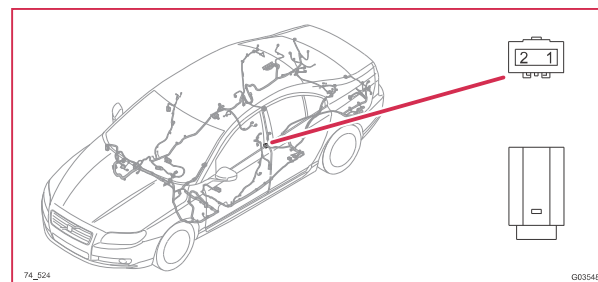


74/518 Connector

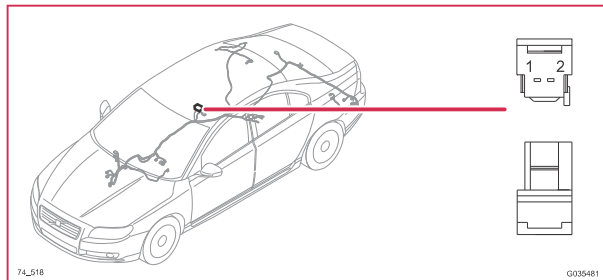


74/529 Connector

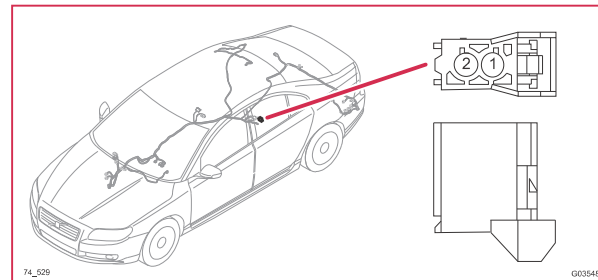

74/519 Connector

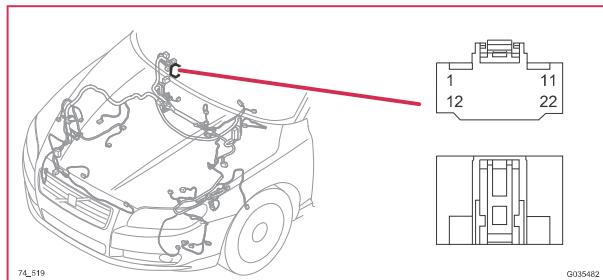


74/531 Connector

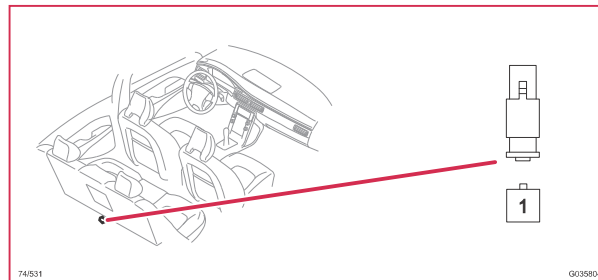


Component illustrations

74/532 - 74/1501


74/532 Connector

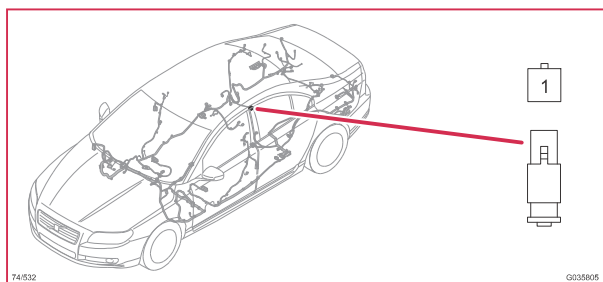


74/602 Connector

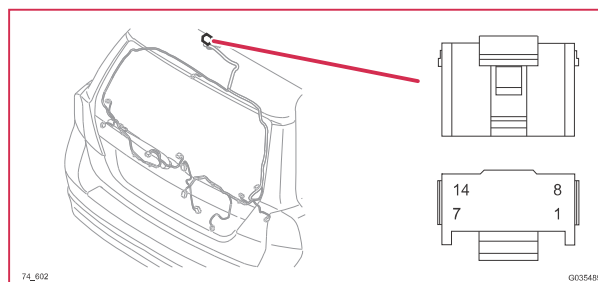


74/534 Connector

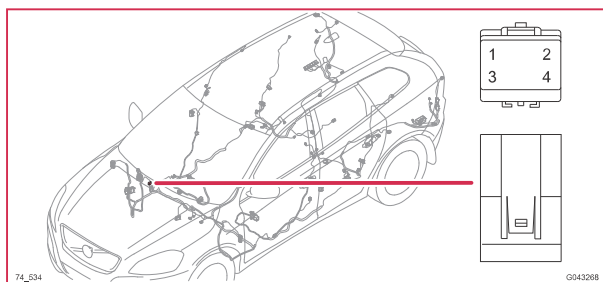


74/603 Connector

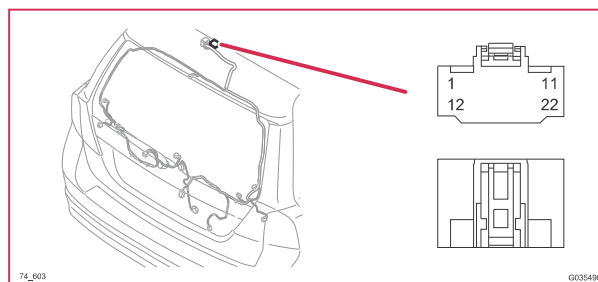


74/543 Connector

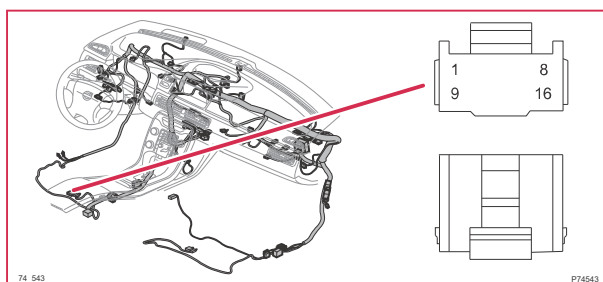


74/901 Connector

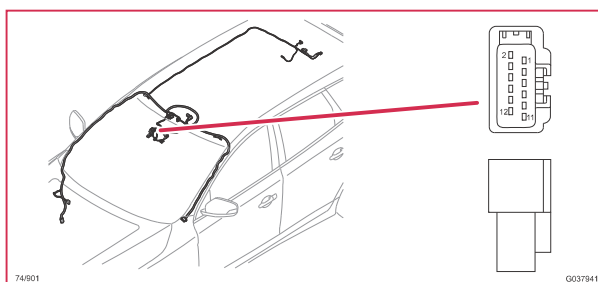


74/545 Connector

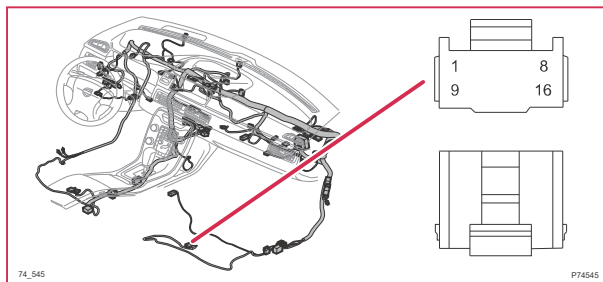


74/1500 Connector

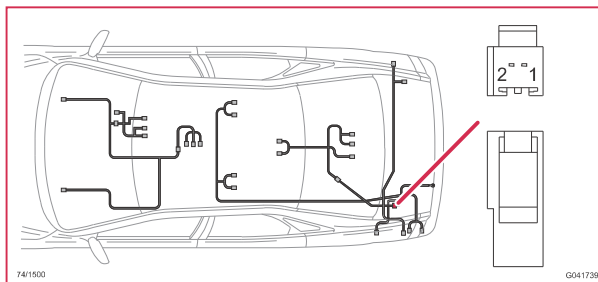

74/601 Connector

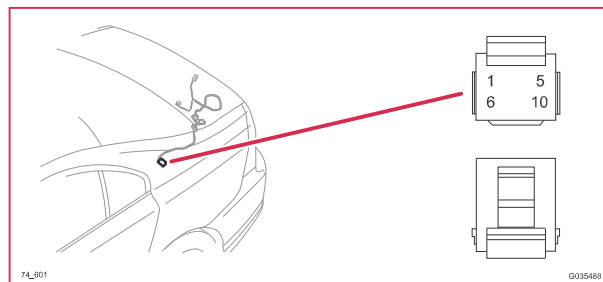


74/1501 Connector

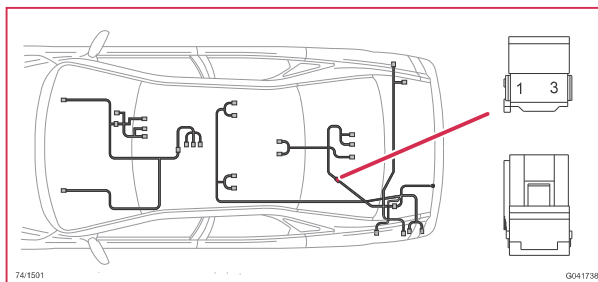


Component illustrations

74/1502 - F/no.


74/1502 Connector

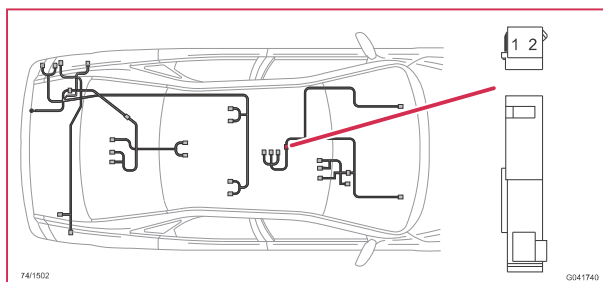


74/1503 Connector

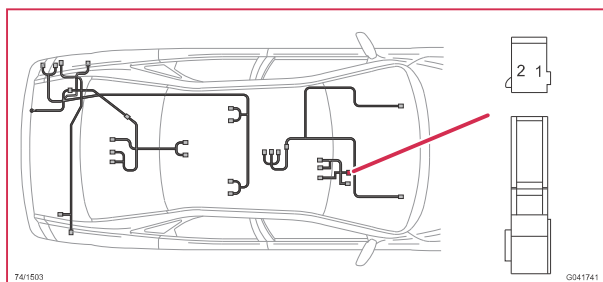

PF/no. Main fuse by battery

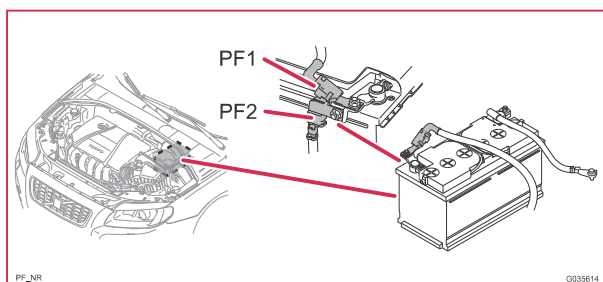

F/no. Main fuse by battery

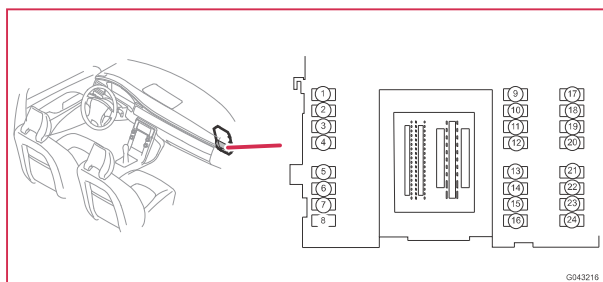

Index 1:2

A

Abbreviations	6
Accessory USB unit (AUU)	143
Active headlight	114
Additional electrical equipment, Group 36	118
Alcohol lock	133
Alternator and voltage regulator, Group 32	90
Analog clock	146
Anti-theft alarm	129
Audio	150
Audio Premium	152
Automatic transmission AWF21	164
Automatic transmission MPS6	163
Auxiliary heater	203
Auxiliary lights	116

B

Beam length adjustment, manual	99
Blind spot information system	185
Bluetooth Handsfree	156
Brake control system & DSTC	167
Brake lights	104
Brake system, Group 59	167
Branching points	252

C

Cable harness routing in vehicle	272
Cable harness towbar/tow hitch 13 pin	141
Cable harness towbar/tow hitch 4-pin	137
Cable harness towbar/tow hitch 7 pin	139
Cellular phone	148
Center console harness	288
Central Electronic Module (CEM)	46
Central locking front doors	170
Central locking fuel filler flap	175
Central locking rear doors	172
Central locking trunk lid/tailgate	173
Climate control system 4-Cyl. Diesel	198
Climate control system PTC-elements	202
Climate control system, 4-Cyl. Turbo	196
Climate control system, 5- & 6-Cyl.	200
Climate control system, Group 87	196
Collision warning with power brake booster	131
Color abbreviations	6
Component illustrations	294
Connectors	211
Control module overview locations	44
Control modules	44
Control modules overview designations	45
Cooling fan 4-Cyl. Turbo	57
Cooling fan 5-Cyl. Turbo	58
Cooling fan 6-Cyl.	58
Cooling fan, 4-Cyl. Diesel	59
Cooling fan, 5-Cyl. Diesel	60
Cooling system, Group 26	57

Countries/Markets, abbreviations	6
Cruise control 4-Cyl. Diesel	62
Cruise control 4-Cyl. Turbo	61
Cruise control 5-Cyl.	63
Cruise control 5-Cyl. & 6-Cyl.	63
Cruise control 5-Cyl. Diesel	64

D

DAB Radio	155
Dashboard harness	277, 278
Data communication high speed CAN	49
Data communication high speed CAN, 4 Cyl	50
Data communication Intermediate speed CAN	51
Data communication MOST	53
Data communication, LIN	54
Daytime Running Lights	102
Diagnostics system	134
Differential Electronic Module (DEM)	165
Direction indicator	119
Distribution box in cargo compartment	28
Distribution box in passenger compartment	25
Doors and openings, Group 83	170
Driver information module	145

E

Electric parking brake	166
Electrical distribution overview	11
Emission control	86
Engine compartment harness	275, 276
Engine controls, Group 27	61
Engine Harness 4-Cyl.	272
Engine harness 4-Cyl. Diesel	274
Engine Harness 5-Cyl.	272
Engine Harness 6-Cyl.	273
Engine management system	68
Executive harnesses	293
Explanations	6
Exterior decorative elements, etc. Group 84	181

F

Floor harness S80	279, 280
Floor harness V70	281, 282
Fog lights	102
Follow-me-home lighting	108
Four-C	169
Fuses at Battery	30
Fuses in Cold zone engine compartment	29
Fuses in passenger compartment	24
Fuses in the Central Electronic Module (CEM)	21
Fuses in the engine compartment distribution box	14

G

Ground connections overview	35
Group number, abbreviations	6

Index 2:2

H

Harness Engine 6-Cyl. Turbo	273
Harness front door	289
Harness Infotainment S80	283, 284
Harness Infotainment V70	285, 286
Harness rear door	290
Harnesses rear axle	292
Hazard warning flashers	119
Heated door mirrors	183
Heated front seats with fans	192
Heated front seats without fan	193
Heated rear seat	194
Heated rear window	187
High and low beam	97
High and low beam (Dual Xenon)	98
High pressure headlight washer	124
Horn	128
How to use the wiring diagrams	7

I

Ignition and control system, Group 28	68
Ignition switch symbols	6
Instruments, Group 38	144
Interior equipment, Group 85	188
Interior lighting	110
Internal equipment, Group 88	206

K

Keyless vehicle	126
-----------------------	-----

L

Lighting floor	117
Lighting in door sill trims	115
Lighting mug holder	117
Lighting, Group 35	97
List of symbols	8

M

Massage seats	195
MOST	53

N

Navigation system, portable	161
-----------------------------------	-----

O

Other, abbreviations	6
Other, Group 39	147
Outlet 12 V	135
Overview with Start/stop function	10
Overview without Start/stop function	9
Overview, Distribution box in cargo compartment	13
Overview, Distribution box in passenger compartment	12

P

Parking assistance	130
Parking brake, Group 55	166
Parking camera	159
Parking camera wide-angle	160
Parking heater	203

Parking heater, remote start	204
Parking light	100
Power door mirrors	181
Power driver's seat with memory function	188
Power folding headrest	208
Power passenger seat	190
Power sunroof	180
Power supply	92
Power supply 4-Cyl.	90
Power supply 4-Cyl. with start/stop	91
Power windows front doors	177
Power windows rear doors	179

R

Rain sensor	118
Rear seat entertainment	157
Rear-view mirror with automatic dimming	210
Refrigeration box rear seat	205
Relays - soldered in the Central Electronic Module (CEM) 34	34
Relays in Cargo compartment	33
Relays in Distribution box engine compartment	31
Relays in Passenger compartment	32
Remote control garage opening	209
Reversing lights	106
Roof harness	287
Running light	100

S

Satellite radio	158
Seat belt reminder	144
Shock absorbers, Group 76	169
Signal receiver central locking	176
Speed dependent power steering	168
Start-/Stop function 4-Cyl. 1.6l Diesel DV6C	66
Start-/Stop function 4-Cyl. 1.6l Turbo	65
Start-/Stop function 5-Cyl. Diesel	67
Starting system 4-Cyl. Diesel	95
Starting system 4-Cyl. Turbo	93
Starting system 5- & 6-Cyl.	94
Starting system 5-Cyl. Diesel	96
Starting system, Group 33	93
Steering Wheel Module (SWM)	56
Steering, Group 64	168
Supplemental restraint system	206

T

Table of Contents	3
Tail lights	100
Tire pressure monitoring system (TPMS)	132
Transmission M66	162
Transmission, Group 43	162
Trunk lid harness	291
Tunnel harness	288
TV	147

W

Wiper/Washer rear window	125
Wiper/Washer Windshield	123
Wiring and fuses, Group 37	134

List of components 1:7

1/1	Battery	3/93	Contact, driver's seat belt buckle
1/2	Secondary battery	3/94	Contact, passenger seat belt buckle
2/14	Relay, glow plug system	3/111	Light Switch Module (LSM)
2/16	Rear window wiper relay, V70	3/112	Climate control system
2/17	Relay, horn	3/117	Switch unit, ceiling light
2/22	Relay, climate control system	3/126	Driver Door Module (DDM)
2/31	Relay, 15-feed	3/127	Passenger Door Module (PDM)
2/32	Main relay, engine management system	3/128	Left rear door module (LDM)
2/35	Relay, starter motor	3/129	Right rear door module (RDM)
2/64	Auxiliary light relay, accessory	3/130	Steering Wheel Module (SWM)
2/82	Relay, rear window defroster, V70	3/131	Steering wheel switch right (SWSR)
2/82	Relay, rear window defroster, S80	3/132	Start Control Module (SCU)
2/83	Relay, rear window defroster, S80	3/135	RTI switch
2/88	Relay, 15-feed rear	3/156	Gear Selector Module (GSM)
2/141	Refrigeration box relay	3/157	Switch, passenger side airbag
2/166	Battery relay	3/173	Switch, trunk lid/tailgate private lock
2/182	Relay, headlight washer motor	3/176	Power window switches, driver's door
2/193	Relay, comfort functions	3/217	Contact, LH rear belt buckle
2/246	Secondary battery relay	3/218	Contact, center rear belt buckle
3/1	Ignition switch	3/219	Contact, RH rear belt buckle
3/4	Steering wheel switch left (SWSL)	3/225	Switch unit, Continuously Controlled Damping (CCD)
3/6	Switch, hazard warning flashers	3/255	Position sensor, driver's seat
3/8	Switch, heated rear window/rearview mirrors	3/256	Position sensor, passenger seat
3/9	Contact brake light	3/267	Switch unit, telematics
3/10	Reversing light contact	3/271	Contact, immobilizer, clutch pedal
3/26	Switch unit, power driver's seat	3/272	Switch, parking brake
3/27	Switch unit, power passenger seat	3/273	Lock contact, LH front door
3/35	Trunk handle switch, V70	3/274	Lock contact, RH front door
3/35	Trunk handle switch, S80	3/275	Lock contact, LH rear door
3/37	Contact horn	3/276	Lock contact, RH rear door
3/60	Switch, auxiliary lights	3/281	Infotainment Control Module (ICM)
3/62	Hood alarm contact	3/282	Switch indicator 1st gear
3/65	Switch, heated rear seat	3/284	Diagnostic contact, brake light
3/74	Left-hand front door lock unit	3/291	Tailgate closing switch, V70
3/75	Right-hand front door lock unit	3/293	Handsfree control panel cellular phone
3/76	Lock unit, rear left door	4/6	Climate Control Module (CCM)
3/77	Lock unit, rear right door	4/7	Combustion Preheater Module (CPM)
3/78	Lock unit, tailgate V70	4/9	Supplemental restraint system module (SRS)
3/80	Switch, central locking system, driver's door	4/16	Brake Control Module (BCM)
3/81	Power window switches, driver's door	4/28	Transmission Control Module (TCM), TF-80SC
3/82	Switch, central locking system, passenger door	4/28	Transmission Control Module (TCM), MPS6
3/83	Switch, passenger door power window	4/31	Passenger compartment fan control module
3/85	Power window switch, rear left door	4/33	Sunroof control module
3/86	Power window switch, right rear door		

List of components 2:7

4/46	Engine Control Module (ECM), 4-Cyl. Turbo	6/23	Passenger seat motor, backrest angle
4/46	Engine Control Module (ECM), 4-Cyl. Diesel	6/25	Starter motor
4/46	Engine Control Module (ECM), 5-Cyl.	6/26	Alternator Control Module (ACM)
4/46	Engine Control Module (ECM), 5-Cyl. Diesel	6/28	Motor, passenger compartment fan
4/46	Engine Control Module (ECM), 5-Cyl. 2.0L Diesel	6/32	Rear window wiper motor, V70
		6/33	Fuel pump
4/46	Engine Control Module (ECM), 6-Cyl.	6/35	Fuel pump, auxiliary heater
4/52	Power Seat Module (PSM)	6/36	Lock motor, central locking, LH front door
4/56	Central Electronic Module (CEM)	6/37	Lock motor, fuel filler cover
4/56:C1	Central Electronic Module (CEM)	6/38	Left-hand headlight level adjustment motor
4/56:C2	Central Electronic Module (CEM)	6/39	Right-hand headlight level adjustment motor
4/56:C3	Central Electronic Module (CEM)	6/48	Damper Motor Module (DMM), recirculation
4/56:C4	Central Electronic Module (CEM)	6/55	Lock motor, central locking, RH front door
4/56:C5	Central Electronic Module (CEM)	6/56	Lock motor, central locking, RH rear door
4/68	Steering Wheel Angle Sensor Module (SAS)	6/57	Lock motor, central locking, LH rear door
4/71	Cooling fan control module	6/58	Motor, front driver's door power window
4/76	Remote control unit for garage door opener	6/59	Motor, rear left power window
4/80	Forward Sensing Module (FSM)	6/60	Motor, front passenger door power window
4/82	Differential Electronic Module (DEM)	6/61	Motor, rear right power window
4/83	Fuel pump control module	6/62	Power door mirror, left
4/84	Suspension Module (SUM)	6/63	Power door mirror, right
4/86	Parking Assistance Module (PAM)	6/67	Pump, fuel leakage control
4/93	Keyless Vehicle Module (KVM)	6/71	Valve, speed-dependent power steering
4/99	Electronic power steering control module	6/73	Coolant pump
4/102	Steering Column Lock Module (SCL)	6/95	Damper Motor Module (DMM), temperature, left side
4/106	Control module, remote parking heater start		
4/109	Glow plug control module	6/96	Damper Motor Module (DMM), temperature, right side
4/110	Trailer Module (TRM)		
4/115	Park Brake Module (PBM)	6/102	Damper Motor Module (DMM), defroster
4/116	Power Operated Tailgate Module (POT), V70	6/103	Damper Motor Module (DMM), floor/ventilation
4/119	Remote Keyless Entry (TRX)		
4/119.2	Signal receiver (LRX)	6/104	High pressure headlight washer motor
4/120	Parking Assistance Camera module (PAC)	6/120	Throttle unit, 4-Cyl.
4/124	Accessory USB unit (AUU)	6/120	Throttle unit, 5-Cyl.
4/125	Closing velocity module (CVM)	6/120	Throttle unit, 6-Cyl.
4/131	Control module back massage left	6/120	Throttle unit, Diesel
4/133	Control module back massage right	6/127	Washer motor
		6/139	Upper actuating motor, intake manifold
5/1	Driver Information Module (DIM)	6/140	Lower actuating motor, intake manifold
		6/142	Motor folding head restraint right
6/1	Wiper Motor Module (WMM)	6/146	Lock motor, rear left brake disc
6/8	Central locking motor, trunk lid	6/147	Lock motor, rear right brake disc
6/16	Driver seat motor, backrest angle	6/149	Tailgate closing motor, V70
6/17	Driver seat motor, up/down front edge	6/164	Electrical power steering module (EHPS)
6/18	Driver seat motor, up/down rear edge	6/165	Motor tailgate opening left
6/19	Driver seat motor, forward/backward	6/169	Left pump back massage
6/20	Passenger seat motor, forward/backward	6/170	Right pump back massage
6/21	Passenger seat motor, up/down front edge	6/179	Electric oil pump
6/22	Passenger seat motor, up/down rear edge		

List of components 3:7

7/4	Brake fluid level sensor	7/130	Fuel level sensor, ejector side
7/5	Washer fluid level sensor	7/131-	
7/6	Oil pressure monitor	7/134	Rear parking assistance sensor
7/8	Pressure sensor, climate control system	7/143	Sensor fuel level, pump side
7/12	Solar sensor, twilight sensor and indicator alarm	7/149	Rain Sensor Module (RSM)
7/15	Front heated oxygen sensor, 4-Cyl.	7/154	Sensor fuel temperature
7/15	Front heated oxygen sensor, 5-Cyl.	7/156	Pressure and temperature sensor, fuel
7/15	Front oxygen sensor, bank 1, 6-Cyl.	7/159	Air Quality Sensor (AQS)
7/15	Front heated oxygen sensor, Diesel	7/162	Pressure sensor, fuel line
7/16	Sensor, coolant temperature	7/164	Body Sensor Cluster Stability Sensor (BSC)
7/17	Mass airflow sensor (MAF)	7/165	Pressure and temperature sensor, intake manifold, 4-Cyl.
7/23	Rear knock sensor	7/165	Pressure and temperature sensor, intake manifold, 5-Cyl.
7/24	Front knock sensor	7/165	Pressure and temperature sensor, intake manifold, Diesel
7/25	Impulse sensor, 4-Cyl.	7/165	Pressure and temperature sensor, intake manifold, 6-Cyl.
7/25	Impulse sensor, 5-Cyl. & Diesel		
7/25	Impulse sensor, 6-Cyl.	7/166	Oil level sensor, 6-Cyl.
7/31	Sensor ABS, front left	7/168	Fuel pressure sensor, low
7/32	Sensor ABS, front right	7/172	Camshaft position sensor, intake side, 5-Cyl.
7/35	Oil level sensor	7/172	Camshaft position sensor, intake side, 6-Cyl.
7/41	Temperature sensor evaporator	7/172	Position sensor camshaft, intake side, Diesel
7/51	Accelerator pedal sensor	7/173	Position sensor camshaft, outlet side, 4-Cyl.
7/56	Sensor ABS, rear left	7/173	Camshaft position sensor, exhaust side, 5-Cyl.
7/57	Right-hand rear ABS sensor	7/173	Camshaft position sensor, exhaust side, 6-Cyl.
7/69	Sensor outdoor temperature	7/173	Camshaft position sensor, exhaust side, Diesel
7/73	Coolant level sensor		
7/81	Pressure sensor intake manifold, 4-Cyl.	7/174	Differential pressure sensor, particle filter
7/81	Pressure sensor intake manifold, 5-Cyl. Diesel	7/175	Occupant weight sensor, seat belt reminder
7/81	Pressure sensor, intake manifold, 6-Cyl.	7/178	Front impact sensor, right
7/82	Rear oxygen sensor, bank 1, 4-Cyl. Turbo	7/179	Front impact sensor, left
7/82	Rear oxygen sensor, bank 1, 6-Cyl.	7/190	Temperature sensor, catalytic converter
7/87	Acceleration sensor, Four-C, front left	7/191	Temperature sensor, particle filter
7/88	Acceleration sensor, Four-C, front right	7/193	Position sensor turbo
7/89	Acceleration sensor, Four-C, rear left	7/199	Ultrasonic sensor (IMS)
7/90	Moisture sensor	7/200	Sensor, coolant temperature
7/91	Steering angle sensor	7/202	EGR Bypass position sensor
7/93	Occupant Weight Sensor (OWS)	7/203	Forward-aimed radar (FLR)
7/103	Front oxygen sensor, bank 2, 6-Cyl.	7/204-	
7/104	Rear oxygen sensor, bank 2, 6-Cyl.	7/207	Front parking assistance sensor
7/108	Left-hand rear side impact sensor	7/208	Side impact sensor, left front door
7/109	Right-hand rear side impact sensor	7/209	Side impact sensor, right front door
7/110	Temperature sensor, driver's seat		
7/111	Temperature sensor, passenger seat	7/210-	
7/112	Seat temperature sensor, LH rear	7/213	Tire pressure sensor
7/113	Seat temperature sensor, RH rear	7/215	Rear heated oxygen sensor, 5-Cyl. Diesel
7/115	Side impact sensor, left B-post	7/238	Alcolock sensor
7/116	Side impact sensor, right B-post	7/240	Battery monitoring sensor (BMS)
7/118	Height sensor, suspension, front left	7/243	Gear position sensor neutral position
7/119	Height sensor, suspension, front right	7/248	Oil pressure and temperature sensor
7/120	Height sensor, suspension, rear left	7/251	Brake vacuum sensor
7/121	Height sensor, suspension, rear right		
7/123	Clutch pedal sensor		
7/124	Sensor brake pedal		

List of components 4:7

8/3	Electromagnetic clutch, climate control system	9/2	Heated rear window
8/6-11	Injection valves	9/8	Heating element, LH rear seat cushion
8/18	EVAP valve, 4-Cyl.	9/9	Heating element, LH rear seat backrest
8/18	EVAP valve, 5-Cyl.	9/10	Heating element, RH rear seat cushion
8/18	EVAP valve, 6-Cyl.	9/11	Heating element, RH rear seat backrest
8/19	Reset valve, camshaft intake	9/12	Seat Heating Module (SHM), driver's side
8/20	Shock absorber, Four-C, front left	9/13	Seat Heating Module (SHM), passenger side
8/21	Shock absorber, Four-C, front right	9/14	Control module, rear left seat heater
8/22	Shock absorber, Four-C, rear left	9/15	Control module, RH rear seat heater
8/23	Shock absorber, Four-C, rear right	9/16	Heating element, driver's seat backrest
8/28	Turbo control valve	9/17	Heating element, passenger seat backrest
8/30	Driver's side airbag igniter, stage 1	9/18	Heating element, driver's seat cushion
8/31	Passenger side airbag igniter, stage 1	9/19	Heating element, passenger seat cushion
8/32	Passenger side airbag igniter, stage 2	9/24	Refrigeration box
8/33	Igniter, belt tensioner, driver's side	9/25	Rear 12V outlet
8/34	Igniter, belt tensioner, passenger side	9/30	Auxiliary heater
8/36	Solenoid shift lock	9/32	PTC resistor, crankcase ventilation
8/37	Automatic transmission	9/38	Electrically heated fuel filter
8/46	Archive unit, DSTC	9/39	Heating element camera
8/48	Auto-dimming rearview mirror	9/42	PTC-element
8/51	Igniter side airbag front driver's seat	9/43	Heated windshield washer nozzle, left
8/52	Igniter side airbag front passenger seat	9/44	Heated windshield washer nozzle, right
8/55	Igniter, rear left belt tensioner	10/1	Lamp housing, front left
8/56	Igniter, rear right belt tensioner	10/2	Lamp housing, front right
8/59	Rear left head restraint solenoid	10/3	License plate lighting, V70
8/60	Rear right head restraint solenoid	10/3	License plate lighting, S80
8/61	Driver's side airbag igniter, stage 2	10/5	Fog light, front left
8/62	Belt tensioner igniter, center rear seat	10/6	Fog light, front right
8/66	Igniter, left inflatable curtain	10/11	Front left running/parking light
8/67	Igniter, right inflatable curtain	10/12	Front right running/parking light
8/68	Relief valve	10/13	Front left direction indicator
8/77	Control valve, fuel volume	10/14	Front right direction indicator
8/78	Power steering pressure monitor	10/15	Direction indicator rear-view mirror left
8/81	Reset valve, camshaft exhaust, 4-Cyl.	10/16	Direction indicator, right door mirror
8/81	Reset valve, camshaft exhaust, 5-Cyl.	10/17	Lamp housing, rear right V70
8/92	Lap belt tensioner, driver	10/17	Lamp housing, rear right, S80
8/98	Control valve fuel pressure	10/18	Lamp housing, rear left, V70
8/99	Steering column igniter	10/18	Lamp housing, rear left, S80
8/111	Control valve fuel flow	10/19	Auxiliary brake light V70
8/113	Bypass valve, EGR cooling, 4 Cyl.	10/19	Auxiliary brake light, S80
8/113	Bypass valve, EGR cooling, 5 Cyl.	10/22	Ceiling light
8/117	Solenoid, variable valve timing, intake, 5-Cyl.	10/25	Ceiling light, cargo compartment, V70
8/117	Solenoid, variable valve timing, intake, 6-Cyl.	10/29	Glove compartment lighting
8/120	EGR valve, 4-Cyl. Diesel	10/42	Rear side marker lamp, right V70
8/120	EGR valve, 5-Cyl. Diesel	10/42	Rear side marker lamp, right S80
8/121	Radiator valve	10/43	Brake light right, V70
8/124	Passenger side airbag igniter, stage 3	10/43	Brake light right, S80
8/125	Solenoid front cam profile	10/44	Tail lamp 1 right, V70
8/126	Solenoid rear cam profile	10/44	Tail lamp 1 right, S80
8/128	Driver's belt force limiter	10/46	Fog light, rear right, V70
8/129	Passenger belt force limiter	10/46	Fog light, right rear, S80
8/134	Solenoid, reverse interlock, manual	10/47	Direction indicator, rear right, V70
8/157	Turbocharger control valve, 5-Cyl. Diesel	10/47	Direction indicator, right rear, S80
8/159	Bypass valve	10/48	Reversing light, right, V70
8/164	Electric piston cooling valve	10/48	Reversing light right, S80
8/167	Bypass solenoid	10/49	Rear side marker lamp, left V70
9/1	Front 12V outlet	10/49	Rear side marker lamp, left S80

List of components 5:7

10/50	Brake light, left, V70	15/31	Distribution box in engine compartment
10/50	Brake light left, S80	15/32	Distribution box in cargo compartment
10/51	Tail lamp 1 left, V70	15/36	Distribution box in passenger compartment
10/51	Tail lamp 1 left, S80	15/37	Distribution box cold zone in engine compartment
10/53	Fog light, left rear, V70		
10/53	Fog light, rear left, S80	16/1	Integrated Audio Module (IAM)
10/54	Direction indicator, left rear, V70	16/3	Right-hand front door speaker
10/54	Direction indicator, rear left, S80	16/4	Left-hand front door speaker
10/55	Reversing light left, V70	16/5	Right-hand rear door speaker
10/55	Reversing light left, S80	16/6	Left-hand rear door speaker
10/64	Right-hand high beam	16/10	Horn 1
10/65	Auxiliary light, front right	16/11	Horn 2
10/66	Right-hand low beam	16/16	Window antenna amplifier
10/68	Left-hand high beam	16/26	Center dashboard speaker
10/69	Auxiliary light, front left	16/29	Loudspeaker mid-range left front
10/70	Left-hand low beam	16/30	Loudspeaker mid-range right front
10/72	Front ashtray lighting	16/35	Siren Control Module (SCM)
10/97	Left-hand front courtesy lighting	16/36	TV receiver
10/102	Right-hand front courtesy lighting	16/45	Portable navigation system
10/114	Left-hand vanity mirror lighting	16/47	Antenna GSM/GPS/RDAR
10/115	Right-hand vanity mirror lighting	16/49	Traffic Message Channel module (TMC)
10/125	Left-hand front courtesy lighting	16/55	Left-hand front tweeter
10/126	Right-hand front courtesy lighting	16/56	Right-hand front tweeter
10/127	Lighting, cargo compartment, left-hand side, S80	16/60	Phone Module (PHM)
10/128	Lighting, cargo compartment, right-hand side, S80	16/65	Immobilizer Antenna Unit (IAU)
10/148	Lighting, left front door mirror	16/71	Window antenna amplifier
10/149	Lighting, right front door mirror	16/79	Subwoofer Module (SUB), V70
10/150	Rear reading light	16/98	Microphone
10/161	Cup holder illumination lamp	16/105	Audio module (AUD)
10/249	Sill lighting, front driver's side	16/109	DVD player/control module
10/250	Sill lighting, front passenger side	16/121	VICS-antenna
10/251	Sill lighting, rear driver's side, S80	16/123	Auxiliary equipment input (AUX)
10/252	Sill lighting, rear passenger side, S80	16/123.2	Auxiliary equipment input (AUX)
10/276	Lighting center armrest rear 1	16/123.3	RSE-AUX input
10/277	Lighting center armrest rear 2	16/127	Microphone, mobile phone handsfree
10/280	Lighting cooler compartment left	16/132	Antenna door lock trunk lid/tailgate, V70
10/281	Lighting cooler compartment right	16/132	Antenna, door lock, bumper, S80
10/282	Lighting door compartment front left	16/133	Antenna, door lock, cargo compartment
10/283	Lighting door compartment front right	16/134	Antenna, door lock, passenger compartment 2
10/284	Lighting door compartment rear left	16/135	Antenna, door lock, passenger compartment 3
10/285	Lighting door compartment rear right	16/136	LH rear door tweeter
10/286	Lighting floor driver's side	16/137	RH rear door tweeter
10/287	Lighting floor passenger side	16/140	SIM card reader
11A/no.	Main fuses in the engine compartment fuse box	16/141	Interference filter, rear window, left
11B/no.	Fuses in the engine compartment fuse box	16/145	Remote Digital Audio Receiver (RDAR)
11C/no.	Fuses in distribution box passenger compartment	16/159	Control module, cellular phone handsfree
11D/A	Fuses in cargo compartment fuse box	16/162	Digital Audio Broadcast Module (DABM)
11/no.	Fuse in extra fuse holder, passenger compartment	16/164	Screen, LH head restraint
		16/165	Screen, RH head restraint
		16/181	Rear headphone sockets
		16/185	TV Antenna
		16/186	TV Antenna
		16/187	TV Antenna

List of components 6:7

17/13	Data link connector	31/48	Ground connection, Right rear bumper abutment
17/19	12 V outlet, cargo compartment, V70	31/65	Ground connection, Rear seat riser, left side 1
17/19	12 V outlet, cargo compartment, S80	31/66	Ground connection, Rear seat riser, left side 2
17/37	4-pin outlet, tow hitch cable harness	31/67	Ground connection, Rear seat riser, right side 1
17/38	7-pin outlet, tow hitch cable harness	31/68	Ground connection, Rear seat riser, right side 2
17/39	13-pin outlet, tow hitch cable harness	31/83	Ground connection, Left bottom rail
17/42	USB-port	31/84	Ground connection, Right bottom rail
17/45	Alcolock outlet	31/88	Ground connection, Engine ignition coils, 4-Cyl.
18/4	Contact reel	31/88	Ground connection, Engine ignition coils, 5-Cyl.
19/4	Analog clock	31/88	Ground connection, Engine ignition coils, 6-Cyl.
20/3-8	Spark plug and ignition coil	31/89	Ground connection, Engine ignition coils, 4-Cyl.
20/16	Capacitor	31/89	Ground connection, Engine ignition coils, 5-Cyl.
20/22-26	Glow plug	31/89	Ground connection, Engine ignition coils, 6-Cyl.
26/6	Converter/control module, sill moldings, driver's side	31/90	Ground connection, Engine ignition coils, 6-Cyl. Turbo
26/7	Converter/control module, sill moldings, passenger side	31/93	Ground connection, Left wheel housing 2
26/8	Alcolock charging cradle	31/94	Ground connection, Right wheel housing 2
27/2	Indicator, visual collision warning	31/95	Ground connection, Left wheel housing 3
27/3	Left Camera Module (LCM)	31/96	Ground connection, Right wheel housing 3
27/4	Right Camera Module (RCM)	31/107	Ground connection, Roof rear
27/5	Forward looking camera	31/131	Ground connection, support battery
27/6	Camera	31/XX4	Ground connection, Engine-Body
27/8	Camera, wide angle front	31/XX10	Ground connection, Left wheel housing 1
31/1	Ground connection, PTC	31/XX14	Ground connection, Left wheel housing 3 (ABS)
31/2	Ground connection, Left wheel housing	31/XX15	Ground connection, Right wheel housing
31/3	Ground connection, Body battery	31/AL	Ground connection, Auxiliary lights
31/4	Ground connection, engine	31/INFOT	Ground connection, Infotainment
31/6	Ground connection, Left bottom rail	31/TRM	Ground connection, Accessories
31/7	Ground connection, Left bottom rail		
31/10	Ground connection, Left bottom rail		
31/15	Ground connection, Right bottom rail		
31/47	Ground connection, Left rear bumper abutment		

List of components 7:7

74/9	Connector	74/504	Connector
74/30	Connector	74/504B	Connector
74/31	Connector	74/507	Connector
74/301	Connector	74/508	Connector
74/302	Connector	74/509	Connector
74/304	Connector	74/510	Connector
74/307	Connector	74/511	Connector
74/309	Connector	74/512	Connector
74/310	Connector	74/513	Connector
74/316	Connector	74/514	Connector
74/321	Connector	74/515	Connector
74/401	Connector	74/518	Connector
74/402	Connector	74/519	Connector
74/403	Connector	74/520	Connector
74/404	Connector	74/523	Connector
74/405	Connector	74/524	Connector
74/406	Connector	74/529	Connector
74/407	Connector	74/531	Connector
74/407B	Connector	74/532	Connector
74/409	Connector	74/534	Connector
74/411	Connector	74/543	Connector
74/412	Connector	74/545	Connector
74/413	Connector	74/601	Connector
74/414	Connector	74/602	Connector
74/417	Connector	74/603	Connector
74/418	Connector	74/901	Connector
74/419	Connector	74/1500	Connector
74/420	Connector	74/1501	Connector
74/421	Connector	74/1502	Connector
74/428	Connector	74/1503	Connector
74/429	Connector		
74/430	Connector	PF/no.	Main fuse by battery
74/501	Connector	F/no.	Main fuse by battery
74/502	Connector		
74/503	Connector		